Assembly Instruction



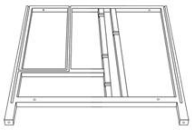



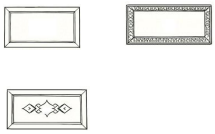







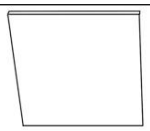




Accent Cabinet



⚠ **WARNING:**


- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- DO NOT use power tools.
- DO NOT over-tighten hardware.
- Periodically check all hardware and re-tighten as necessary.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80 lbs for the tabletop and 10 lbs for the drawers& shelf, evenly distributed.

Parts List
Check all parts before assembly

Item no.	Reference image	QTY.	Item no.	Reference image	QTY.	Item no.	Reference image	QTY.
A.		**1**	**J.**		**1**	**S.**		**3**
B.		**1**	**K.**		**2**	**T.**		**3**
C.		**1**	**L.**		**1/1/1**	**U.**		**1**
D.		**1**	**M.**		**1**	**V.**		**1**
E.		**1**	**N.**		**1**	**W.**		**1**
F.		**4**	**O.**		**1**	**X.**		**1**
G1.		**1**	**P1.**		**8**	**Y.**		**1**
G2.		**1**	**P2.**		**8**	**Z.**		**1**
H.		**1**	**Q.**		**2**			
I.		**1**	**R.**		**2**			


H1.		**8+1**	**H7.**		**32+3**	**H13.**		**8+1**
H2.		**8+1**	**H8.**		**1+1**	**H14.**		**1+1**
H3.		**32+3**	**H9.**		**2+1**	**H15.**		**1**
H4.		**32+3**	**H10.**		**8+1**	**H16.**		**2+1**
H5.		**16+2**	**H11.**		**4+1**	**H17.**		**1+1**
H6.		**16+2**	**H12.**		**1**	**H1: M6x30mm H5: M3x12mm H7: M4x25mm H13: M4x14mm H16: M2.5x10mm H17: M4x8mm**		

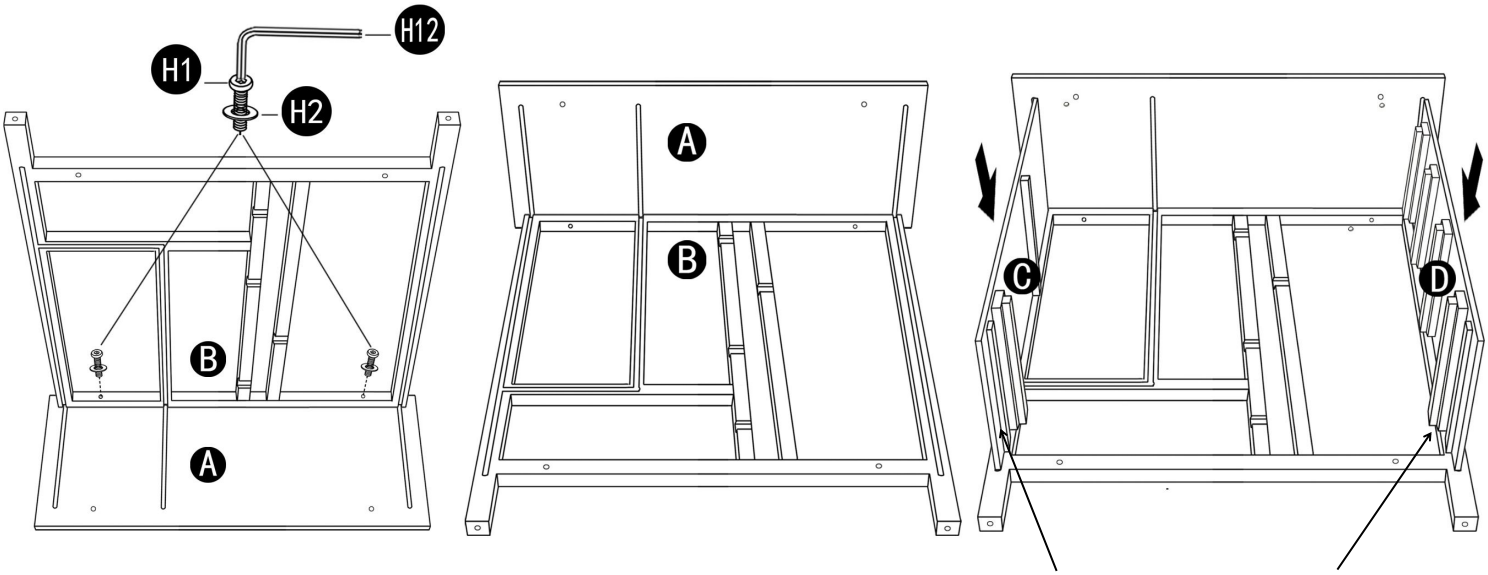Step 1: Put the Table Top **(A)** on a soft surface to protect the finish.
Attach the Panel (B) to Panel (A) with Hex bolt (H1) by Allen Key (H12). Carefully turn the assembled unit over so that Panel (B) rests on the floor.
Insert Panel (D&C)& to Panel (B). Ensure the Panel (D&C) aligned with the Grooves on Panel (B).
Leave the hardware loose in this step.




Ensure the two support bars are at the bottom.

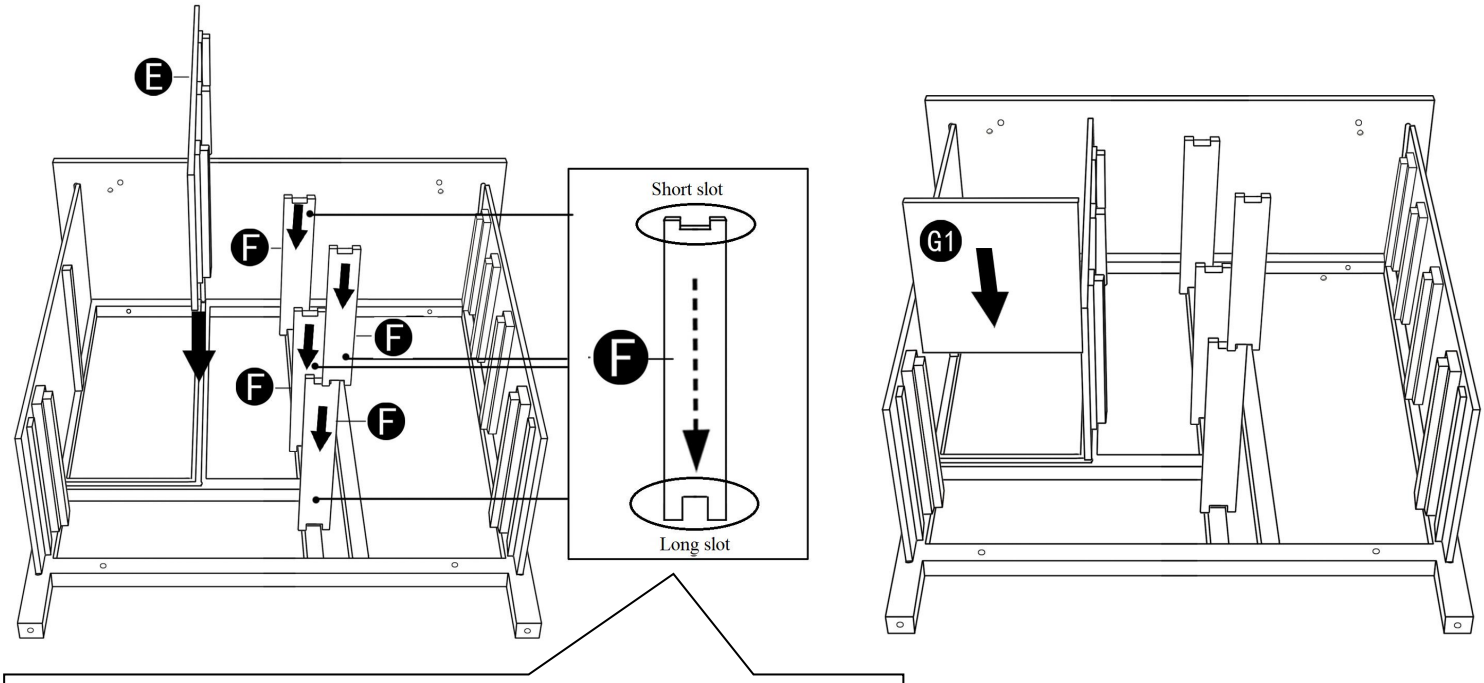Step 2: Insert Panel (E), Wooden Strips (F), and Panel (G1) into the grooves on Panel (B) as shown.



The longer slot on Wooden Strip (F) should face Back Panel (B).

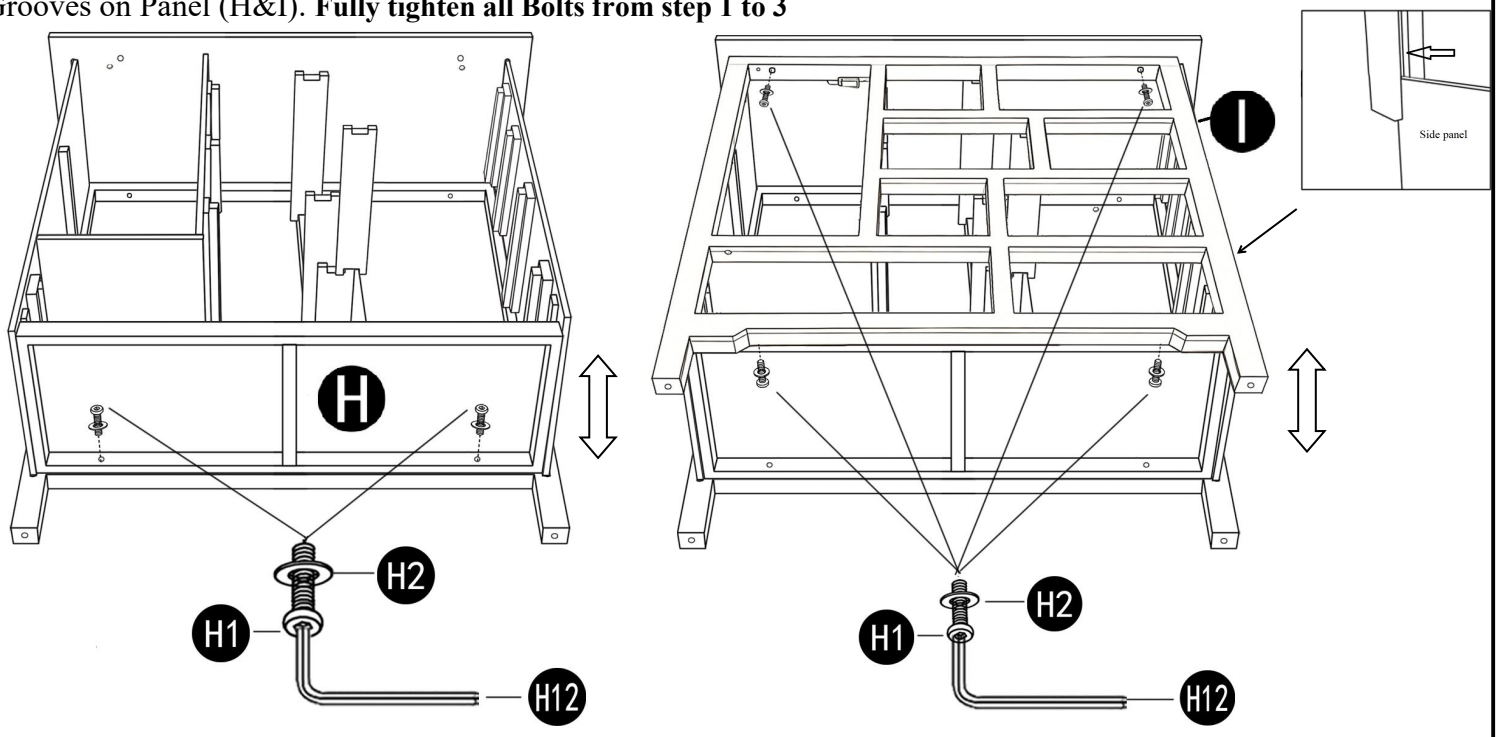Step 3: Attach the Bottom Panel (H) to Panel (B) with Hex bolt (H1)& washer (H2) by Allen Key (H12).
Attach the Panel (I) to Panel (A) with Hex bolt (H1) by Allen Key (H12). Ensure the Panel (C&D) aligned with the Grooves on Panel (H&I). **Fully tighten all Bolts from step 1 to 3**





Make sure Bottom Panel (H) is aligned with the bottom edge of Panel (B).

The position of Bottom Panel (H) affects the drawer installation.
If the drawers are not level after assembly, slightly loosen the hardware on Bottom Panel (H), adjust it up or down, and then retighten all hardware.


Step 4: Attach the Foot pad (H11) to all Leg as below. **TWO PEOPLE REQUIRED when turning the item upside down to avoid breaking the legs.**

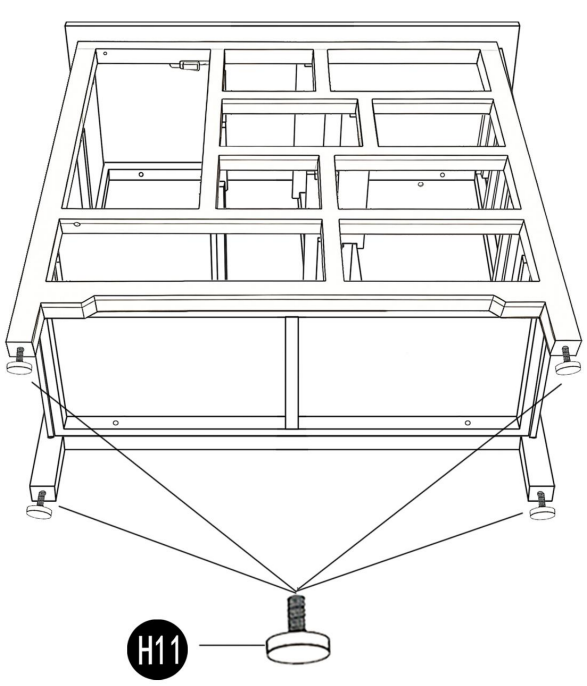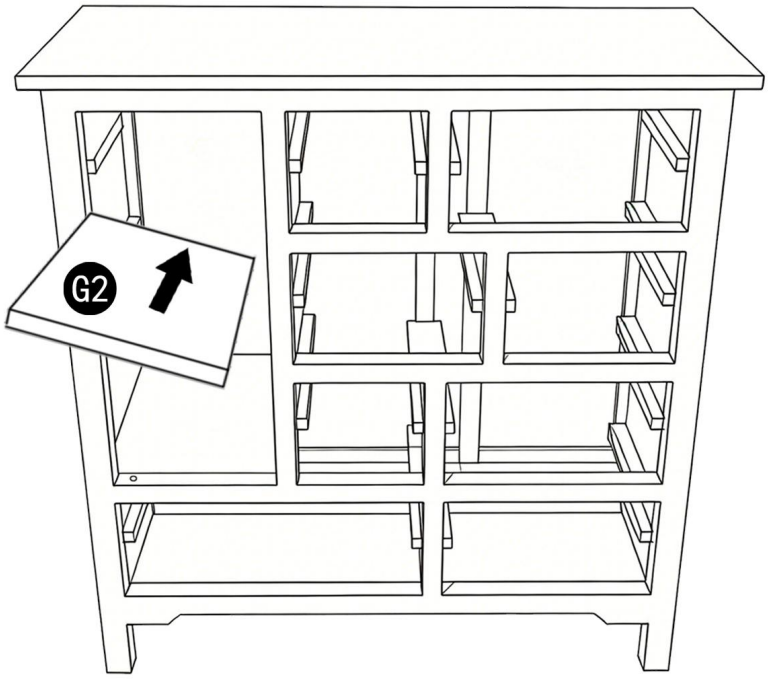
Place the Shelf (G2) into the body as below photo shown.






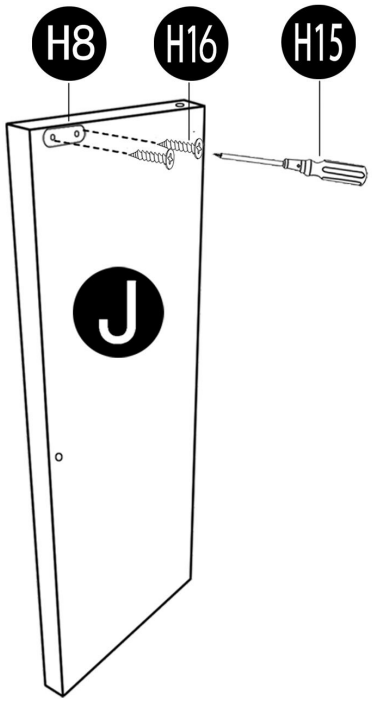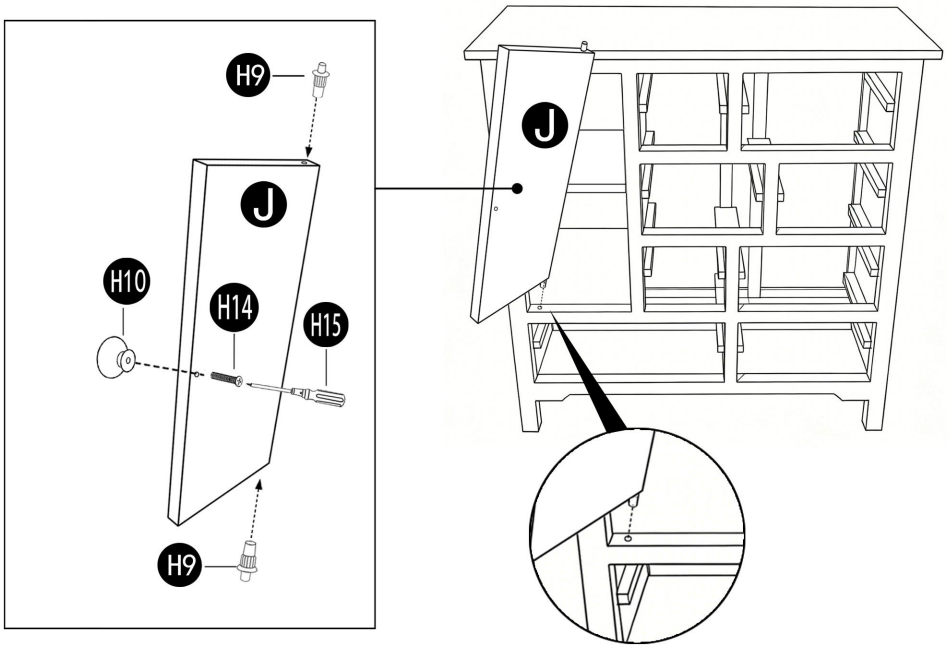Step 5: Attach the Metal plate (H8) to the pre-drilled holes on door (J) using screw (H16) by Spanner (H15)
Insert the **bottom** door pin (H9) into the hole on the cabinet first, then press down the top door pin (H9) to secure the door in place.






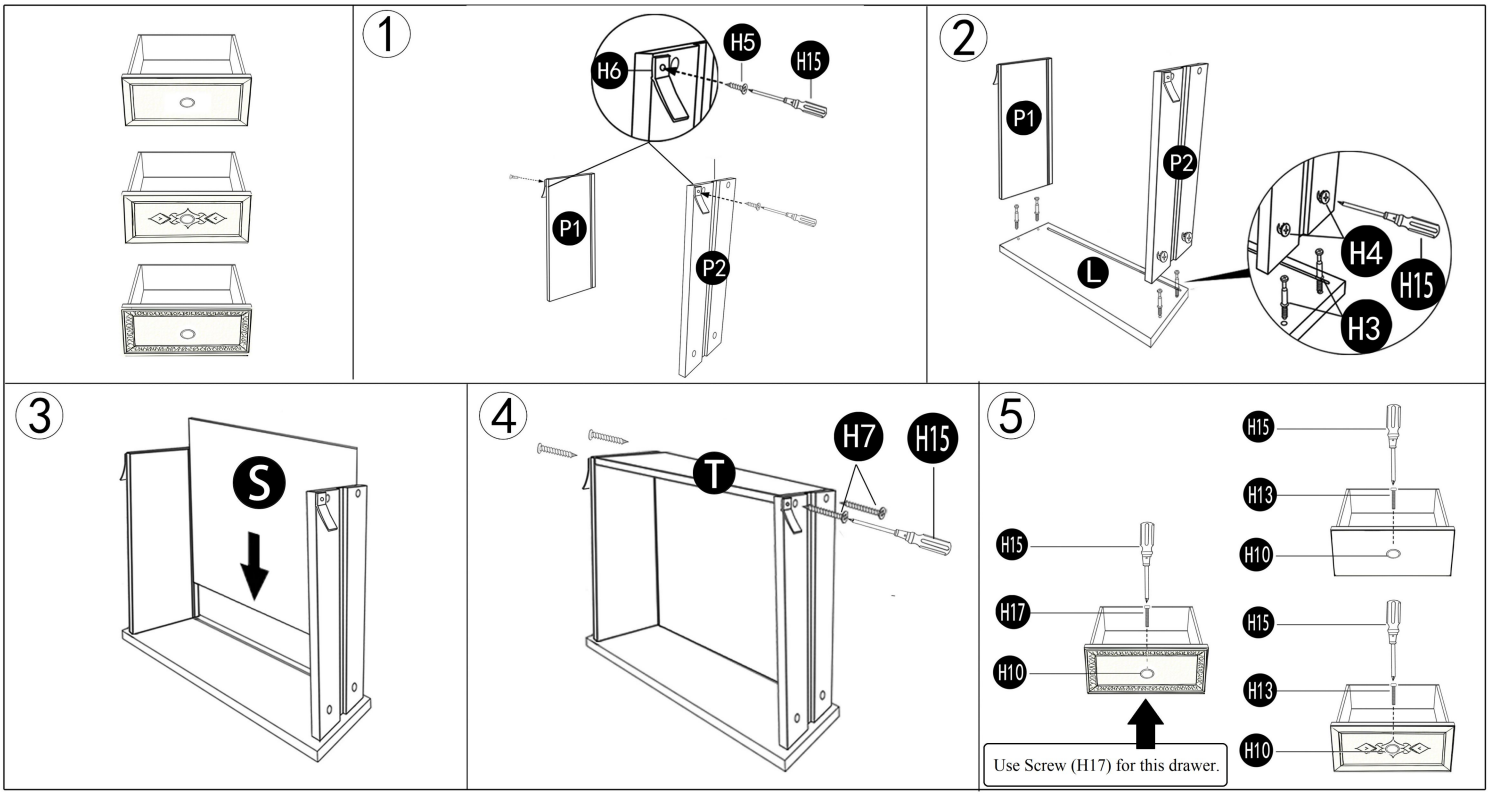
Step 6: Put the drawer's panel **(P1/P2/L/S/T)** on a soft surface to protect the finish.
Use Screw (H17) to install the knob on one of the drawer.
Use Screw (H13) to install the knobs on the other two drawers.Totally 3 drawers for this step



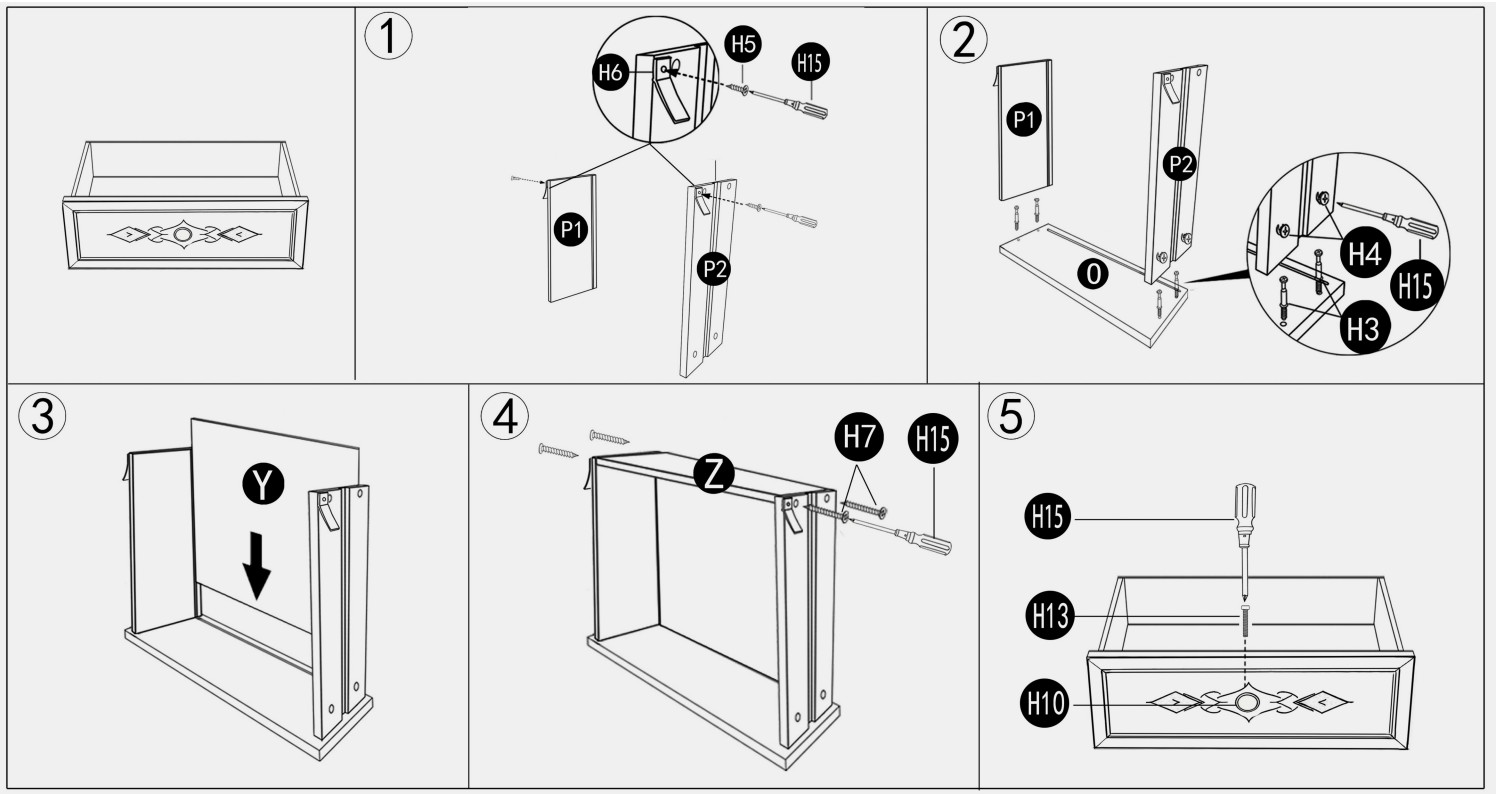
Step 7: Put the drawer's panel **(P1/P2/O/Y/Z)** on a soft surface to protect the finish.
Ensure to use the Bolt **(H13)** for the knob on this step. **Totally 1 drawer for this step.**



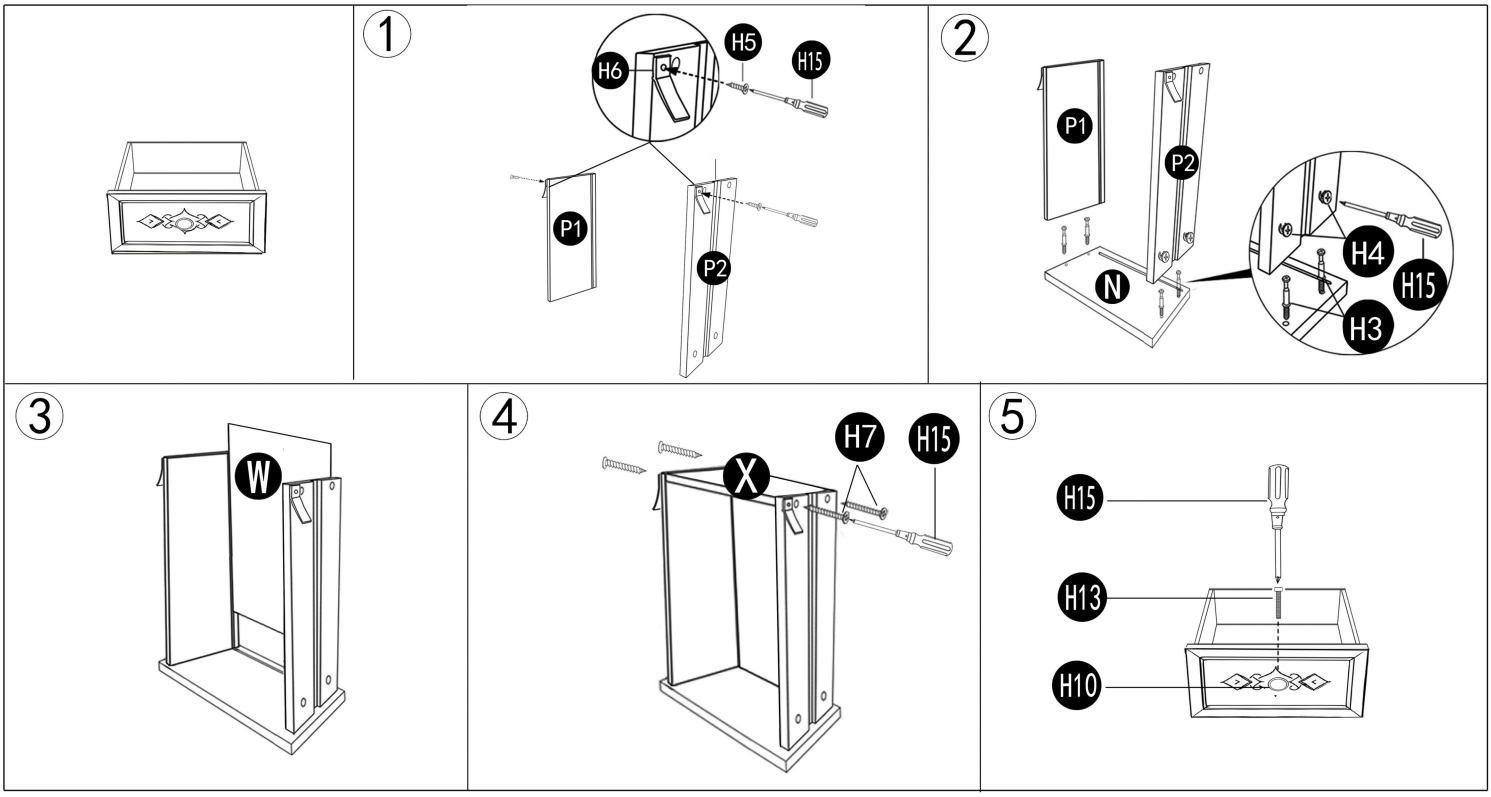
Step 8: Put the drawer's panel**(P1/P2/N/W/X)**on a soft surface to protect the finish.
Ensure to use the Bolt **(H13)** for the knob on this step. **Totally 1 drawers for this step.**



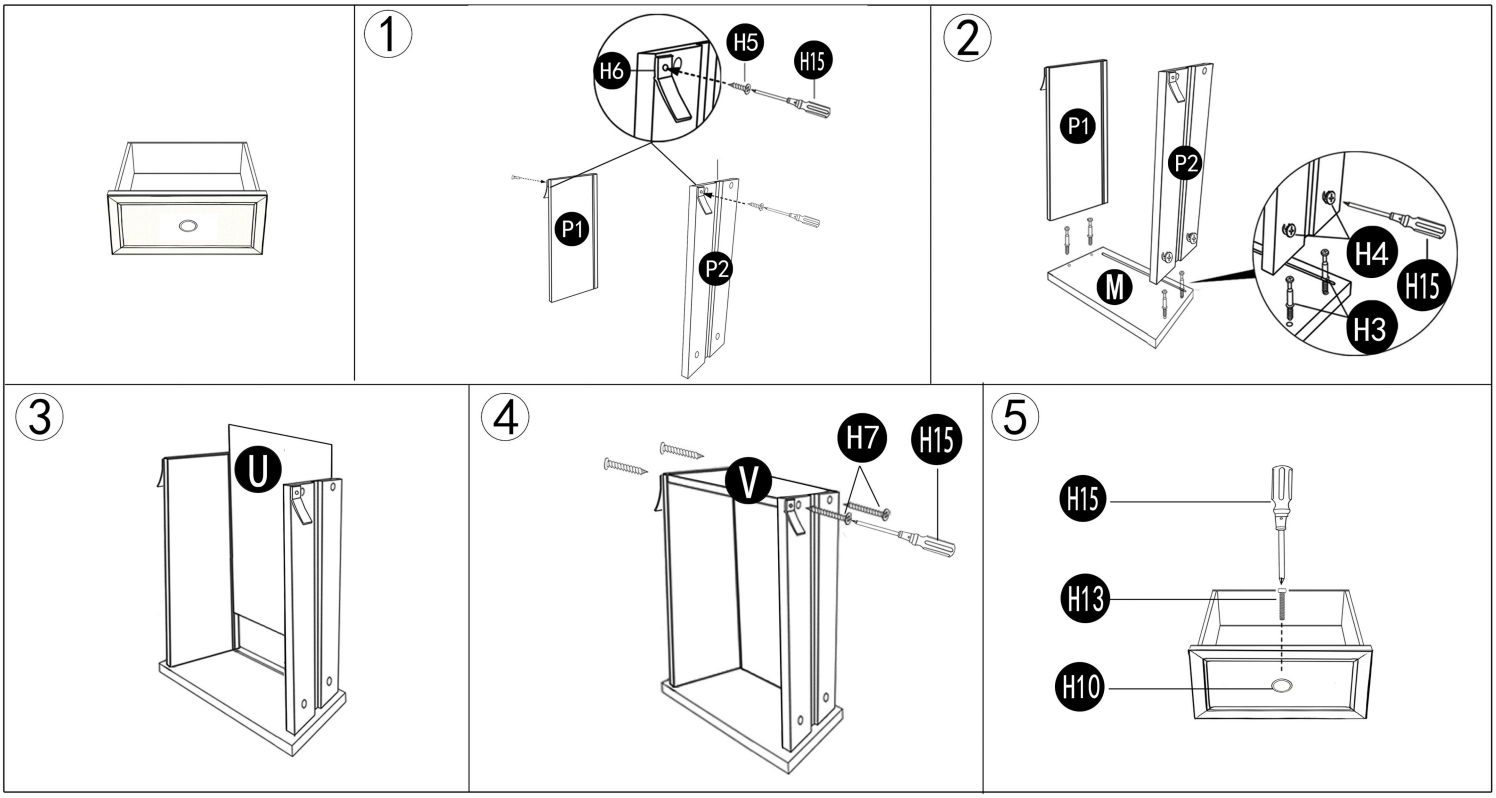Step 9: Put the drawer's panel**(P1/P2/M/U/V)**on a soft surface to protect the finish.
Ensure to use the Bolt **(H13)** for the knob on this step. **Totally 1 drawer for this step.**



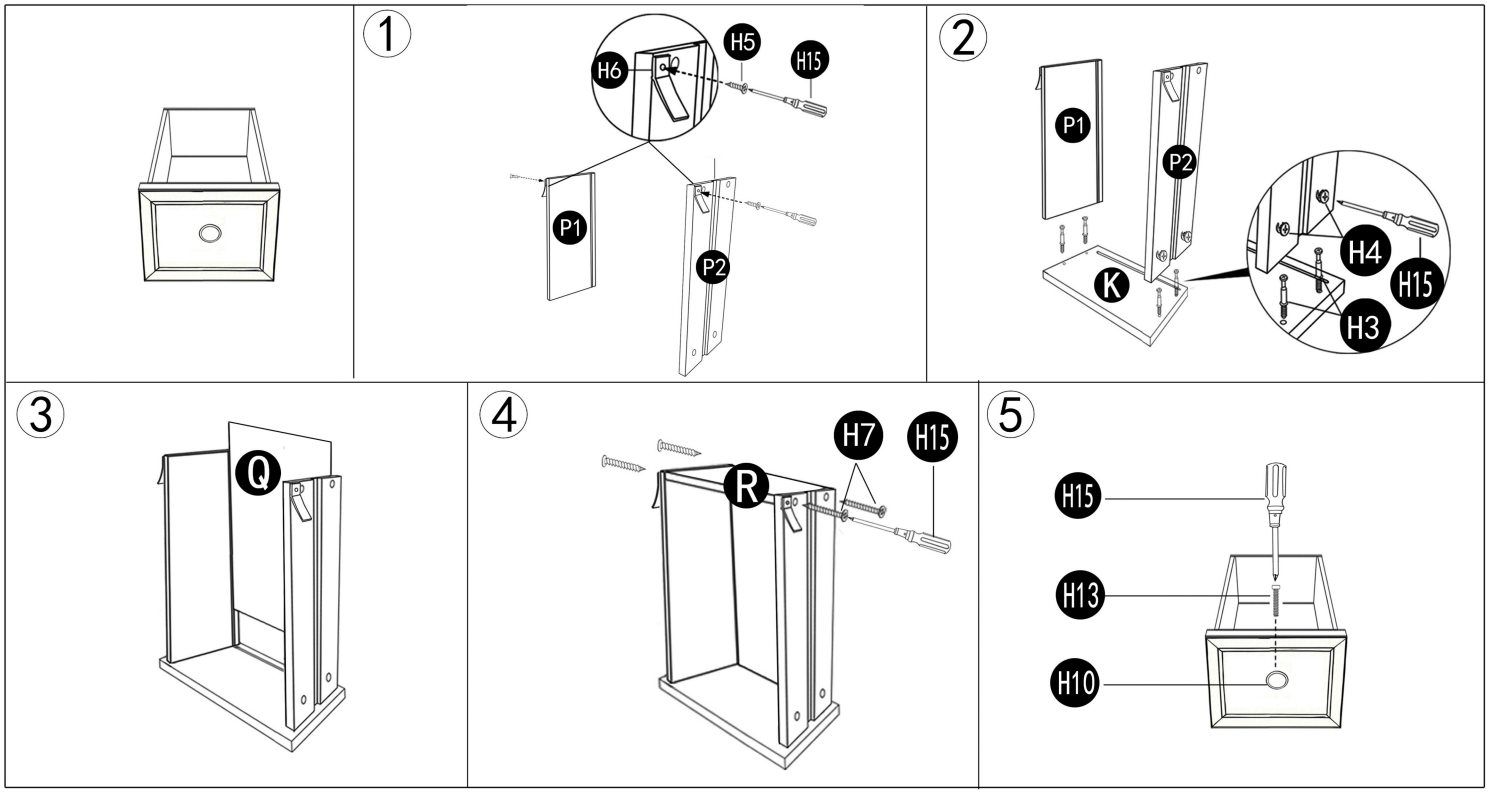Step 10: Put the drawer's panel**(P1/P2/K/Q/R)**on a soft surface to protect the finish.
Ensure to use the Bolt **(H13)** for the knob on this step. **Totally 2 drawers for this step.**



Place all drawers to the main Body. Assembly finished.

