




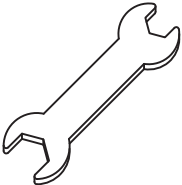
CAST ALUMINUM
HIGHBACK ARM CHAIR




PARTS LIST

A	B	C	D	E
				
Seat 1 PC	Back 1 PC	Leg 1 PC	Left Arm 1 PC	Right Arm 1 PC


HARDWAARE LIST

1	2	3	4	5
				
Flat Washer(M6) 4PCS	Flat Washer(M8) 10PCS	Nuts(M6) 4PCS	Nuts(M8) 10PCS	Short phillips Heat Bolt (M6*25) 2PCS
6	7	8	9	10
				
Long phillips Heat Bolt (M6*30) 2PCS	Nut Caps(M6) 4PCS	Nut Caps(M8) 10PCS	Spring Washers (M6)4PCS	Spring Washers (M8)10PCS
11				
				
Wrench (M6 & M8) 1 PC				

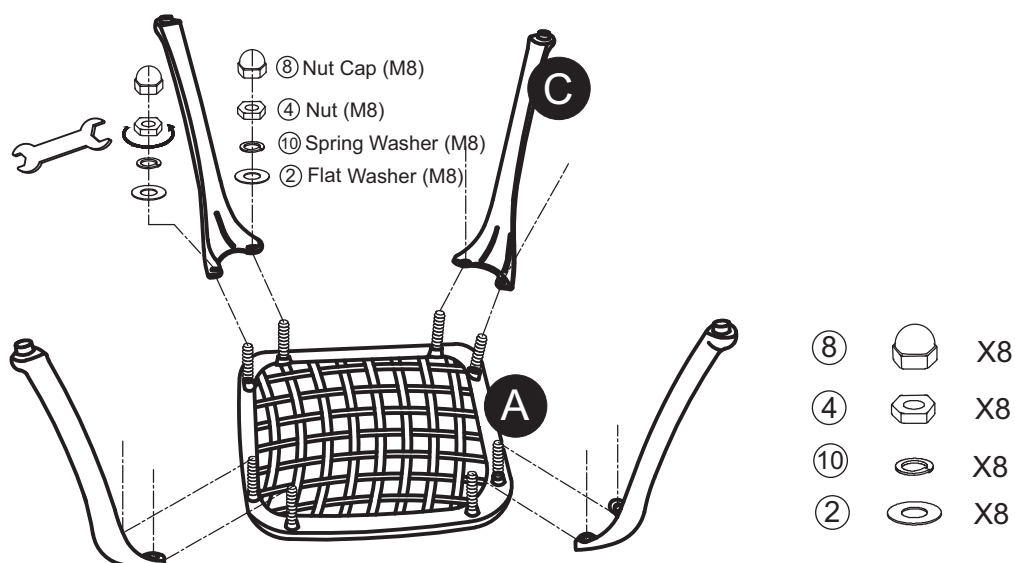
Step:1 Place seat (A) upside down on a soft cloth. Attach Legs (C) to Seat (A) with, Flat washers(Part #2), Spring washers(Part #10),and Nuts(Part #4).Note - Do not tighten Nuts(Part #4) Completely at this time.



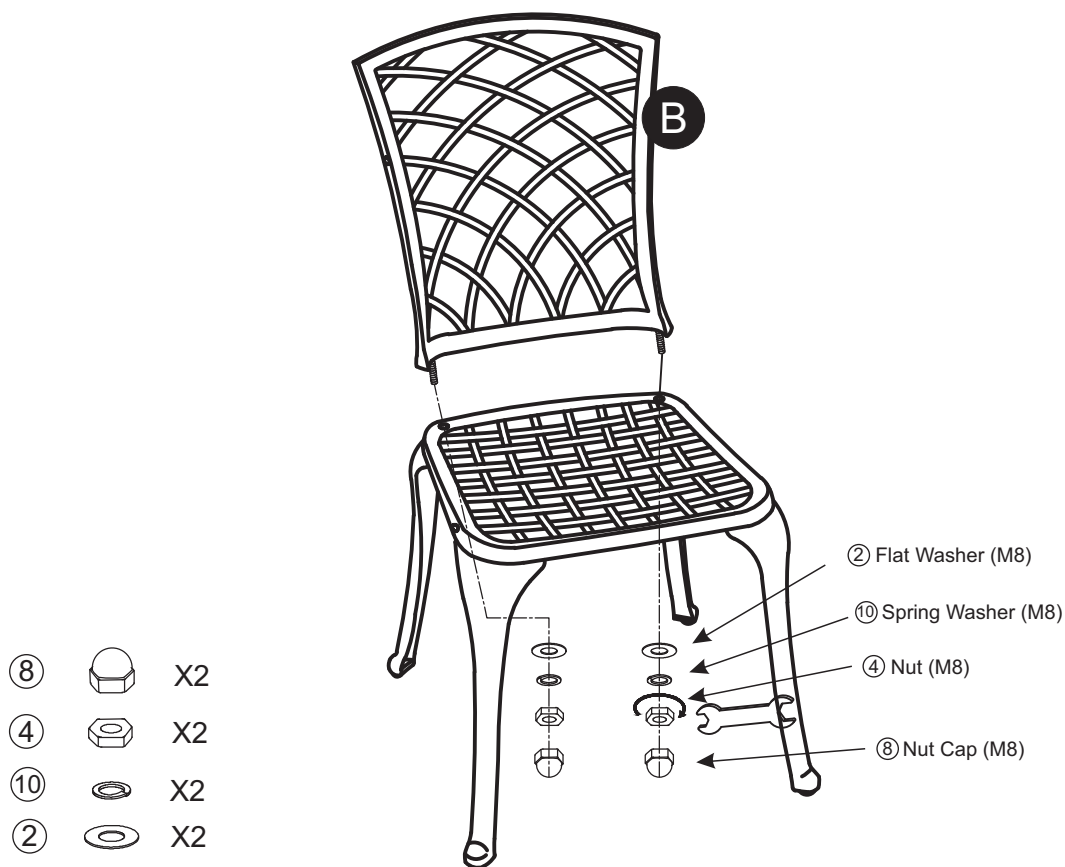Step:2 Attach Back (B) to Seat(A) with Flat Washers(Part #2),Spring Washers(Part #10) & Nuts(Part #4).Note - Do not tighten Nuts(Part #4) completely at this time.



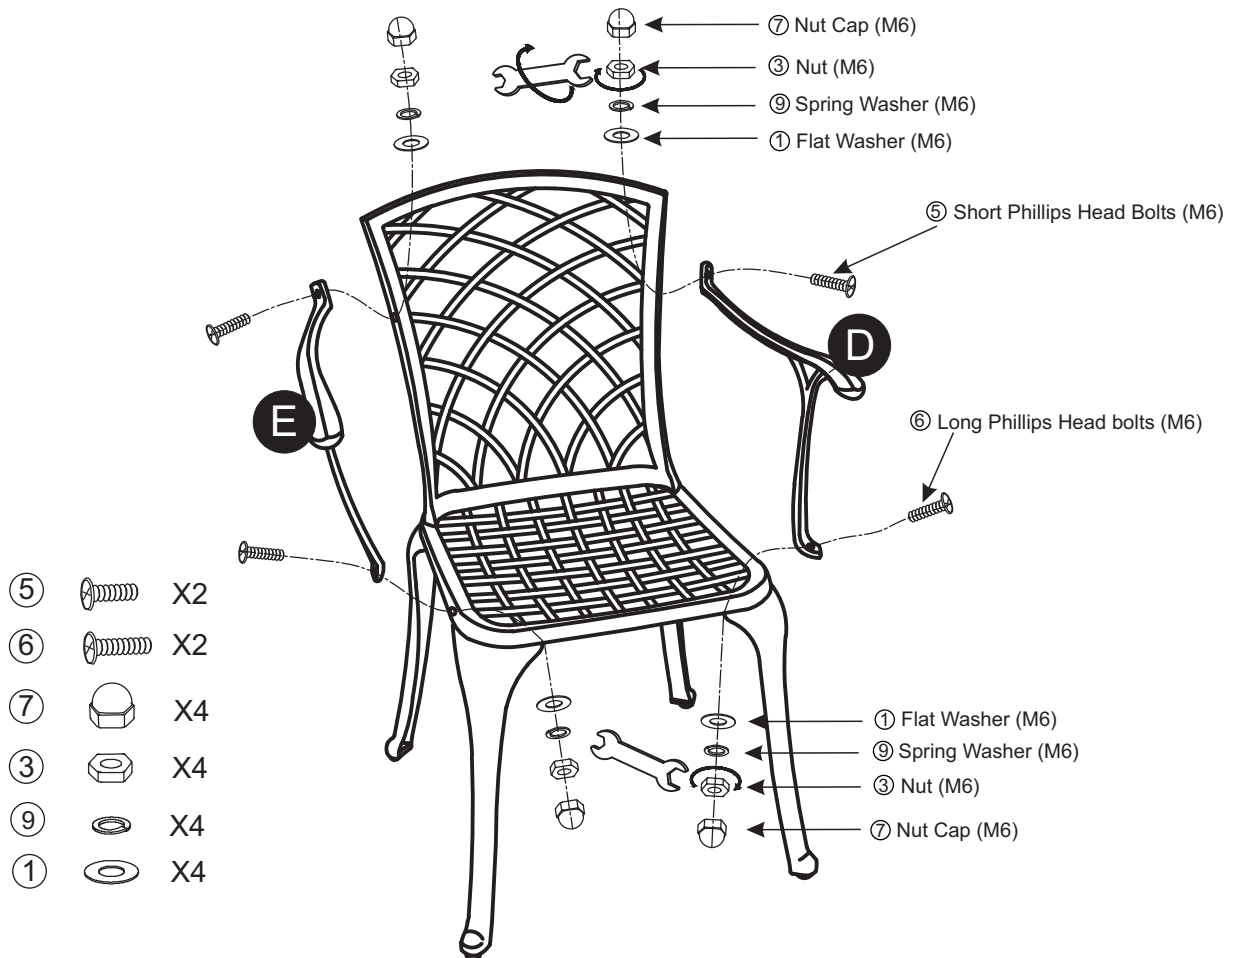Step:3 Attach Arms (E&D) with Short Phillips Head Bolts(Part #5), Long Phillips Head Bolts(Part #6),Flat Washers(Part #1), Spring Washers(Part #9) & Nuts(Part #3).Completely tighten all Nuts(Part #'s 3 & 4) and cover whit Nut Caps (Part #'s 7 & 8).



Step:4 Congratulation!
You are finished

