




AIR

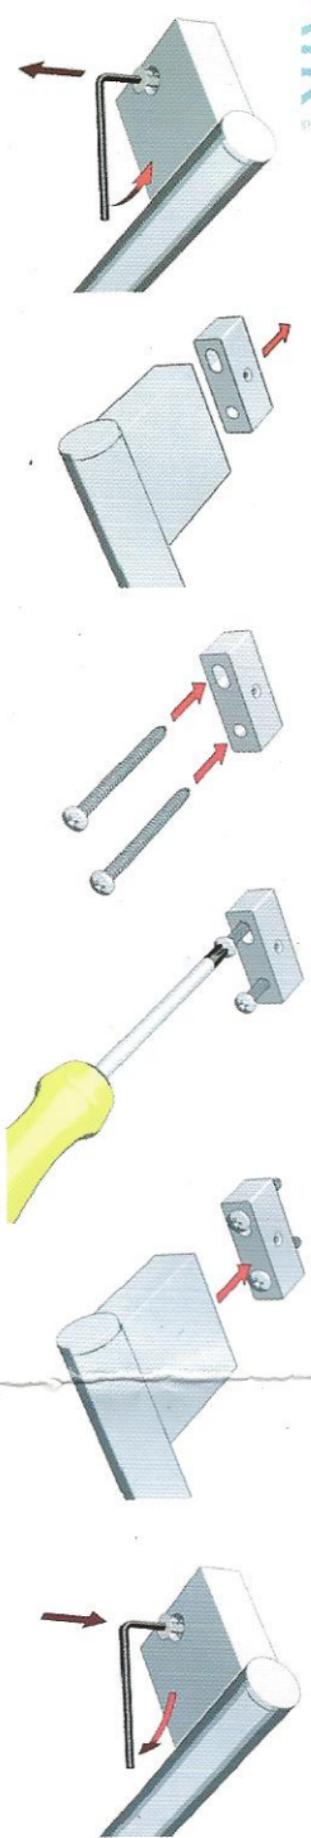

cablin

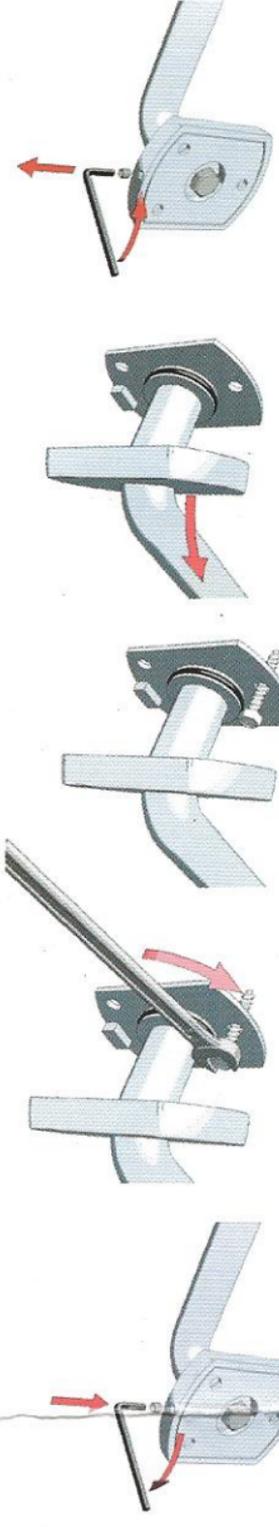


SPA

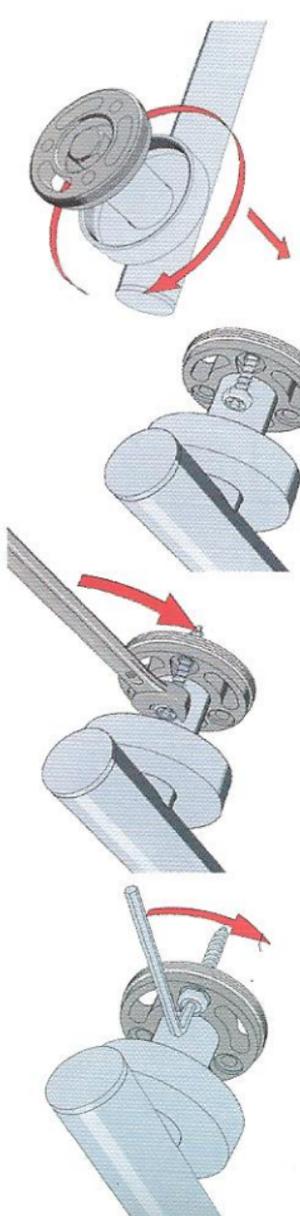

LIVING

www.smedbo.com

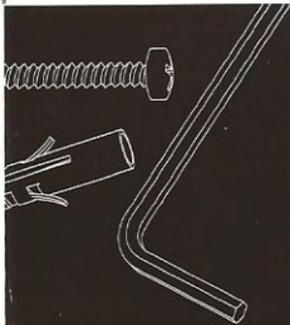


EV901/REVA






GRAB BARS

#929 #423 #000-000

VILLA
BY SALTO

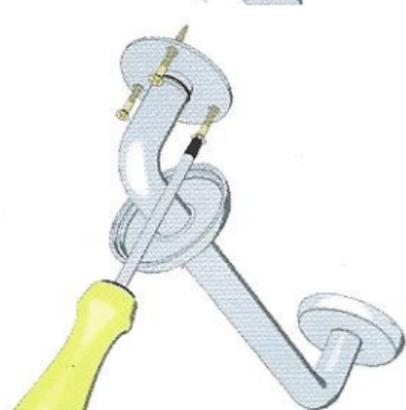





STUDIO

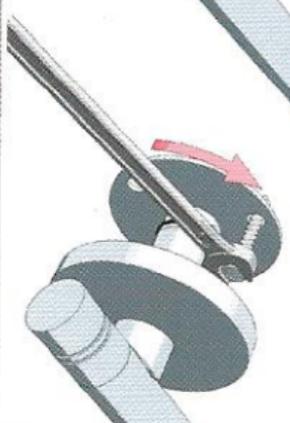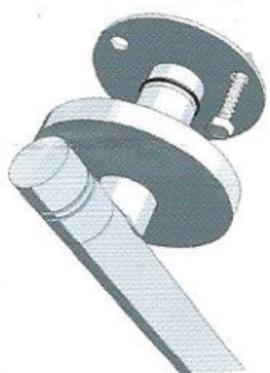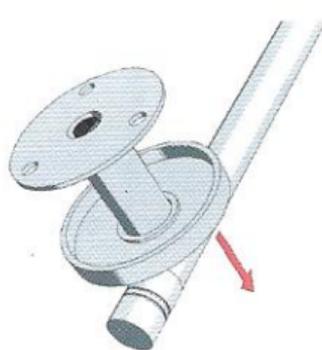




LOFT




HOME
BY SALTO

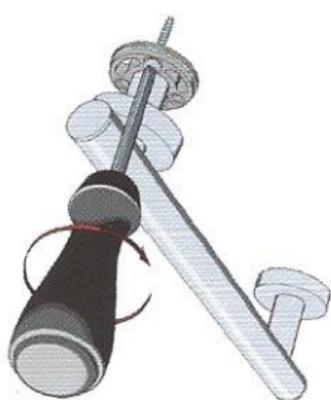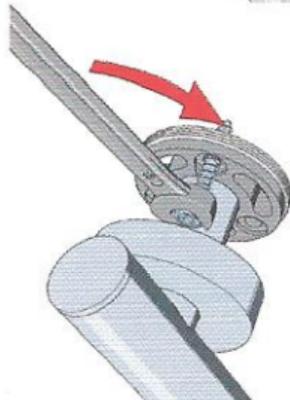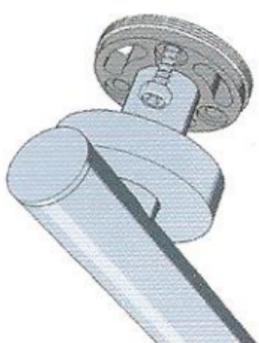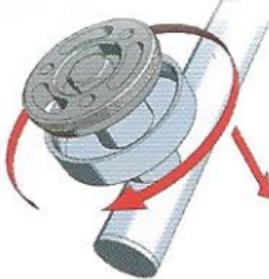


HOUSE
BY SALTO

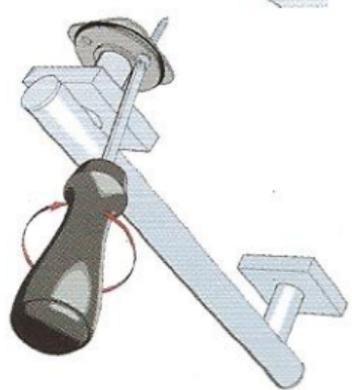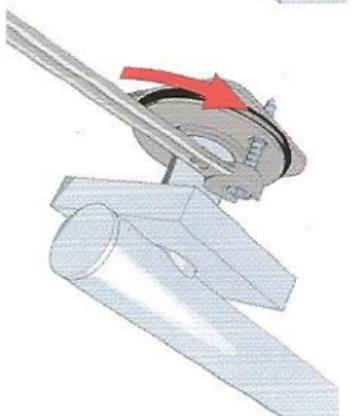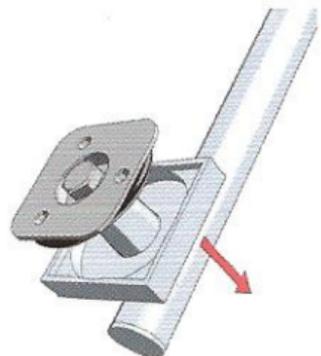


#325

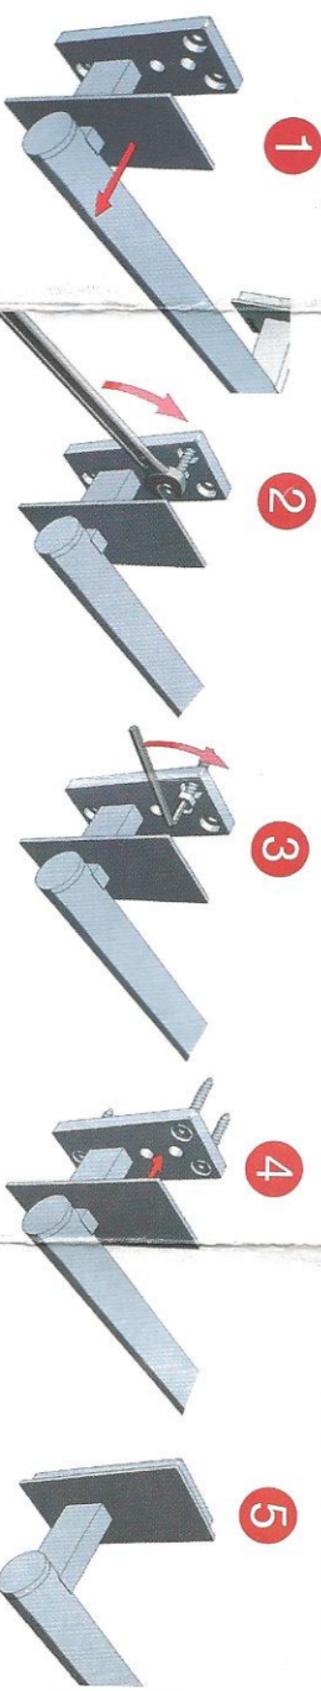


#320, 326, 327,
 332, 333, 3364,
 341, 3414, 342,
 343, 344, 346,
 3464, 347, 356,
 359, 369, 370

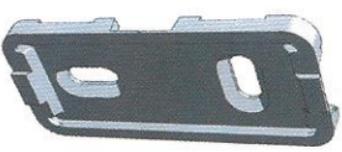


1

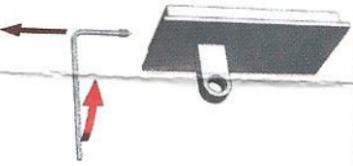


2

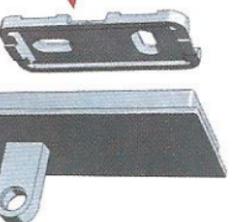


3

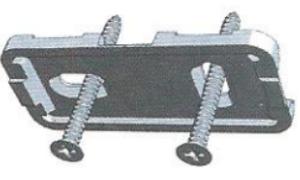

4

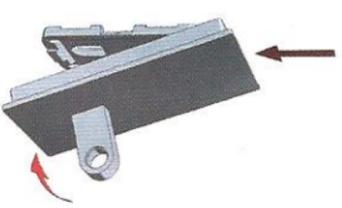

5

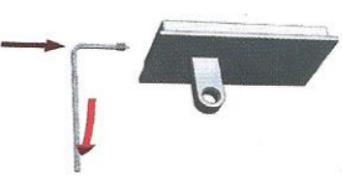

www.smedbo.com


EW931

pool
RV CAMPERS







#3455

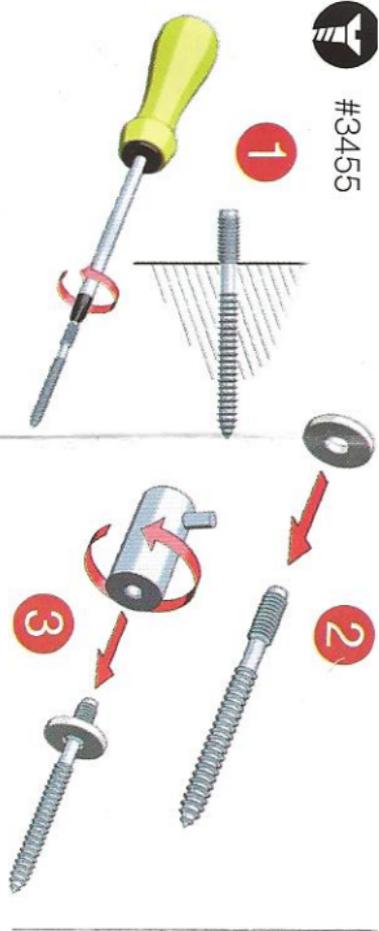

#374

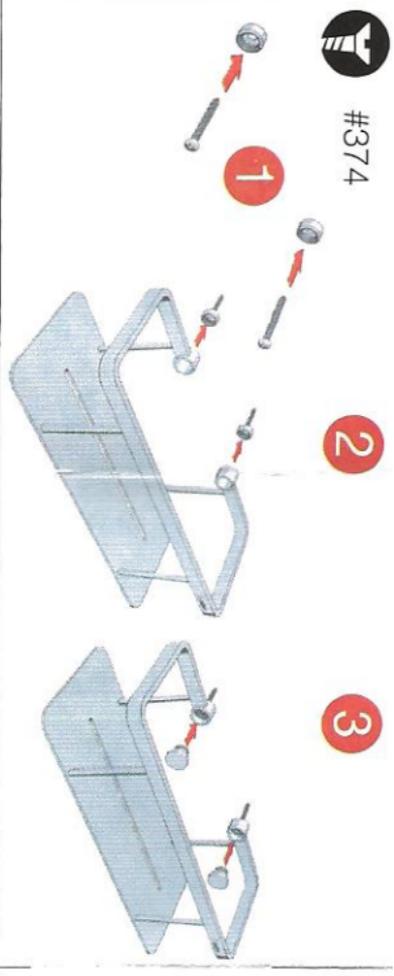

#374 (+ EXTRA F965)

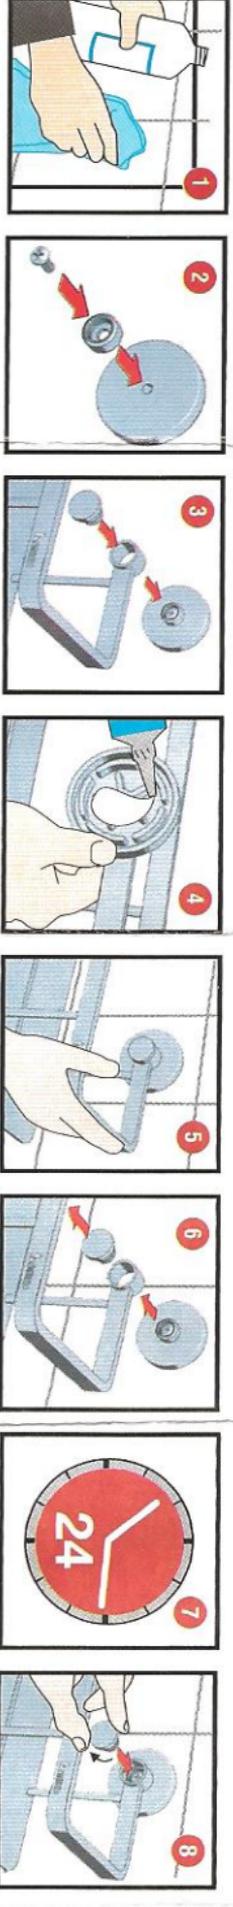

#320, 327, 332, 333, 341, 3414, 342, 343, 344, 346, 3464, 356, 359, 369, 370

