



Installation & Assembly



160CM

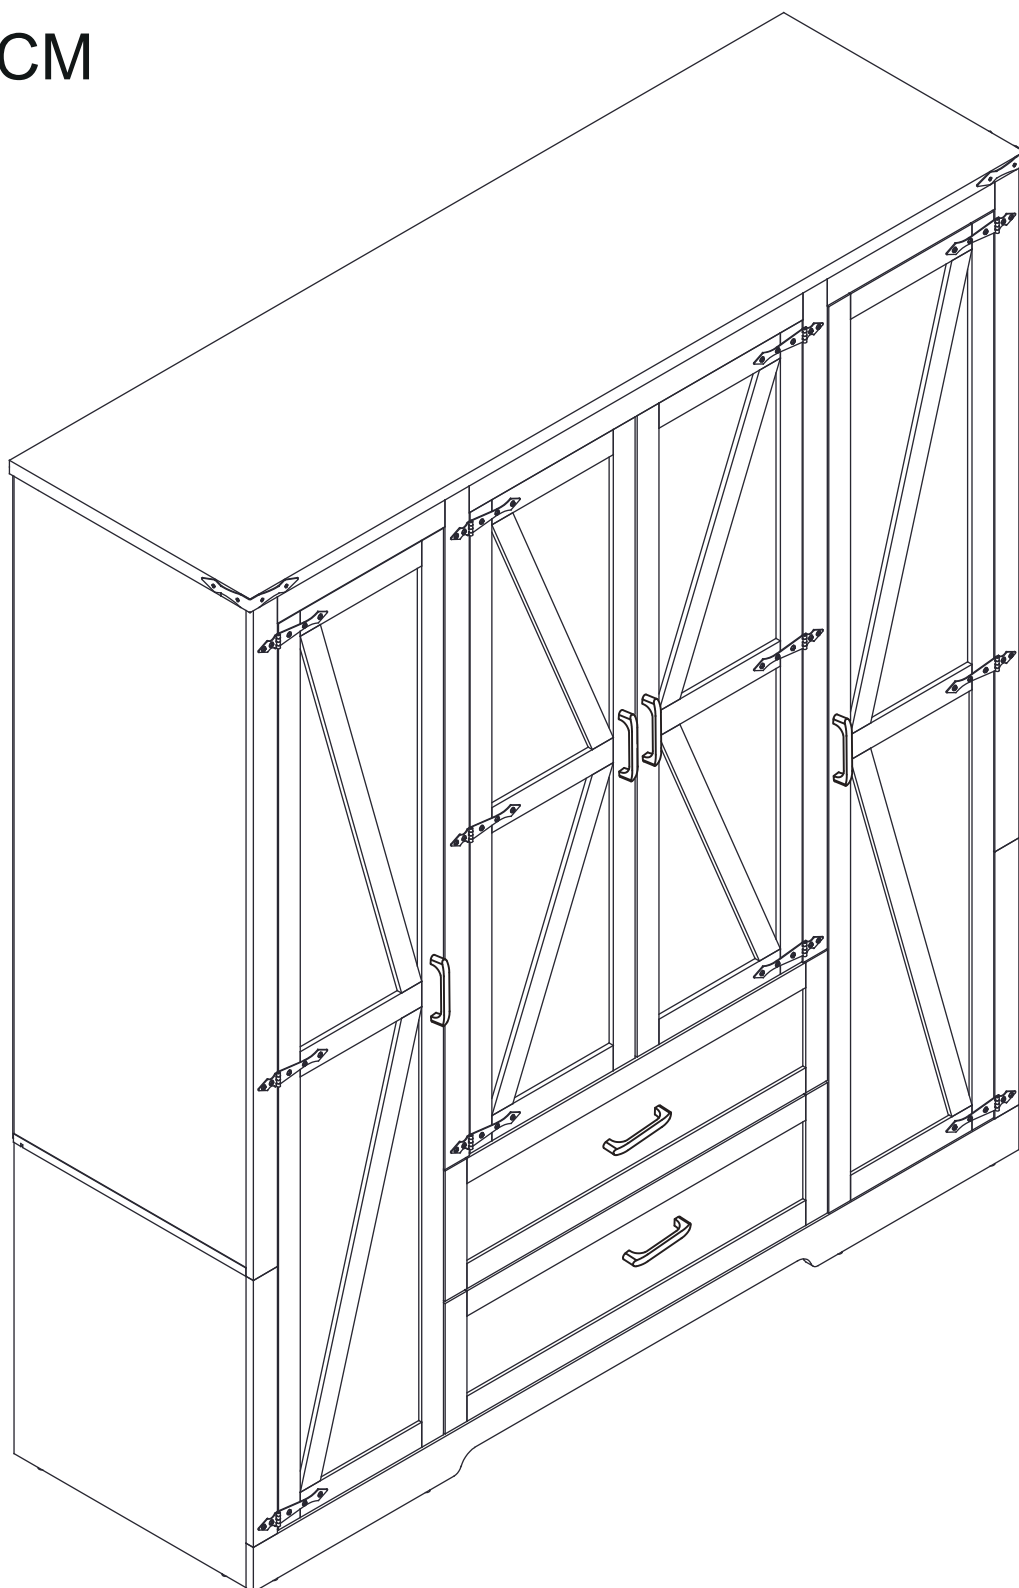

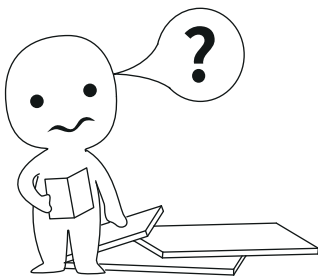


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

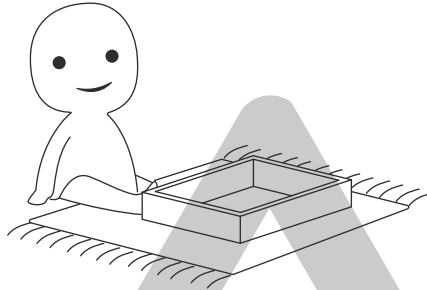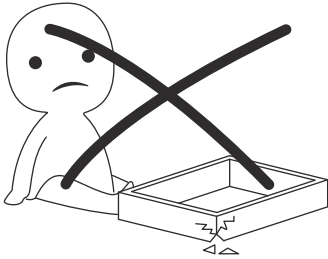



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

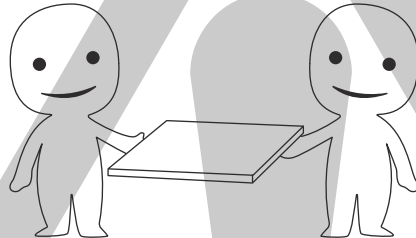

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

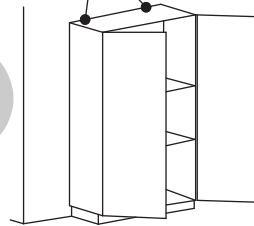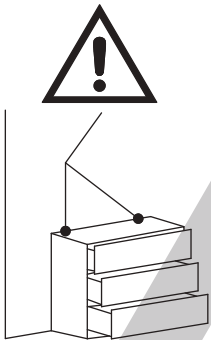

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

























It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.




















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

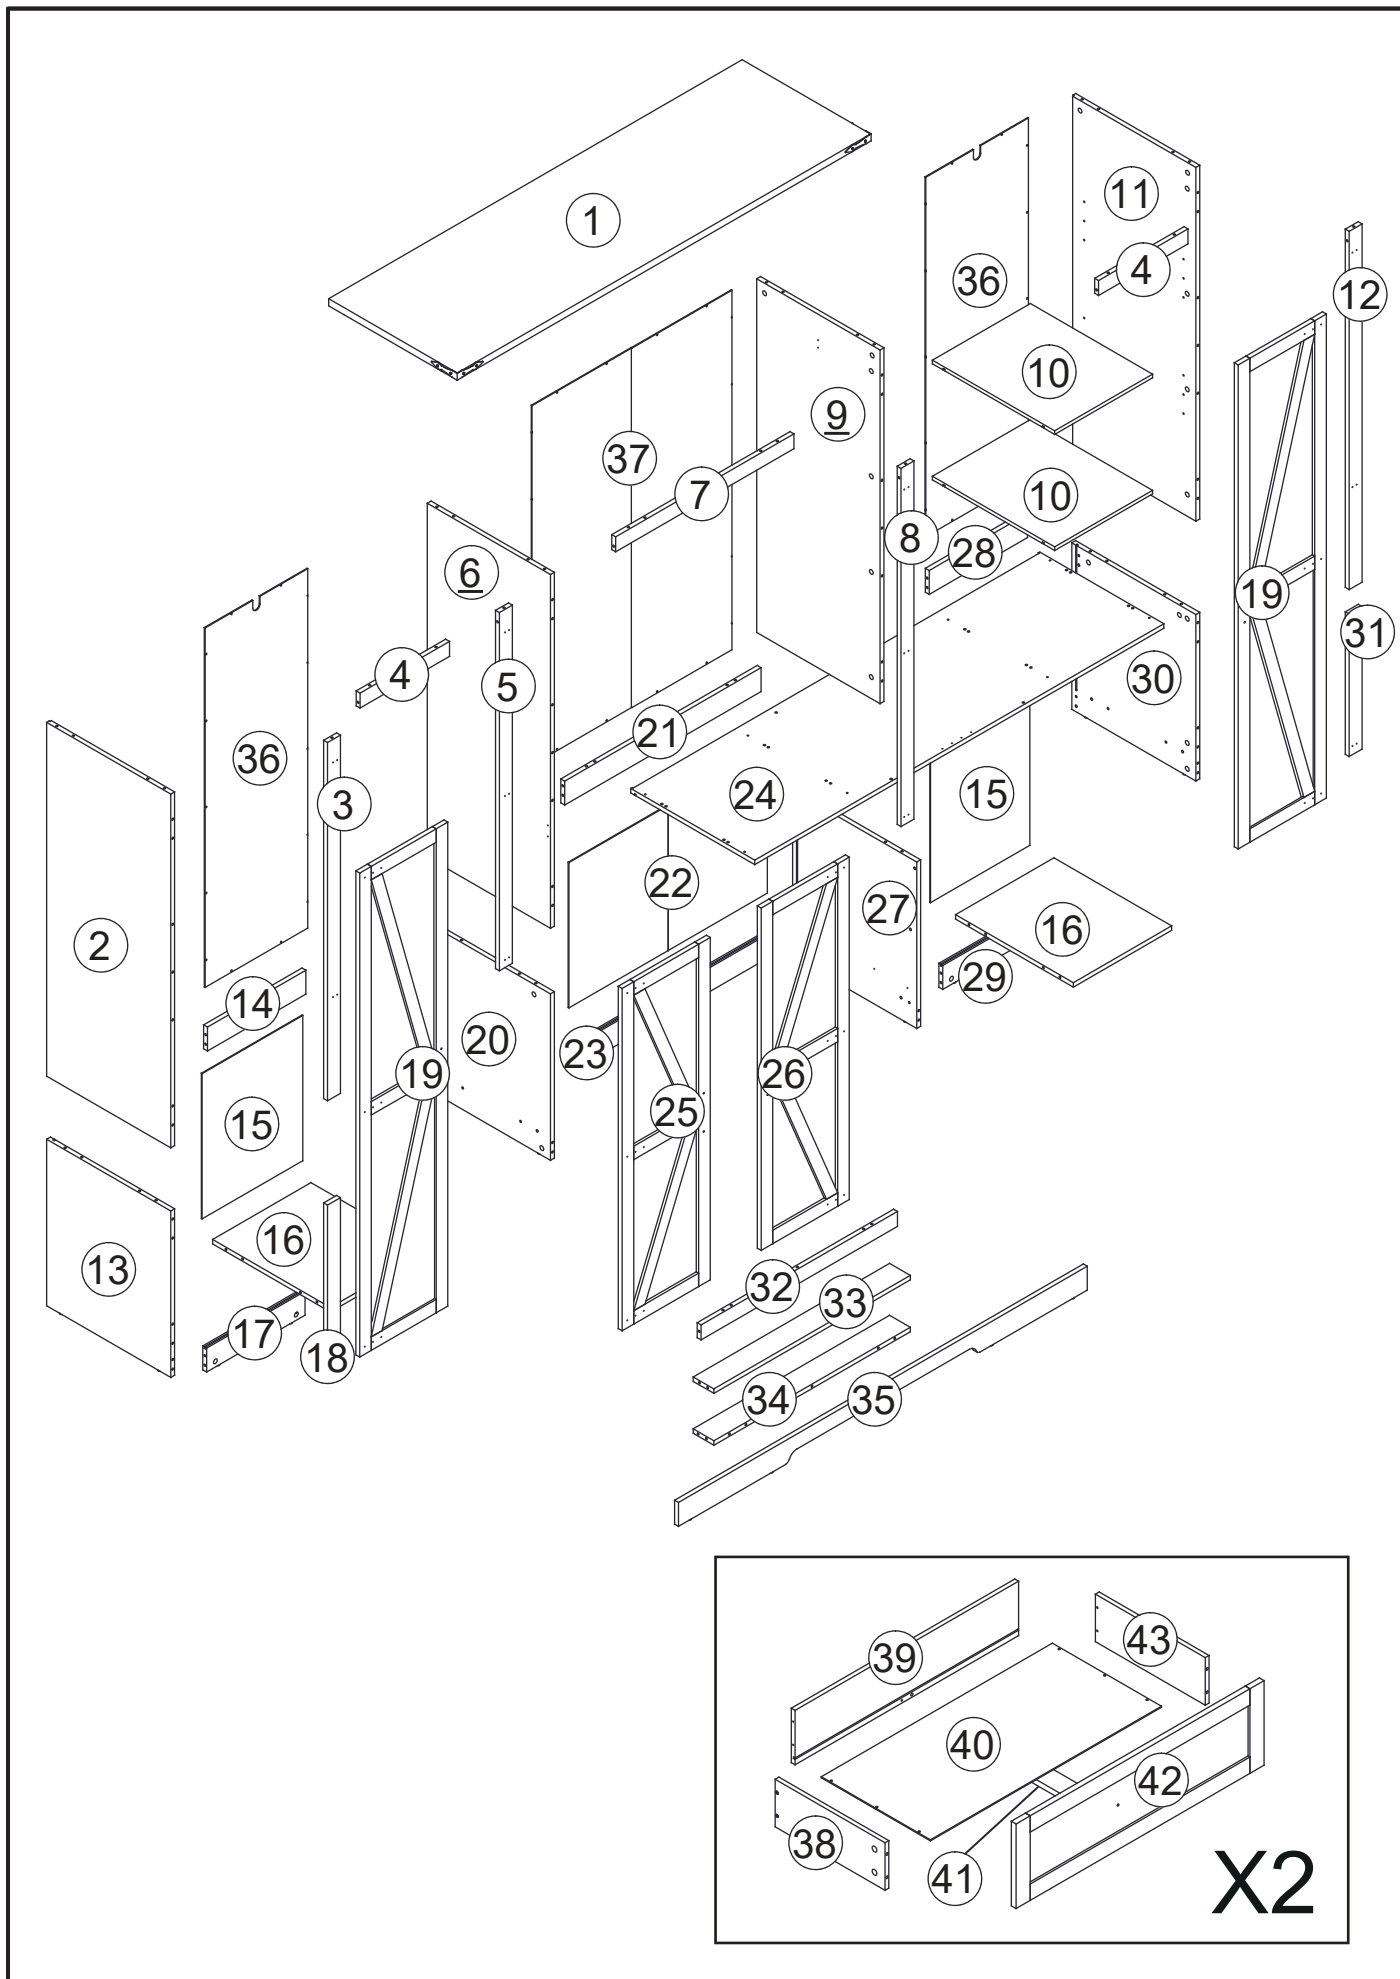











Parts and Operation Elements

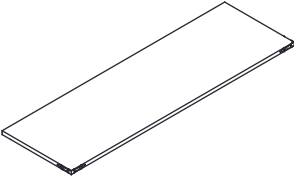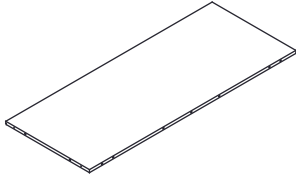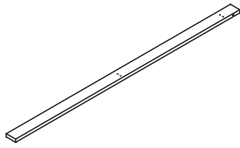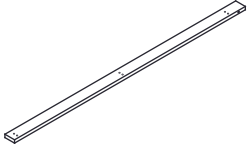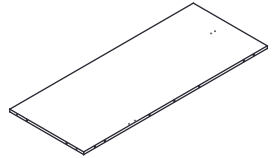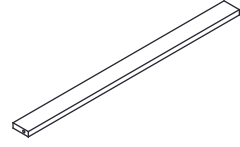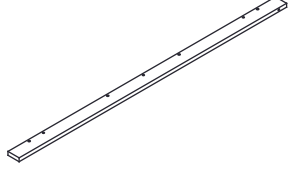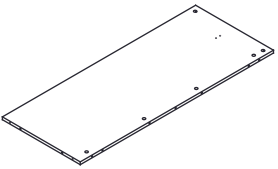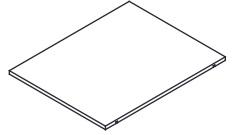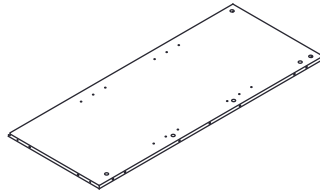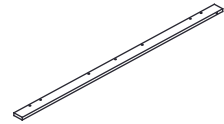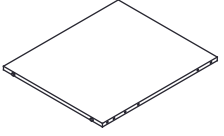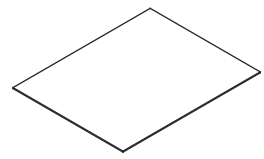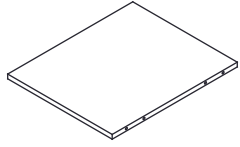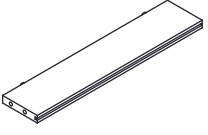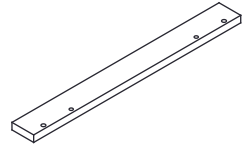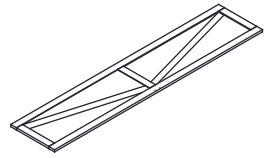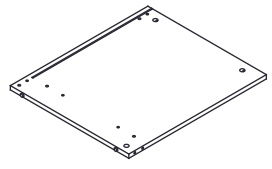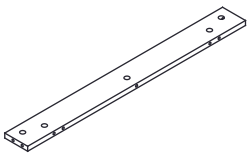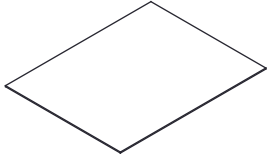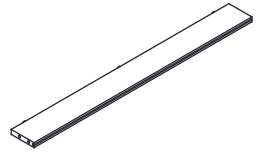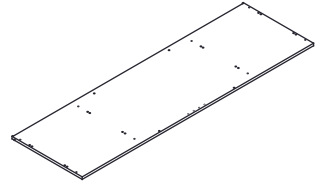			
Roof	On the left panel	Upper left front trim	Upper horizontal bars
① 1pc	② 1pc	③ 1pc	④ 2pcs
			
Left center upper front trim	Left middle side plate	Medium bar	Right center upper front trim
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
Right middle side plate	Movable shelves	Right side plate	Right front trim
⑨ 1pc	⑩ 2pcs	⑪ 1pc	⑫ 1pc
			
Lower left side panel	Left back plate horizontal bar	Lower left and right back panels	Motherboard
⑬ 1pc	⑭ 1pc	⑮ 2pcs	⑯ 2pcs
			
Left rear baseboard	Lower left front trim	Left door panel	Lower left middle side plate
⑰ 1pc	⑱ 1pc	⑲ 2pcs	⑳ 1pc
			
Horizontal strip on the middle back plate	Mid and lower back plate	Kicking strips in the middle and back	Shelves
㉑ 1pc	㉒ 1pc	㉓ 1pc	㉔ 1pc

Parts and Operation Elements

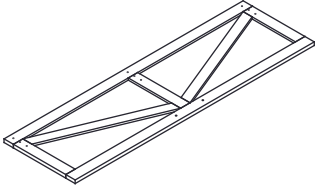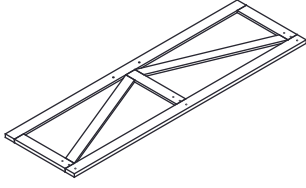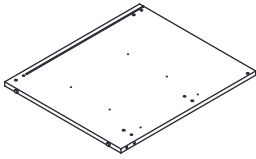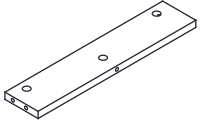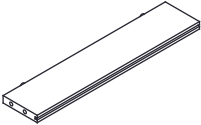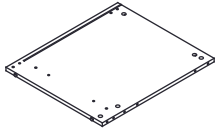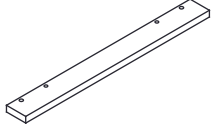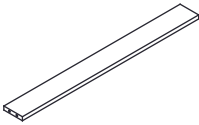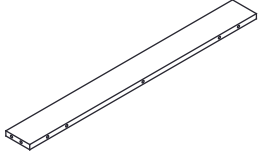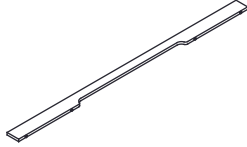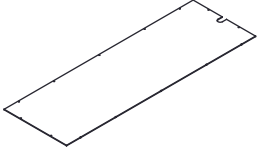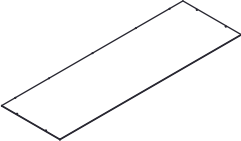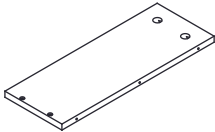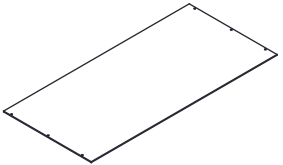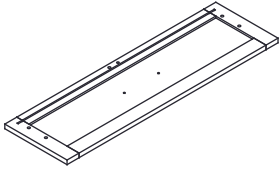			
Upper left door panel ②⑤ 1pc	Upper right door panel ②⑥ 1pc	Lower right middle side plate ②⑦ 1pc	Left back plate horizontal bar ②⑧ 1pc
			
Left rear baseboard ②⑨ 1pc	Lower right side panel ③⑩ 1pc	Lower right front trim ③① 1pc	Front bar ③② 1pc
			
Pull up the front baffle ③③ 1pc	Pull down the front baffle ③④ 1pc	Front baseboard ③⑤ 1pc	Left and right upper backboard ③⑥ 2pcs
			
Upper middle backplate ③⑦ 1pc	Left back board ③⑧ 2pcs	Upper vertical board ③⑨ 2pcs	Draw the bottom plate ④⑩ 2pcs
			
Bottom reinforcement strips ④① 2pcs	Pumping panels ④② 2pcs	Pump the right plate ④③ 2pcs	





Hardware

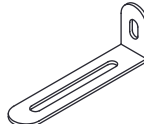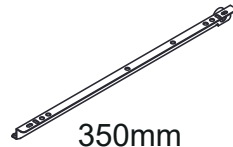 6x32mm Cam bolt Cam bolt		 15x9.5mm cam lock Cam Lock		 7x30mm Wooden dowel Wood dowel		 Dual-purpose screwdriver	
A	98+2pcs	B	98+2pcs	C	98+2pcs	D	1pc
 Arrow hinge		 5x40mm screw		 4x16mm screw		 3.5x12mm screw	
E	12pcs	F	8+2pcs	G	8+2pcs	H	24+2pcs
 4x14mm screw  5x40mm screw Unti-dumping device				 Sticker		 Iron laminate nails	
I	2sets			J	98+2pcs	K	8+2pcs
 4x30mm screw		 Handle		 3x14mm screw		 M4x6mm bolt	
L	10+2pcs	M	6pcs	N	60+2pcs	P	4pcs
 Magnetic contact		 Two-hole magnetic sheet		 Plastic buckle		 3x14mm screw	
Q	4pcs	R	4pcs	S	26+2pcs	T	26pcs
 M4x18mm bolt		 3x16mm screw		 3x12mm screw		 Power socket	
U	8+2pcs	V	8pcs	W	11pcs	X	12+2pcs
 3x16mm screw		 374mm Clothes poles		 Clothes rack		 350mm	
Y	40+2pcs	Z	1pc	a	4pcs	DR	2pcs




SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

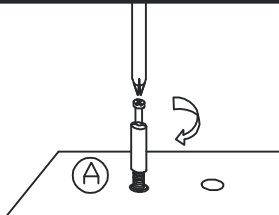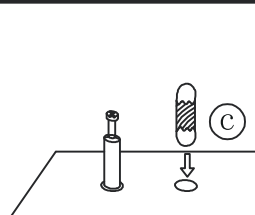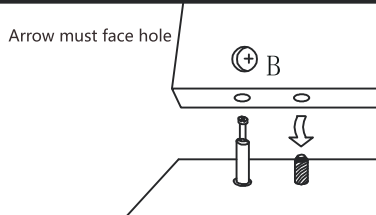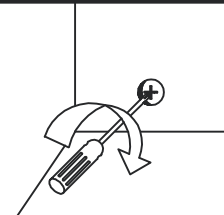							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.		Arrow must face hole		Screw the camlock firmly into locked position.	





Hardware

 350mm		 350mm		 350mm		 754mm Clothes poles	
CL	2pcs	CR	2pcs	DL	2pcs	C	1pc
 One-hole magnetic sheet							
b	3pcs						













SPARE BAG








THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

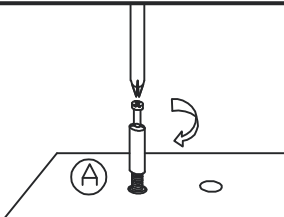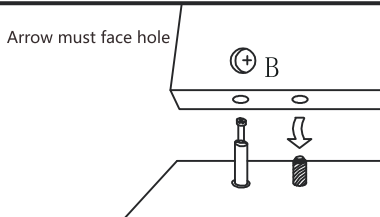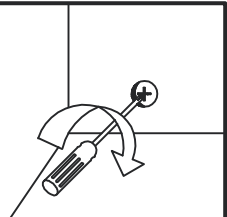			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.










1

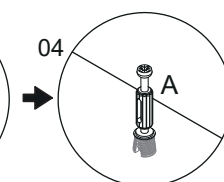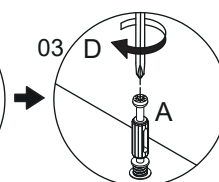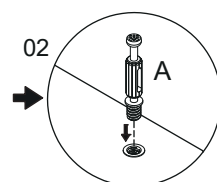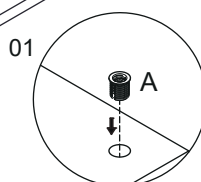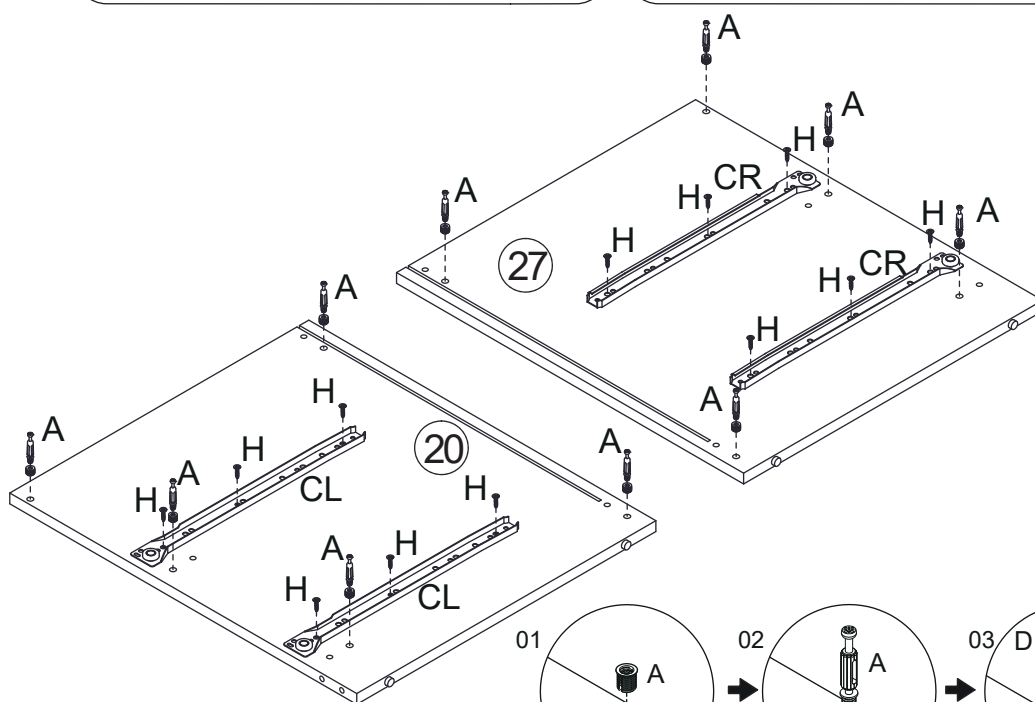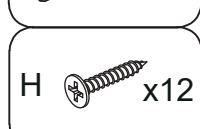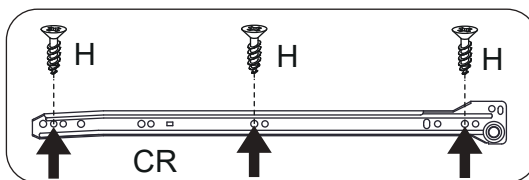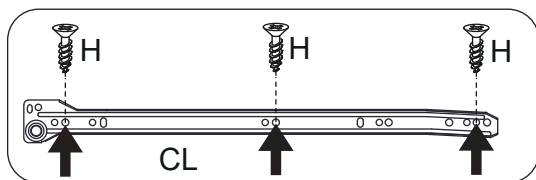








2

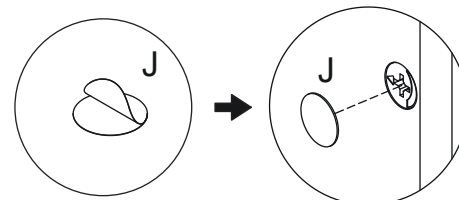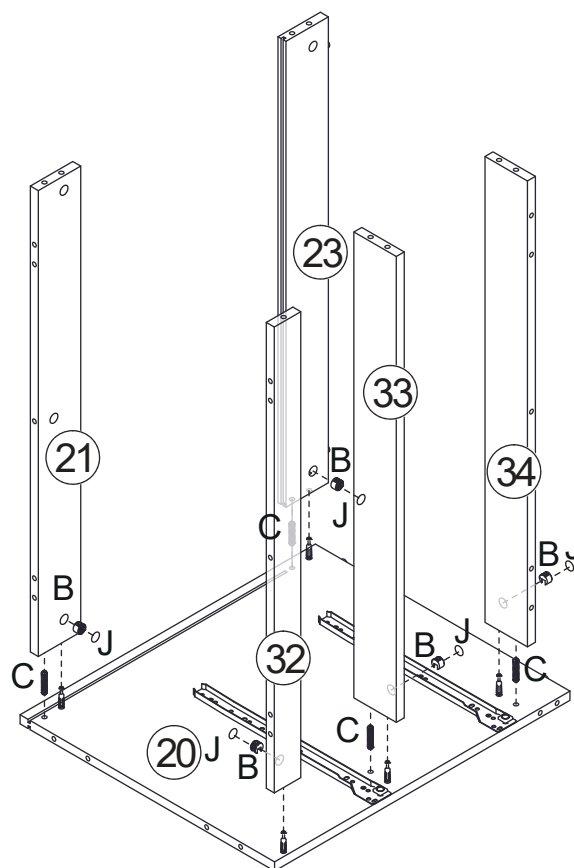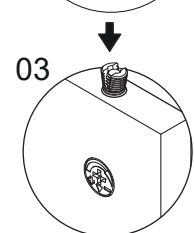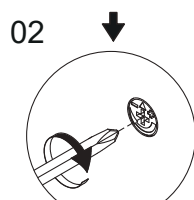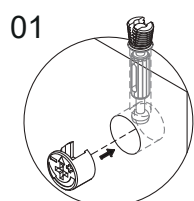


3

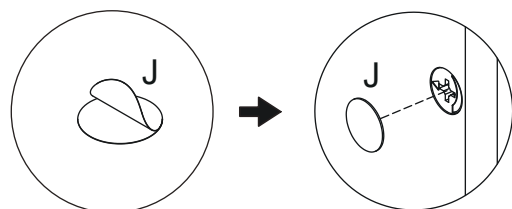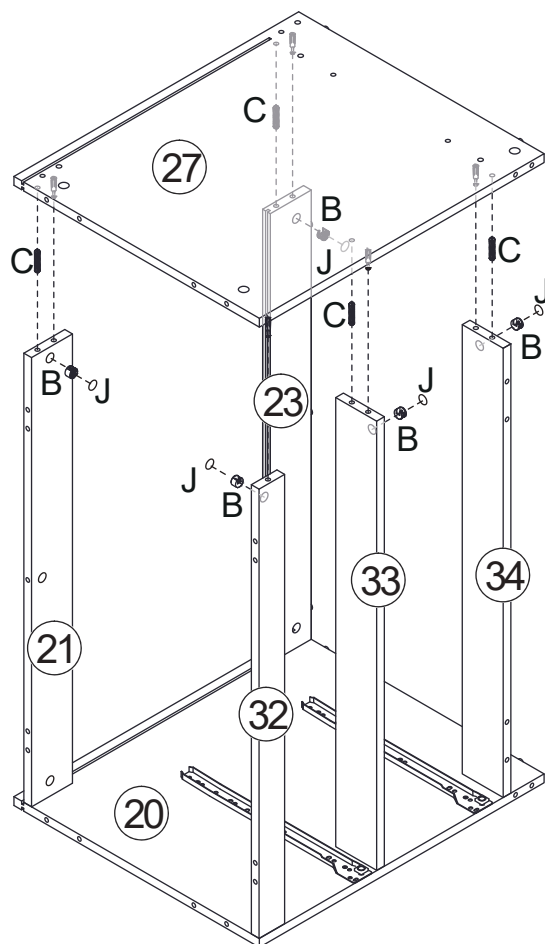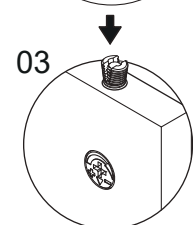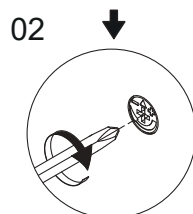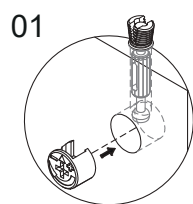






4

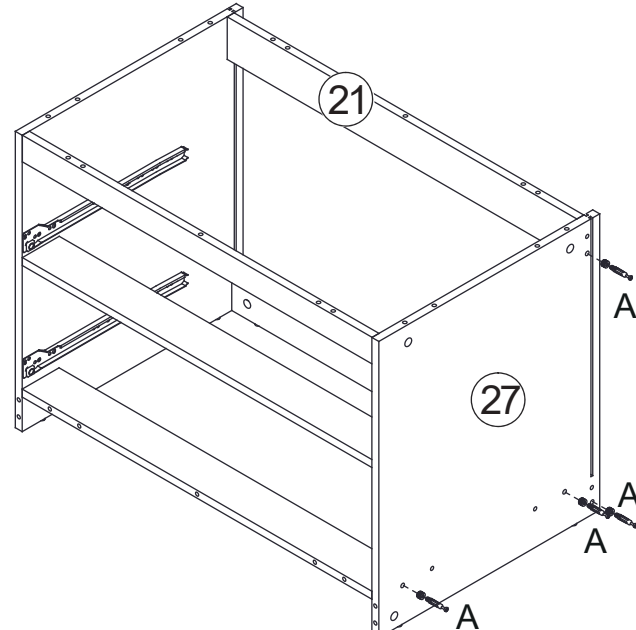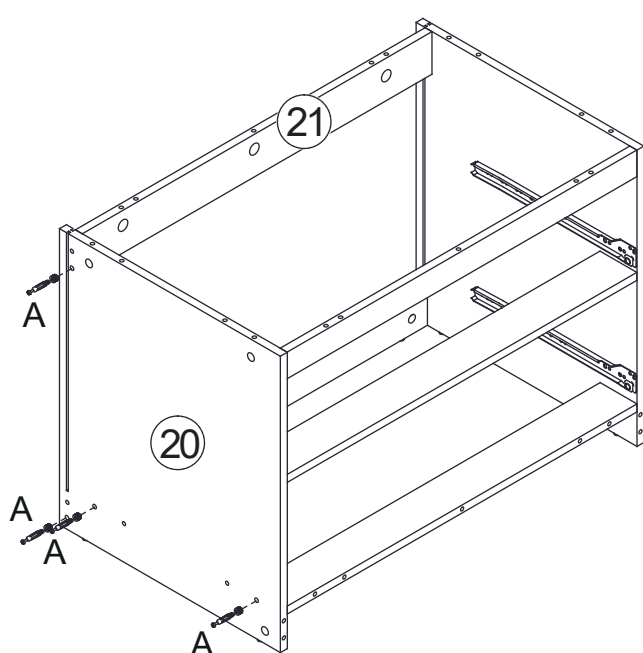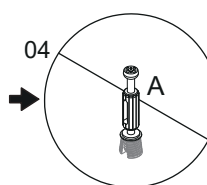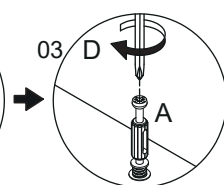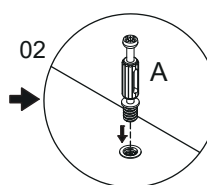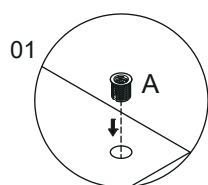





5

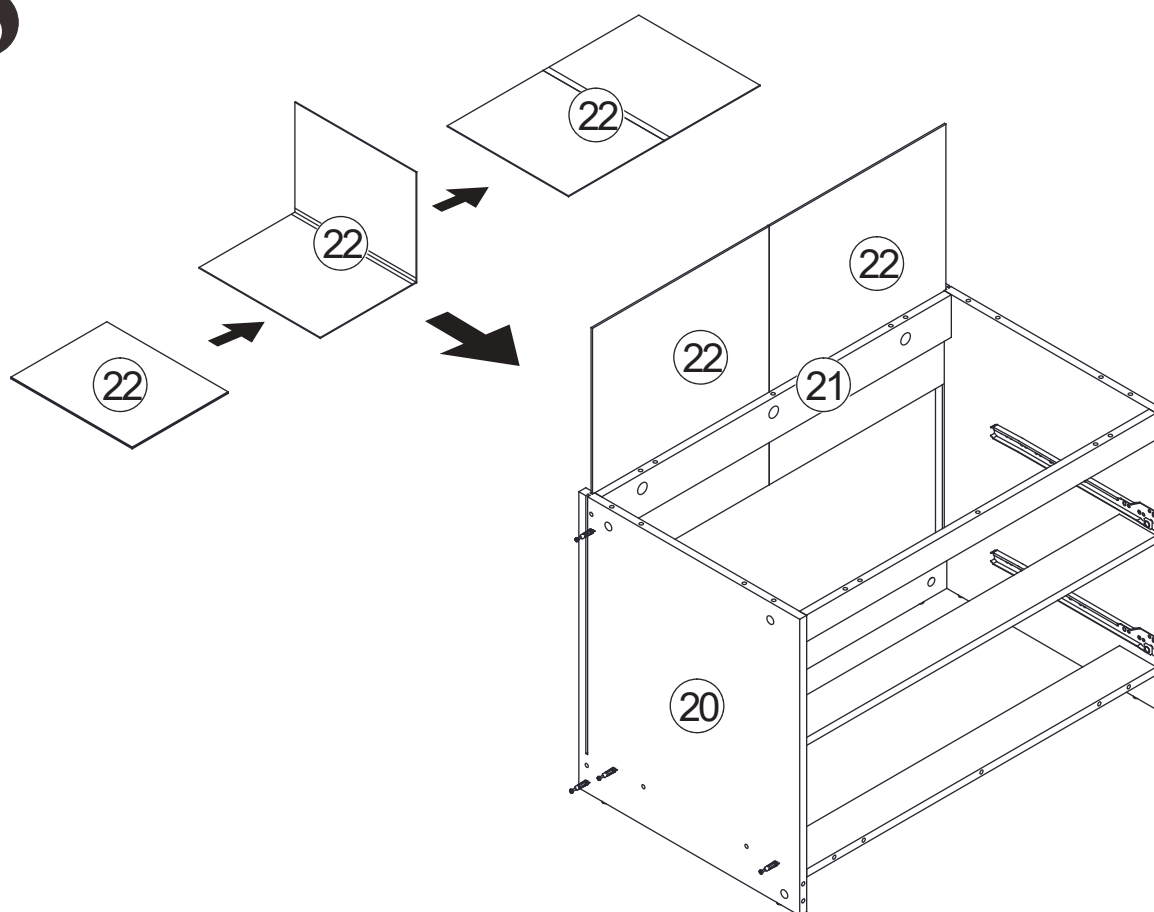

6

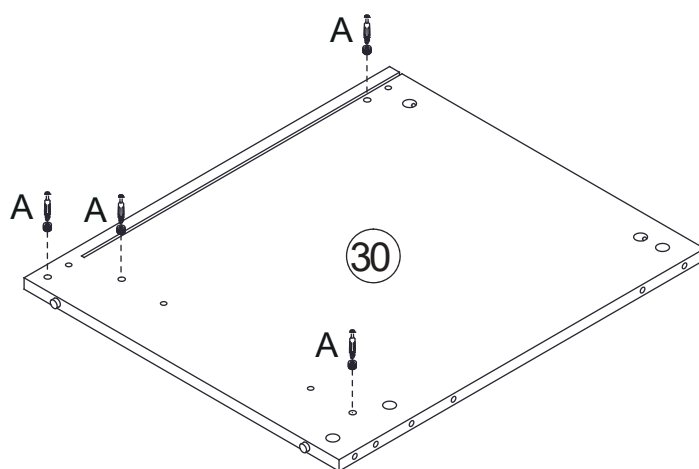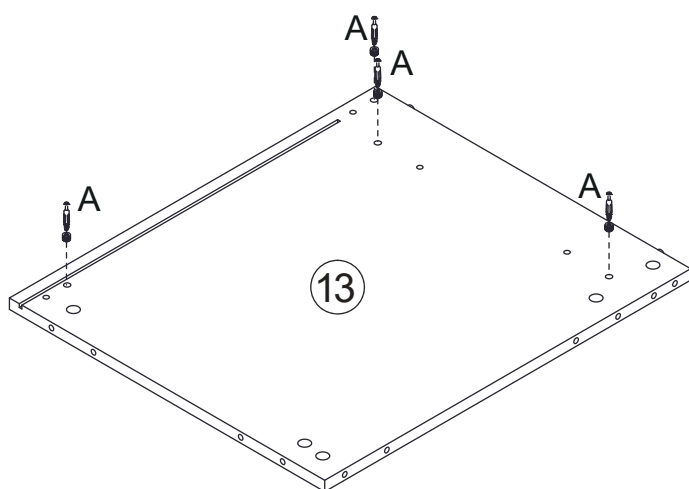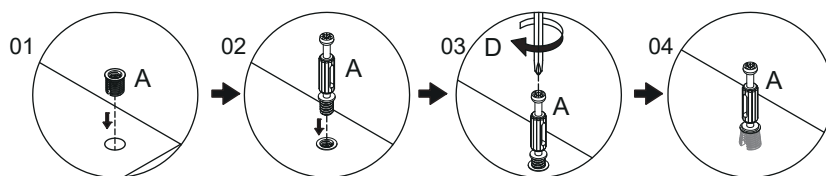


7

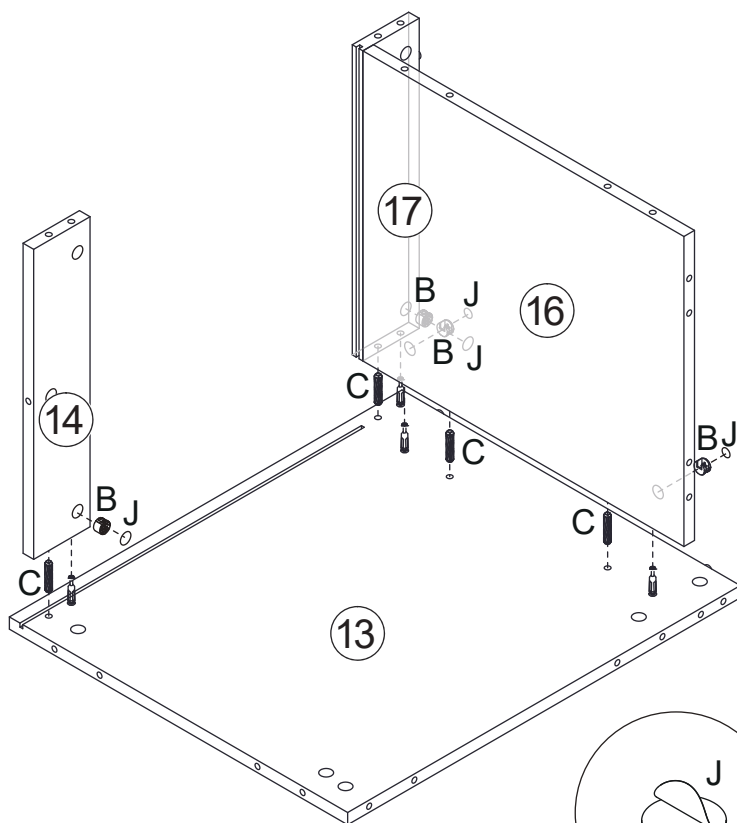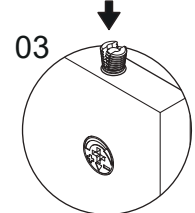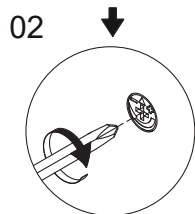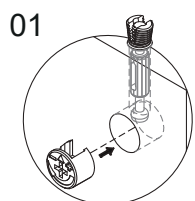


C  x4






B  x4

J  x4

D  x1

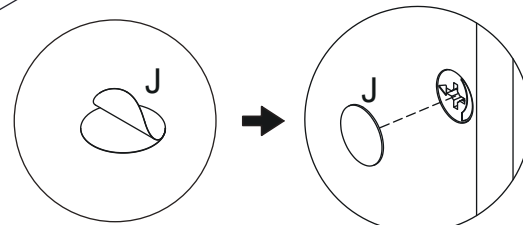

8

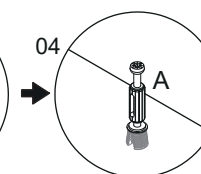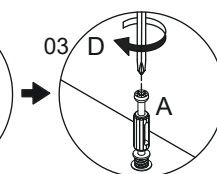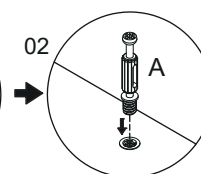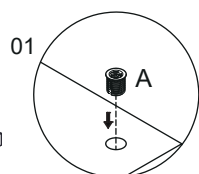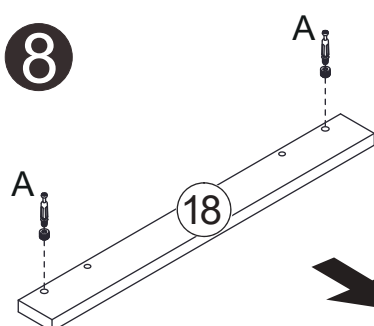






A  x2

C  x2





B  x2

J  x2

D  x1

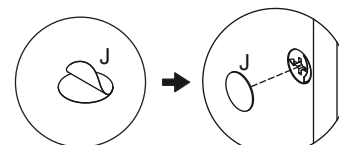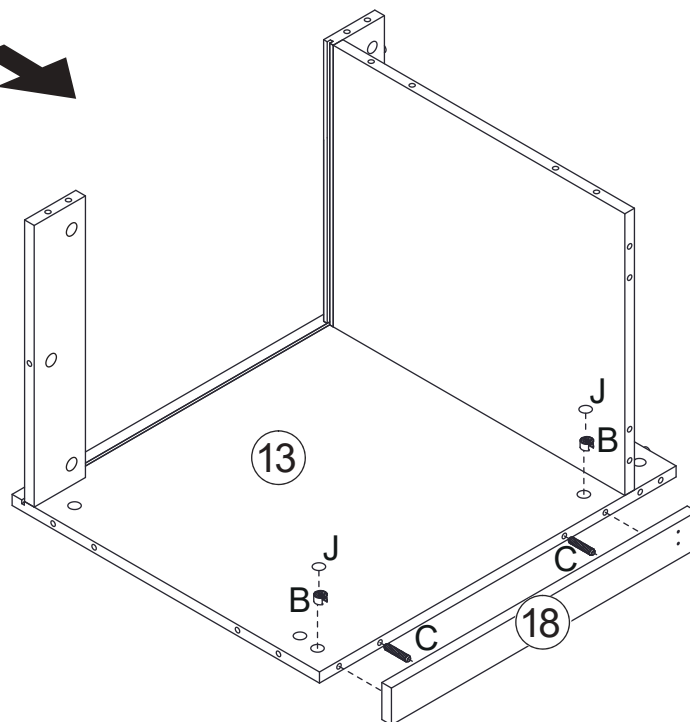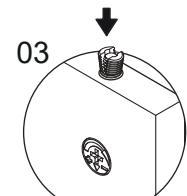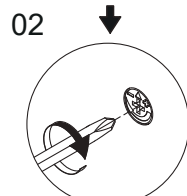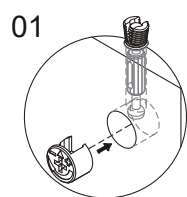

9

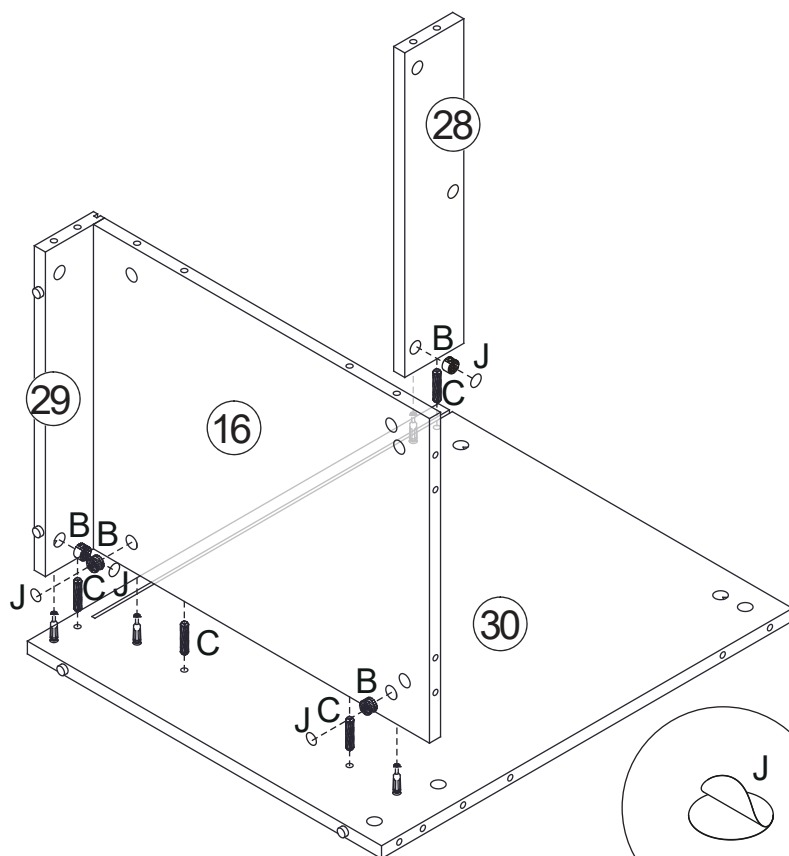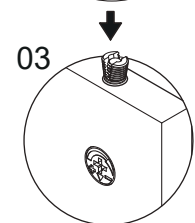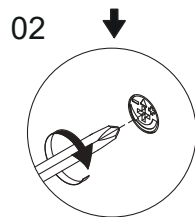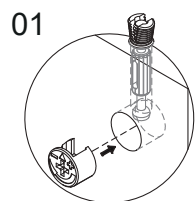










B  x4

C  x4

D  x1

J  x4

10

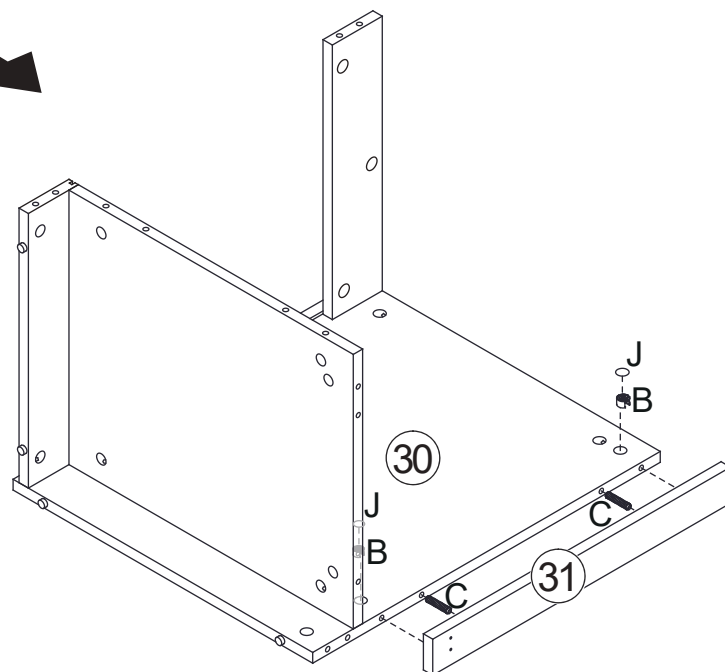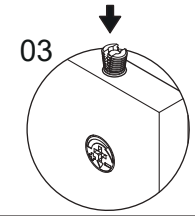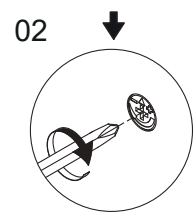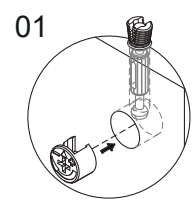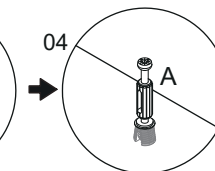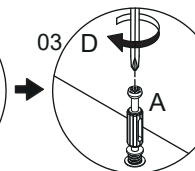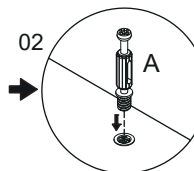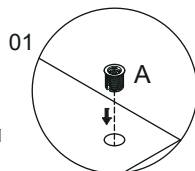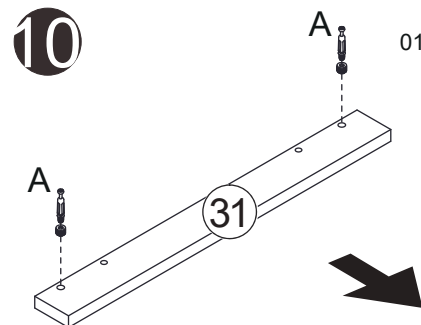



A  x2

C  x2



B  x2

J  x2

D  x1

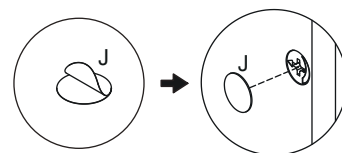

11

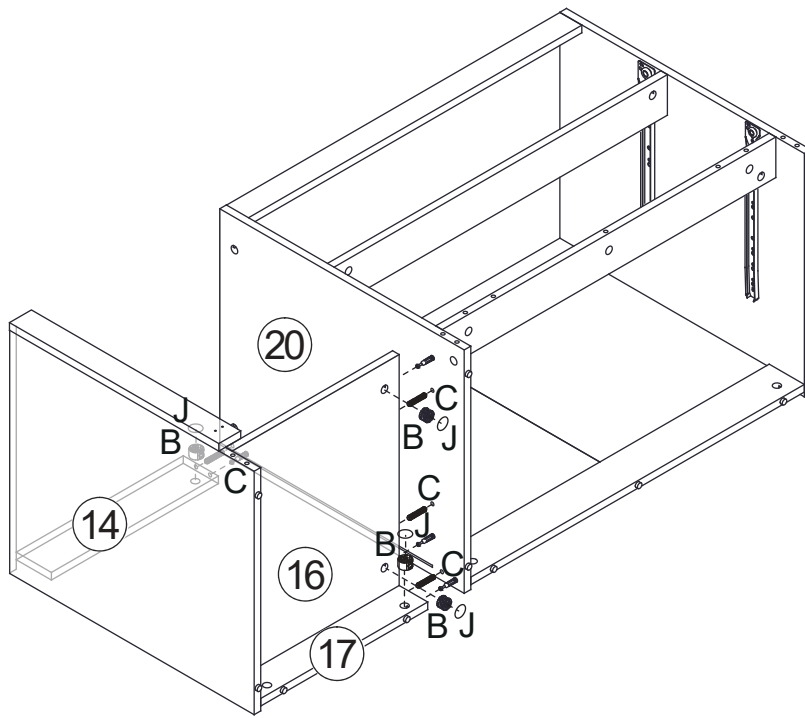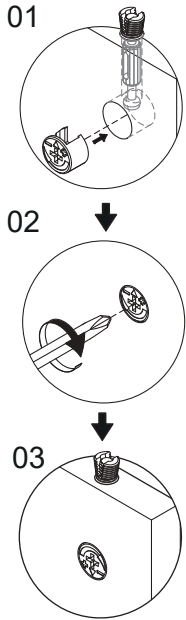


C  x4



B  x4

J  x4

D  x1

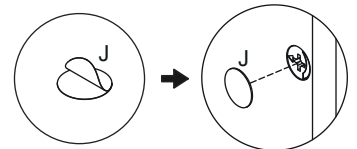

12

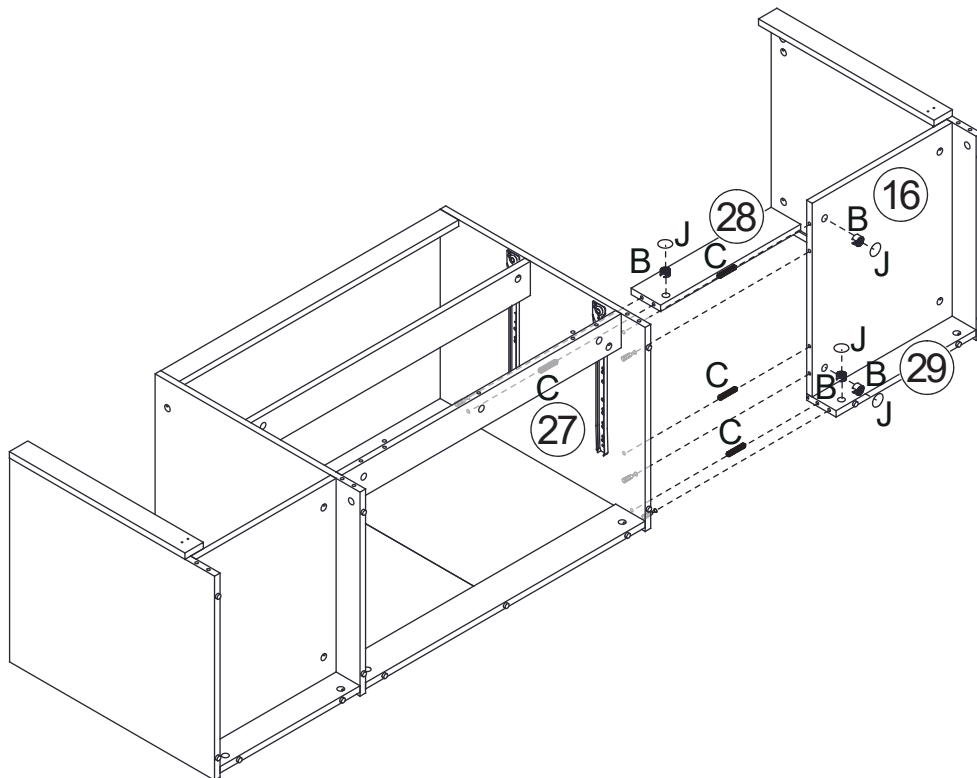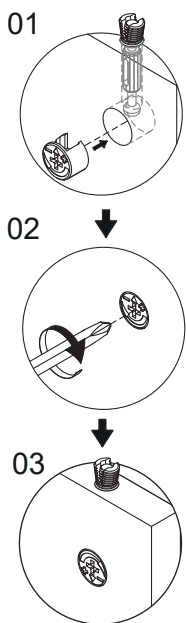


C  x4





B  x4

J  x4








D  x1

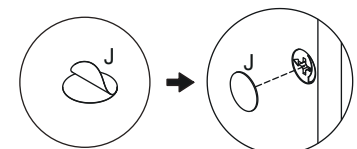


13

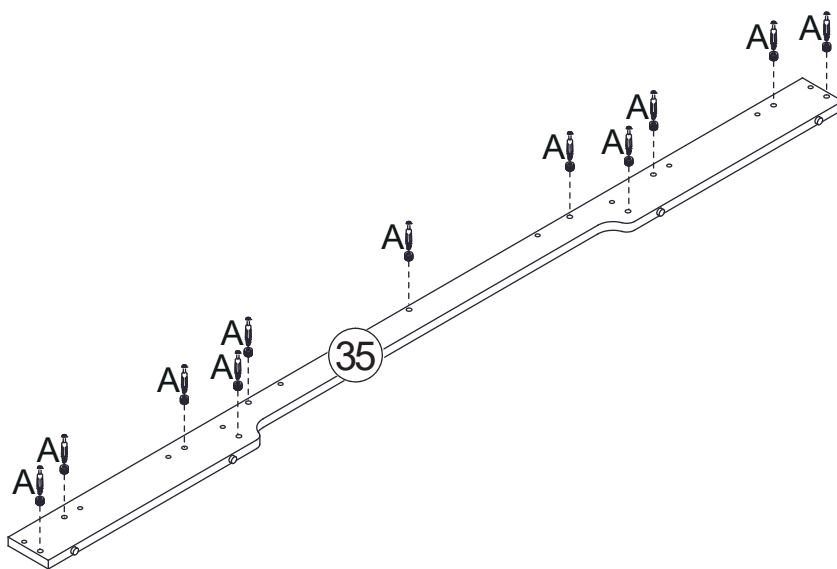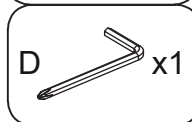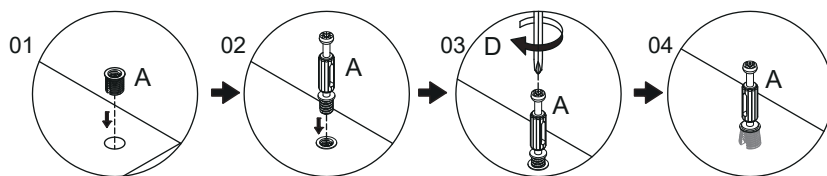


14

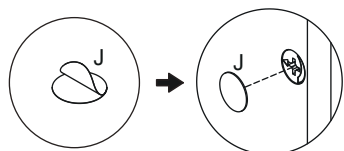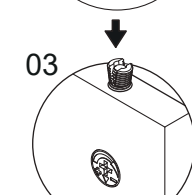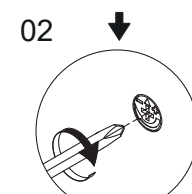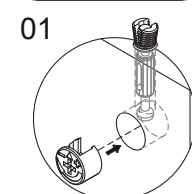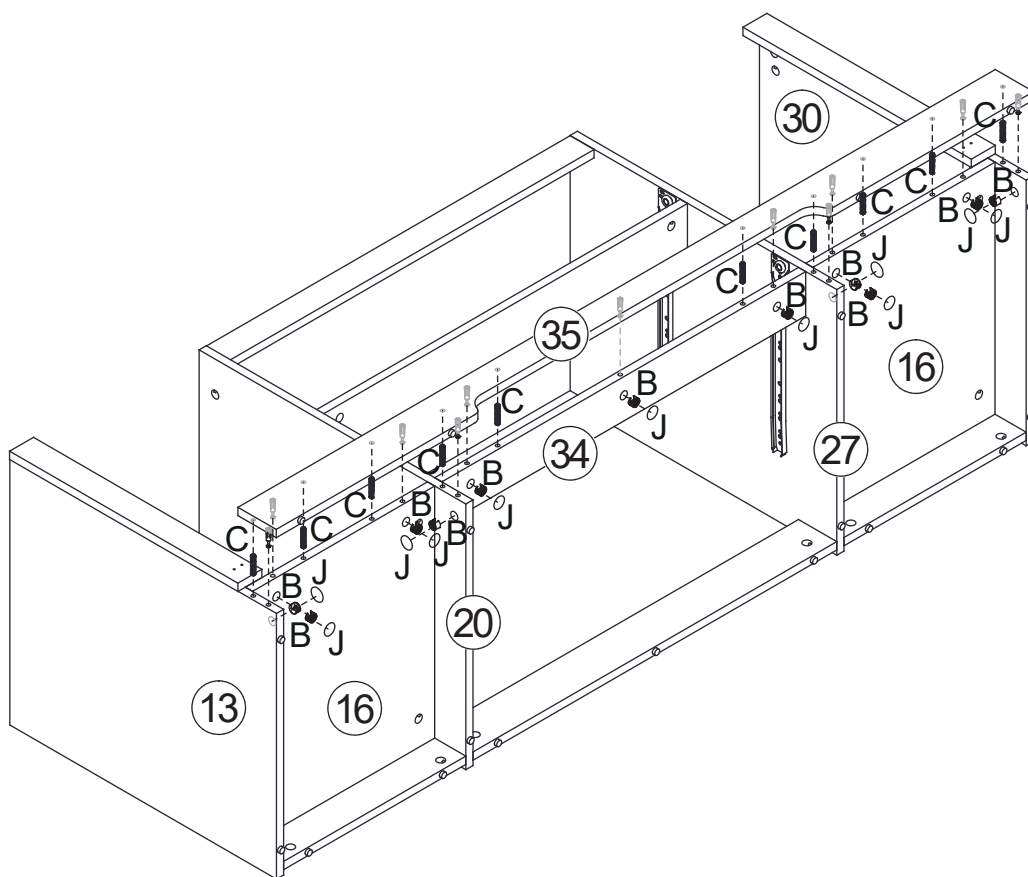

15

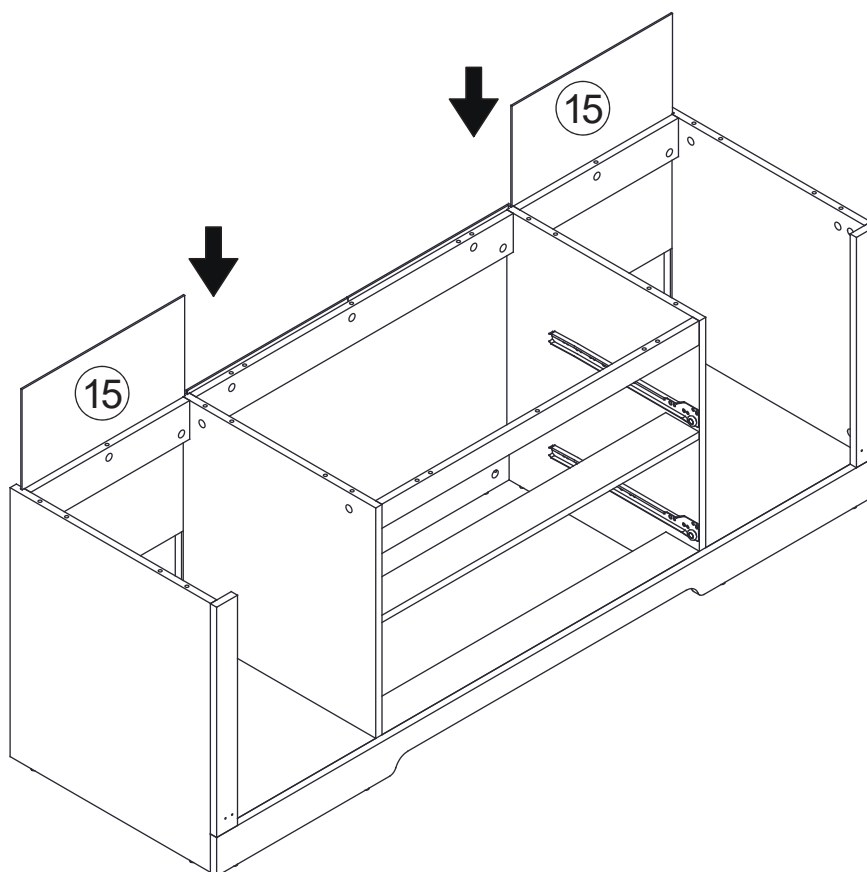


16

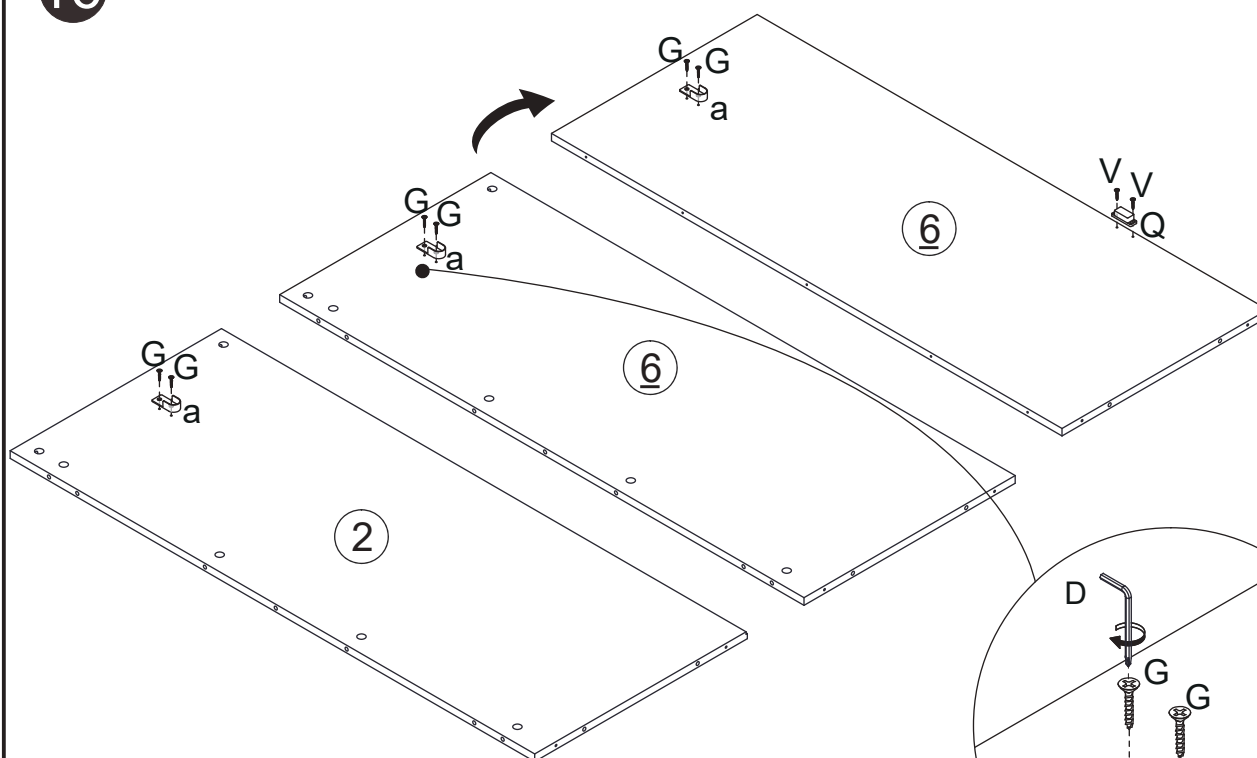


G  x6

a  x3


D  x1

Q  x1

V  x2

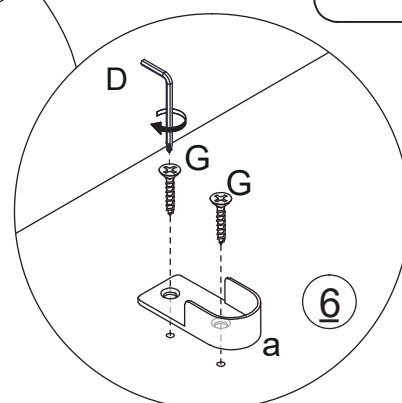


17

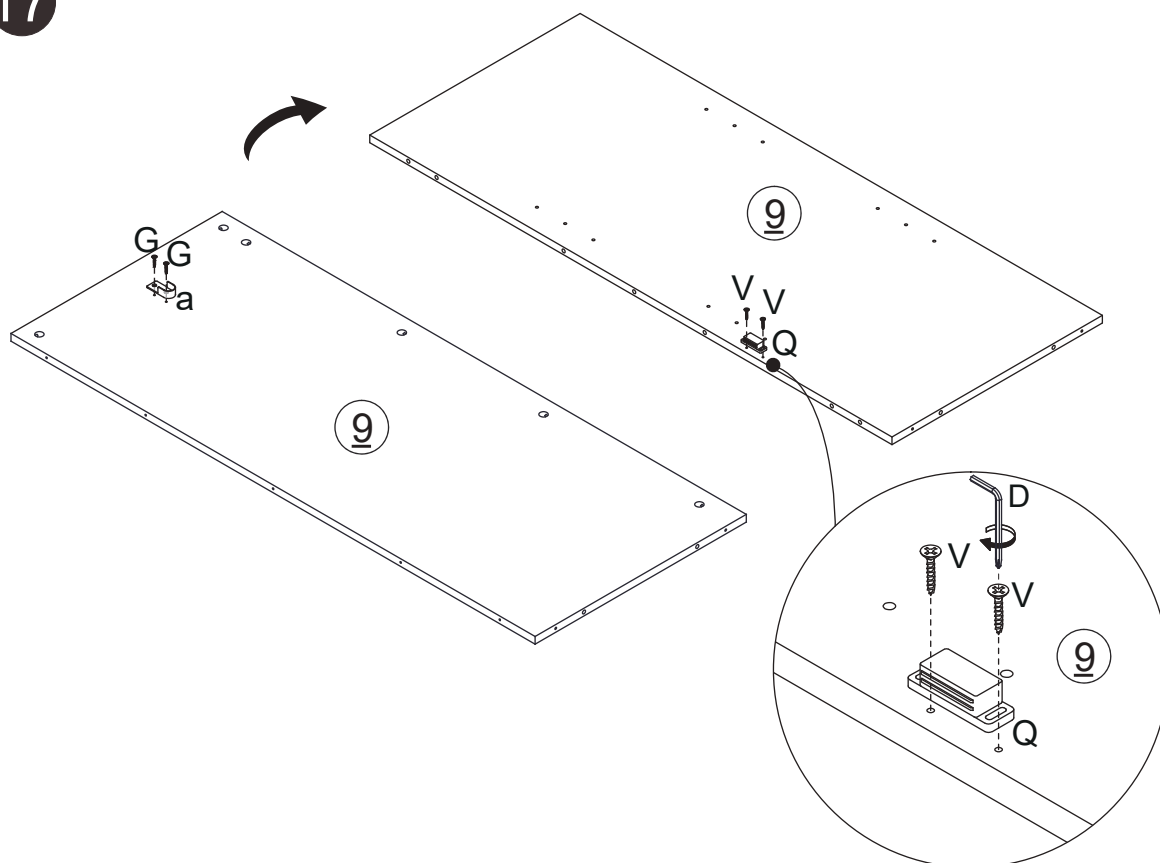


- D x1
- Q x1
- V x2
- G x2
- a x1



18

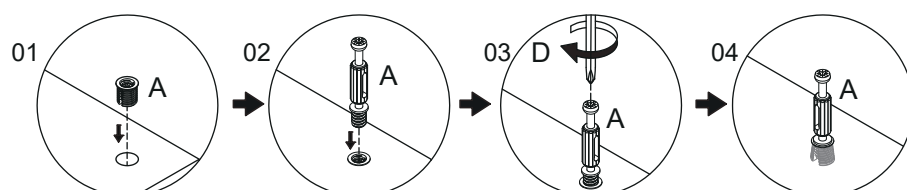

- A x16
- D x1

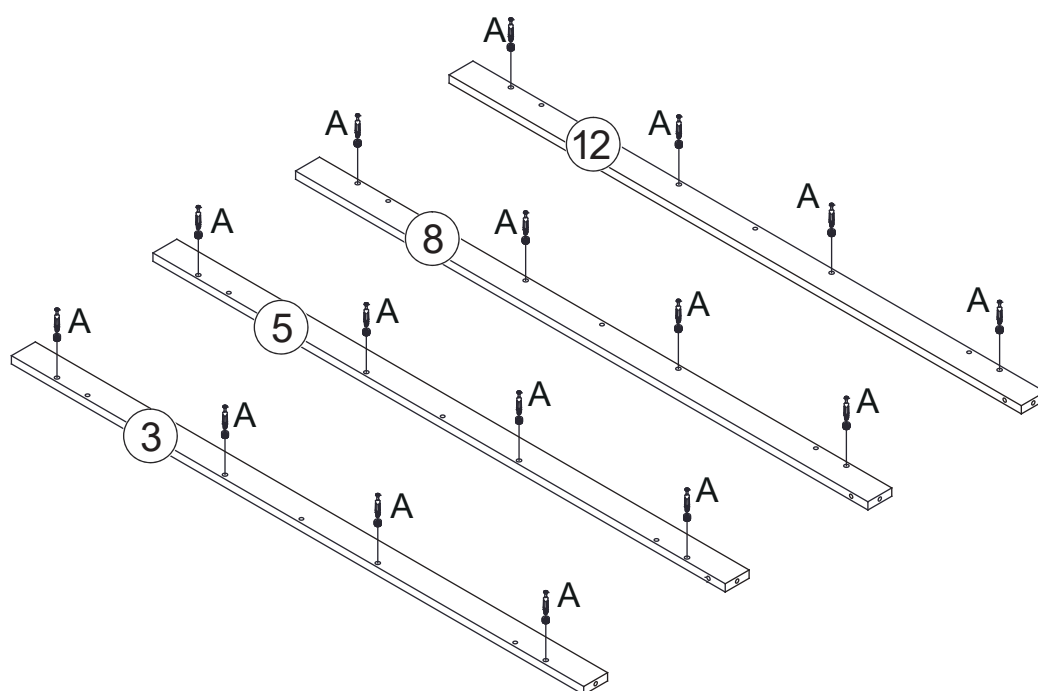

19


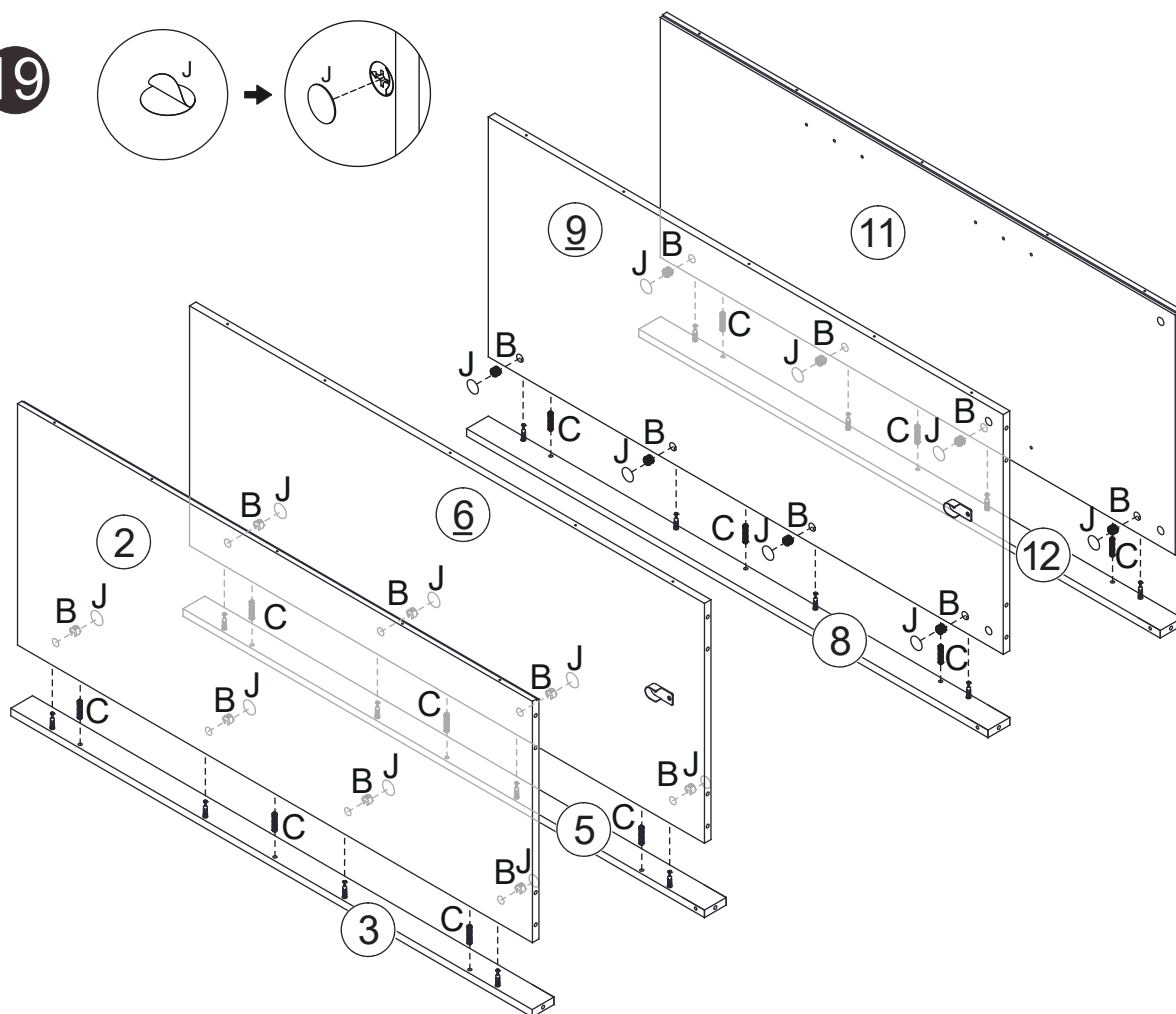
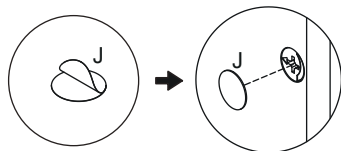


C x12


B x16

J x16

D x1

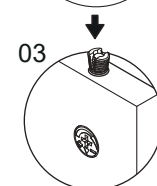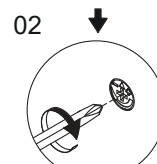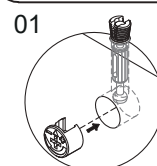


20

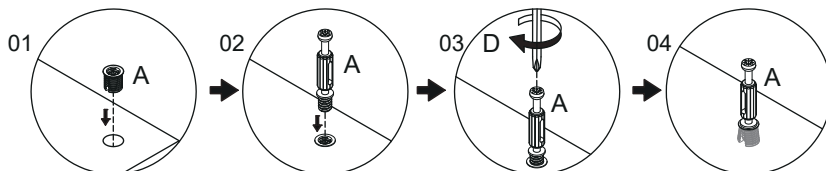


A x16

D x1

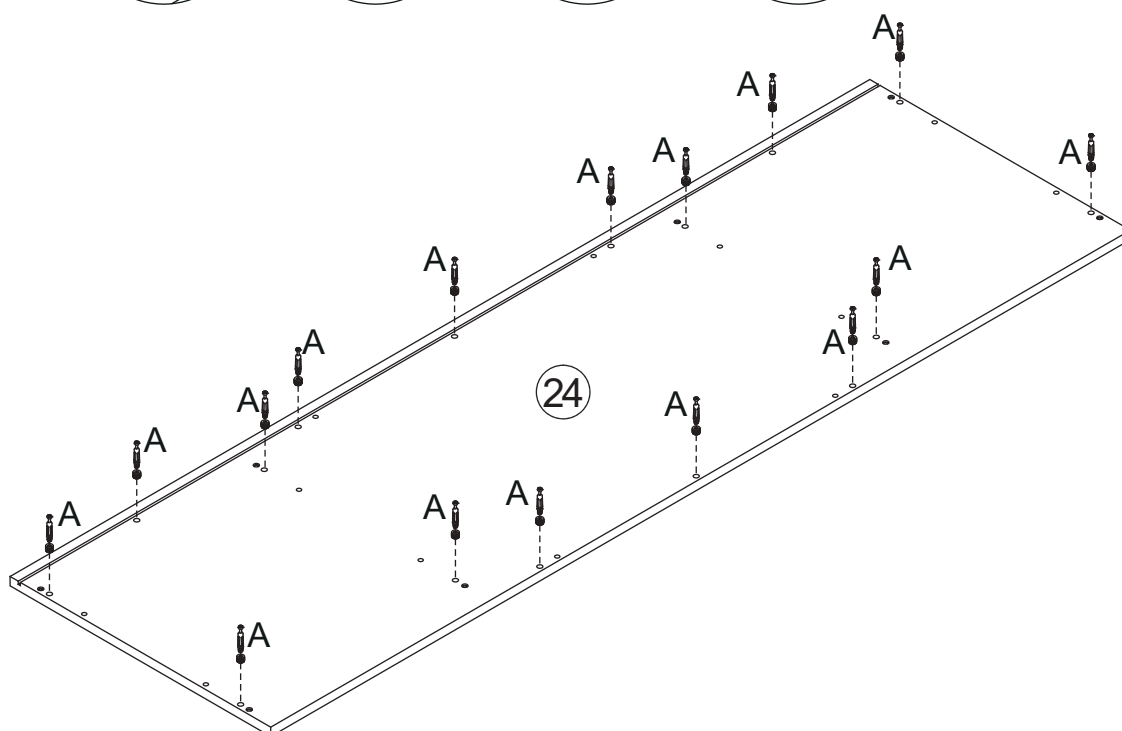

21

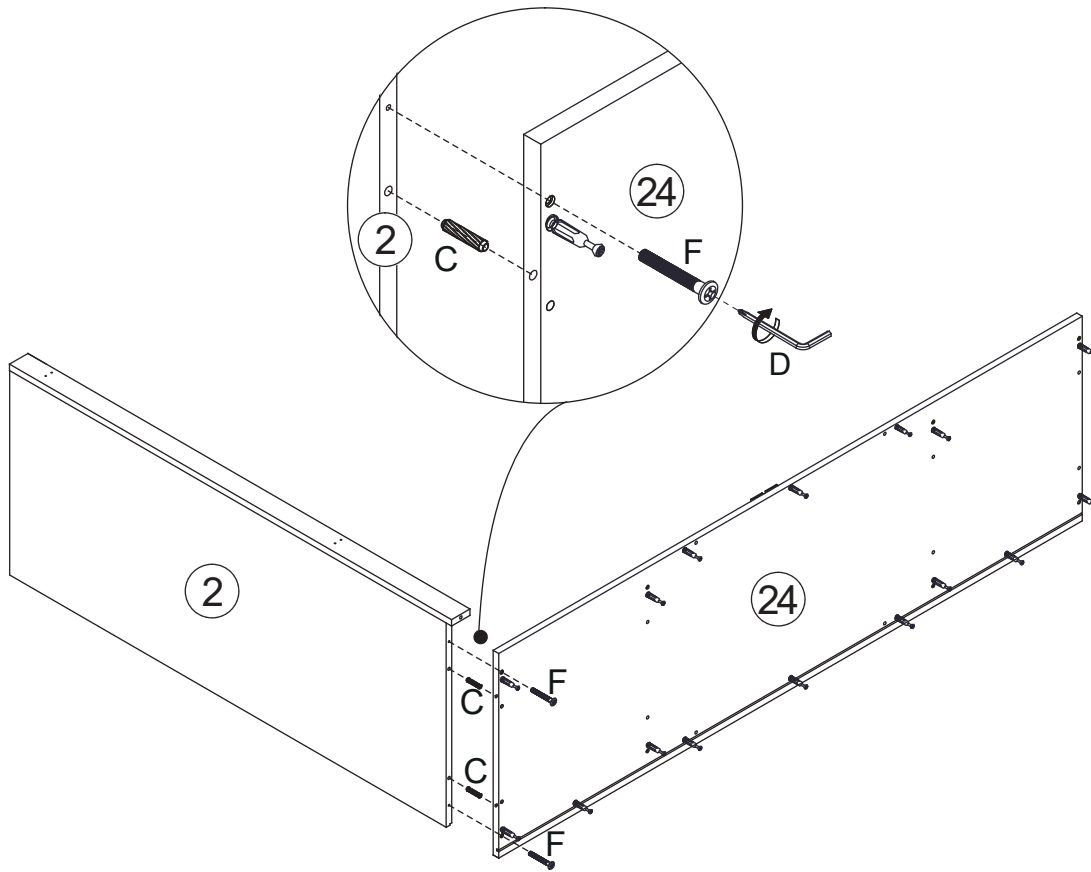

C x2

F x2


D x1







C x4

F x2



D x1

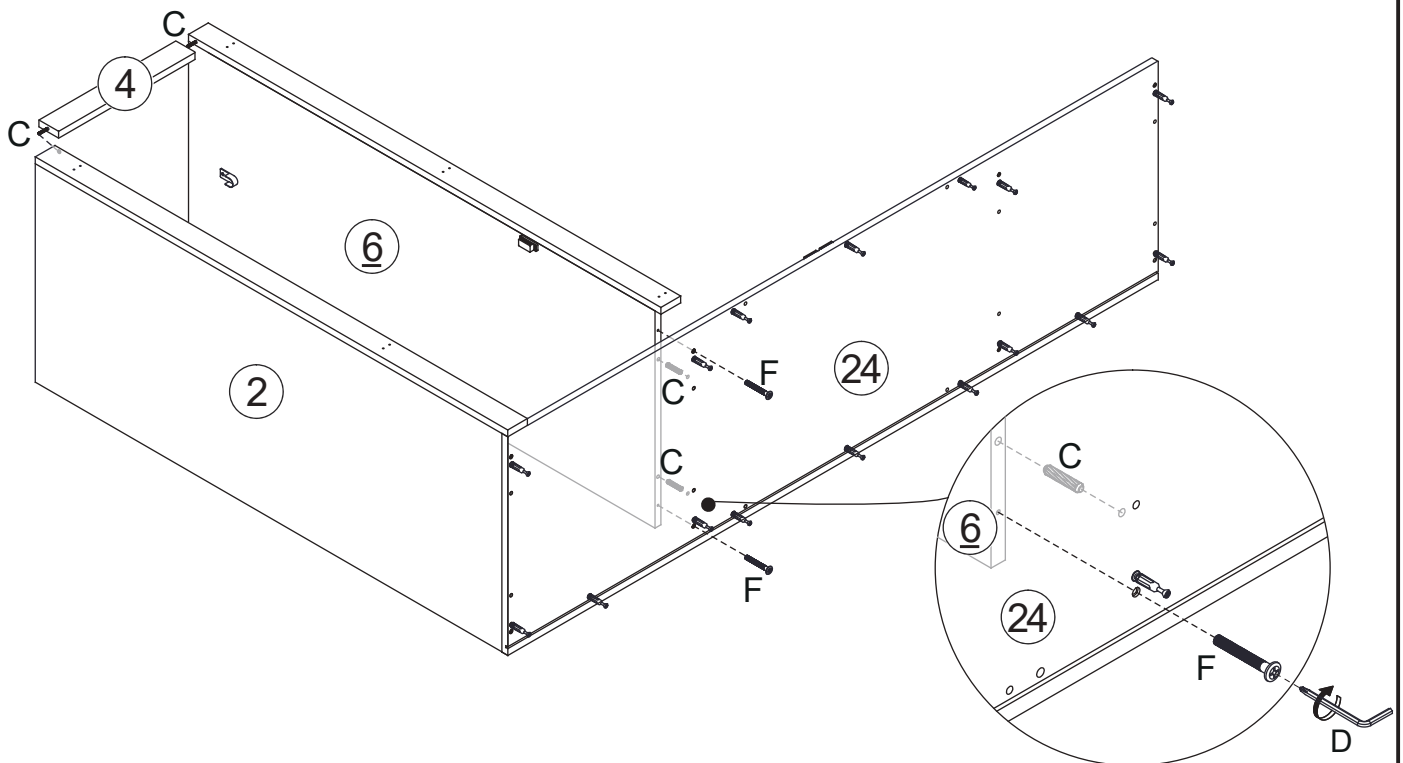





22

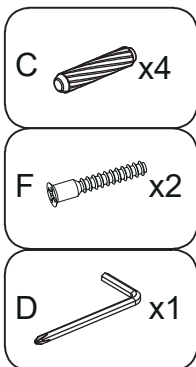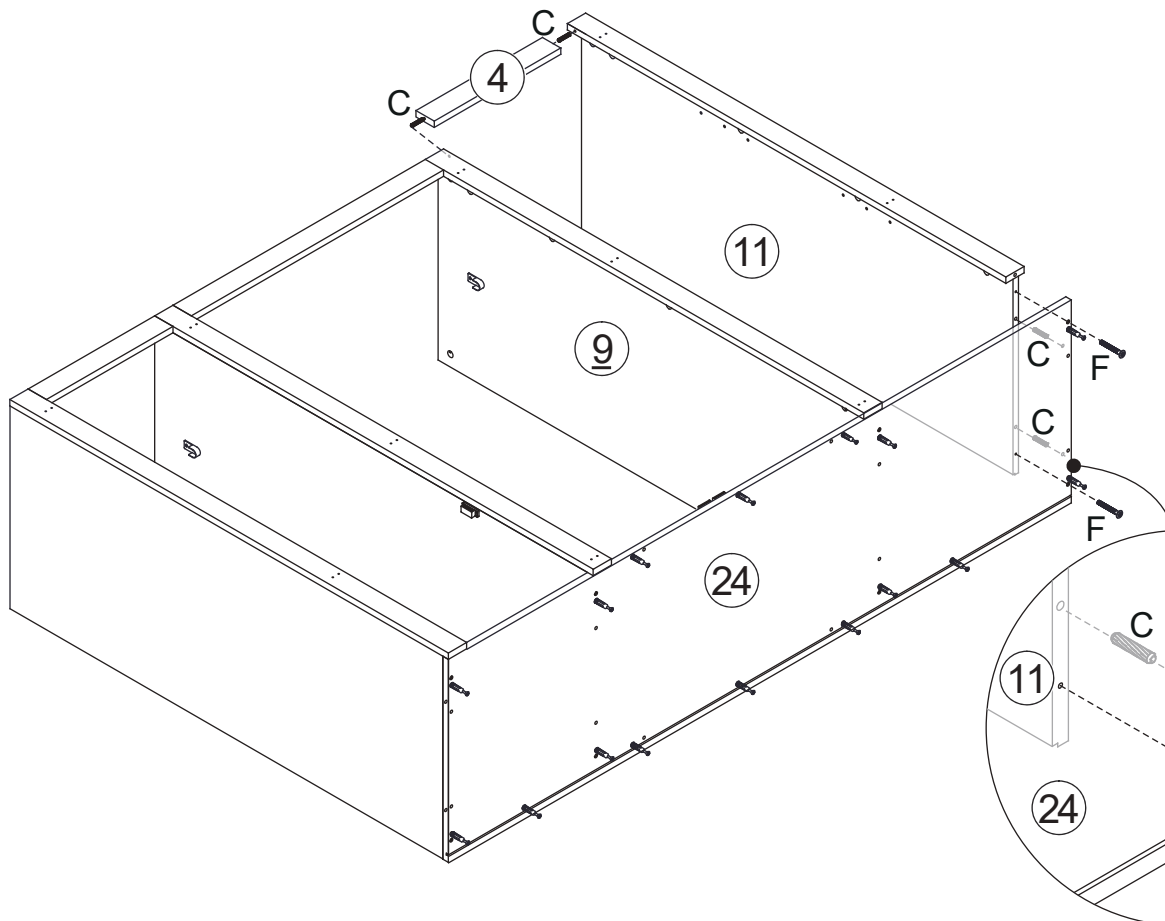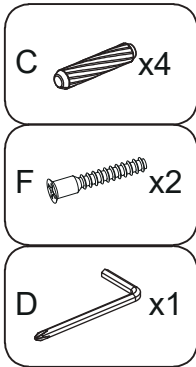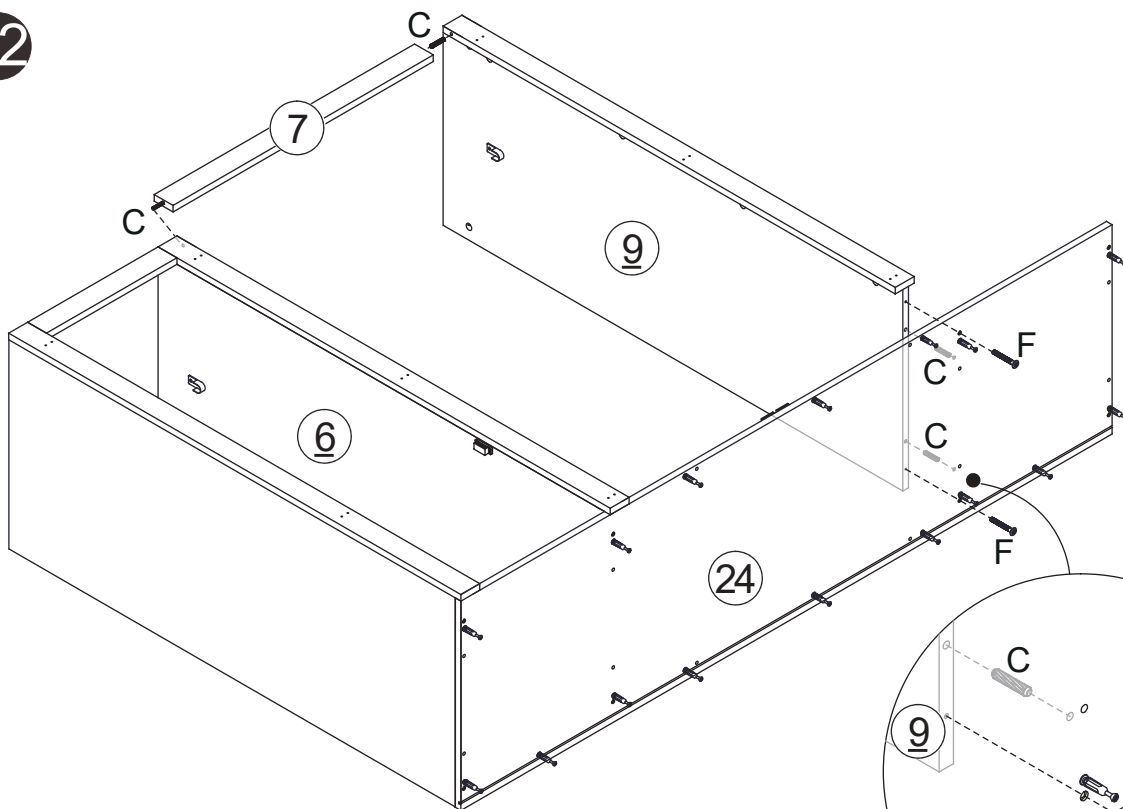

23




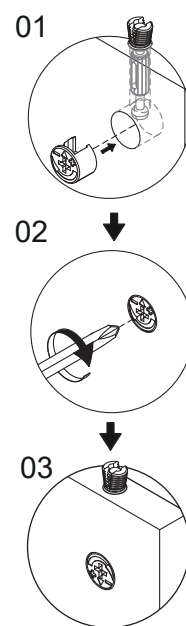
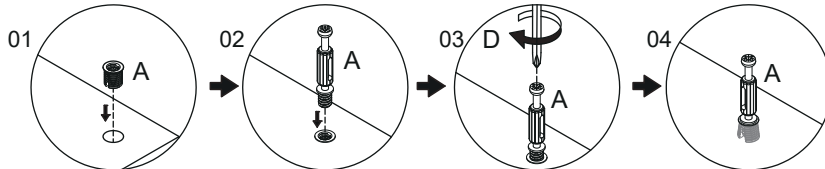


- A  x15
- I  x2
- D  x1
- C  x16
- B  x15
- J  x15

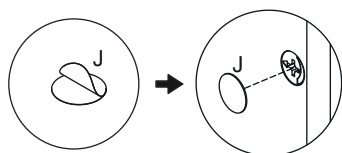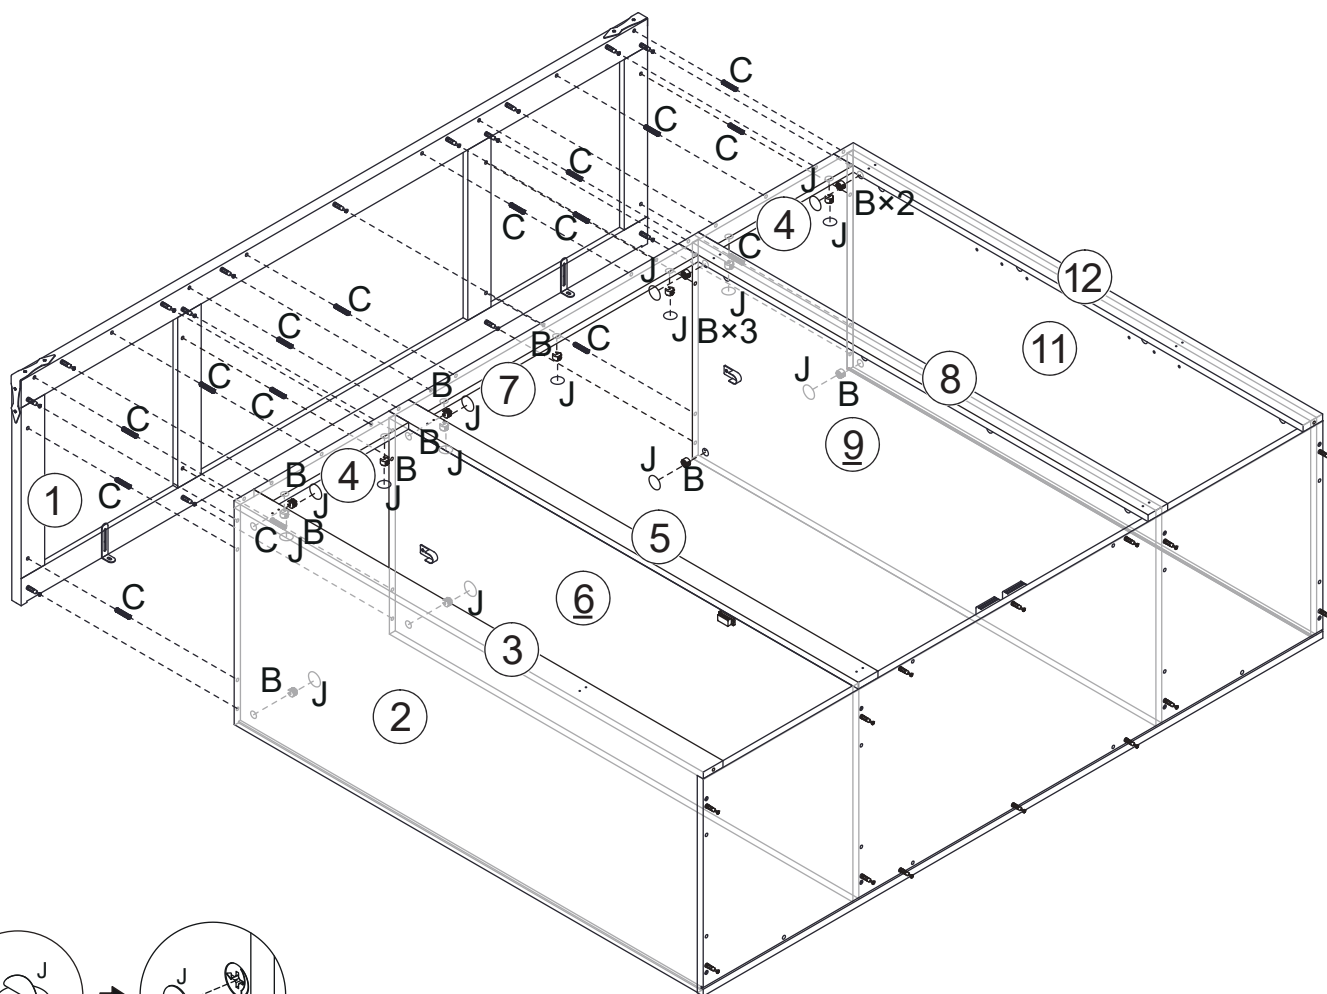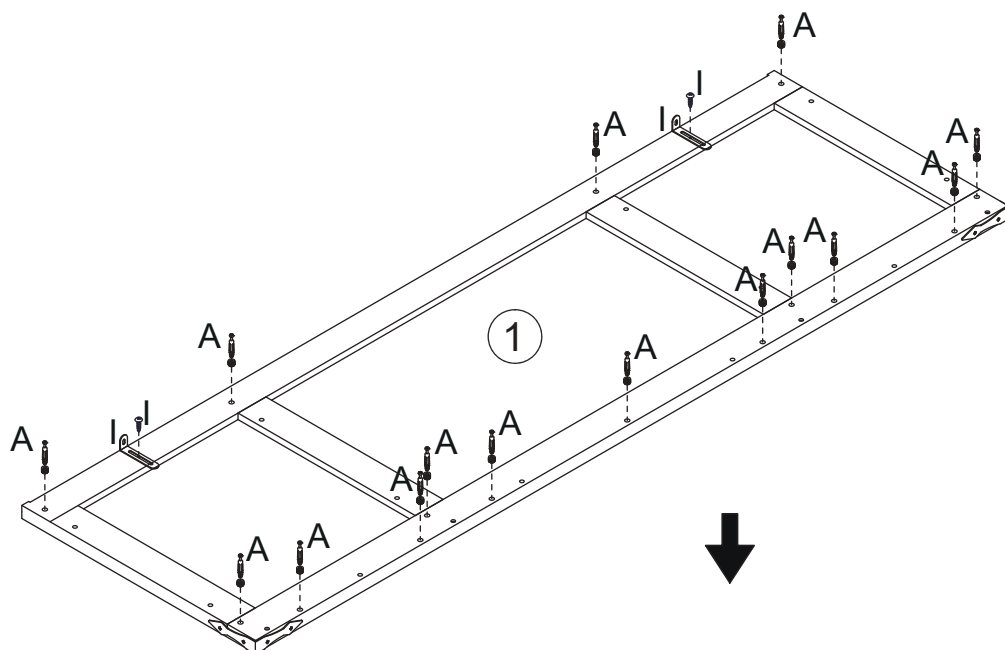

24

- D  x1
- C  x14
- B  x16
- J  x16

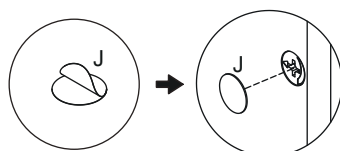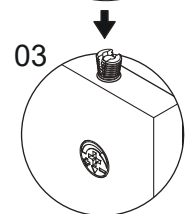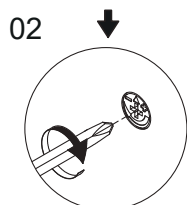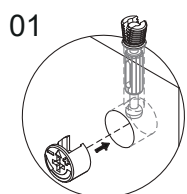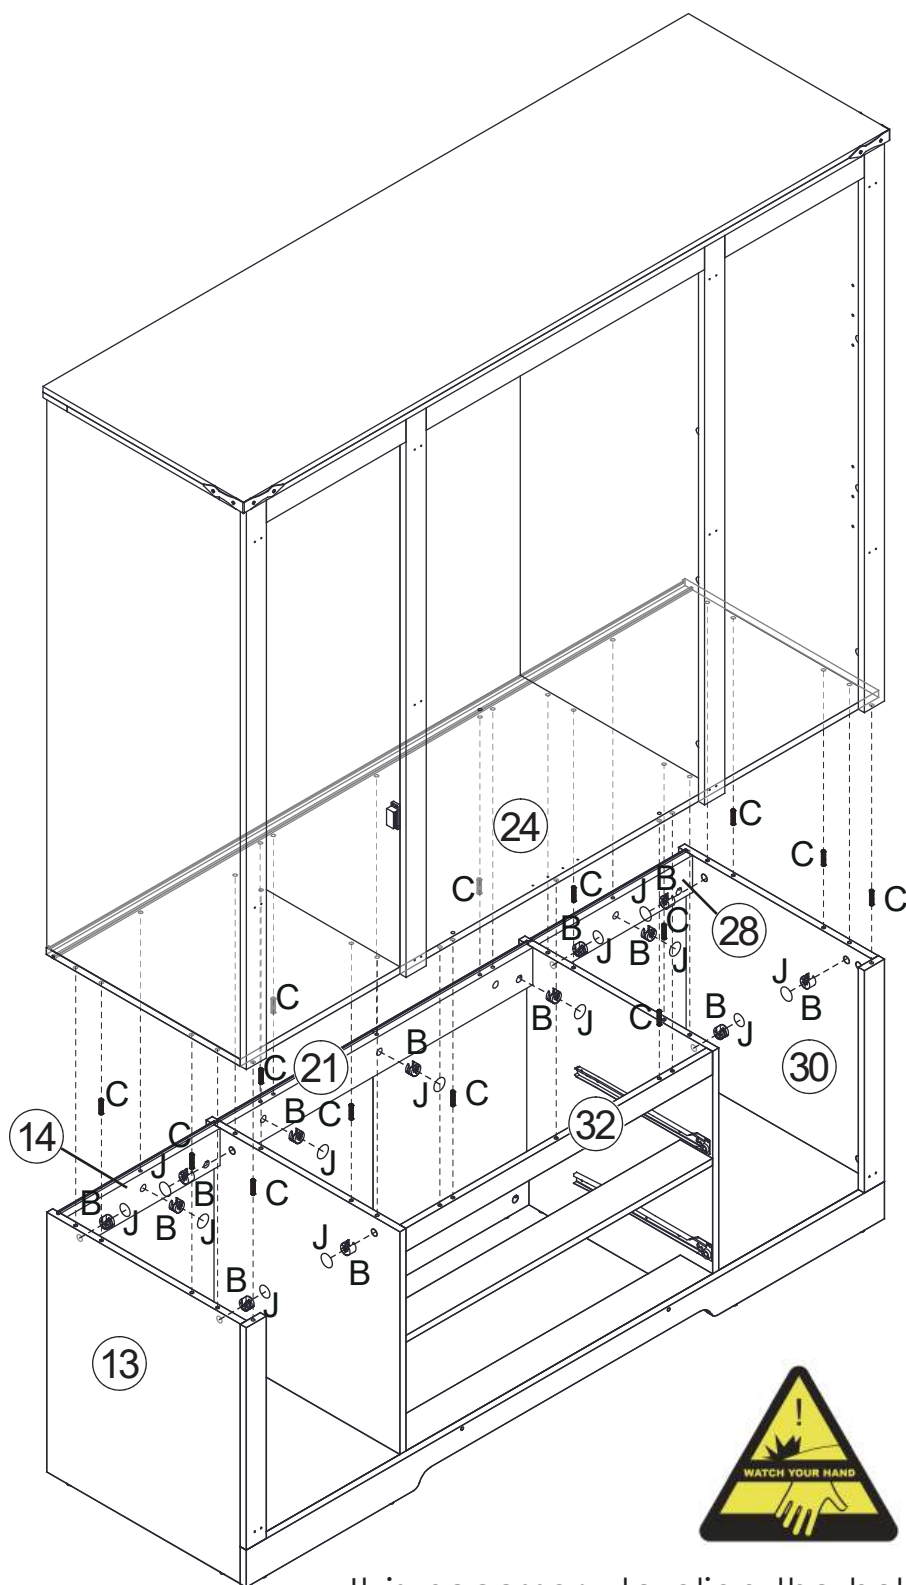


WARNING !

Do not play on this furniture with mechanical devices. Be careful to avoid injury when you are about to close the table top downwards.



Always keep this furniture closed when not in use

It is necessary to align the holes of the upper and lower components before assembly, and lifting requires the cooperation of multiple people.

25

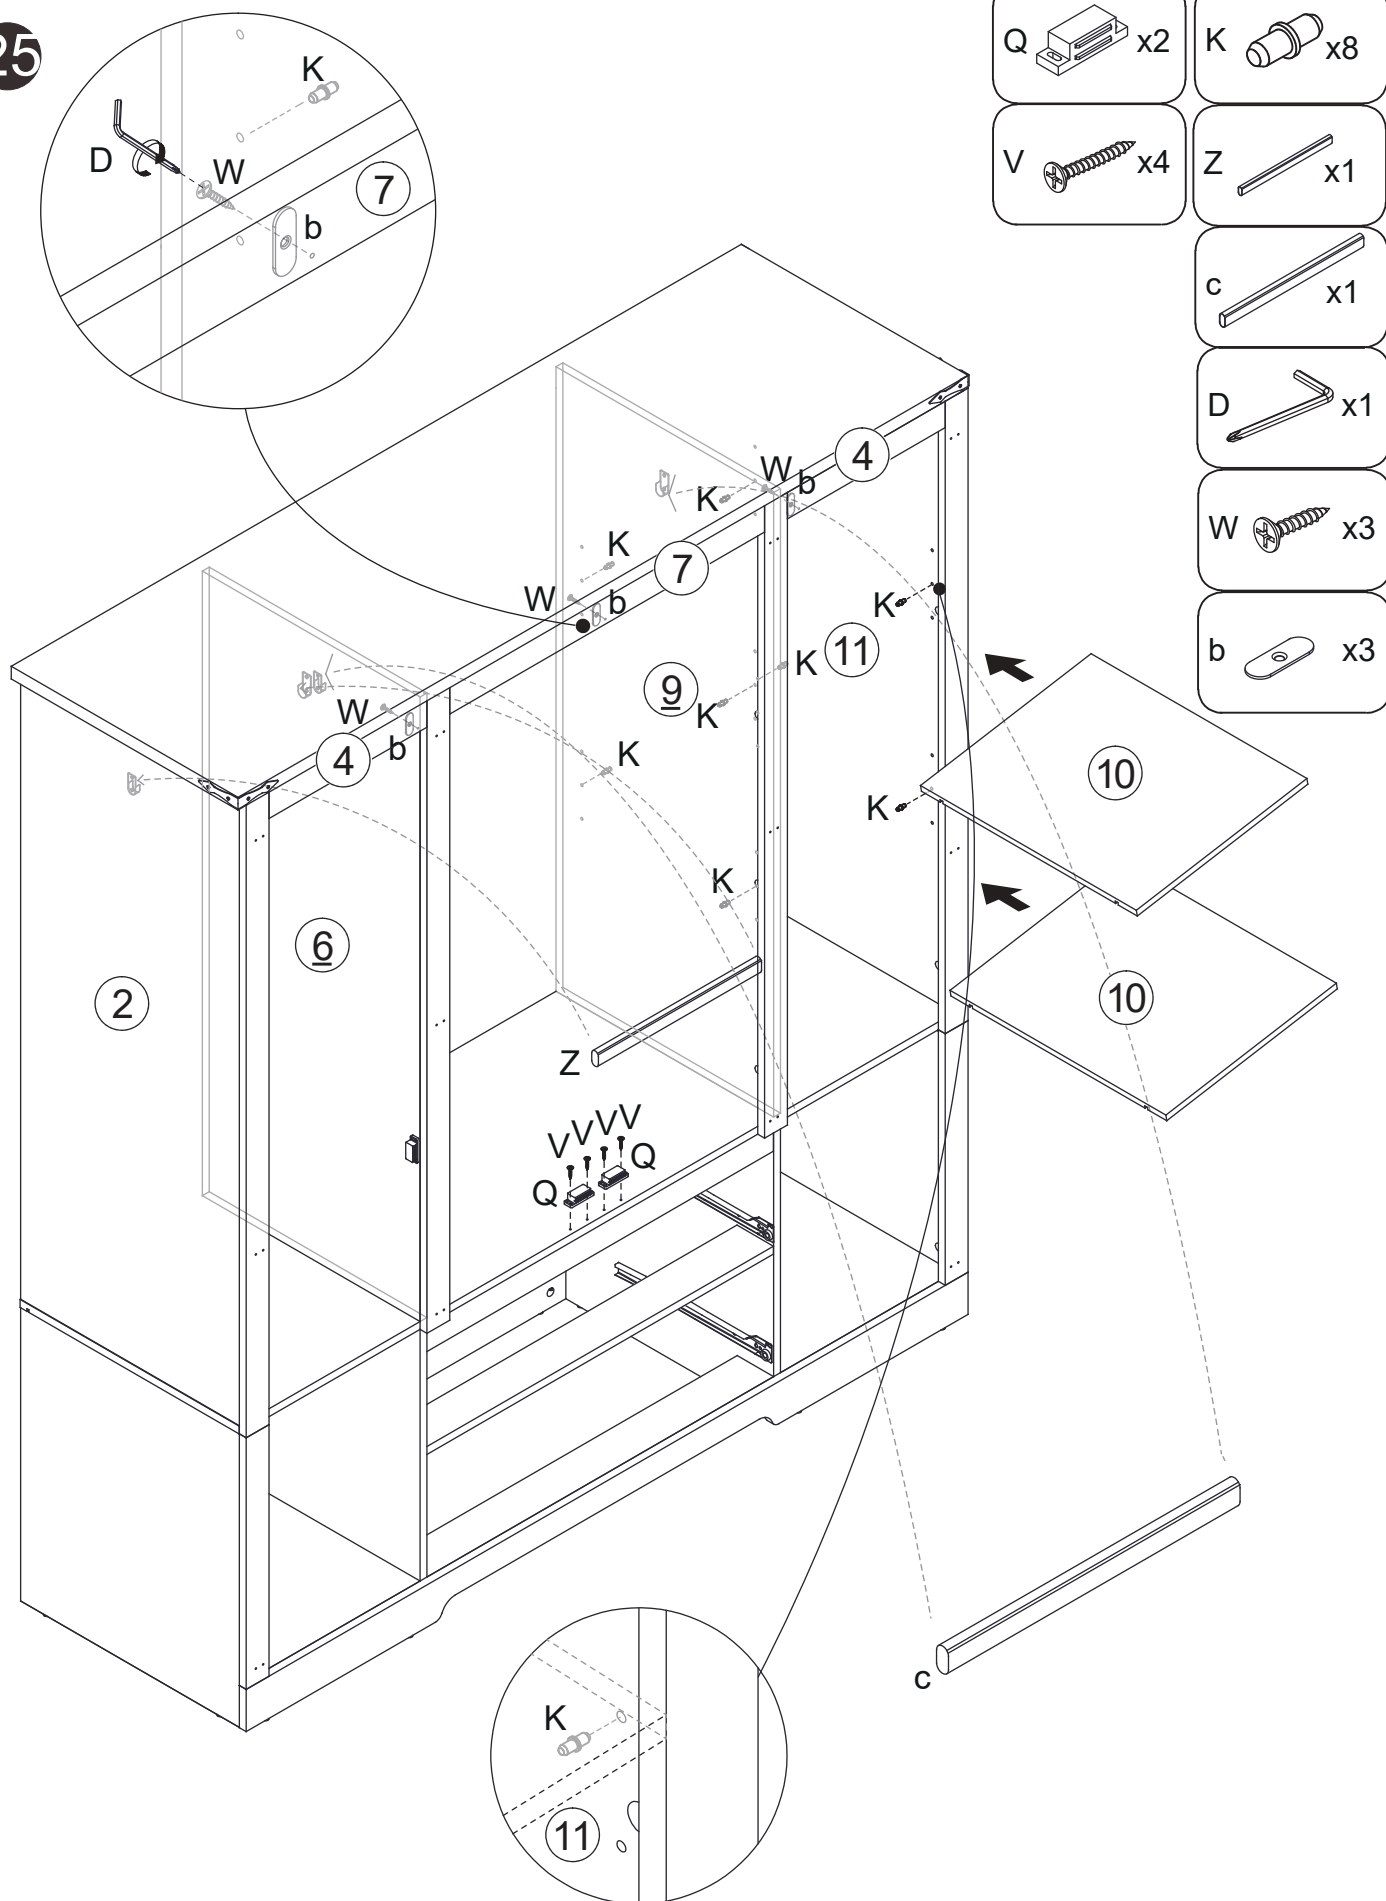

26

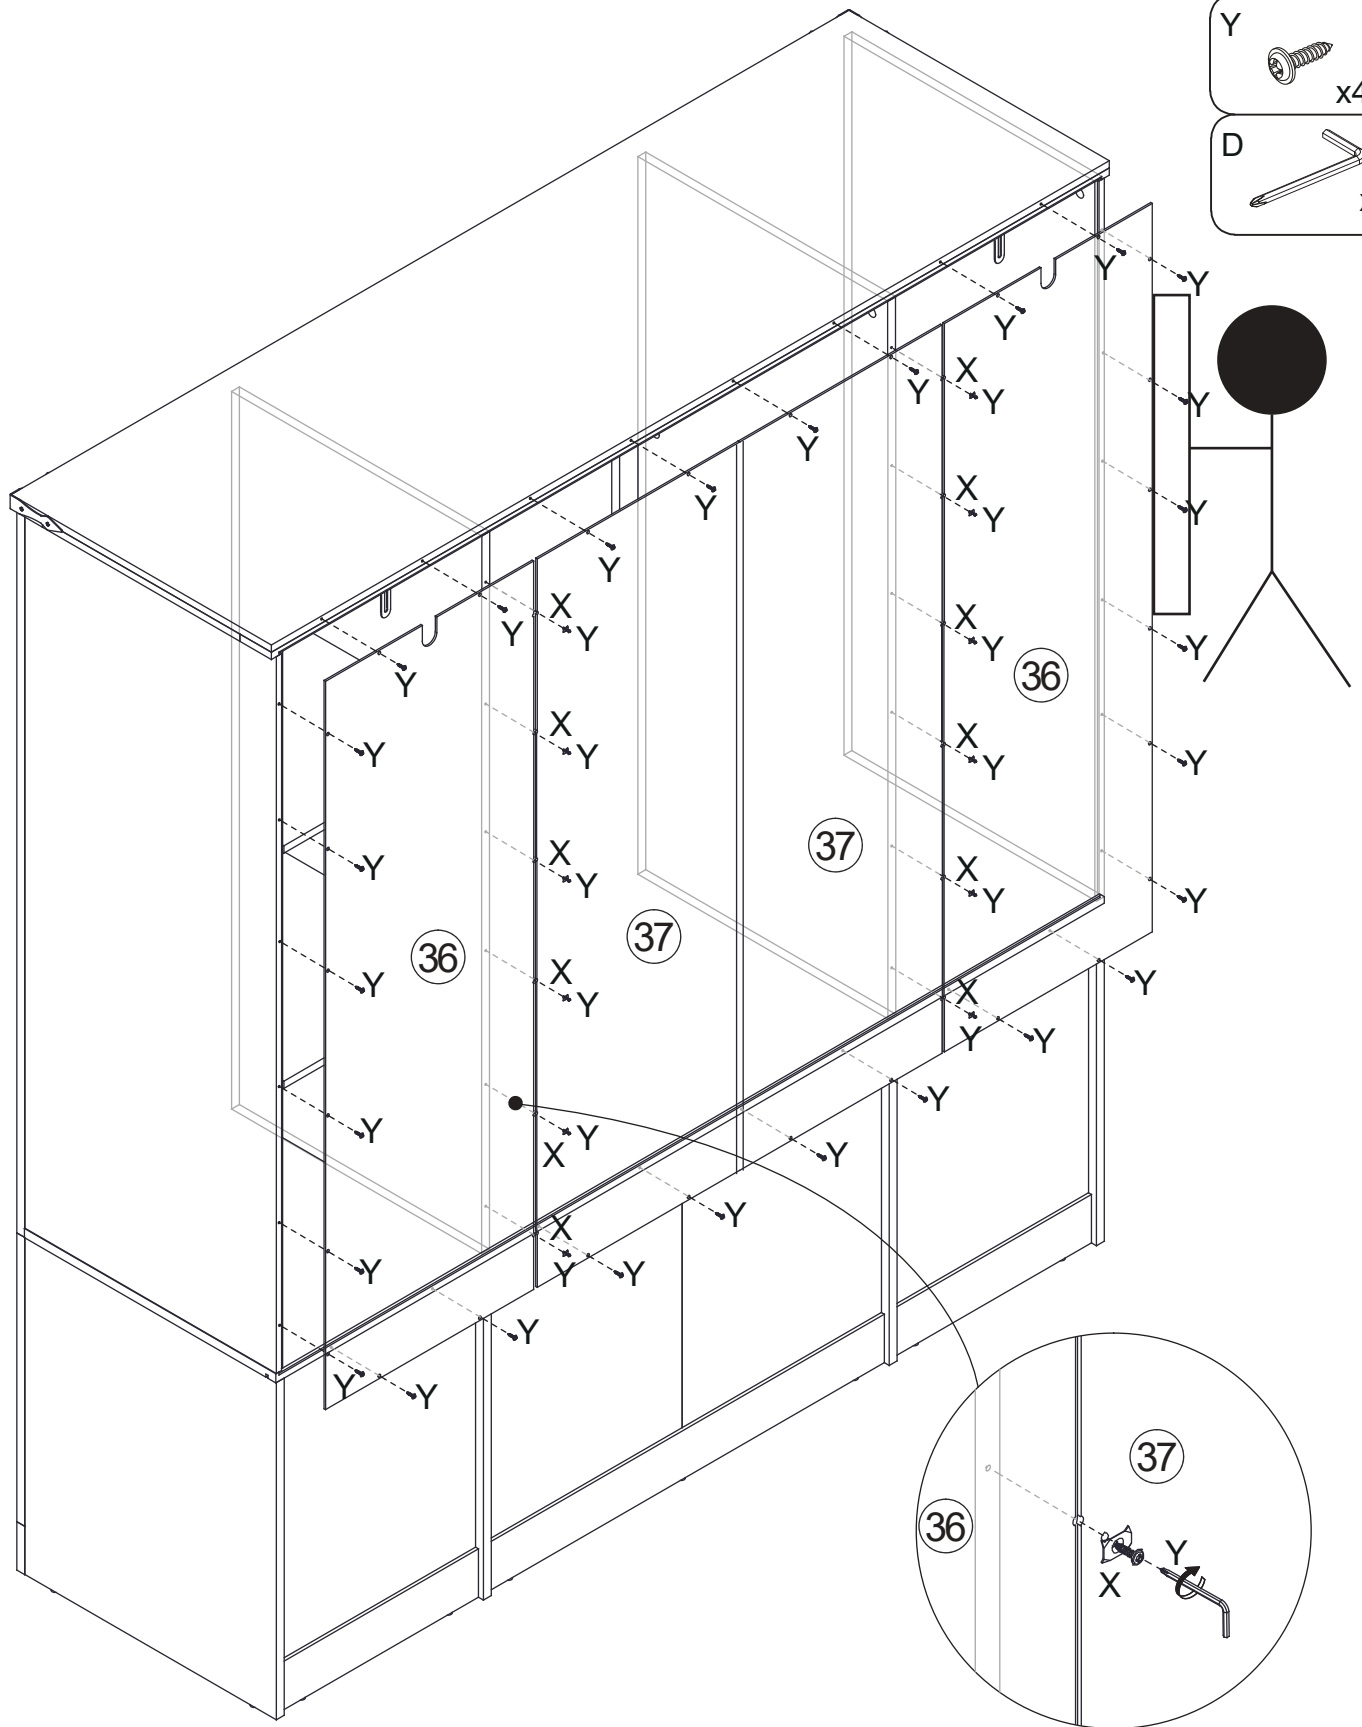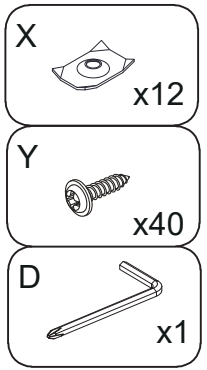


27




S  x26

T  x26






D  x1

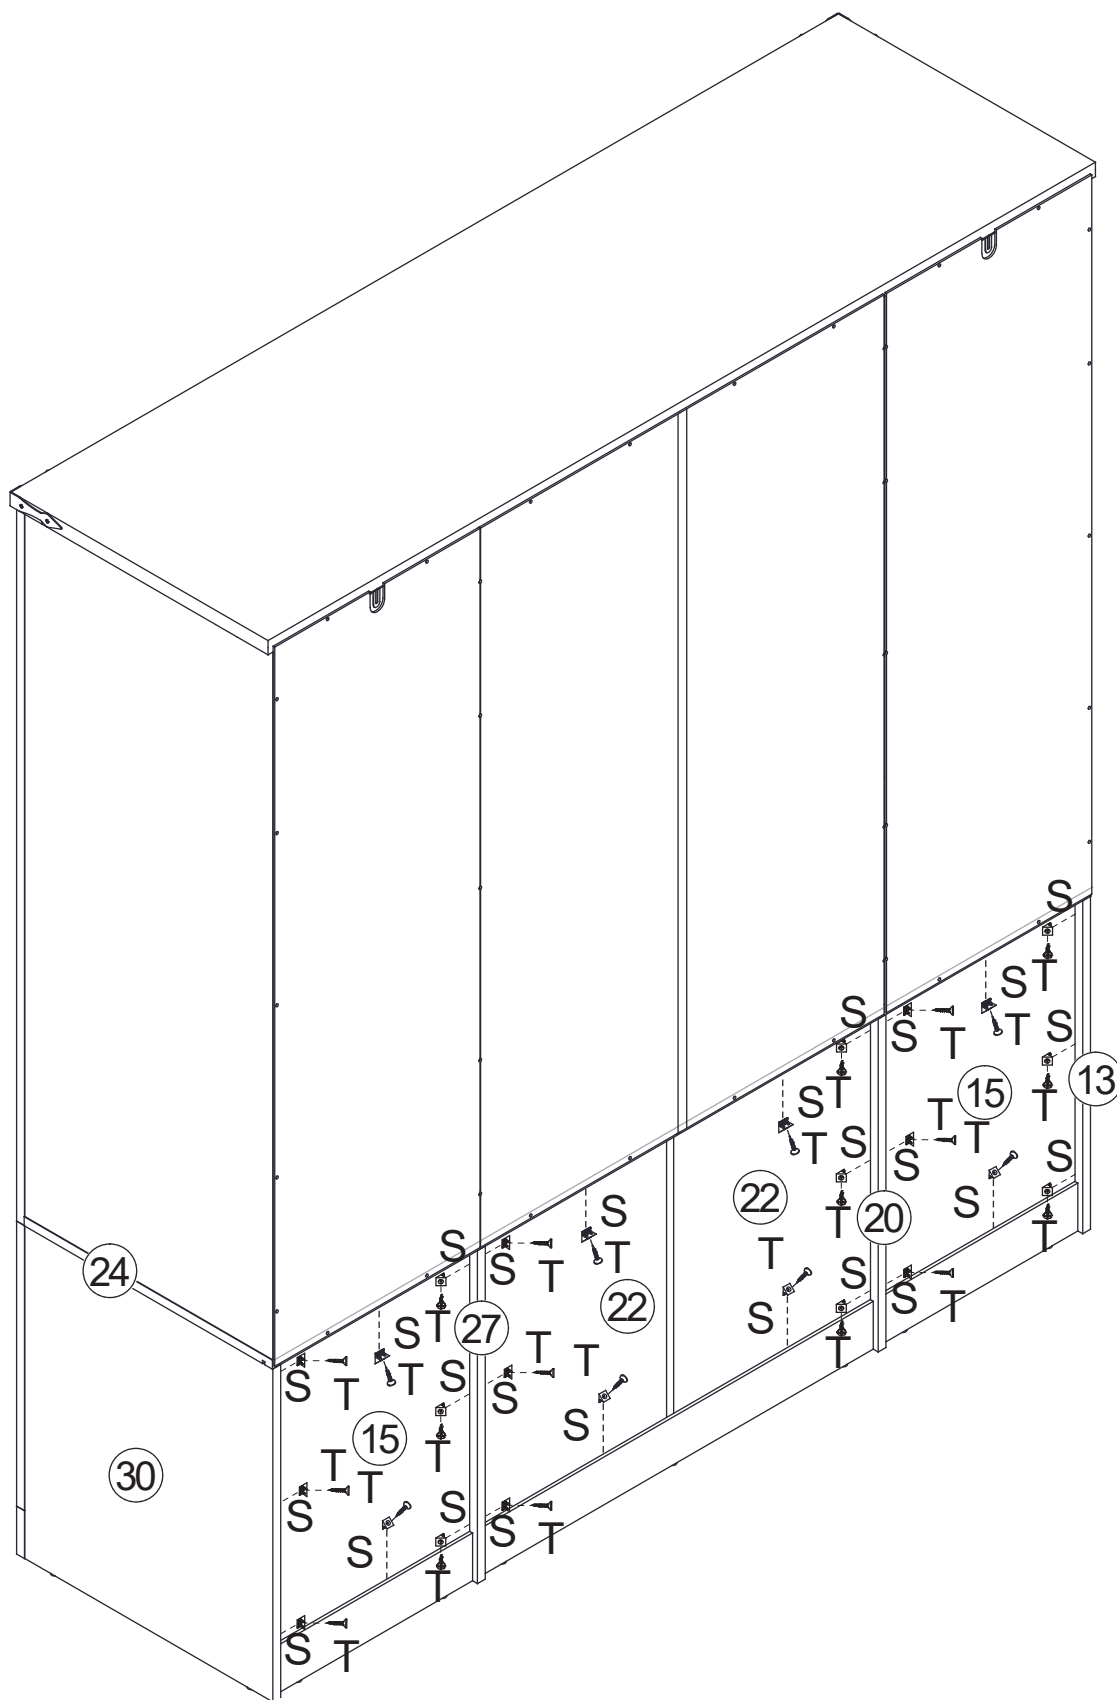





28

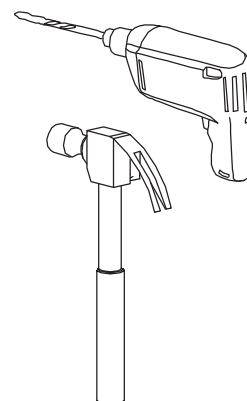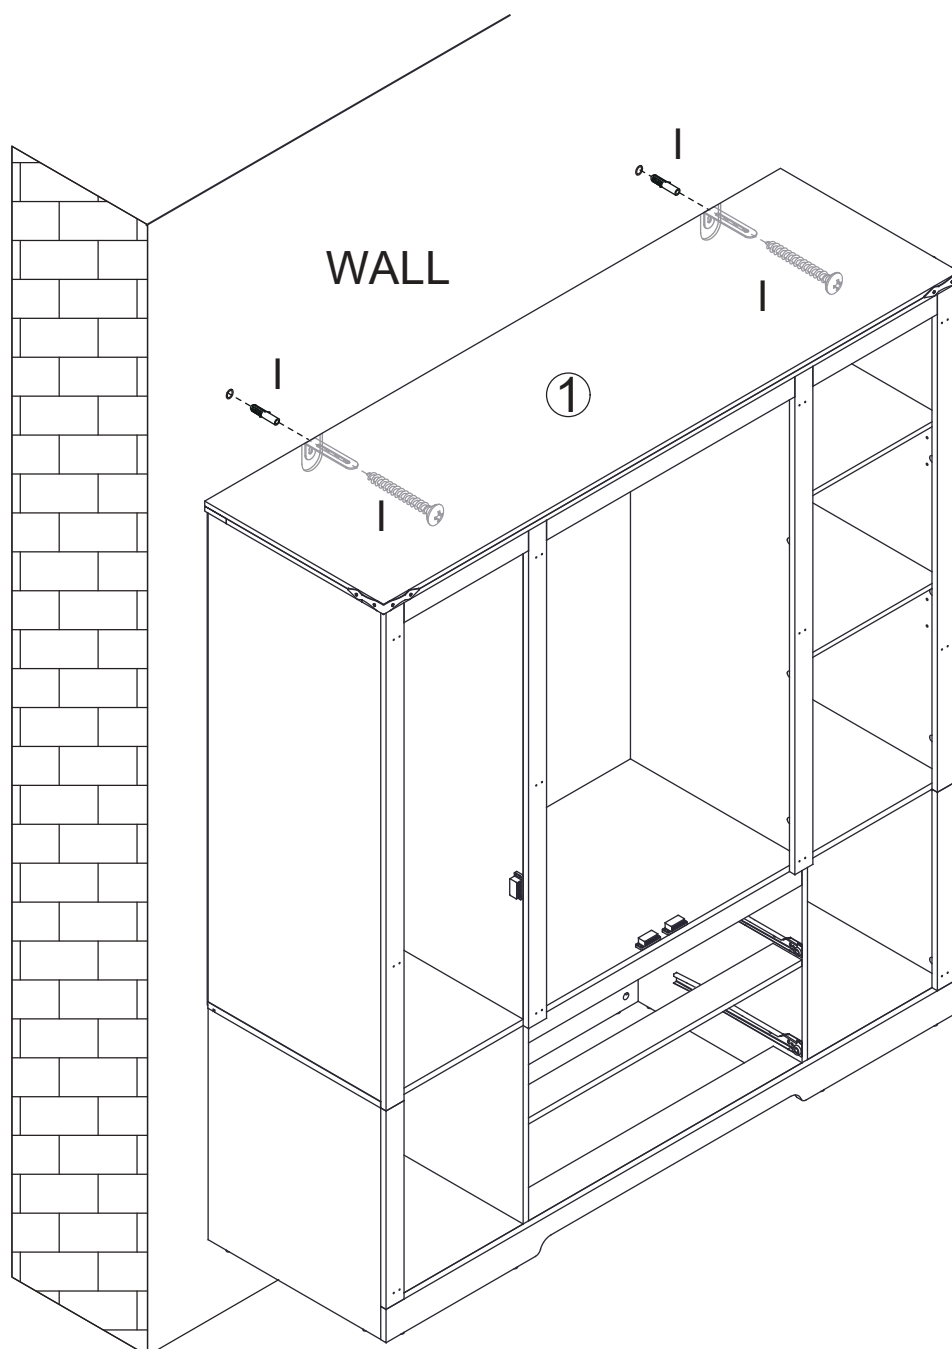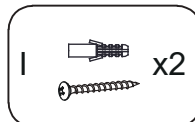




29

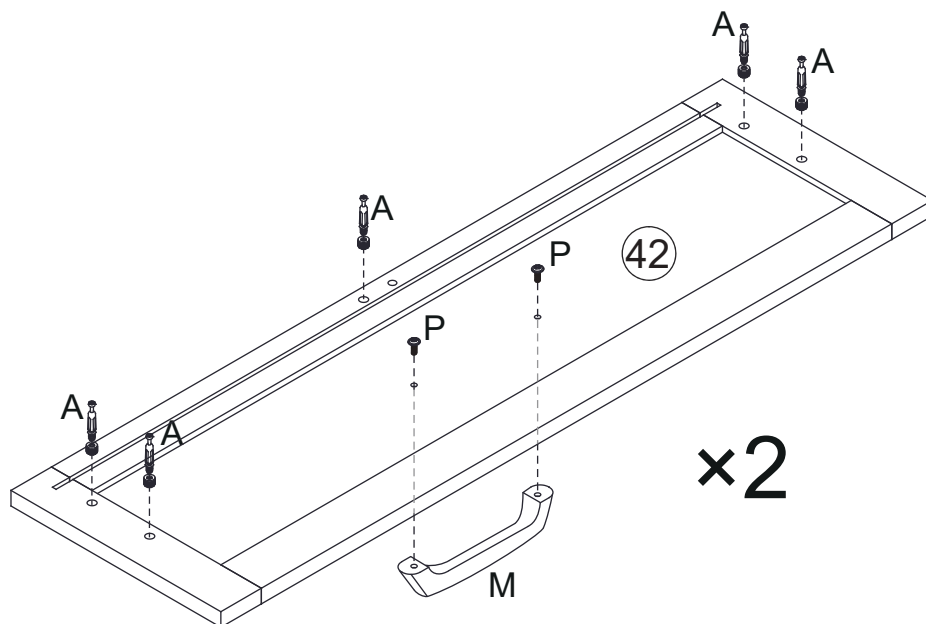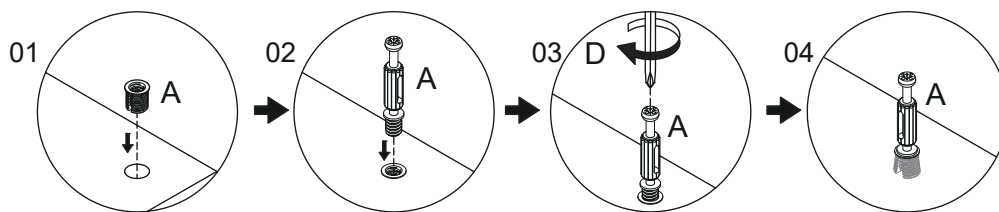




30

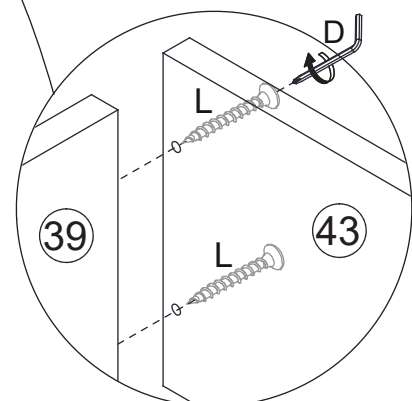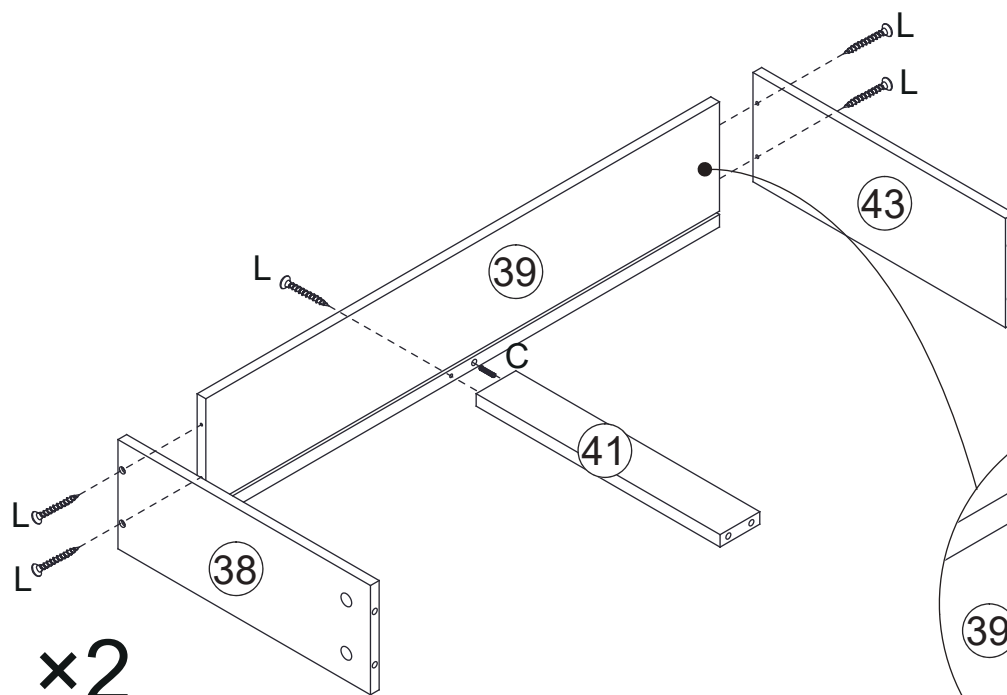

33

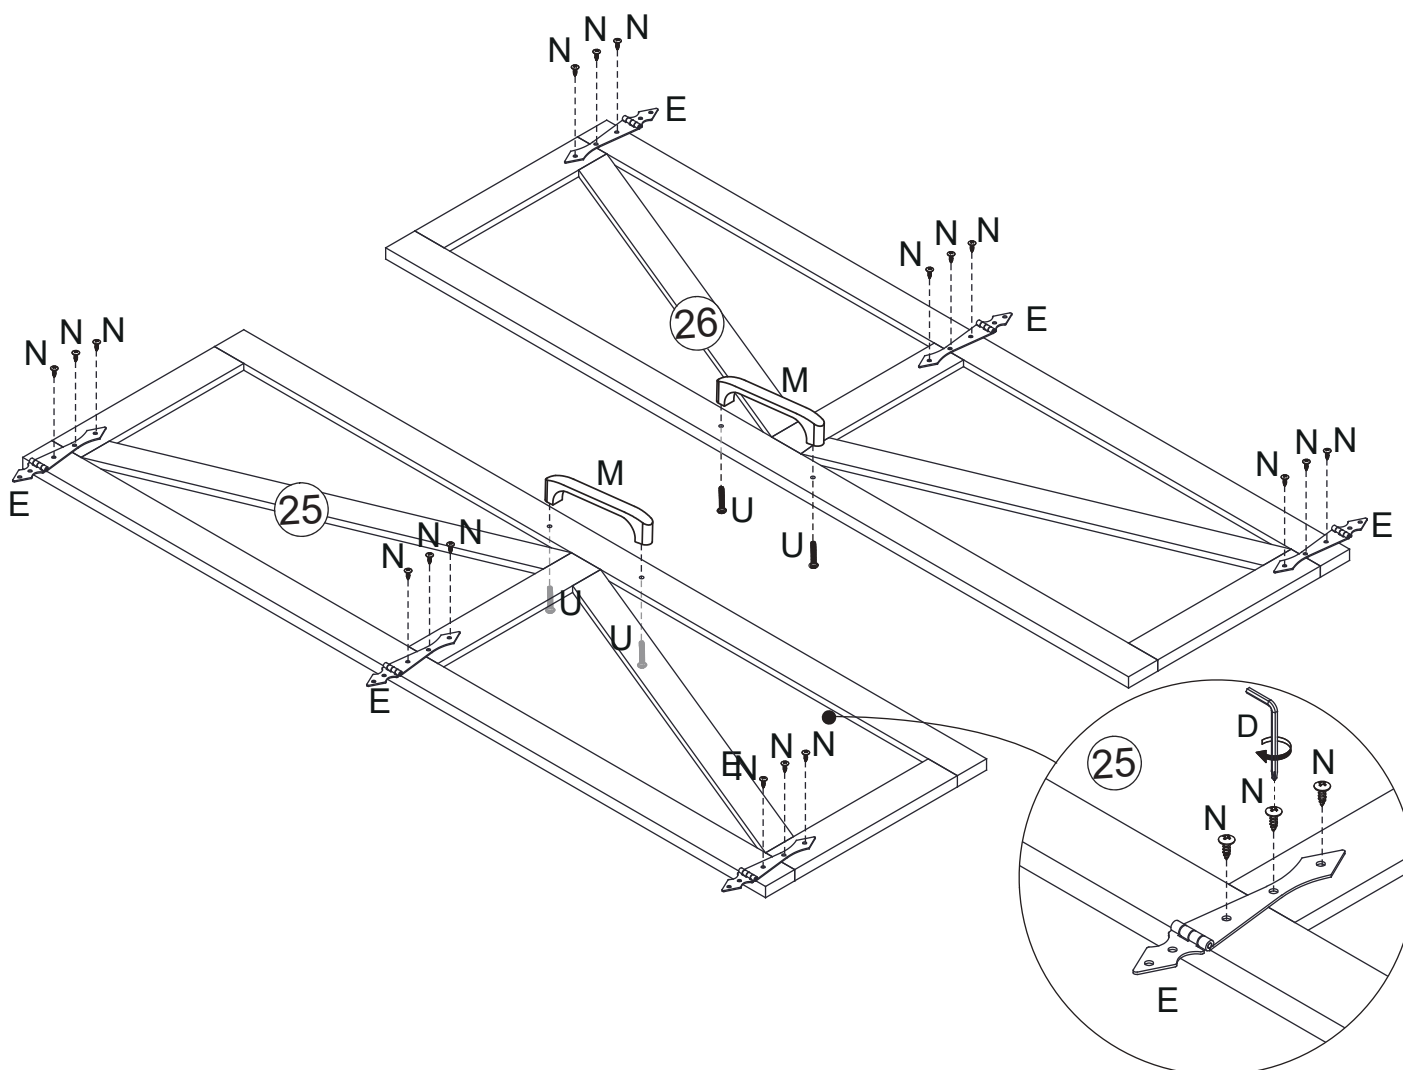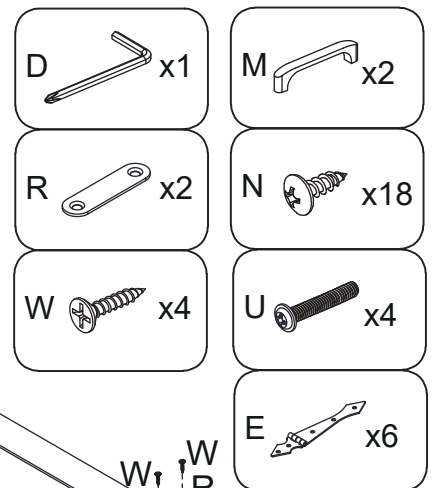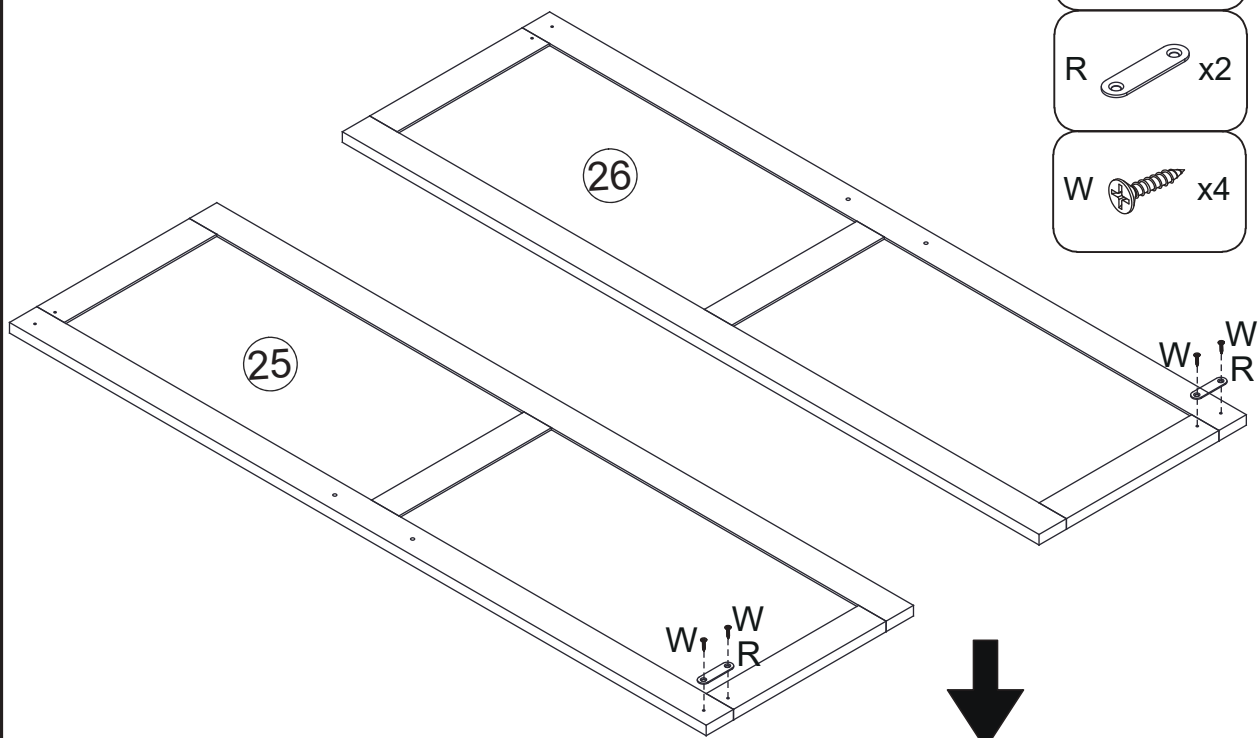



34

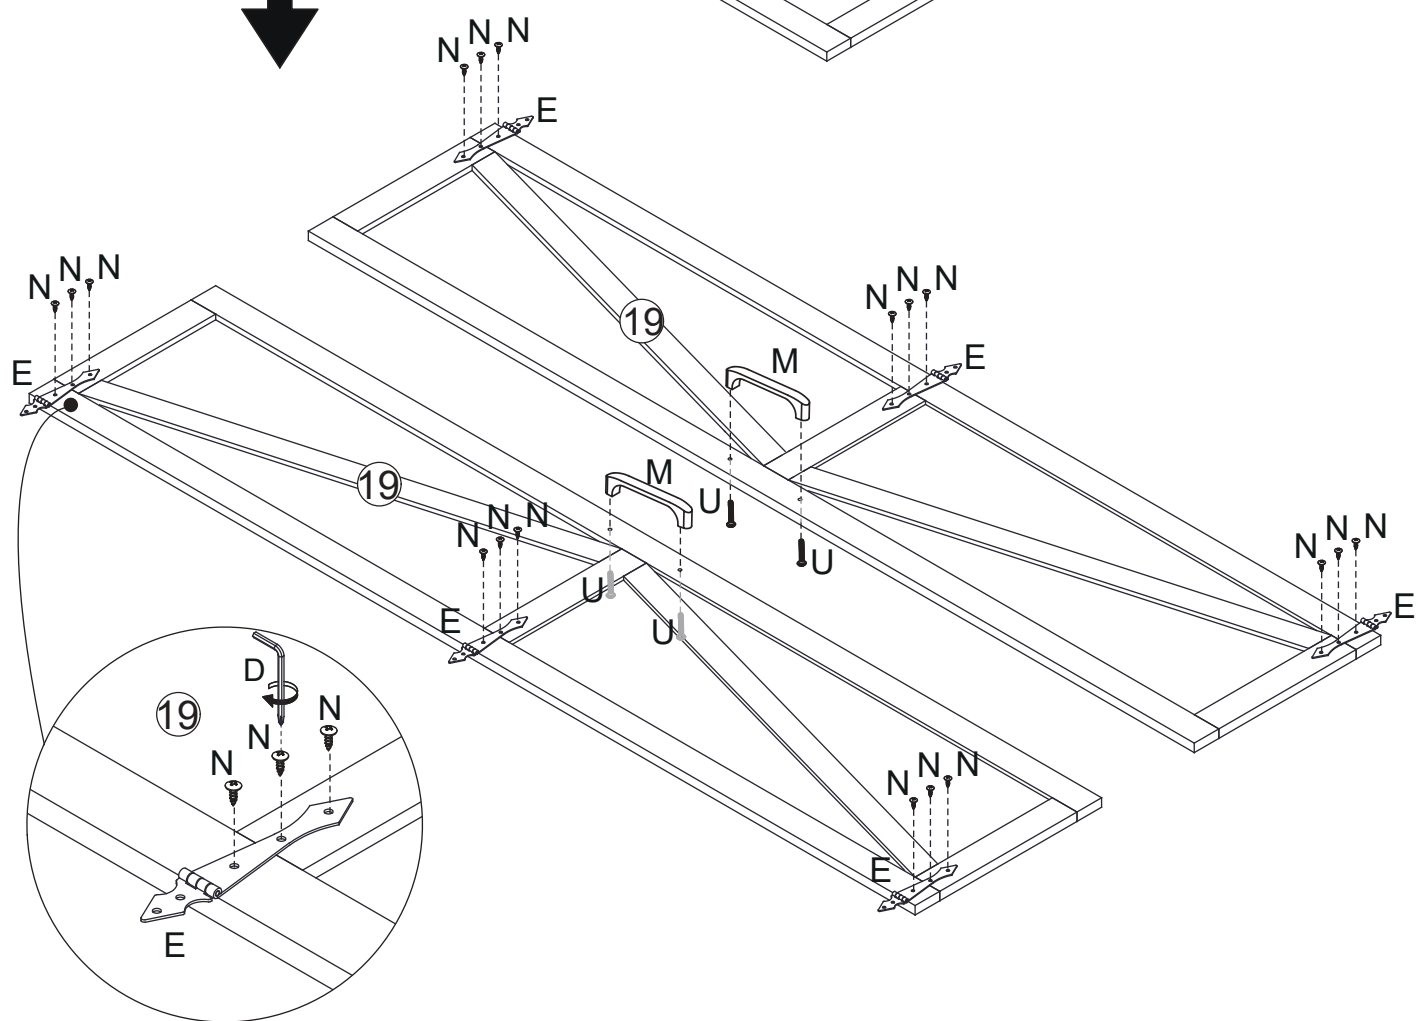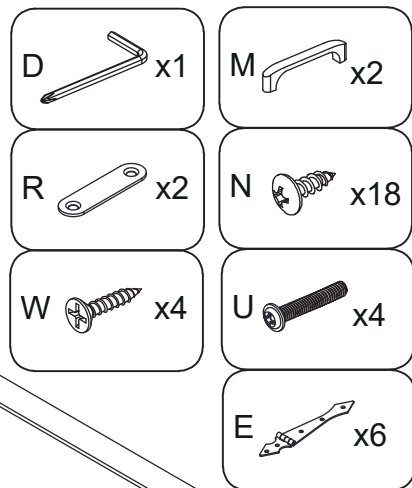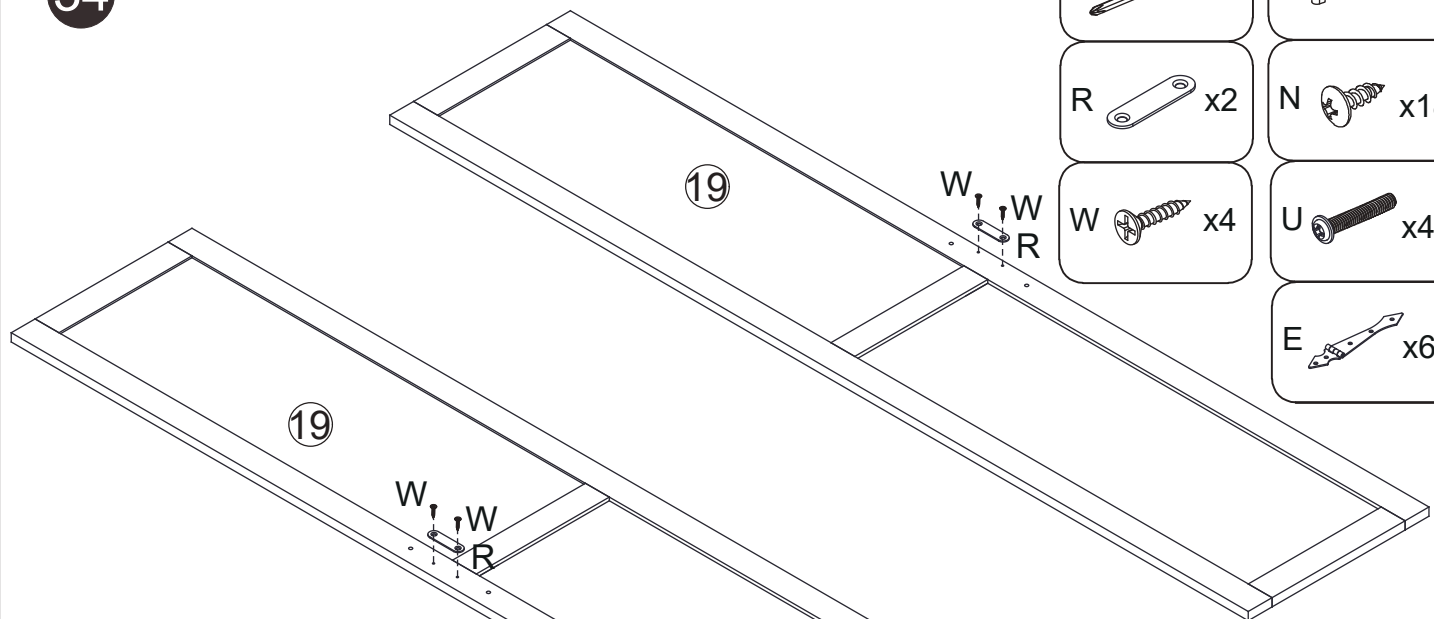

35


N  x12



D  x1

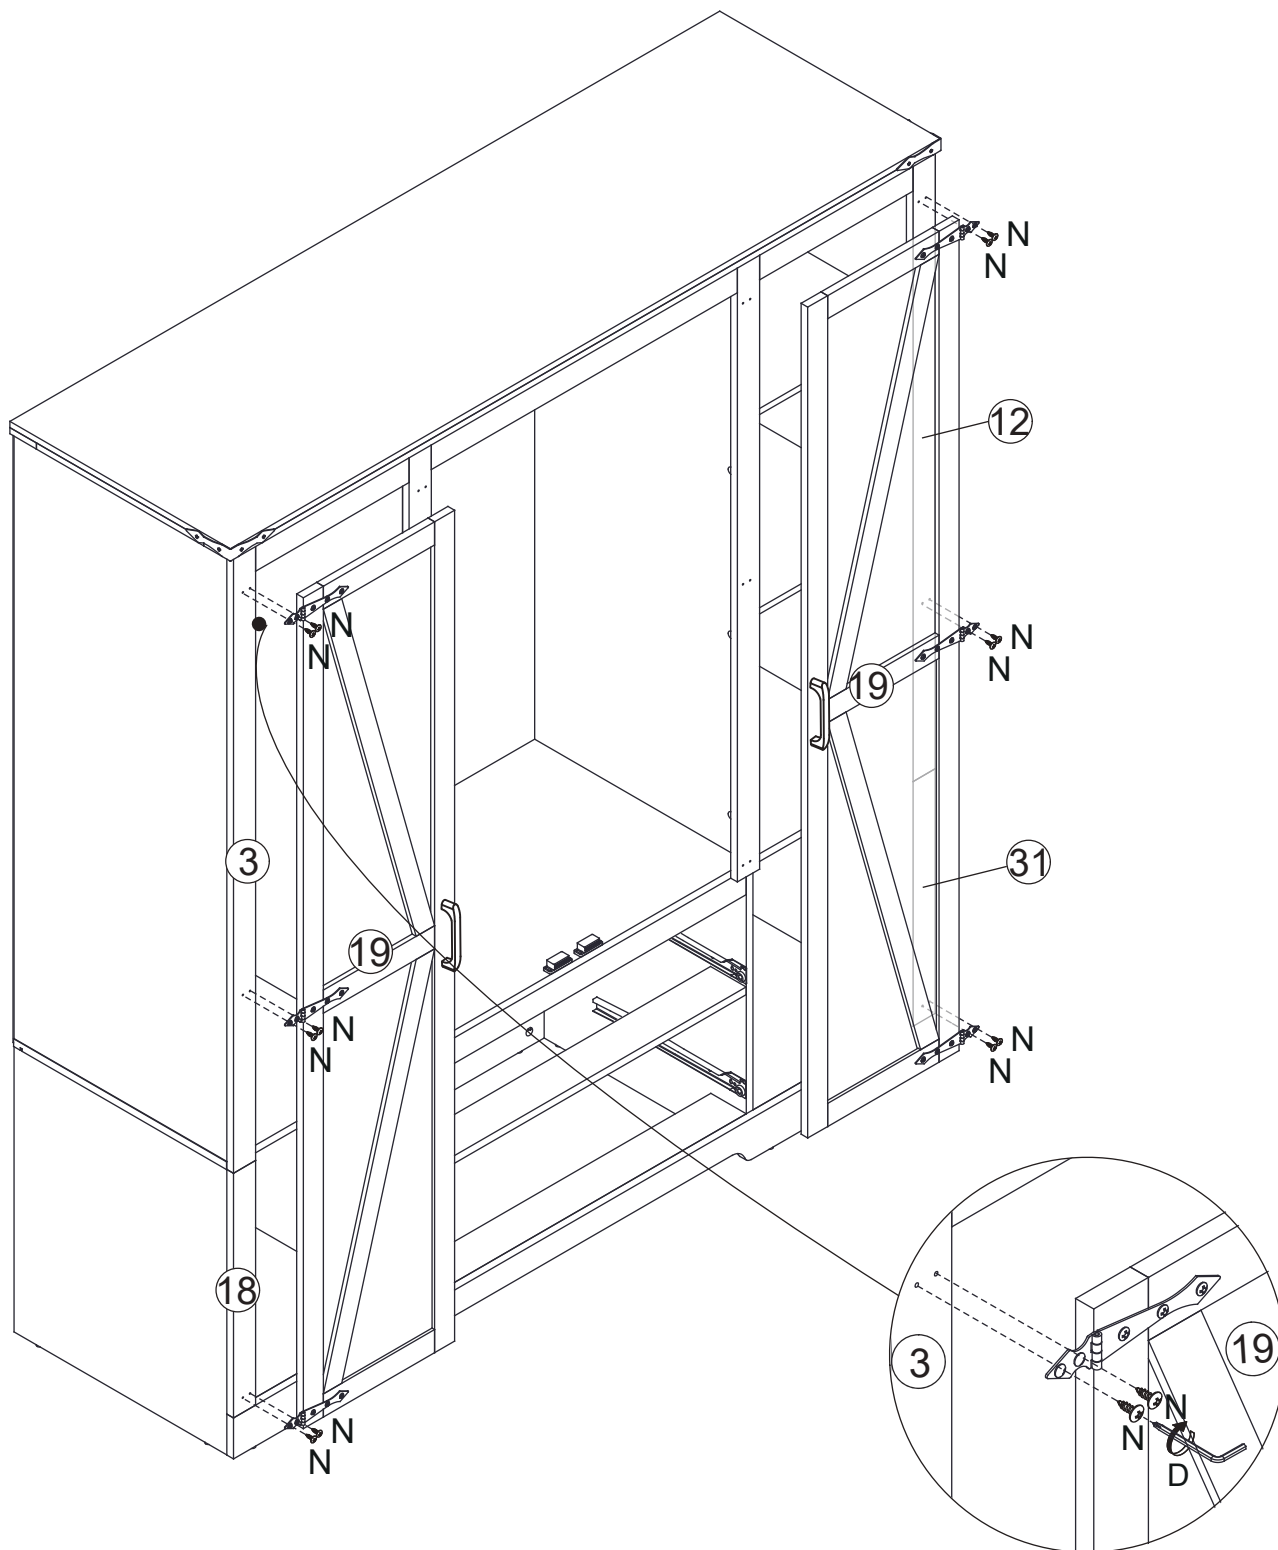

36

N  x12

D  x1

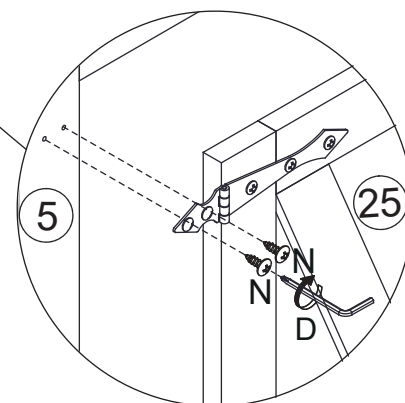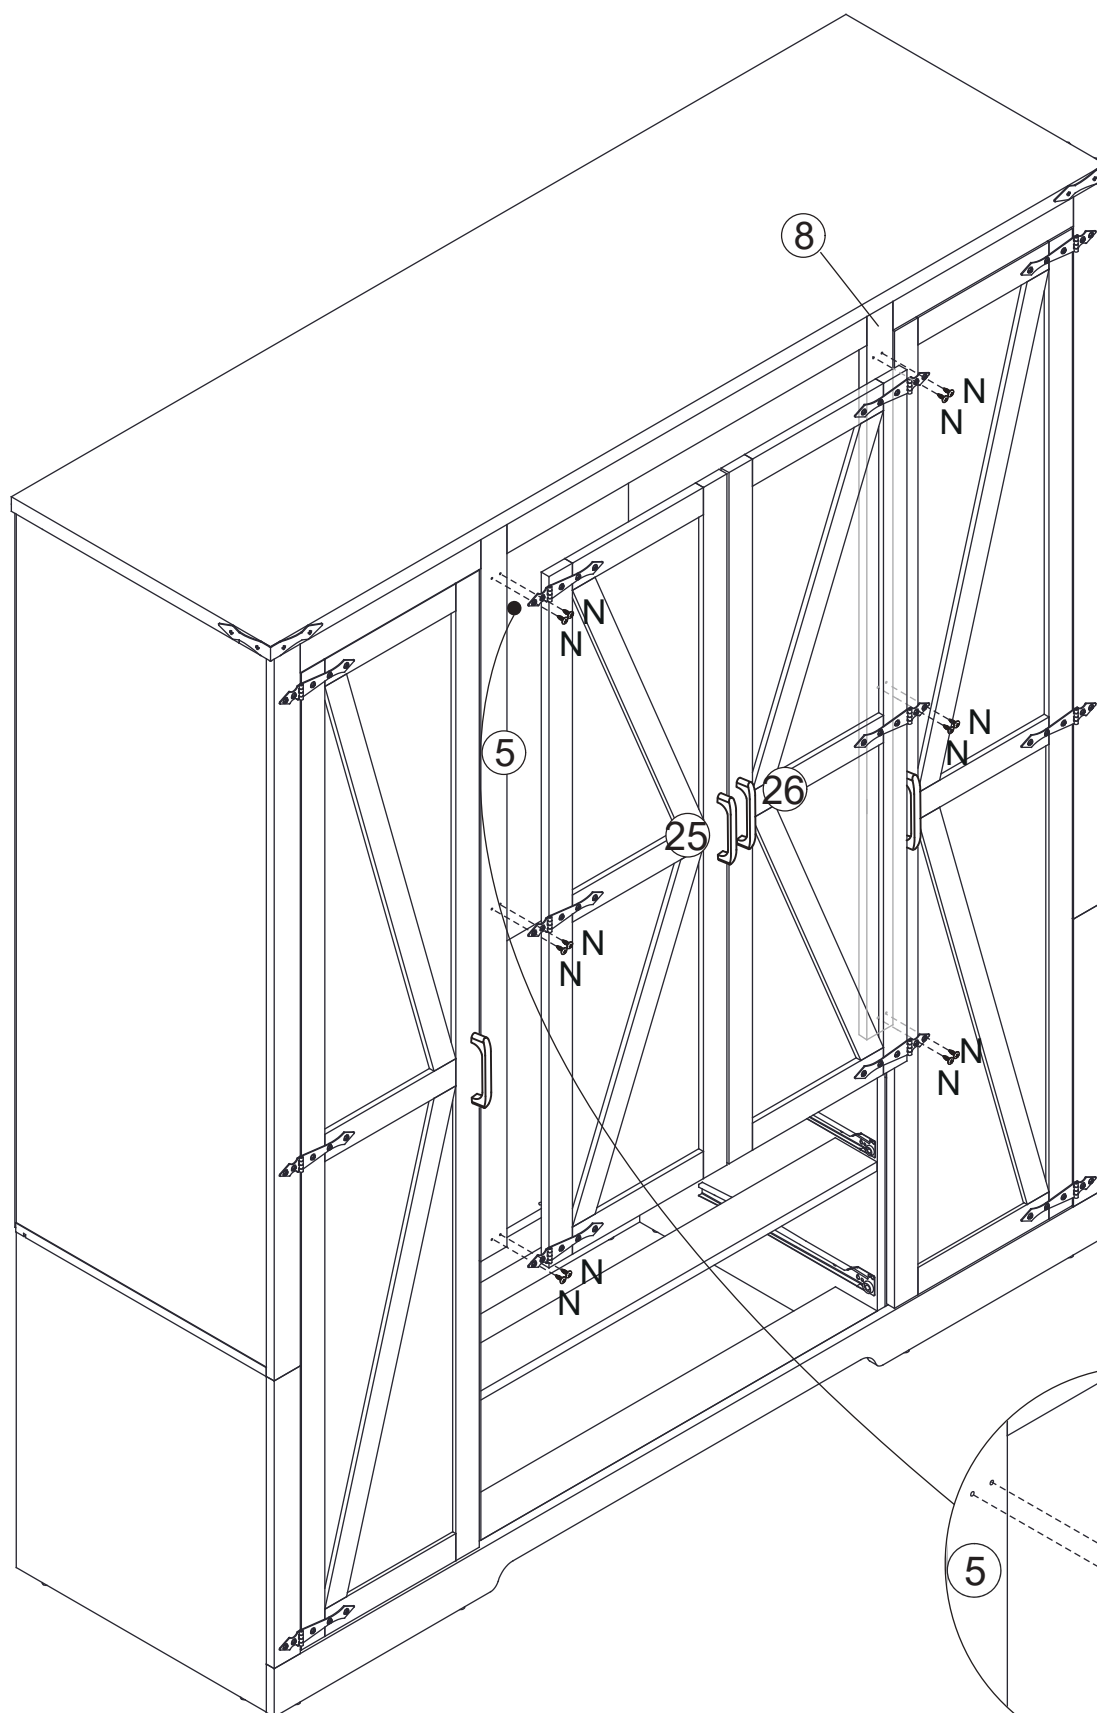

37

