

ASSEMBLY INSTRUCTIONS

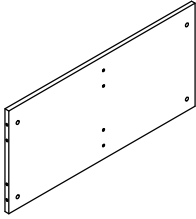
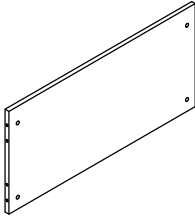

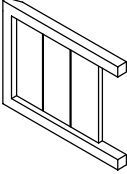
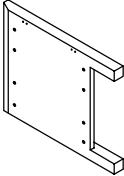


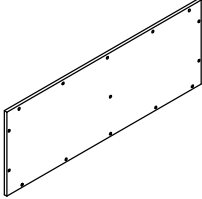
Shoe Bench








NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

PARTS LIST

TOP PANEL 1 PC 	BOTTOM PANEL 1 PC 	MIDDLE PANEL 1 PC 
LEFT SIDE FRAME 1 PC 	RIGHT SIDE FRAME 1 PC 	LEFT DOOR 1 PC 
RIGHT DOOR 1 PC 	BACK PANEL 1 PC 	

HARDWARE LIST

WOOD DOWEL 12 PCS 	CAM-BOLT CAM-LOCK 12 SETS 	MAGNET LOCK ROUND HEAD SCREW 2 SETS 	FLAT HEAD SCREW 8 PCS 	ROUND HEAD SCREW 15 PCS 
1	2	3	4	5

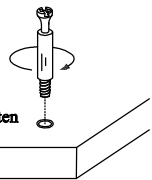



Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

To use Dowels:

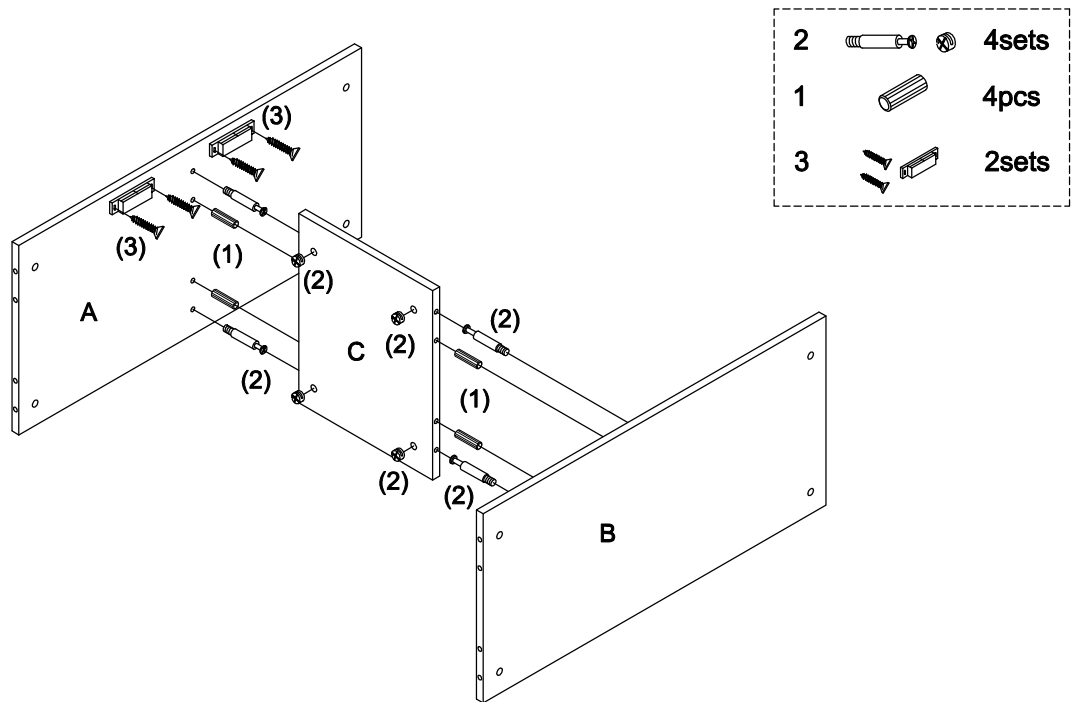
1. Add glue (about $\frac{1}{4}$ full) in the hole(s) of each board to be joined.
1. Insert the Dowel(s) and join boards.
2. Wipe excess glue with a damp paper towel.

To use Cam Locks:

1. Insert Cam Pin until snug  <p>Do not over-tighten</p>	2. Set boards together 	3. Insert Cam Lock  <p>Note arrow direction</p>	4. Turn Cam Lock clockwise (half a turn)  <p>if it won't turn halfway, back out the Cam Pin $\frac{1}{4}$ turn and try Cam Lock again.</p>
---	--	---	--

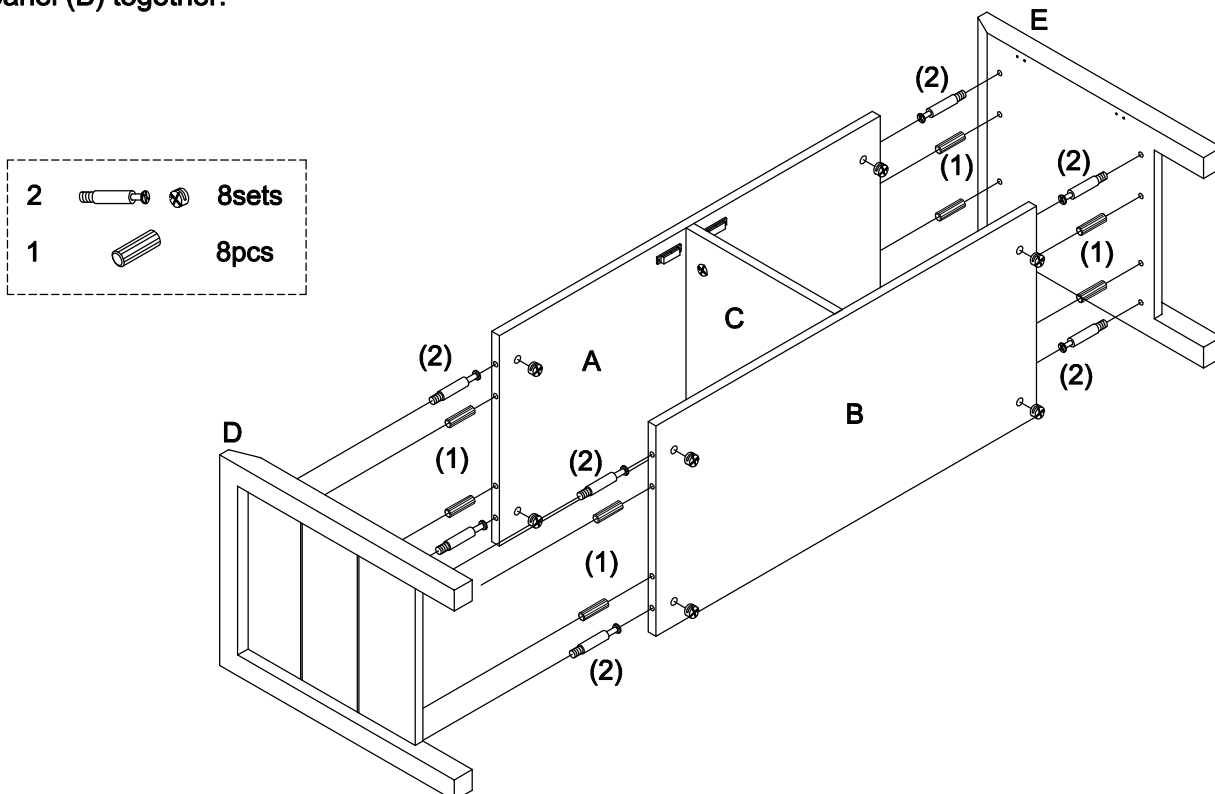
STEP 1: ASSEMBLE TOP PANEL (A),BOTTOM PANEL (B) AND MIDDLE PANEL(C)

- Use flat head screws (3) to attach magnet locks (3) onto the bottom of top panel (A).
- Use wood dowels (1) and cam-bolts & cam-locks (2) to assemble top panel (A), bottom panel (B) and middle panel (C) together.



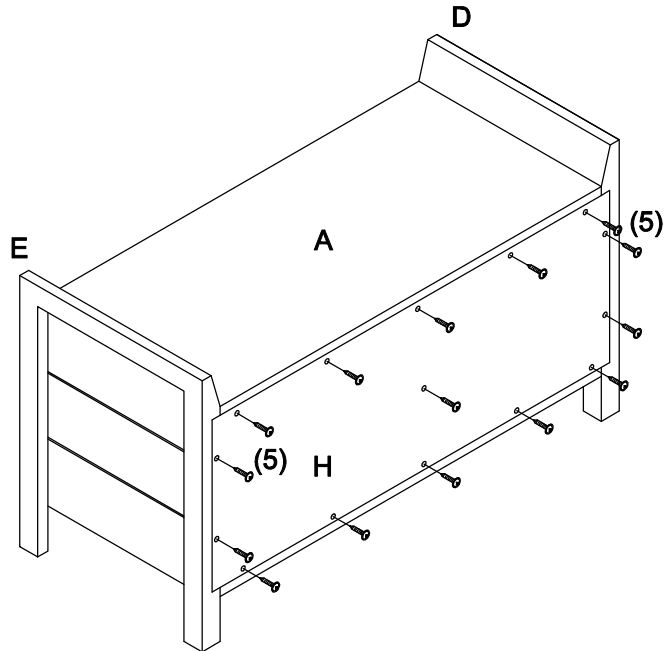

STEP 2: ASSEMBLE SIDE FRAME (D & E),TOP PANEL (A) AND BOTTOM PANEL (B)

- Use wood dowels (1) and cam-bolts & cam-locks (2) to assemble side frames (D & E),top panel (A) and bottom panel (B) together.



STEP 3: ASSEMBLE BACK PANEL (H)

- Use round head screws (5) to attach back panel (H) on the back of pre-assembled unit.



STEP 4: ASSEMBLE DOOR (F & G)

- Use flat head screws (4) to assemble doors (F & G) onto side frames (D & E).

