

Deluxe Chicken Coop

8-10 Hens

read first REVIEW BEFORE ASSEMBLY

- Some tools (not included) are required for assembly — see below
 - For best results, follow steps in order
 - Please follow the CARE ADVISORY to maintain product longevity
- For assistance or replacement parts, please contact us.

CARE ADVISORY: To maintain the longevity of your purchase, we recommend that you periodically treat it with a non-toxic sealant and protect it with a tarp or other covering during extended periods of inclement weather.

TOOLS REQUIRED

- Small rubber mallet or hammer for wood pegs
- Phillips-head screwdriver for all screws; if a power drill is used, do not over-tighten—We are not responsible for damage

HARDWARE INCLUDED




P	P1	P2	P3	P4	P5	P6
						
36ct	6ct	8ct	38ct	56ct	44ct	16ct

(spares are included but not reflected in counts)

KEY TO HARDWARE SYMBOLS





- P = wood pegs (Steps 1, 3, 4)
P1 = 2 3/8" screw (Step 4)
P2 = 2" screw (Step 3)
P3 = 1 3/4" screw (Steps 1, 2, 4)
P4 = 1 3/8" screw (Step 5)
P5 = 1" screw (Steps 2, 5)
P6 = 5/8" screw (Step 2, 3)

1 To assemble the **MAIN COOP HOUSE**, you will need these pieces:

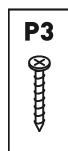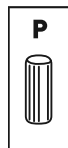



× 24

Tap wood pegs **[P]** into predrilled holes indicated by the ▼ symbol.

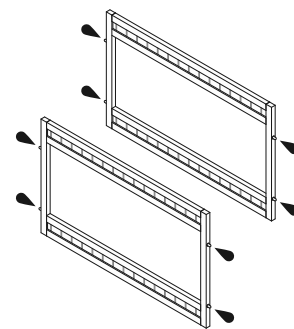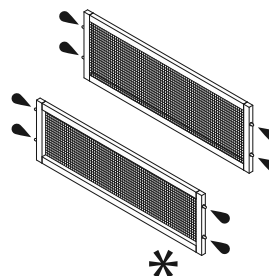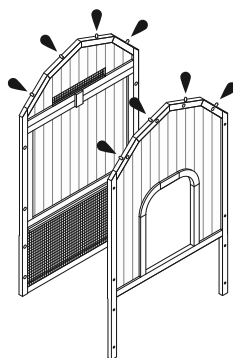

× 16

Align wood pegs with the predrilled guide holes and attach panels with **[P3]** screws.

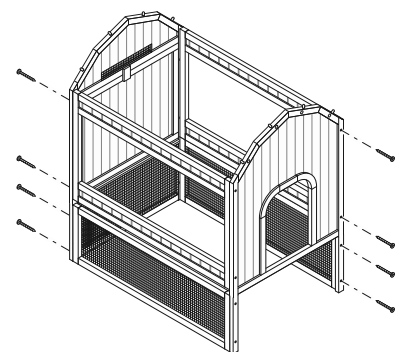
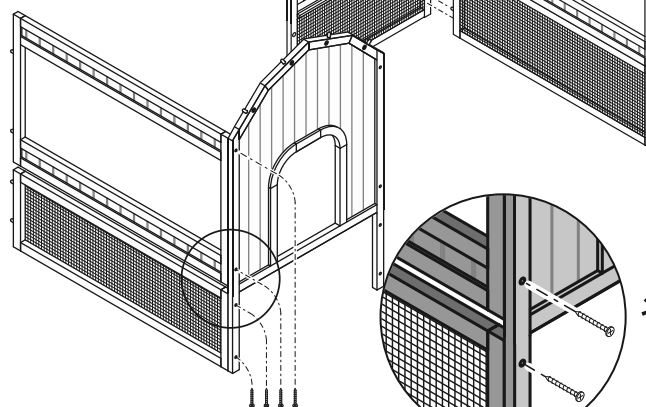


*
NOTE: The lower left panel is shorter than the right.



*
NOTE: The shorter lower left panel will leave a gap to allow for the coop floor tray (Step 2).

2

To assemble the **NEST BOXES** and install the **COOP FLOOR TRAY**, you will need these pieces:

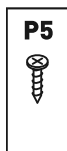
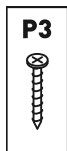


NOTE: For Nest Boxes: Hardware, Parts, and Assembly Steps are all the same for both sides

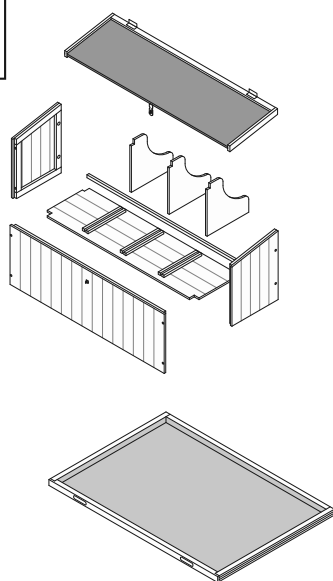


× 8 total
(4 each side)

Attach nest box ends with **[P3]** screws.

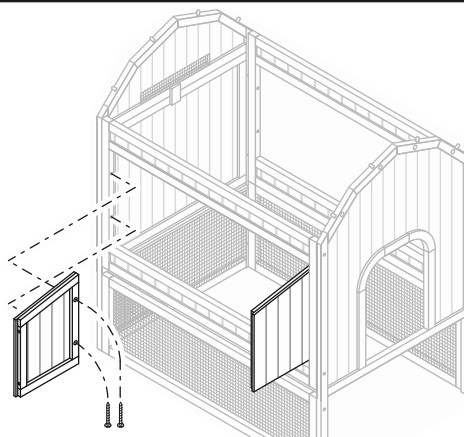


× 8 total
(4 each side)

Attach the divider-stop bar onto the nest box floor with **[P3]** screws.

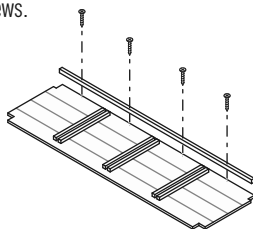


Insert the floor in place.
Then, insert the dividers.

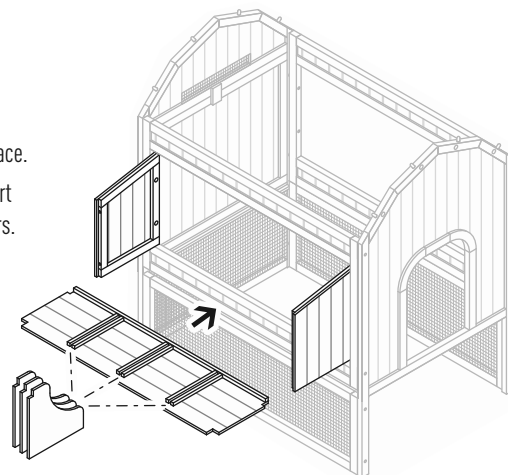

× 8 total
(4 each side)

Attach nest box side with **[P5]** screws.



Assemble the right-side nest box in the same manner.

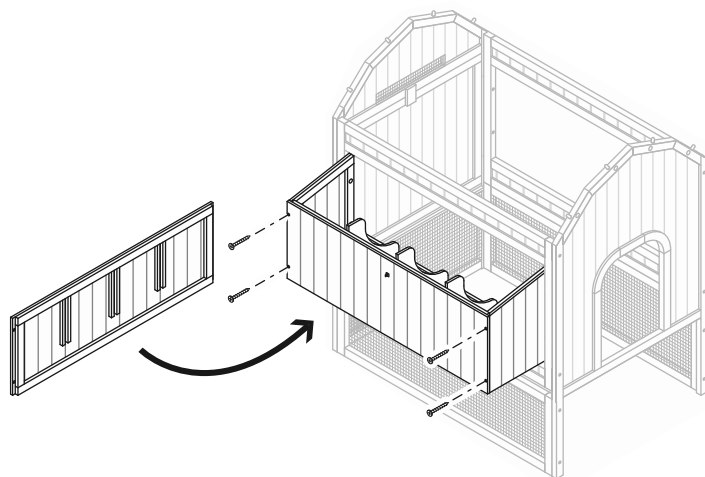

× 12 total
(6 each side)


Lay the nest box roof in position and attach the hinges to the coop with **[P6]** screws.

Insert the coop floor tray under the left-side nest box.

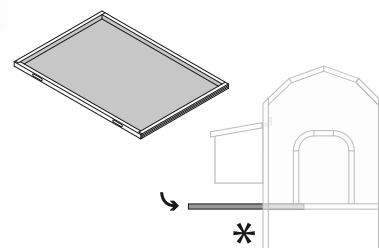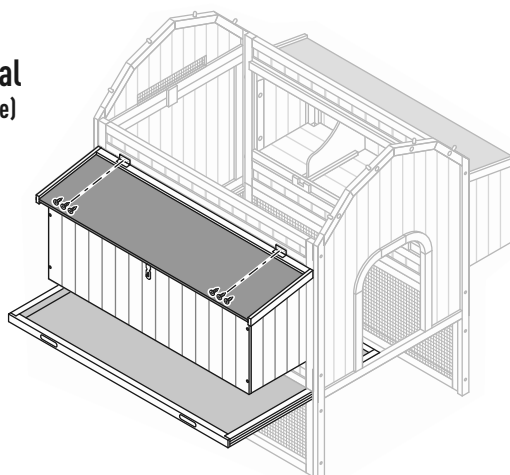


3

To install the **PERCH BARS**, **ROOF EXTENDERS**, and **COOP RAMP**, you will need these pieces:

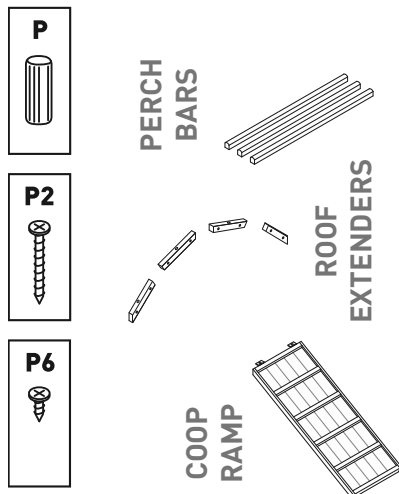


PERCH BARS



Insert the roosting perch bars.

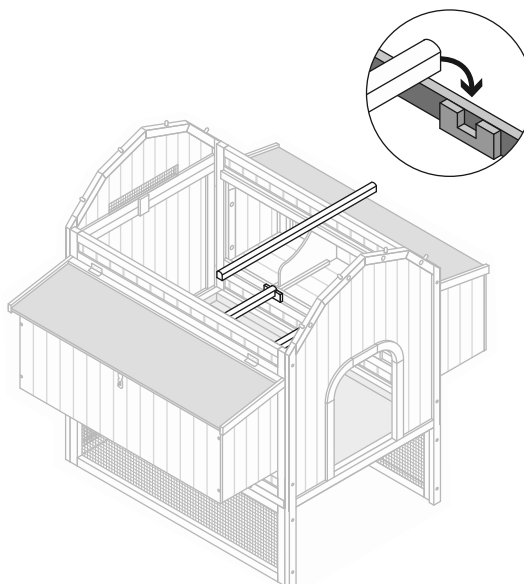

ROOF EXTENDERS

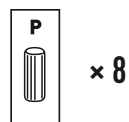


Tap wood pegs **[P]** into predrilled holes indicated by the  symbol.

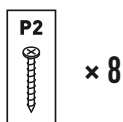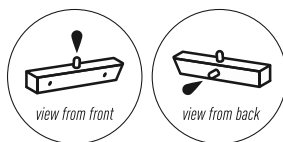


Align the wood pegs in the roof extenders with predrilled guide holes on coop door frame.


Attach with **[P2]** screws.

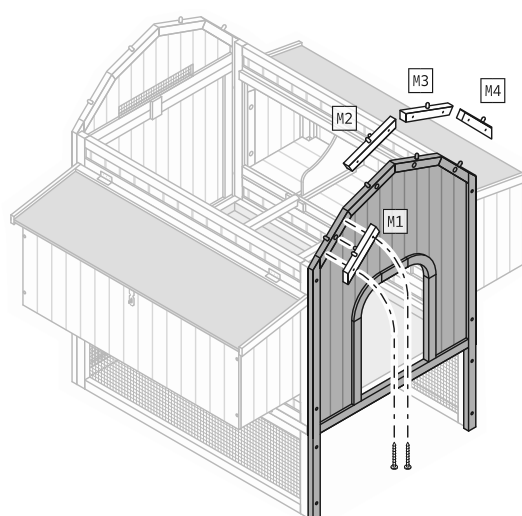

COOP RAMP






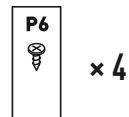


Attach the coop ramp with **[P6]** screws.

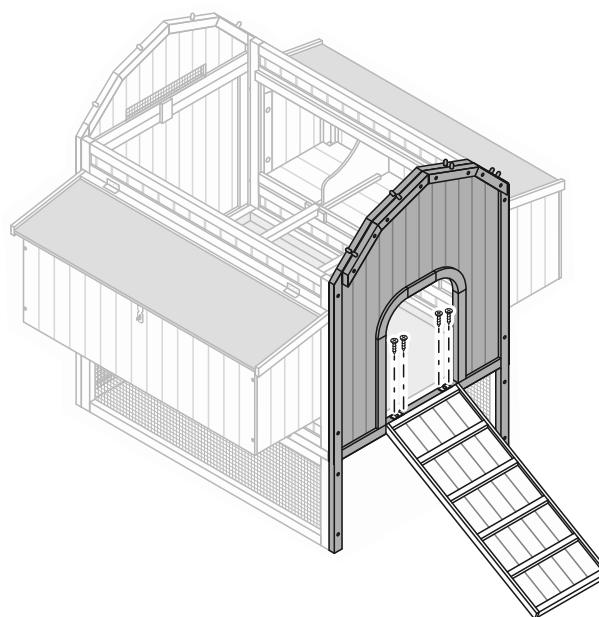



4

To assemble the **CHICKEN RUN**, you will need these pieces:

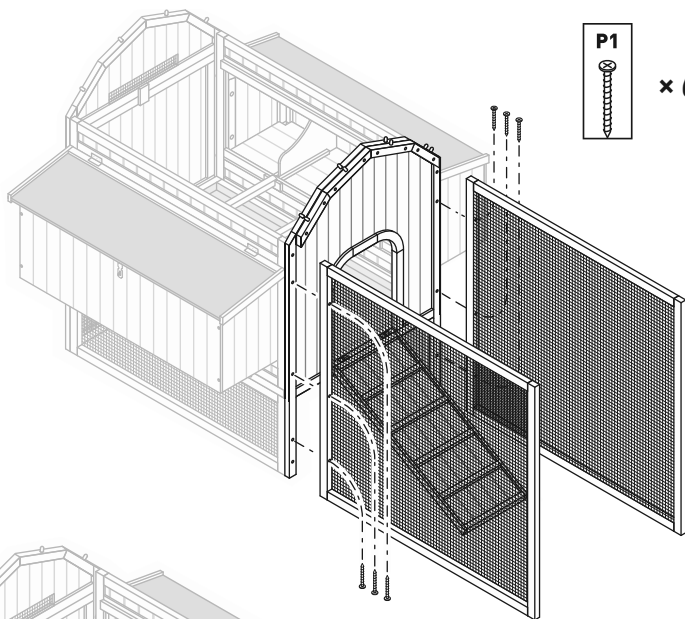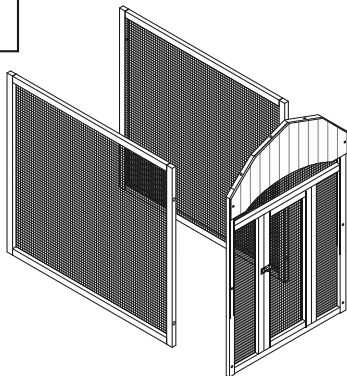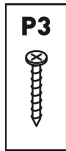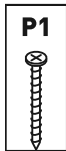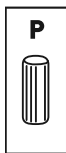


× 6

Align the side panels with the coop and attach with **[P1]** screws.

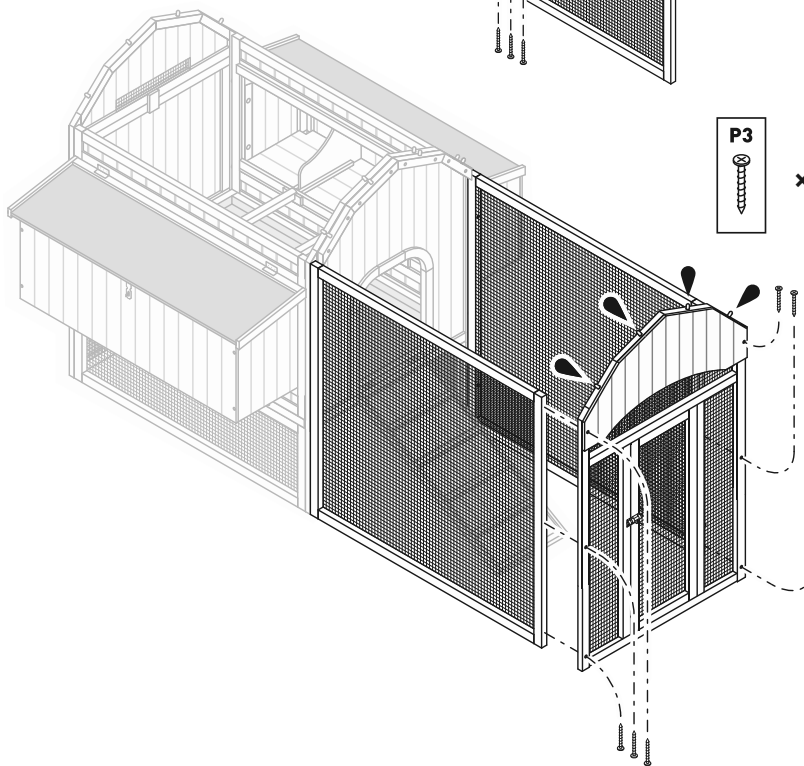

× 6

Align the front panel with the sides and attach with **[P3]** screws.






× 4

Tap wood pegs **[P]** into predrilled holes indicated by the ♣ symbol.


5^a

To preassemble the **ROOF TRIM**, you will need these pieces:

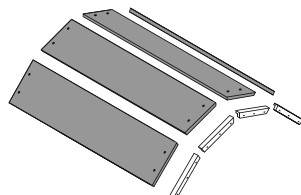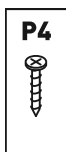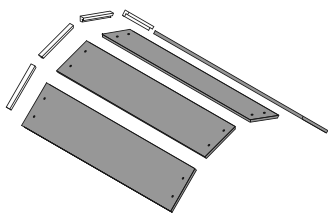

× 24

Attach the roof trim with **[P4]** screws. Numbers have been stamped onto the trim as guides.

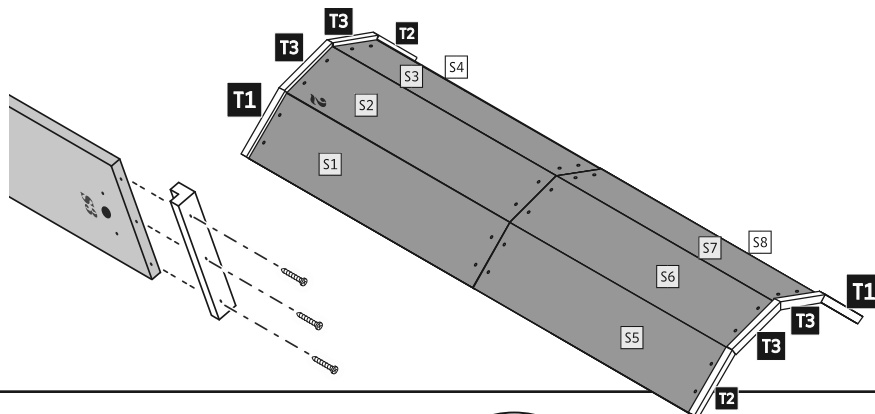


OUTSIDE ENDS

NOTE: For all roof panels (underside view):

Part Number stamp



Predrilled holes for **[P4]** screws

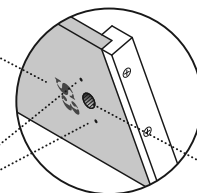


Predrilled guide hole for wood peg alignment

5^b


To assemble the **ROOF**,
you will need these pieces:

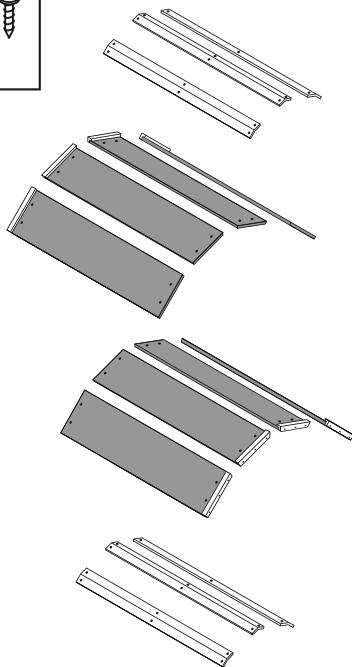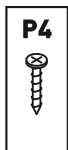

Lay all roof panels in position before attaching.
Align the predrilled guide holes in the roof panels with the wood pegs along the roof lines. Numbers have been stamped onto the panels as guides.

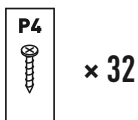

Attach the roof panels with **[P4]** screws.

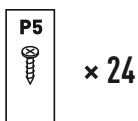

Lay roof trim in position first, then attach with **[P5]** screws.

★
Your Deluxe Coop is now fully assembled and ready for use.

