


ASF006

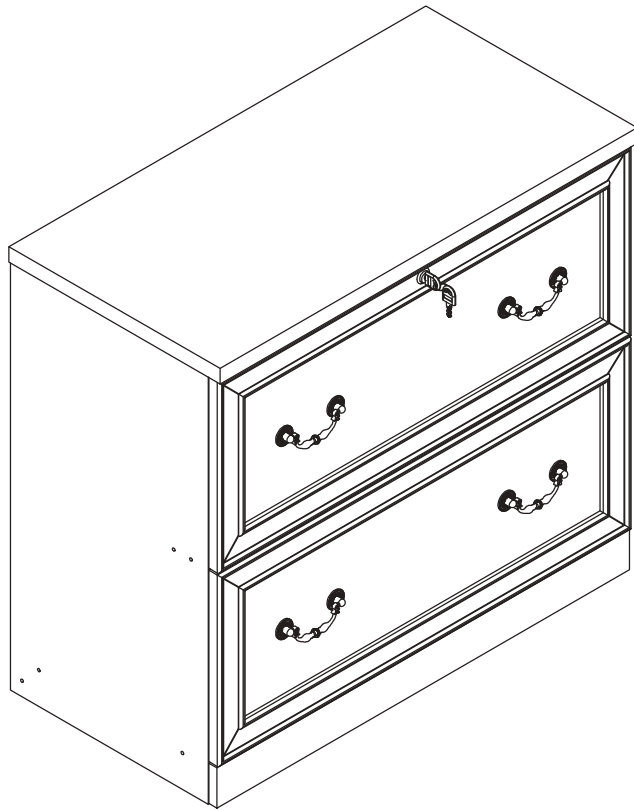

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

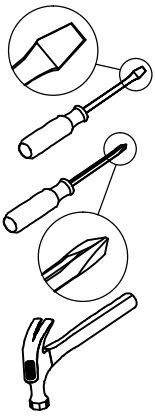

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

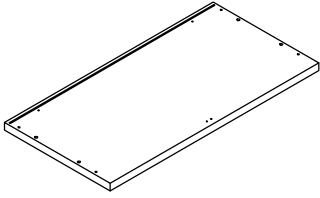


①
TOP
Qty:1

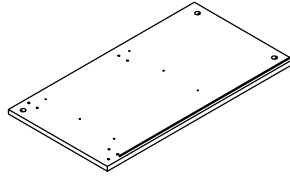


②
LEFT SIDE PANEL
Qty:1

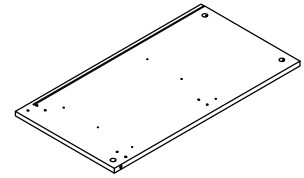


③
RIGHT SIDE PANEL
Qty:1

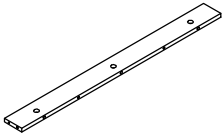


④
FRONT SLAT
Qty:1

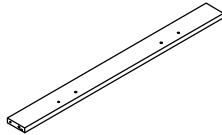


⑤
BACK SLAT
Qty:1

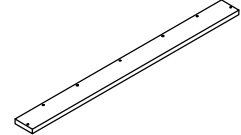


⑥
FRONT RAIL
Qty:1

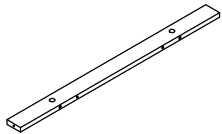


⑦
BACK RAIL
Qty:1

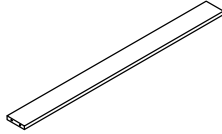


⑧
FRONT SLAT
Qty:1

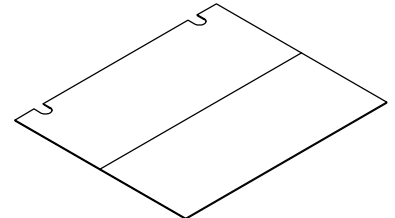


⑨
BACK PANEL
Qty:1

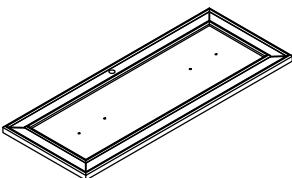

⑩
DRAWER FRONT PANEL
Qty:1

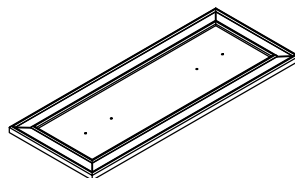


⑪
DRAWER FRONT PANEL
Qty:1



⑫
DRAWER LEFT SIDE
Qty:2


Board Identification

Not actual size




⑬

DRAWER RIGHT SIDE
Qty:2

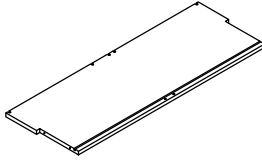


⑭

DRAWER BACK
Qty:2



⑮


DRAWER BOTTOM SLAT
Qty:2

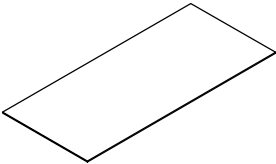


⑯

DRAWER BOTTOM
Qty:2


Part List

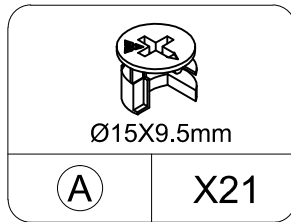


CAM LOCK
spare:2

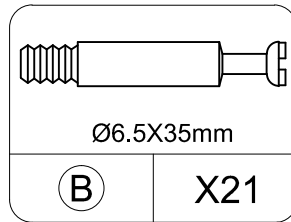


CAM BOLT
spare:2

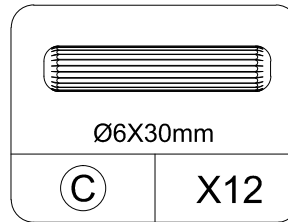


WOODEN DOWEL
spare:1

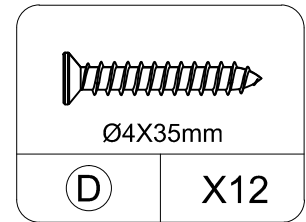


SCREW
spare:1

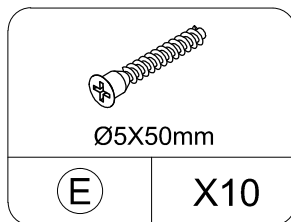


SCREW
spare:1

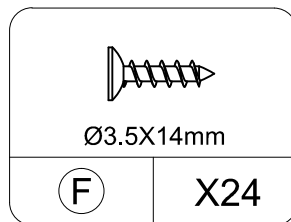


SCREW
spare:3

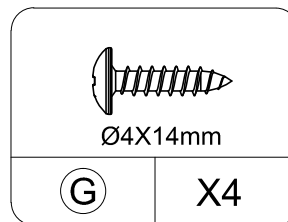


SCREW
spare:1

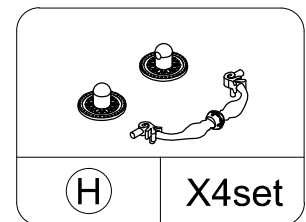


HANDLE

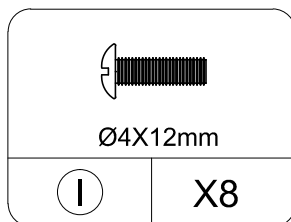


SCREW
spare:1

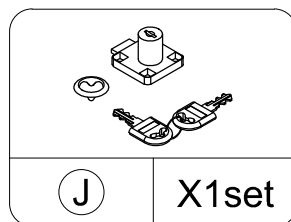


LOCK

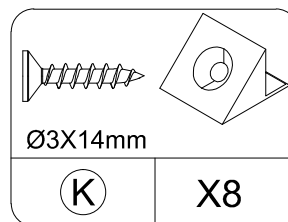


BACKBOARD BUCKLE
spare:1

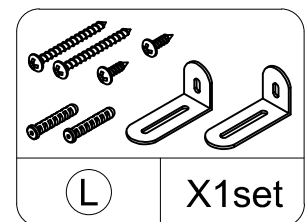


ANTI-TIPPING HARDWARE

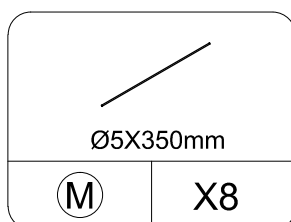


SCREW

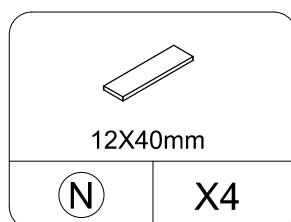


FELT MAT
spare:1

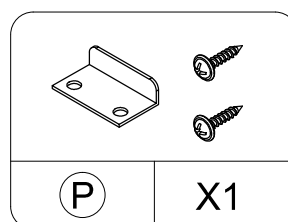


SCREW

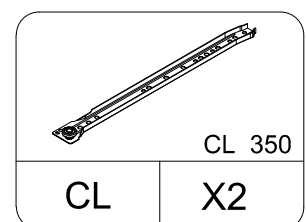


LEFT CABINET MEMBER

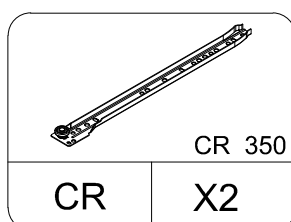

RIGHT CABINET MEMBER

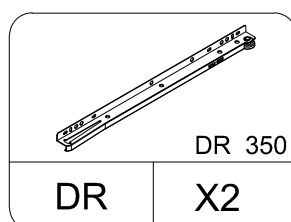

RIGHT DRAWER RUNNER

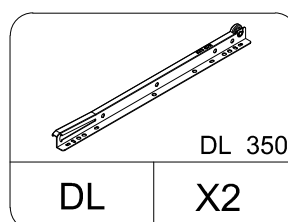


LEFT DRAWER RUNNER

Part List



Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

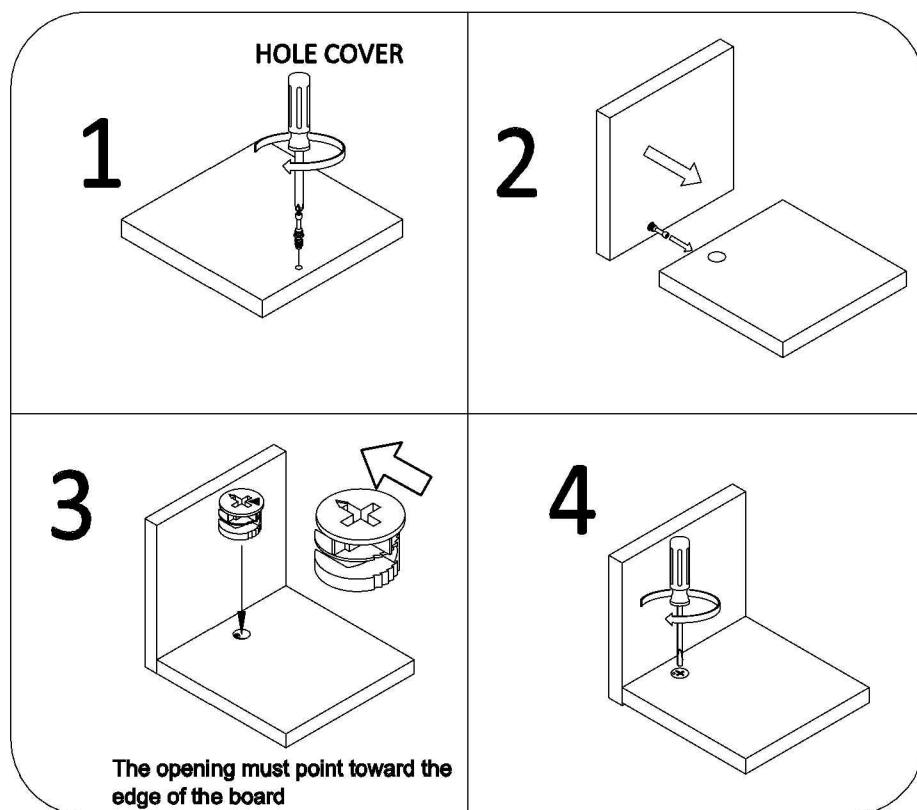


Board Identification

Not actual size

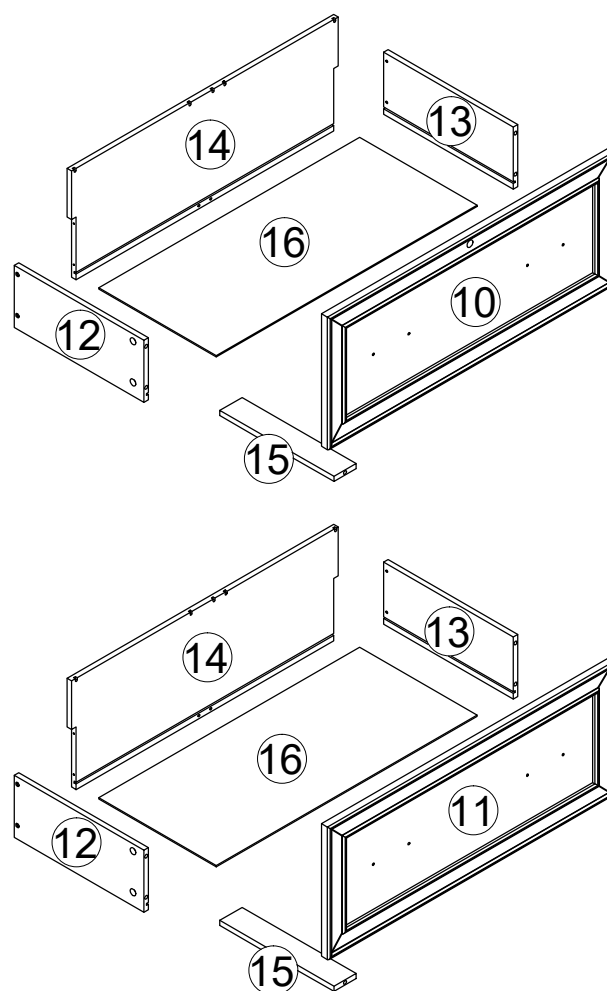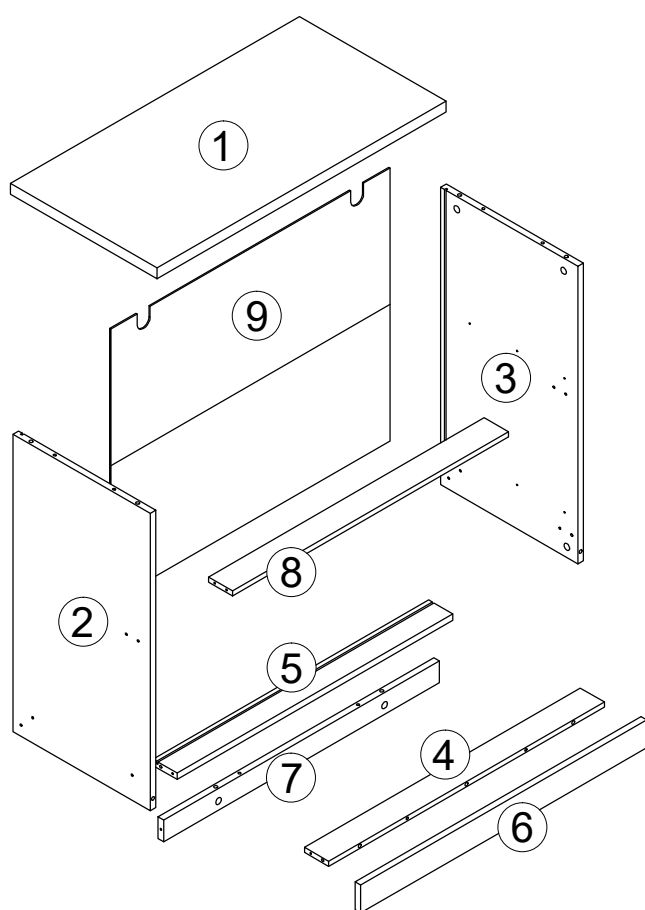

STEP1



Ø6.5X35mm

B




X10




Ø4X35mm

D

X12

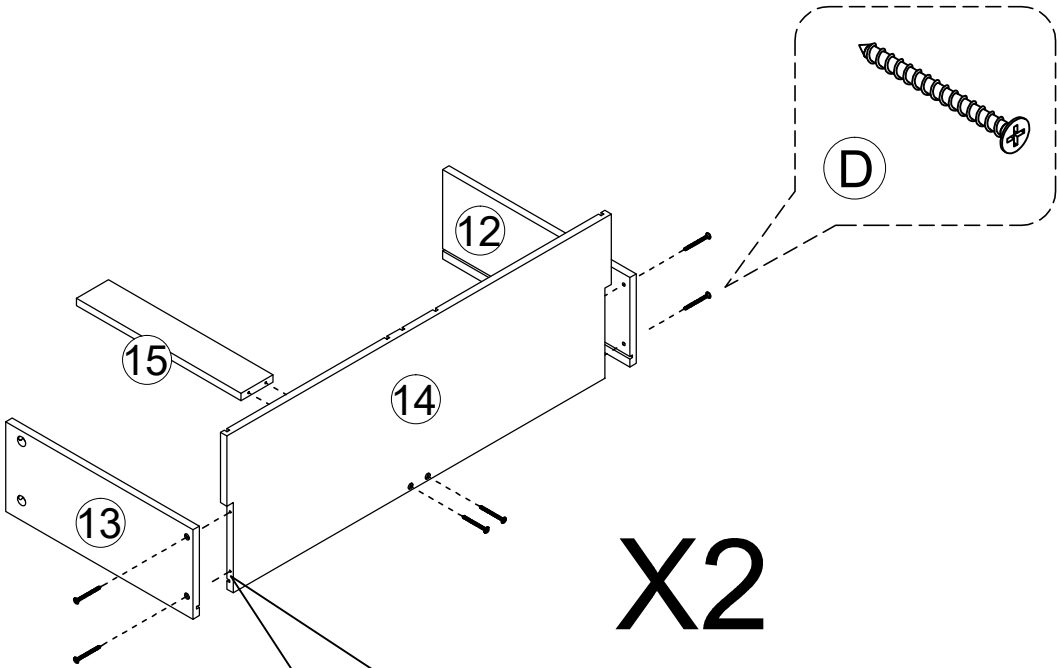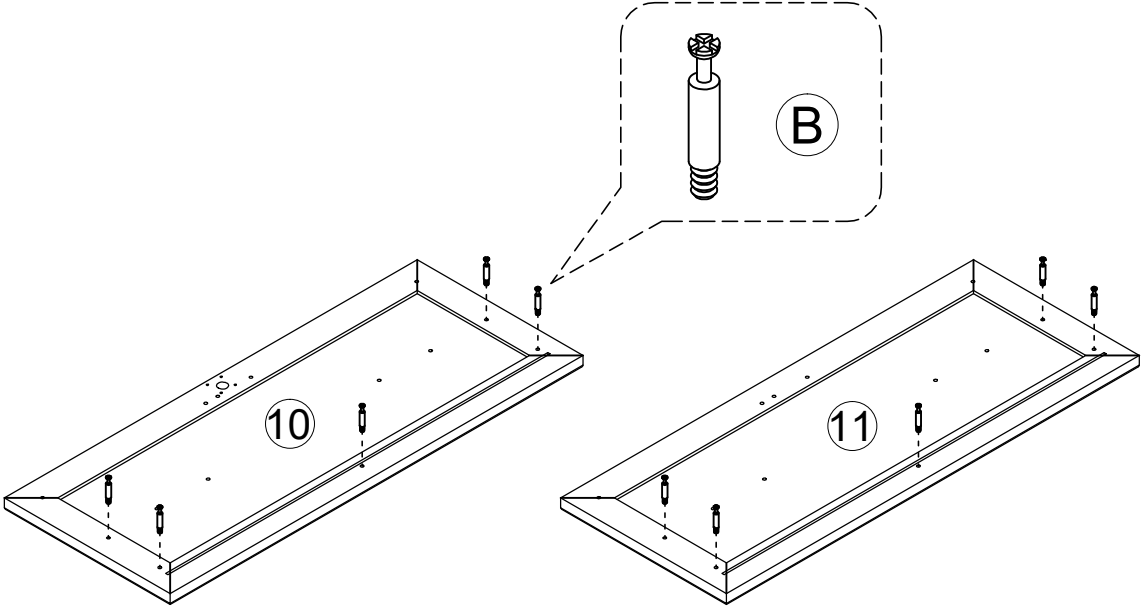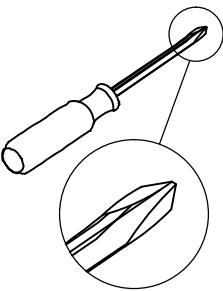

Make sure that the screws enter the pilot holes and then screw them into place together.



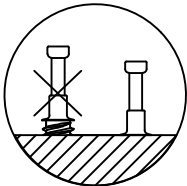


STEP2




Ø15X9.5mm


A	X10
---	-----

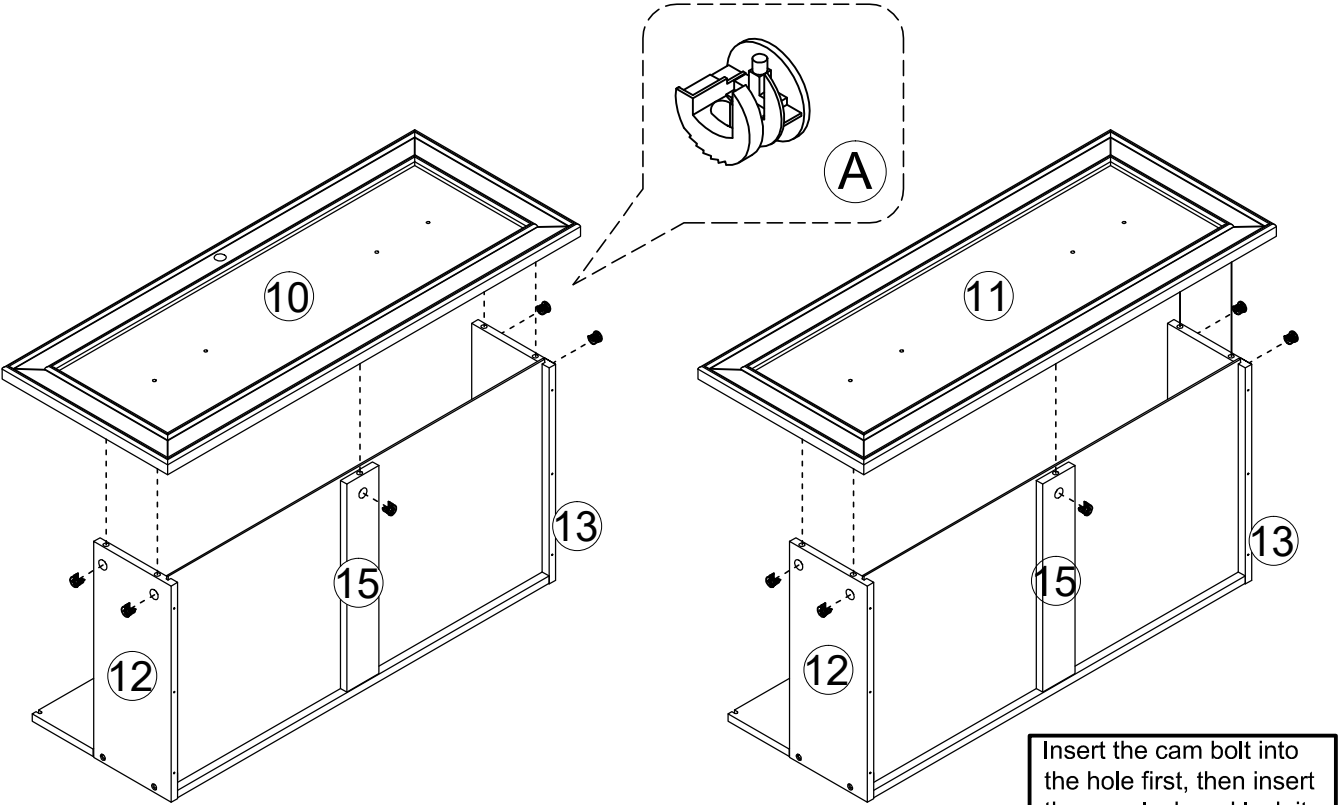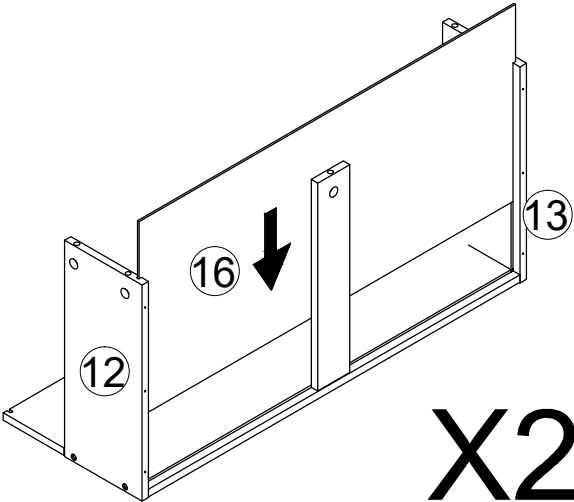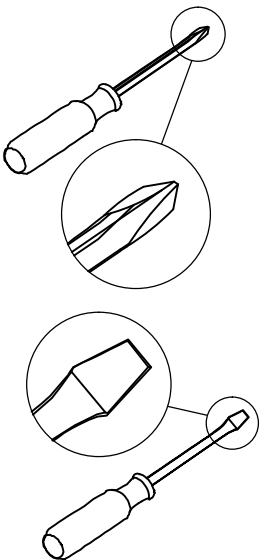

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

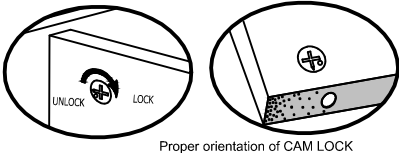


STEP3



Ø3.5X14mm

F


X12

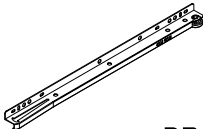

DR 350

DR



X2

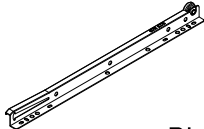











DL 350

DL






X2

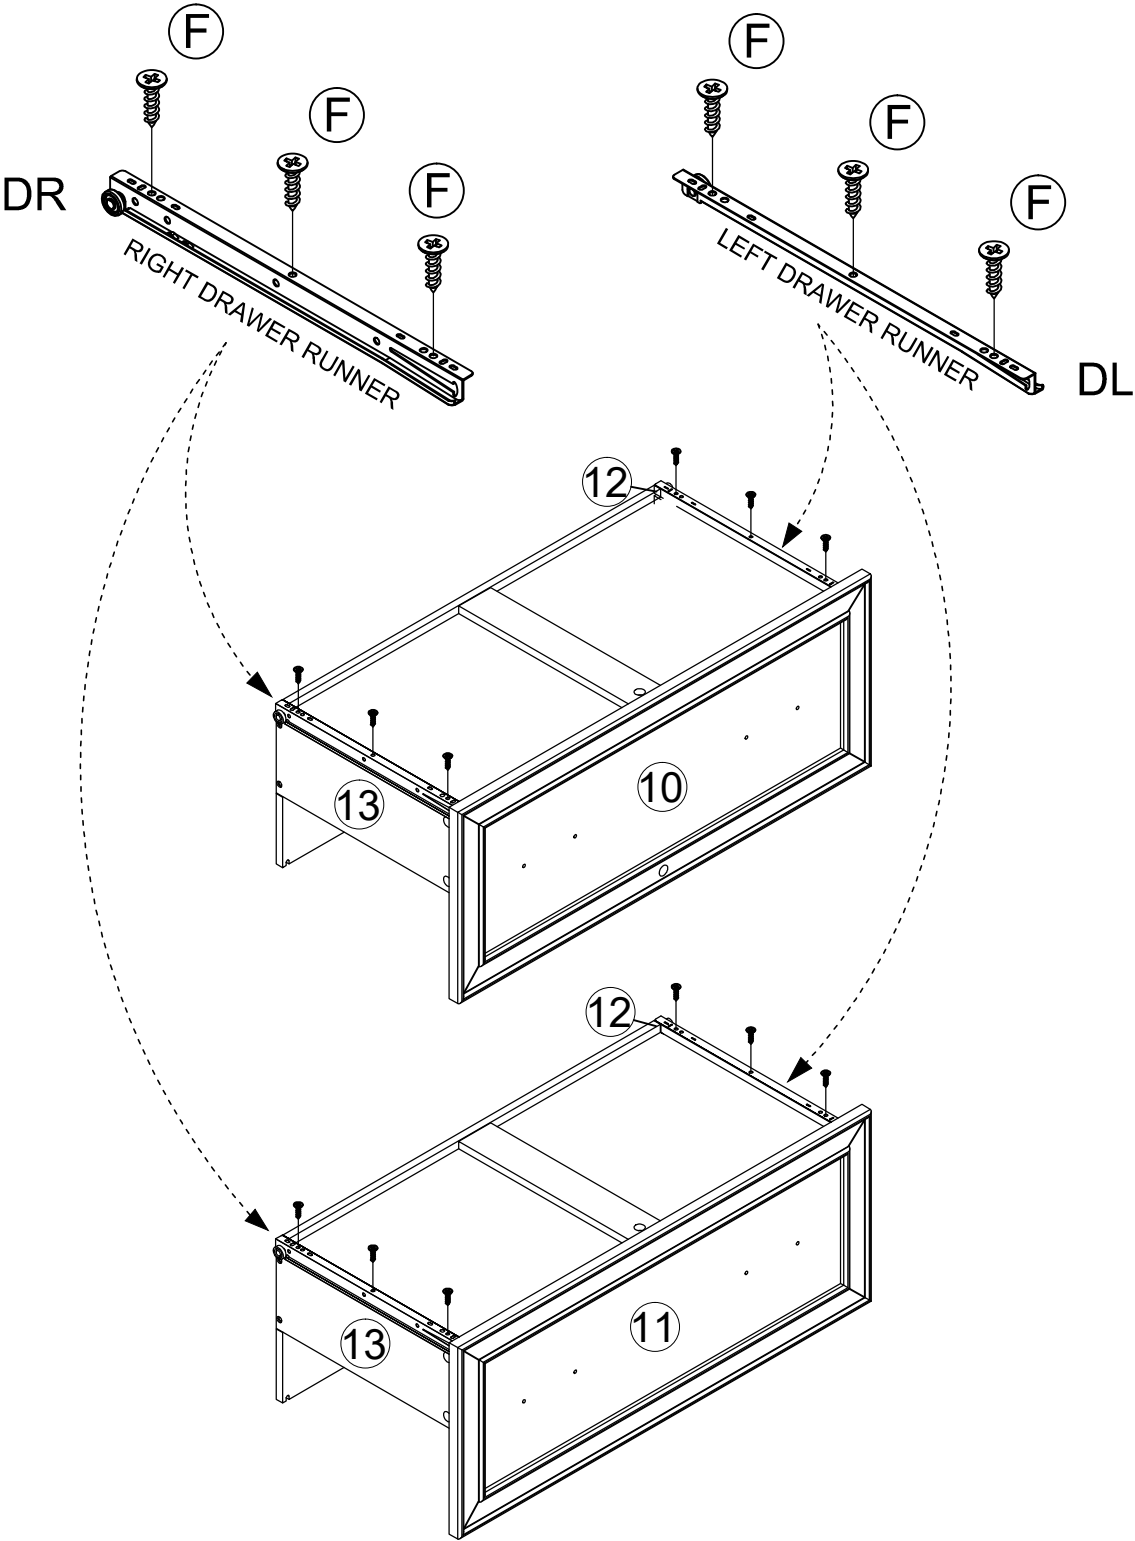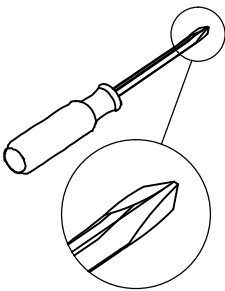

STEP4

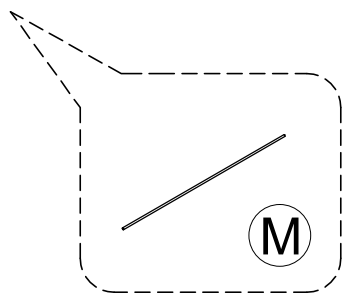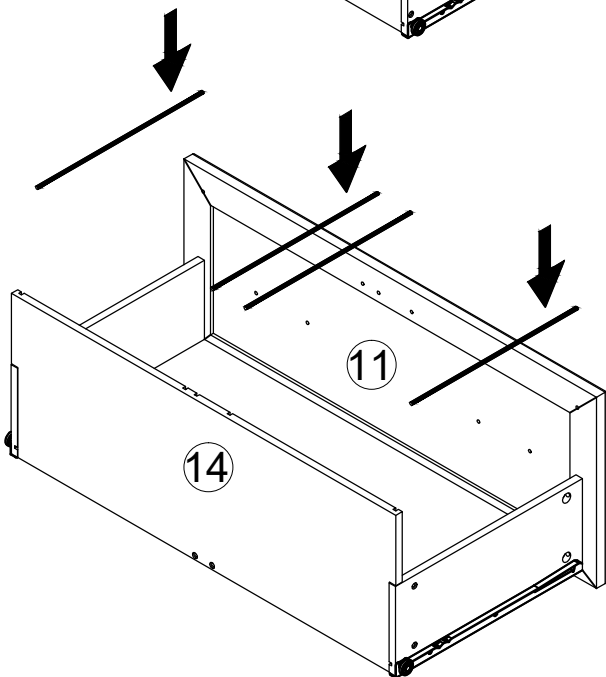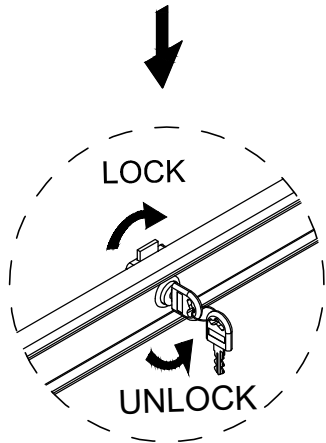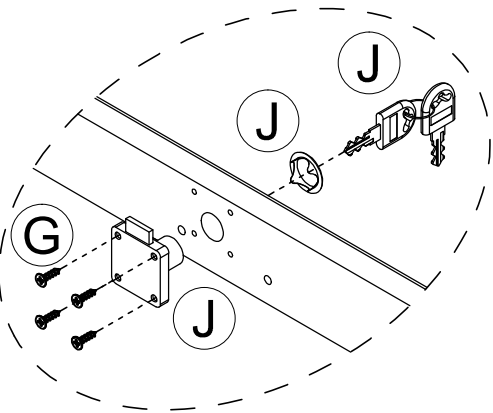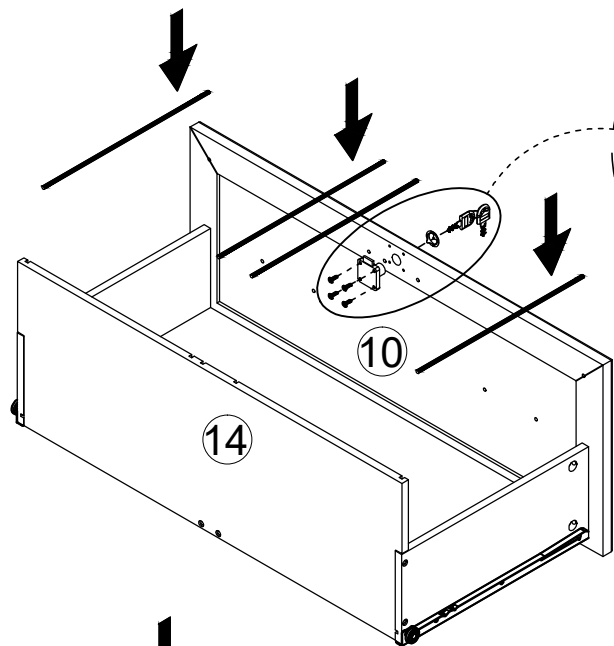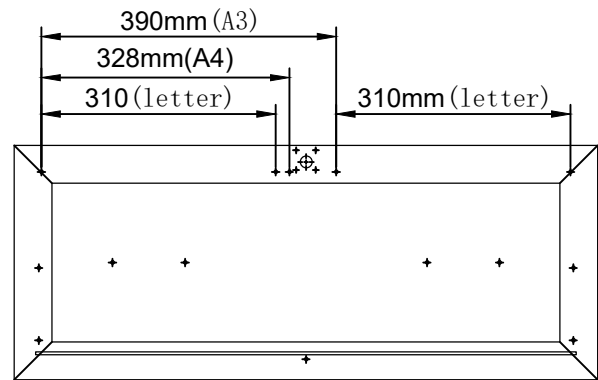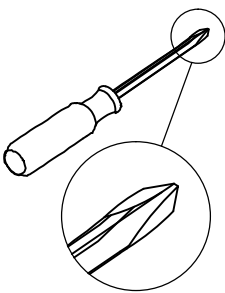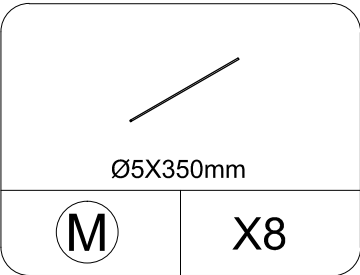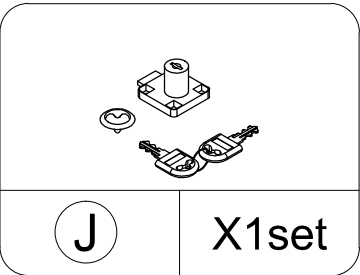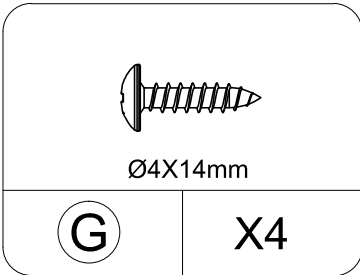

STEP5

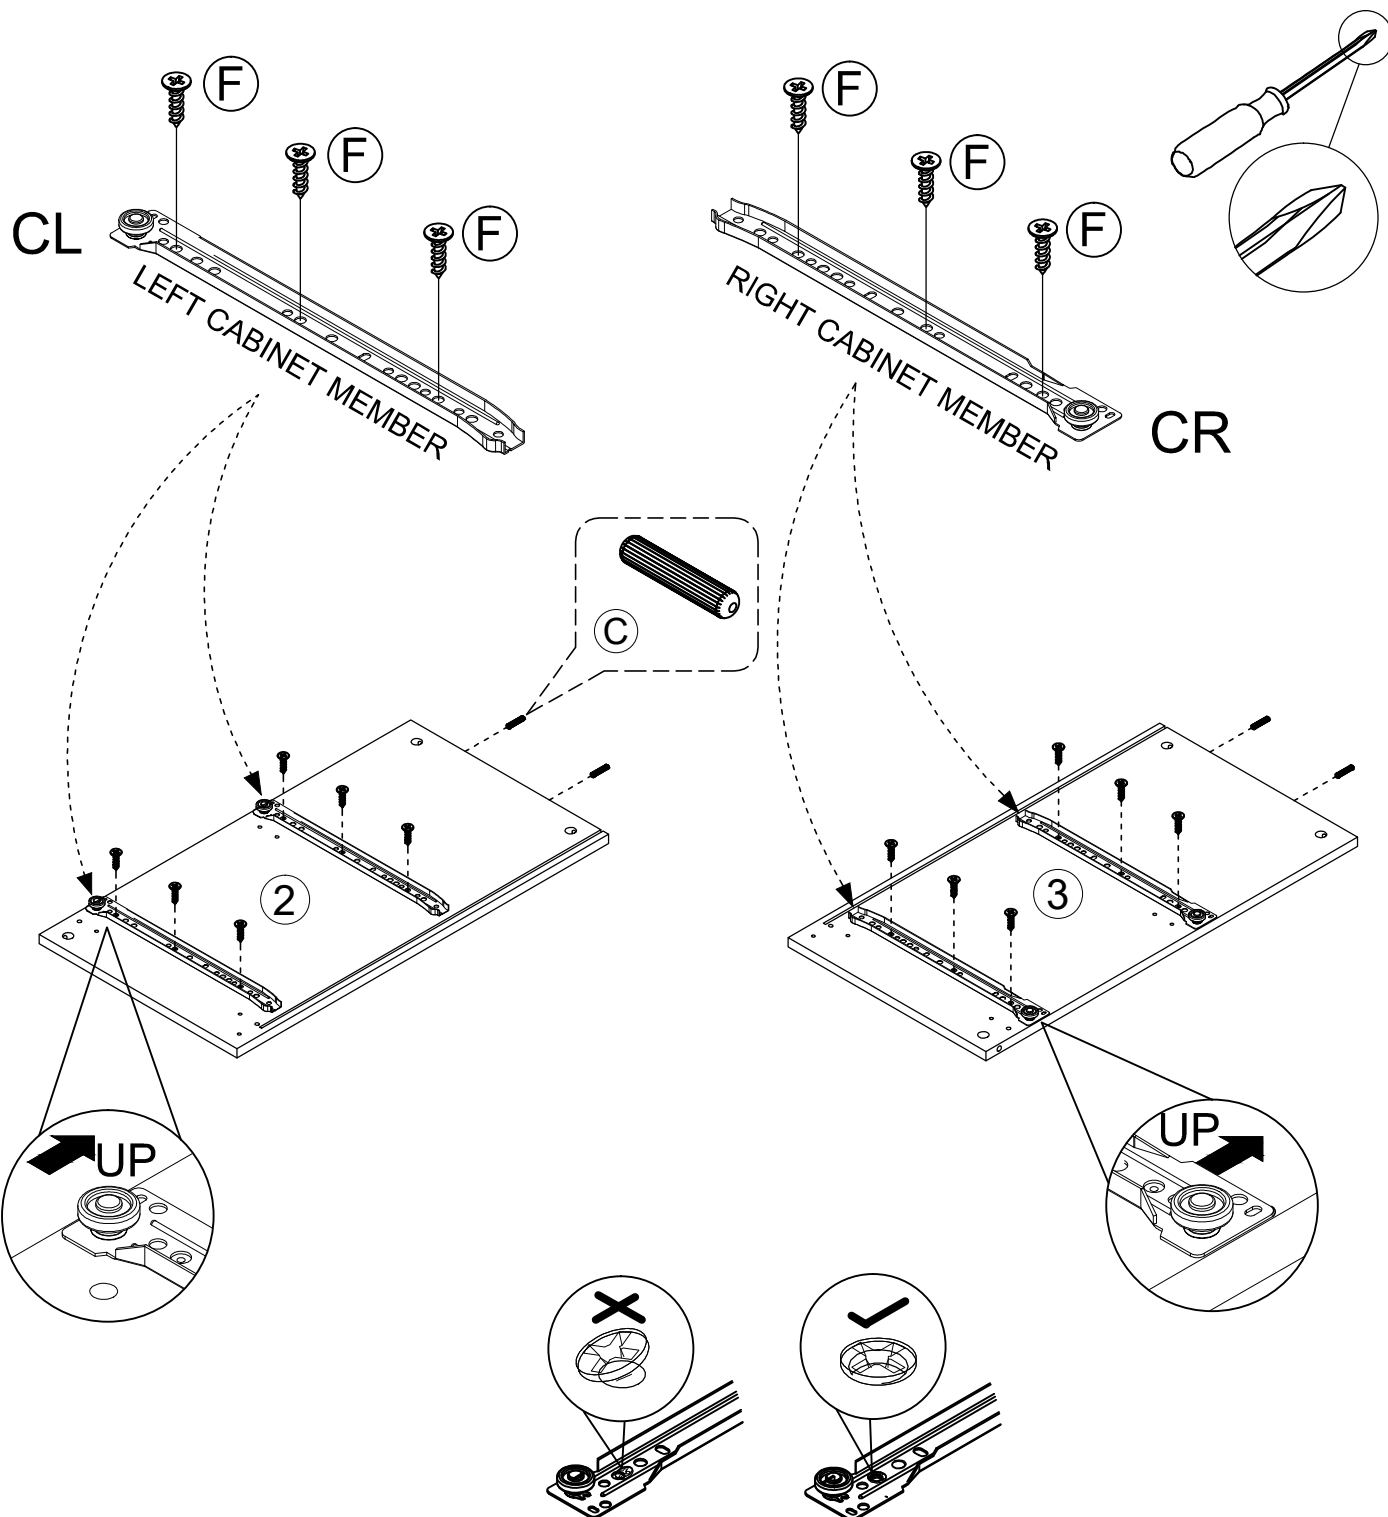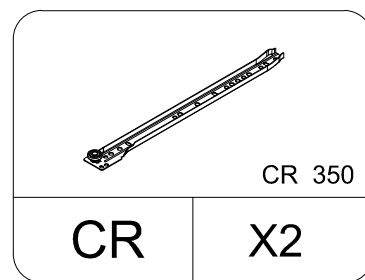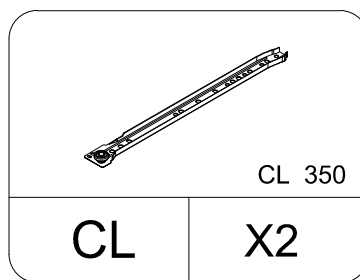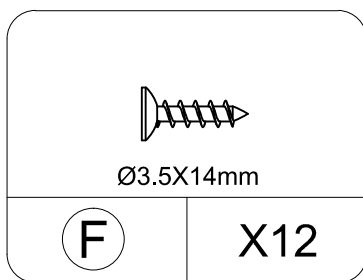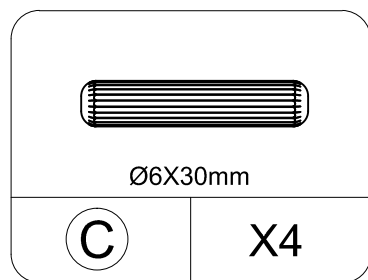

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.


STEP6



Ø15X9.5mm

A

X2



Ø6.5X35mm

B




X2





Ø6X30mm

C

X8

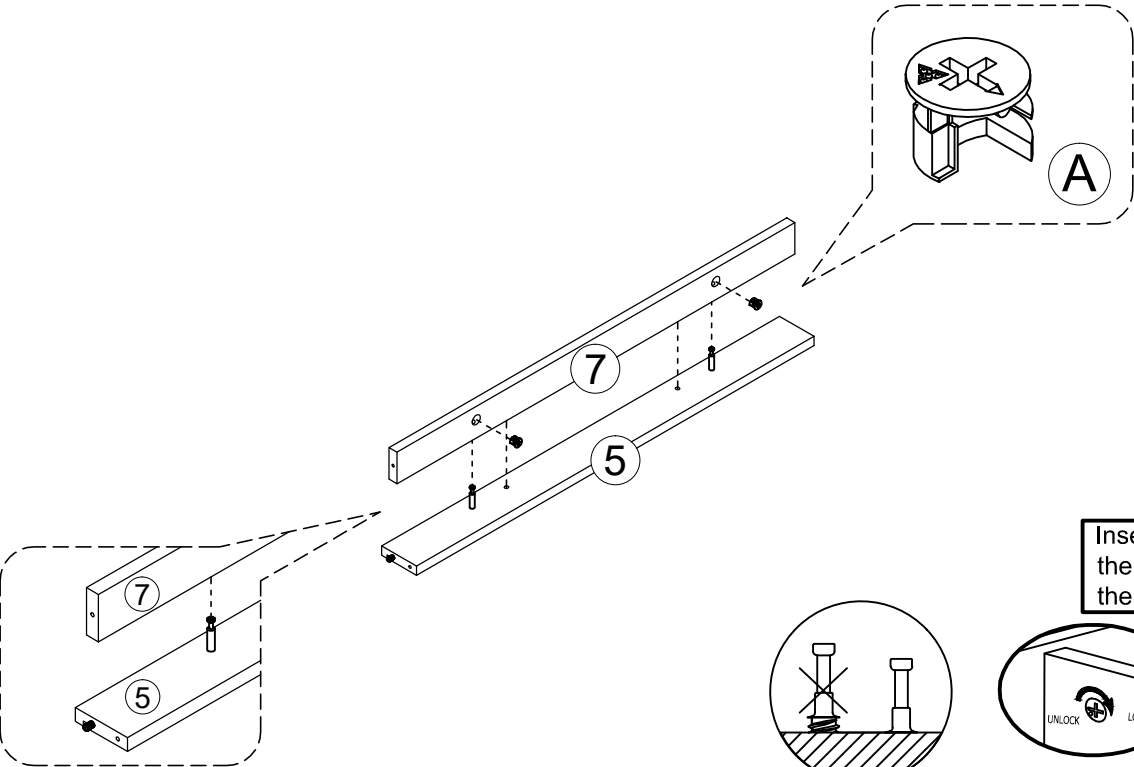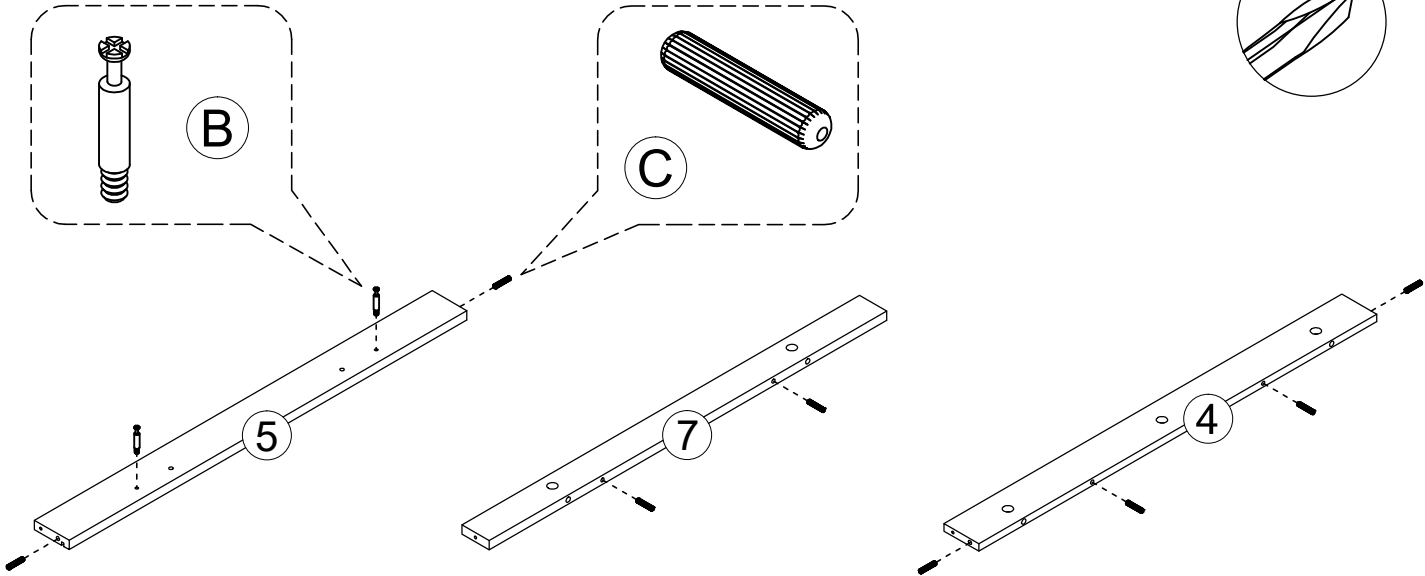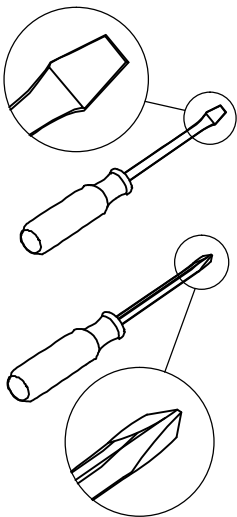


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

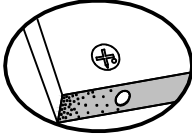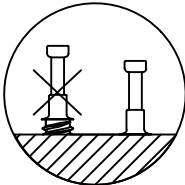

Proper orientation of CAM LOCK

STEP7





Ø5X50mm

E	X10
---	-----



12X40mm

N	X4
---	----

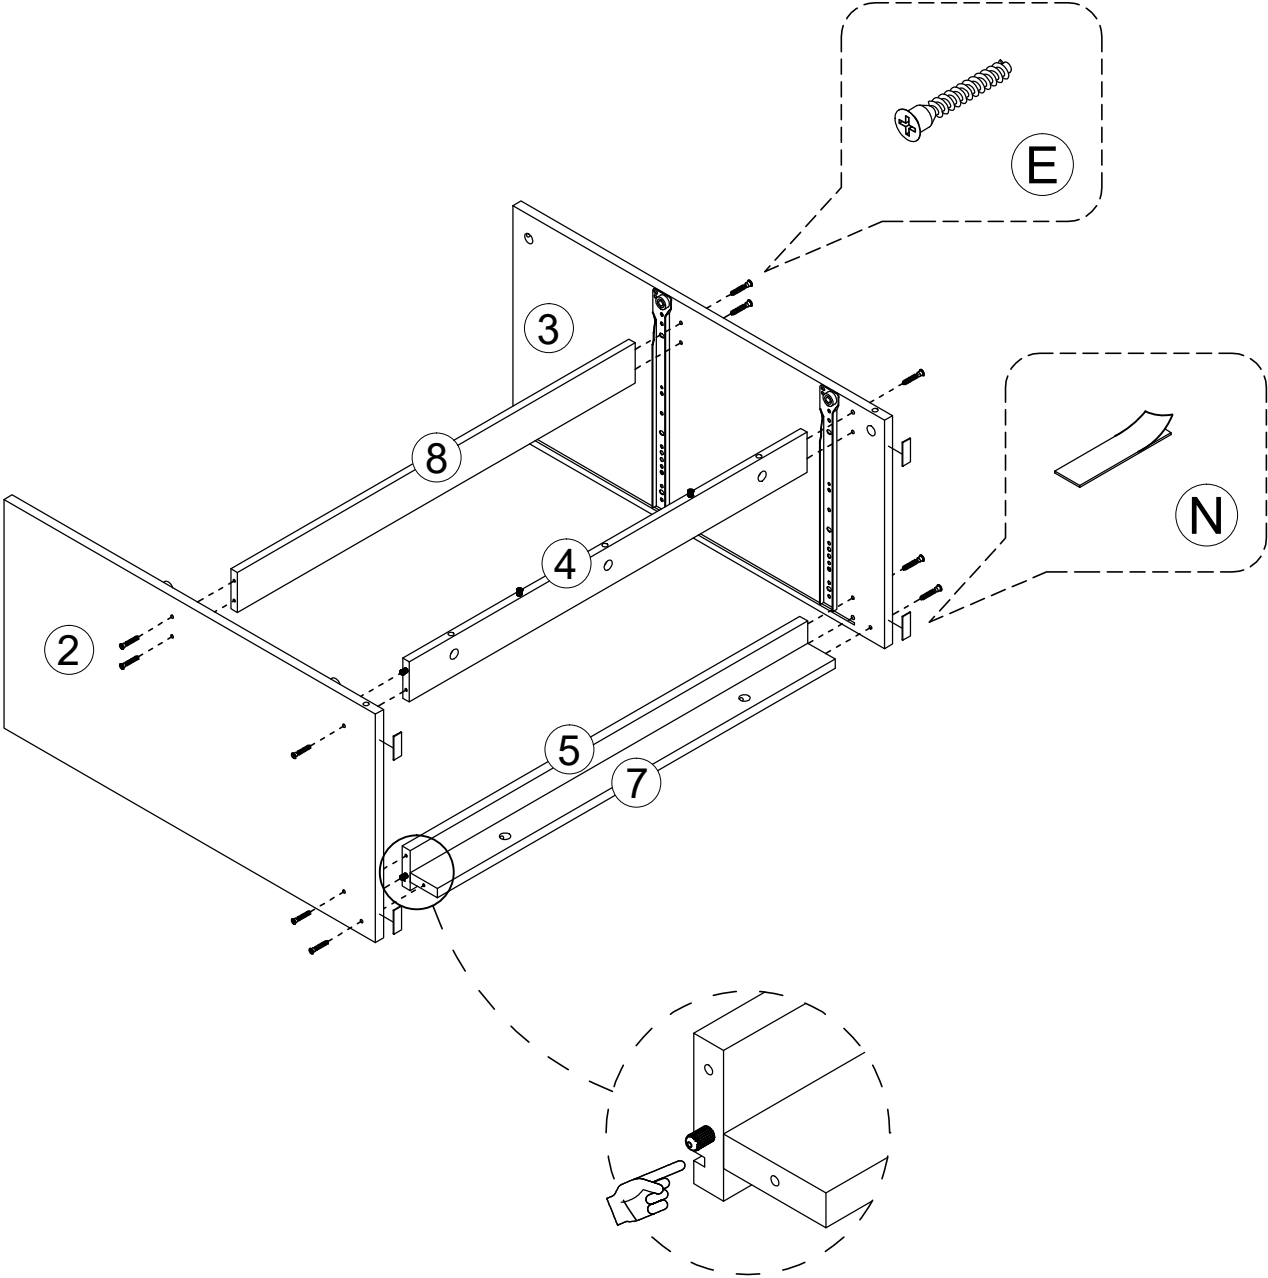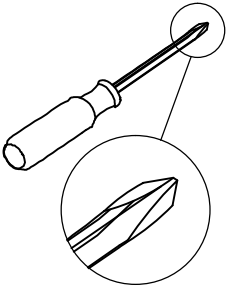


STEP8



Ø15X9.5mm

A




X5





Ø6.5X35mm

B

X5

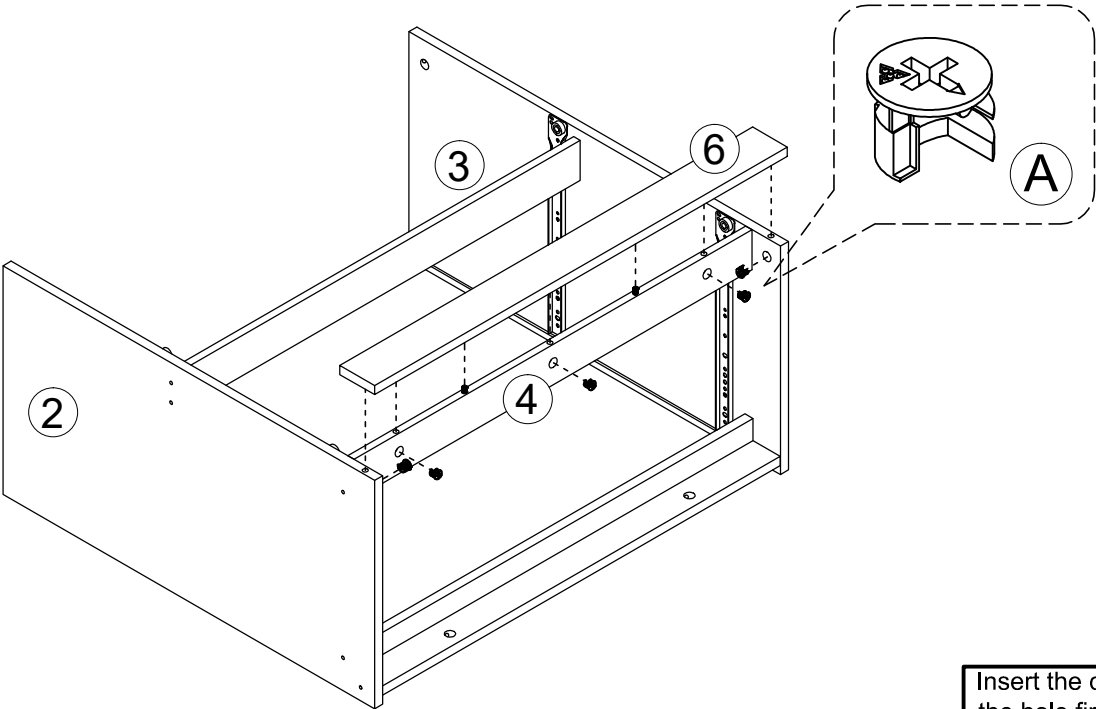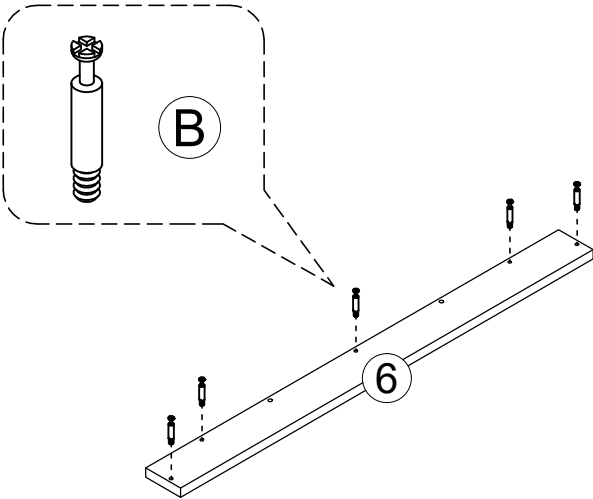
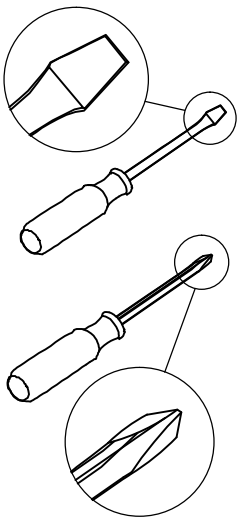


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

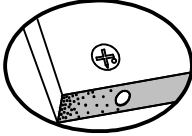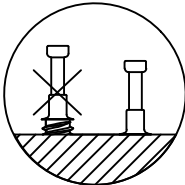

Proper orientation of CAM LOCK

STEP9

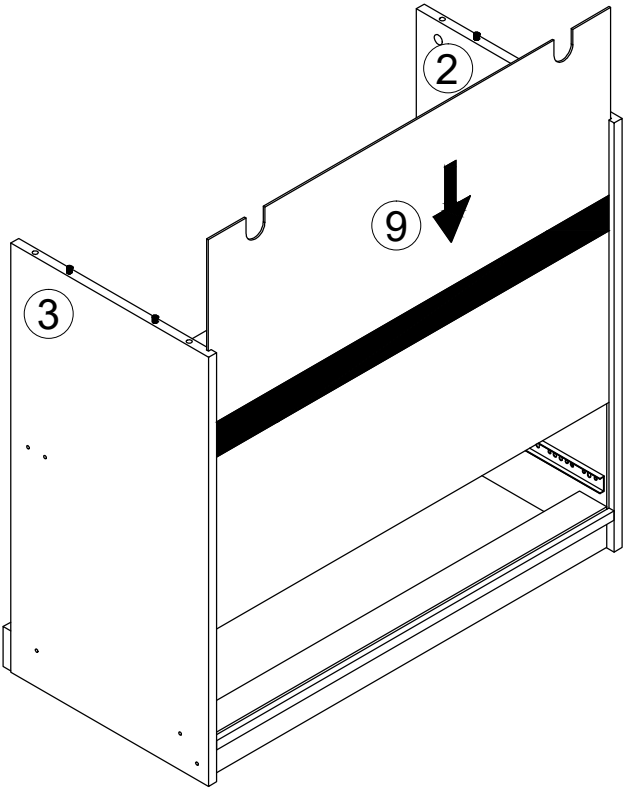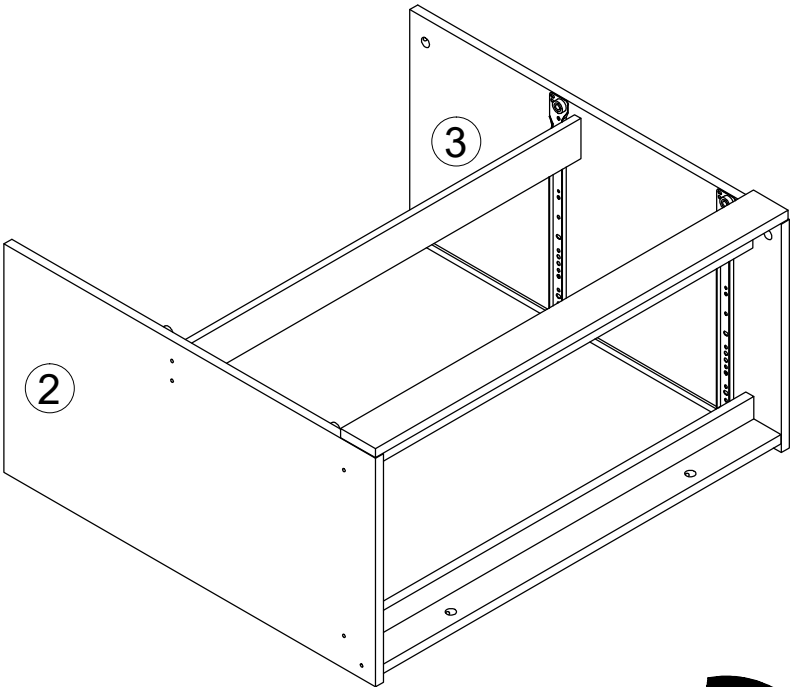


STEP10



Ø15X9.5mm

A


X4



Ø6.5X35mm

B


X4

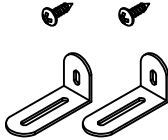

X1set

L




X1set





X1

P

X1

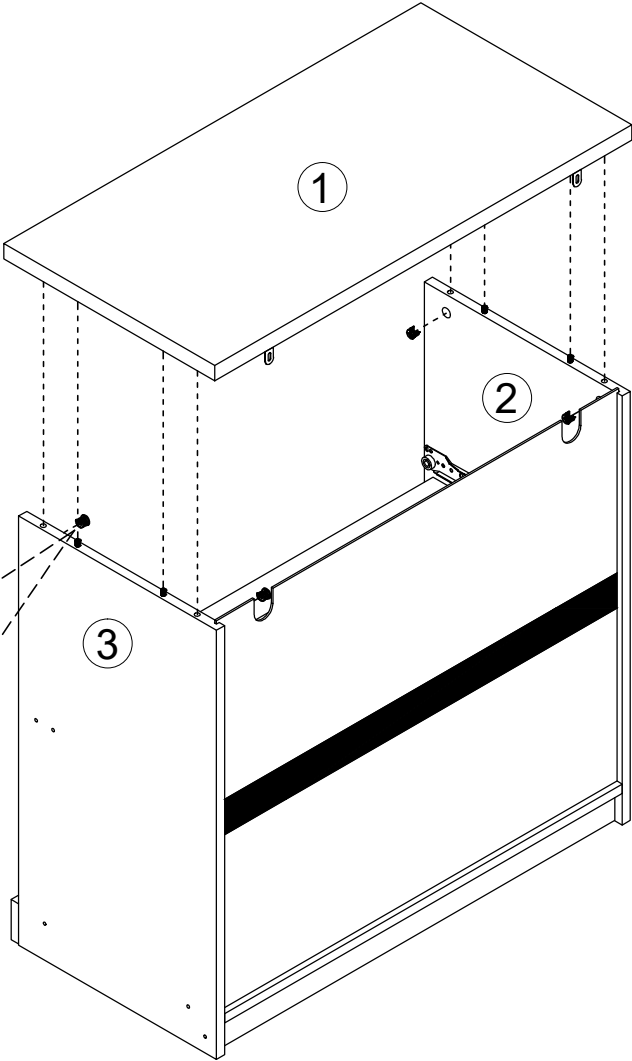
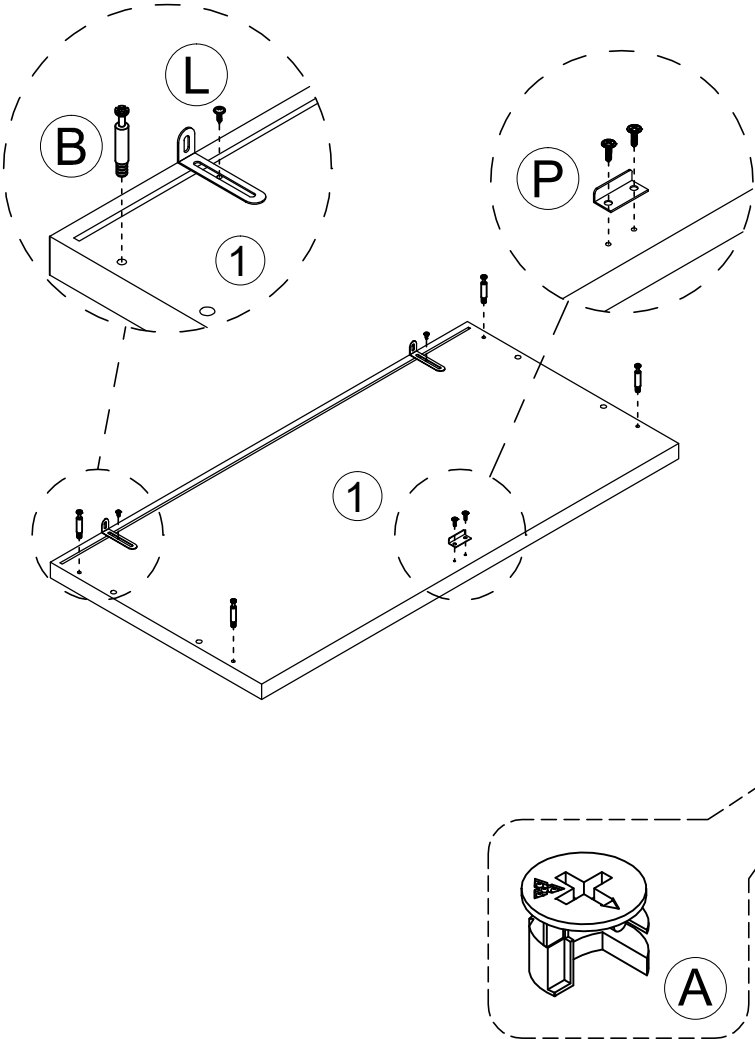
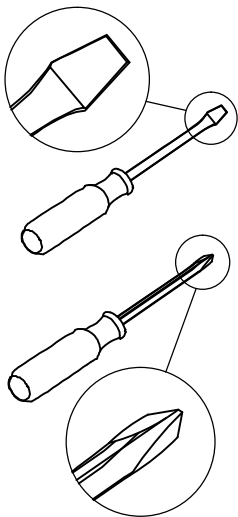


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

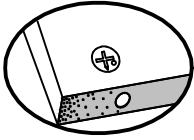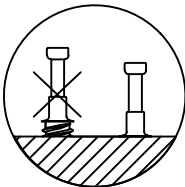


Proper orientation of CAM LOCK

STEP11

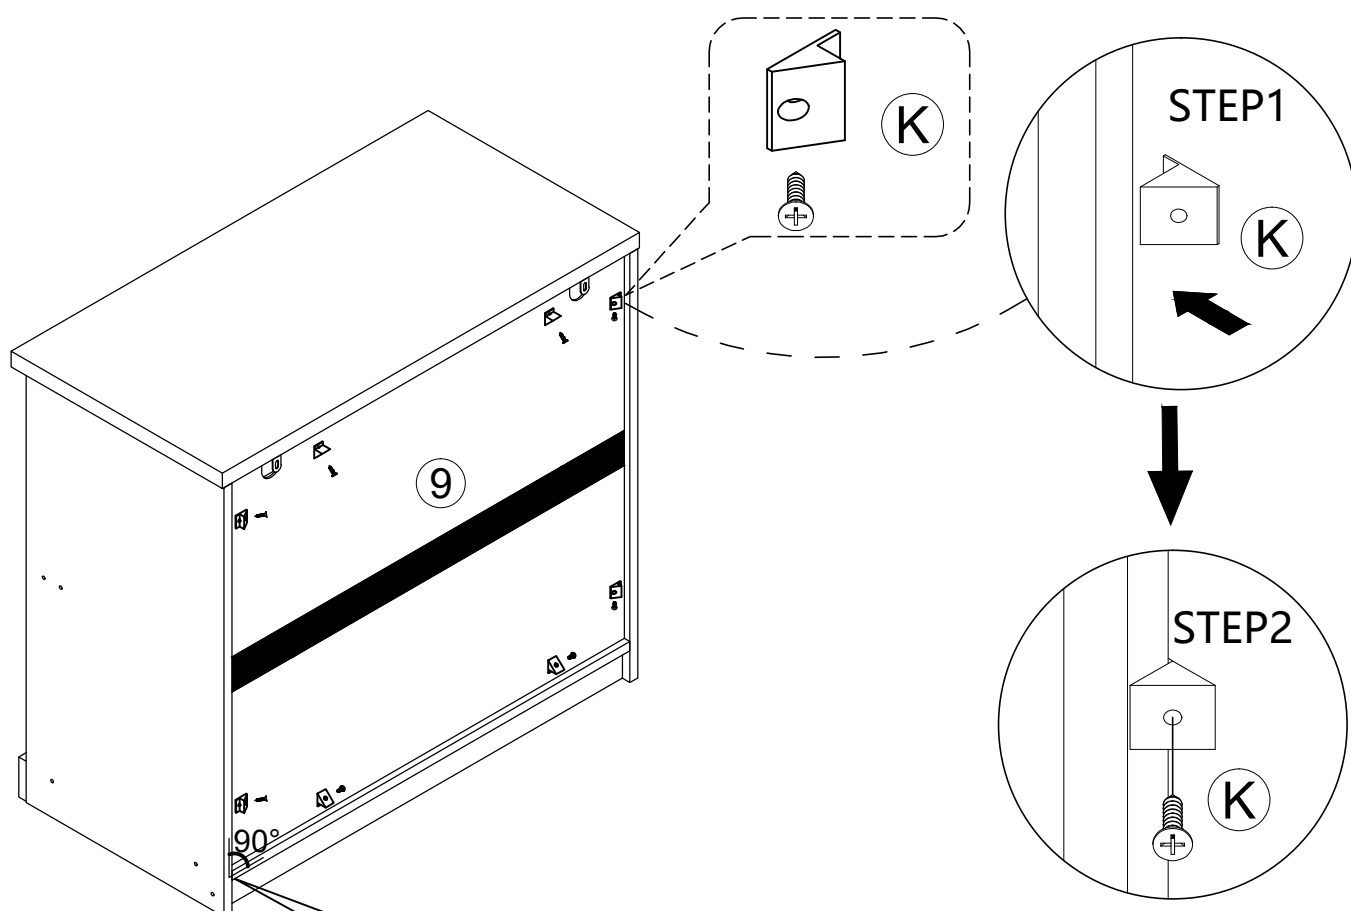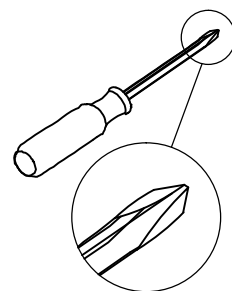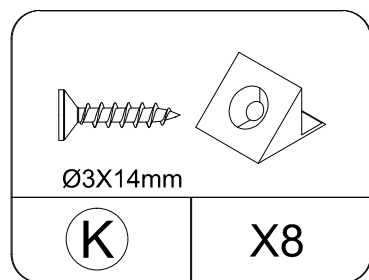


Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP12

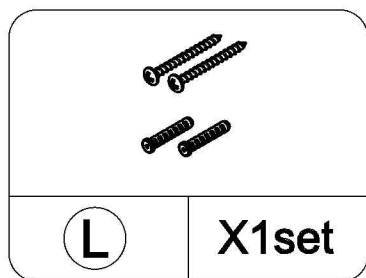


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.



Install the tipping restraint hardware

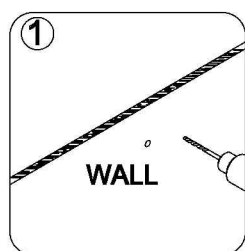



1.drill two Ø6 holes on the wall

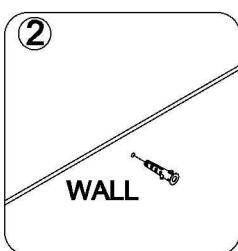





2.put two anchors in the holes

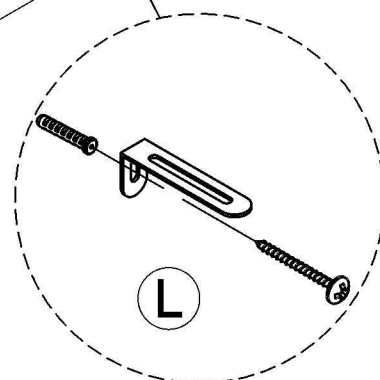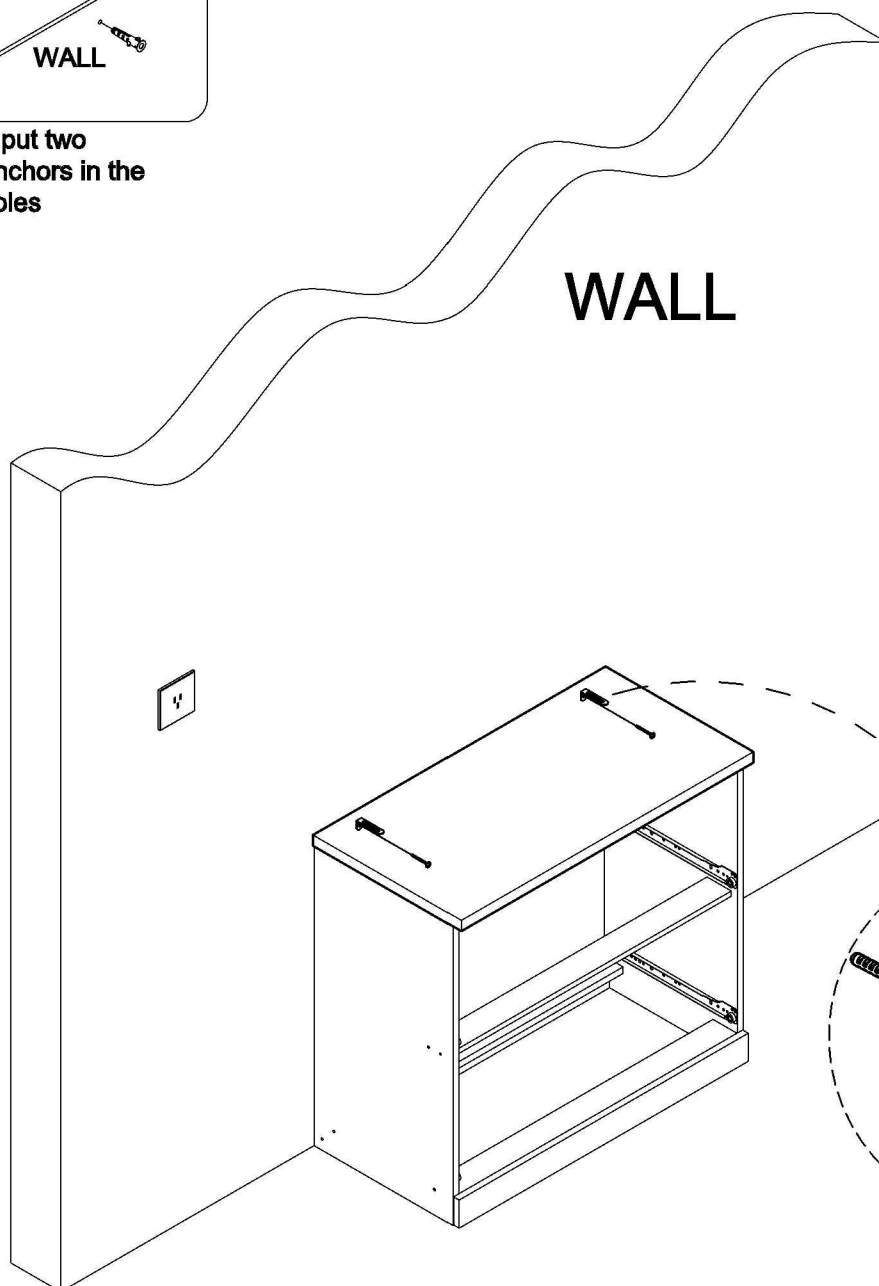


STEP13

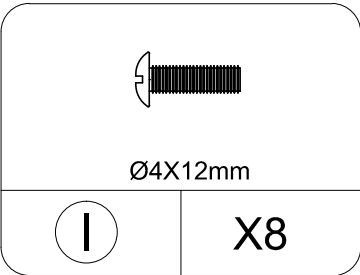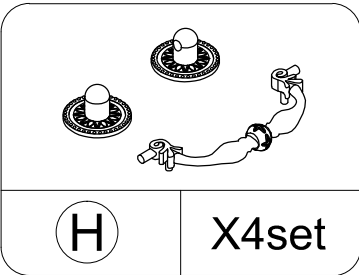

Ø4X12mm

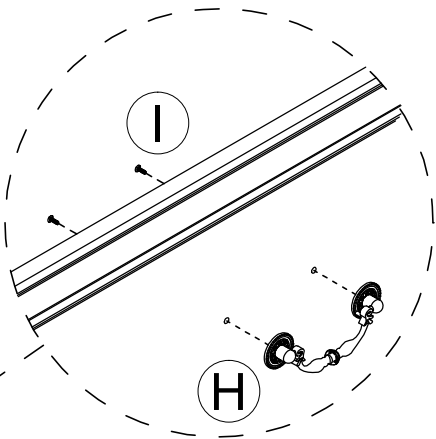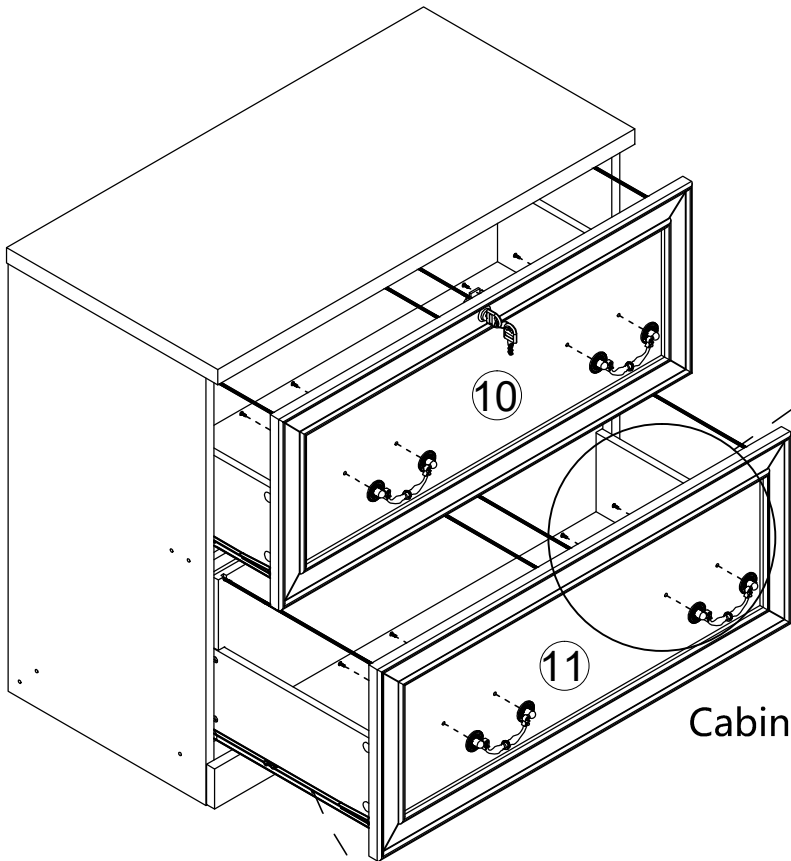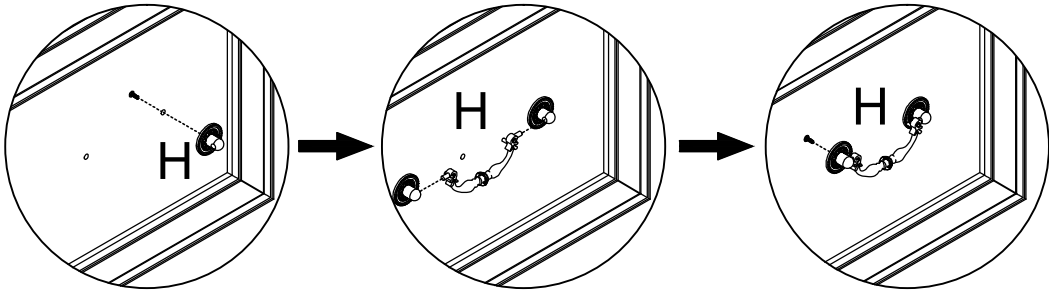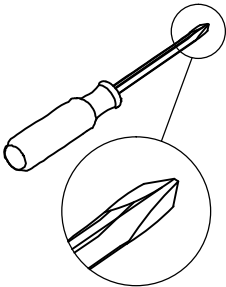

Cabinet Slide

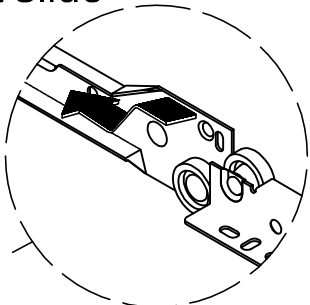

Drawer Slide

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.
Do not remove!

⚠ ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.
Ne pas enlever!

⚠ WARNING



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.
Nicht entfernen!