



Assembly Manual

Bar Chair

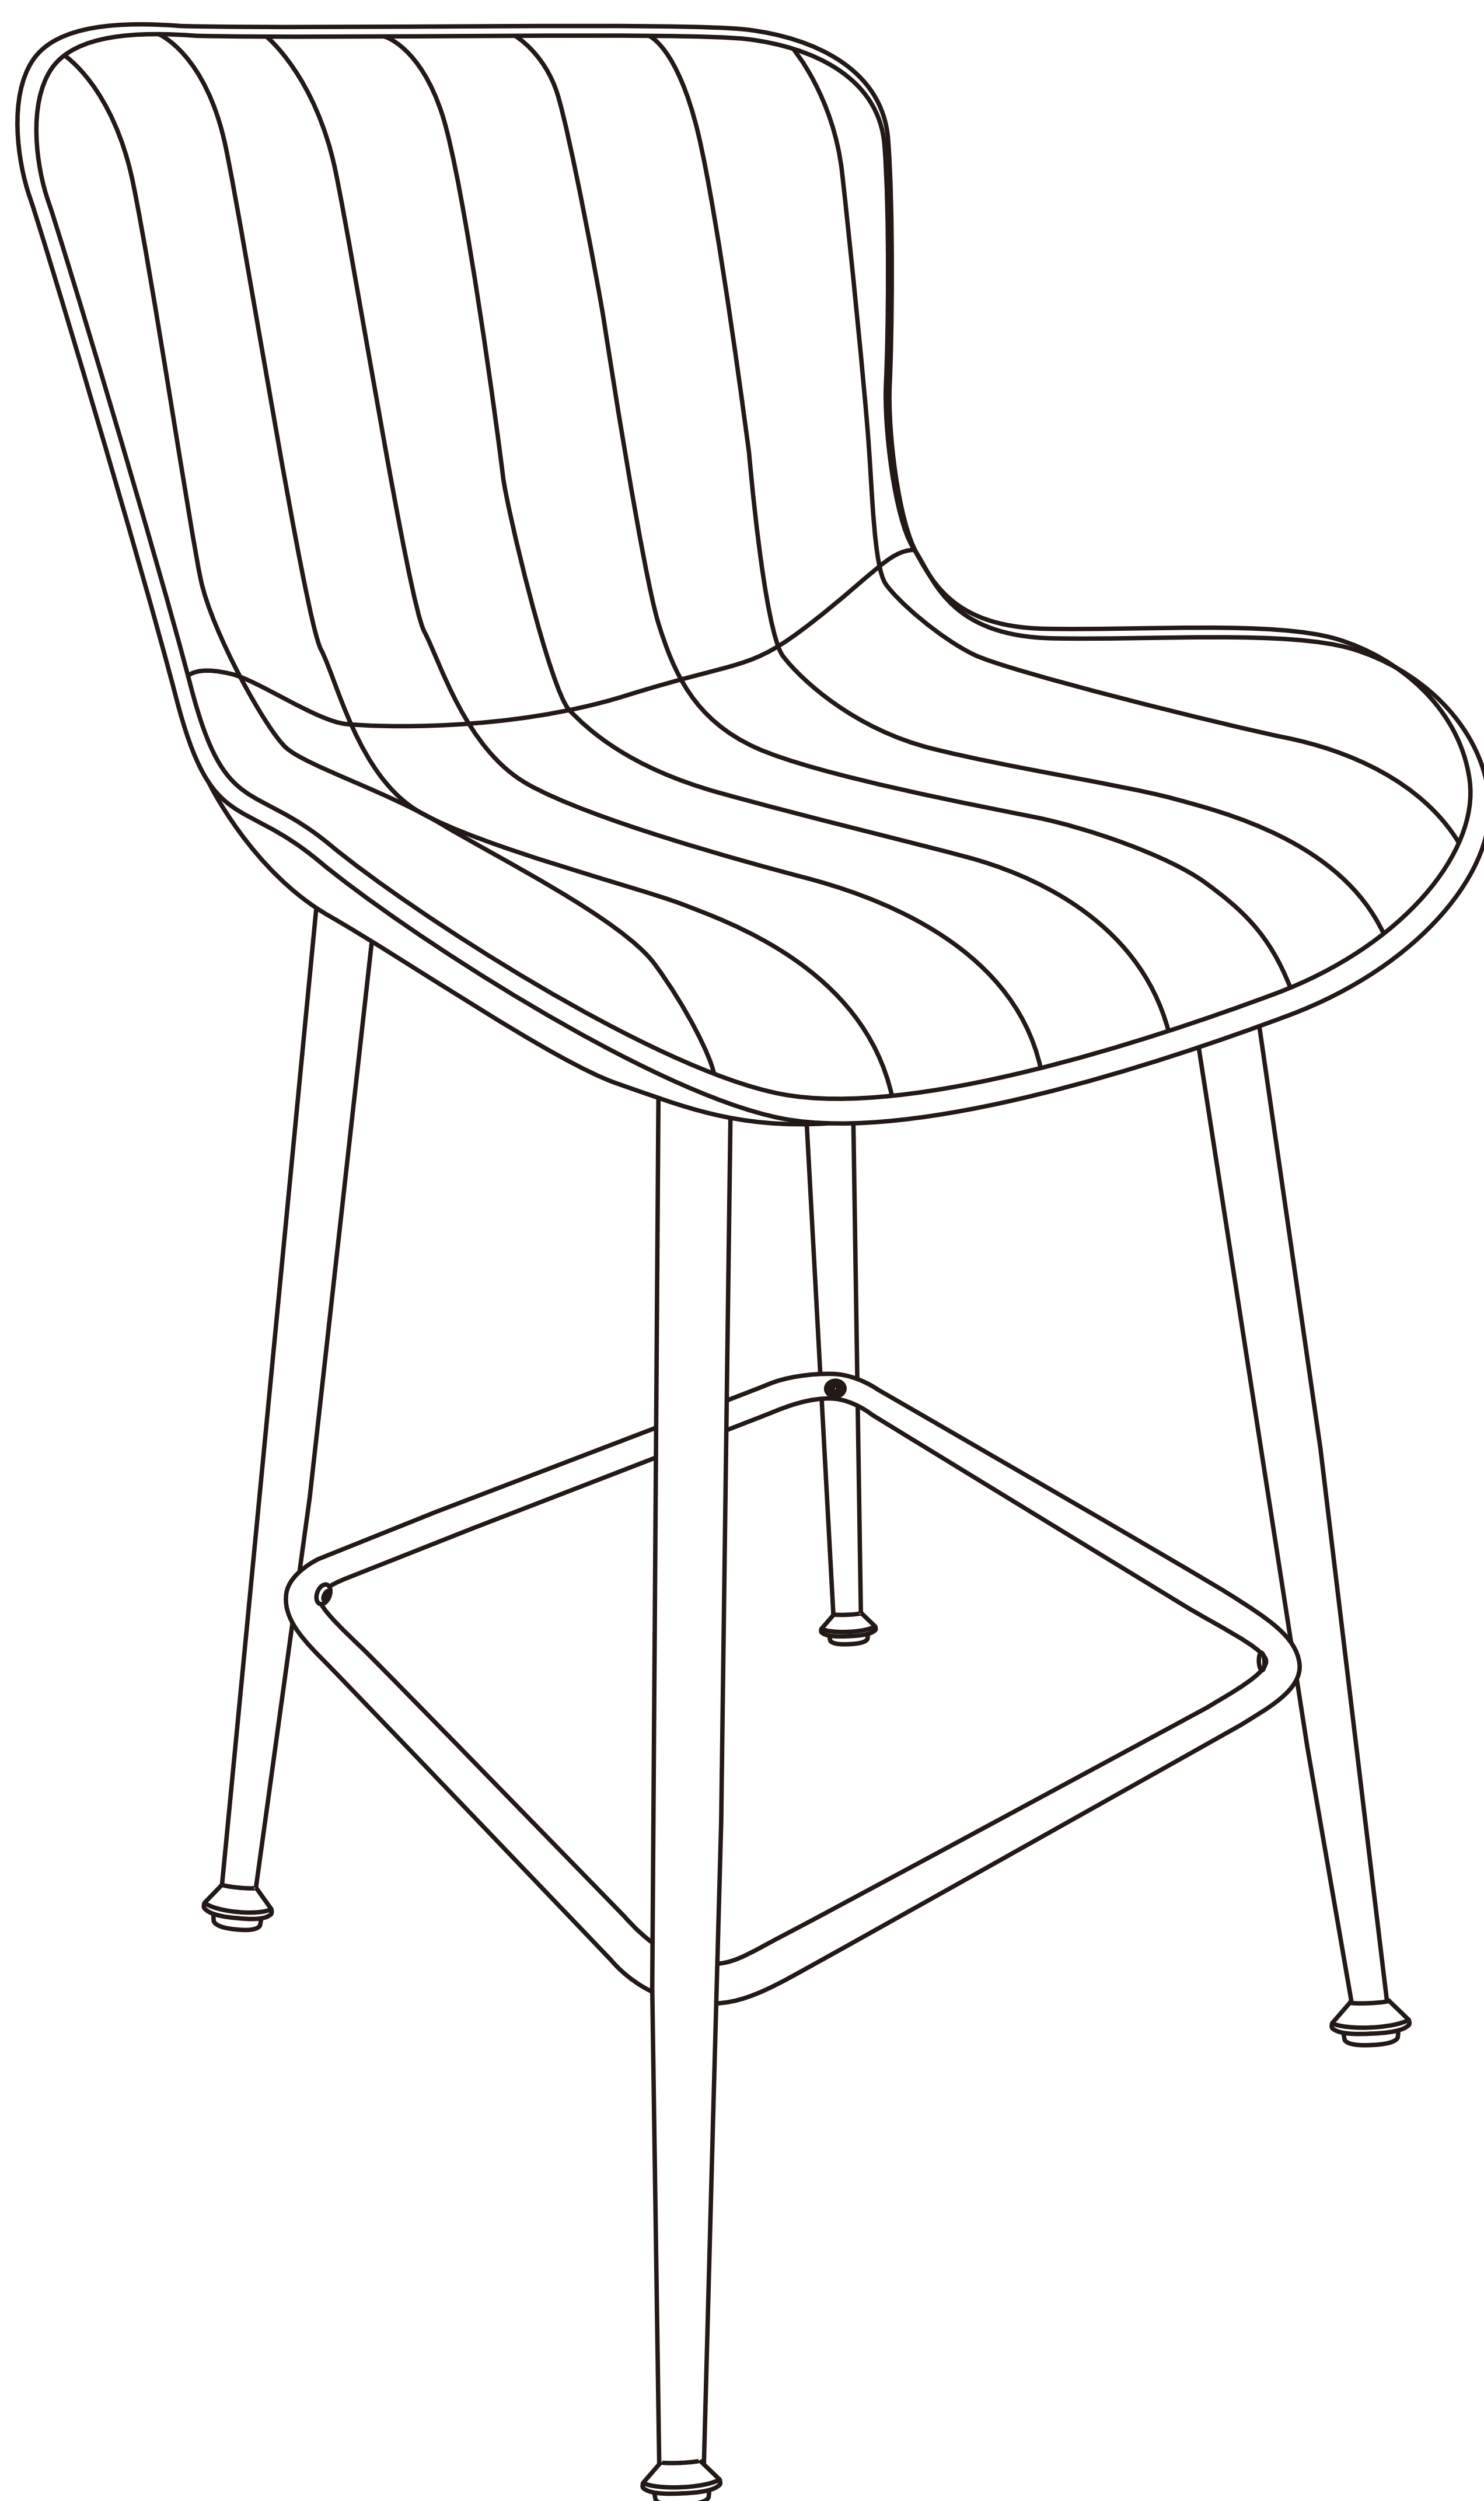


Exploded View

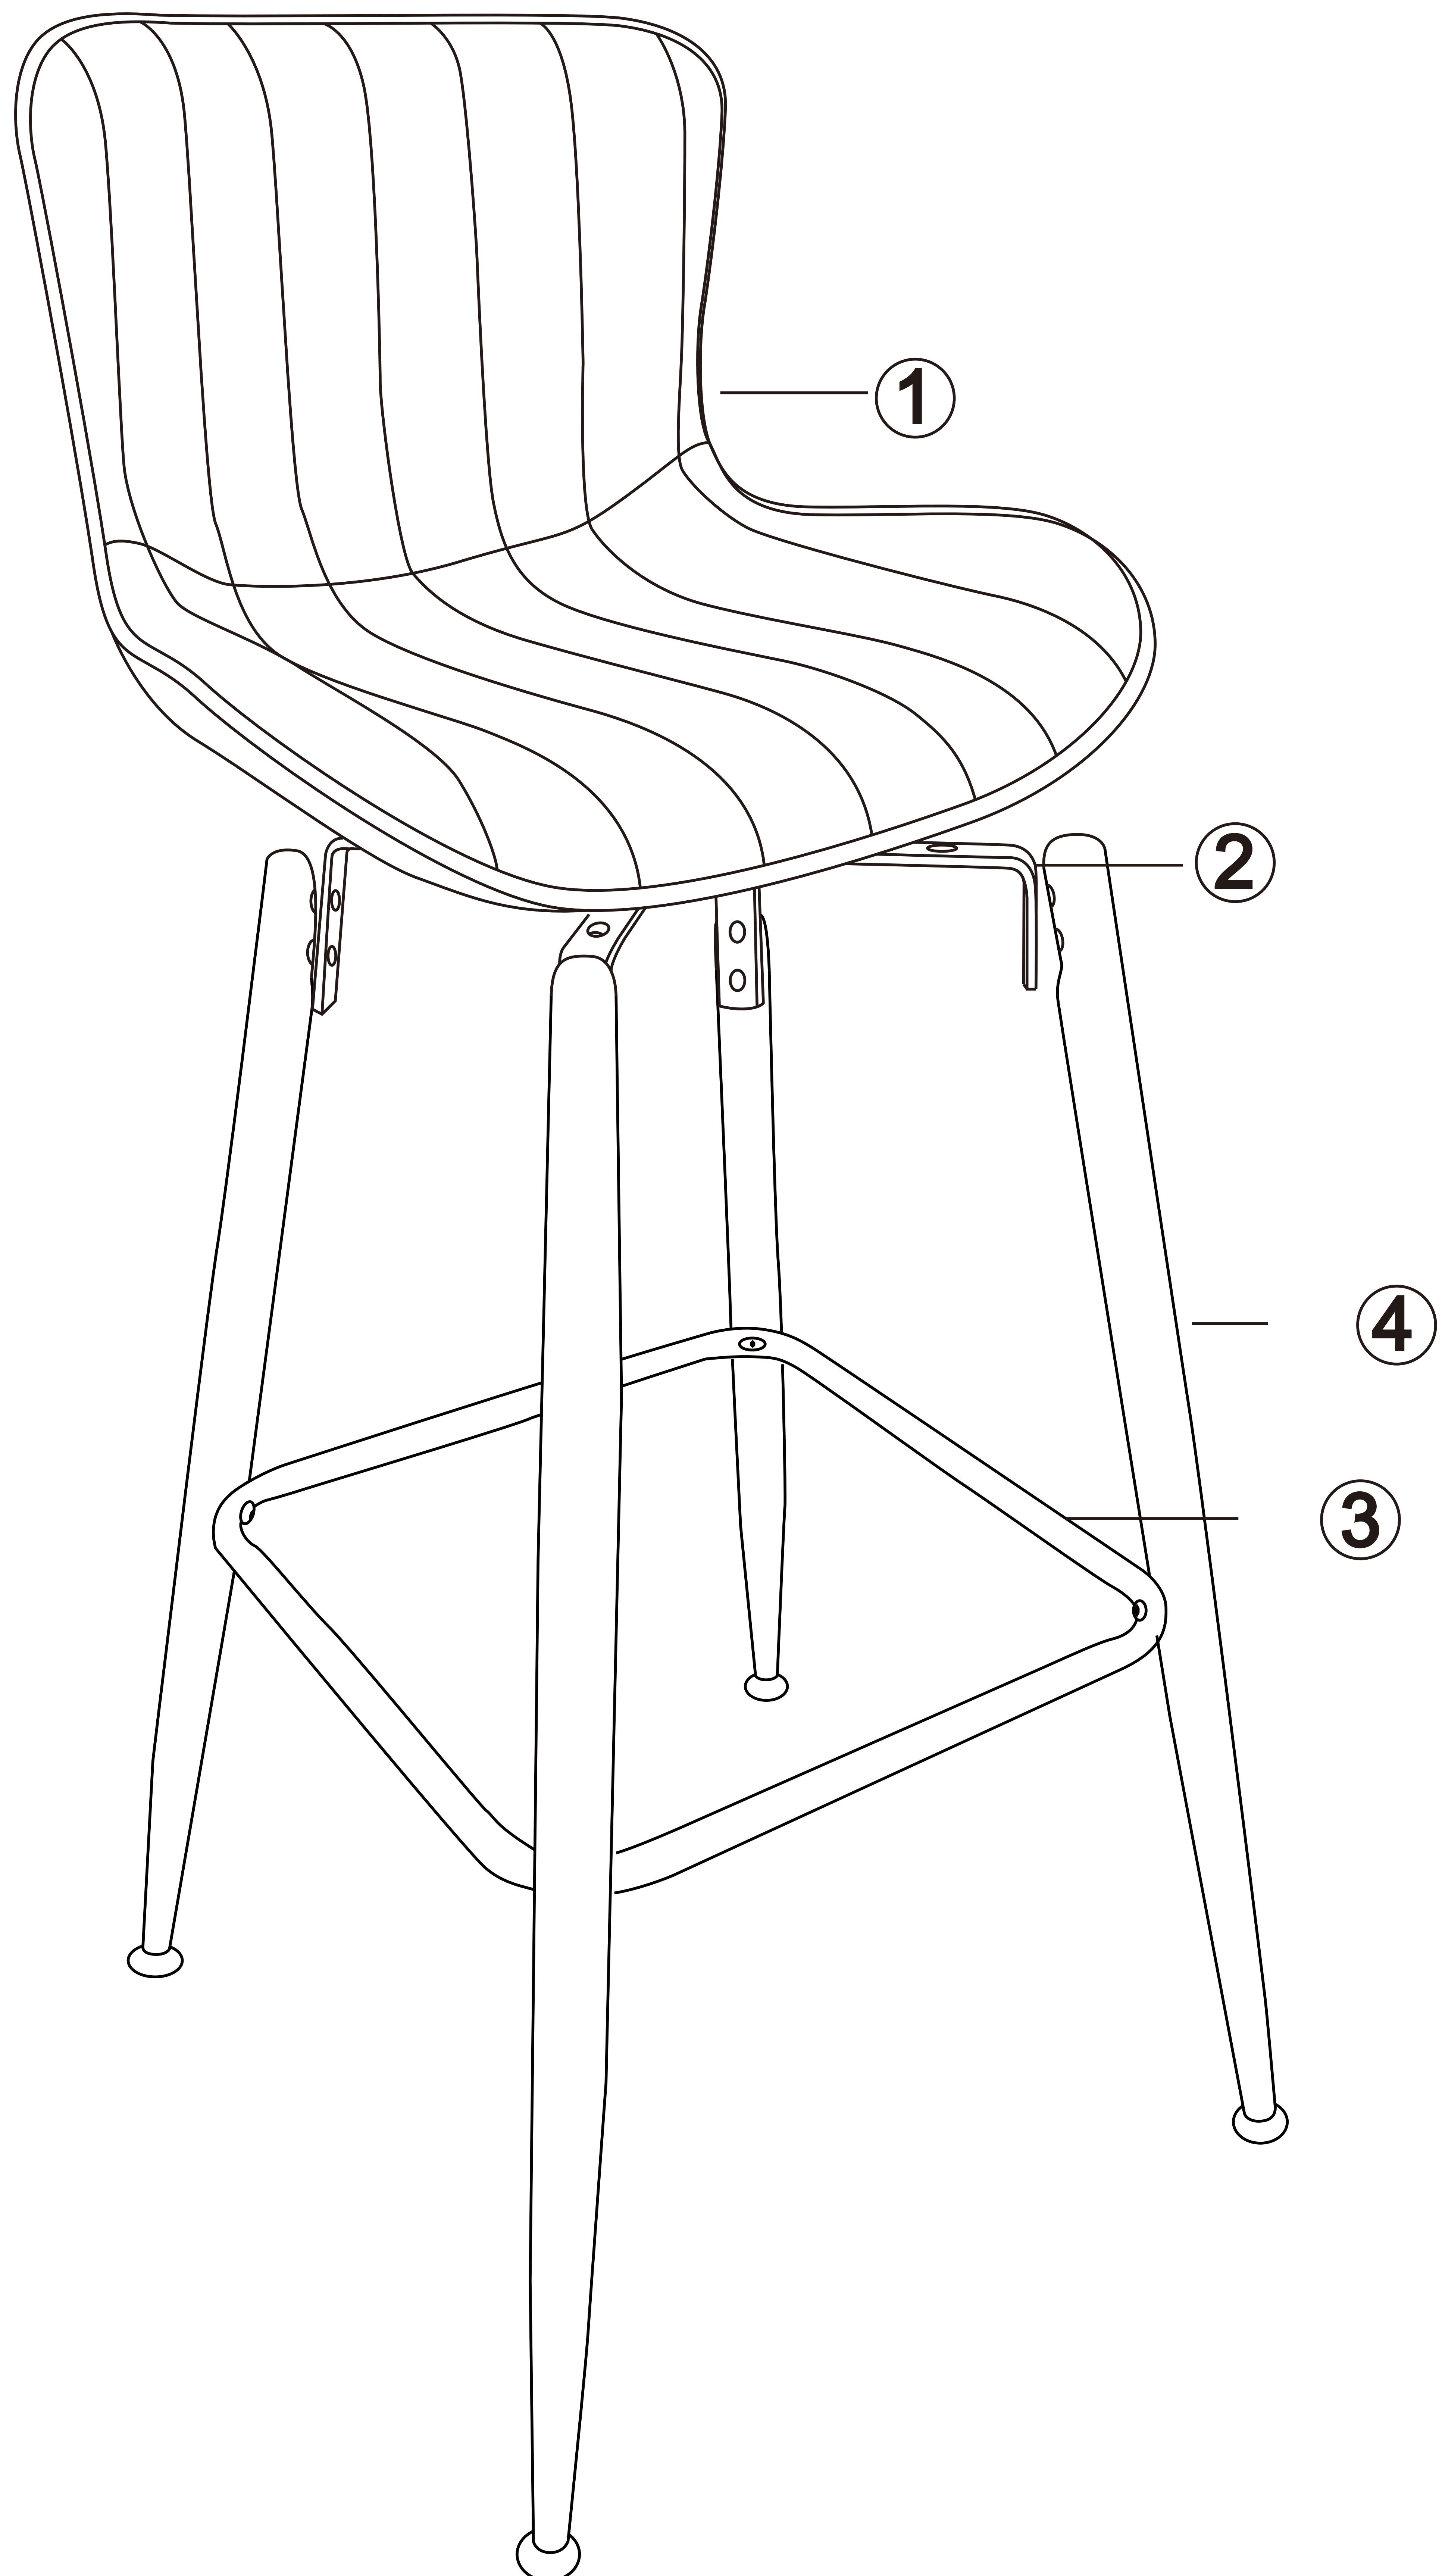


Components List

10 min

Assembly Time

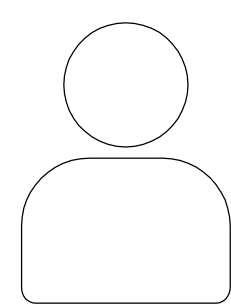


One People

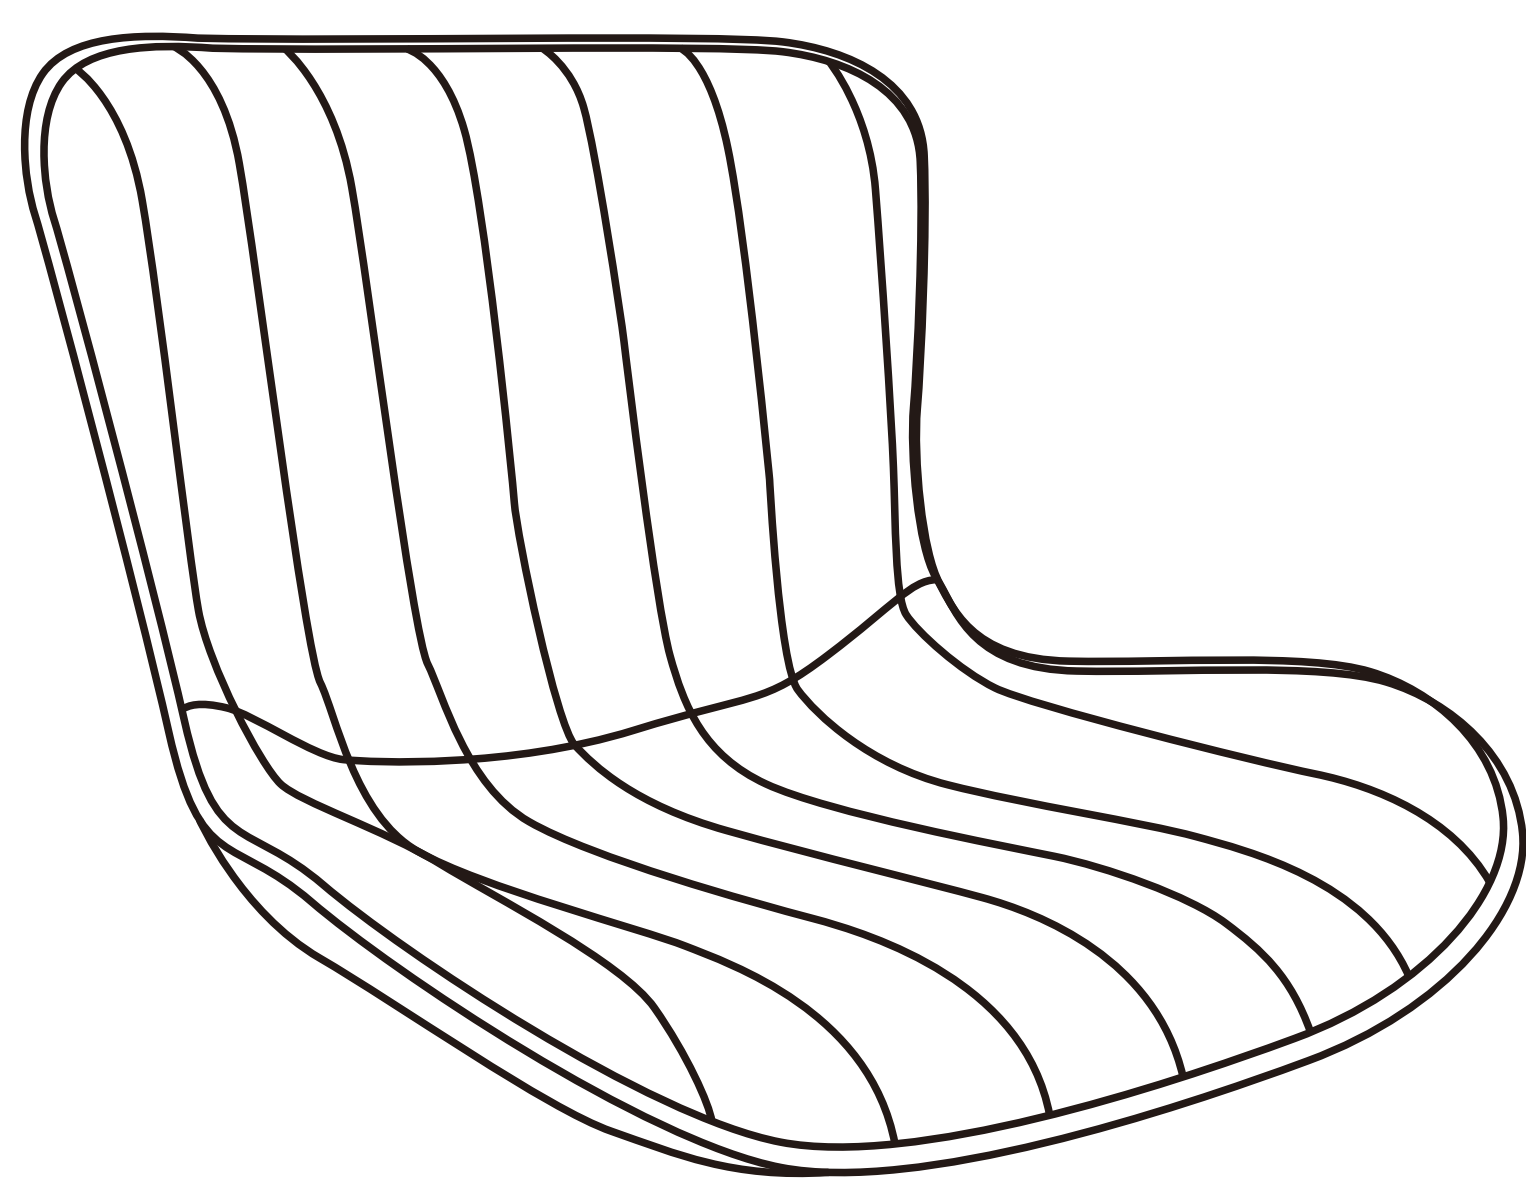


1

Seat (X1)

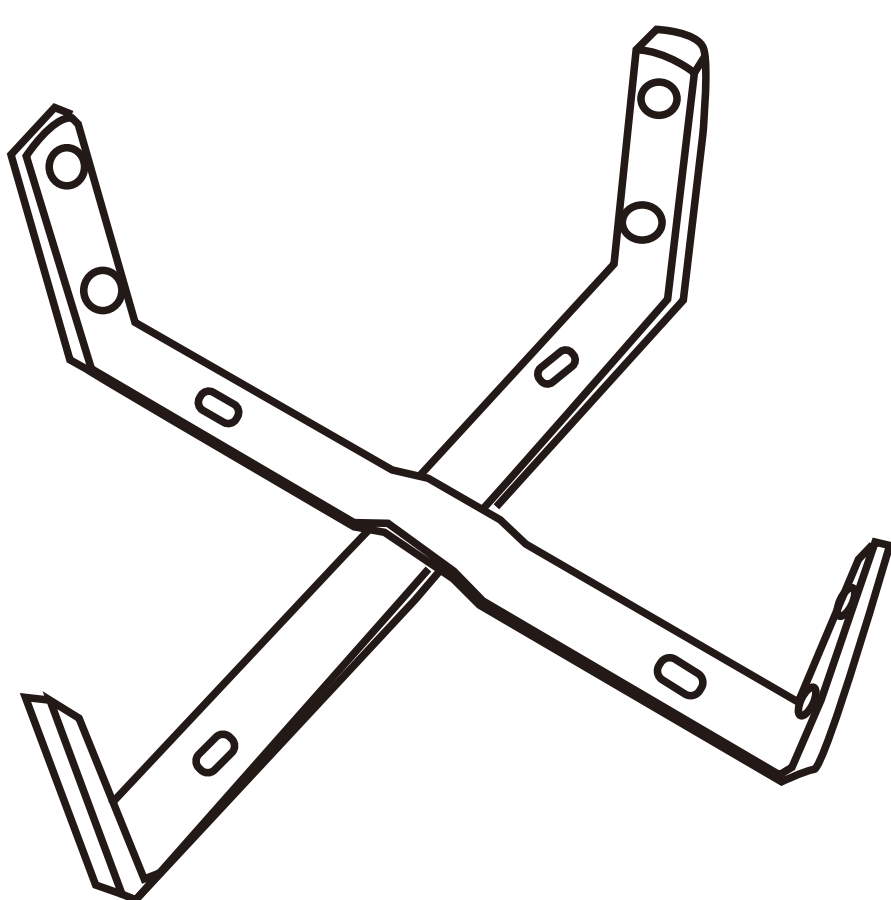


2

Metal cross (X1)

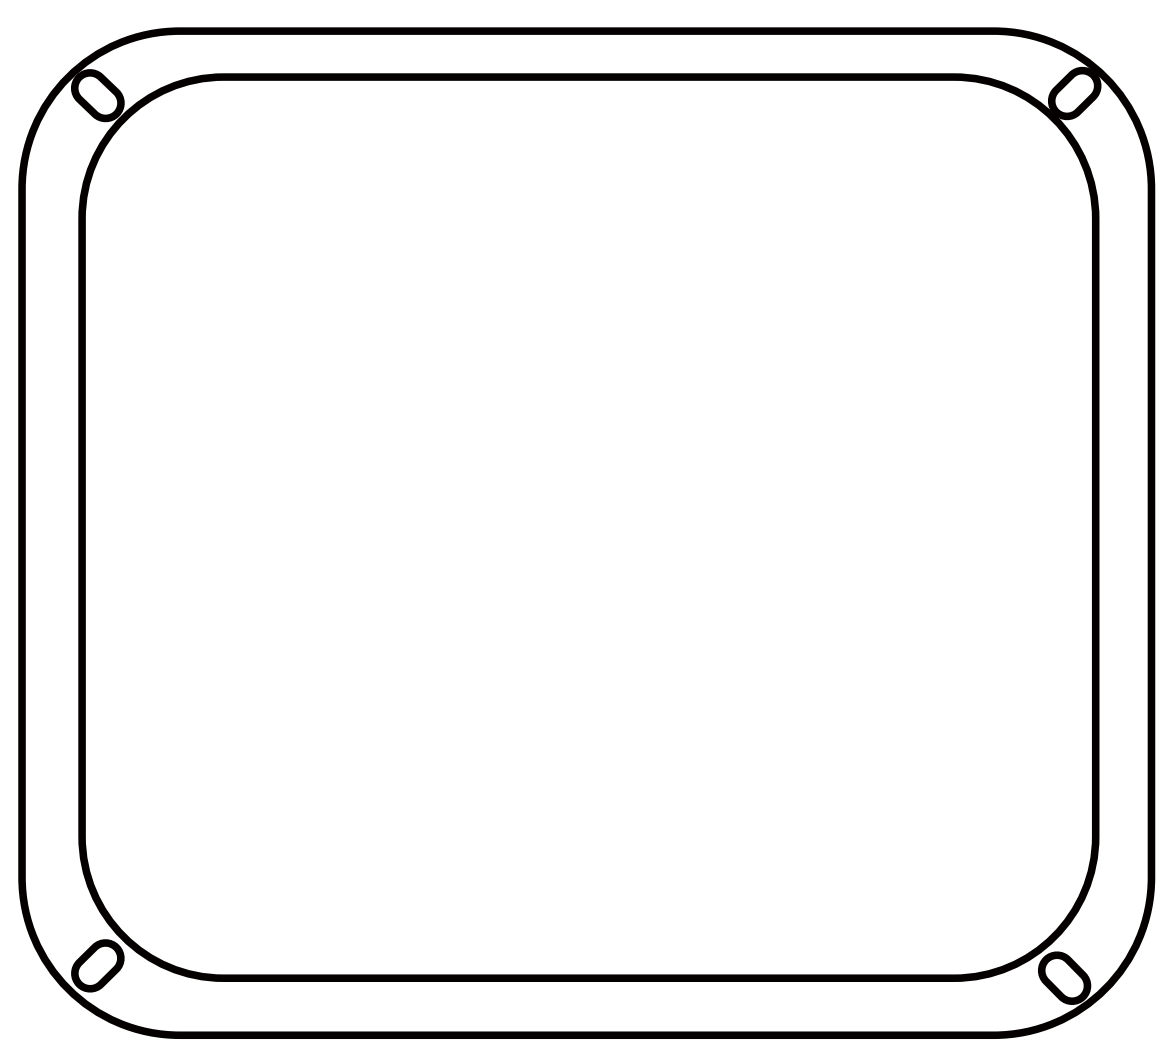

3




Footrest (X1)

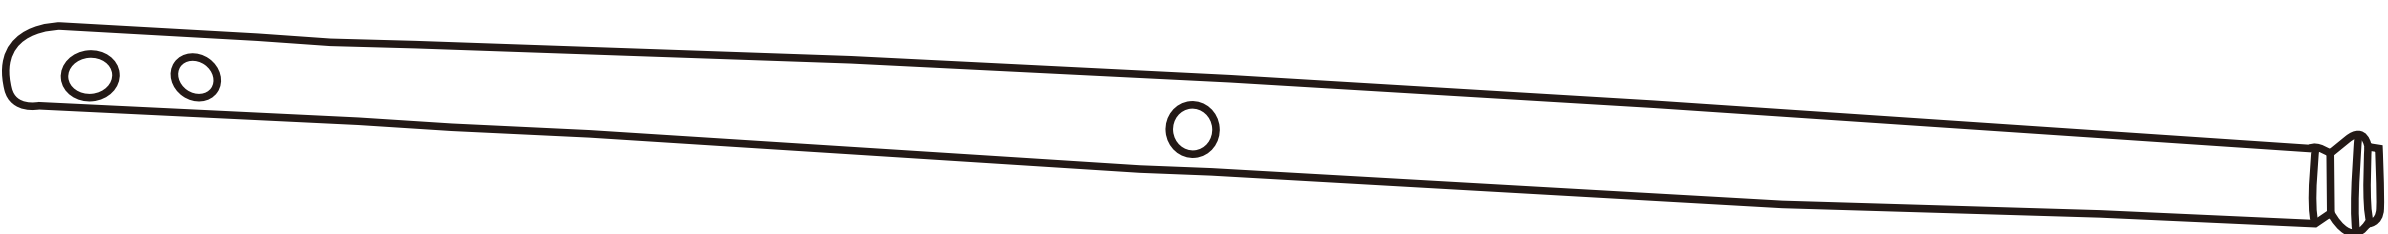

4

Metal legs (X4)

Components list

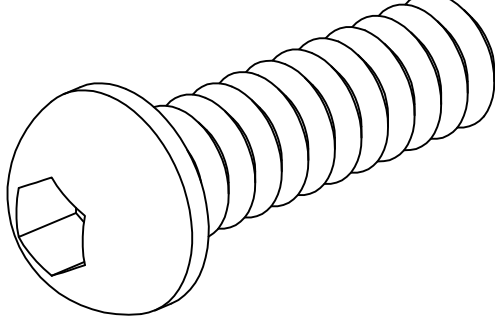
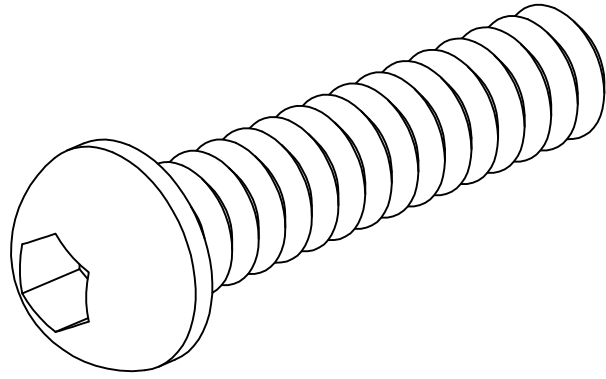
A			B			C		
								
Bolt	M6x20	12+2	Bolt	M6x25	4+1	Allen wrench		1

Note:The number after “+” sign indicates the extra piece(s).

Assembly Instruction



STEP 1

Attach the metal cross(2) to the metal legs (4) using bolts(A) and Allen wrench(C). Tighten all the screws 70% so that you can adjust slightly during the process of assembly.

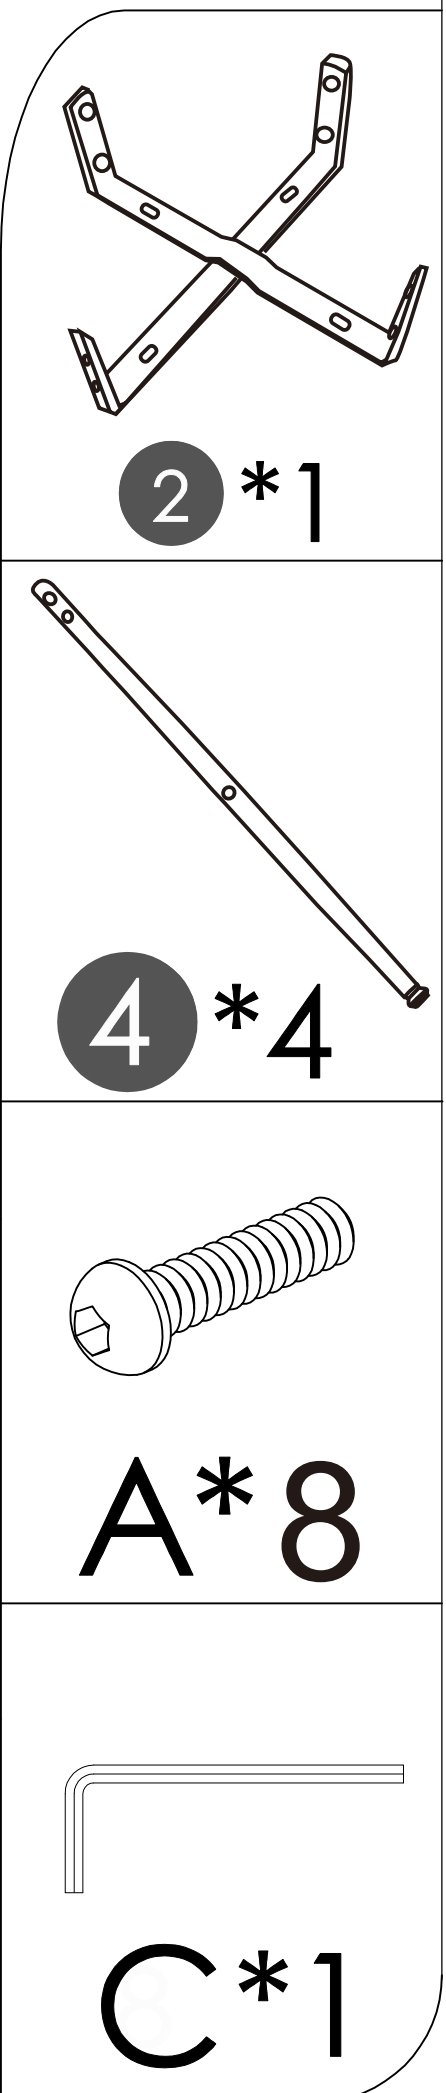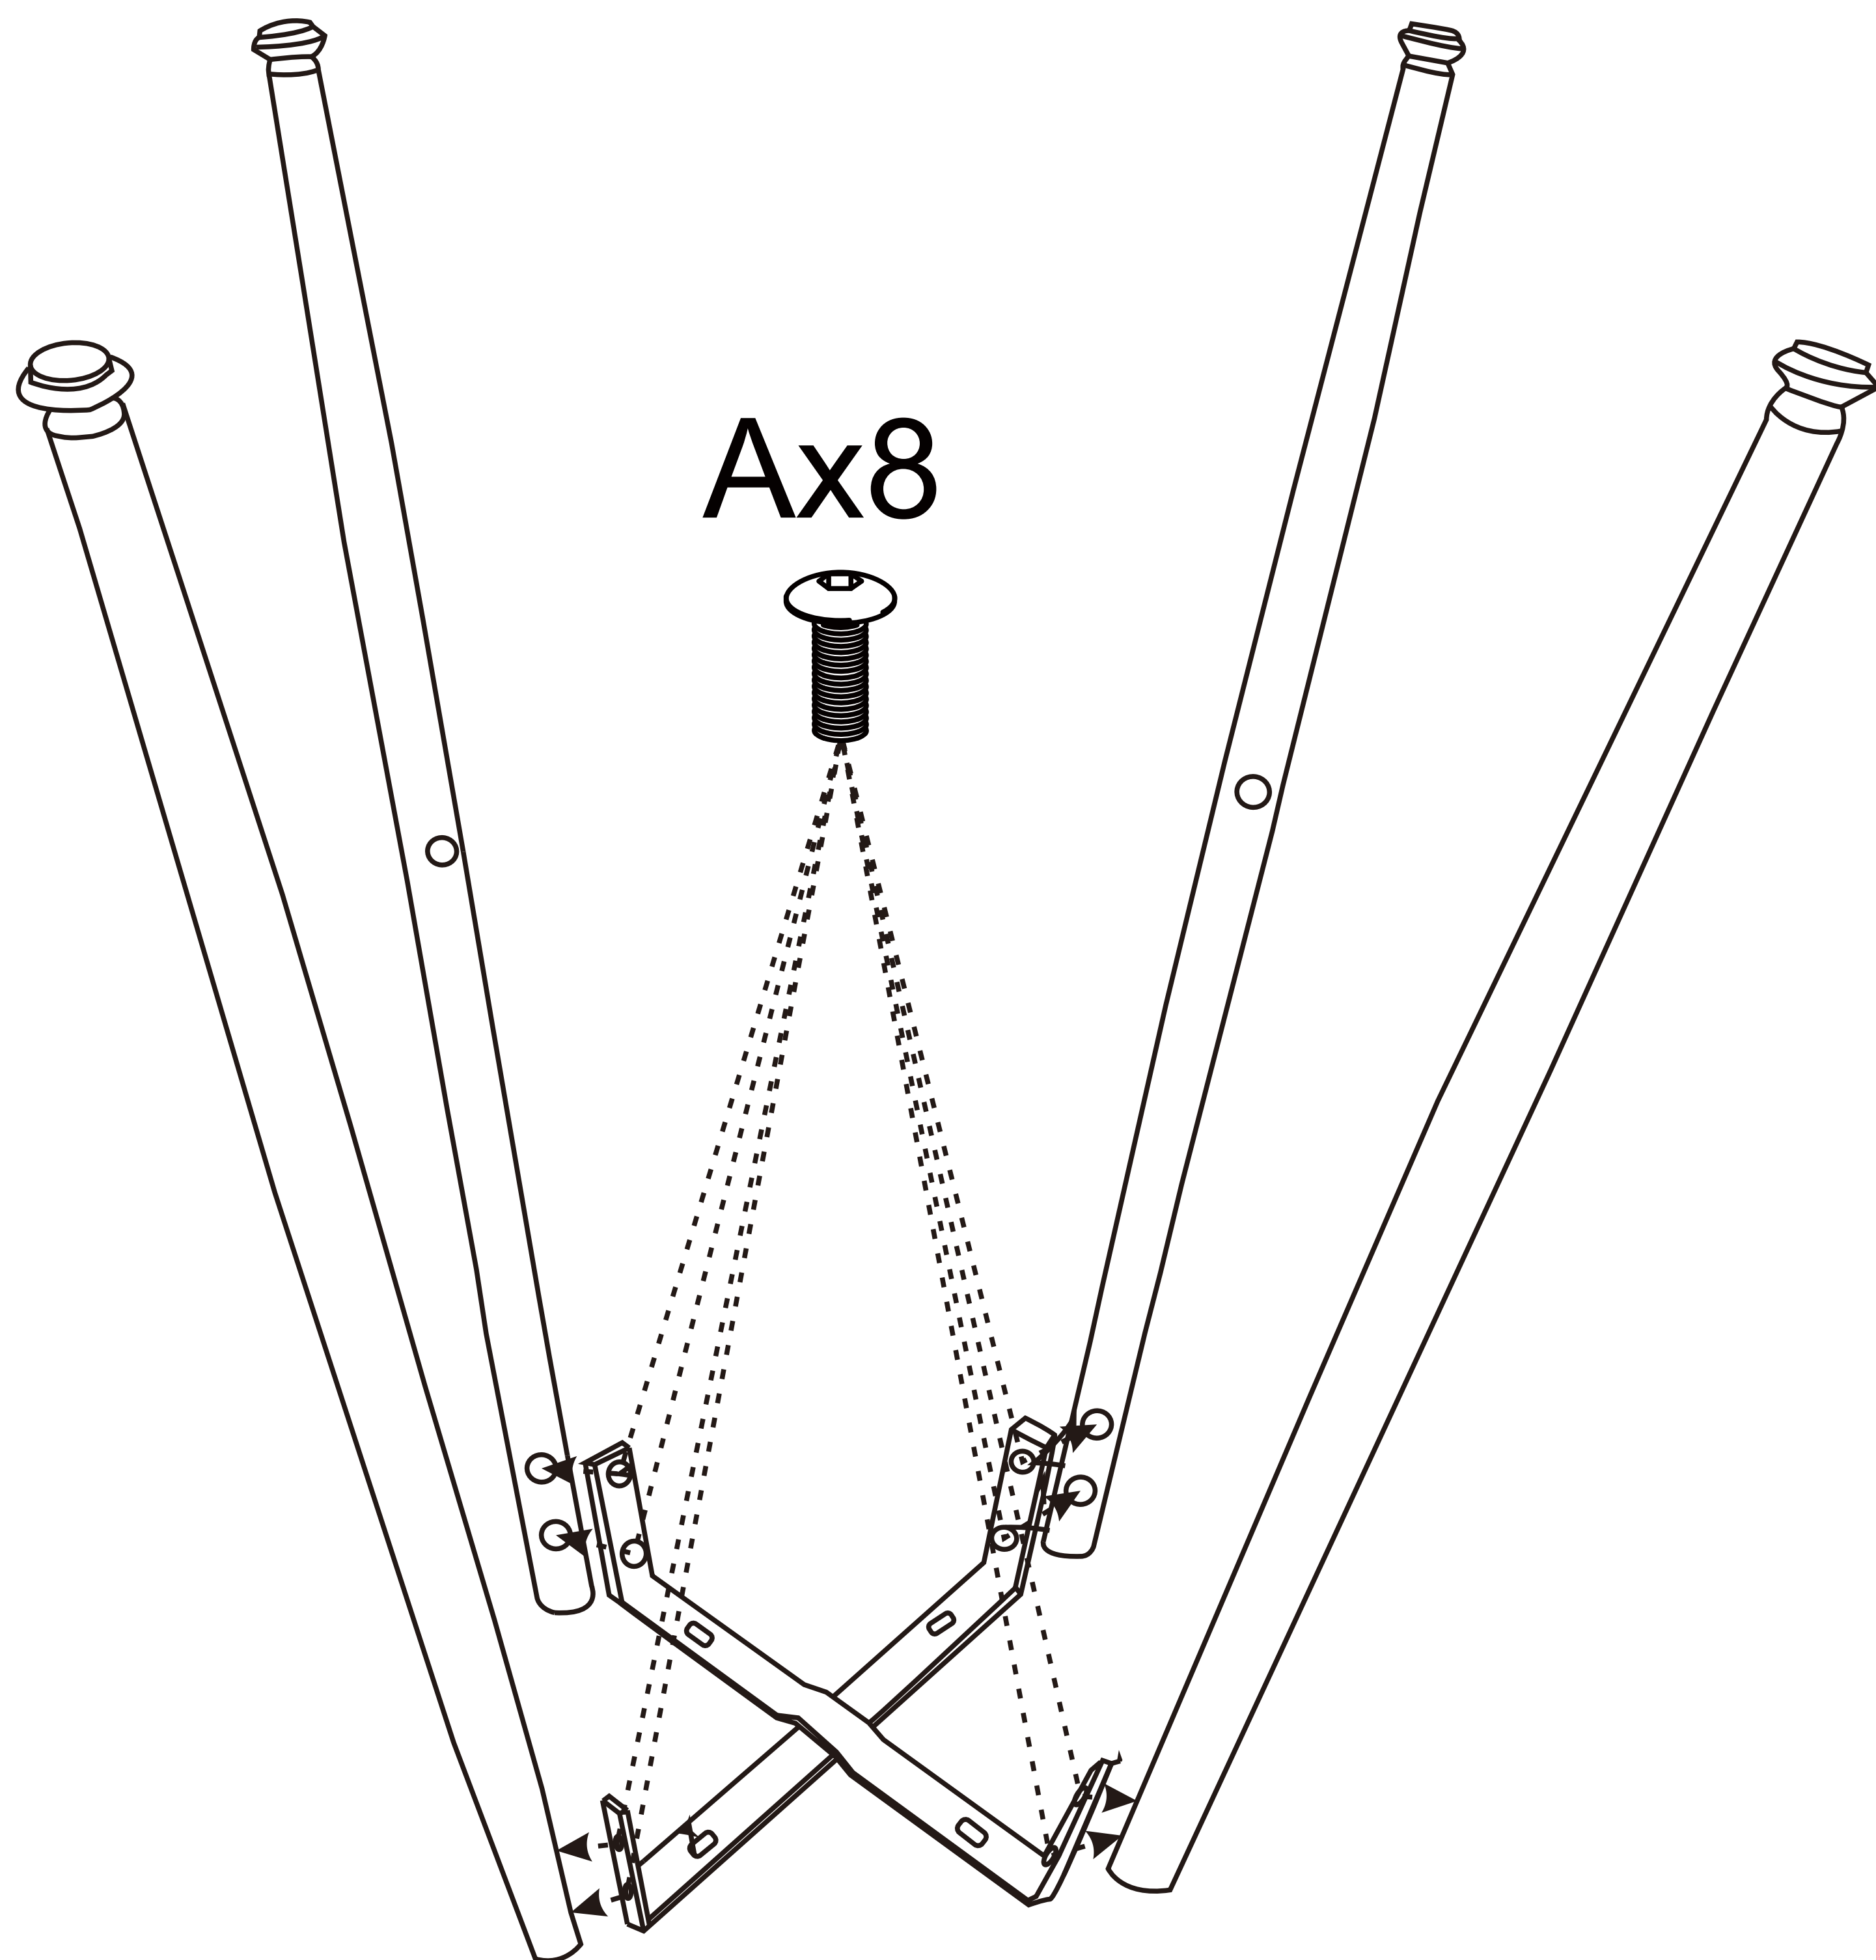

STEP 2

Attach the footrest(3) to the metal legs (4) using bolts(B) and Allen wrench(C). Tighten all the screws 70% so that you can adjust slightly during the process of assembly.

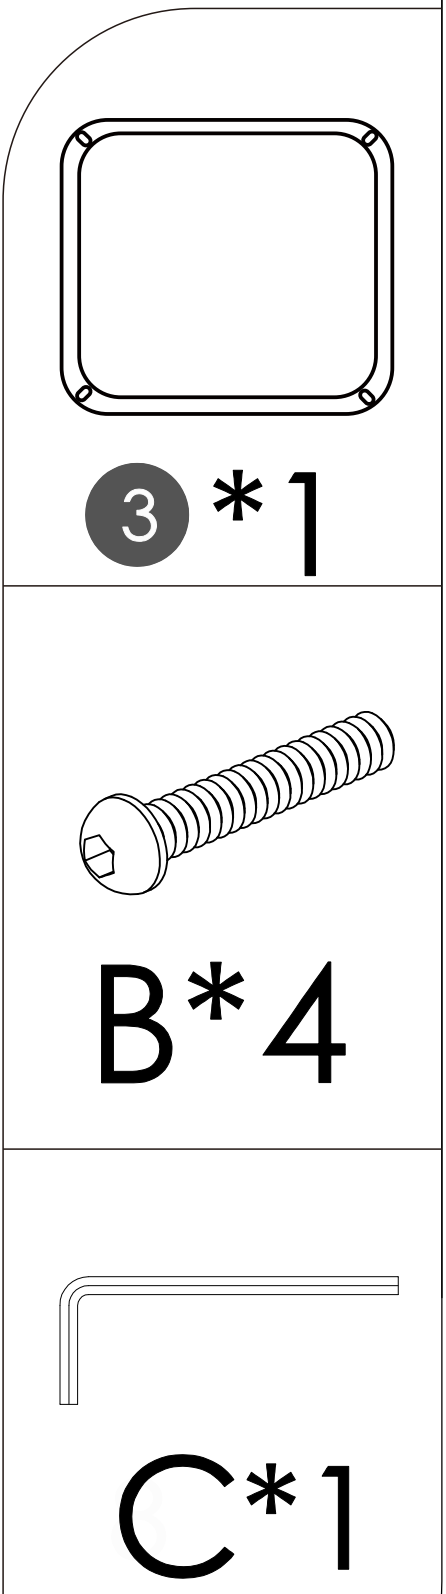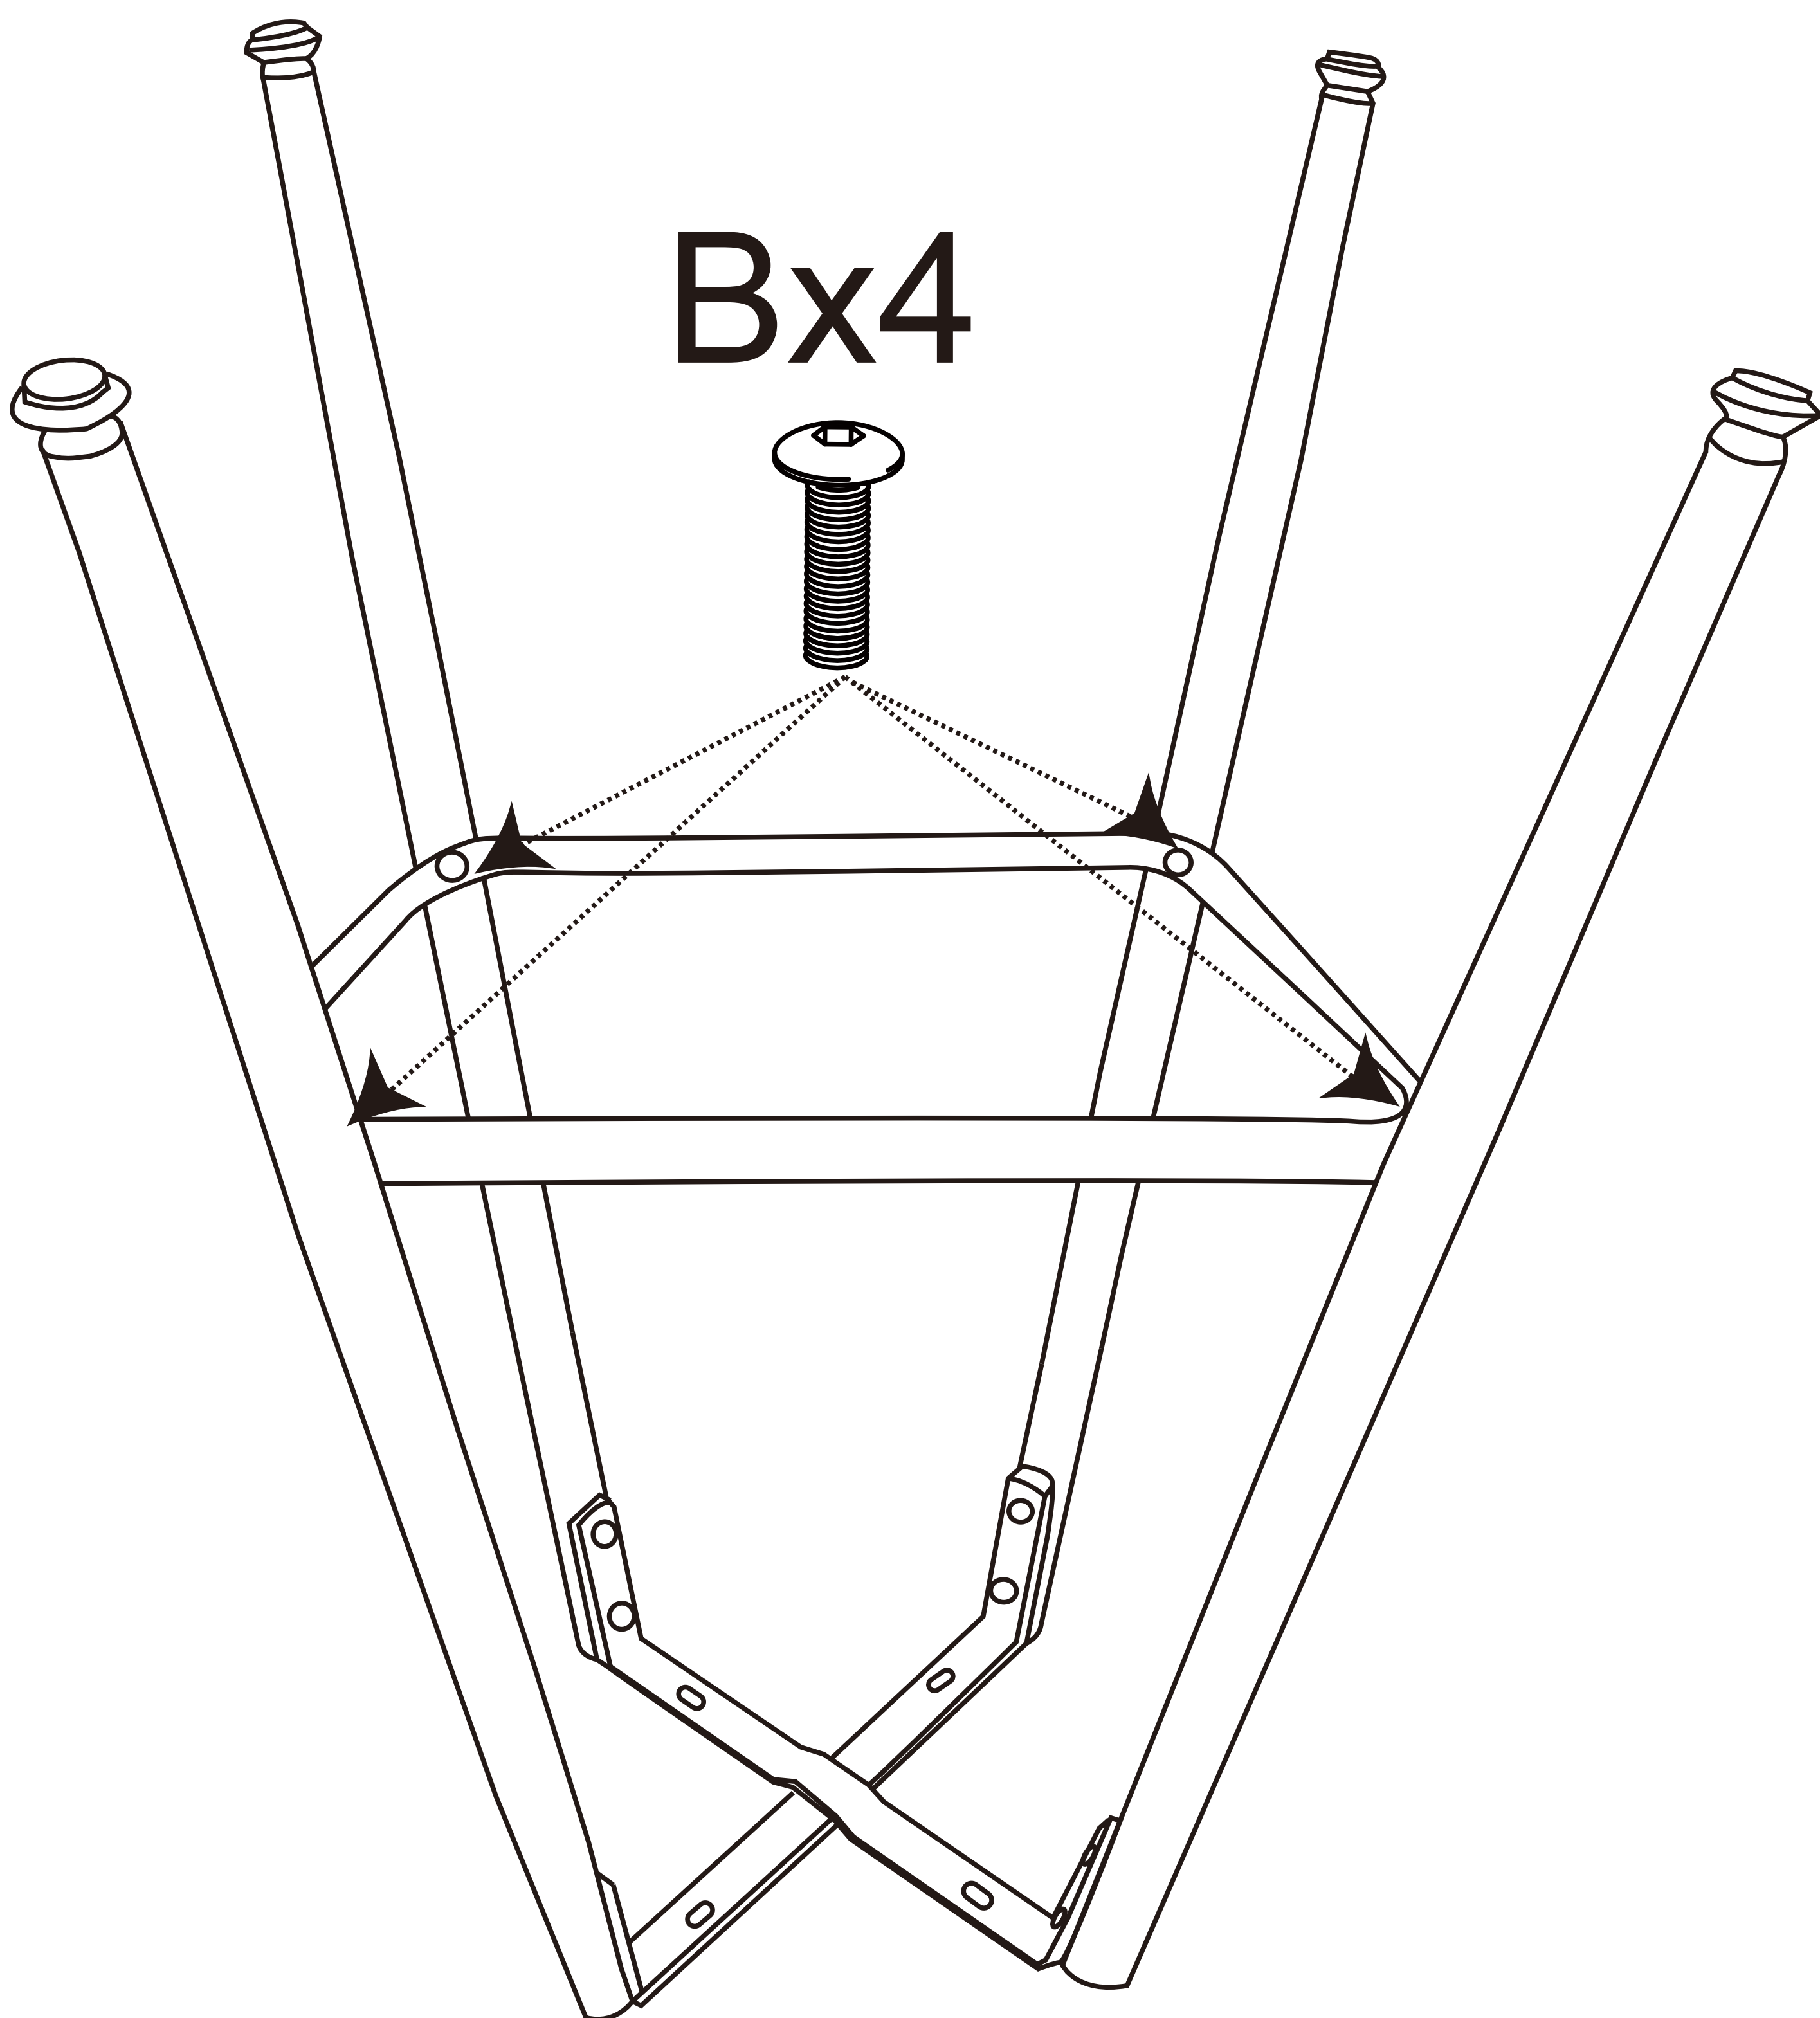


Assembly Instruction


STEP 3

Attach the metal cross(2) to the seat (1) using bolts(A) and Allen wrench(C). Tighten all the screws 70% so that you can adjust slightly during the process of assembly.

Ax4

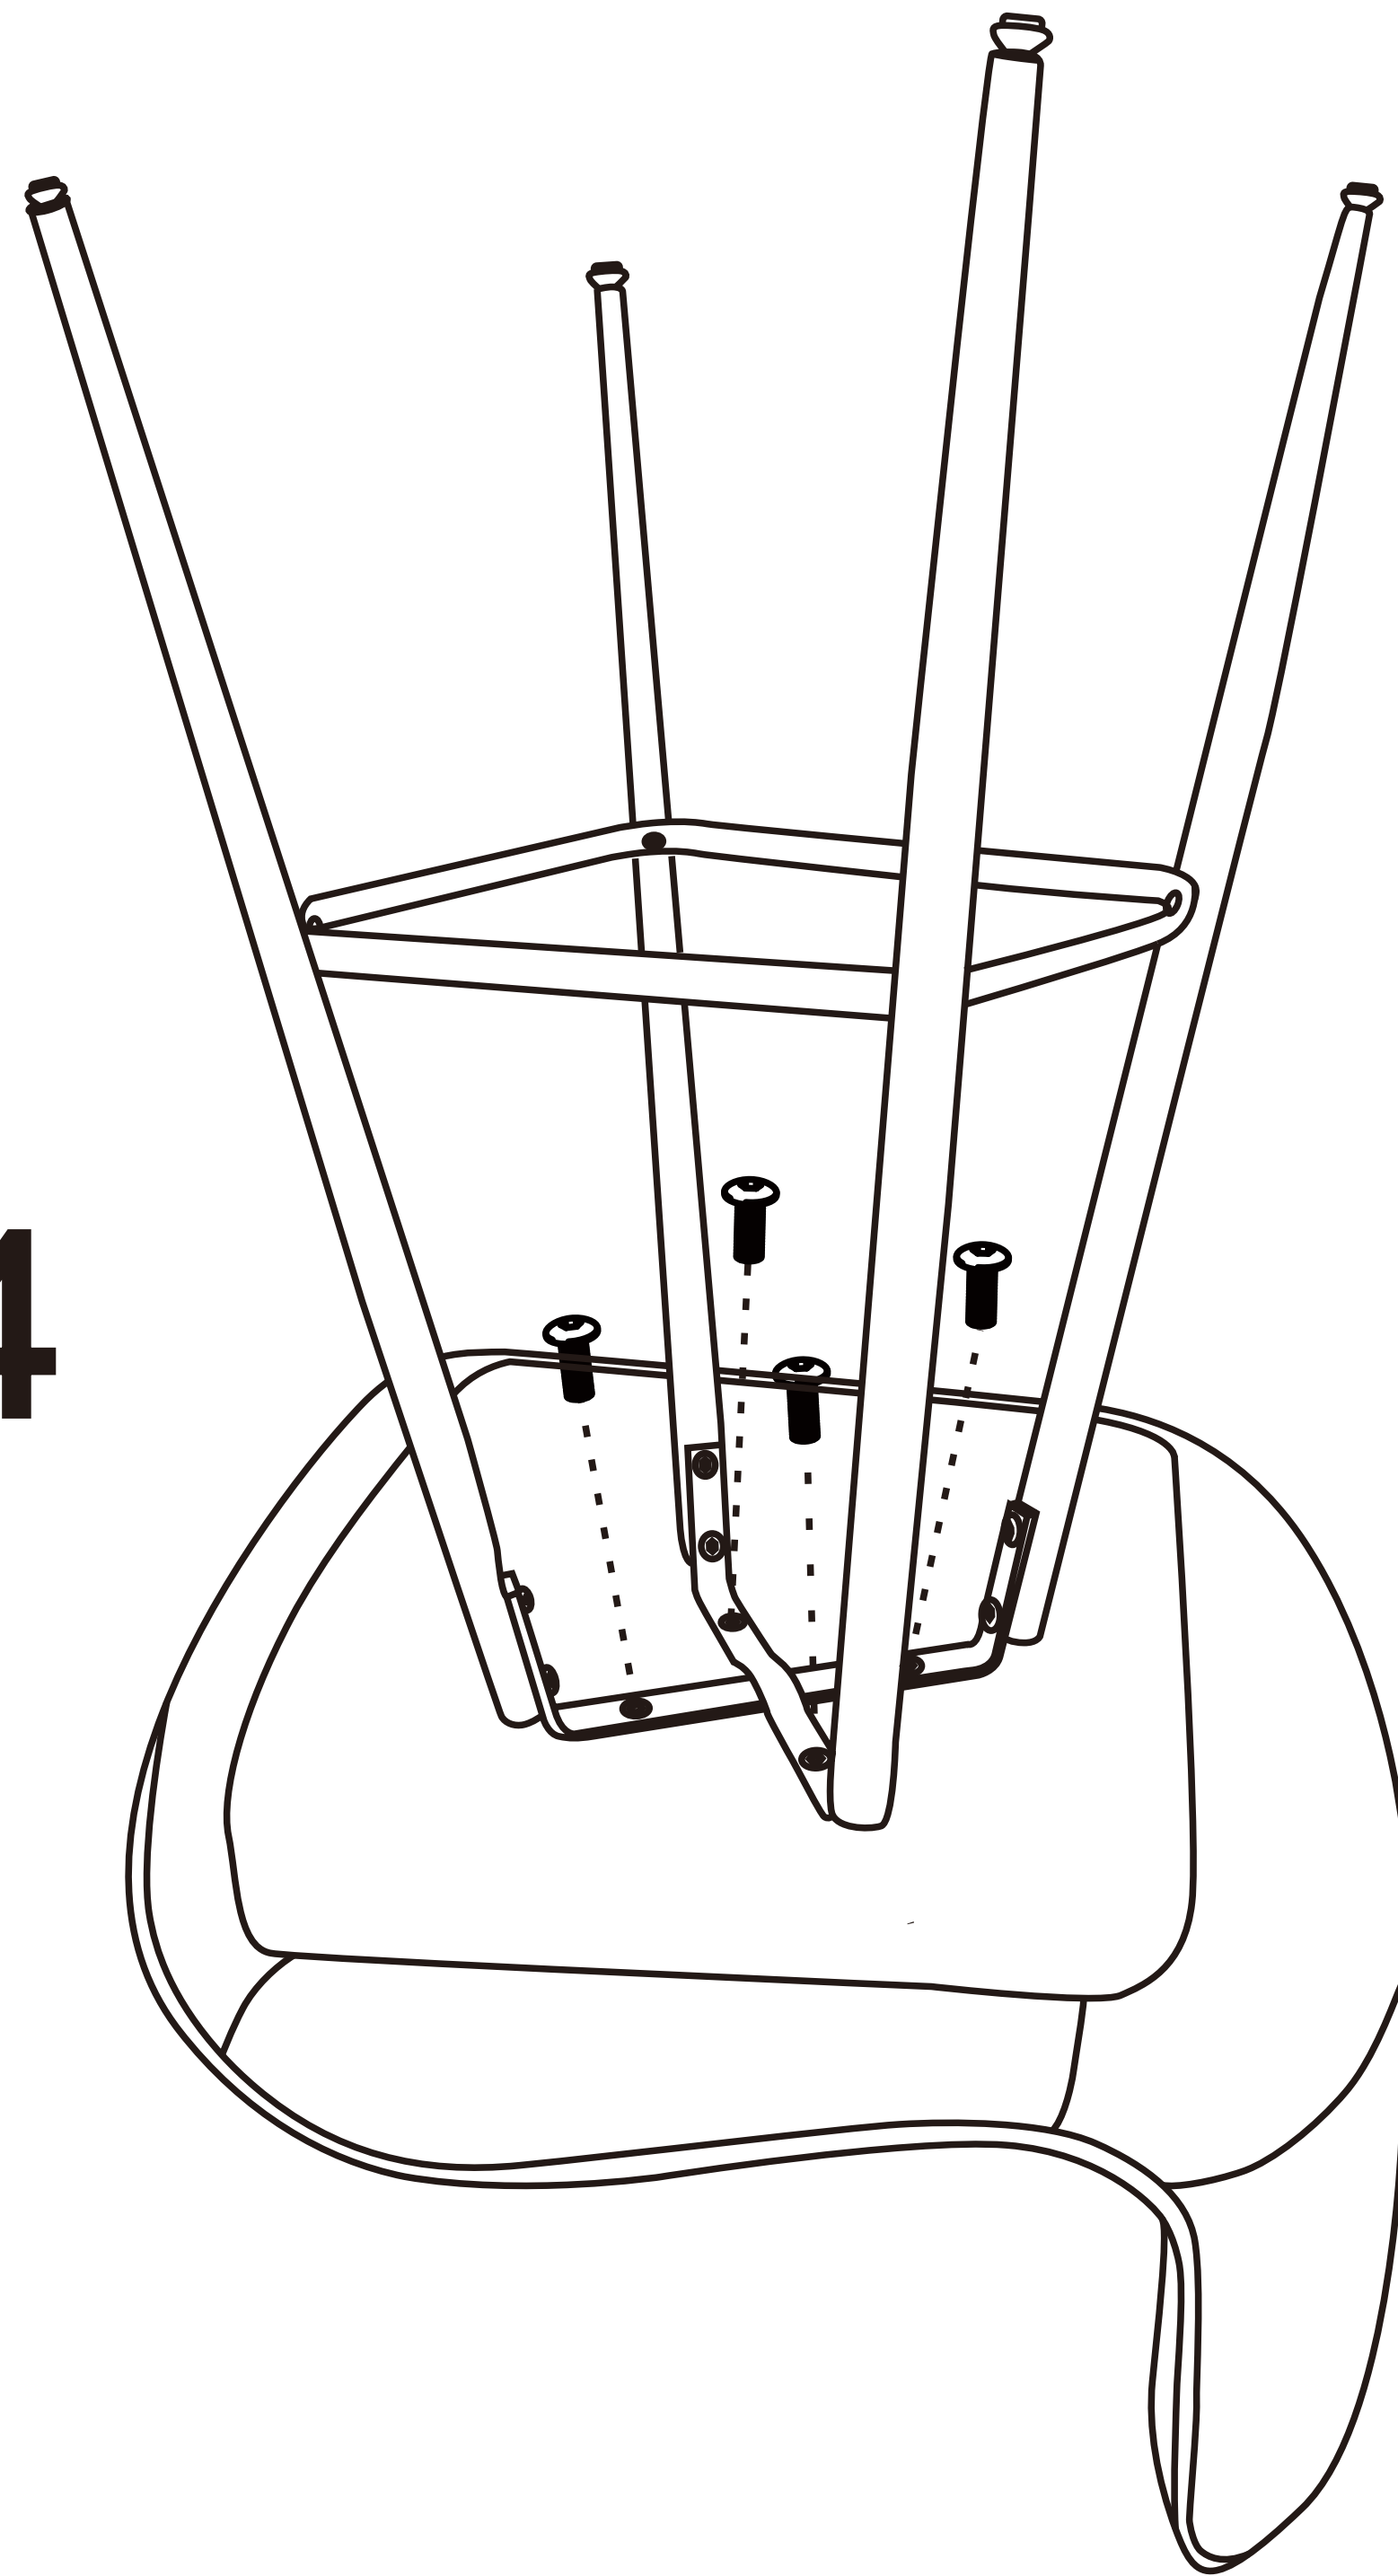

1*1

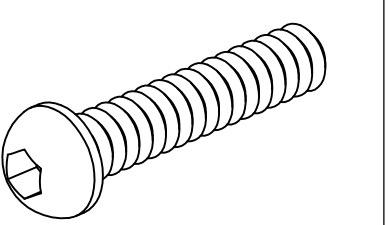

A*4



C*1

STEP 4

Tighten all bolts fully, and turn the assembled seat upright. Assembly completed. If you find the chair not level, please adjust by rotating the foot pads on the legs.

