


Open a paperclip as shown opposite.

Push the paperclip through the carpet and padding until it hits the subfloor.

Measure the distance on the paperclip from the subfloor to the top of the carpet pile.

Select a chair mat which is designed to suit a carpet of at least the depth measured.

FLOORTEX[®]
s o l u t i o n s

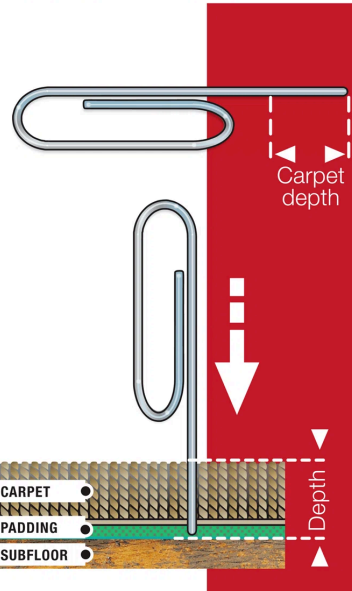

Low pile:
Up to 6mm

Medium pile:
Up to 12mm

Deep pile:
Over 12mm



For Low Pile



For Medium Pile



For Deep Pile

Measuring your carpet thickness and
choosing the right PVC mat for carpet floors