




ALUMINUM SOFA SET

Corner Sofa

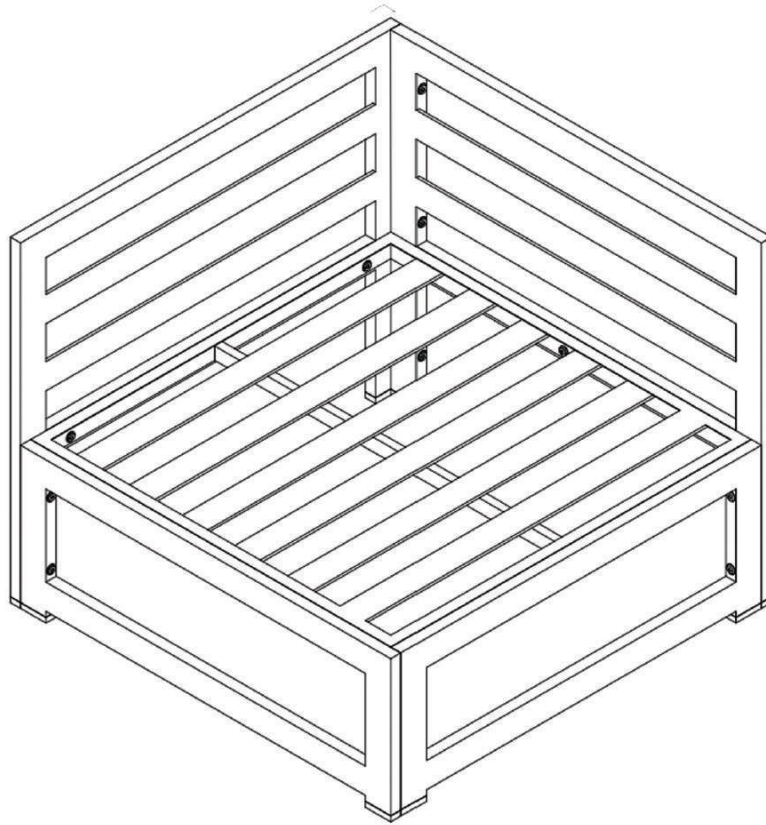

READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts, please contact us and send us pictures in time (email: jm@nicesoulfurniture.com), our after-sales team will reply you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, Our allen wrench is preferred.
4. DO NOT tighten the screws completely until align all the screws with the holes.

Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

Hardware

1 SETS IN BOX



#1
6x30mm
x 6



#2
6x65mm
x 9




#3
Washer
x 15




#4
Allen key
x 1

Parts


1 SETS IN BOX

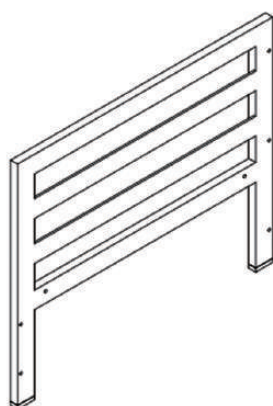


#A
75cm / 29.5in
x 1

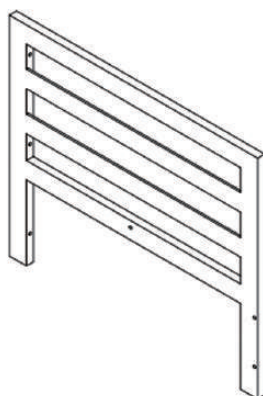


#B
73cm / 28.7in
x 1

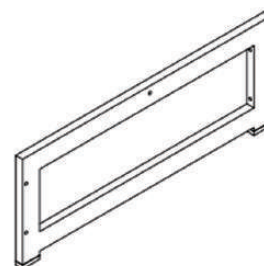

#C
73cm / 28.7in
x 1

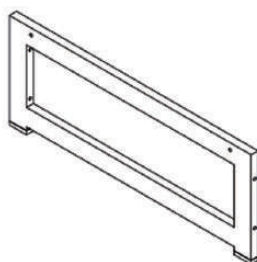


#D
71cm / 27.9in
x 1

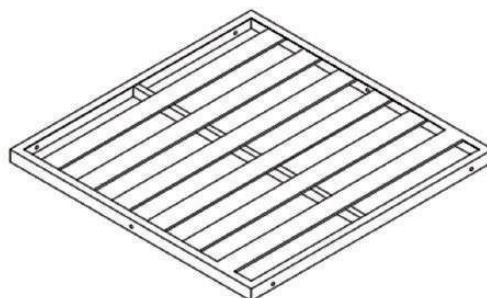

#E
x 1

STEP 1

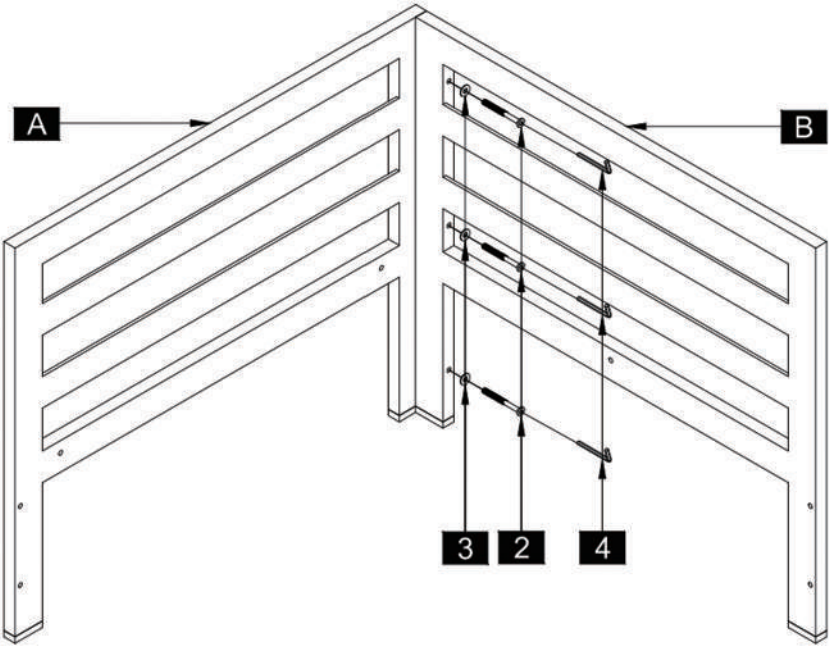


80%




A*1PC	B*1PC	2*3PCS (M6*65)	3*3PCS

STEP 2



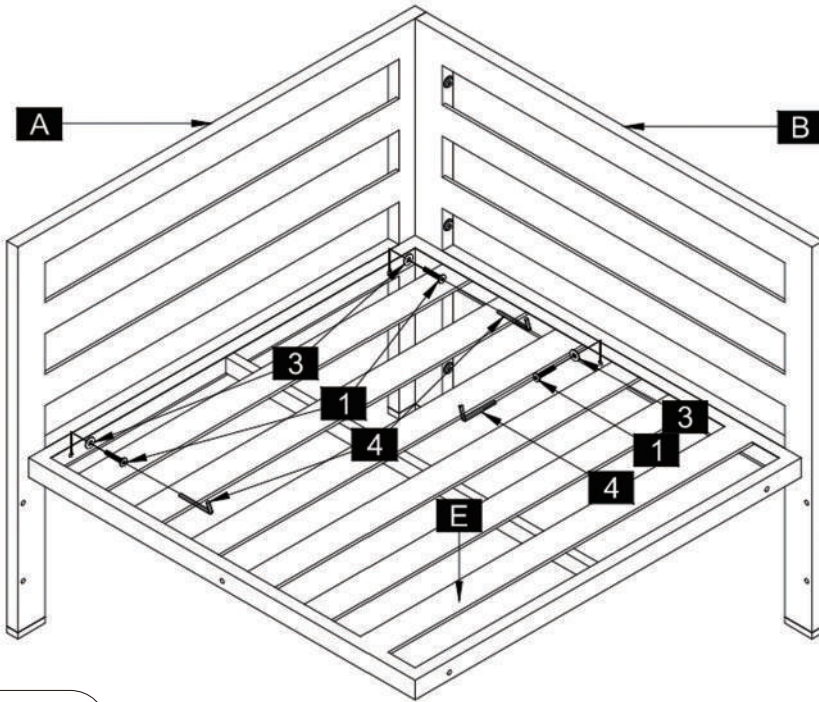


80%






E*1PC	1*3PCS (M6*30)	3*3PCS

STEP 3

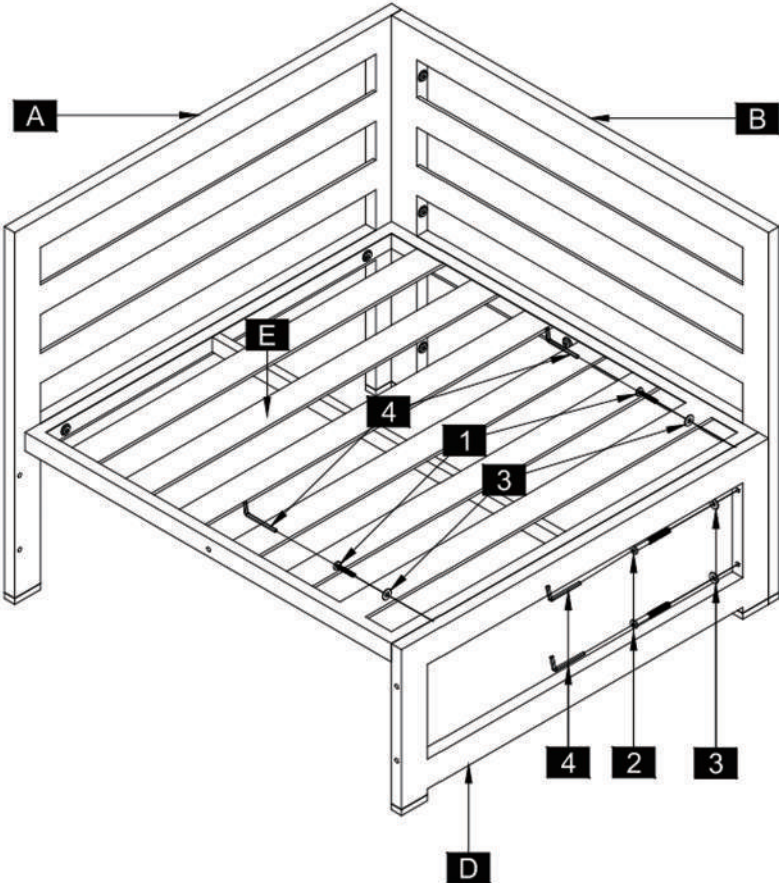



D*1PC	1*2PCS (M6*30)	2*2PCS (M6*65)	3*4PCS

STEP 4

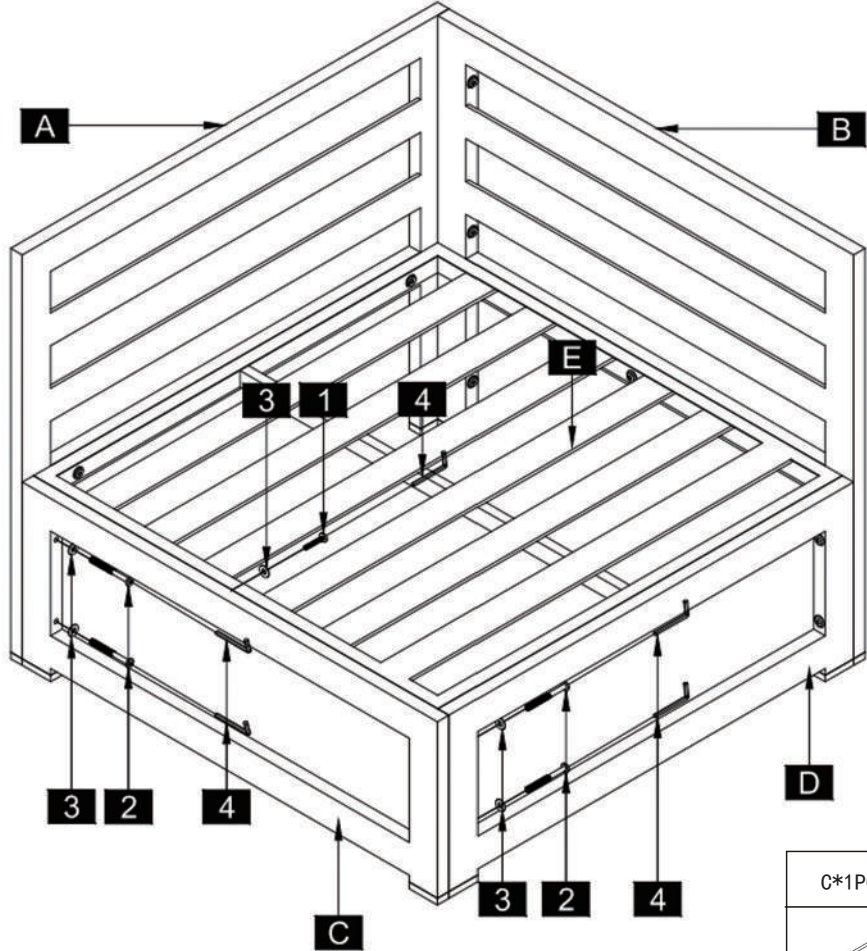


C*1PC	2*4PCS (M6*65)	1*1PC (M6*30)	3*5PCS

STEP 5

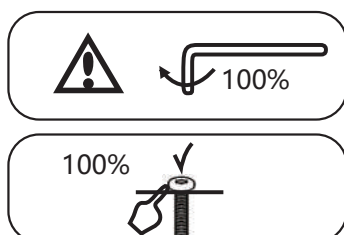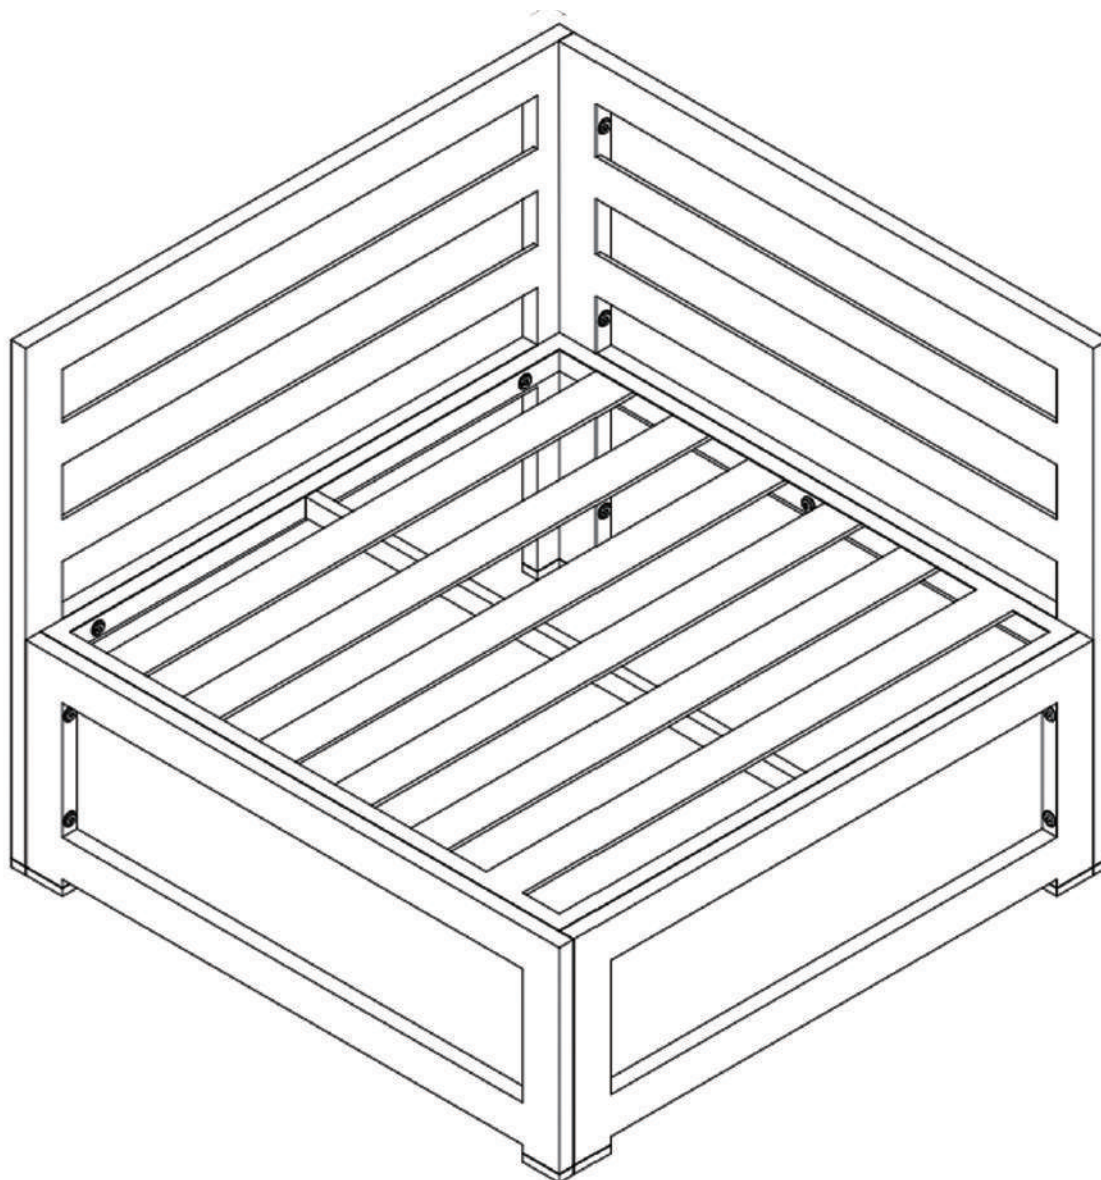

Ensure all screws are tightened before using

Armless Sofa

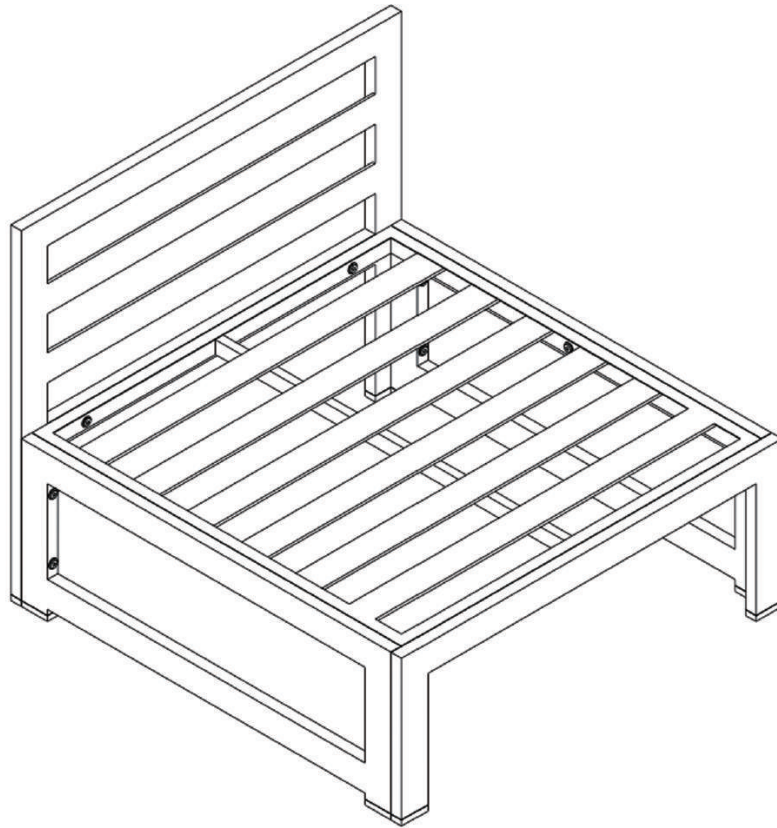

READ BEFORE INSTALLATION

1. If you encounter any problems, such as missing accessories or damaged parts. Please contact us and send us pictures in time, our after-sales team will reply to you within 24 hours.
2. 2 persons needed for assembly.
3. Using an electric drill in slow mode, our Allen wrench is preferred.
4. DO NOT tighten the screws completely until aligning all the screws with the holes.

Back cushion NOTE

1. The back cushion is vacuumed sealed. After opening the bag, some time and fluffing will be required for the cushion to return to the original thickness.
2. Rub and flap the cushion to original thickness before use.

Hardware

2 SETS IN BOX



#1
6x30mm
X12



#2
6x65mm
X16




#3
Washer
X28




#4
Allen key
X2

Parts


2 SETS IN BOX

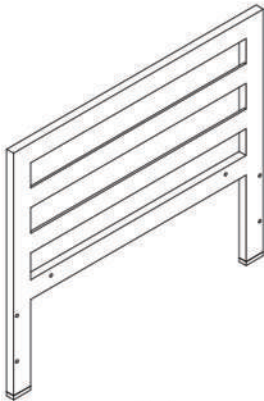


#F
73cm / 28.7in
X2

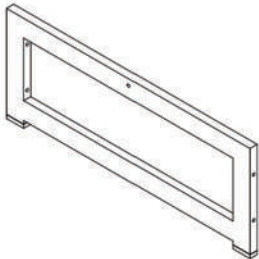

#G
71cm / 27.9in
X4


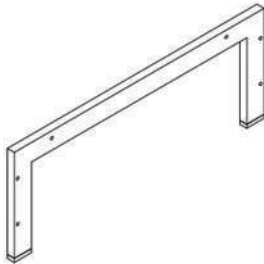


#H
73cm / 28.7in
X2

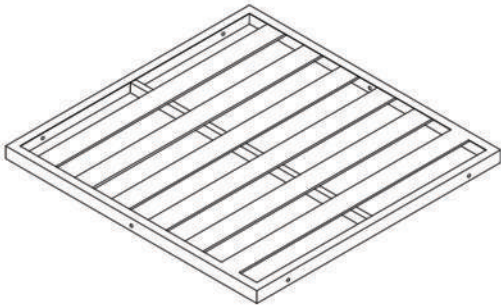



#I
X2

STEP 1

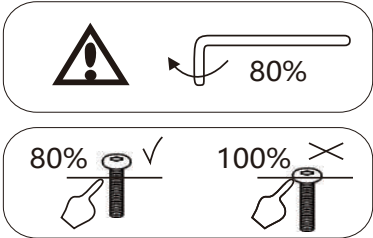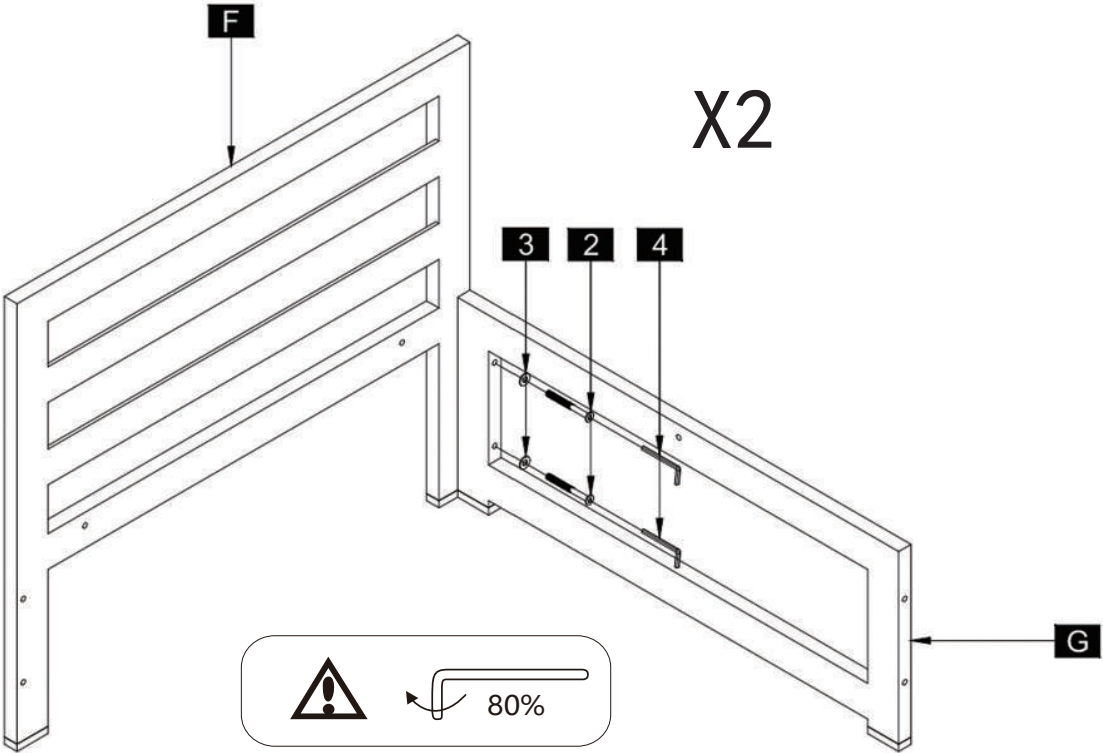


F*1PC	G*1PC	2*2PCS (M6*65)	3*2PCS

STEP 2

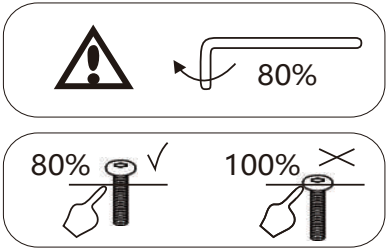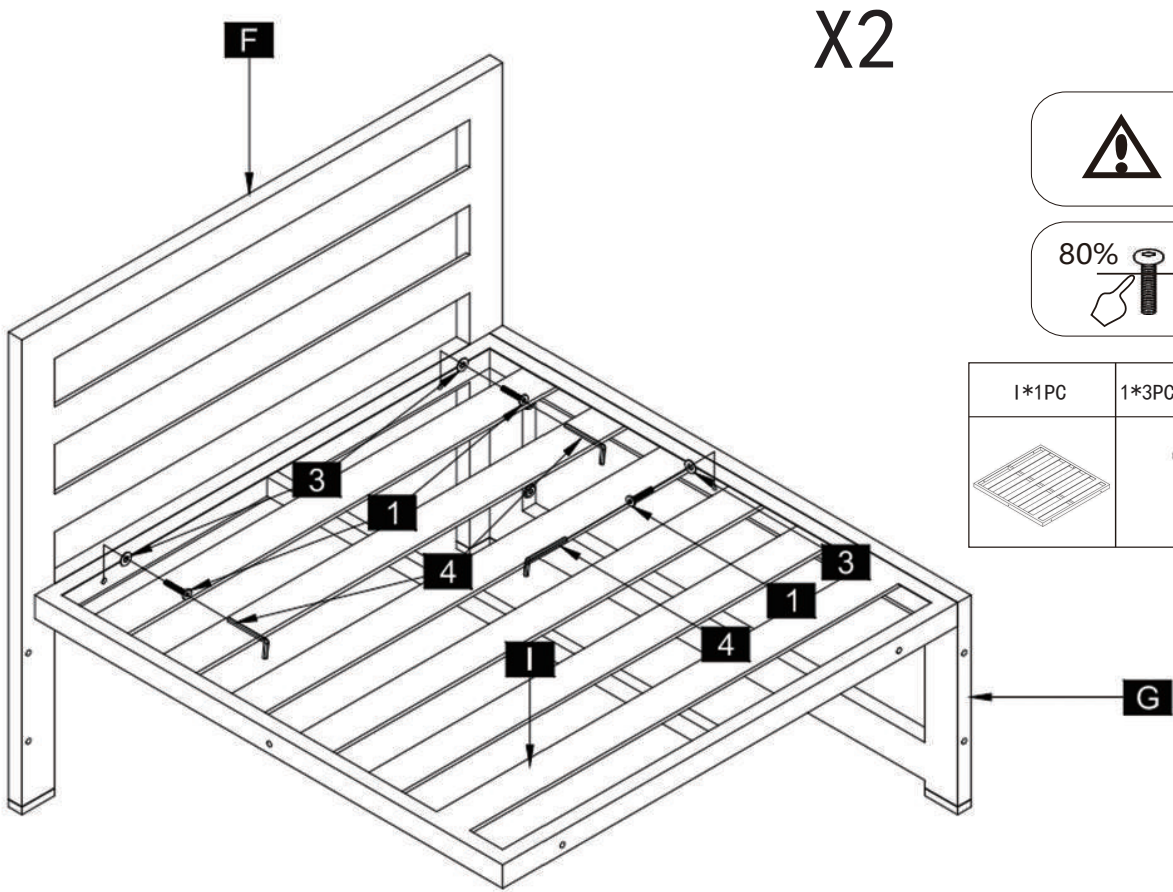


I*1PC	1*3PCS (M6*30)	3*3PCS

STEP 3

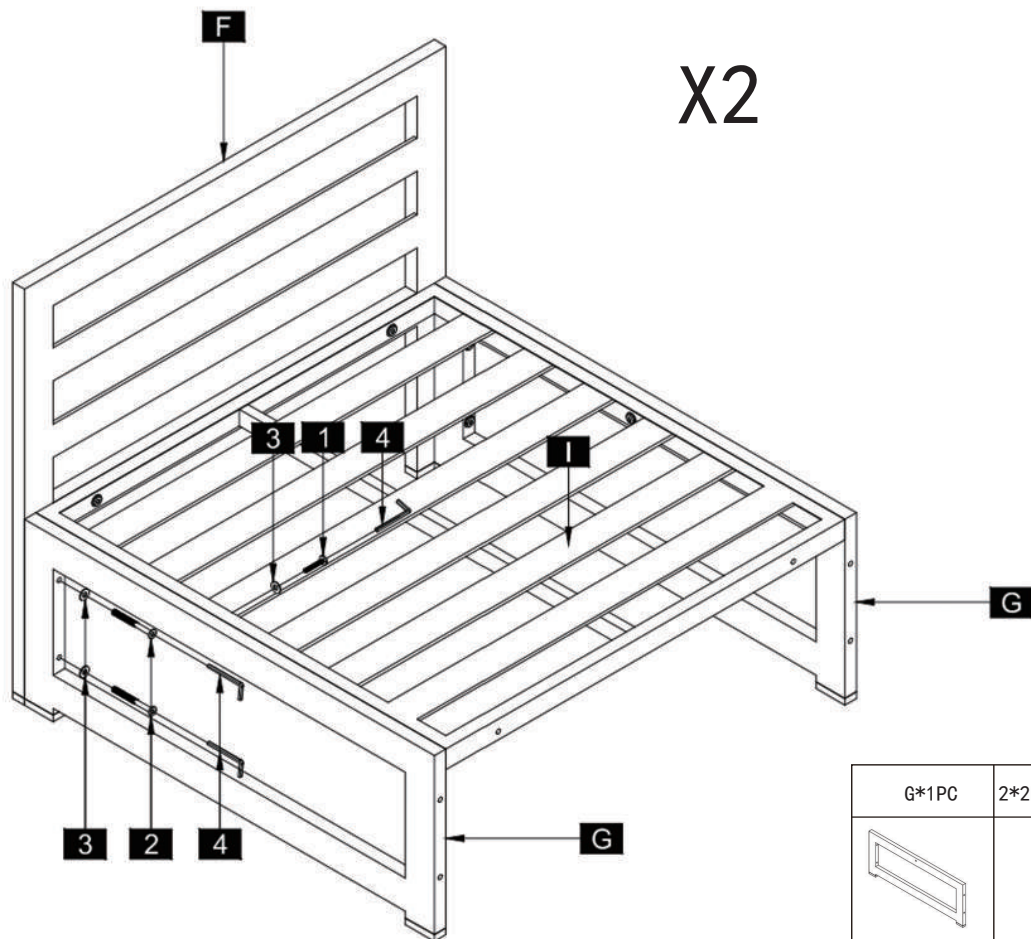


80%




G*1PC	2*2PCS (M6*65)	1*1PC (M6*30)	3*3PCS

STEP 4

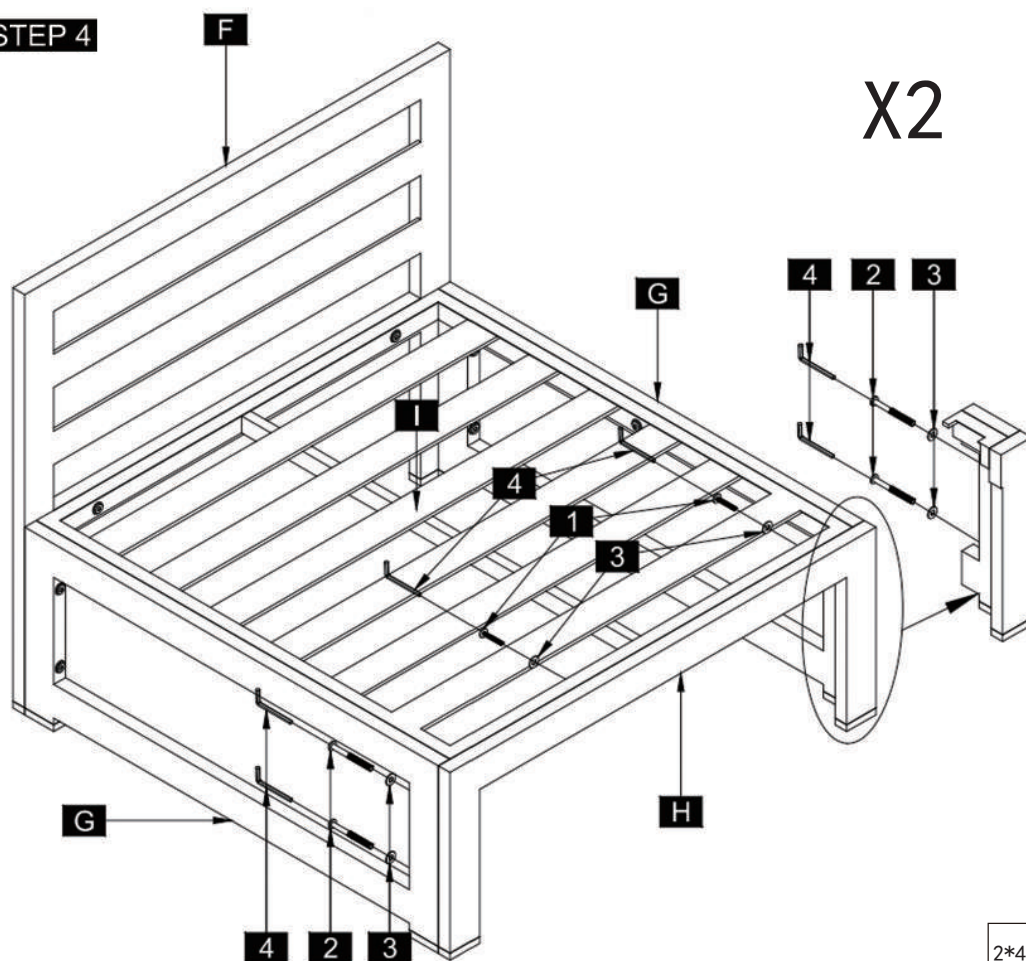




80%



2*4PCS (M6*65)	1*2PCS (M6*30)	3*6PCS

STEP 5

X2

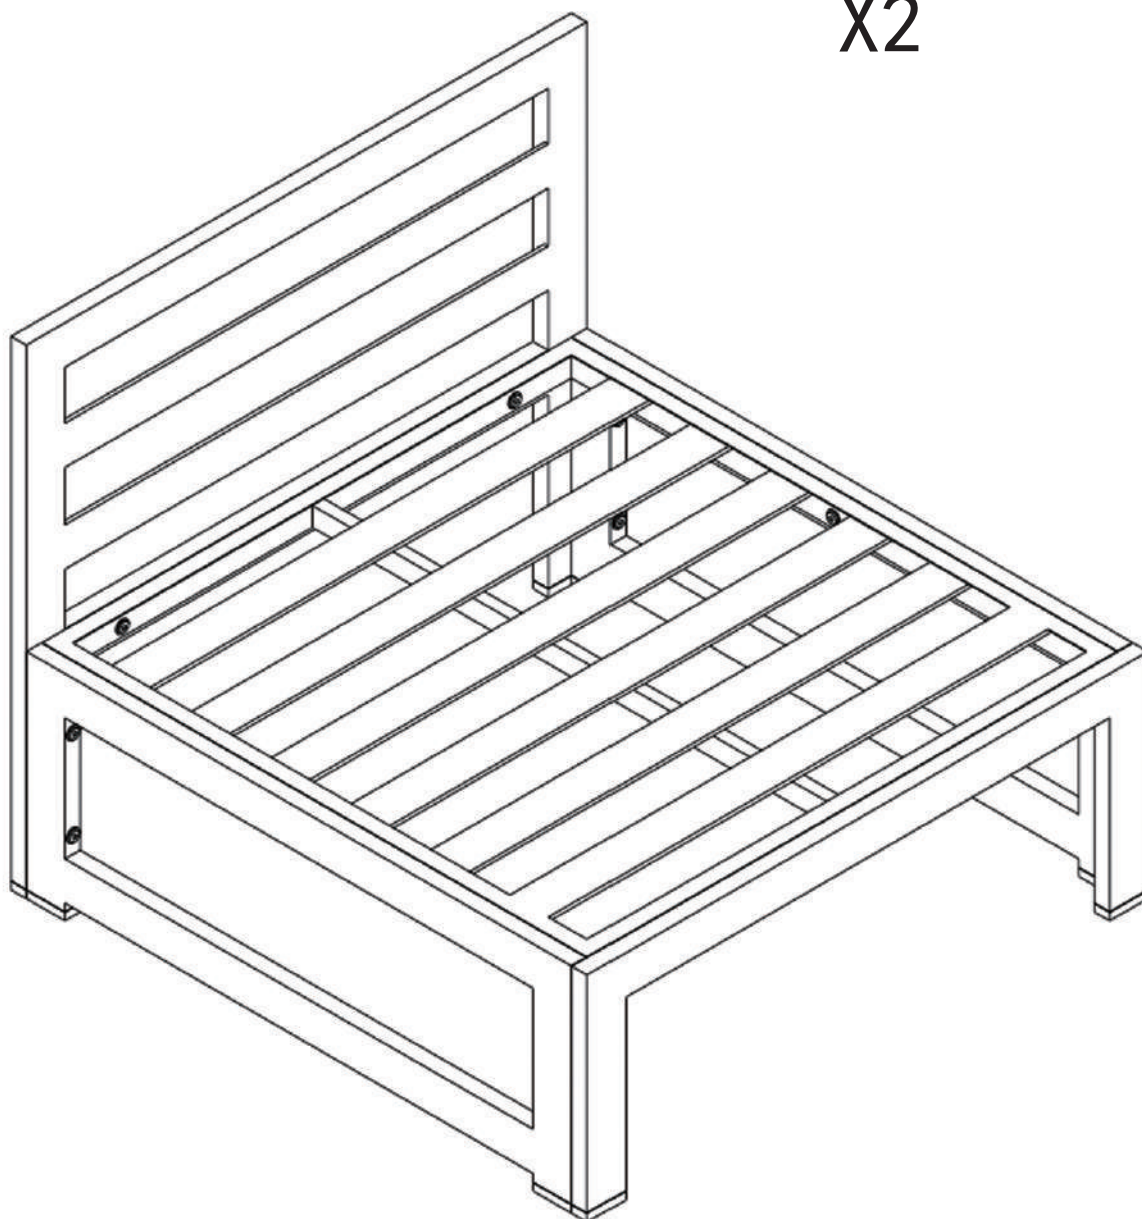

Ensure all screws are tightened before using