

## SRDRT2BF-LRDRT4724-VRDRT4724- INSTRUCTIONS


**You will need 2 person(s) for this assembly.**

**You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.**

### Reception Desk Return

#### Hardware :

**A:** Small Corner Brackets(3) • **B:** Large Corner Brackets(2) • **C:** Flat Brackets(4) • **D:** Dowel Rods(2)  
**E:** Cam Pins(7) • **F:** Small Screws(54) • **G:** Cam pin plug(3) • **H:** Cam Lock Cover(12) • **I:** Cam hole plug(3)

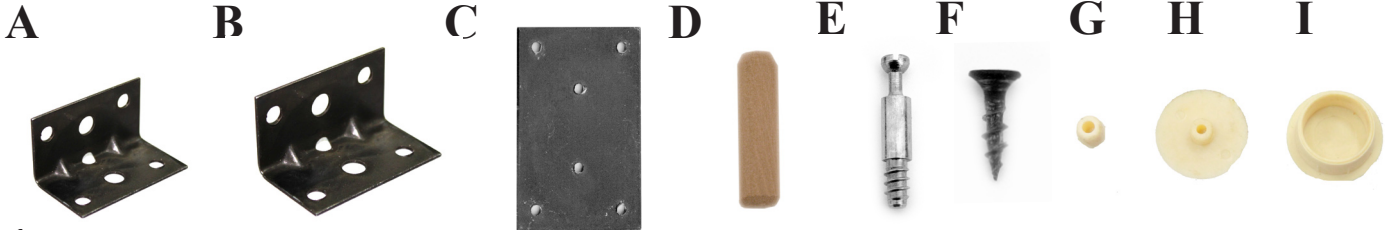


#### Parts :

**J:** Leg • **K:** Modesty • **L:** Top



**STEP 1 :** Screw 2 cam pins(E) into modesty(J).

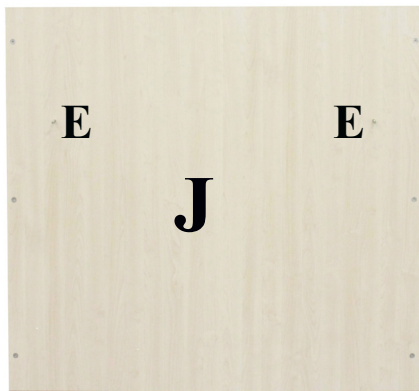

**STEP 2 :** Attach top(L) to modesty(J) by inserting cam pins(E) into locks and tightening

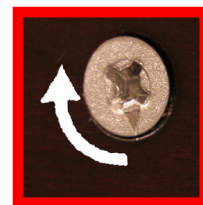
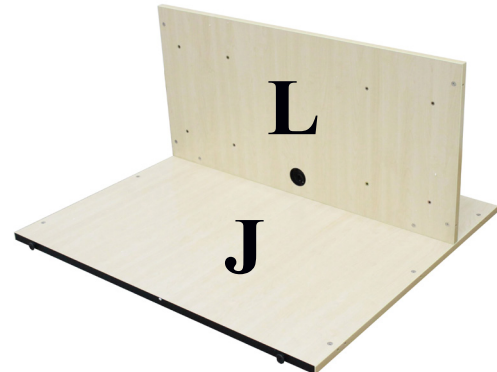


Fig. 1a

#### IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.

## SRDRT2BF-LRDRT4724-VRDRT4724- INSTRUCTIONS


**You will need 2 person(s) for this assembly.**

**You will need a Phillips Head Screwdriver and a Rubber Mallet to Assemble.**

Step 3 determines a left return or right return. For a left return follow step 3 and then finish instructions. For a right return skip step 3 and go on to step 3a and then finish step 4 & 5.


### LEFT RETURN

**STEP 3 :** Place 5 cam pins(E) into Leg(K) and attach to return shell by inserting cam pins into locks and tightening.

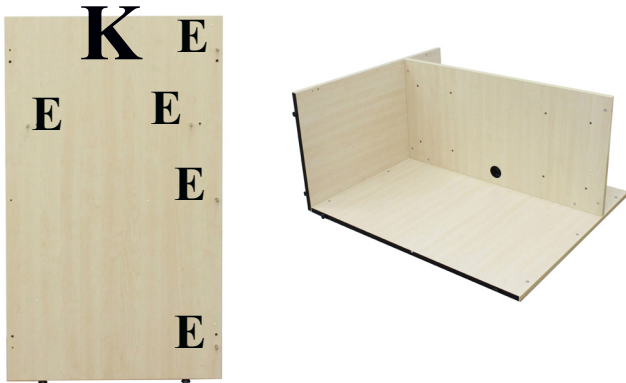


### RIGHT RETURN

**STEP 3A :** Place 5 cam pins(E) into Leg(K) and attach to return shell by inserting cam pins into locks and tightening.

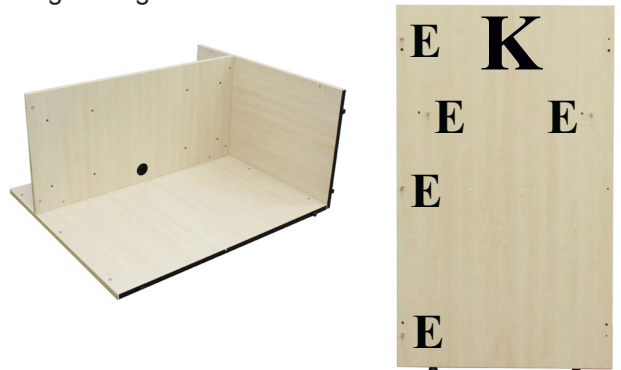

**STEP 4 :** Place 3 small corner brackets(A) and 4 flat brackets(C) on the bottom of the desk top(L) in the locations shown below. Use 6 small screws(F) for each corner brackets(A) and 3 small screws(F) for each flat brackets(C).

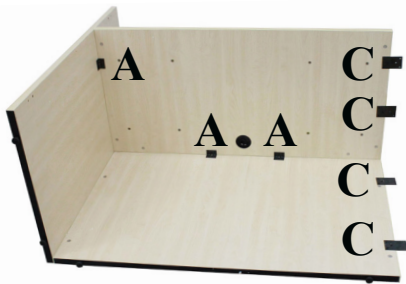

**STEP 5:** Connect return to desk by connecting and screwing the flat brackets(C) into bottom of desk top and inside of desk leg with 3 small screws(F) each flat bracket(C).

