



BED FRAME

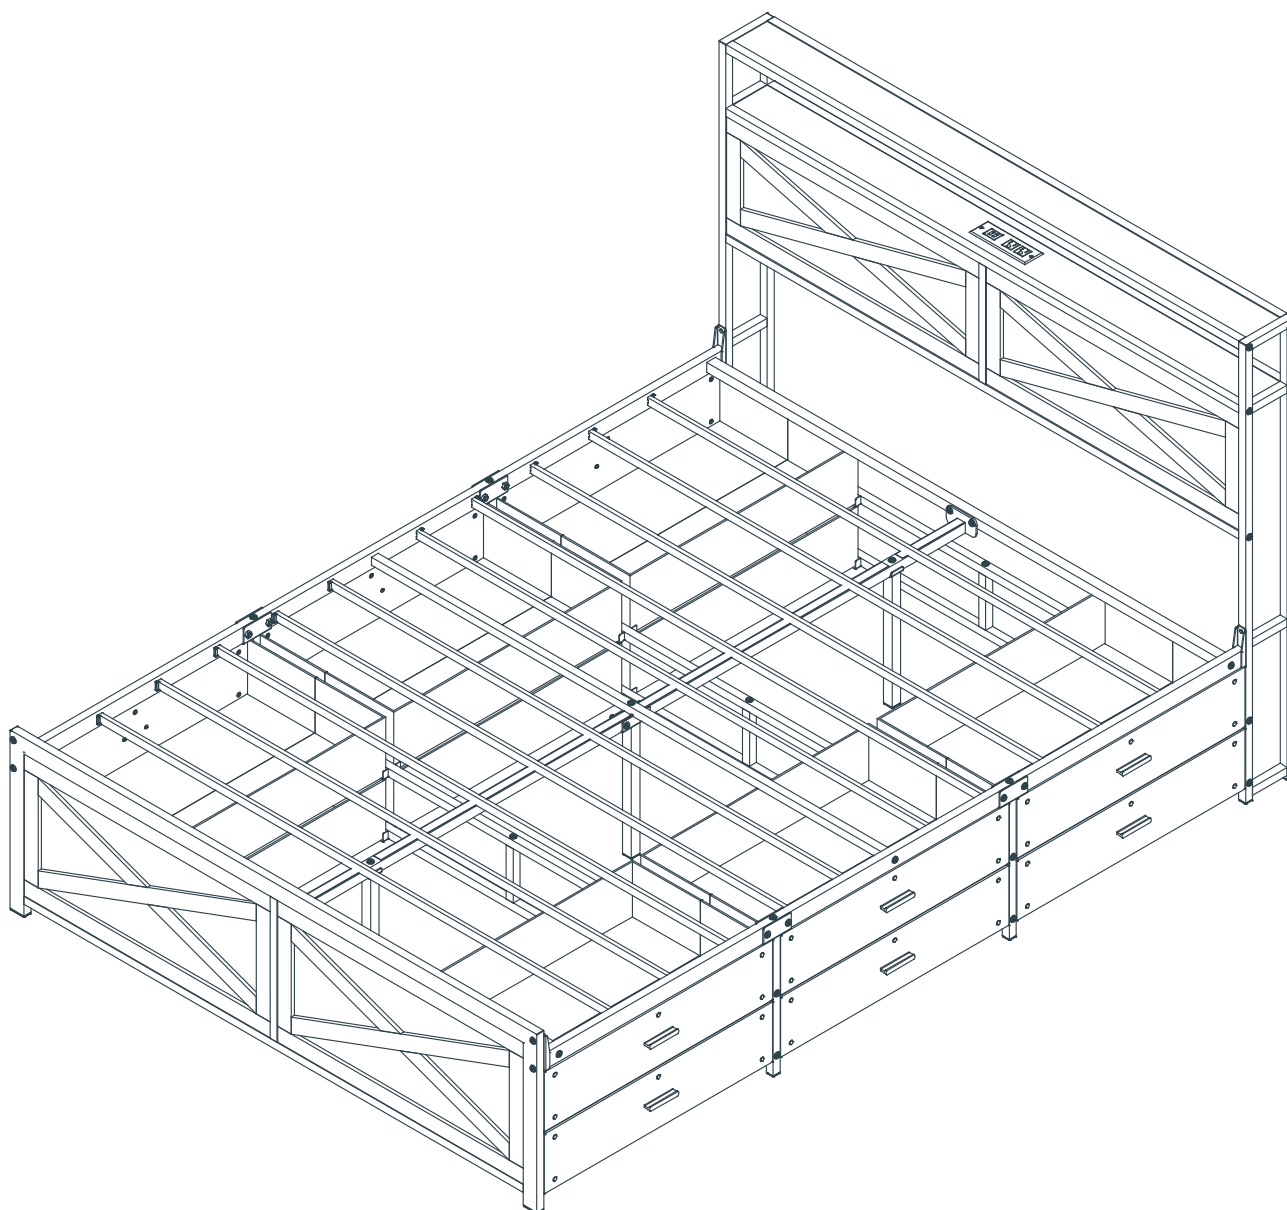

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




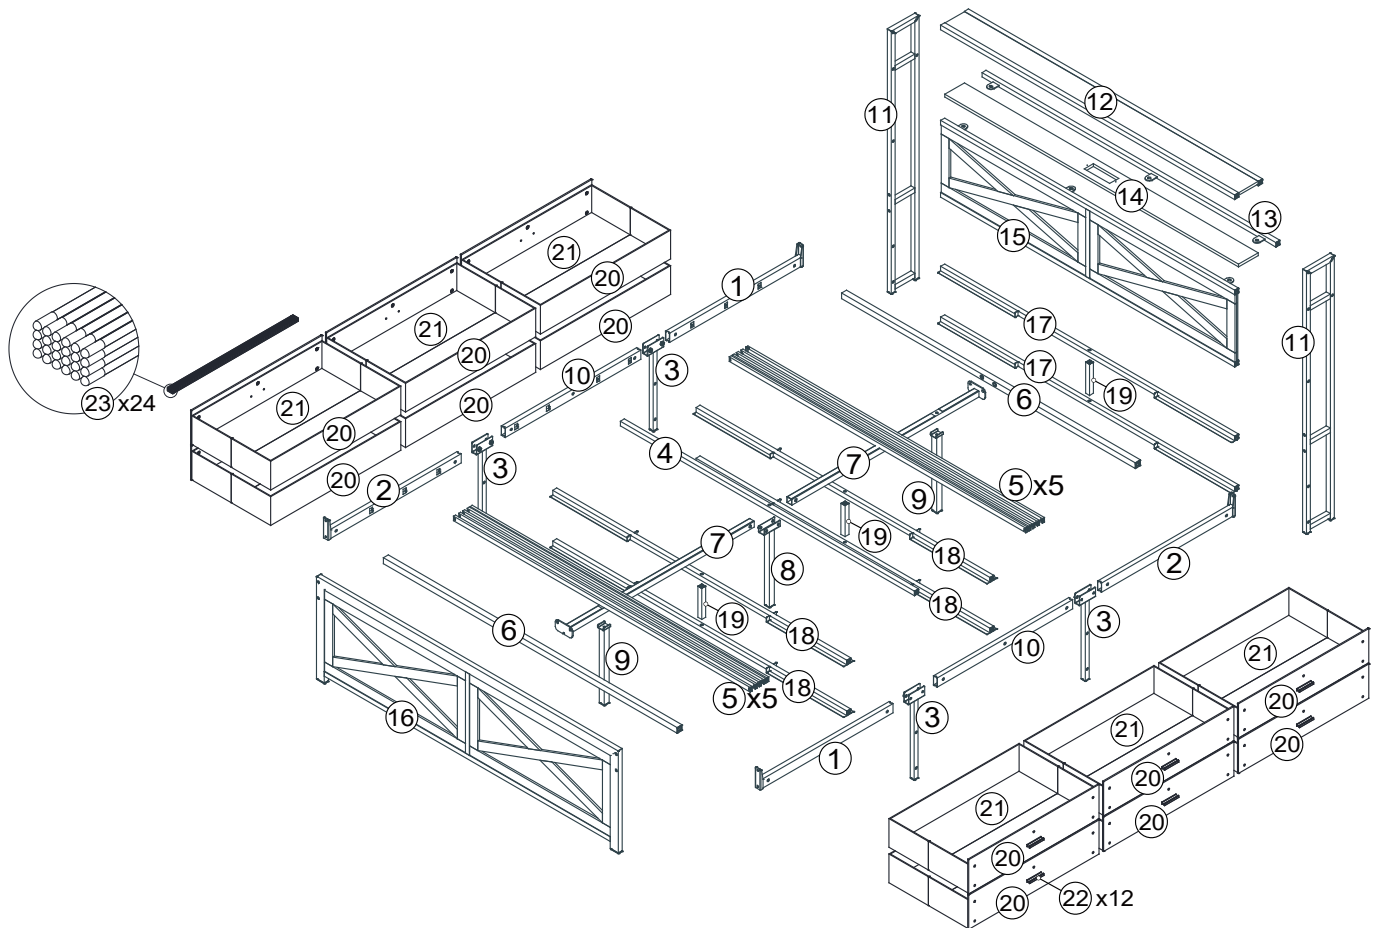


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.


Components

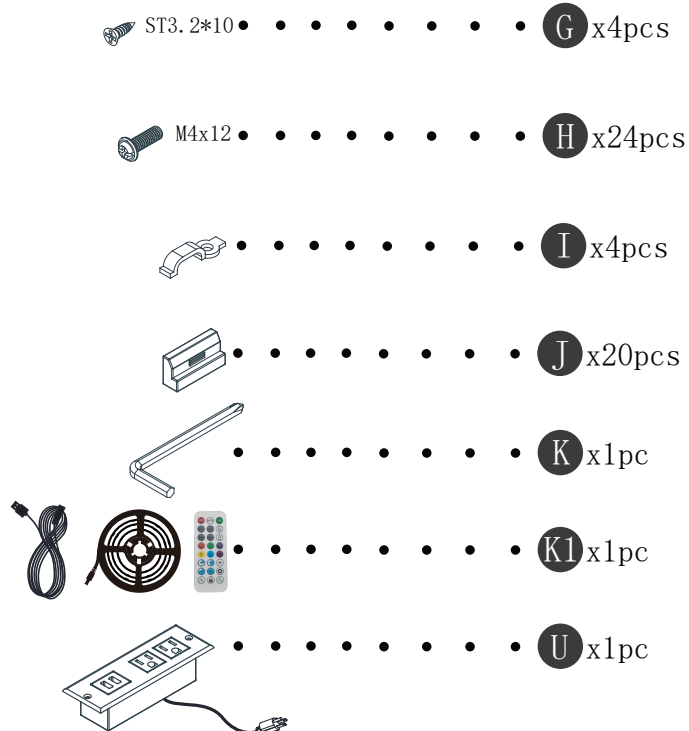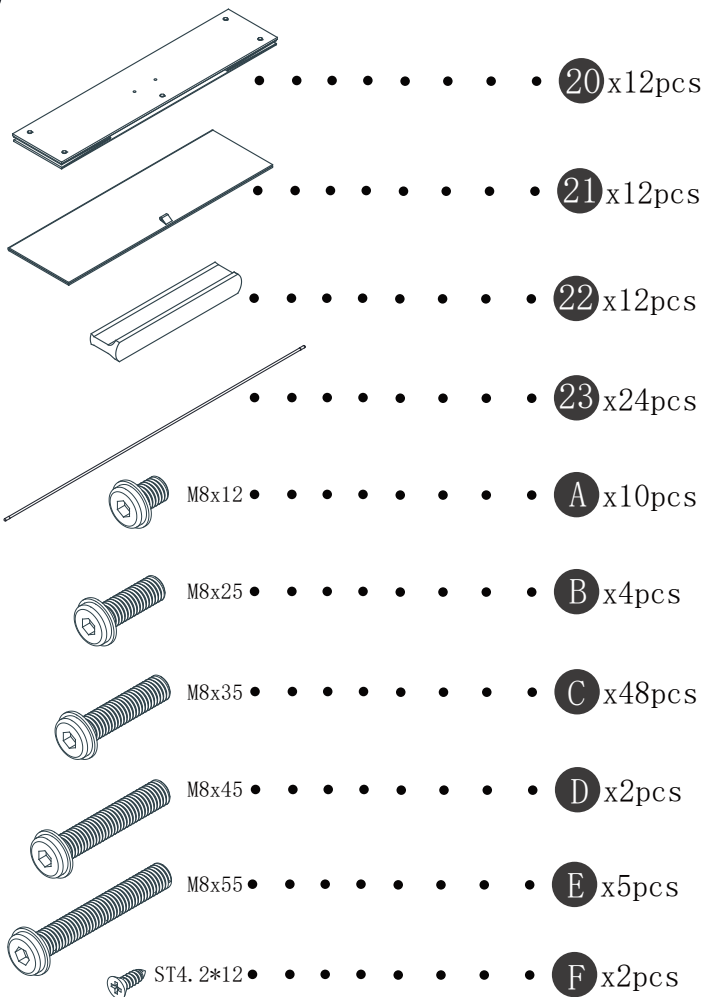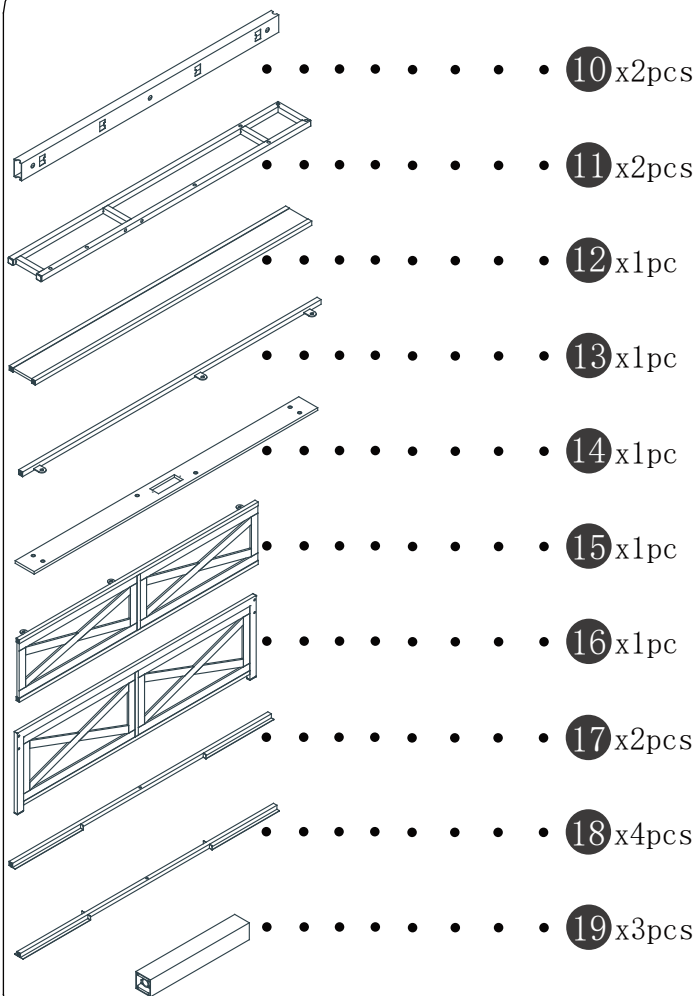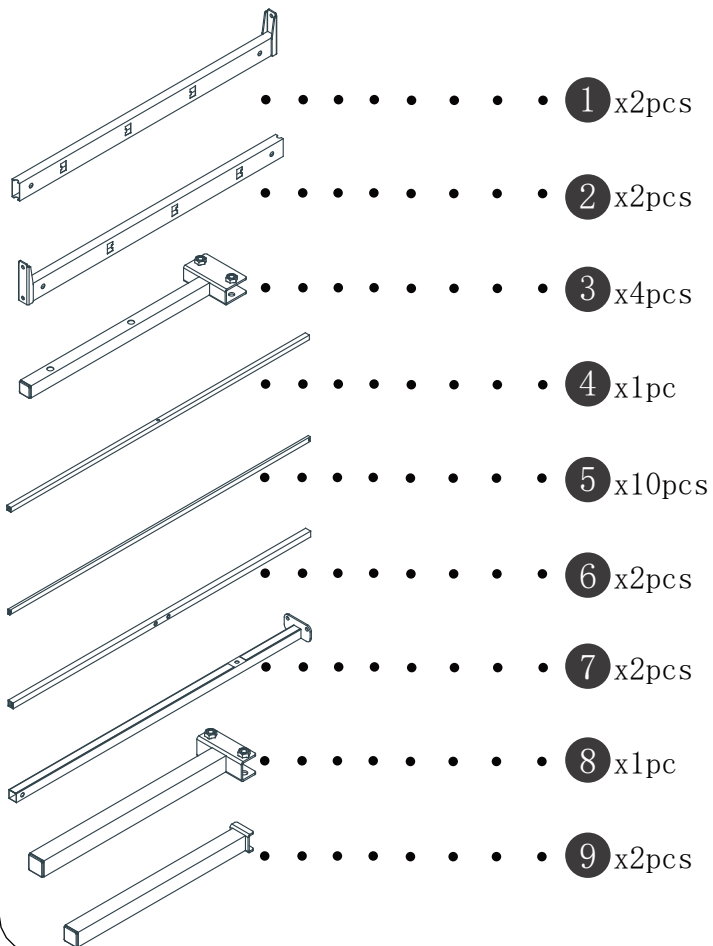


1

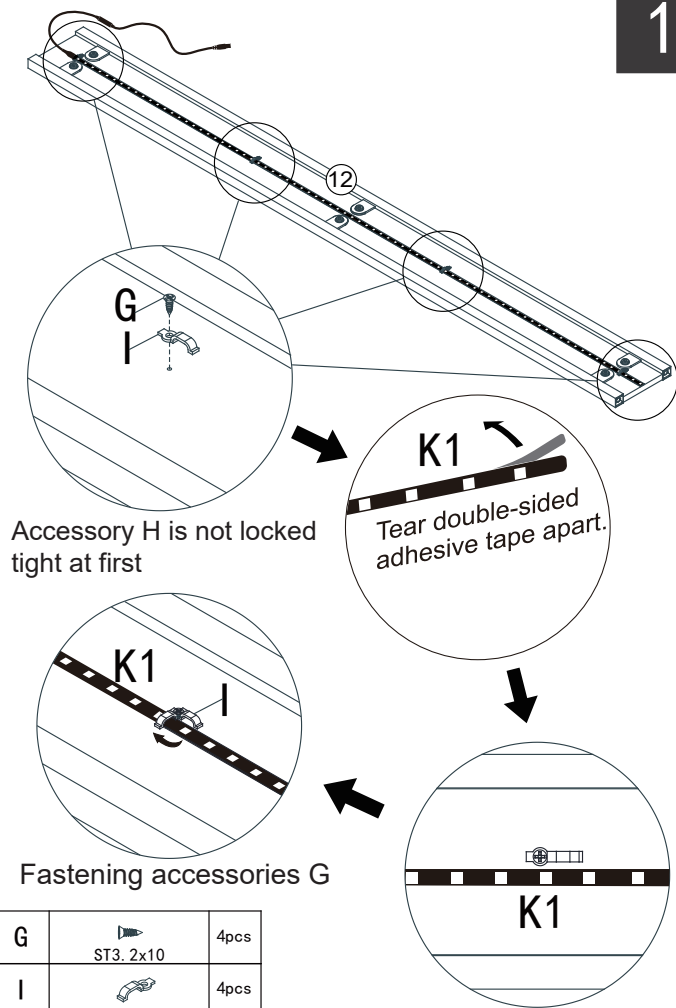


2

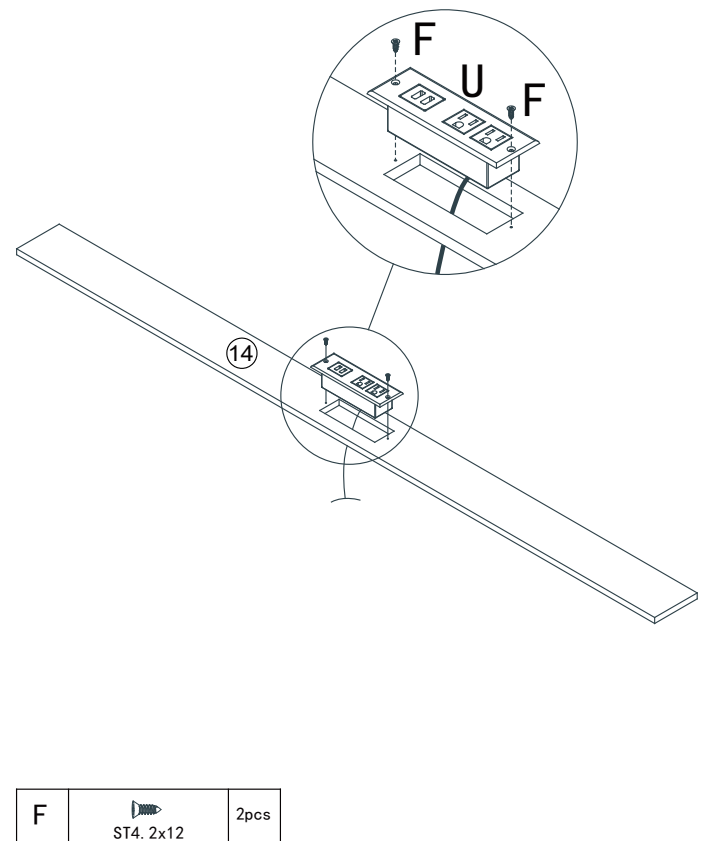

3

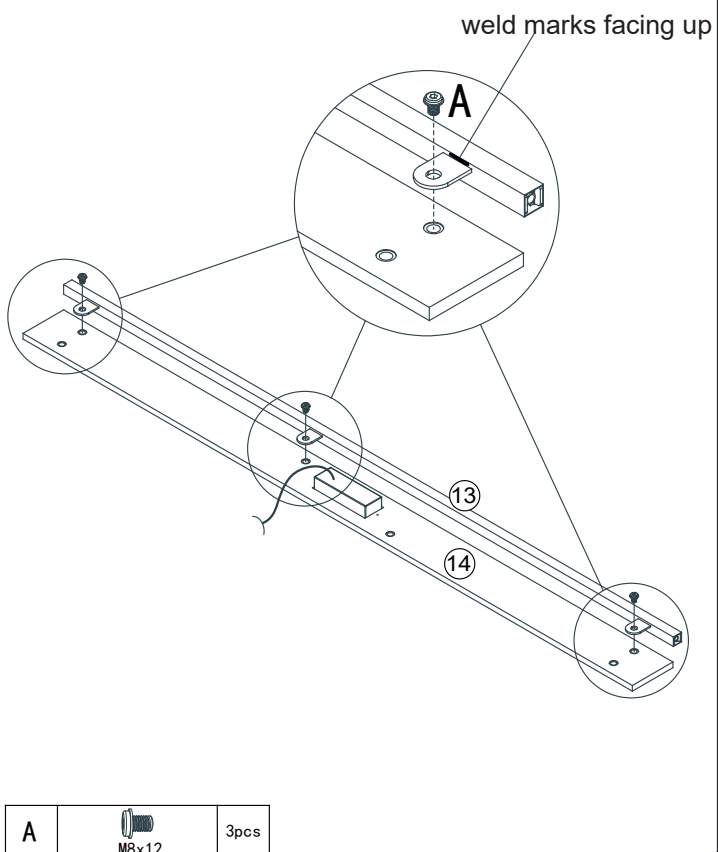


4

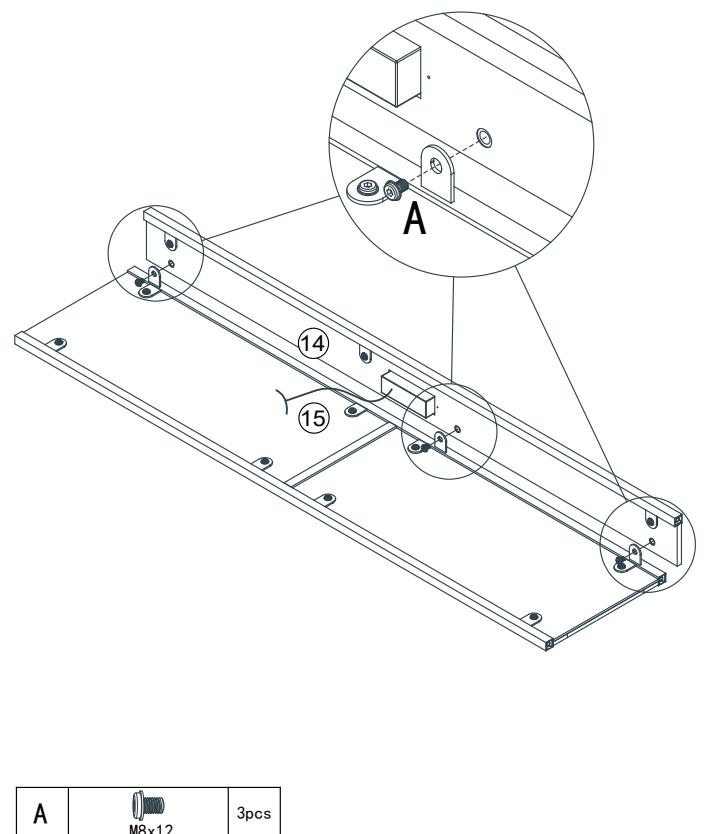


5

⚠ Do not fully tighten the screws yet.

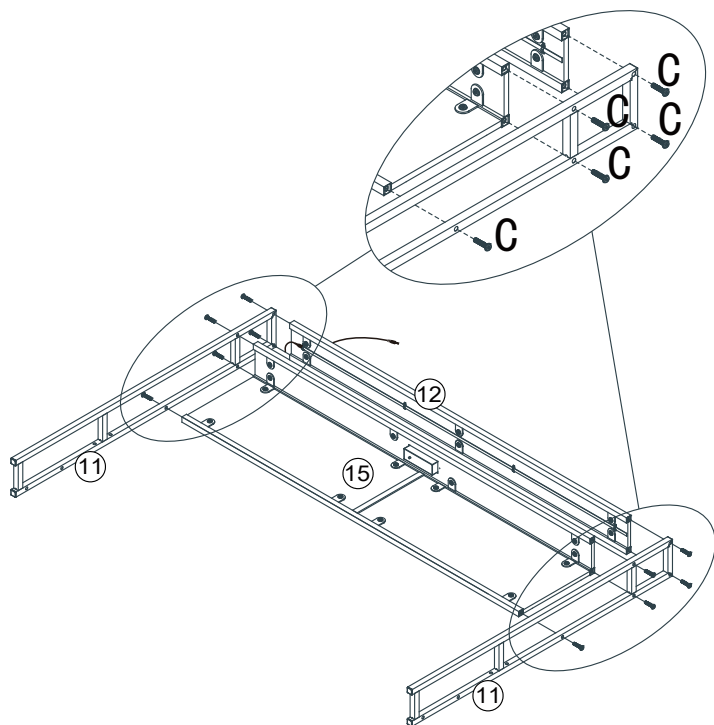


C		10pcs
M8x35		

6

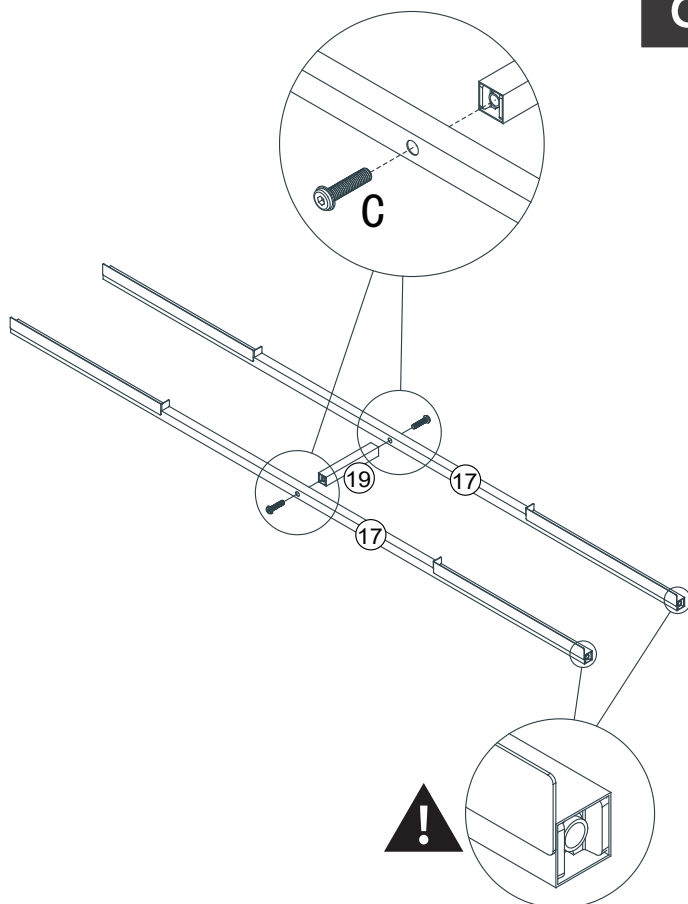

C		2pcs
M8x35		

7

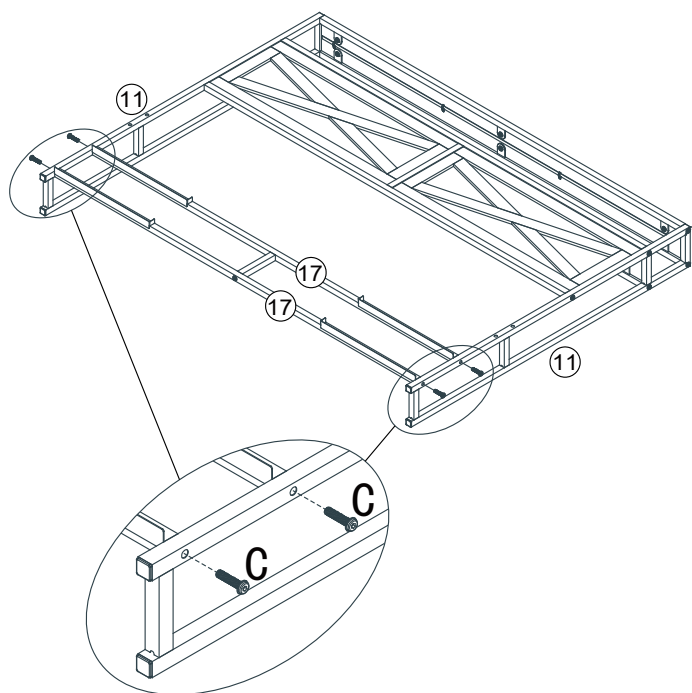


⚠ Fully tighten all the screws.

C		4pcs
M8x35		


8

x2

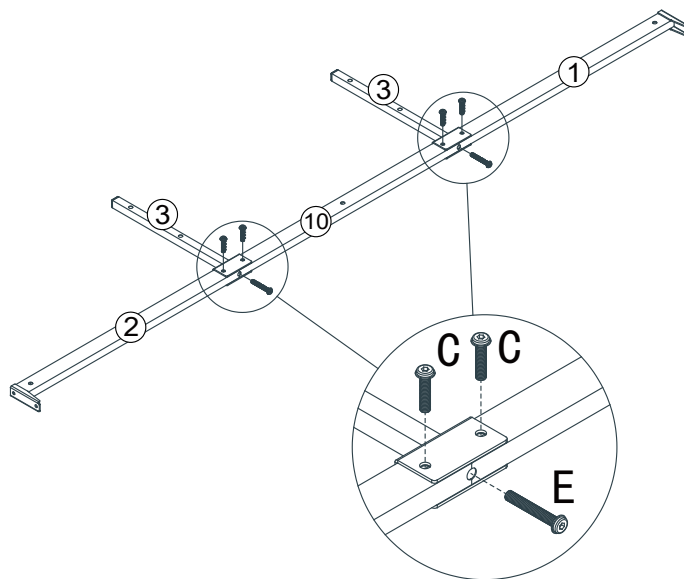


C		8pcs
M8x35		
E		4pcs
M8x55		

9

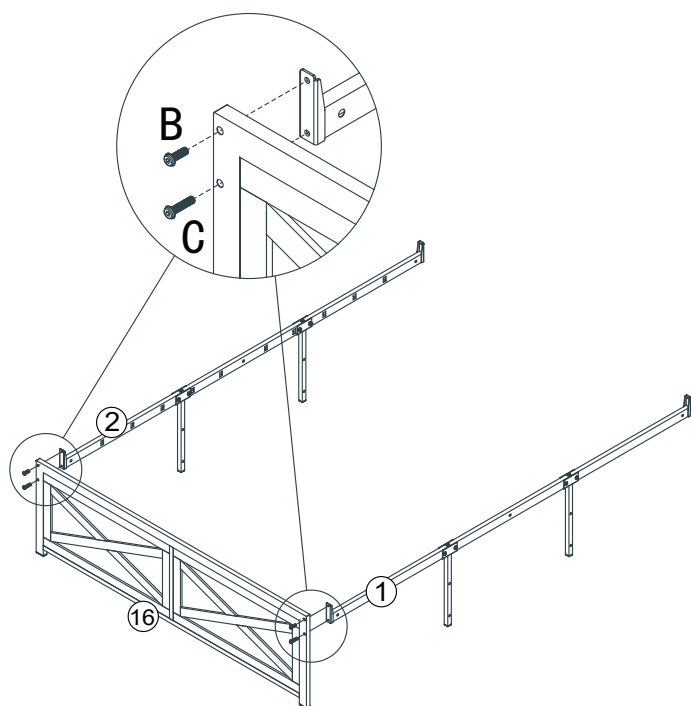

B	 2pcs
C	 2pcs


10

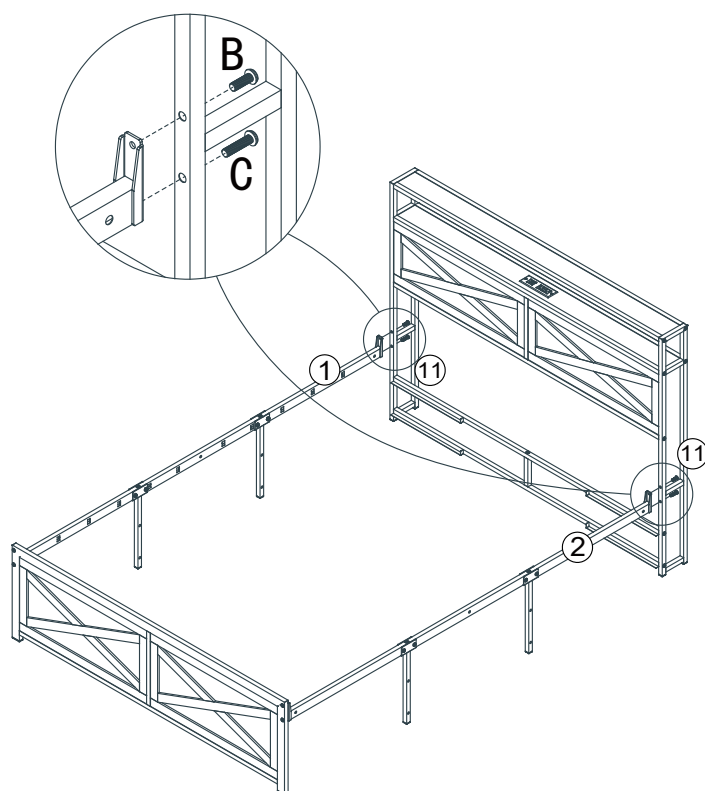

B	 2pcs
C	 2pcs


11

x2

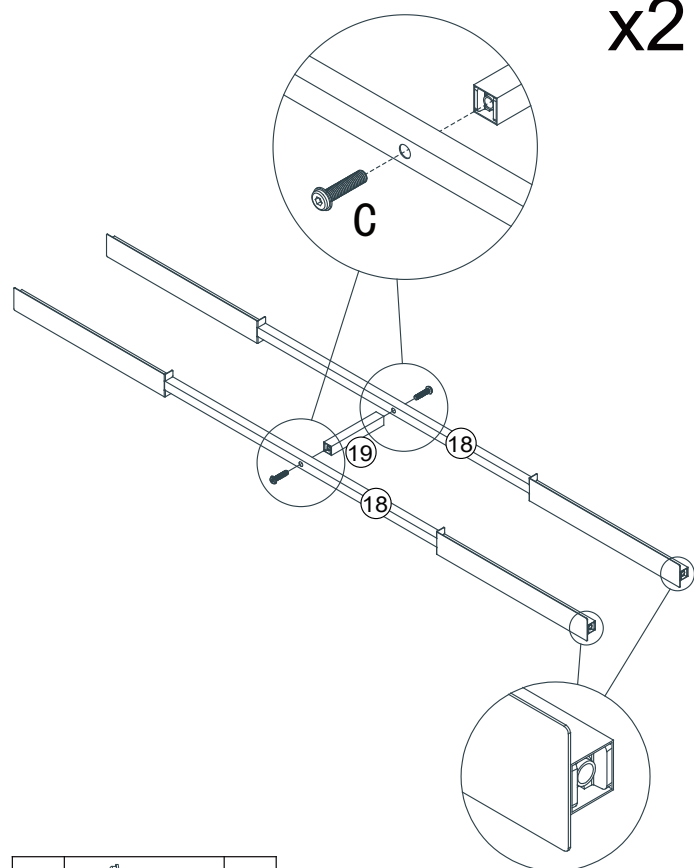

C	 4pcs
---	--


12

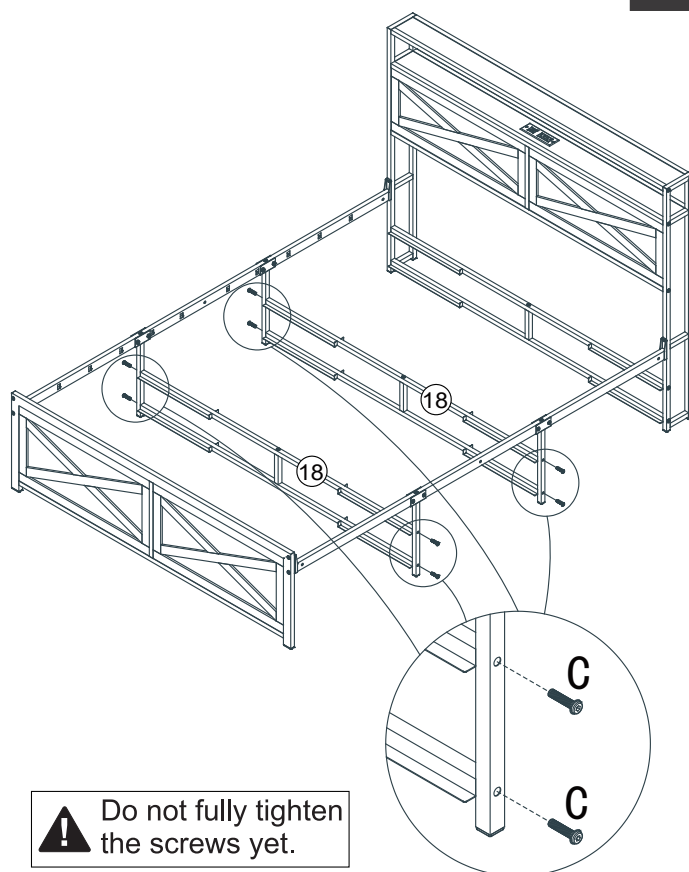

 Do not fully tighten the screws yet.

C	 8pcs
---	---


13

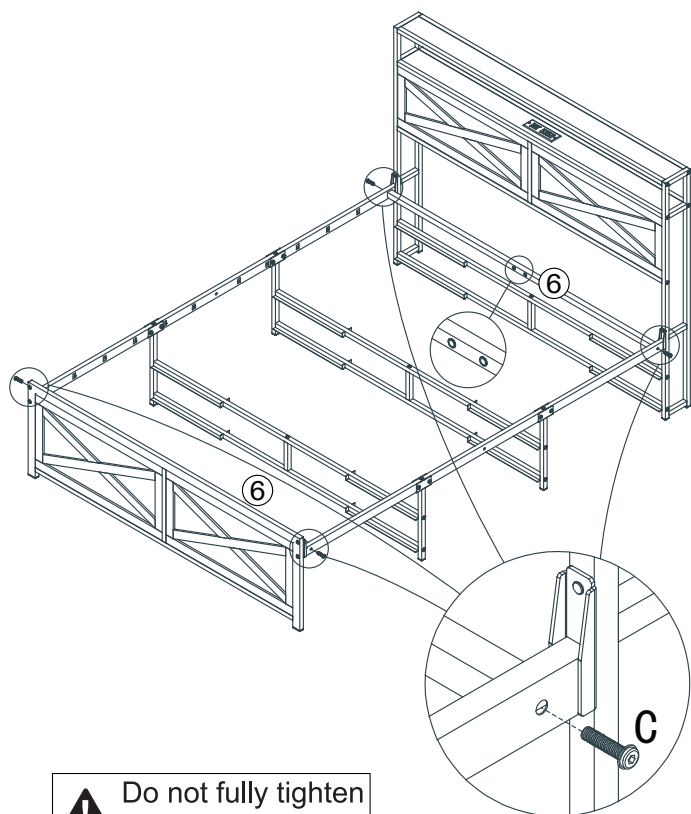

C		4pcs
---	---	------

M8x35

14

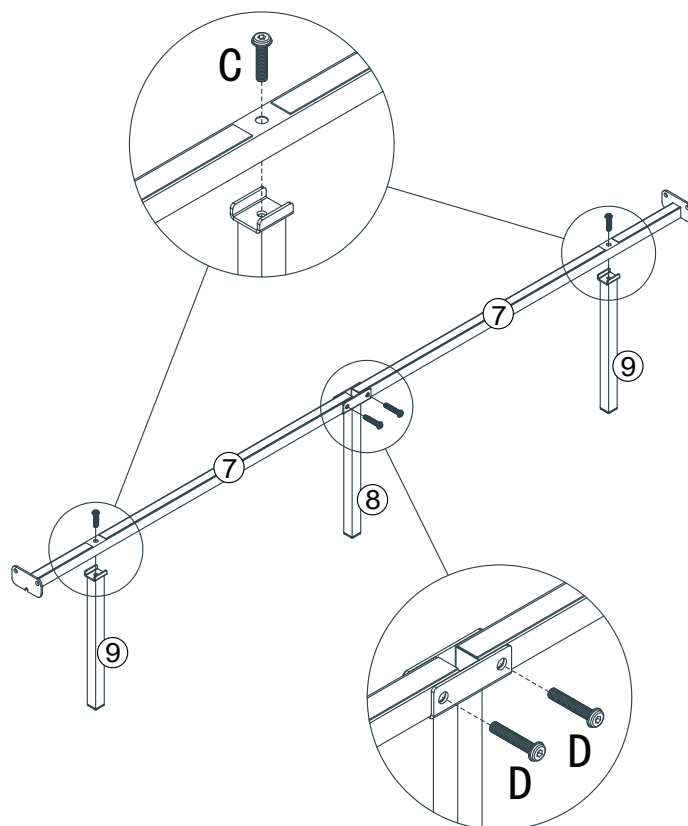


C		2pcs
D		2pcs

M8x35

M8x45

! Do not fully tighten the screws yet.


15

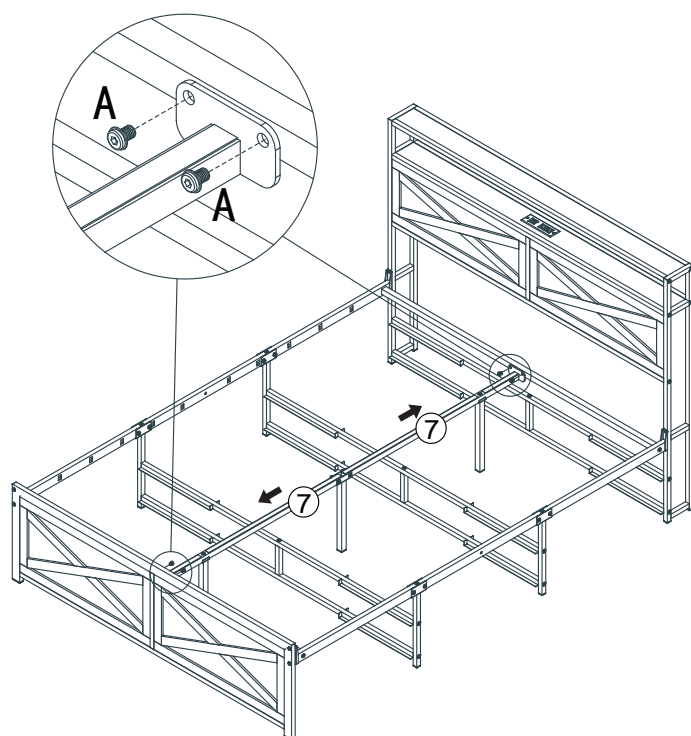

A		4pcs
---	---	------

M8x12

16

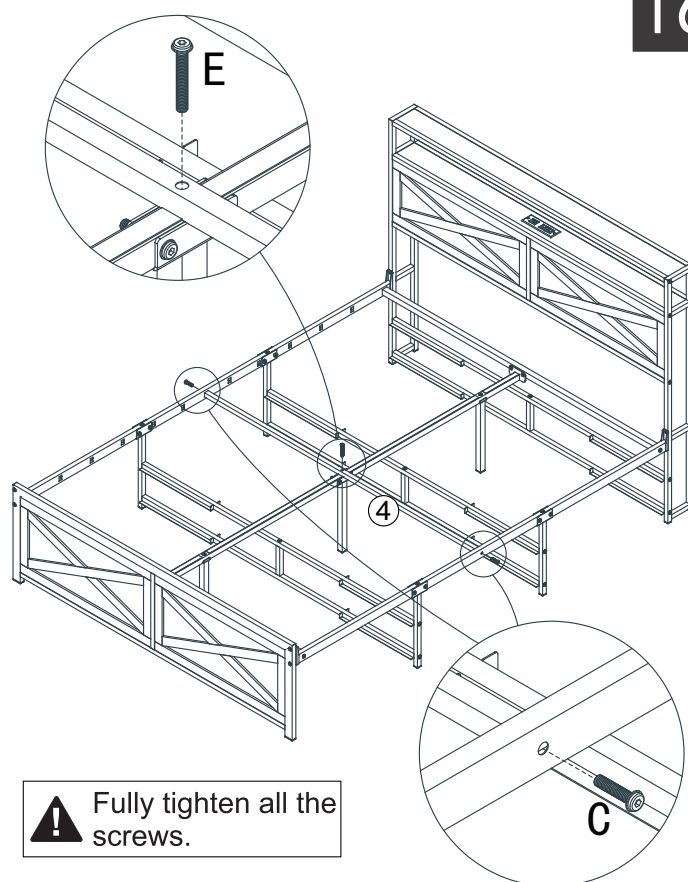


C		2pcs
E		1pc

M8x35


M8x55

! Fully tighten all the screws.

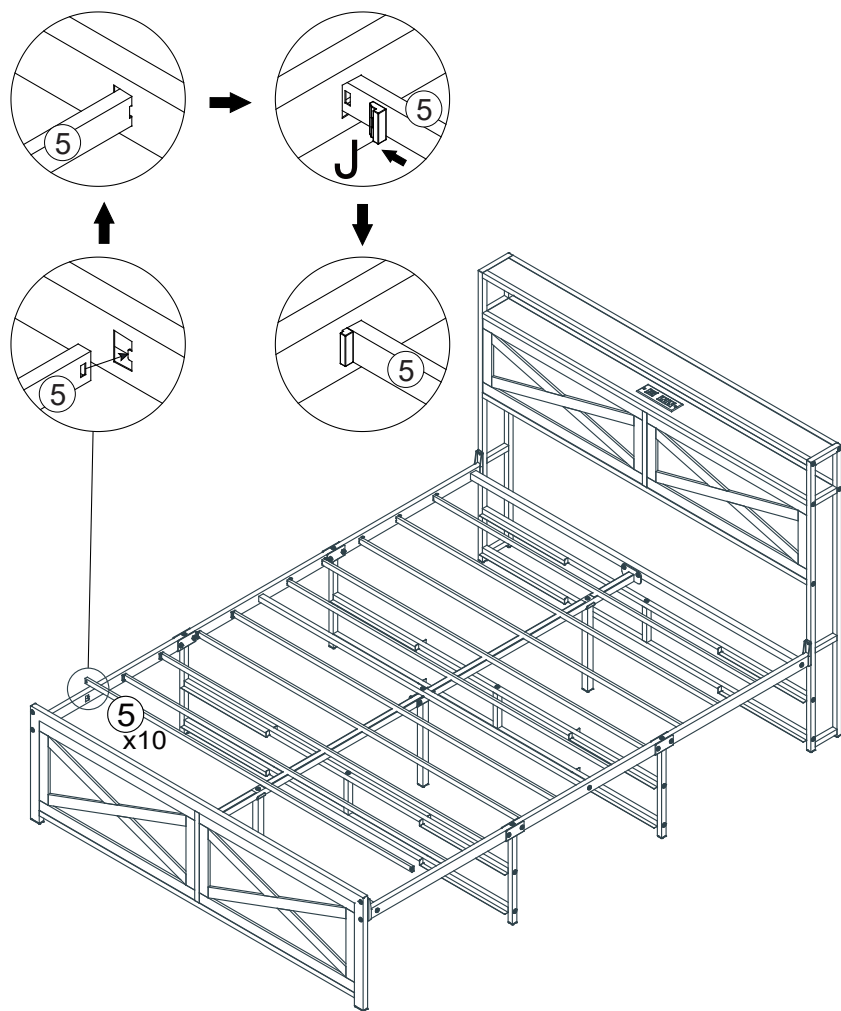


J		20pcs
---	---	-------


x12

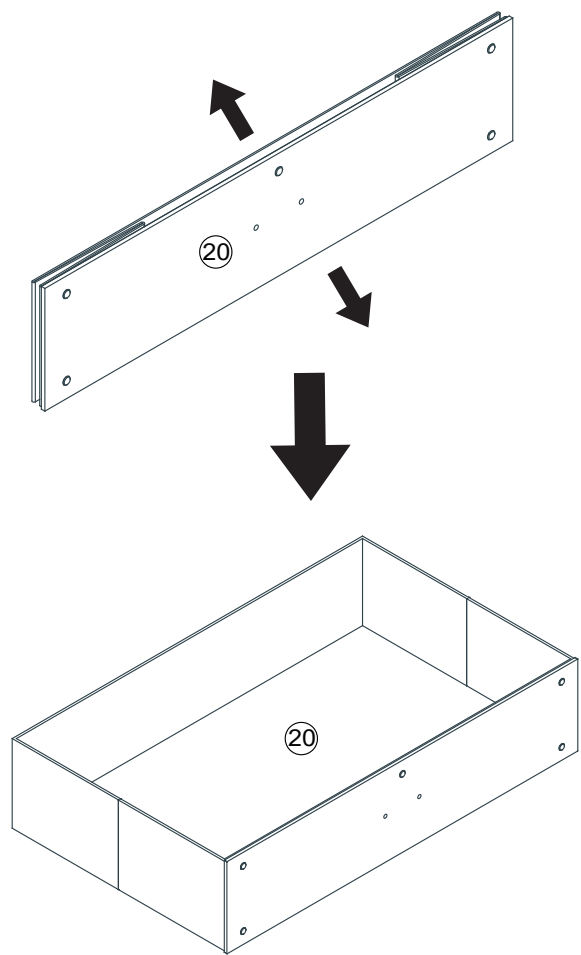


x12

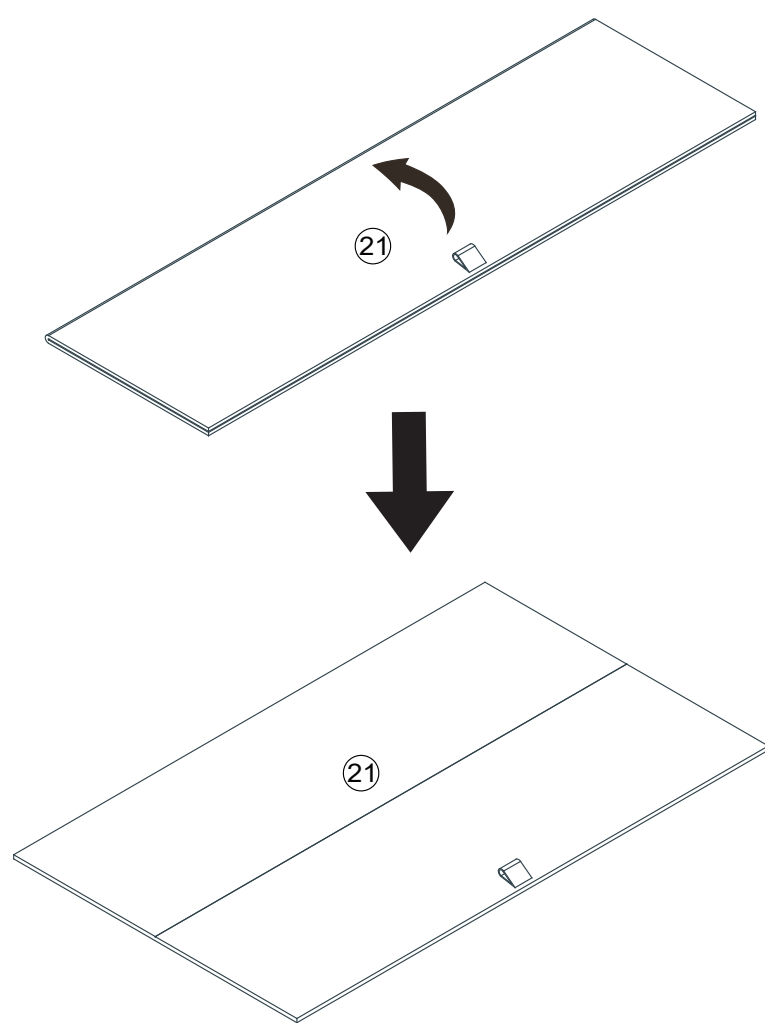

x12

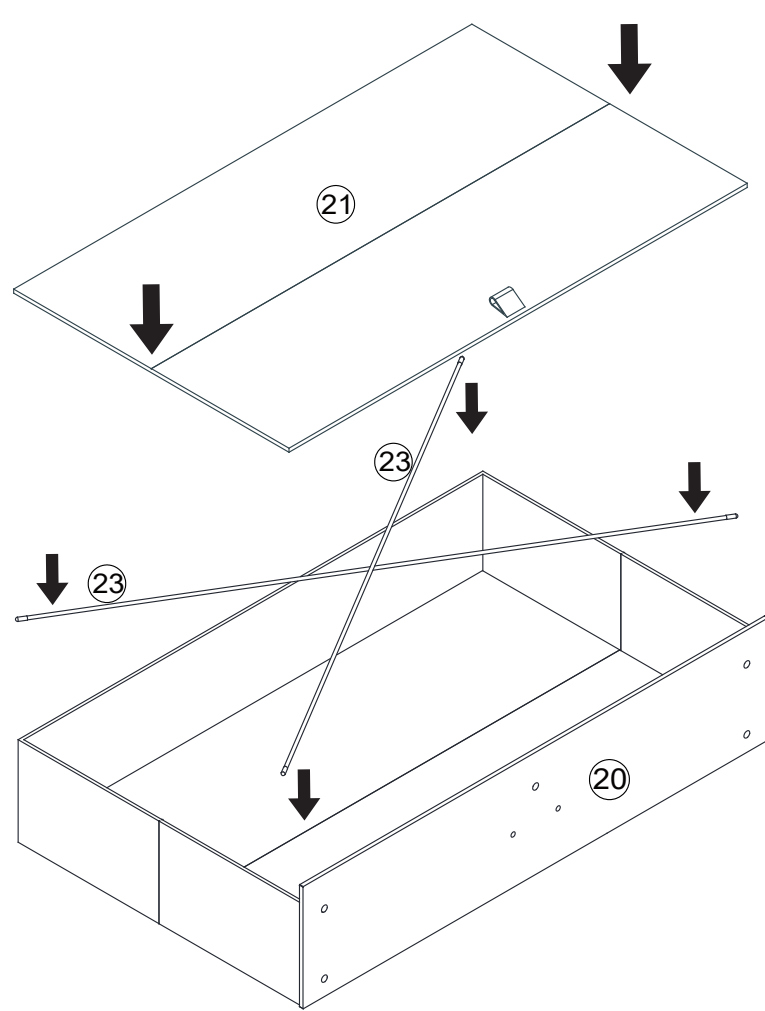



x12 **21**

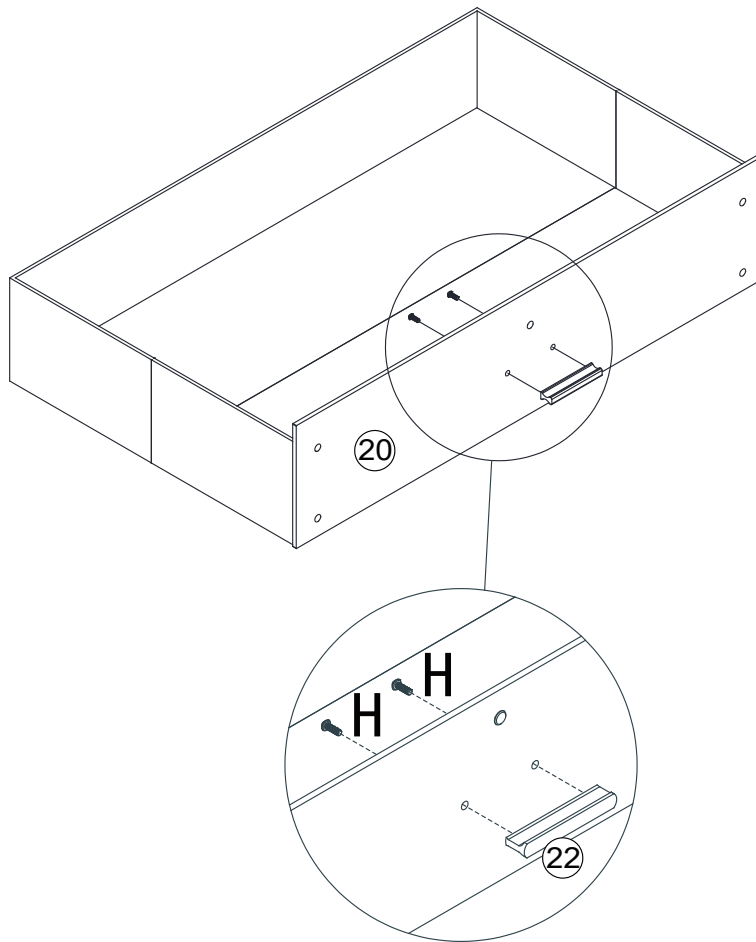

H		24pcs
M4x12		

22

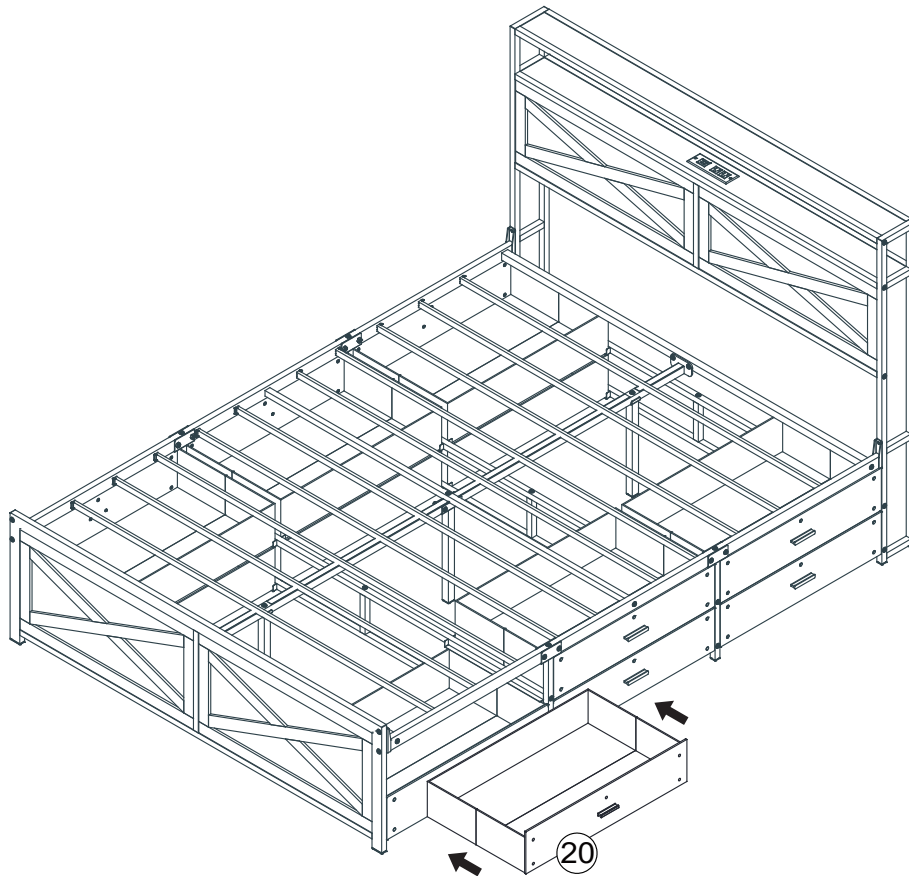

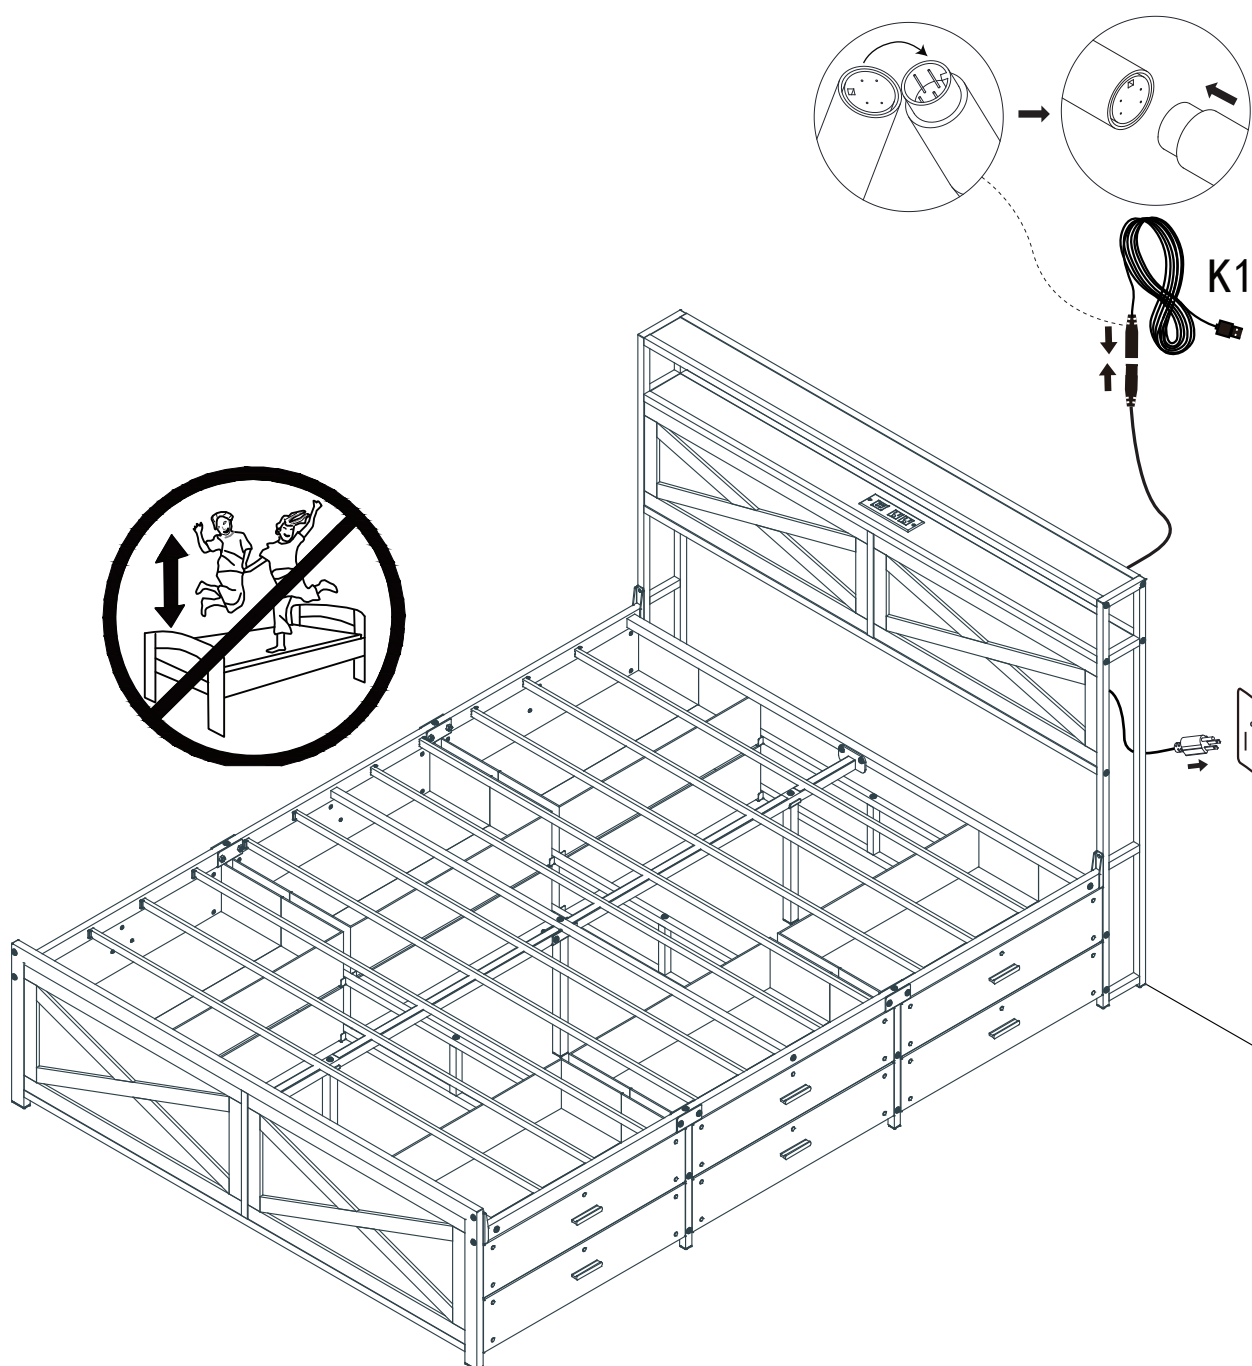

Finish