ASSEMBLY INSTRUCTIONS

FULL BED WITH BOOKCASE (PB) & TRUNDLE

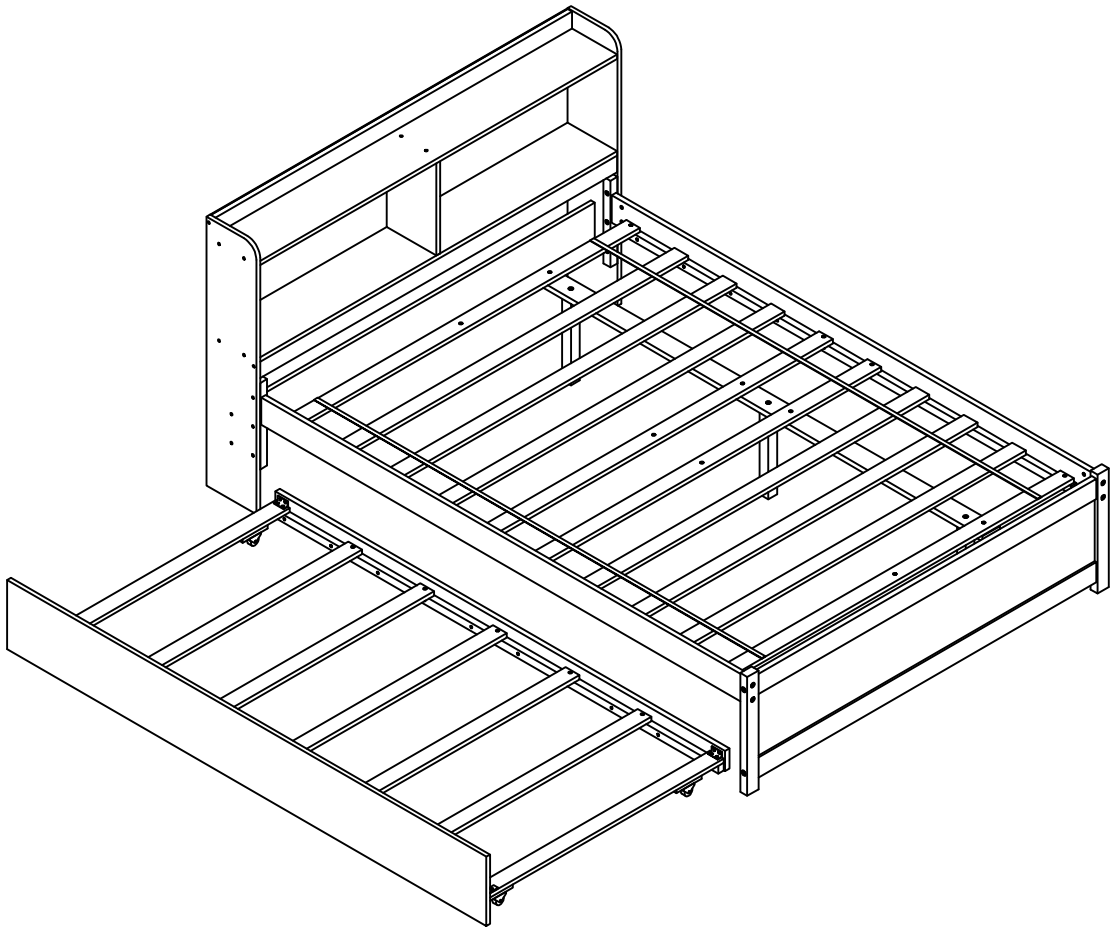

Detail View

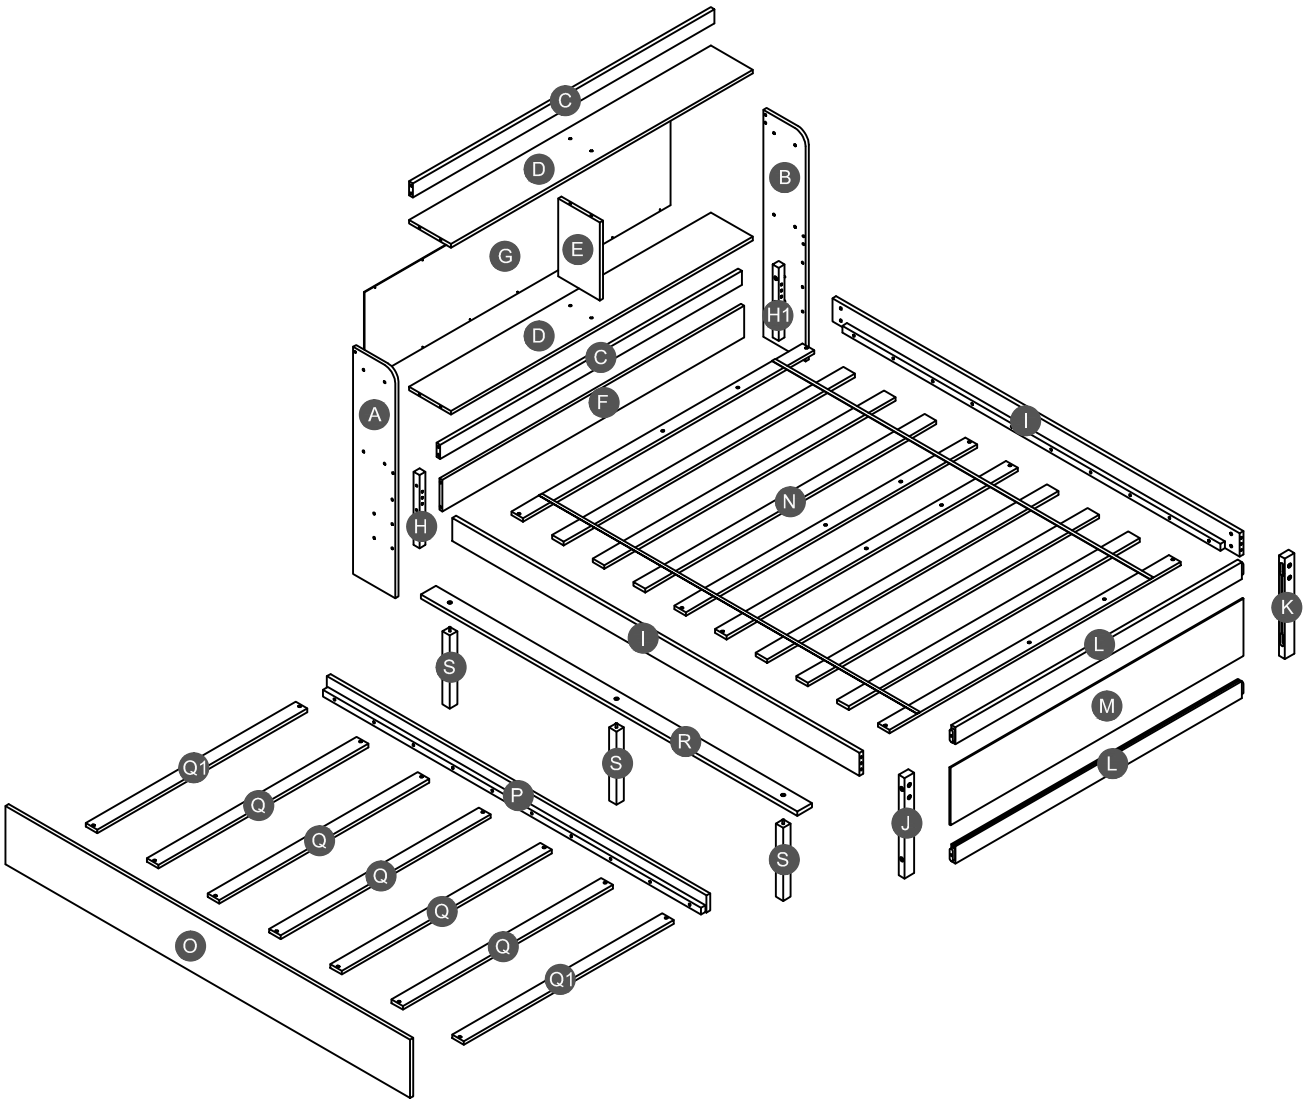

Part List

A  Panel (left) - 1pc	**B**  Panel (right) - 1pc	**C** HB horizontal - 2pcs
D  Top - Shelf panel - 2pcs	**E** Middle panel- 1pc	**F** Crossbar-1pc
G  Back panel - 1pc	**H** Vertical bar HB (left) - 1pc	**H1**  Vertical bar HB (right) - 1pc
I Side rail - 2pcs	**J**  Leg FB (left) - 1pc	**K** Leg FB (right) - 1pc
L  FB horizontal bar - 2pcs	**M**  Side panel FB - 1pc	**N** 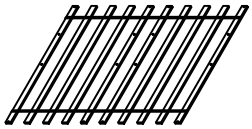 Slats - (Set = 10pcs)
O  Front panel of Trundle - 1pc	**P**  Back panel side rail of Trundle -1pc	**Q**  Slats - 5pcs
Q1 Slats - 2pcs	**R** Lower support slat - 1pc	**S**  Leg support - 3pcs

Hardware List

1  Ø8*30mm	**2**  (Ø15)1/4"*80mm	**3**  (Ø12)1/4"*60mm
Wood dowel (8pcs)	Hex-Head bolts (12pcs)	Hex-Head bolts (20pcs)
4 (Ø12)1/4"*40mm	**5** 1/4"*15 (9.5mm)	**6** (1/4")4.5*58mm
Hex-Head bolts (6pcs)	Horizontal-Hole bolts (32pcs)	Allen key (1pc)
7  Ø4*30mm	**8**  100*63*20mm	**9** Ø3.5*15mm
Wood screws (34pcs)	Wheels (4pcs)	Wood screws (14pcs)
10 Ø3.5*15mm	**11** 95*95*18*3mm	**12** 40*18*18*2mm
Wood screws (16pcs)	Metal bracket (2pcs)	Metal bracket (2pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

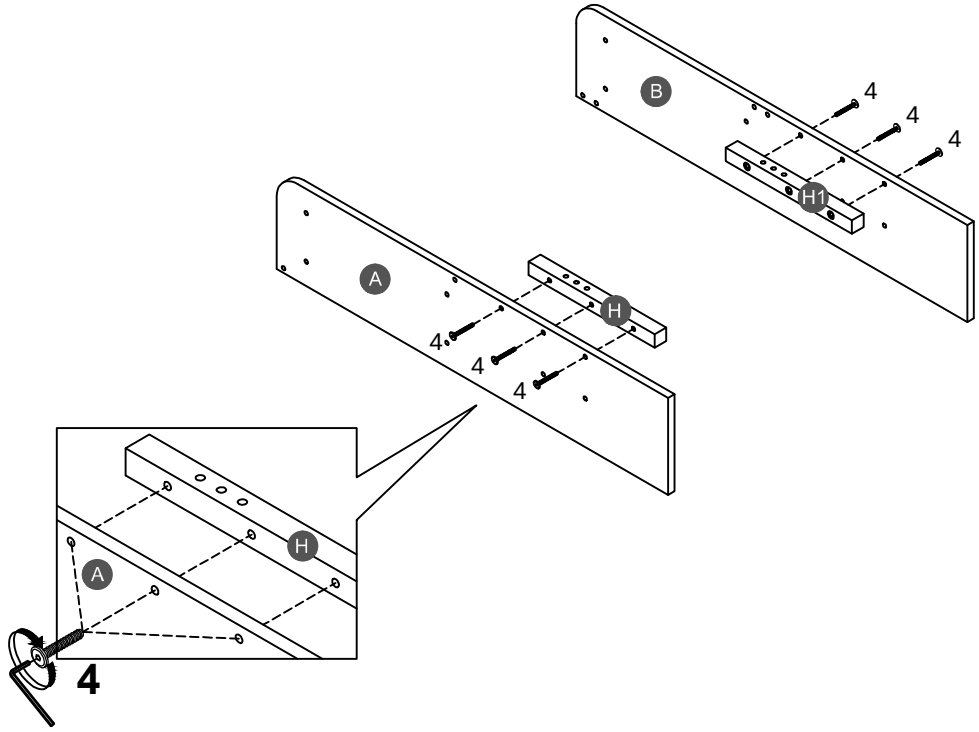

STEP 2:

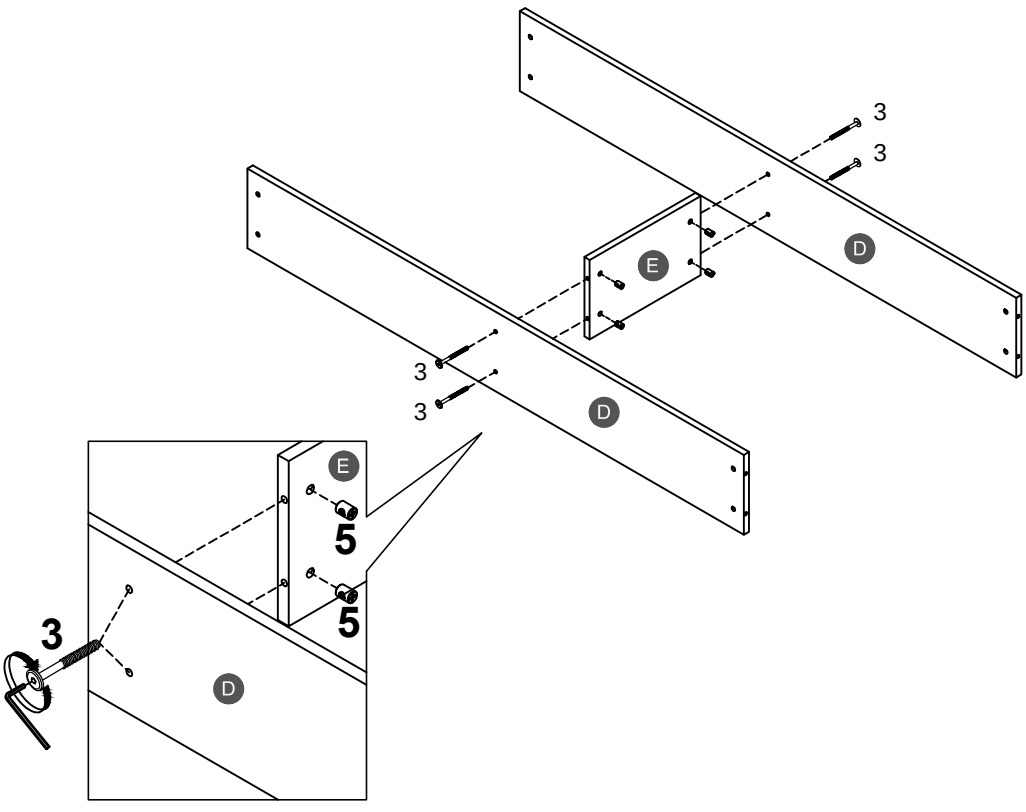

STEP 3:

1	3	5
4PCS	16PCS	16PCS

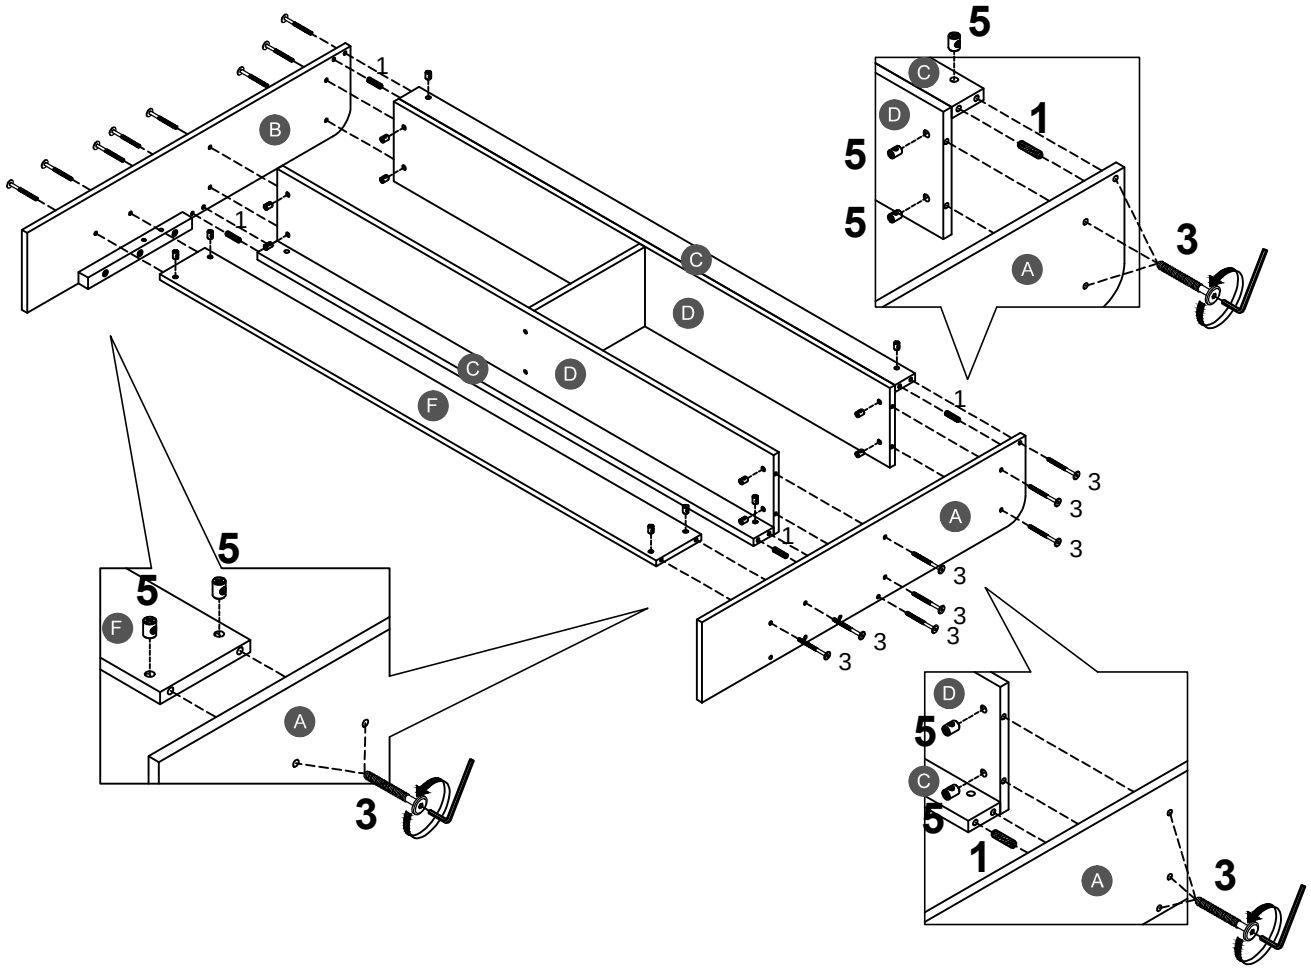

STEP 4:

9
14PCS

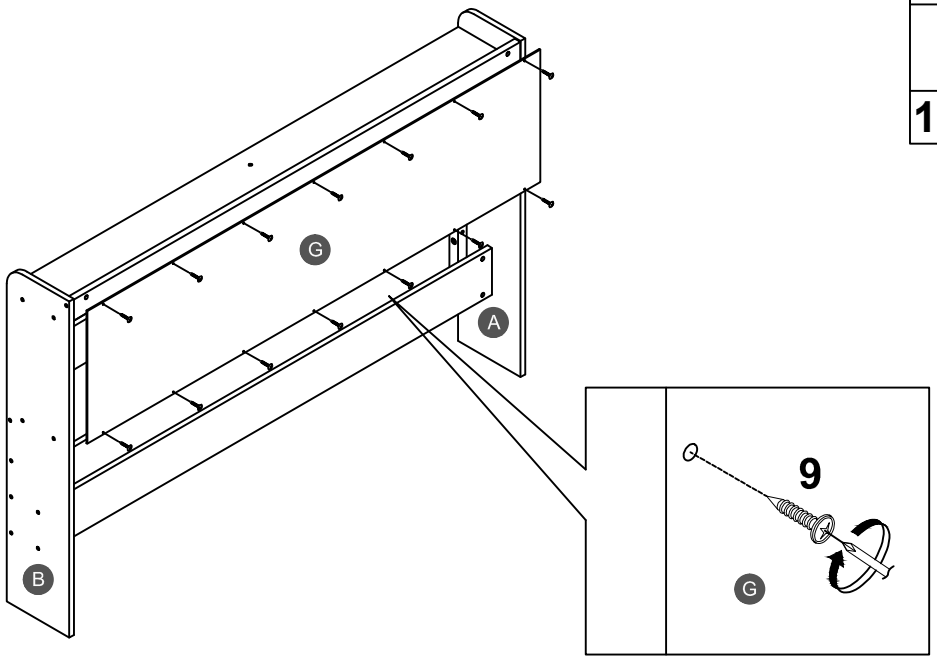

STEP 5:

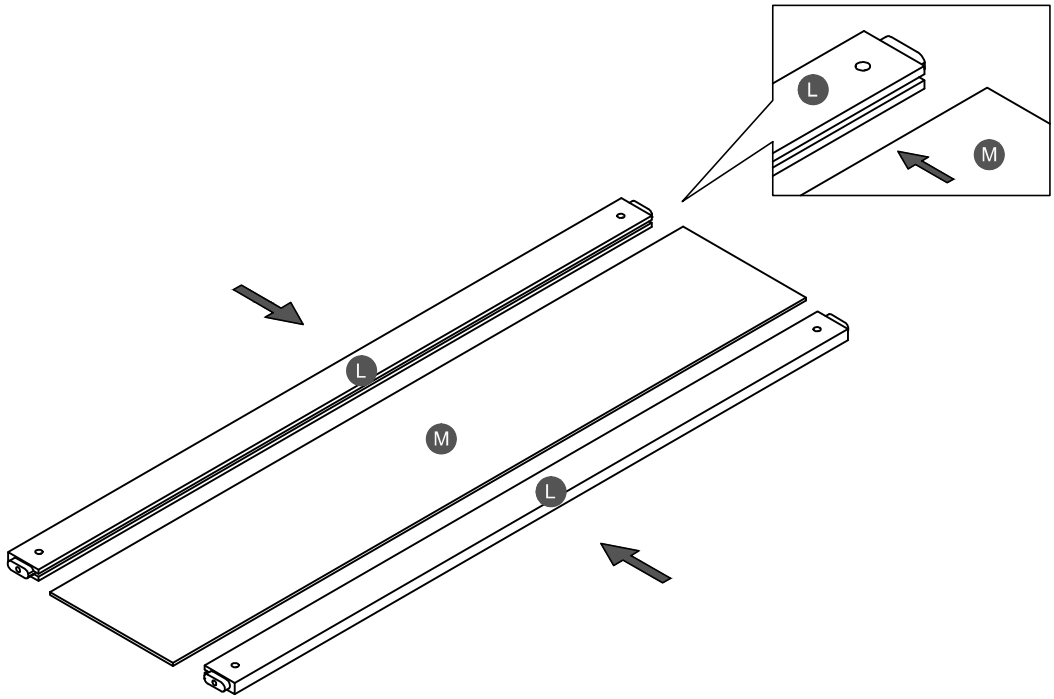

STEP 6:

2	5
4PCS	4PCS

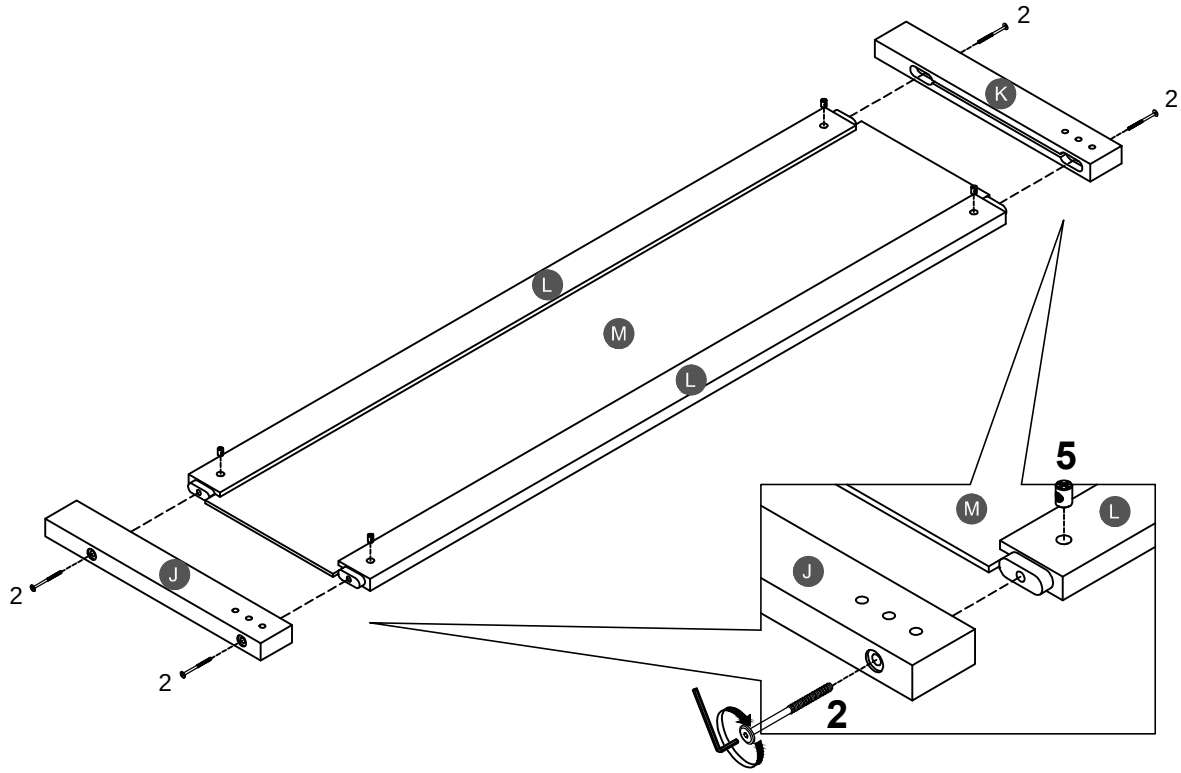

STEP 7:

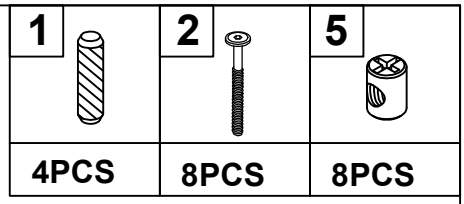

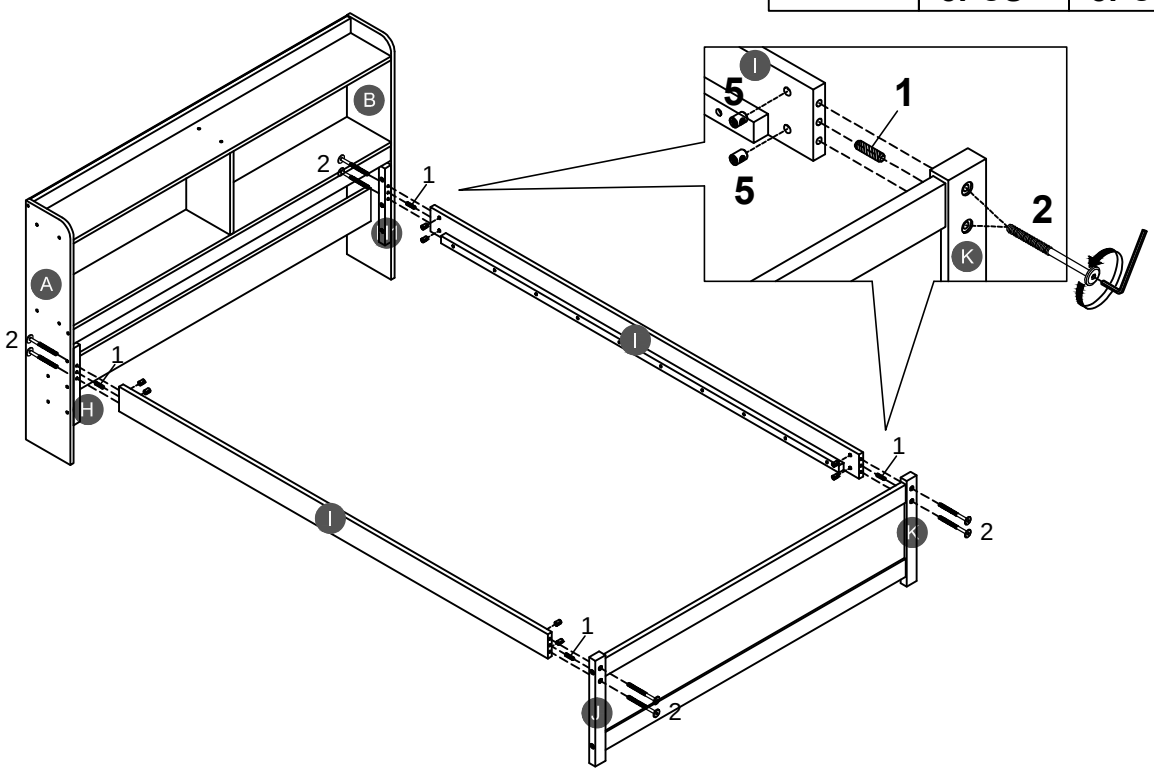

STEP 8:

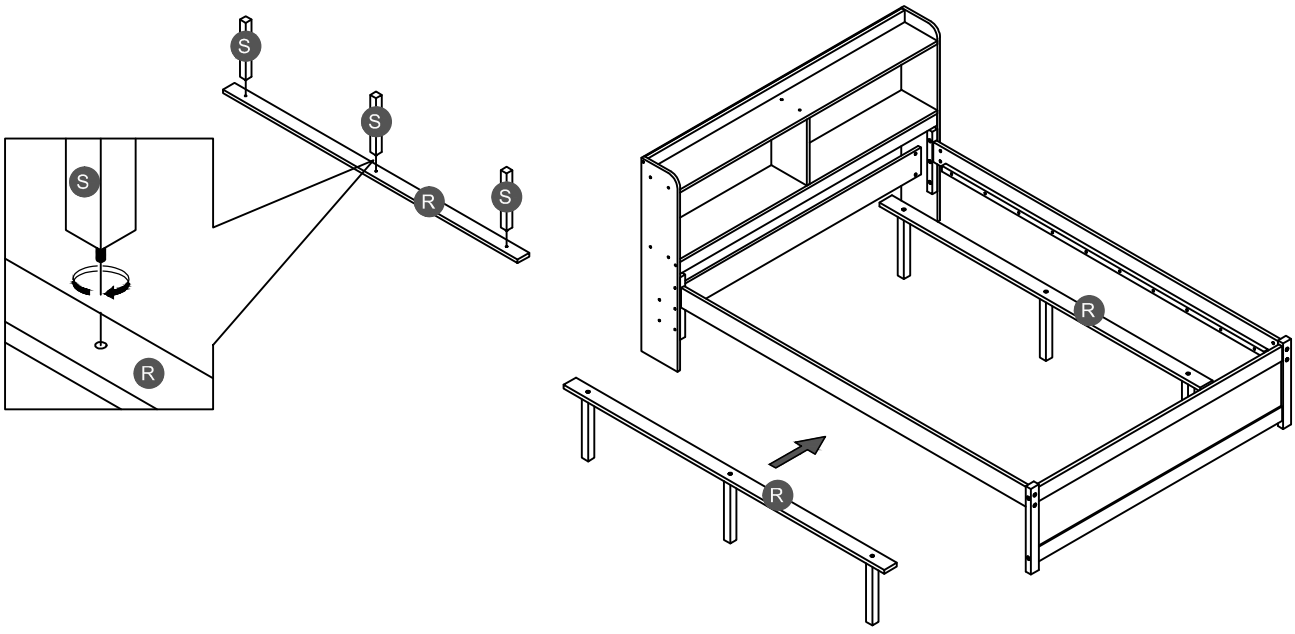

Assembling leg support (S) with lower support slat (R) later rotate, Move support slat inside Full bunkbed.

STEP 9:

7	
	12PCS

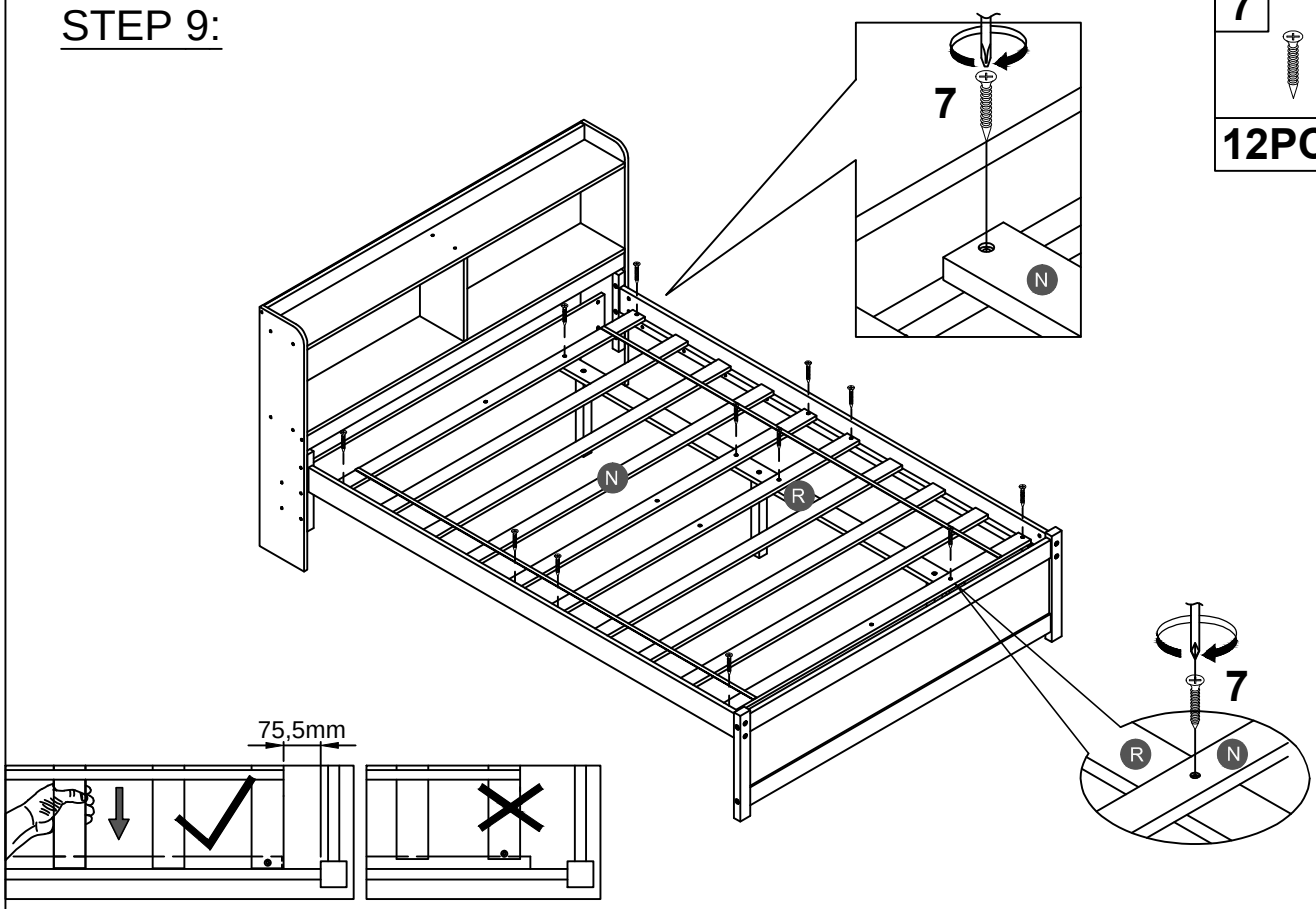

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 10:

7	8
8PCS	4PCS

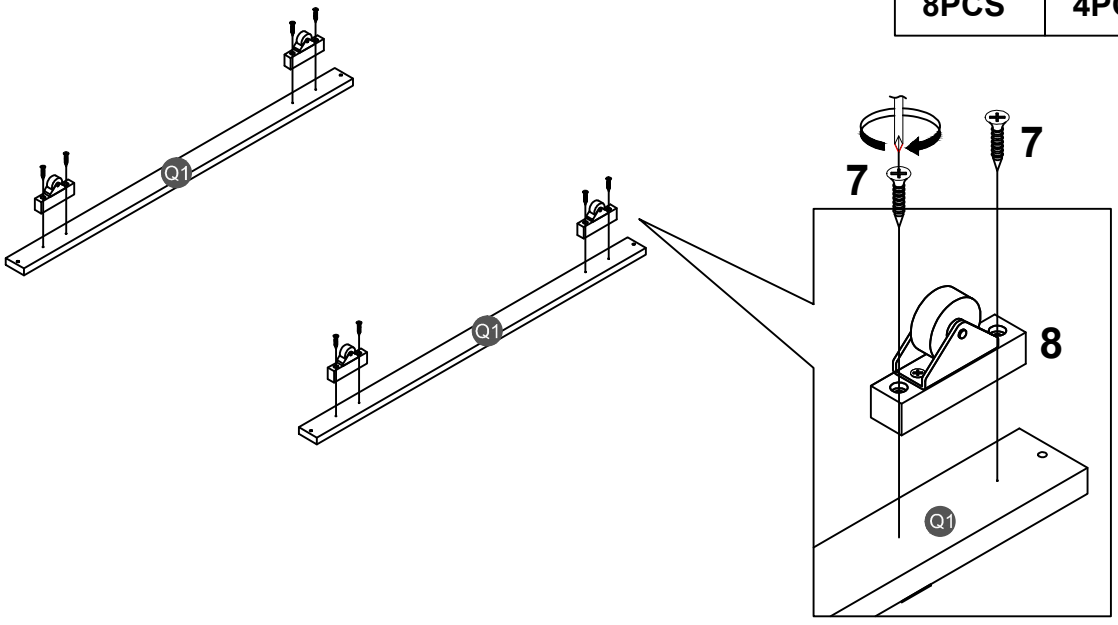

STEP 11:

7

14PCS

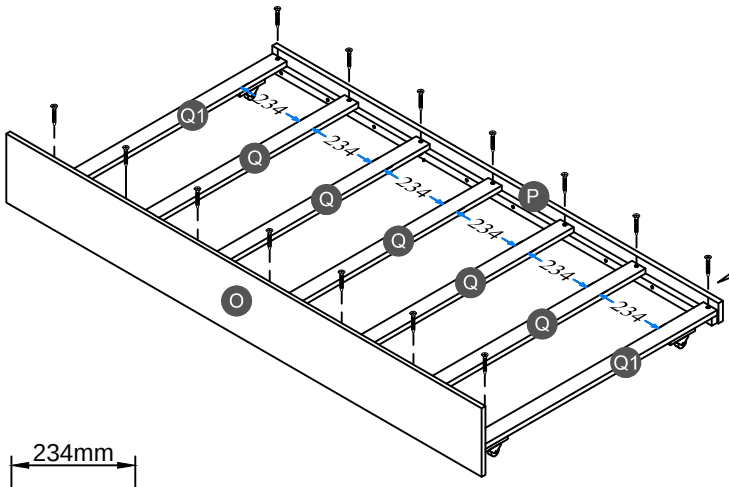

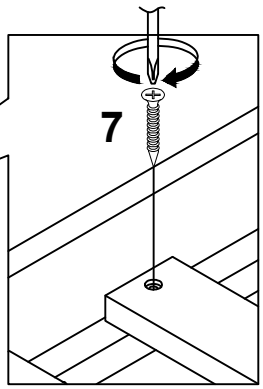

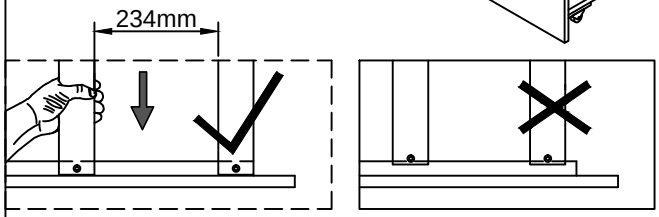

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 12:

10	11
8PCS	2PCS

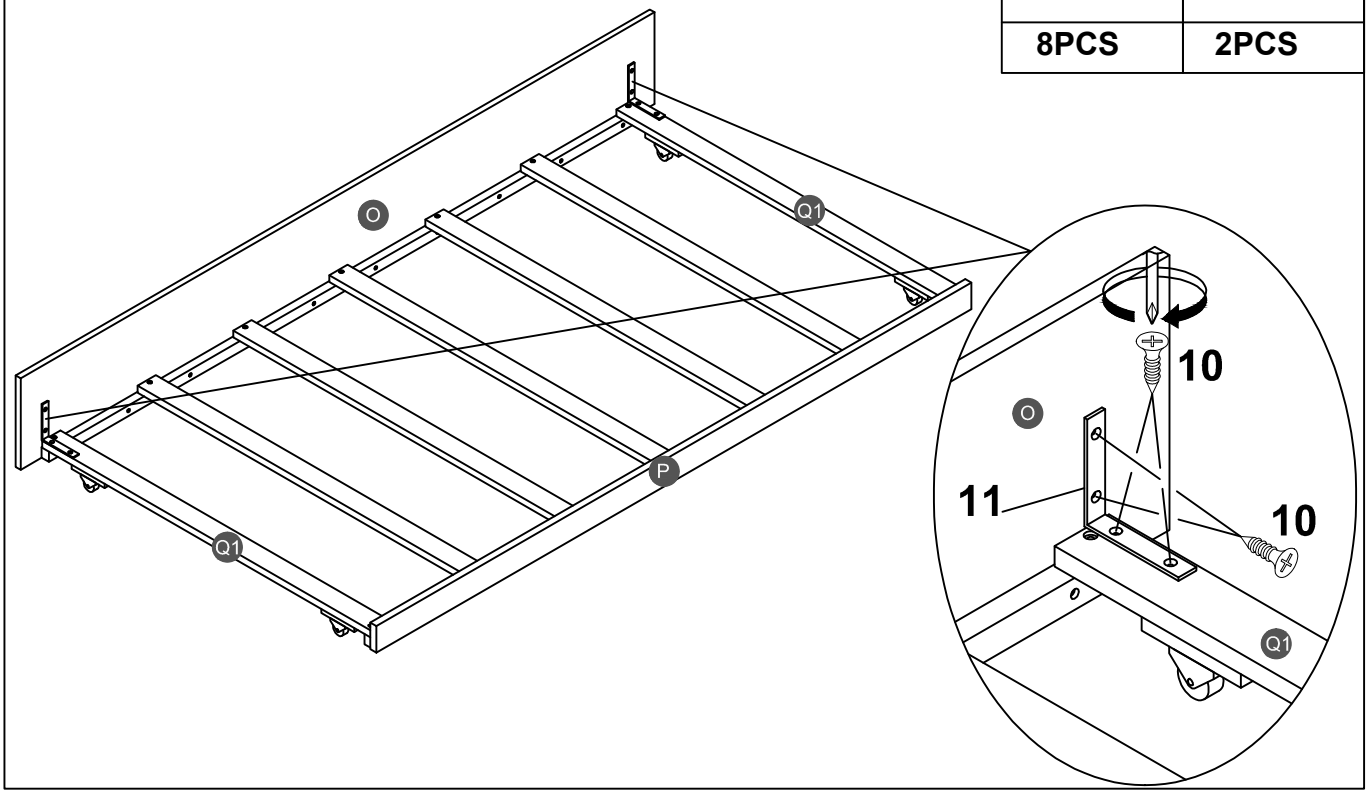

STEP 13:

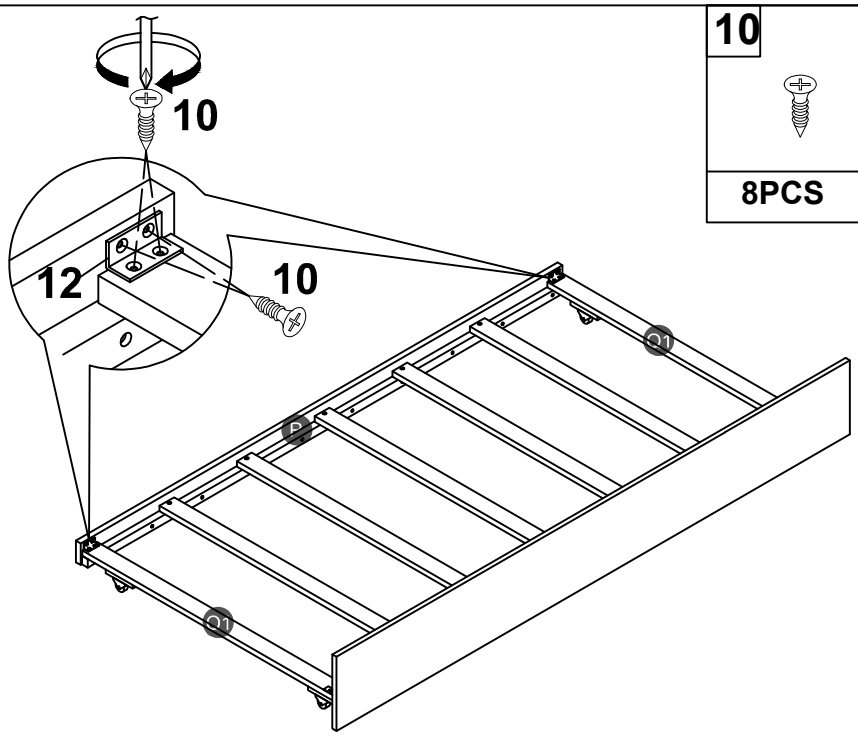

10	12
8PCS	2PCS

STEP 14:

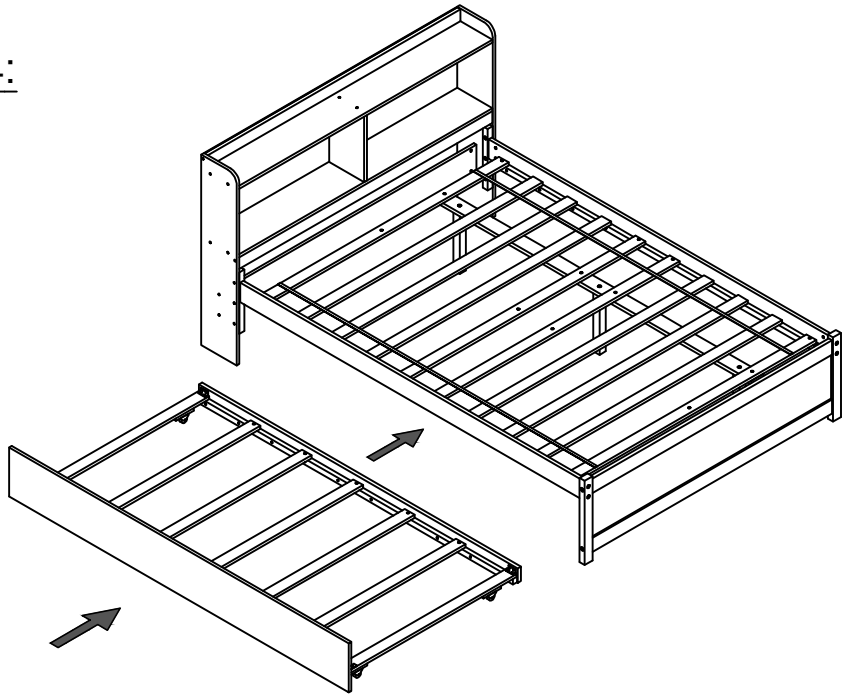
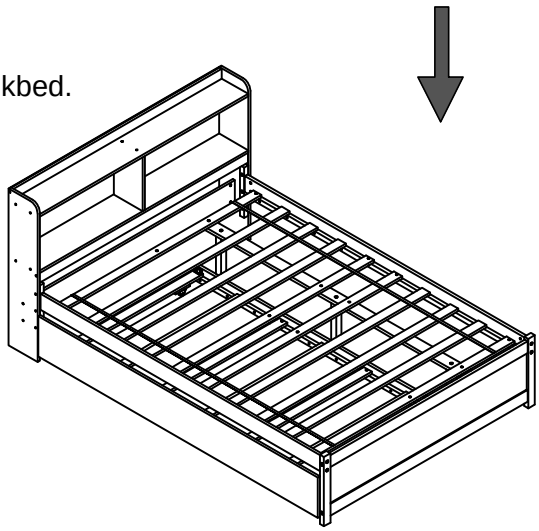
Push Trundle and Drawer under the bottom of Bunkbed.