

MG16SL 天窗安装说明

MG16SL Car skylight Installation Instructions

1. Accessories

Skylight frame (with acrylic top cover) 1 piece



Skylight inner frame 1 piece



Installation accessories 1 pack




2. Installation preparation


- 1) Personnel: It is best to assist in the installation with two persons (one person can also complete the installation)
- 2) Preparation materials: waterproof glass glue (structural glue)

3. Installation steps

- 1) Make holes in the roof according to the size of the sunroof

Take a 500*500mm sunroof as an example, the opening installation size is 500*500mm.

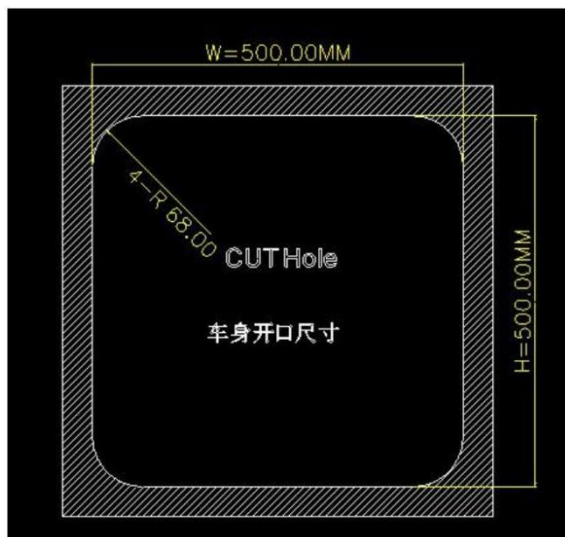

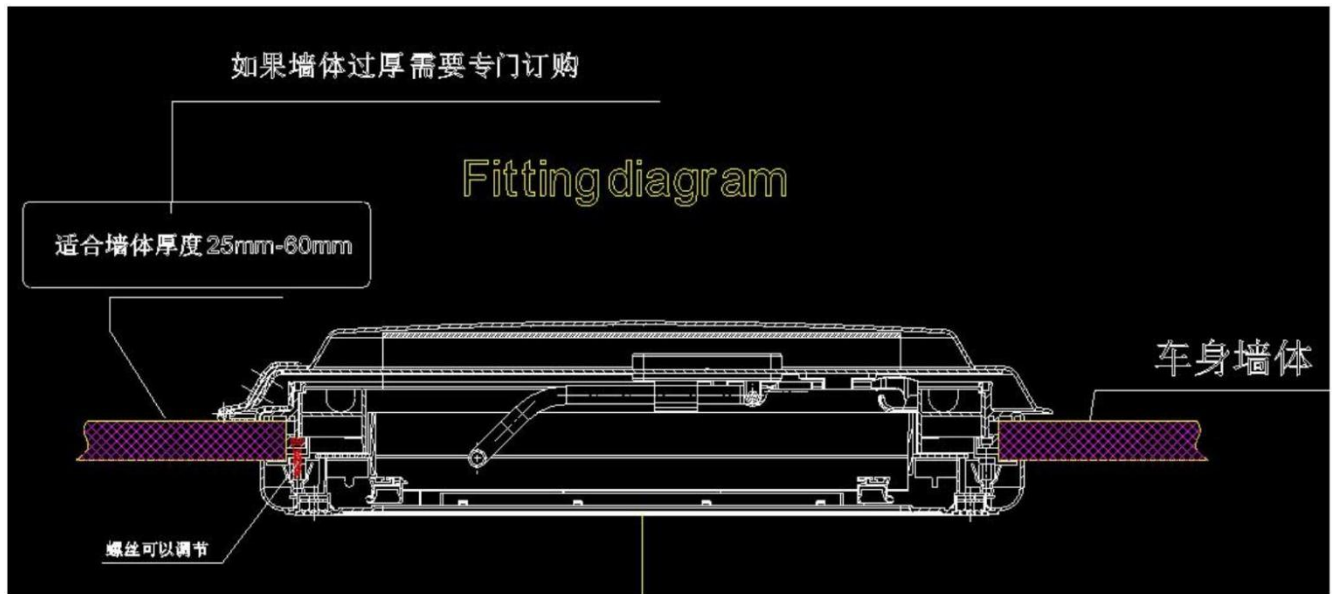

2) Install the frame


a) Align the groove of the outer frame of the skylight, and apply glass glue until it is saturated



b) Align the outer frame with the opening on the roof and squeeze it firmly until the glass glue overflows (do not use too much force during the squeezing process, which will easily cause the glass Damaged glass, need to apply force slowly)



c) Take out the weights and nuts from the accessory kit, align the weights with the holes and studs on the inner side of the outer frame of the skylight and insert them

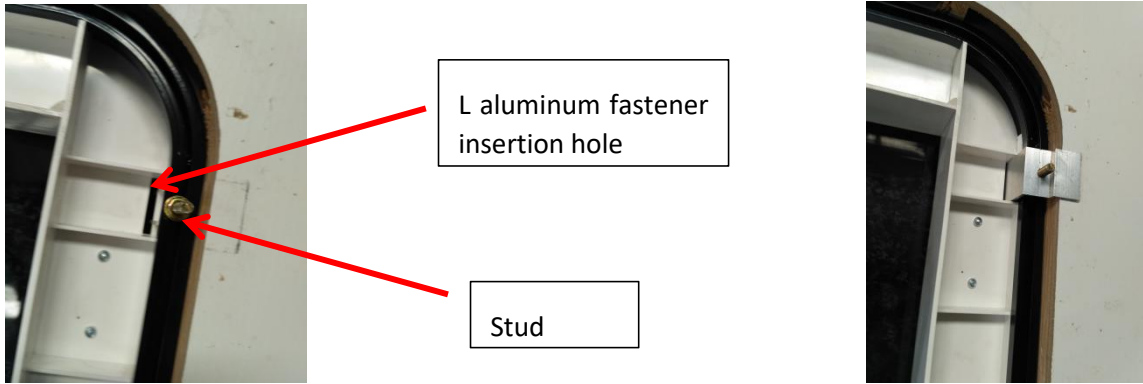

3) Install the inner frame

- 1) Install the nut on the round head stud and tighten
- 2) Align the buckle on the inner frame with the nut and pat it in firmly



4) Wiring installation is installed according to your design

5) The whole installation is over

