
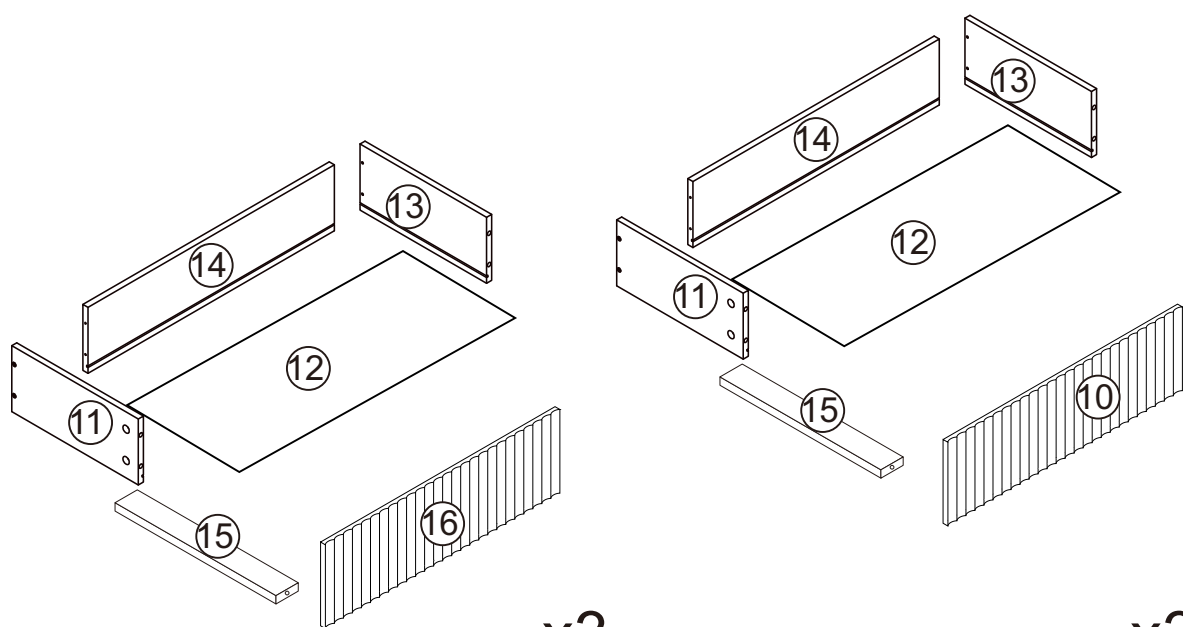















Installation instruction

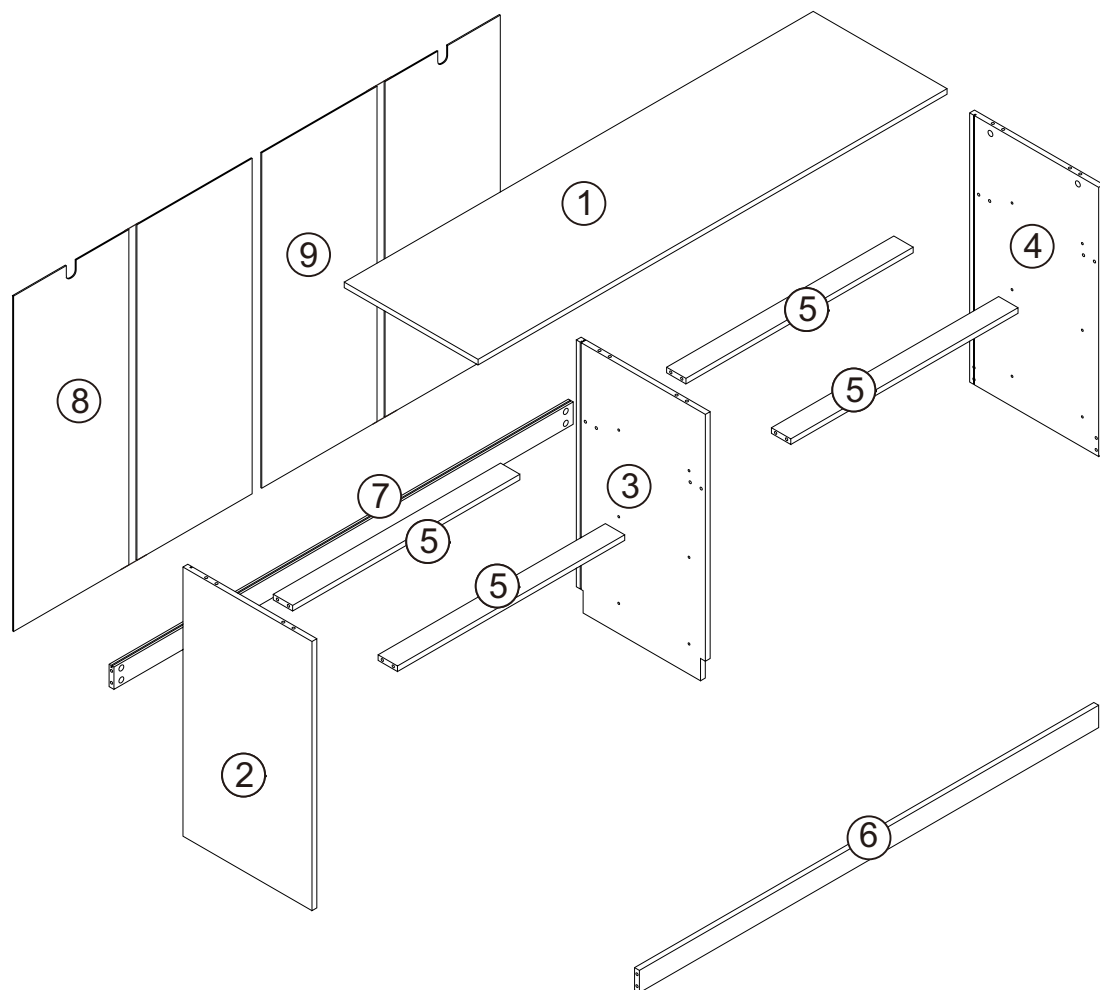










x3

x3

Parts and Operation Elements

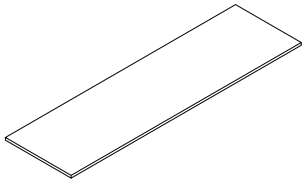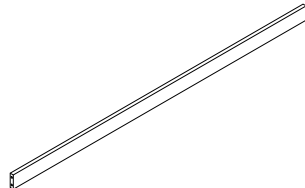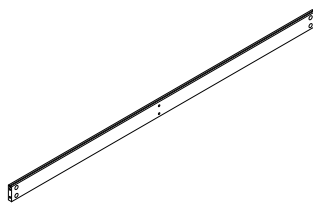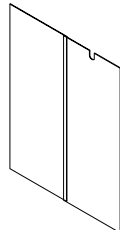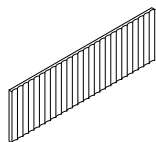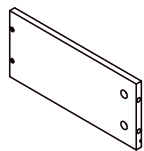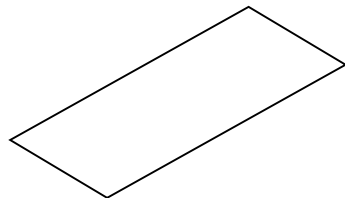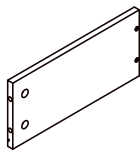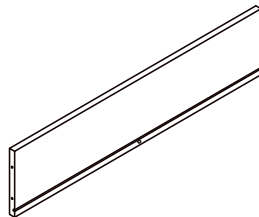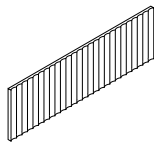					
①	1pc	②	1pc	③	1pc
					
④	1pc	⑤	4pcs	⑥	1pc
					
⑦	1pc	⑧	1pc	⑨	1pc
					
⑩	3pcs	⑪	6pcs	⑫	6pcs
					
⑬	6pcs	⑭	6pcs	⑮	6pcs
					
⑯	3pcs				




Hardware

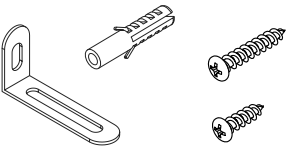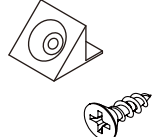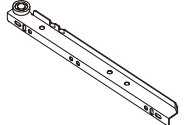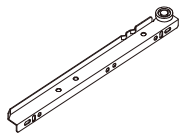 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 4x35mm screw	
A	64+2pcs	B	64+2pcs	C	6+1pcs	D	30+2pcs
 3x12mm screw		 3.5x12mm screw					
E	12pcs	F	48+2pcs	G	6pcs	H	2 pcs
 3x16mm screw		 300MM		 300MM		 300MM	
I	8pcs	CL	6 pcs	CR	6 pcs	DL	6pcs
 300MM							
DR	6 pcs						



SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

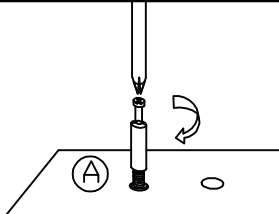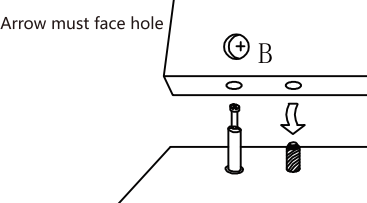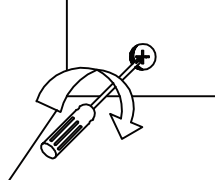			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.	Arrow must face hole	Screw the camlock firmly into locked position.

1

A x12







F x12



CR x3



CL x3

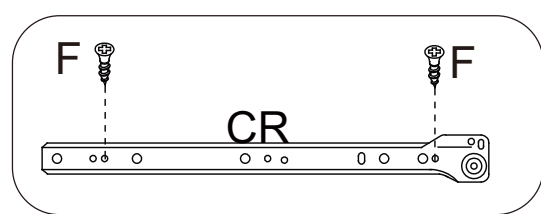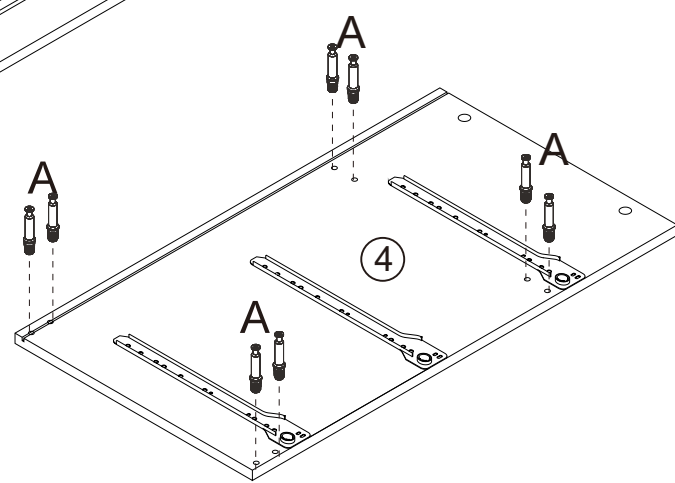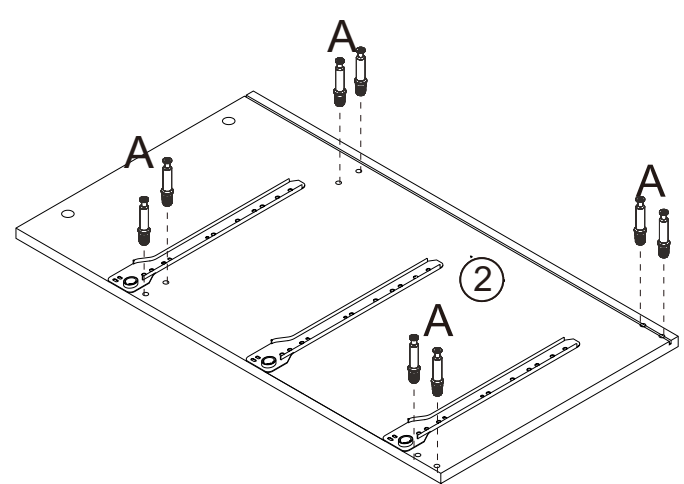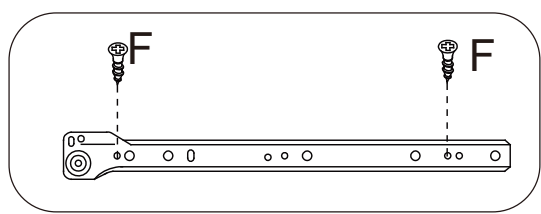

2

A x8






F x12



CR x3






CL x3

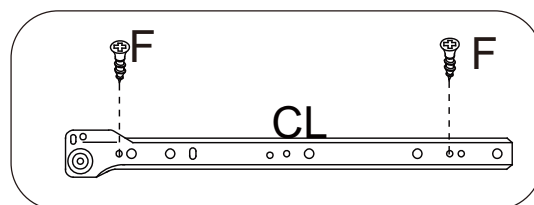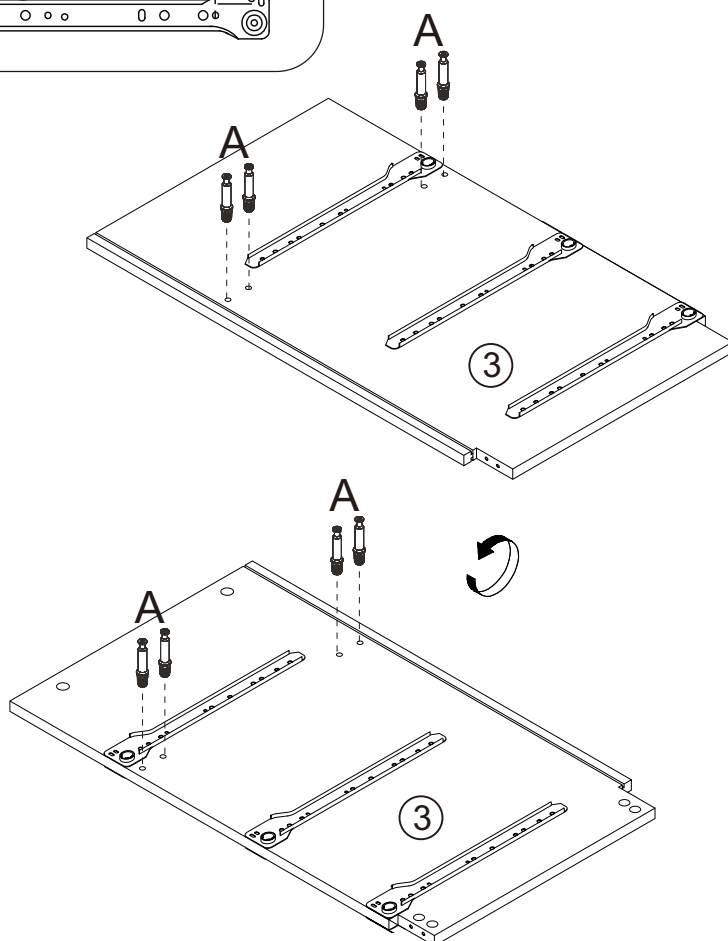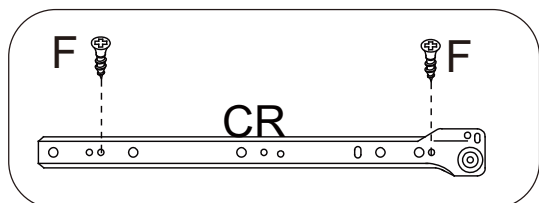



3

B x8

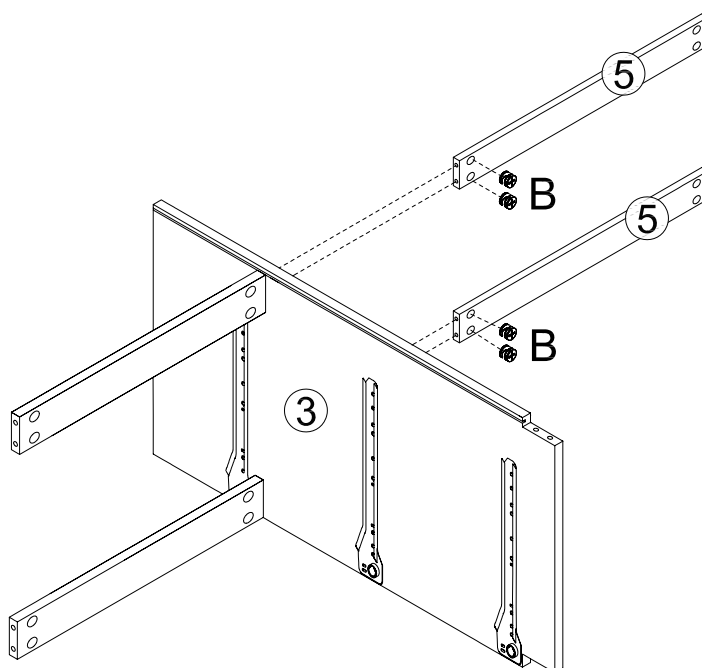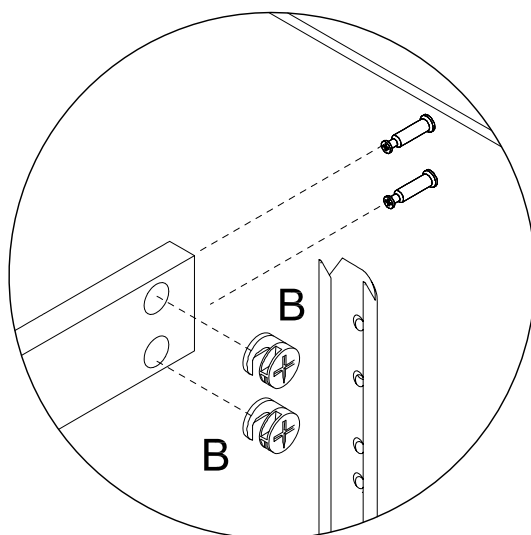
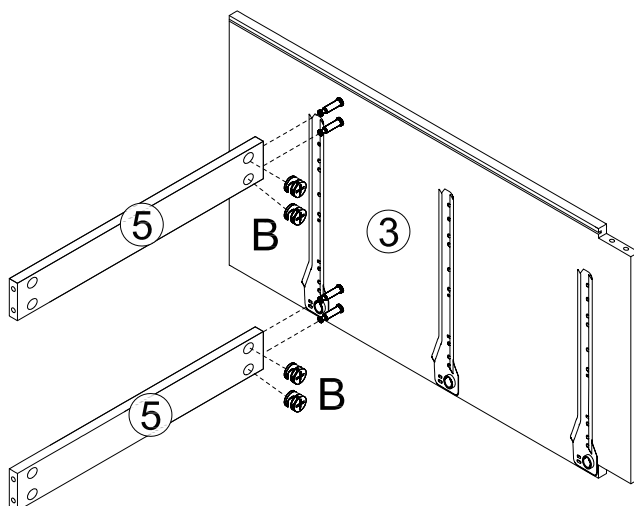


4




B x8

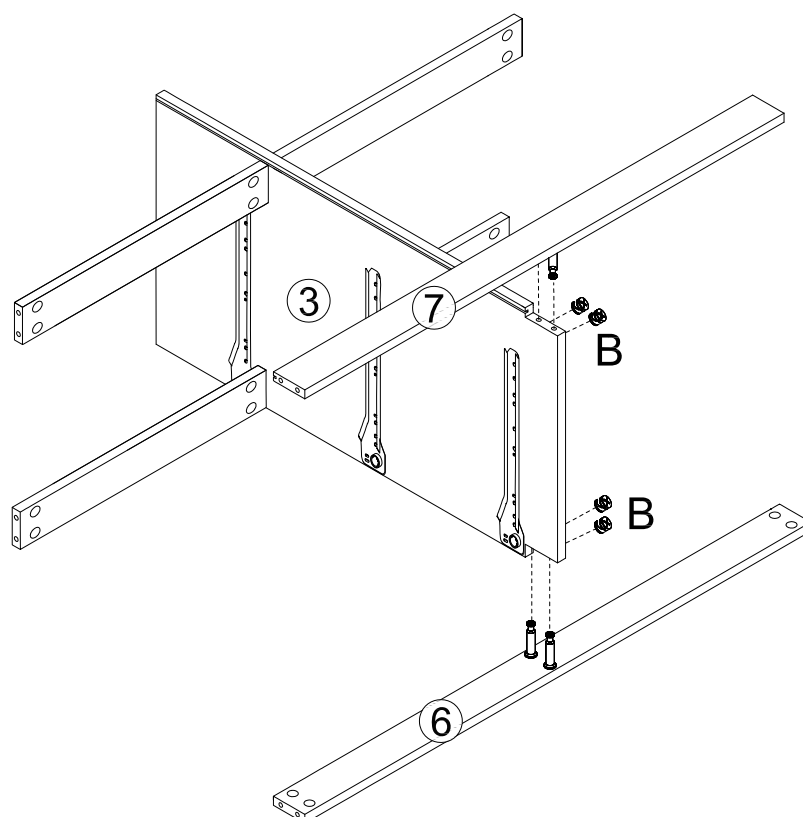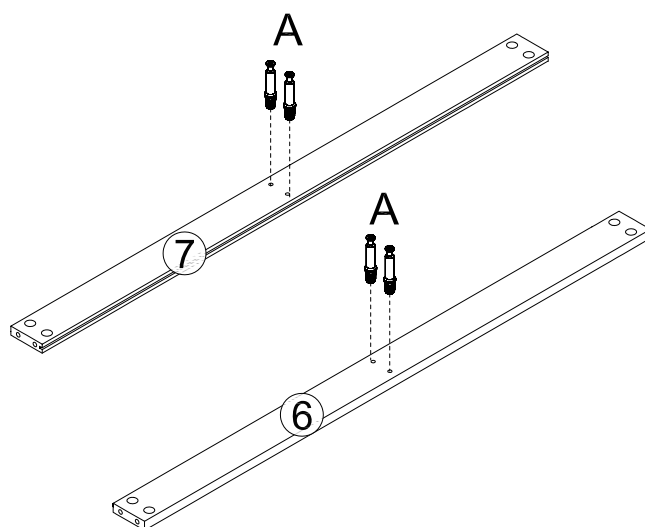


5

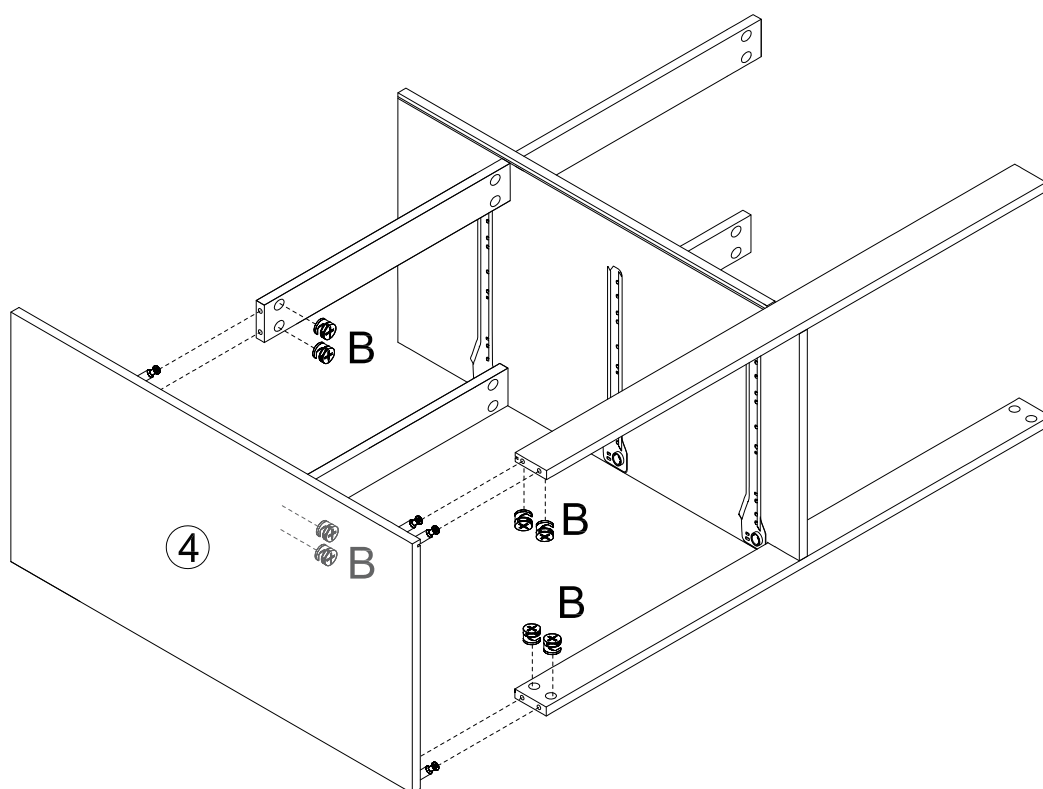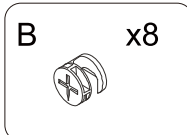

6

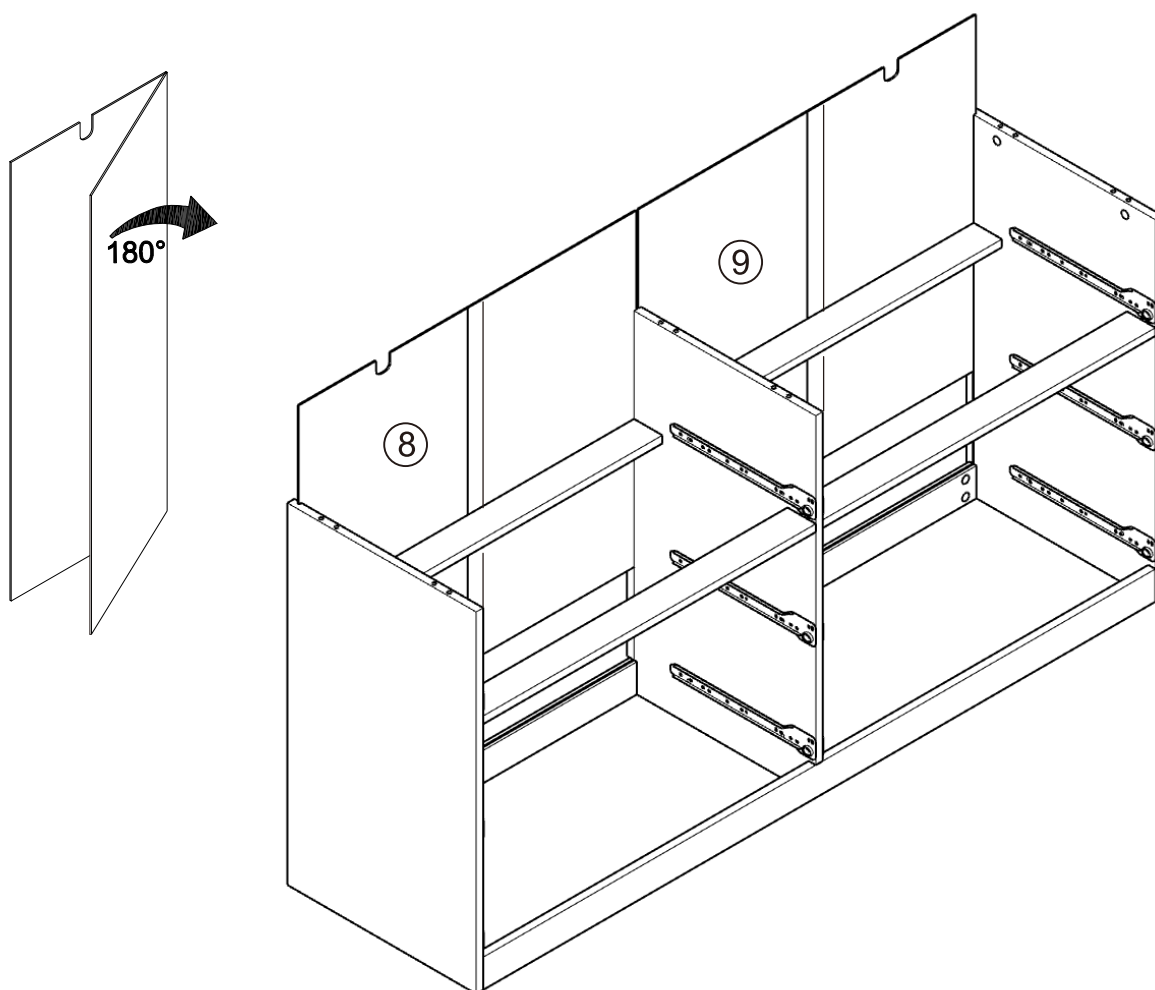
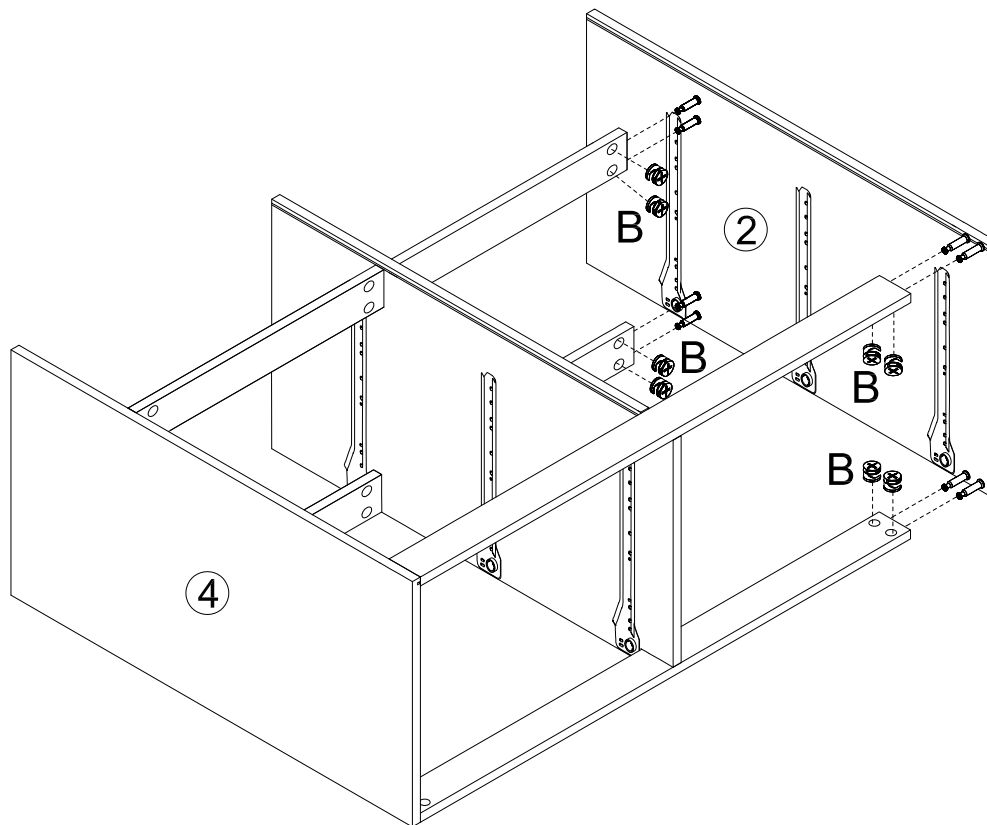
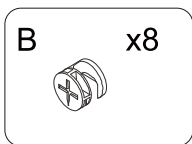


7


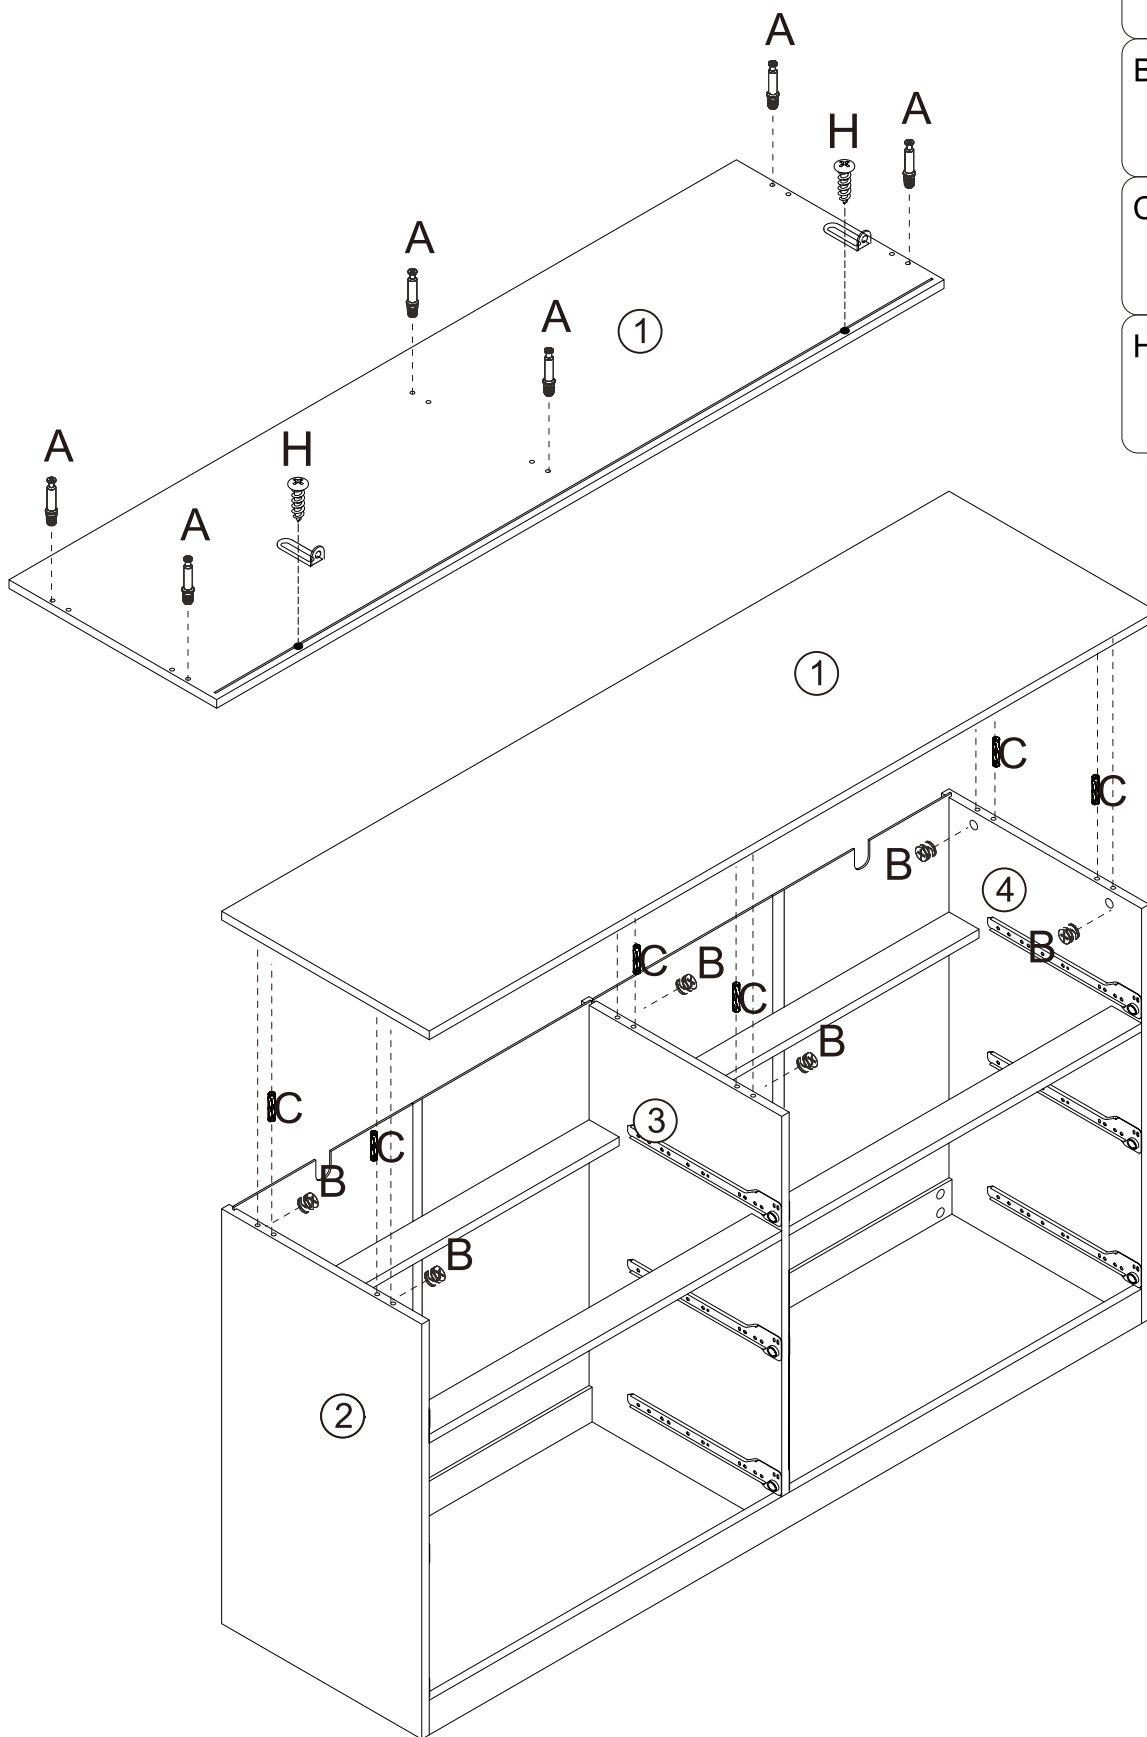


- A x6
- B x6
- C x6
- H x2






8

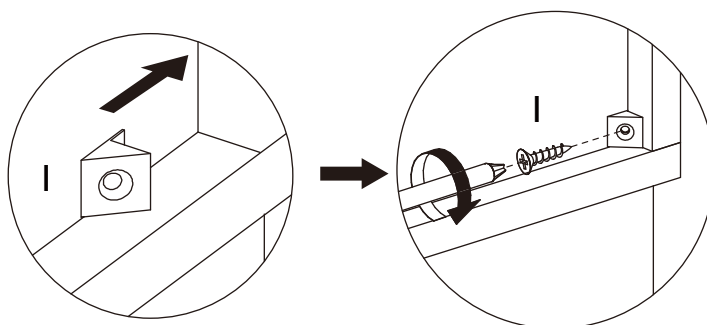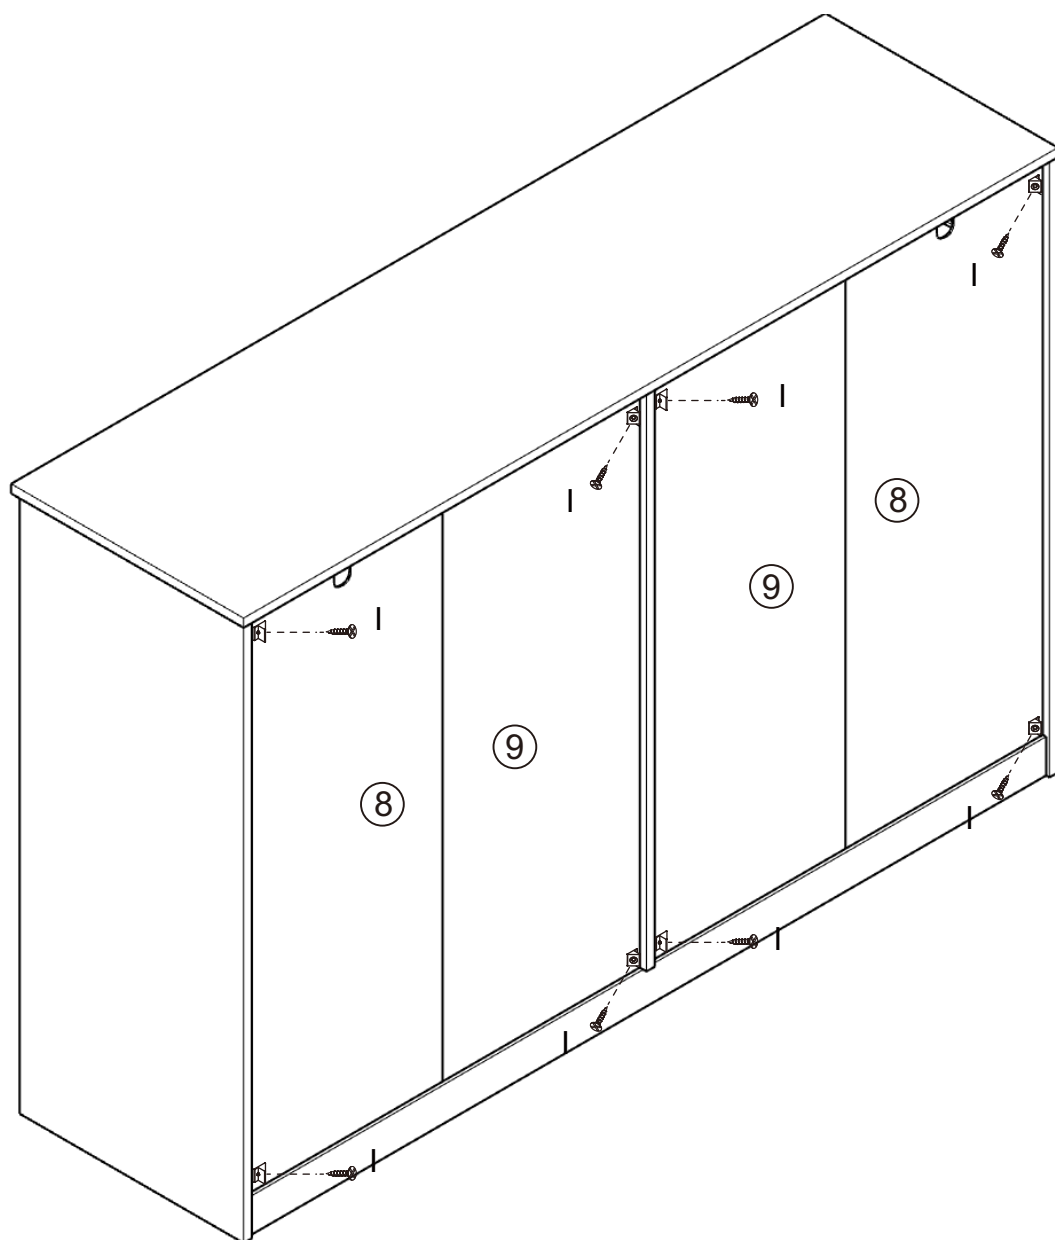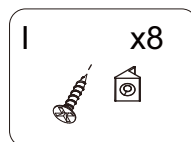

9




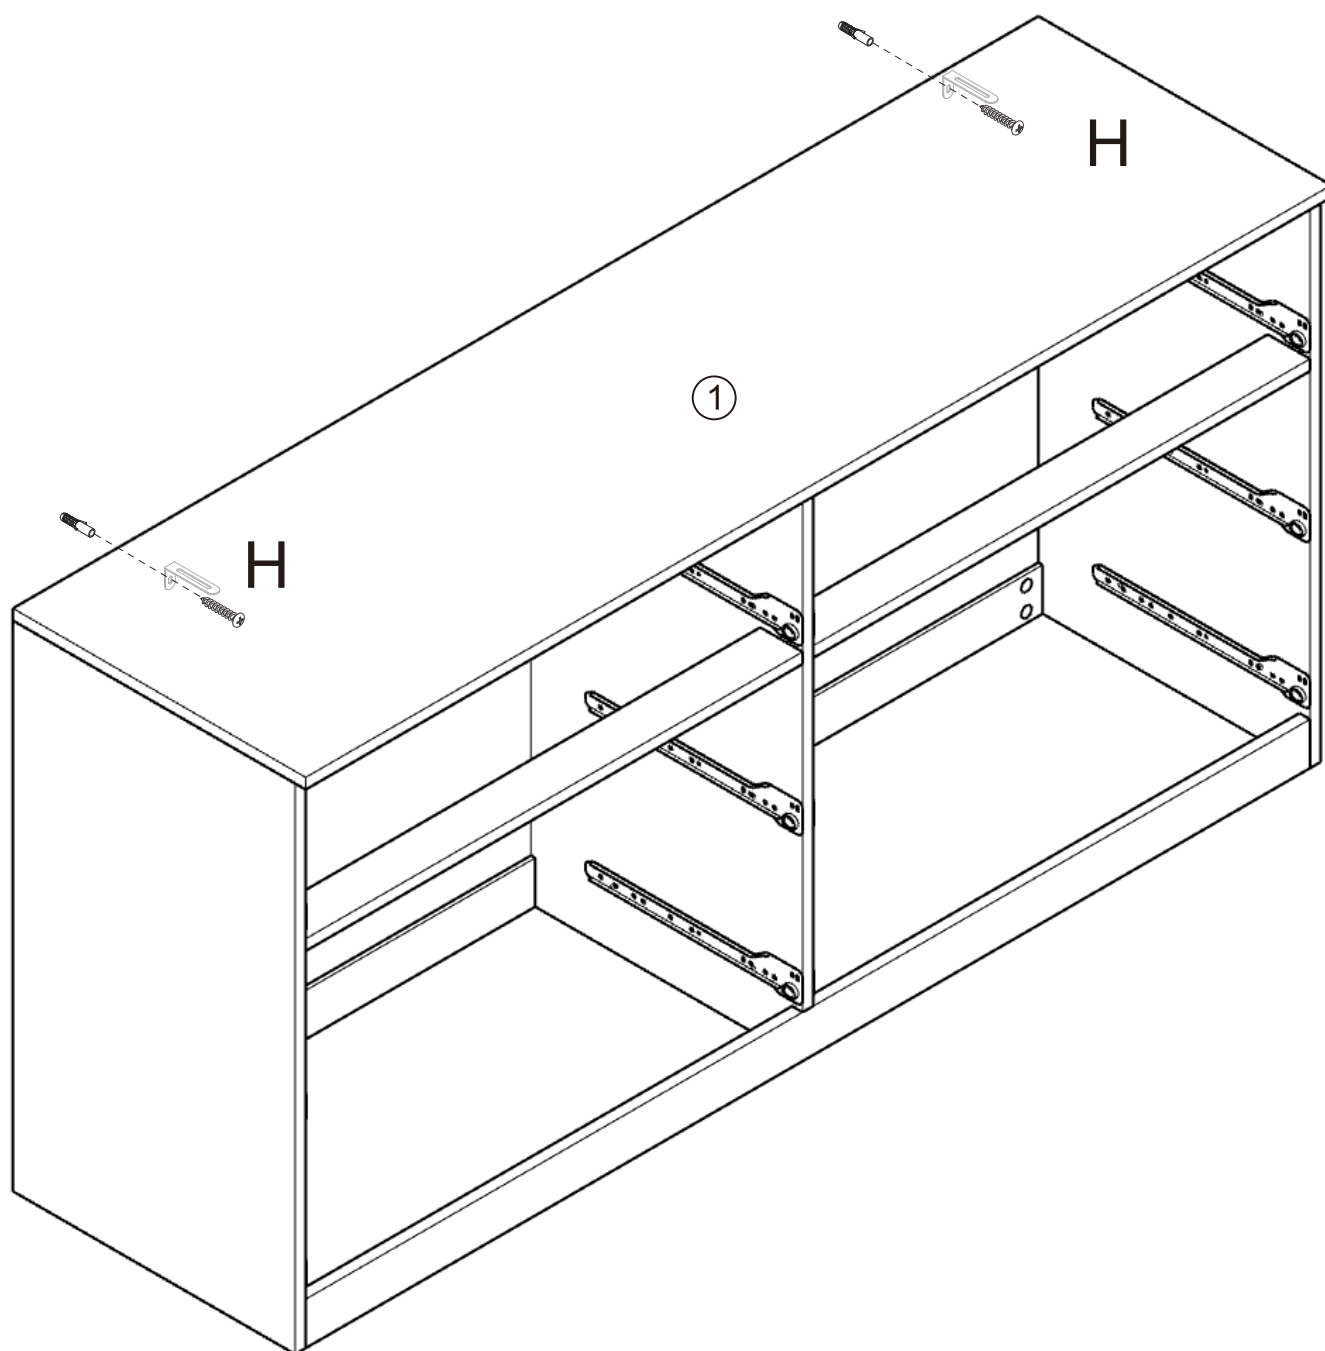
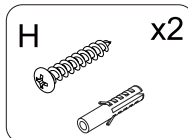


10

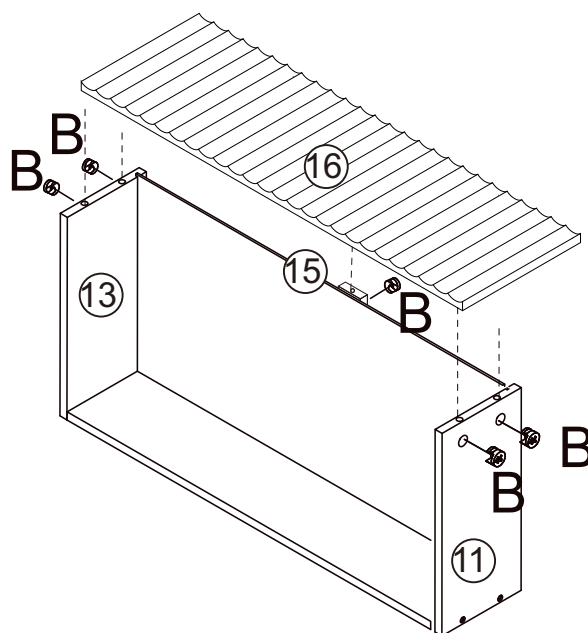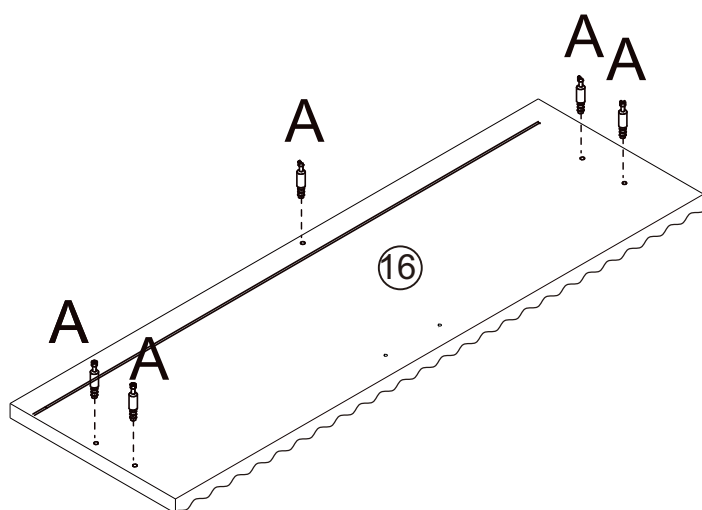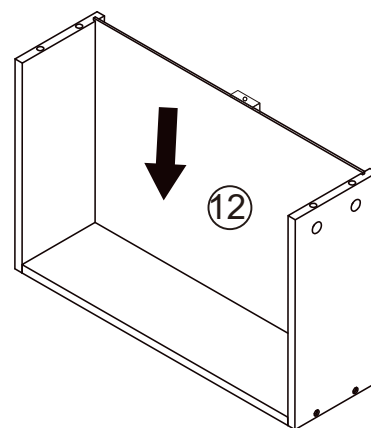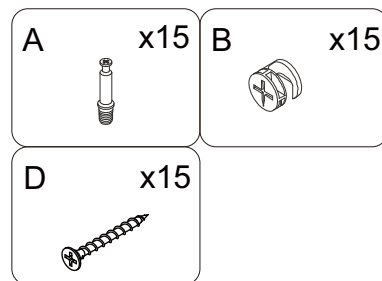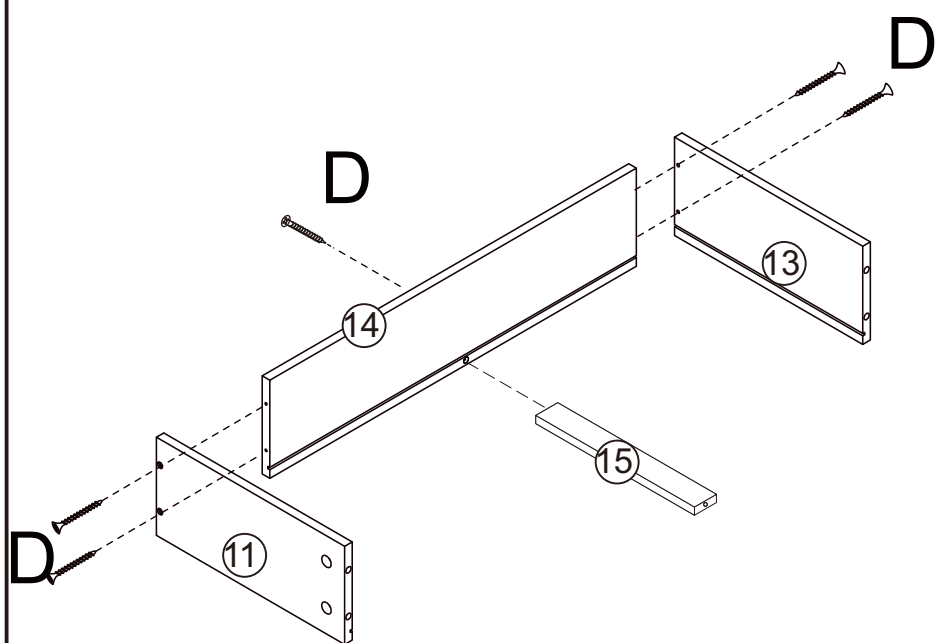









x3

11

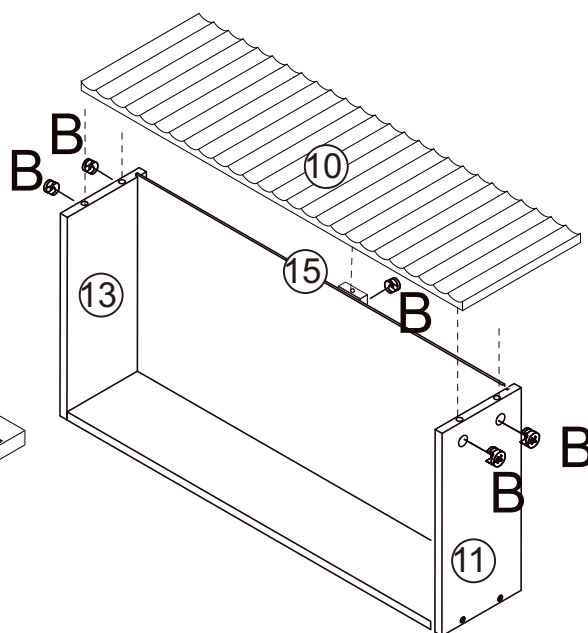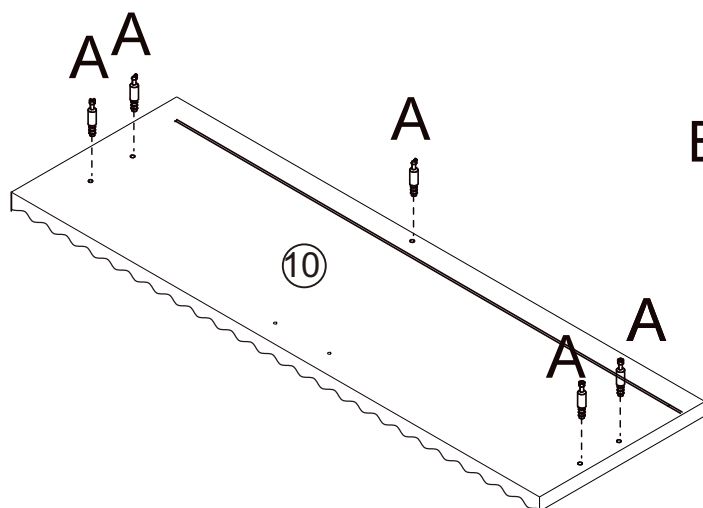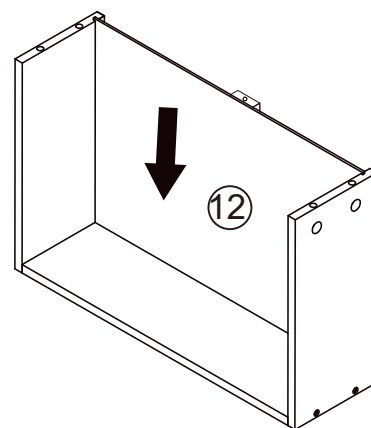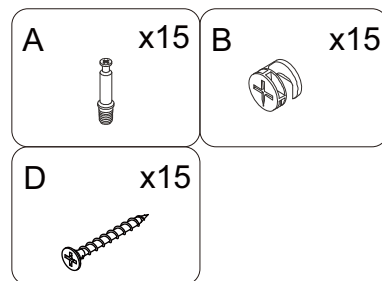
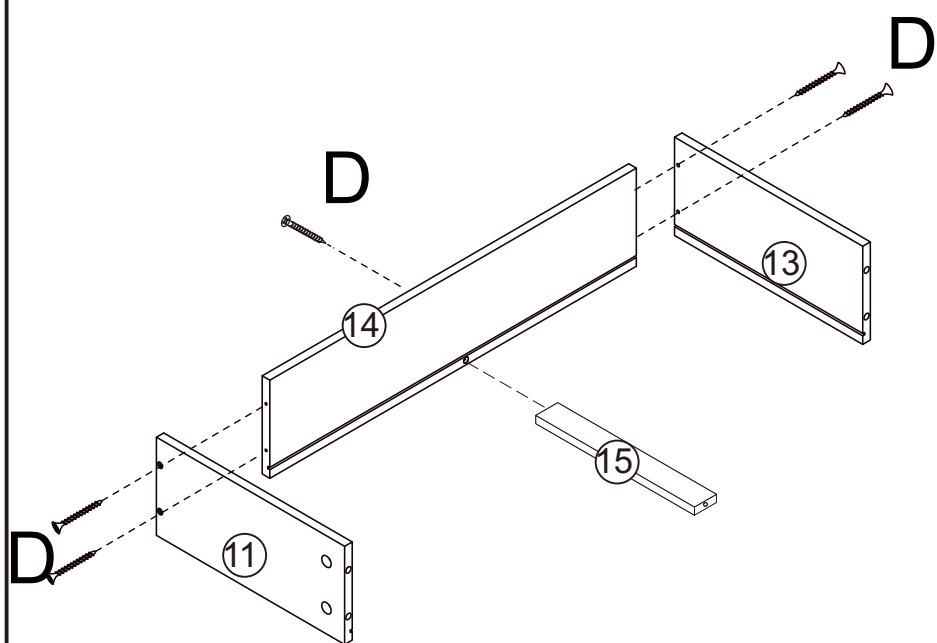


x3

12

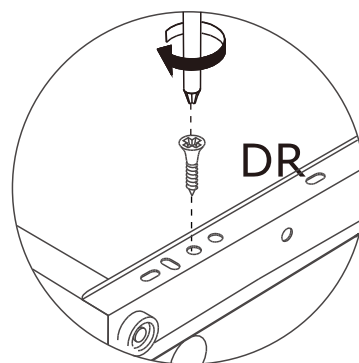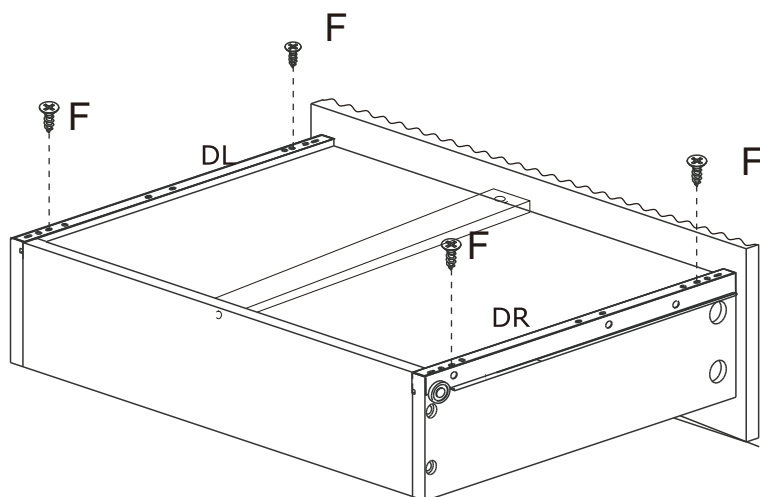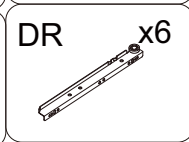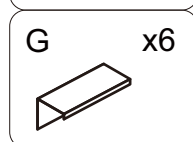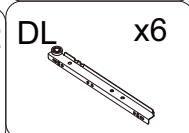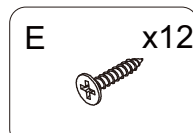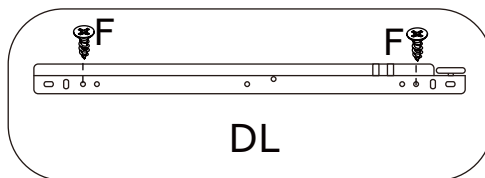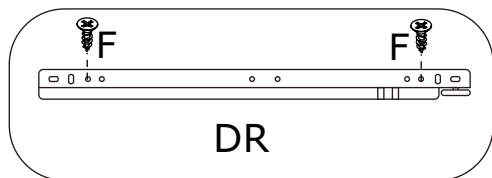

First push the drawer in to install the pull handle.

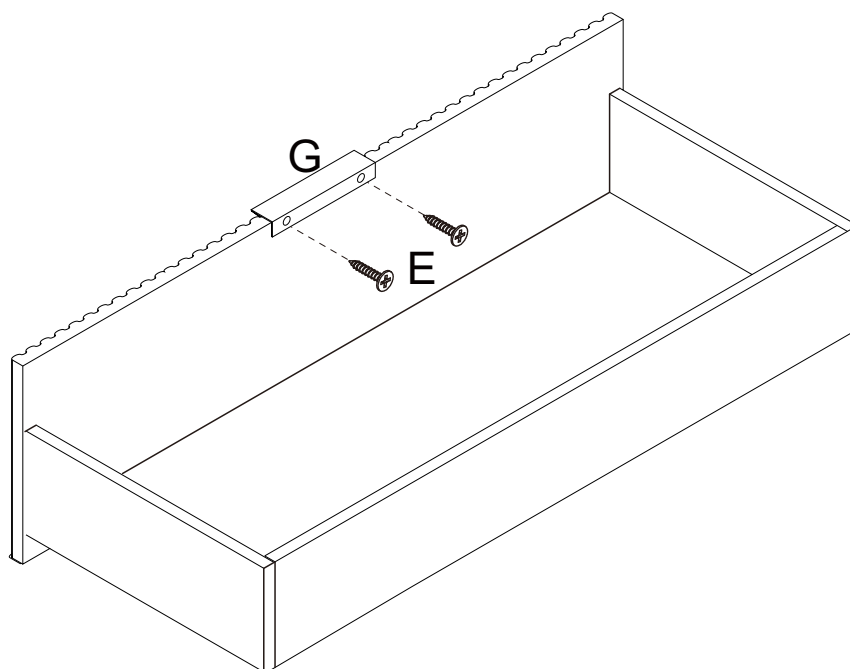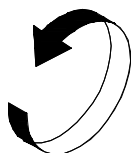

x6

13

⚠ Do not place the numbers 16 and 10 on the wrong sides

