











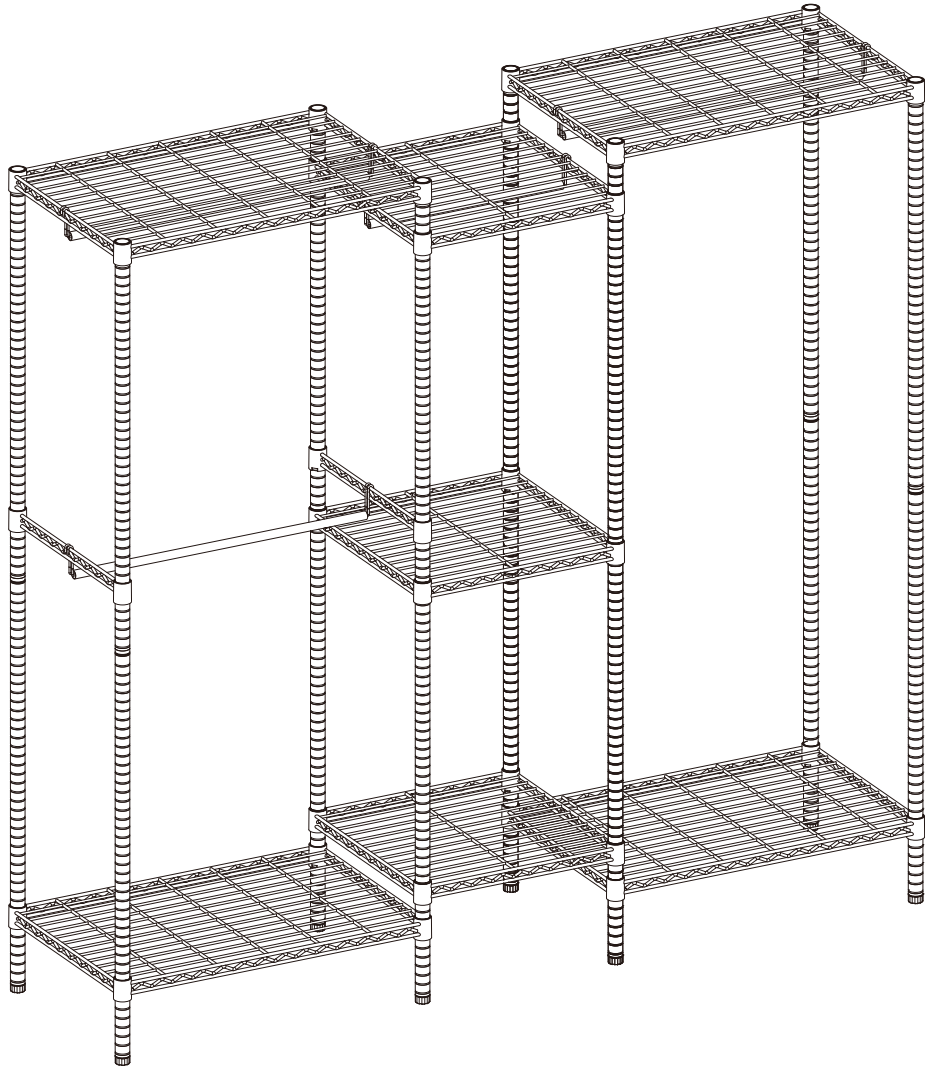


MoNiBloom

INSTRUCTION MANUAL

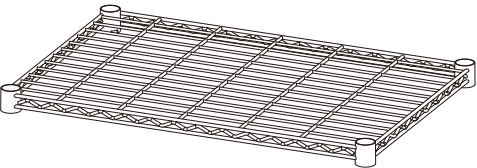

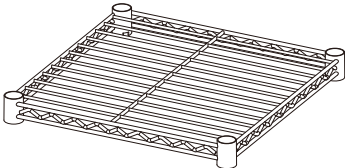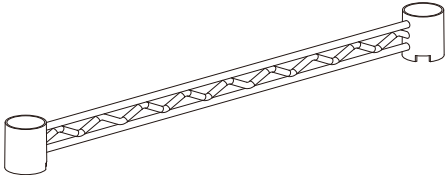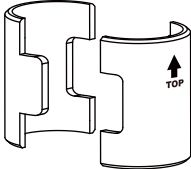
<p>①</p>  <p>4PCS</p>	<p>④</p>  <p>8PCS</p>	<p>⑦</p>  <p>1PCS</p>
<p>②</p>  <p>3PCS</p>	<p>⑤</p>  <p>8PCS</p>	<p>⑧</p>  <p>3PCS</p>
<p>③</p>  <p>2PCS</p>	<p>⑥</p>  <p>32PCS</p>	<p>⑨</p>  <p>8PCS</p>


Step 1

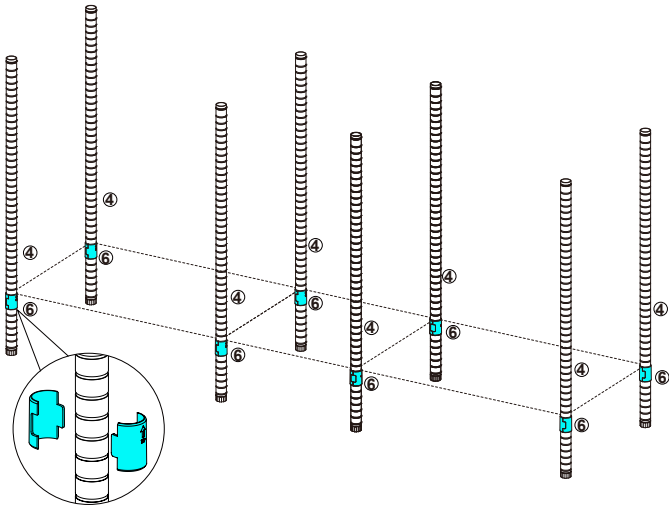


Step 2

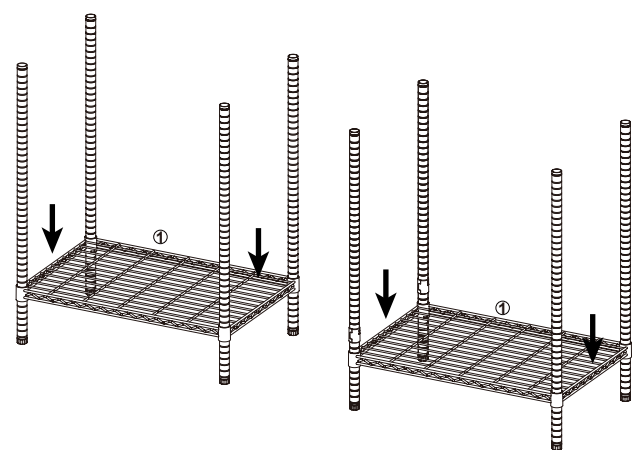


Step 3

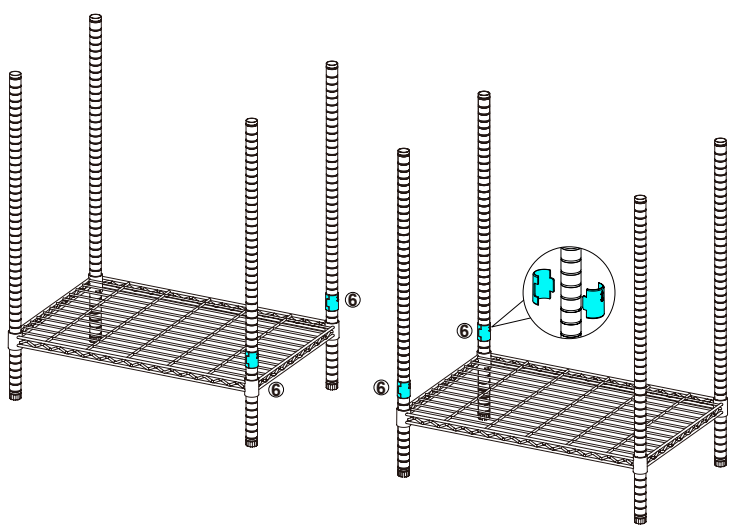


Step 4

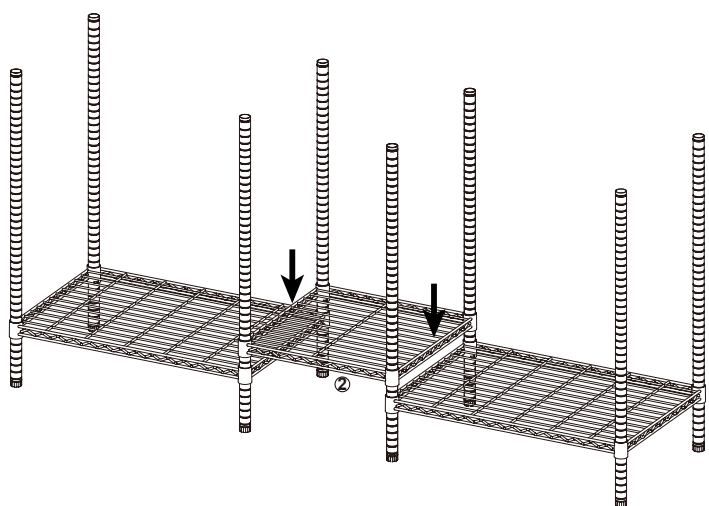


Step 5

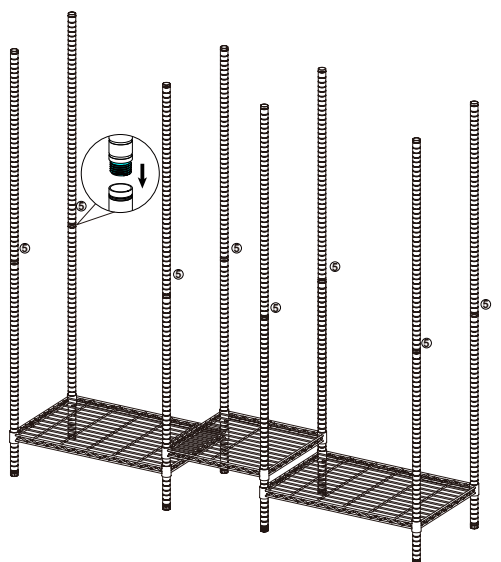


Step 6

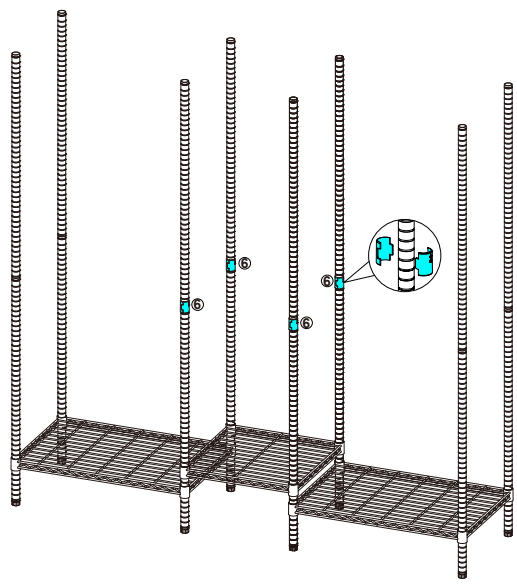


Step 7

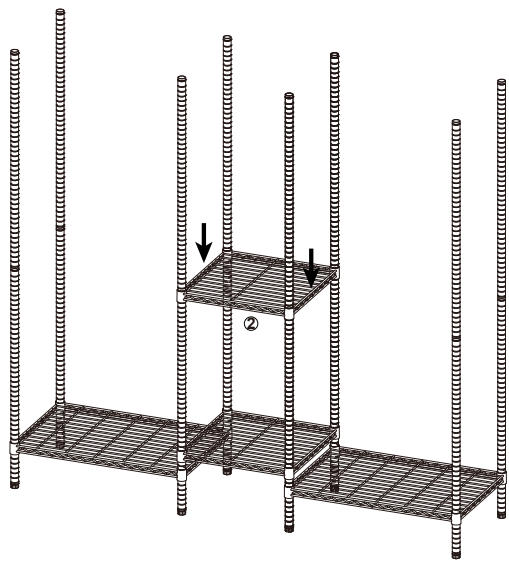


Step 8

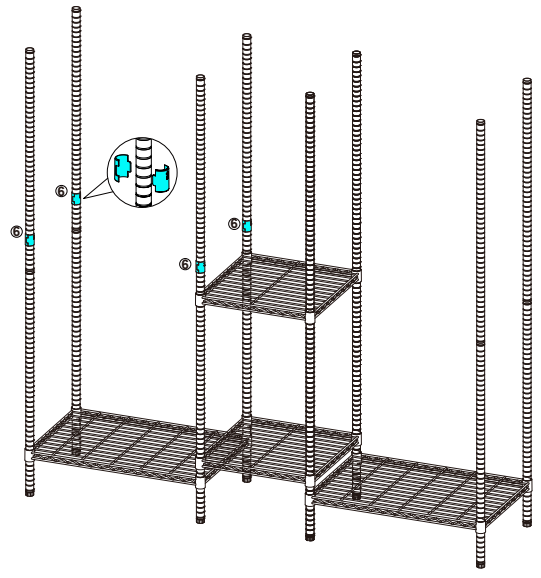


Step 9

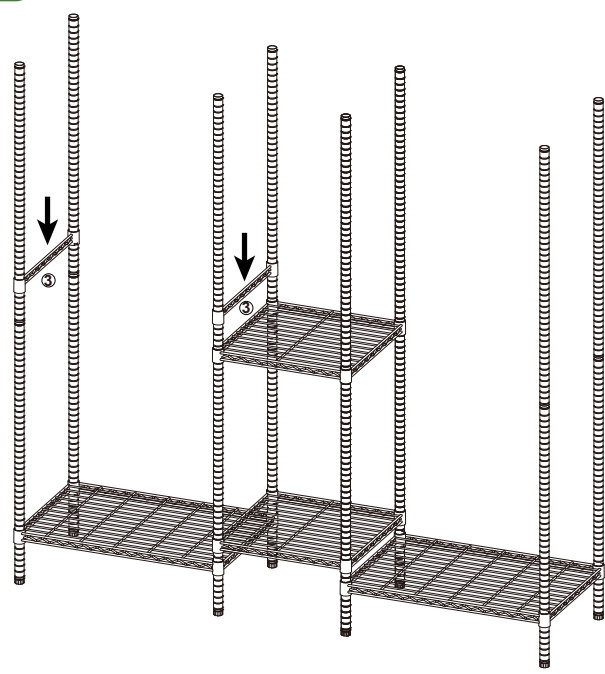


Step 10

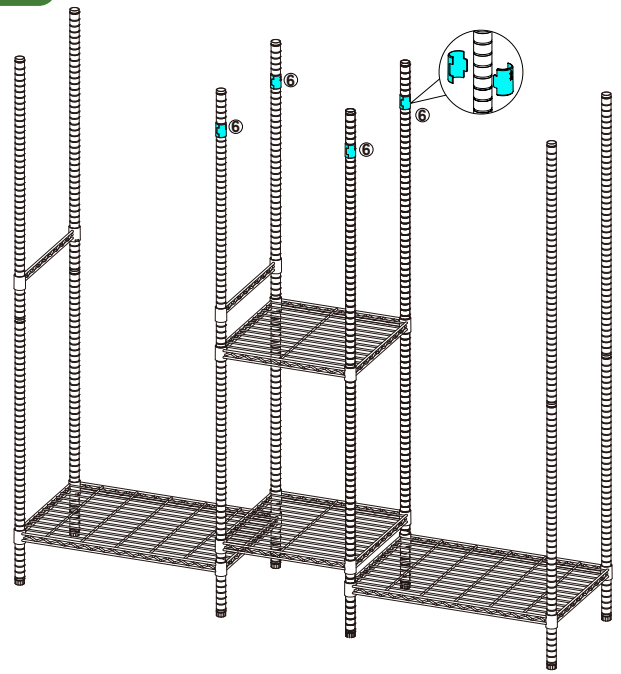


Step 11

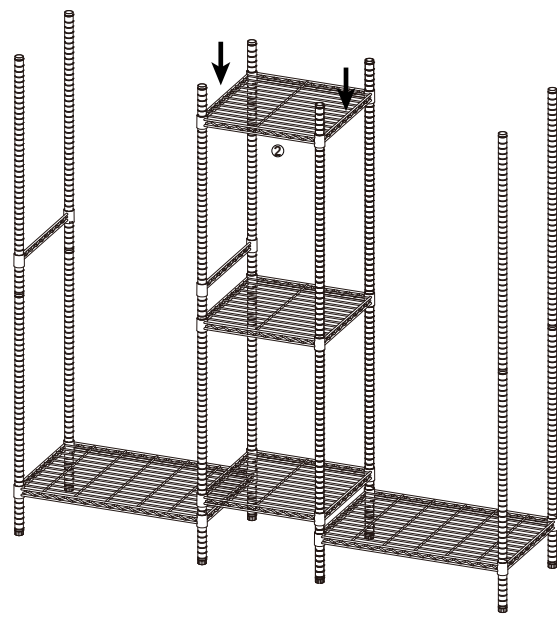


Step 12

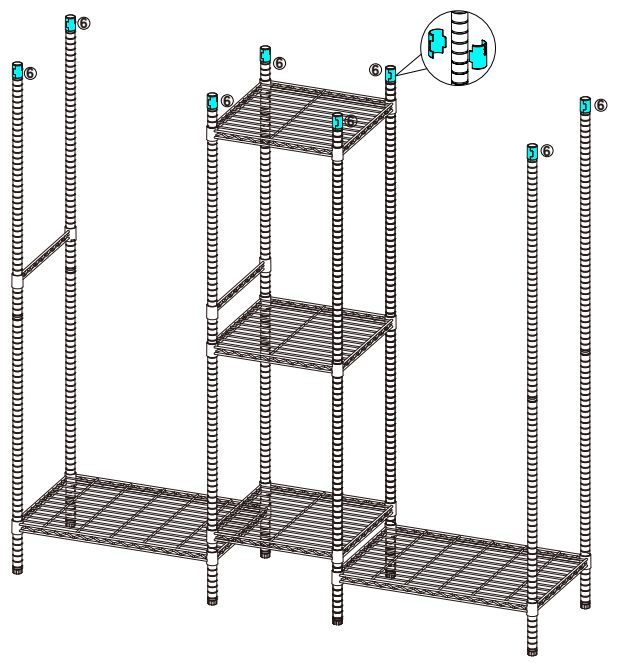


Step 13

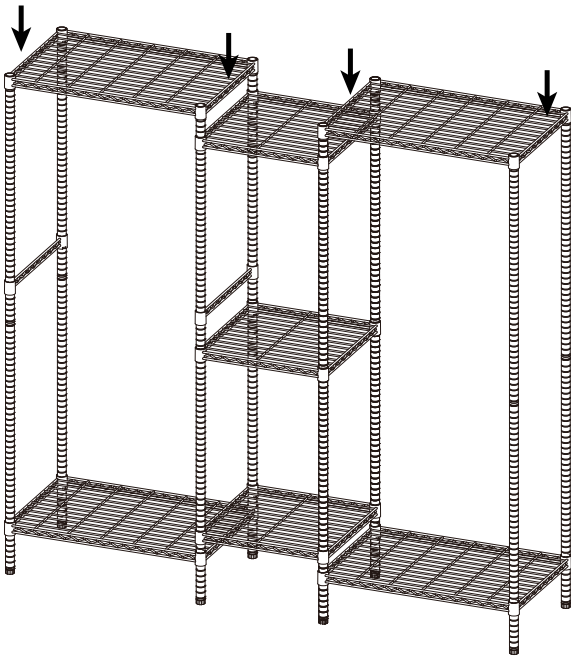


Step 14

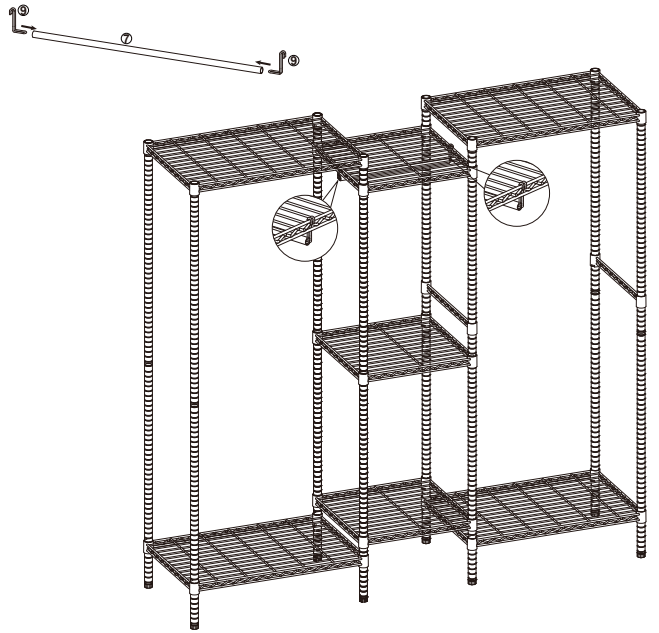


Step 15

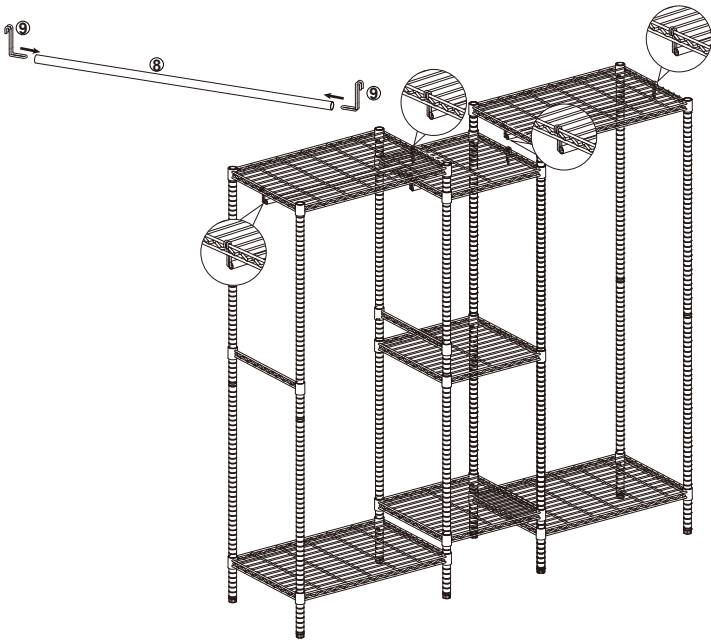

Step 16

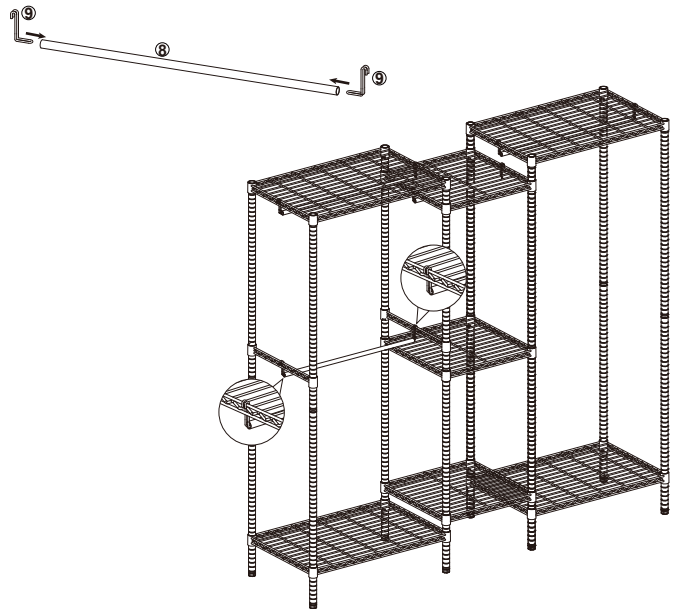

Step 17

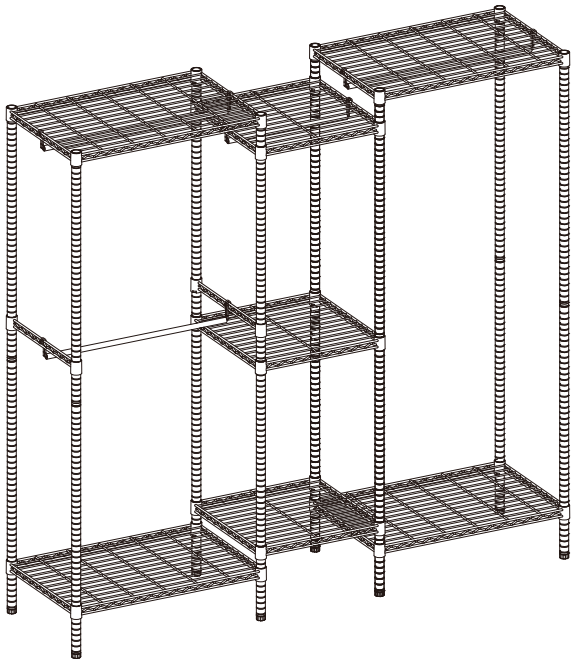





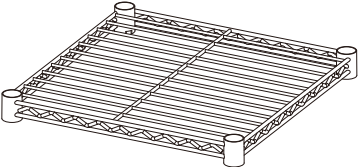


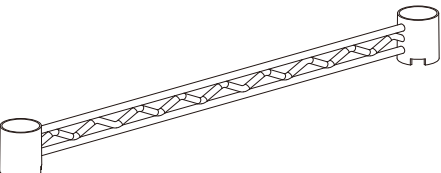
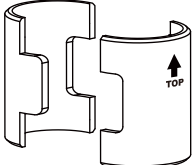

Scan the QR code to view the assembly video




MoNiBloom

INSTRUCTION MANUAL

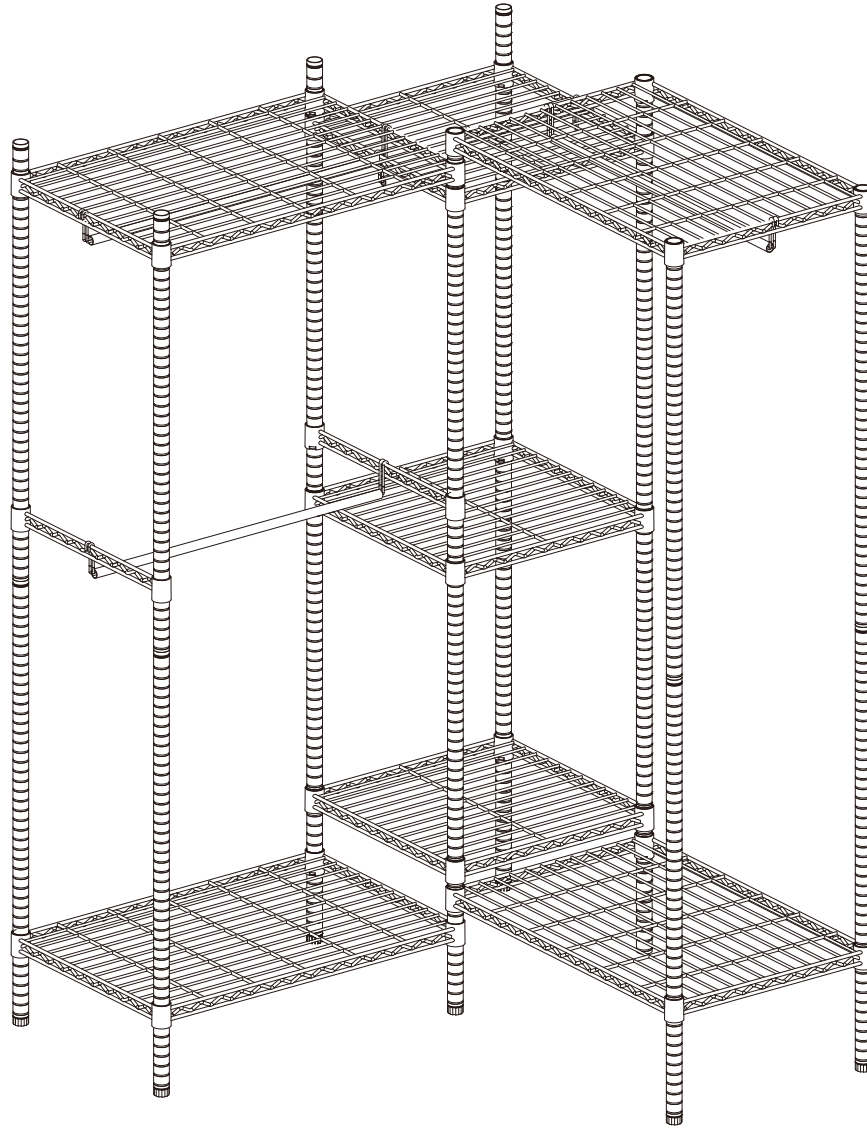

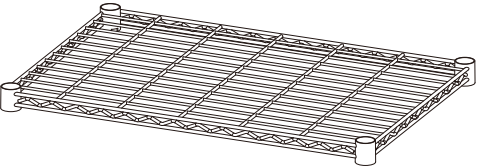
<p>①</p>  <p>4PCS</p>	<p>④</p>  <p>8PCS</p>	<p>⑦</p>  <p>1PCS</p>
<p>②</p>  <p>3PCS</p>	<p>⑤</p>  <p>8PCS</p>	<p>⑧</p>  <p>3PCS</p>
<p>③</p>  <p>2PCS</p>	<p>⑥</p>  <p>32PCS</p>	<p>⑨</p>  <p>8PCS</p>


Step 1

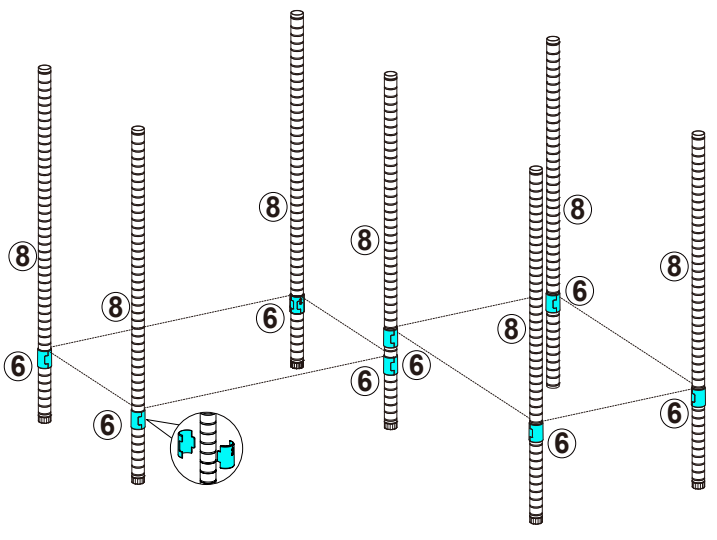


Step 2

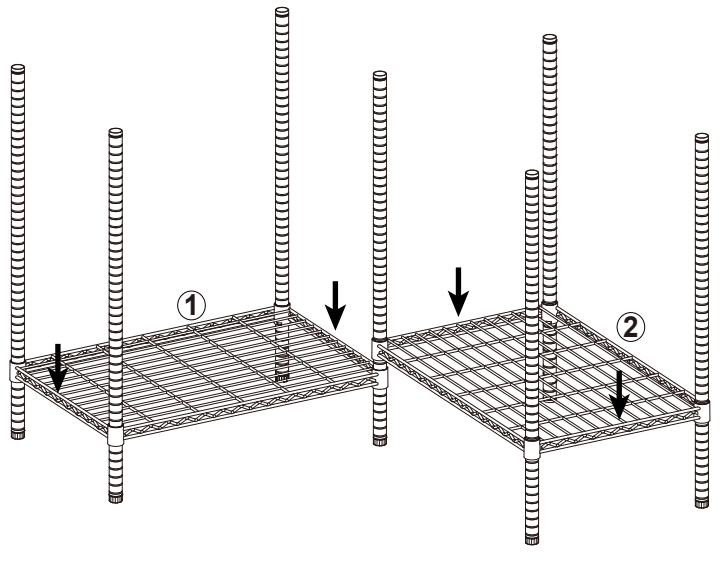


Step 3

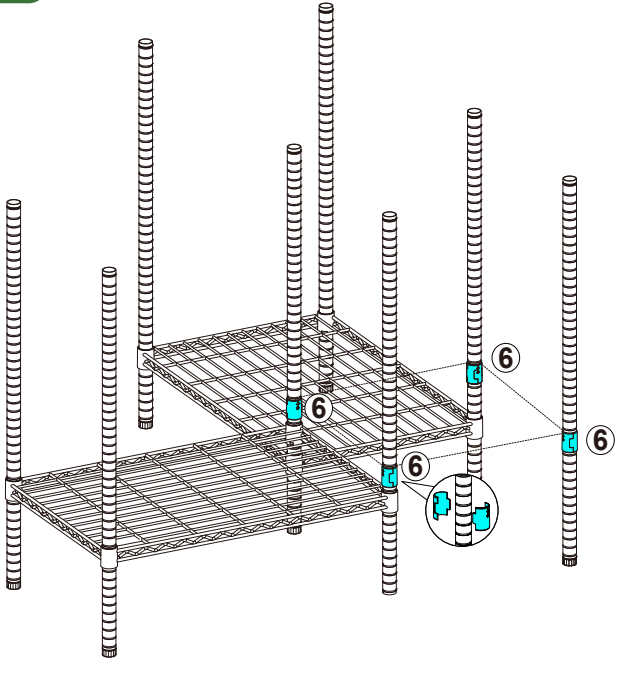


Step 4

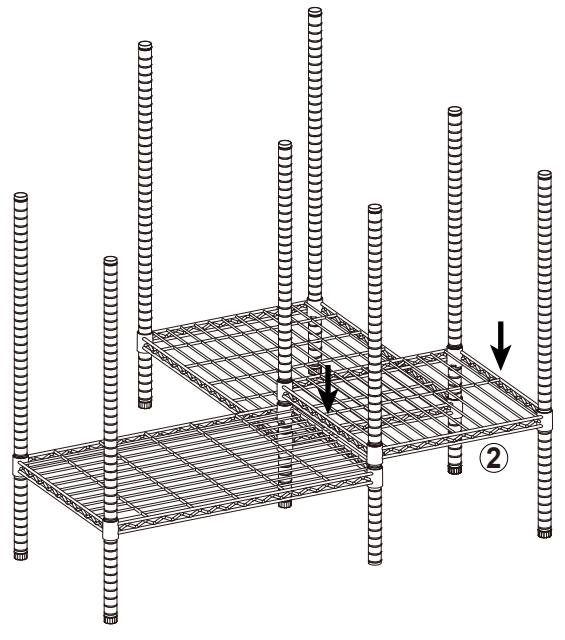


Step 5

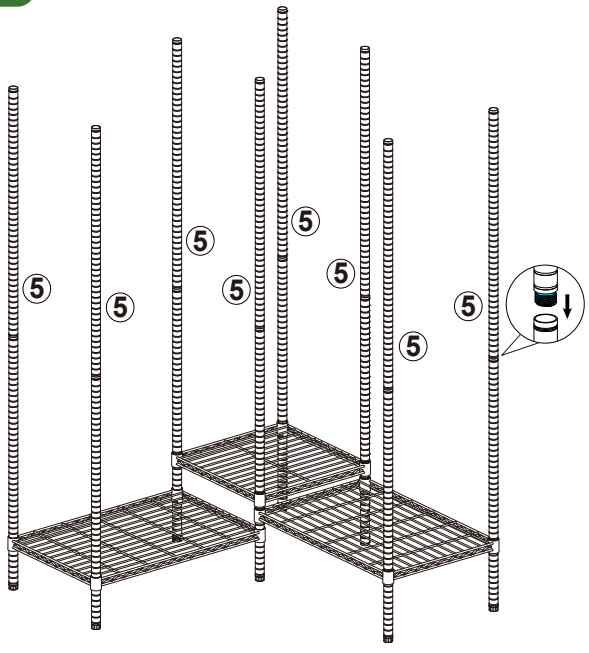


Step 6

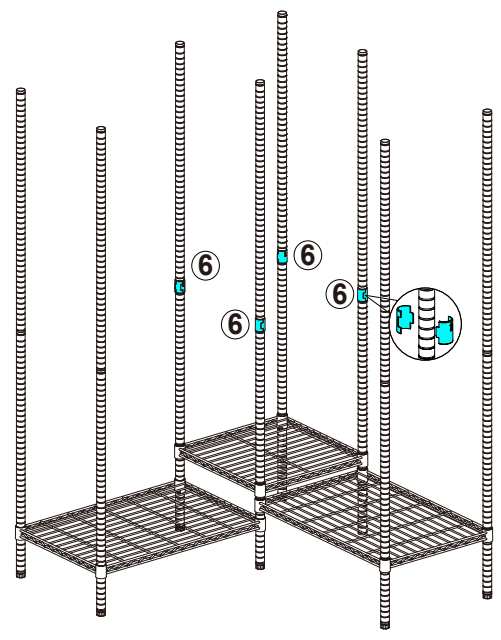


Step 7

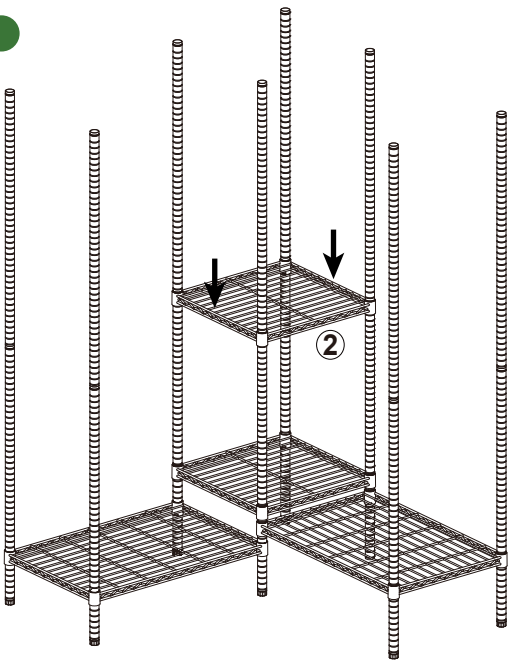


Step 8

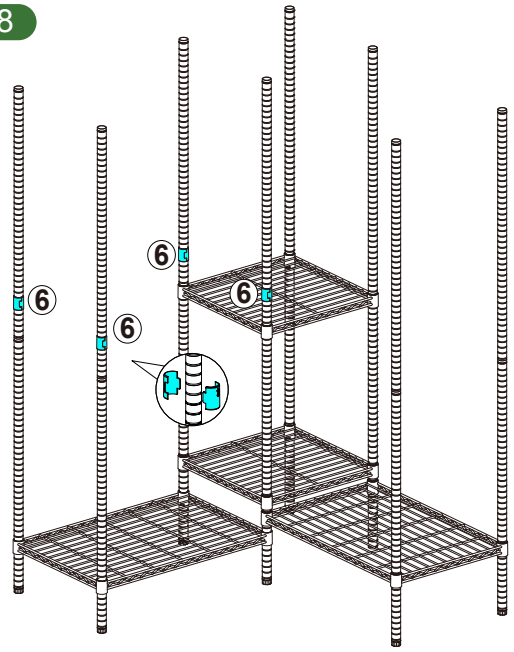


Step 9

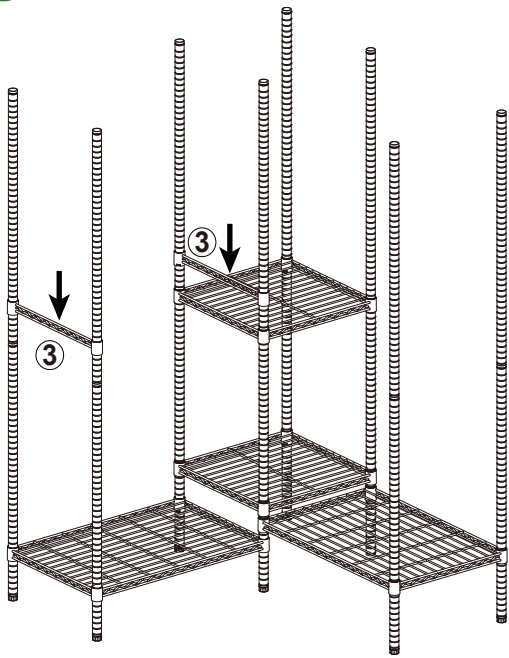


Step 10

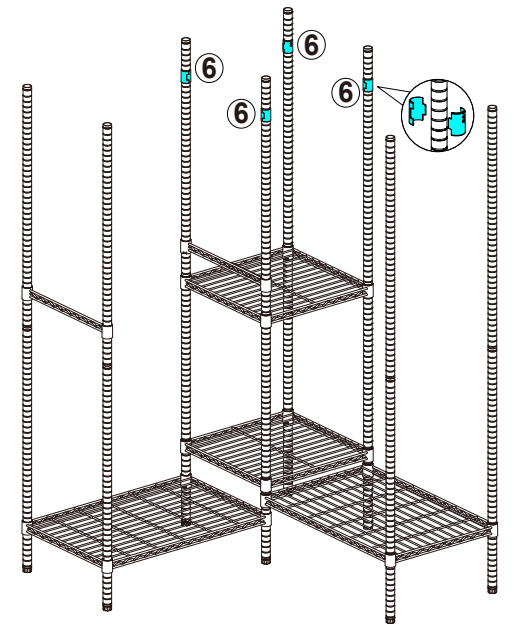


Step 11

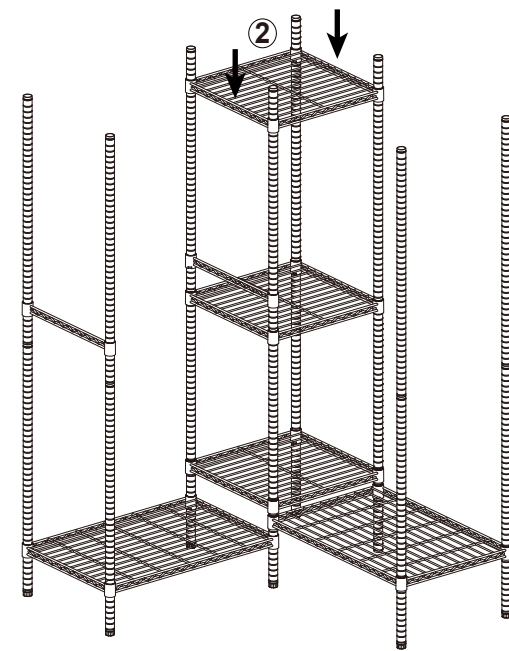


Step 12

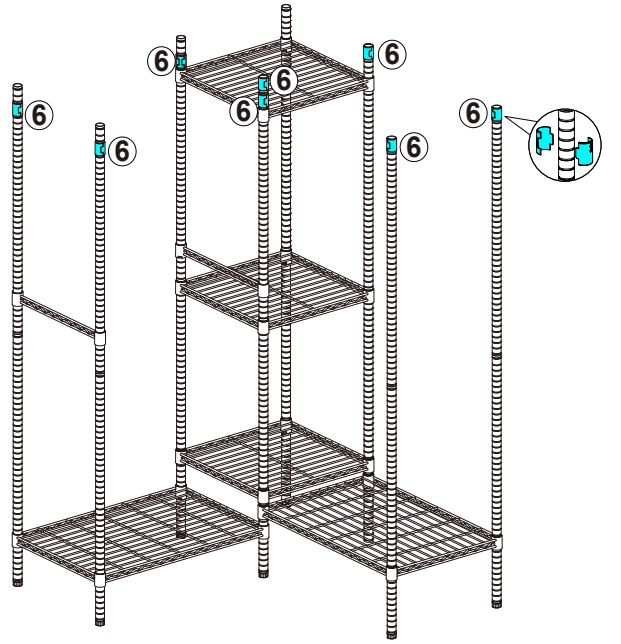


Step 13

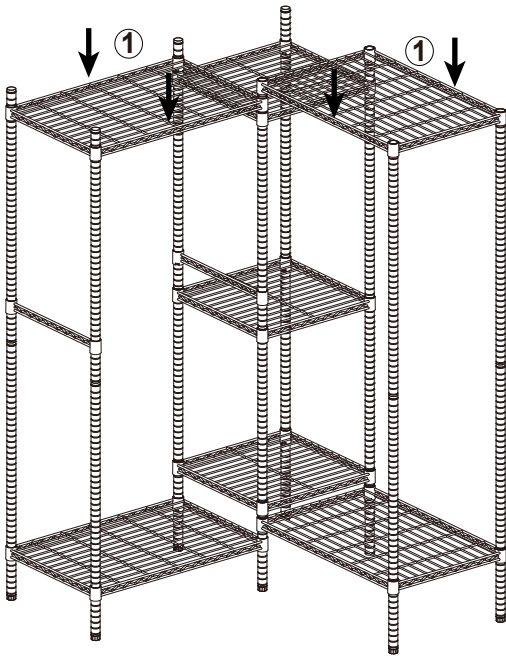


Step 14

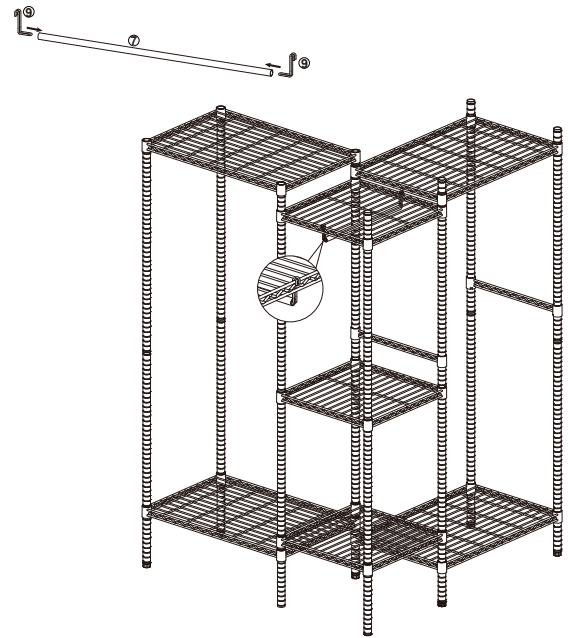


Step 15

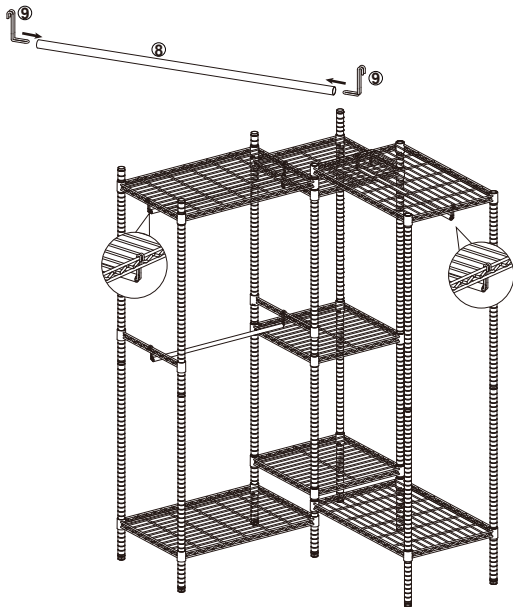

Step 16

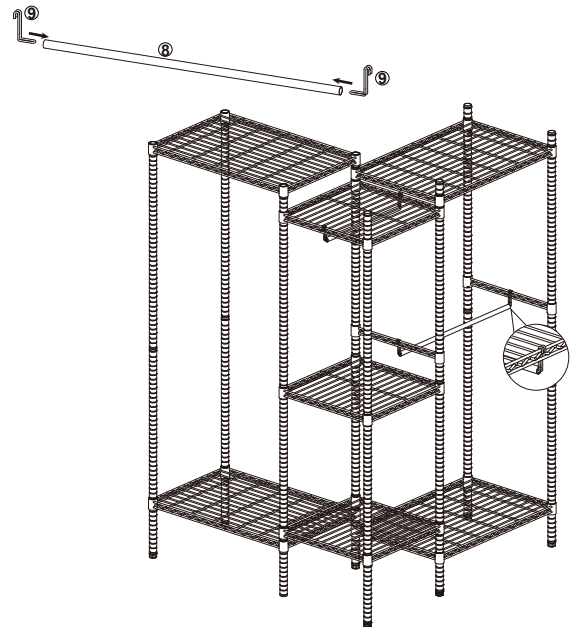

Step 17

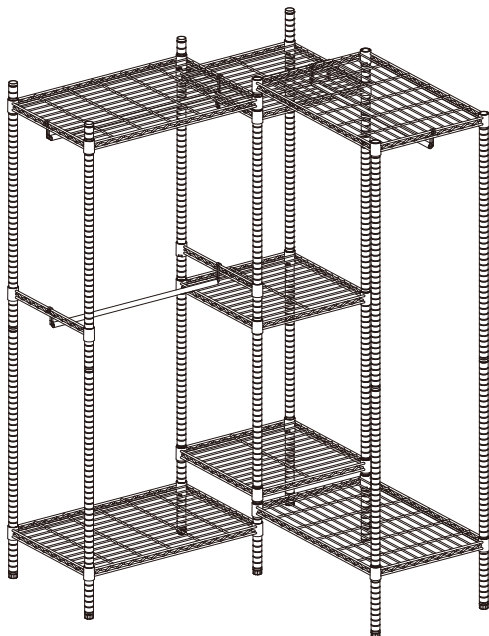

Scan the QR code to view the assembly video