


HALL CONSOLE WITH DRAWER

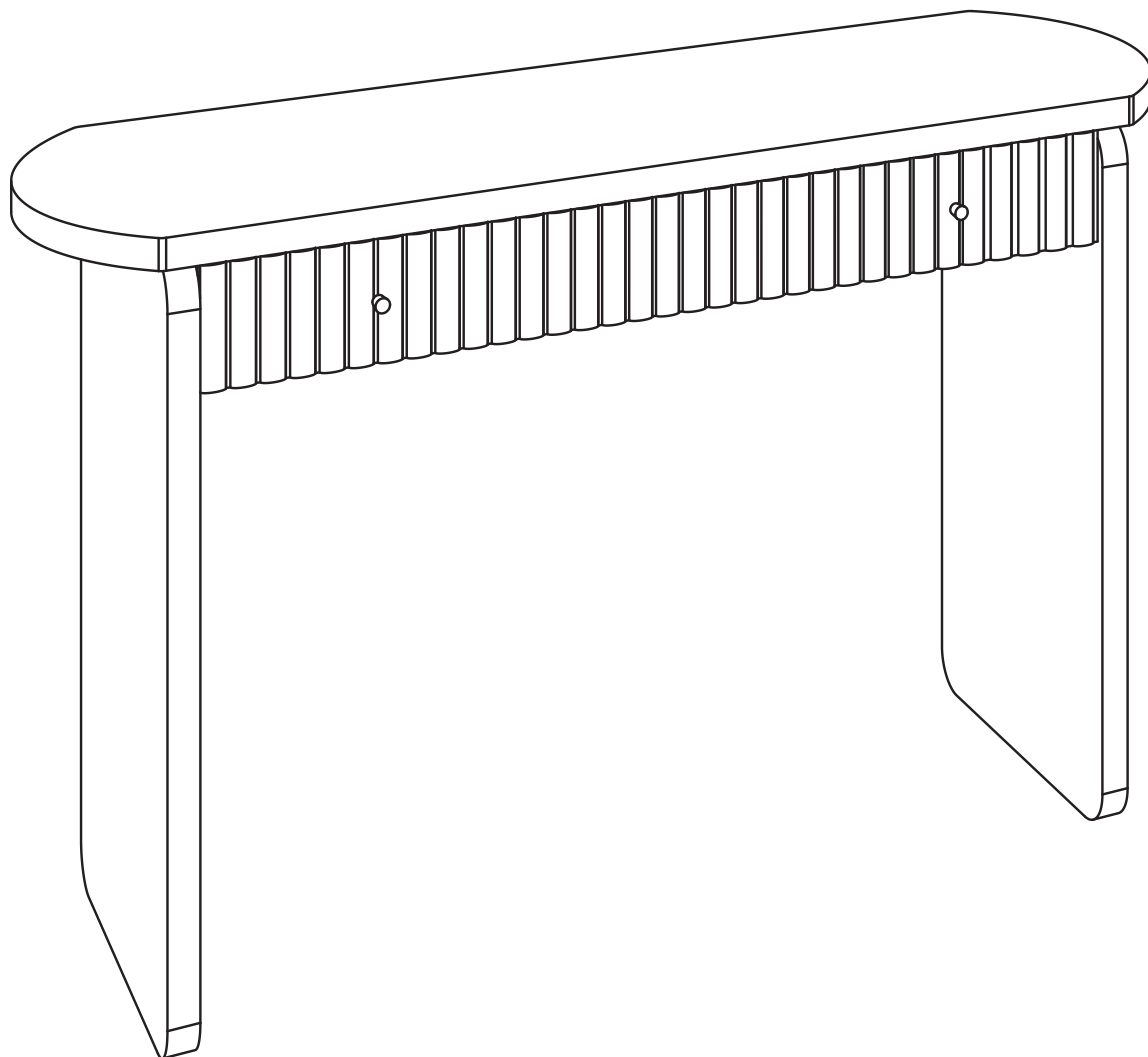



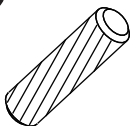
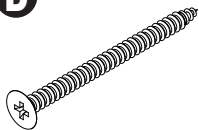






ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .




Please do not return to the store
Broken or missing parts?
Need help with assembly?

Hardware List

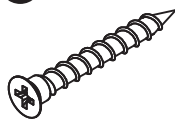A 	B 	C 	D 	E 
Cam Bolt (14pcs)	Cam Lock (14pc)	Wood Dowel (10pcs)	Drawer Screw (4pcs)	Handle Screw (2pcs)
F 	H 	I 	J 	K 
Handle (2pcs)	Safety Wall Strap (2pcs)	Wall Anchor (2pcs)	Long Flat Screw (2pcs)	Short Flat Screw (2pcs)

Panel List

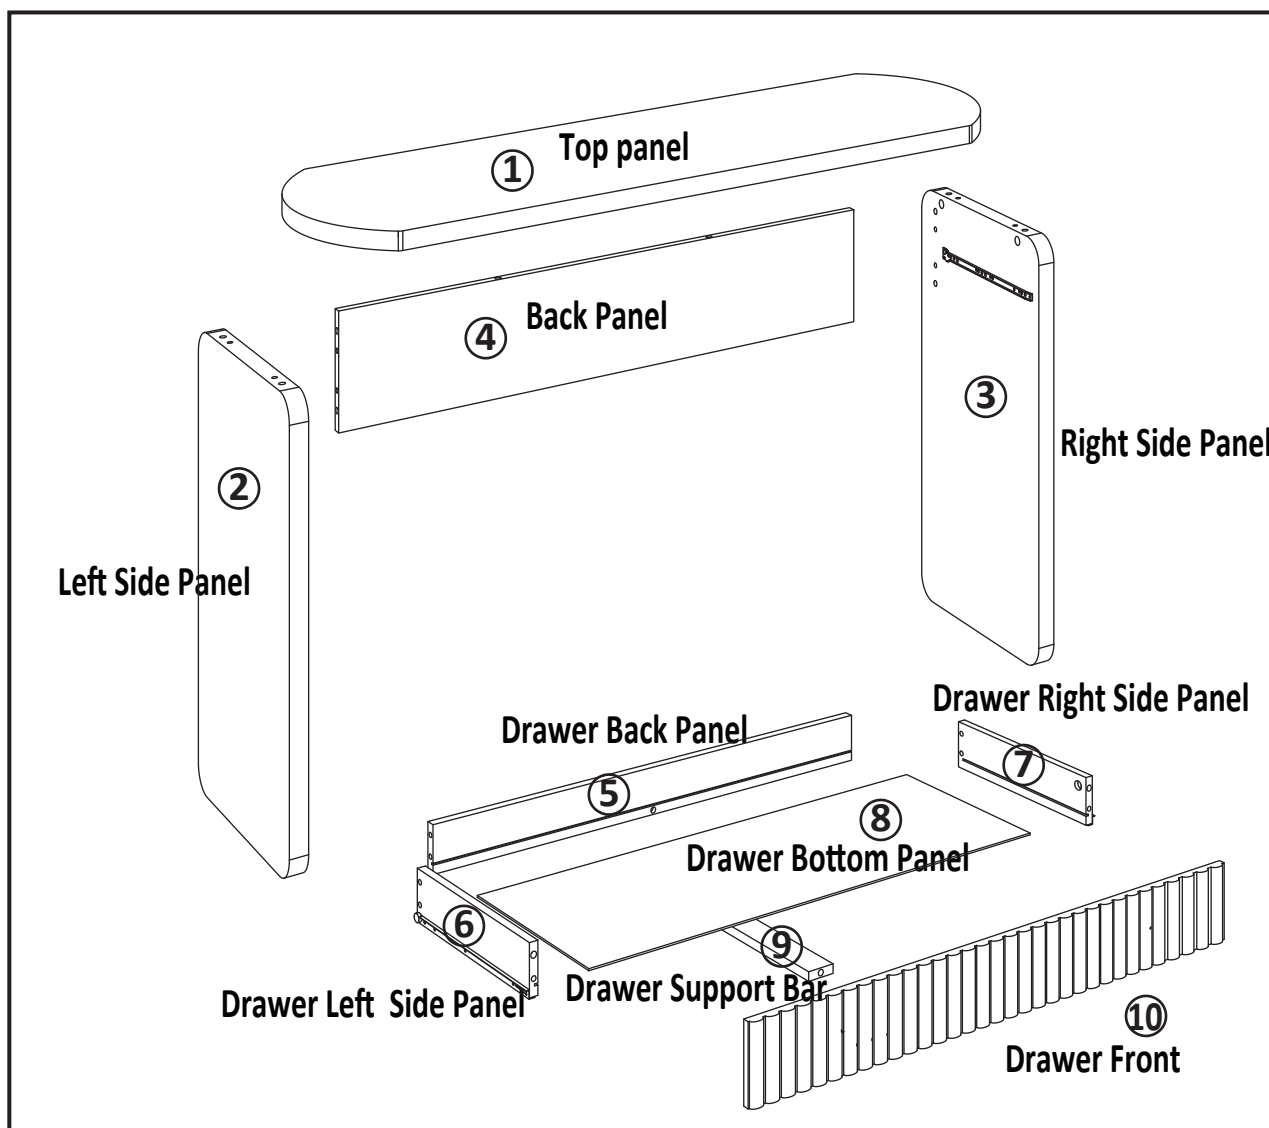

Please count and verify all parts before assembly.


Assembling the unit with camlocks and wood dowels.

Gently screw cambolt into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.

Step 1

1. Screw Cambolts (A) into Top Panel ①, Left Side Panel ②, Right Side Panel ③, Drawer Front ⑩ and Drawer Back Panel ⑤ as shown.


2. Insert Wood Dowels (C) into Top Panel ①, Left Side Panel ②, Drawer Front ⑩ and Right Side Panel ③ as shown.

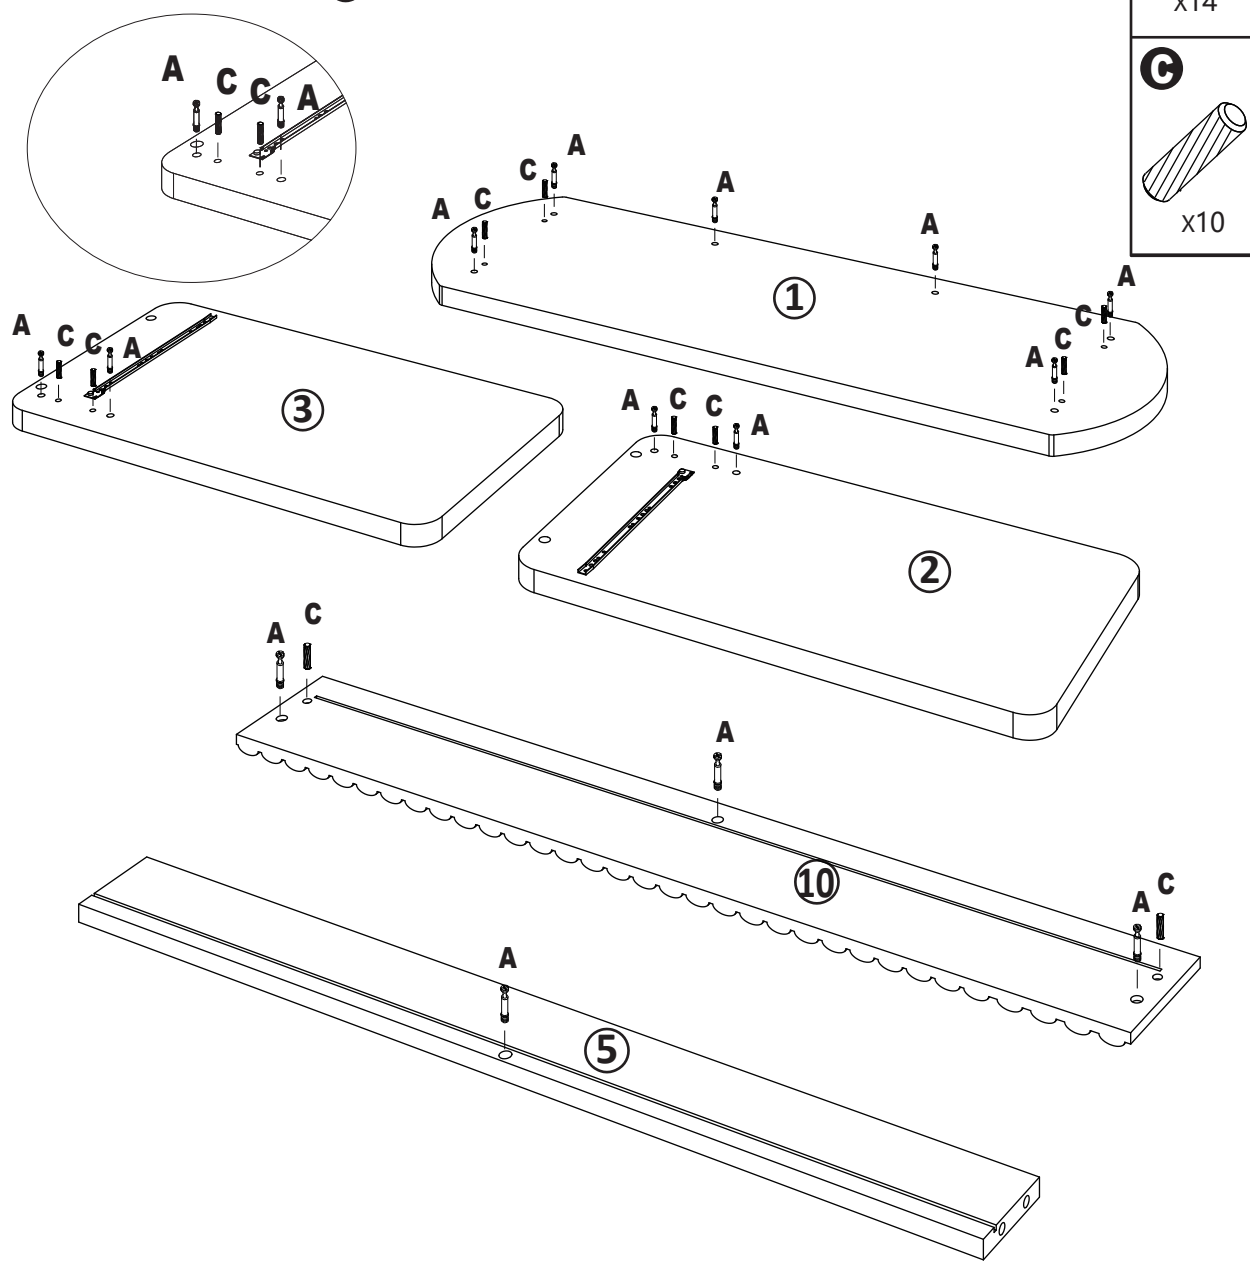

Step 2


*Assemble unit on carpet or flat surface.

1. Attach Left Side Panel (2) to Back Panel (4) using Camlocks (B) by gently tightening camlocks .

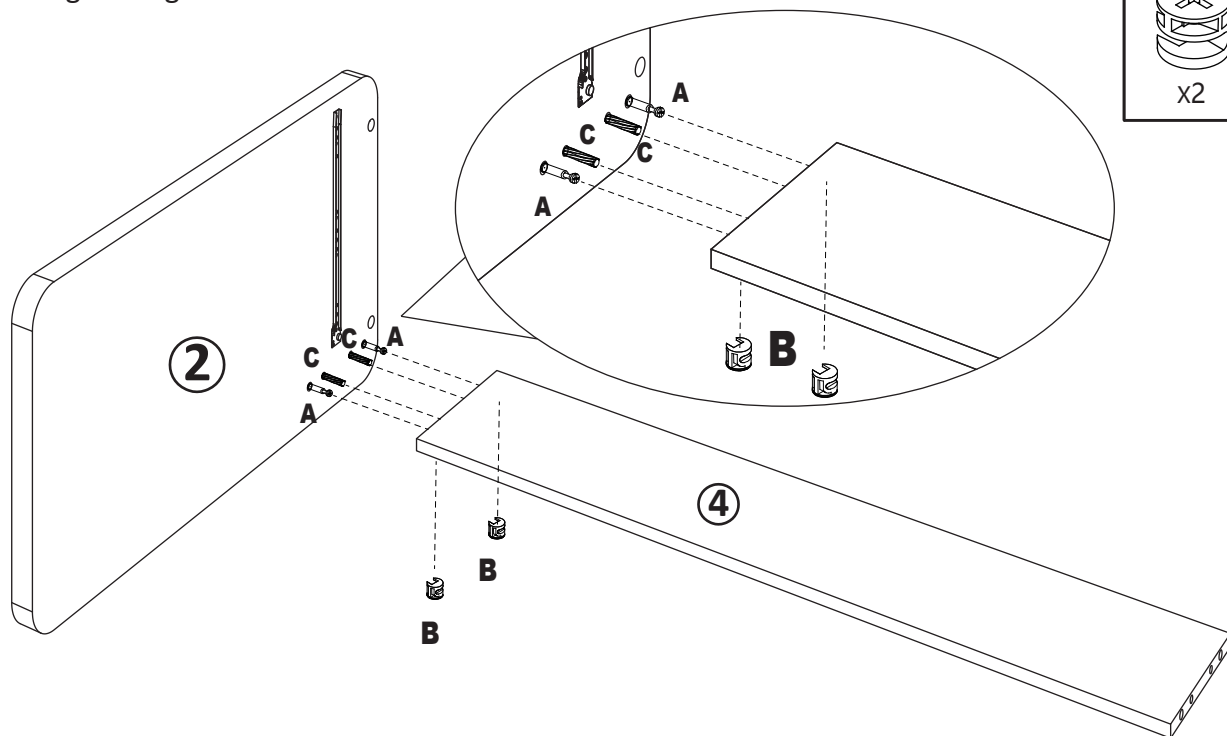

Step 3


1. Attach Right Side Panel (3) to Back Panel (4) using Camlocks (B) by gently tightening camlocks .

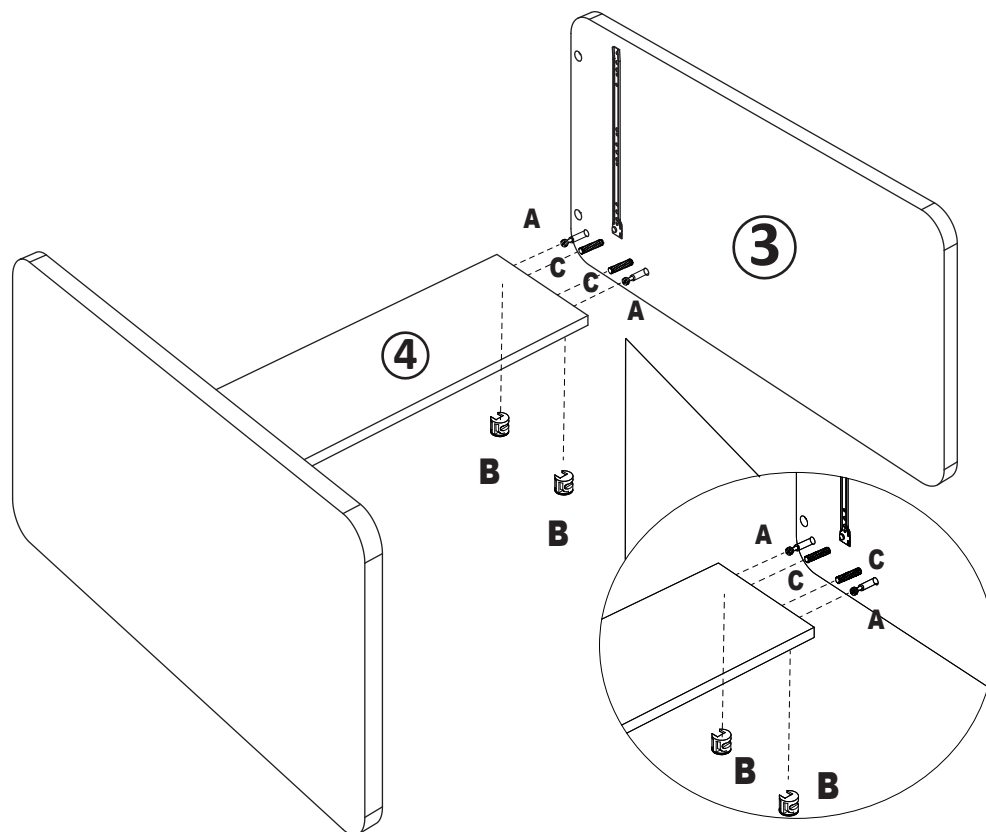

Step 4

*Assemble unit on carpet or flat surface.

1. Attach Top Panel (1) to assembly as shown using Camlocks (B) by gently tightening camlocks.

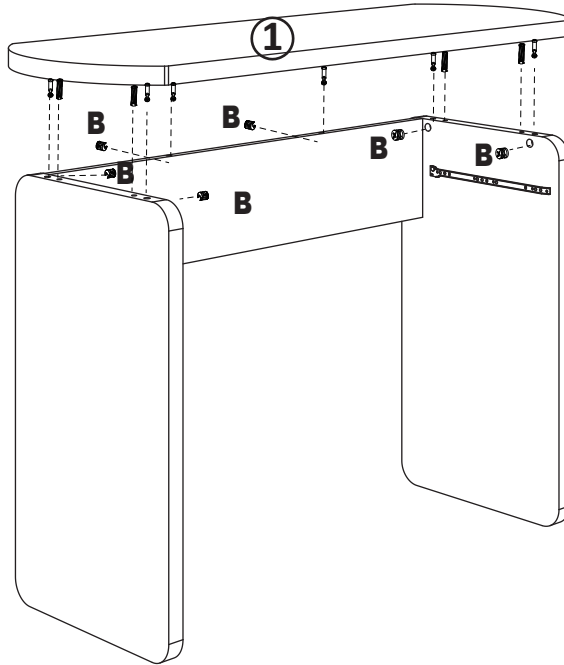


B



x6

Step 5

1. Attach Drawer Side Panels (6) & (7) to Drawer Back Panel (5) using Screws (D).
2. Connect Drawer Bottom Support Bar (9) to Drawer Back Panel (5) by using Camlocks (B).
3. Insert Drawer Bottom Panel (8) into grooves of drawer assembly.
4. Connect Drawer Front (10) to assembly by using Camlocks (B).
5. Attach Handles (F) to Drawer Front (10) by using Handle Screws (E).

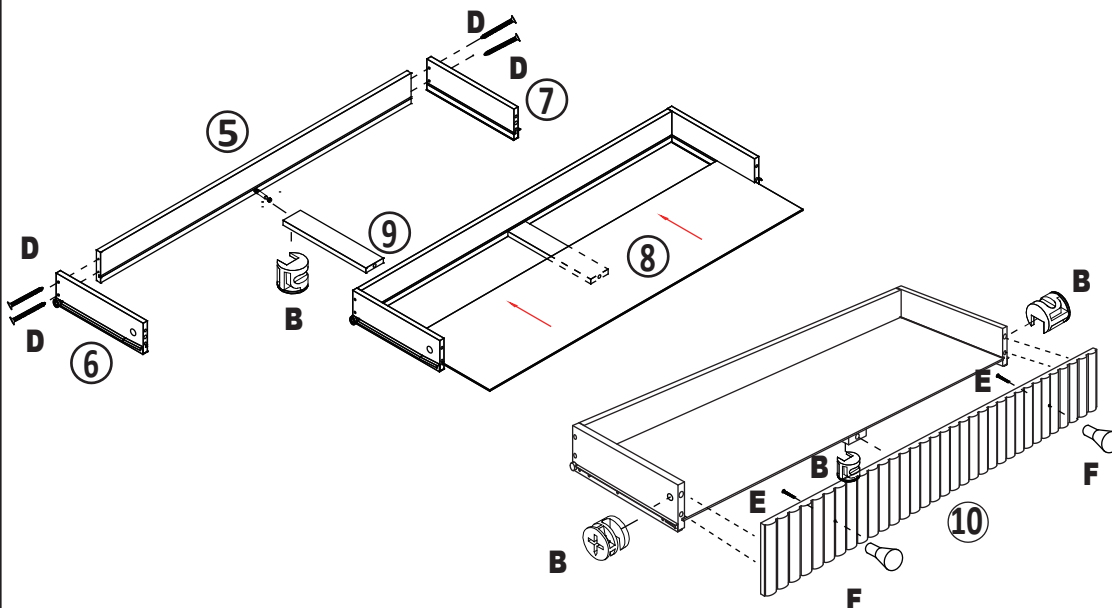

B




x4

D



x4

E



x2


F



x2

Step 6

1. Carefully insert drawer into unit.

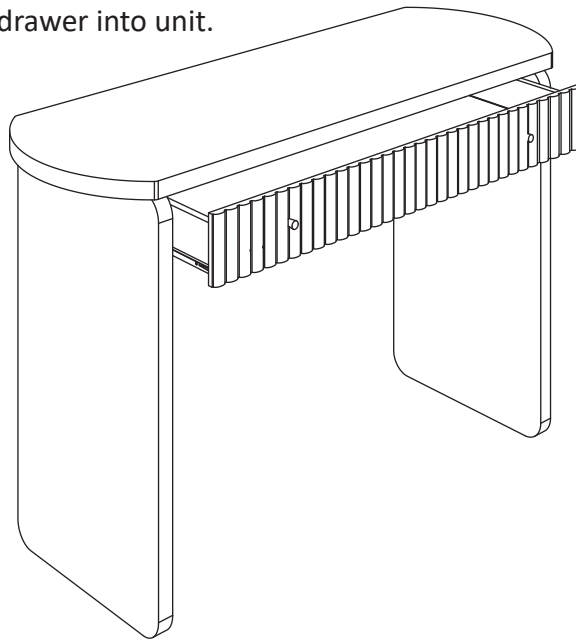

Step 7

1. Connect the Safety Wall Straps (H) to unit as shown using Short Flat Screws (K).
2. Drill hole slightly smaller than Wall Anchors (I) into drywall and gently tap Wall Anchors into hole.
3. Connect Safety Wall Straps (H) to Wall Anchors (I) as shown using Long Flat Screws (J).
4. Enjoy !

