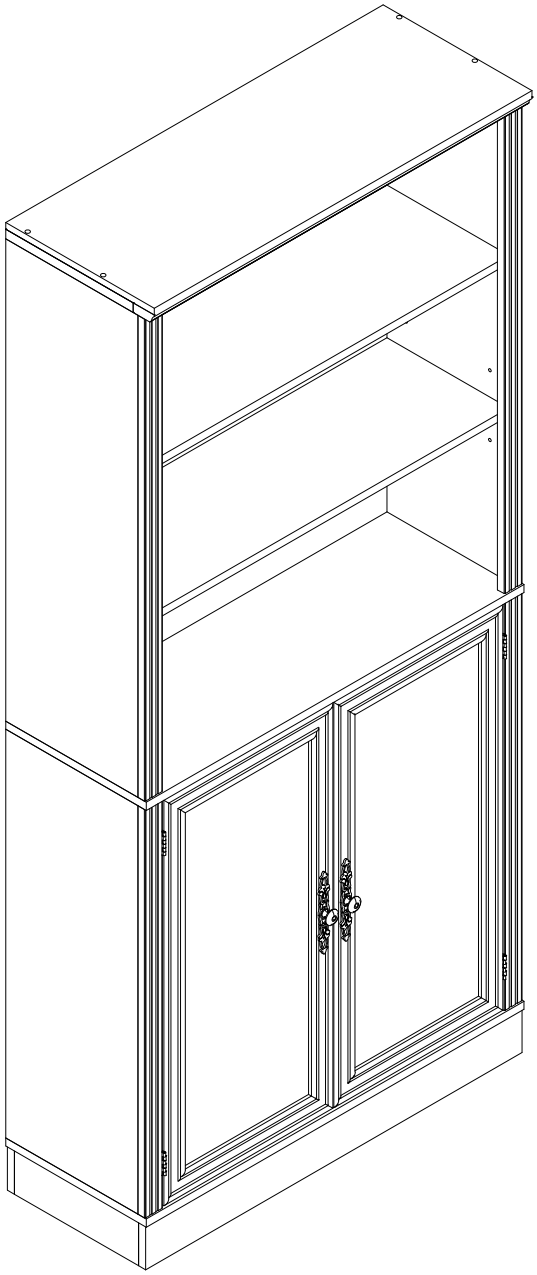
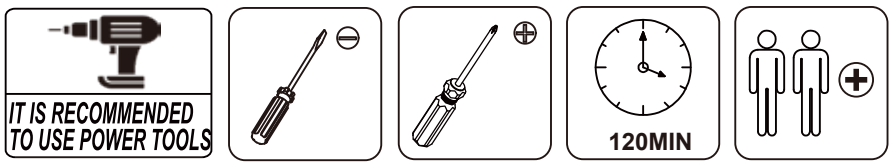
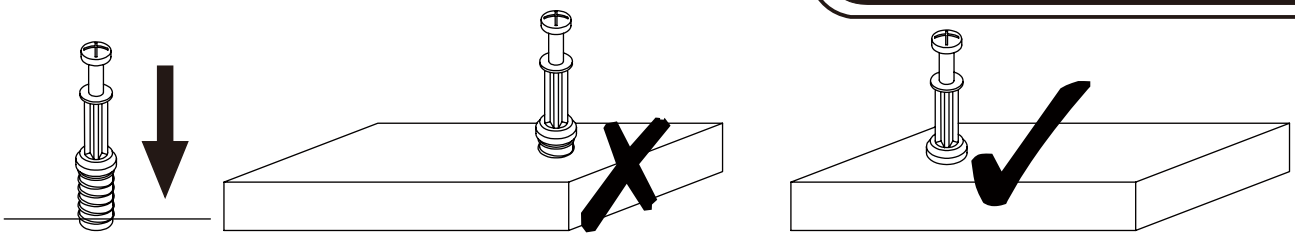
HLG075

Version:1.0

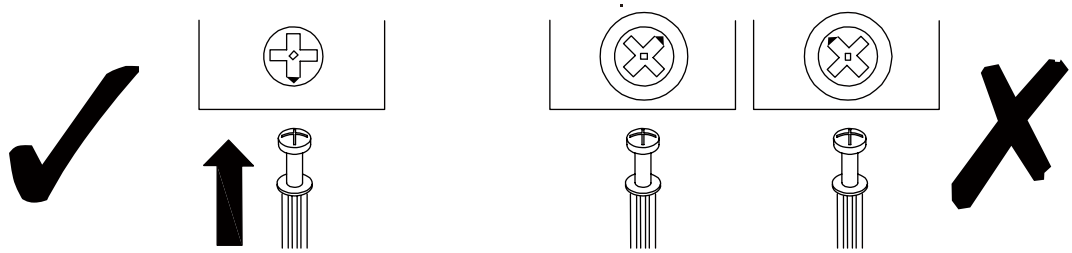




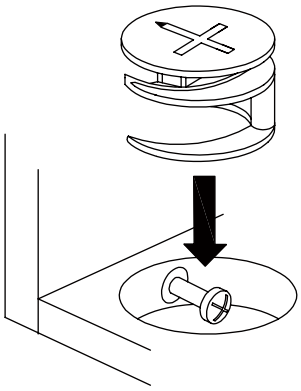
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



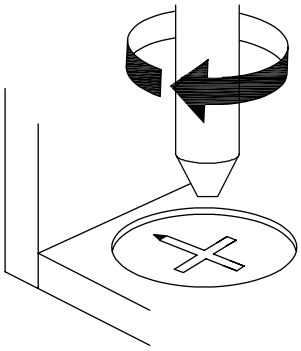
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



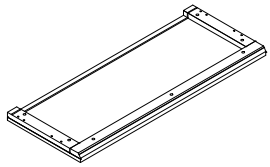
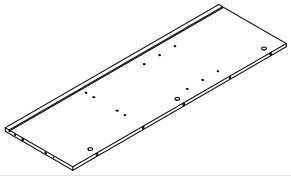
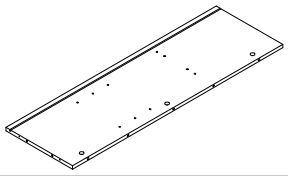
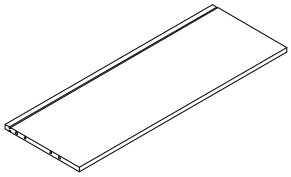
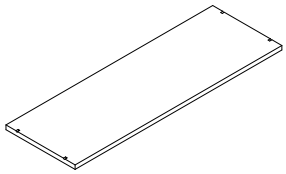
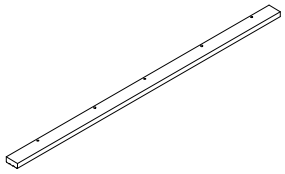
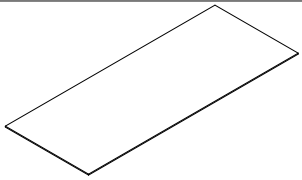
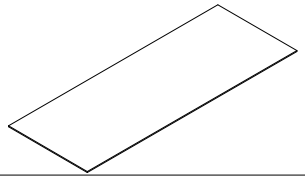
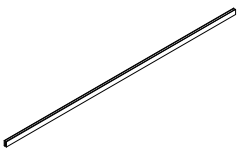
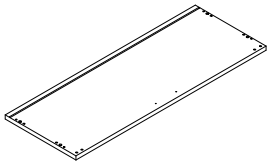
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

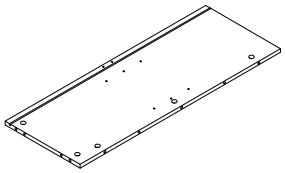
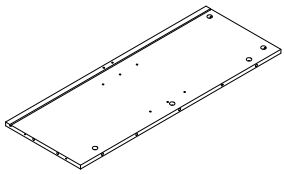
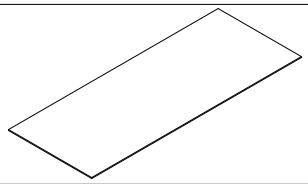
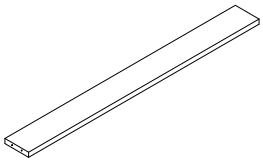
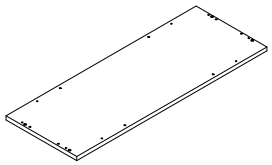
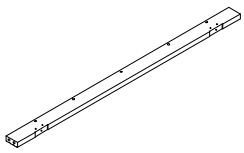

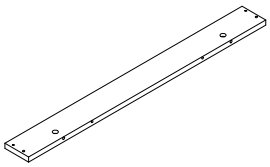
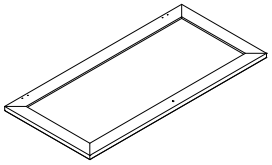
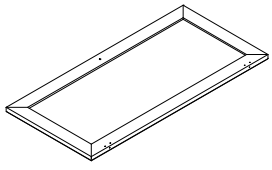


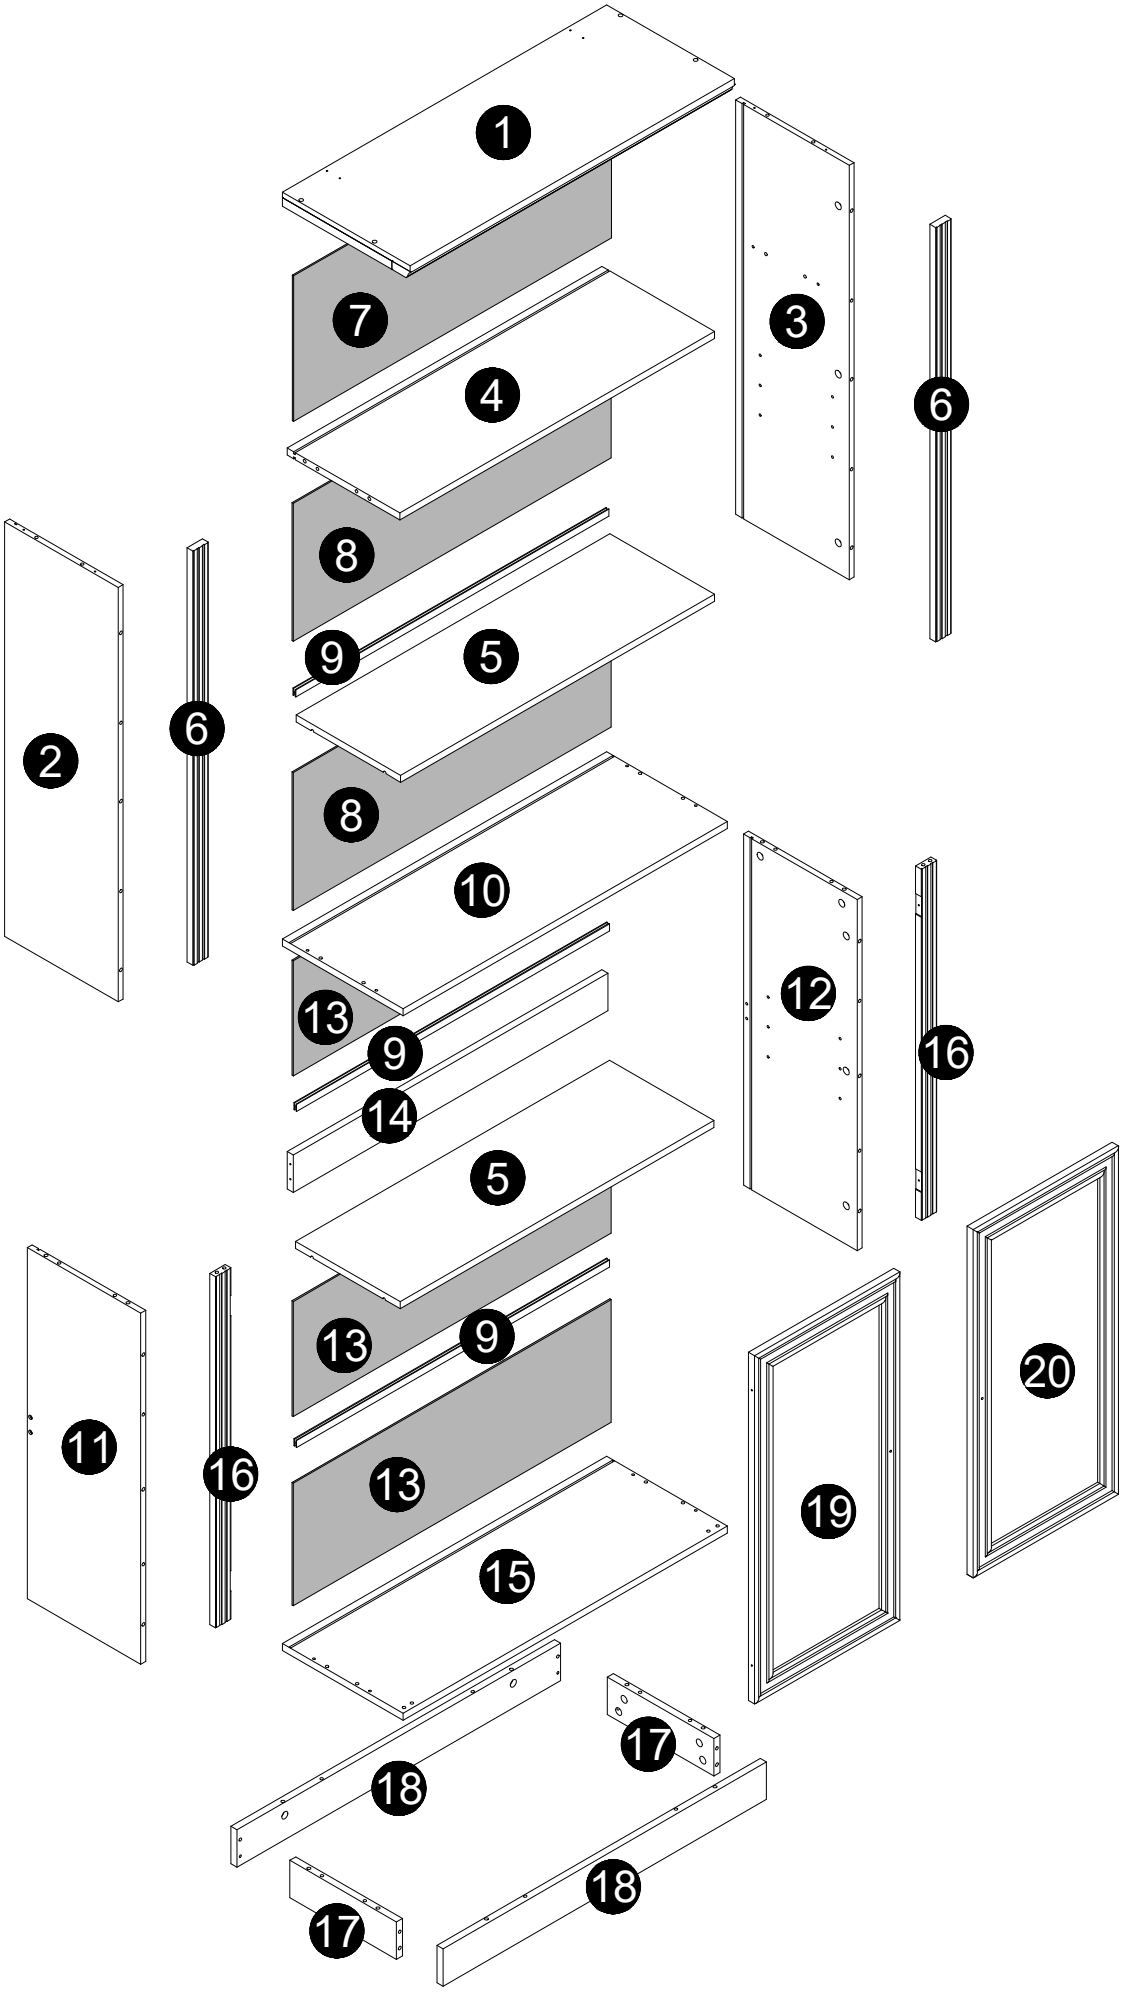
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



EN_ Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x3	
⑩		x1	

NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x3	
⑭		x1	
⑮		x1	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x1	
⑳		x1	

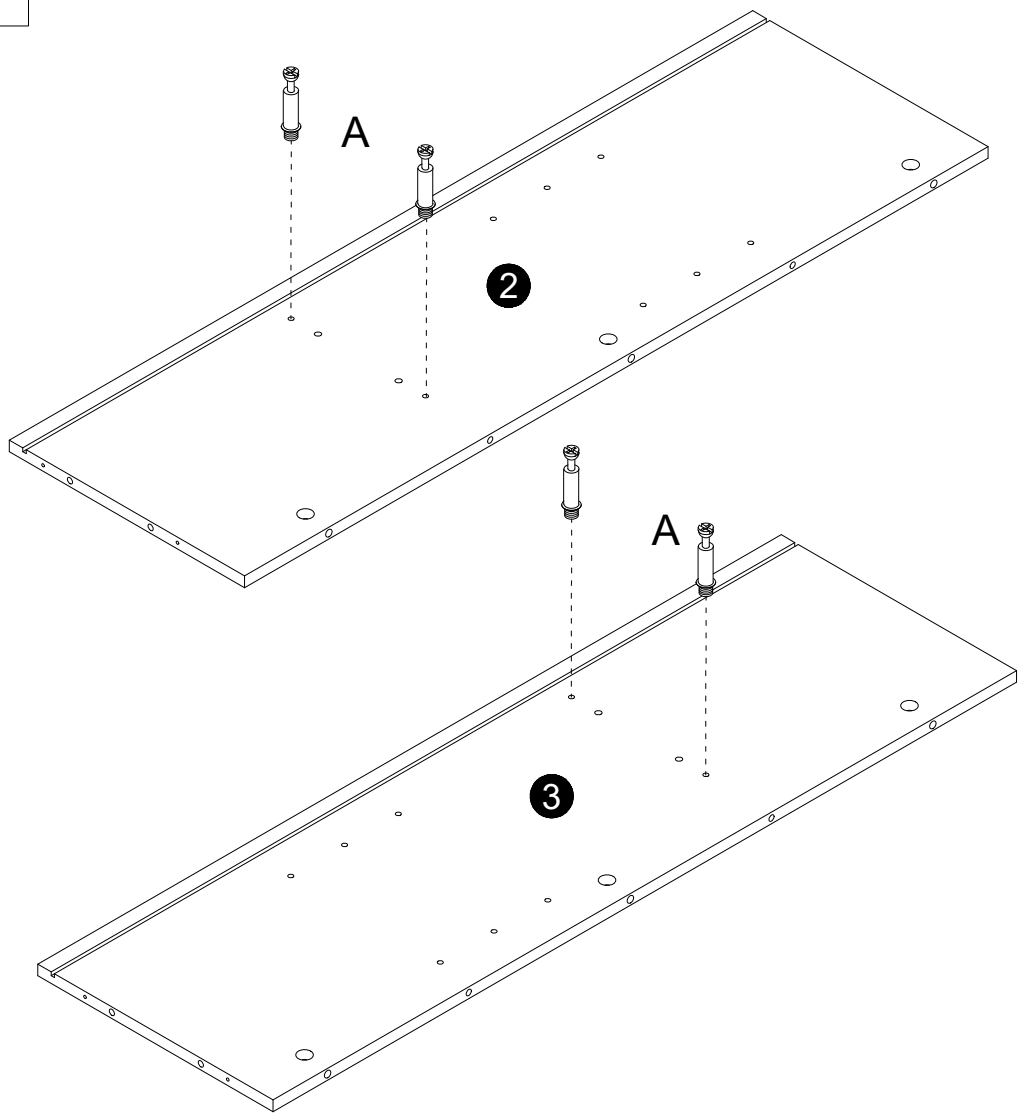

1
7
3
4
6
8
9
5
2
6
8
10
12
13
9
16
14
5
11
16
13
9
20
13
19
15
17
18
18
17

HARDWARE

A x32 Ø6x35mm +2(spare)	B x32 Ø15x10mm +2(spare)	C x48 Ø6x30mm +3(spare)	D x12 Ø4x35mm +1(spare)	E x24 Ø3.5x12mm +2(spare)	F x2 F-1 F-2 F-3
G x16 Ø3x16mm +1(spare) G-1 G-2	H x4 Ø5x50mm	I x4	J x2 Ø4x14mm J-1 J-2	K x2 K-1 K-2	L x27 Ø20mm +2(spare)
M x8	N x1 N-1 N-2	O x2 O-1 O-2			


01

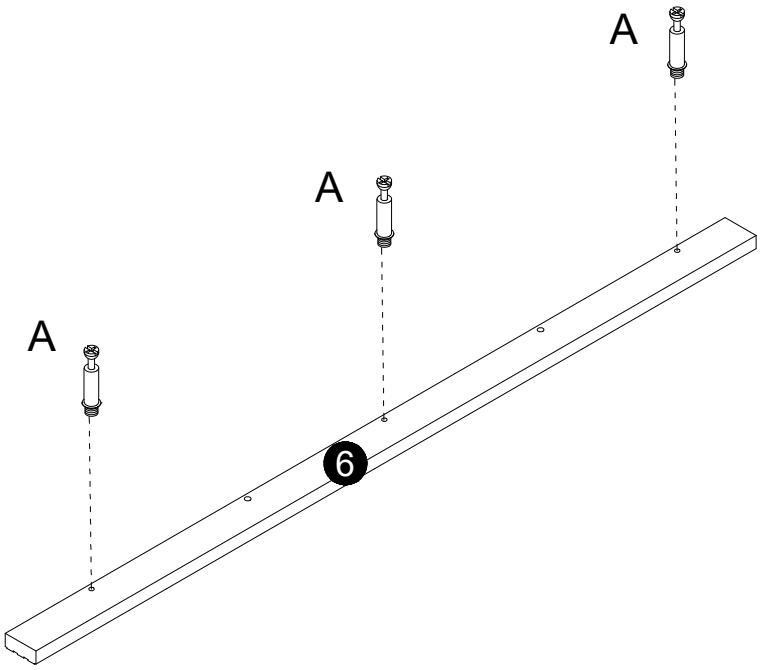
A x4



02

A x6






x2

03

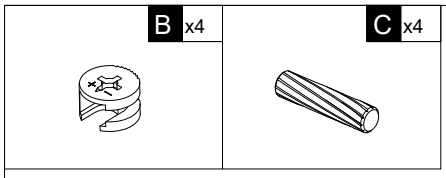
B x6

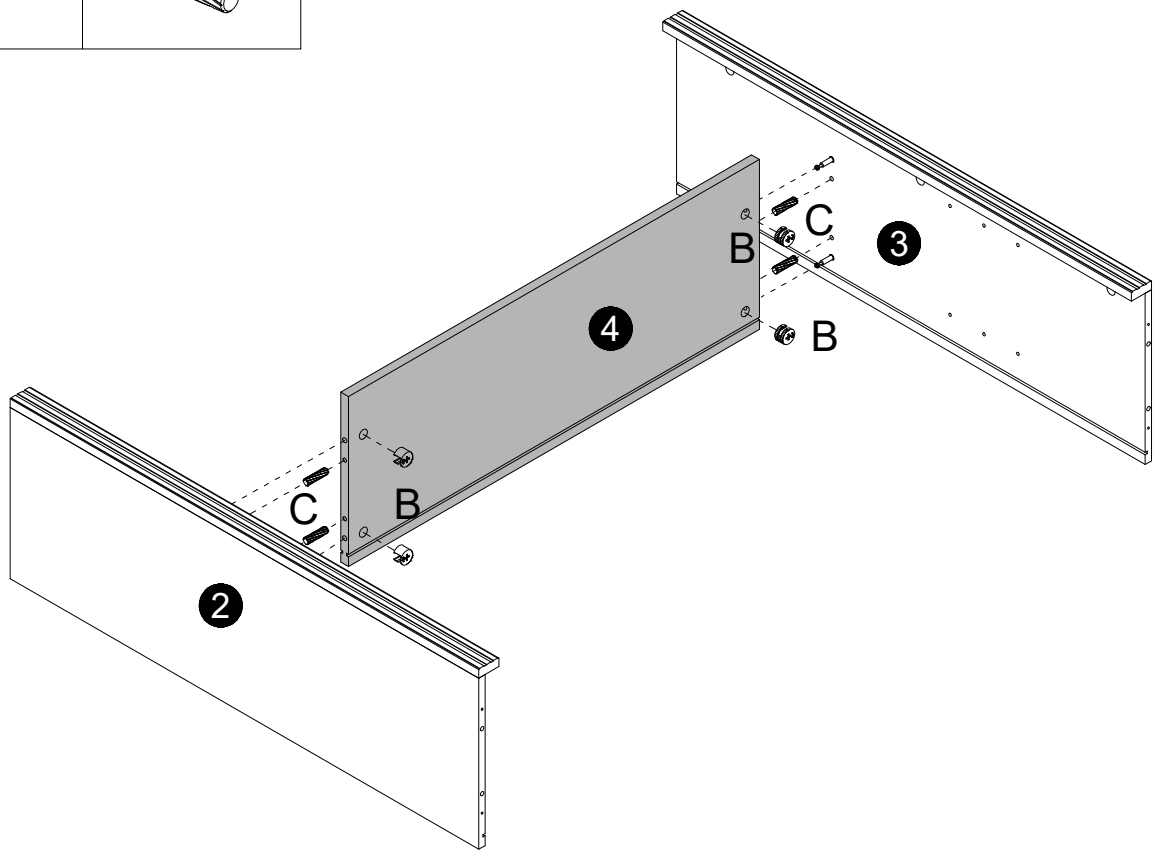


C x4

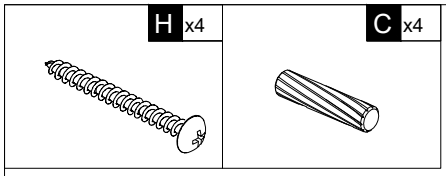


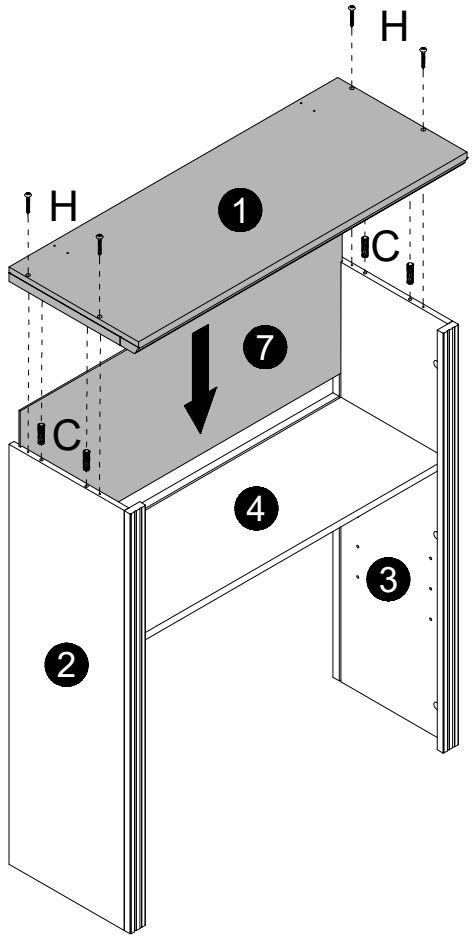
04



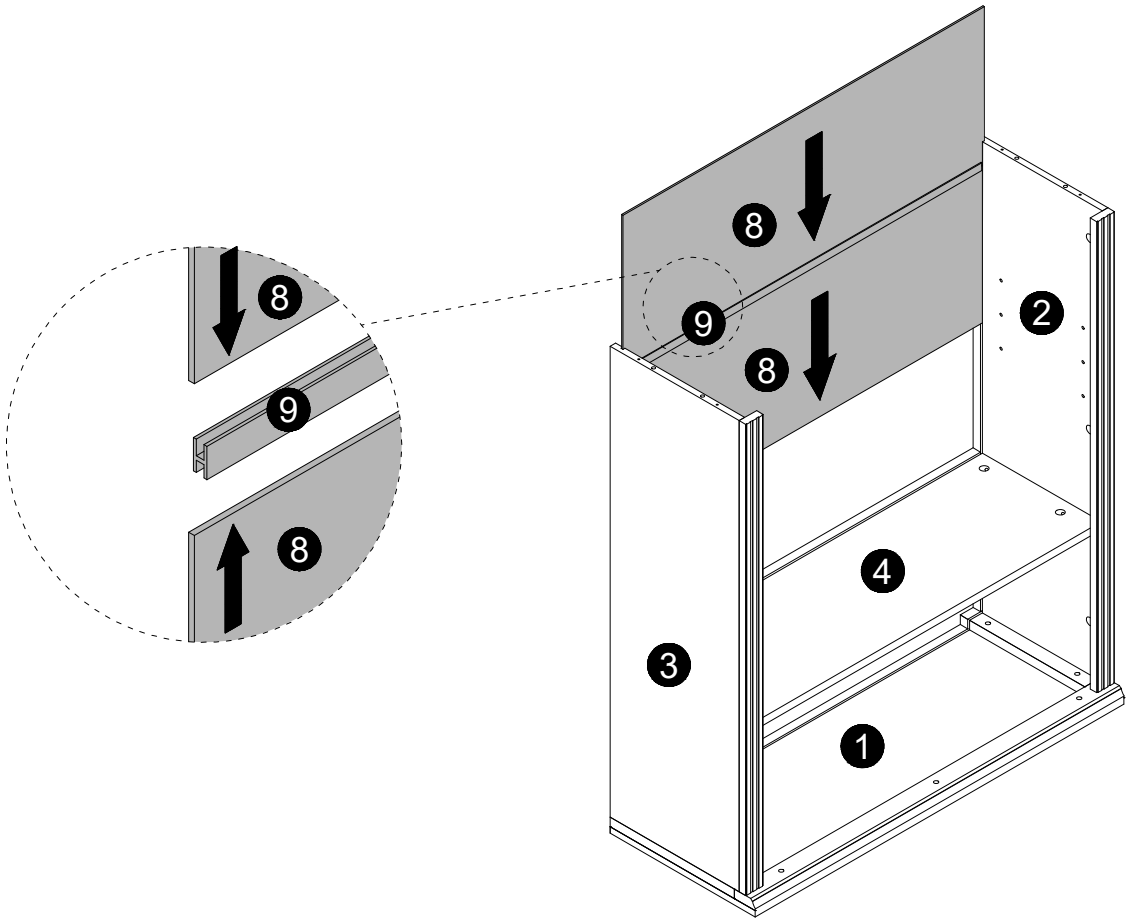


05

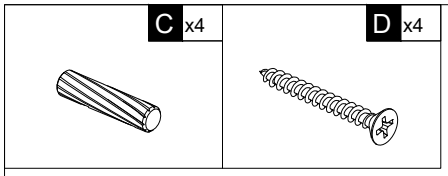


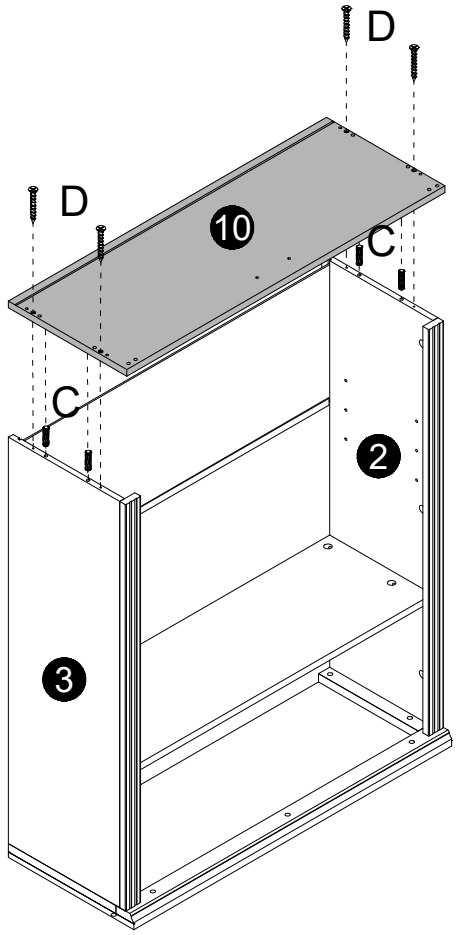


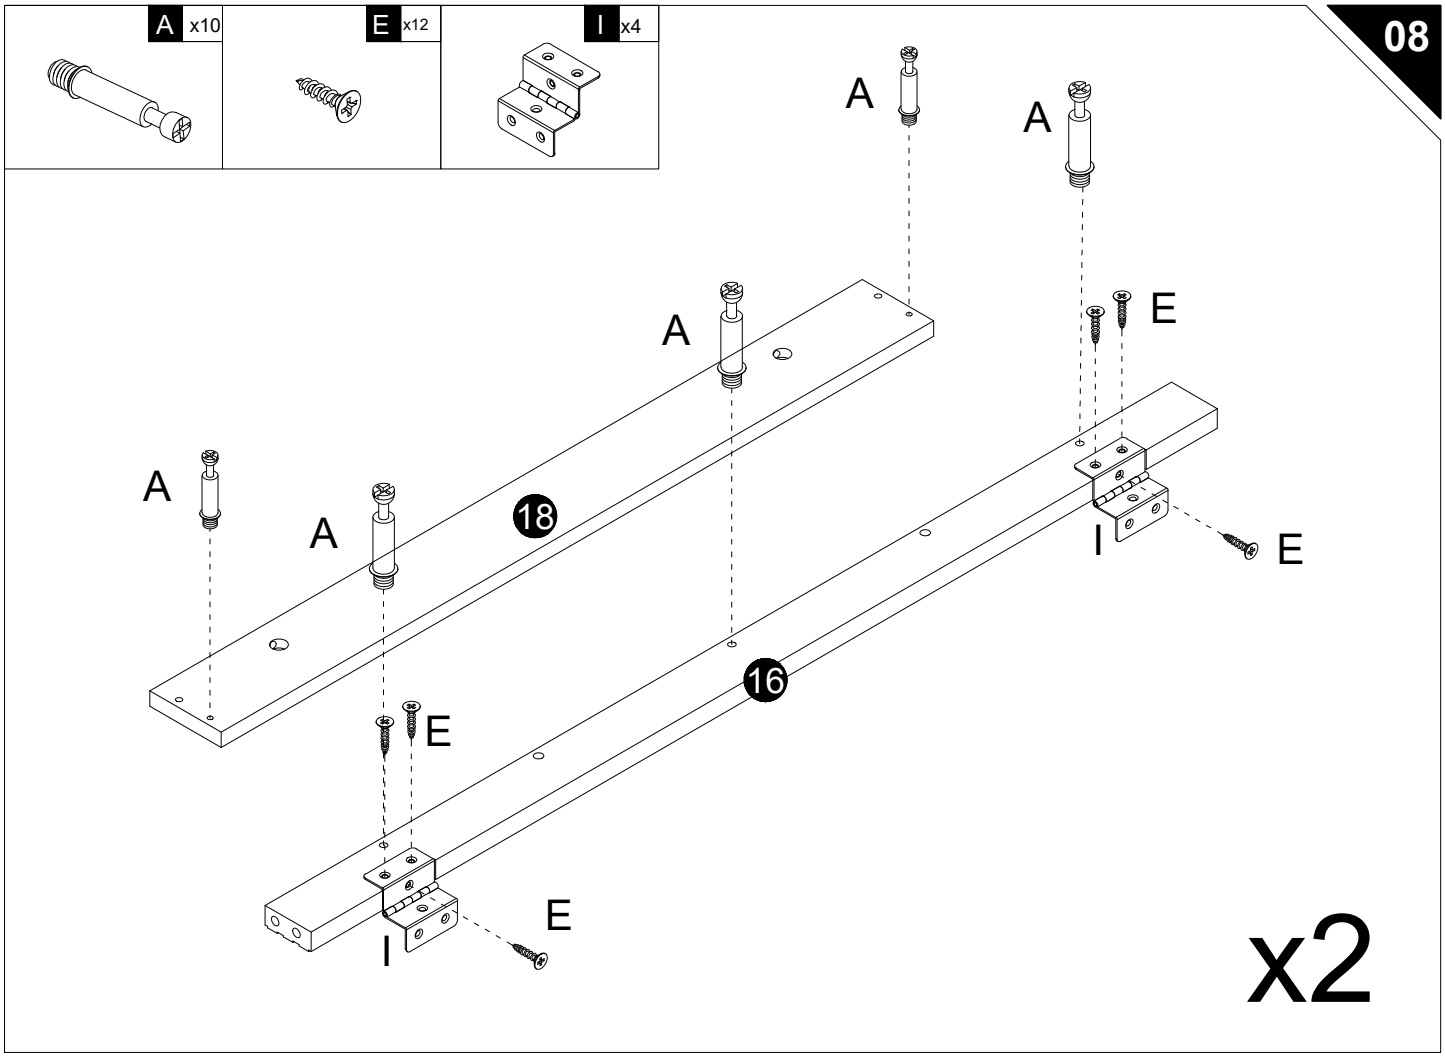
06

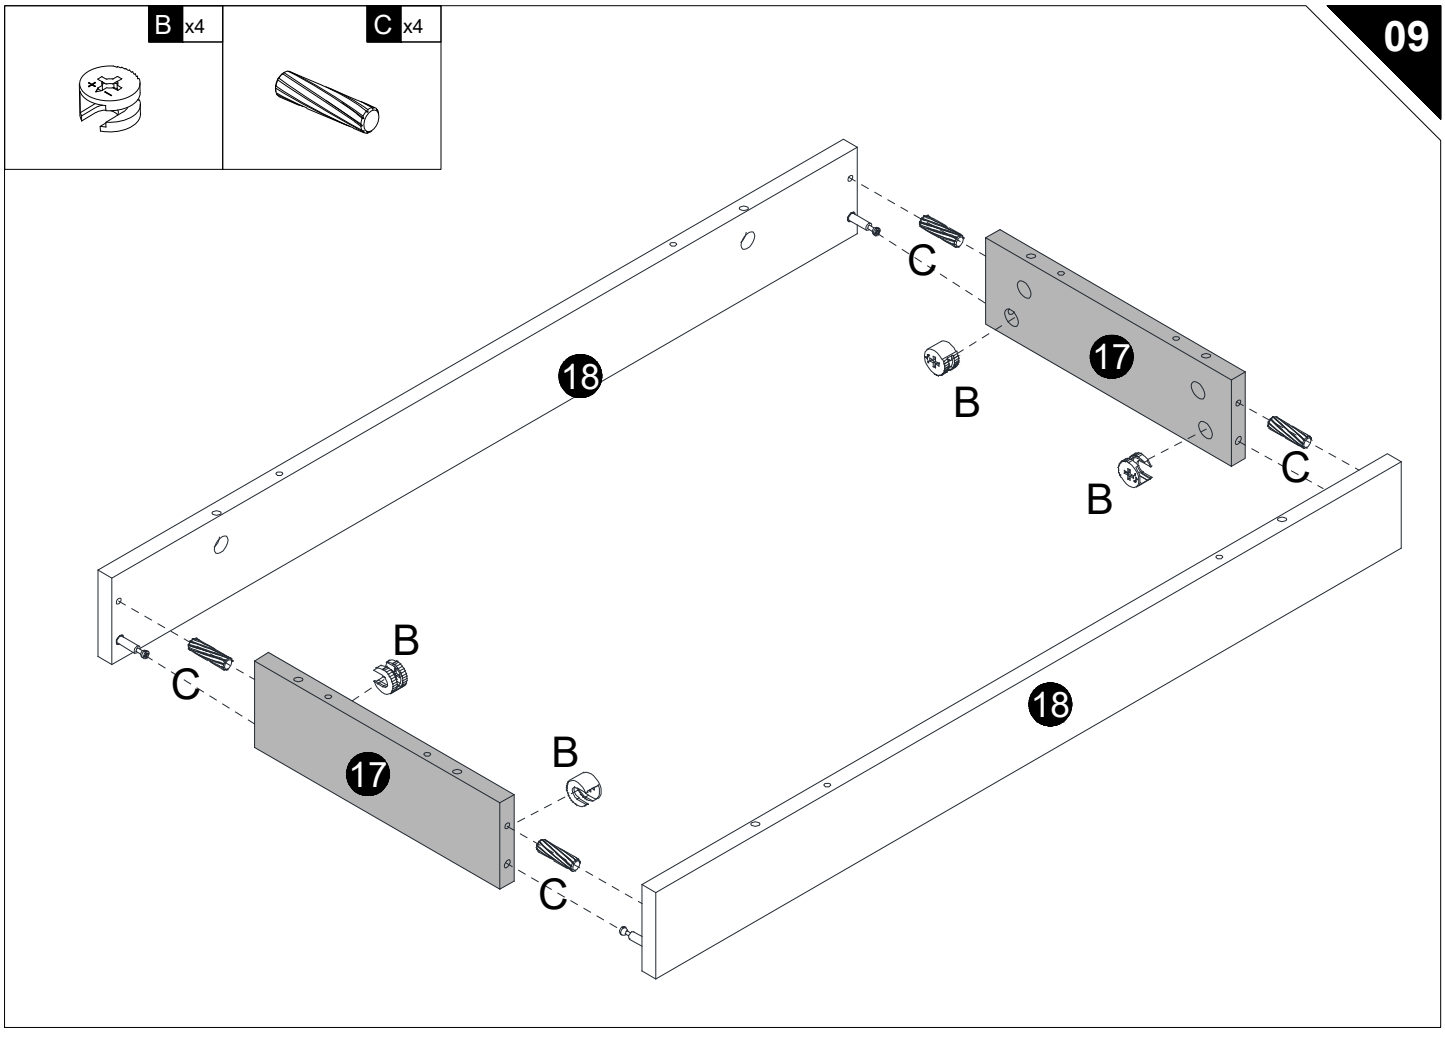


07






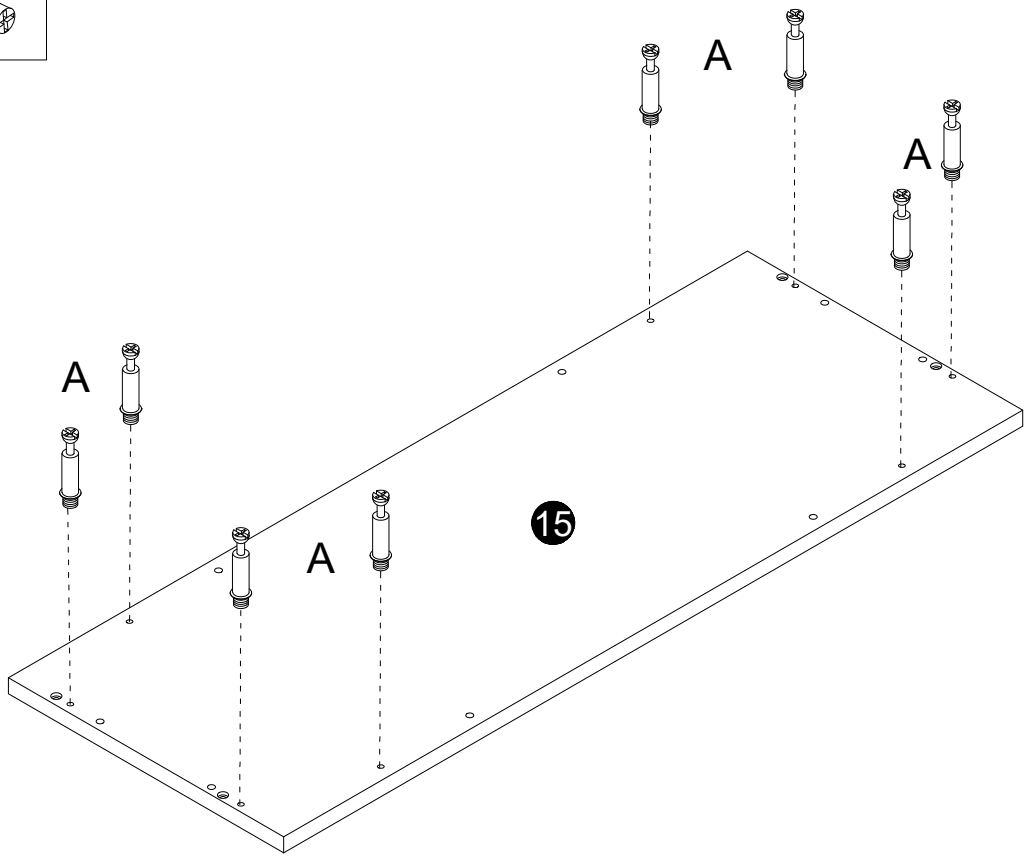

08
A x10
E x12
I x4
A
A
A
A
E
E
18
16
I
E
E
I
x2


09
B x4
C x4
C
18
17
B
B
C
B
C
B
17
18
C

10

A x8






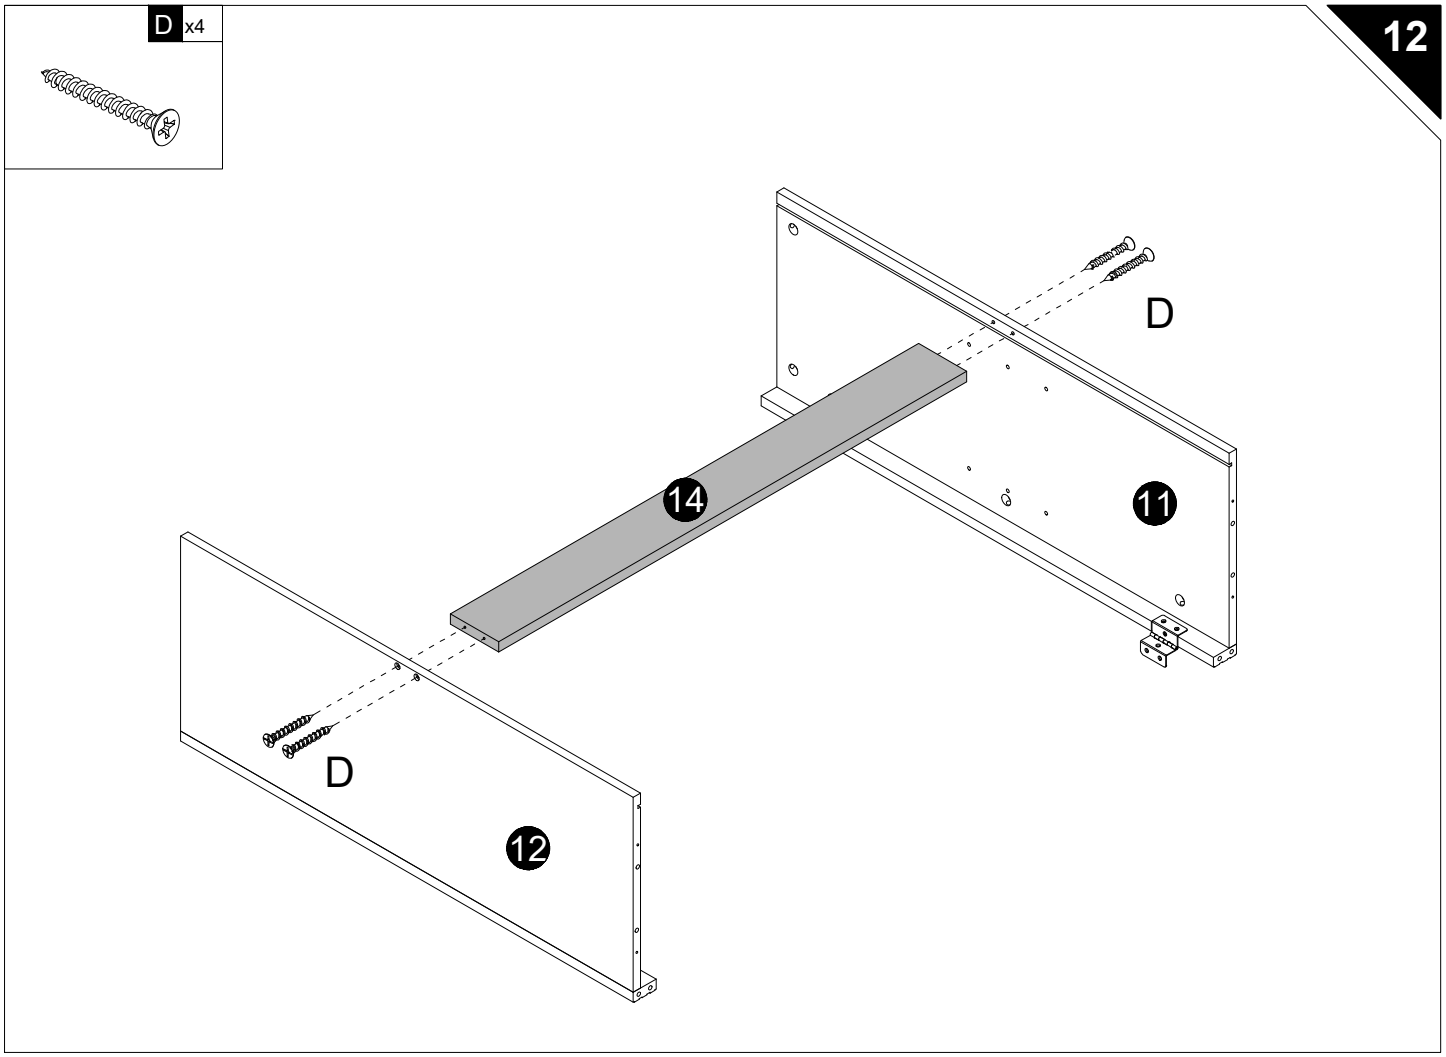
11

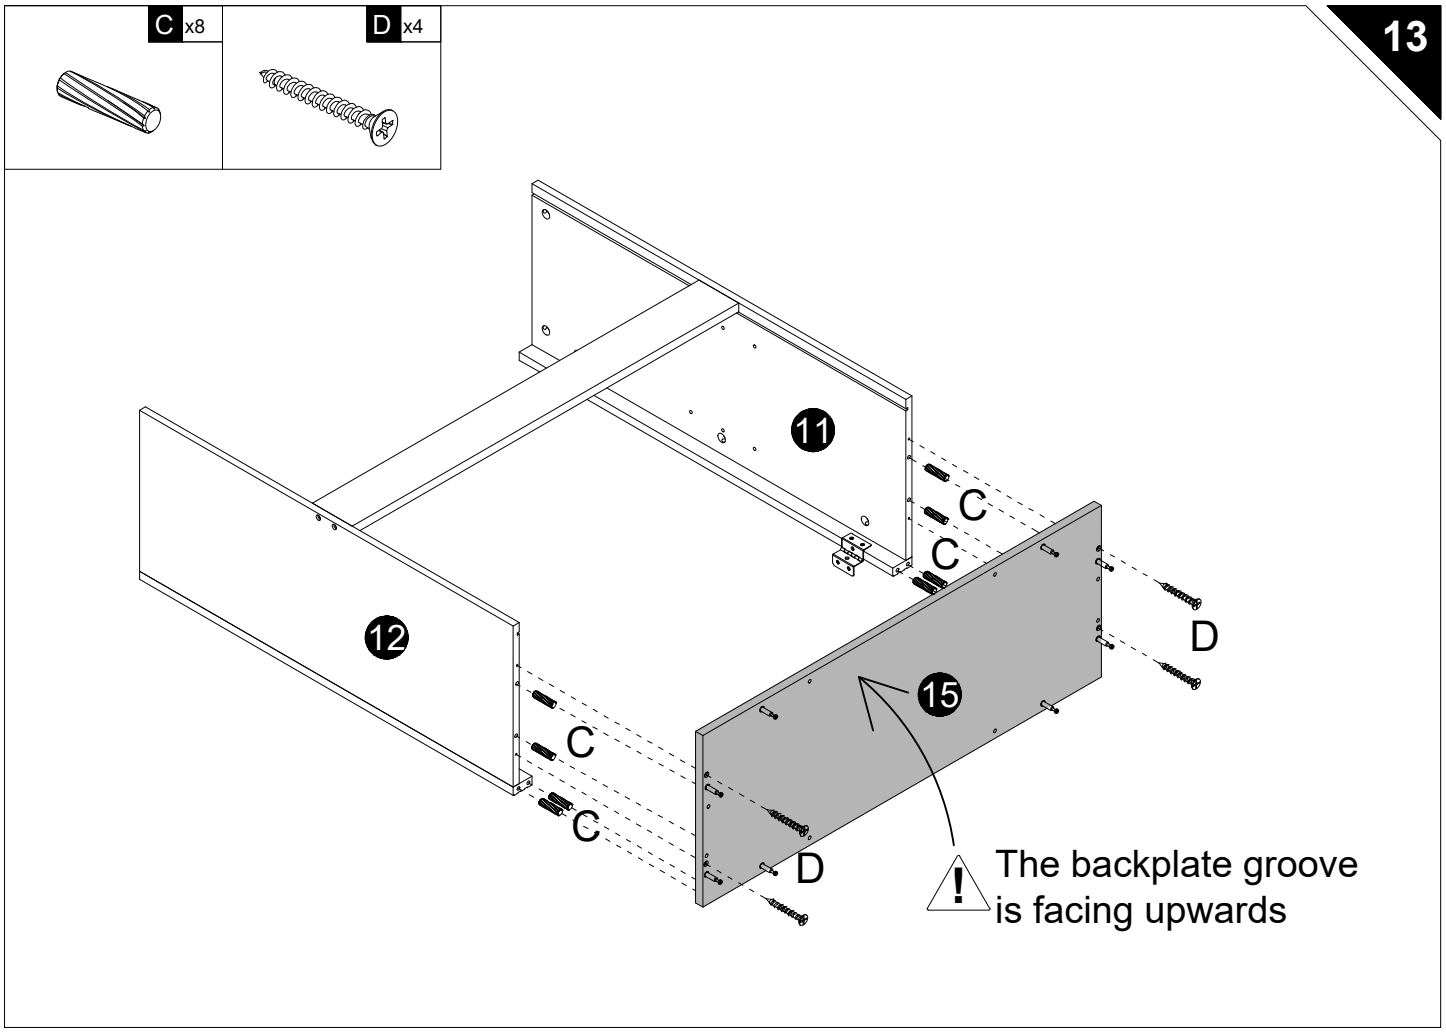
B x6

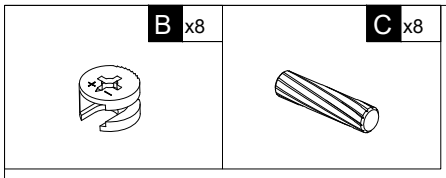


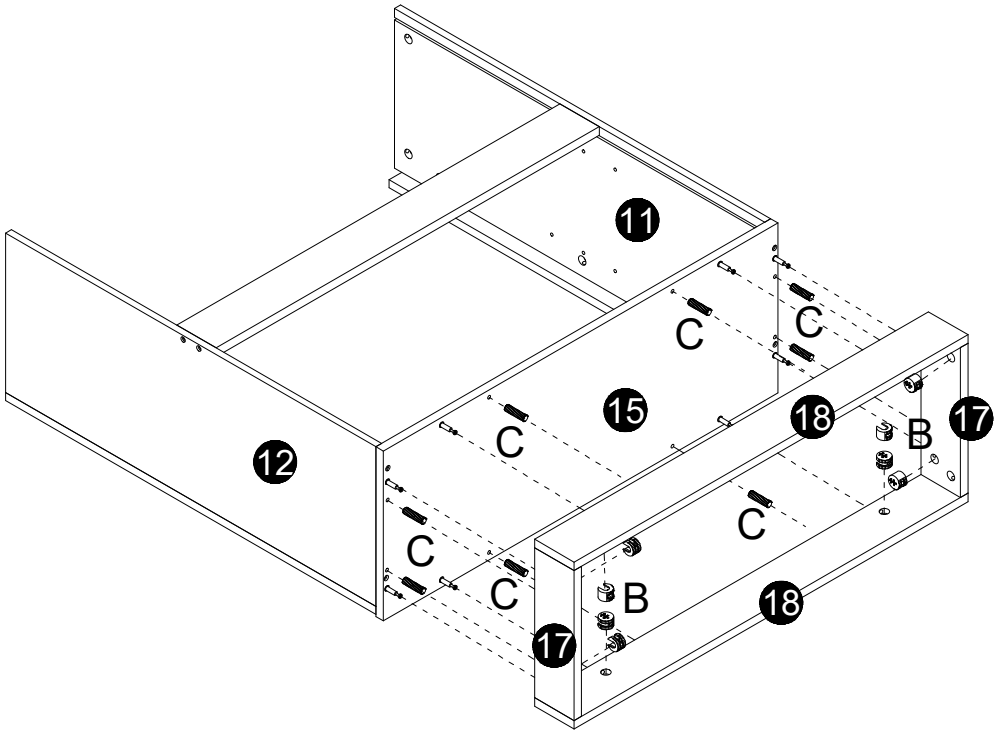
C x4

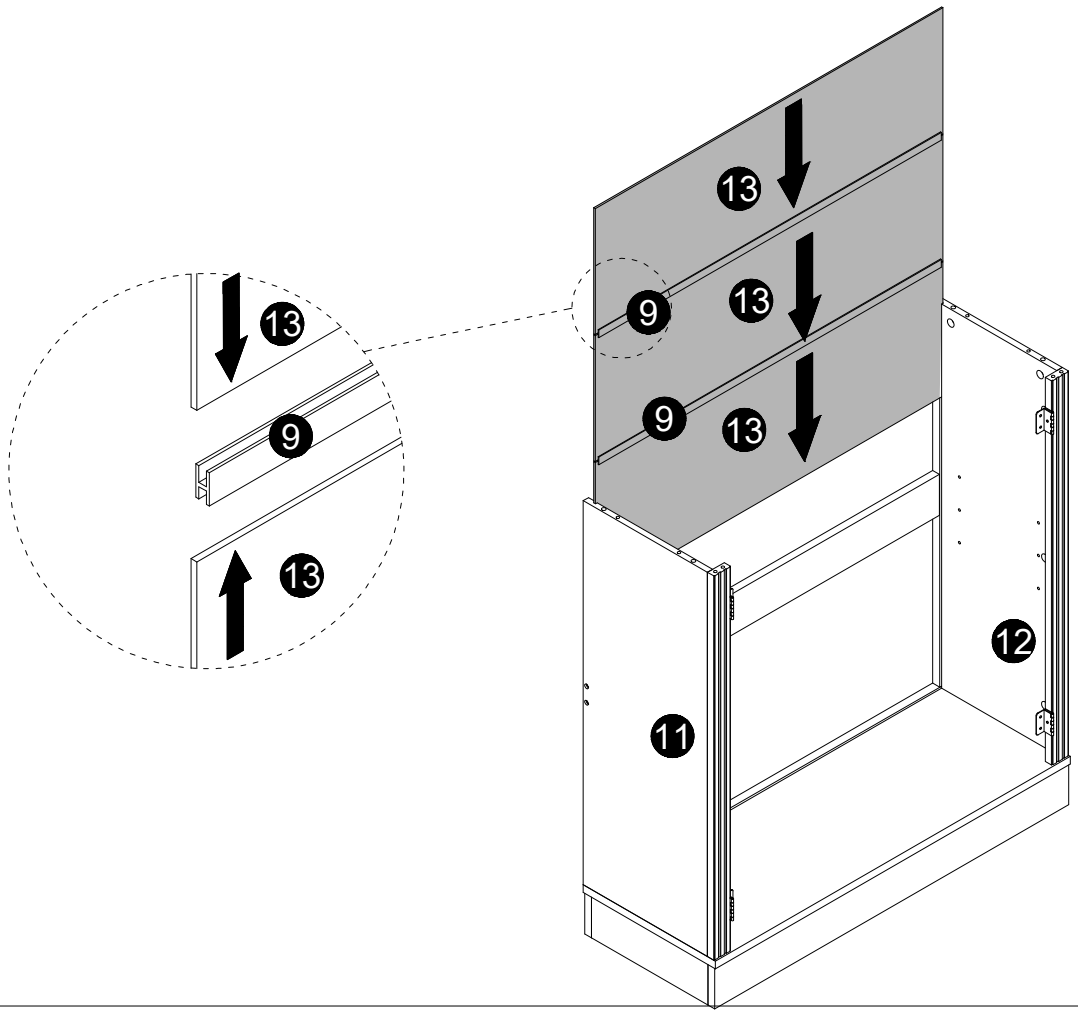


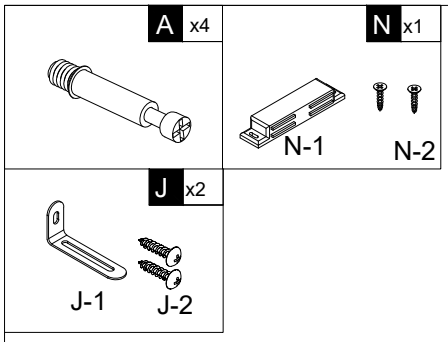

D x4
D
14
11
D
12

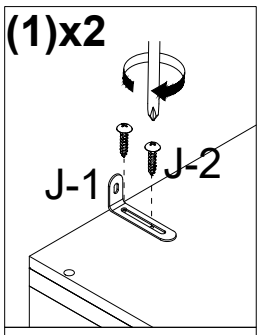

C x8
D x4
11
C
C
D
12
15
C
C
D
The backplate groove
is facing upwards


B x8
C x8

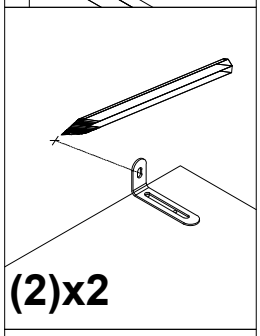

11
C
C
C
15
18
B
17
12
C
C
C
B
18
17


13
13
9
13
9
13
13
9
13
12
11

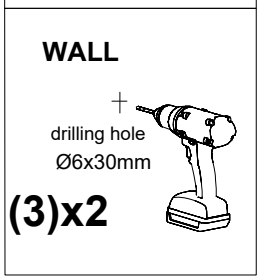




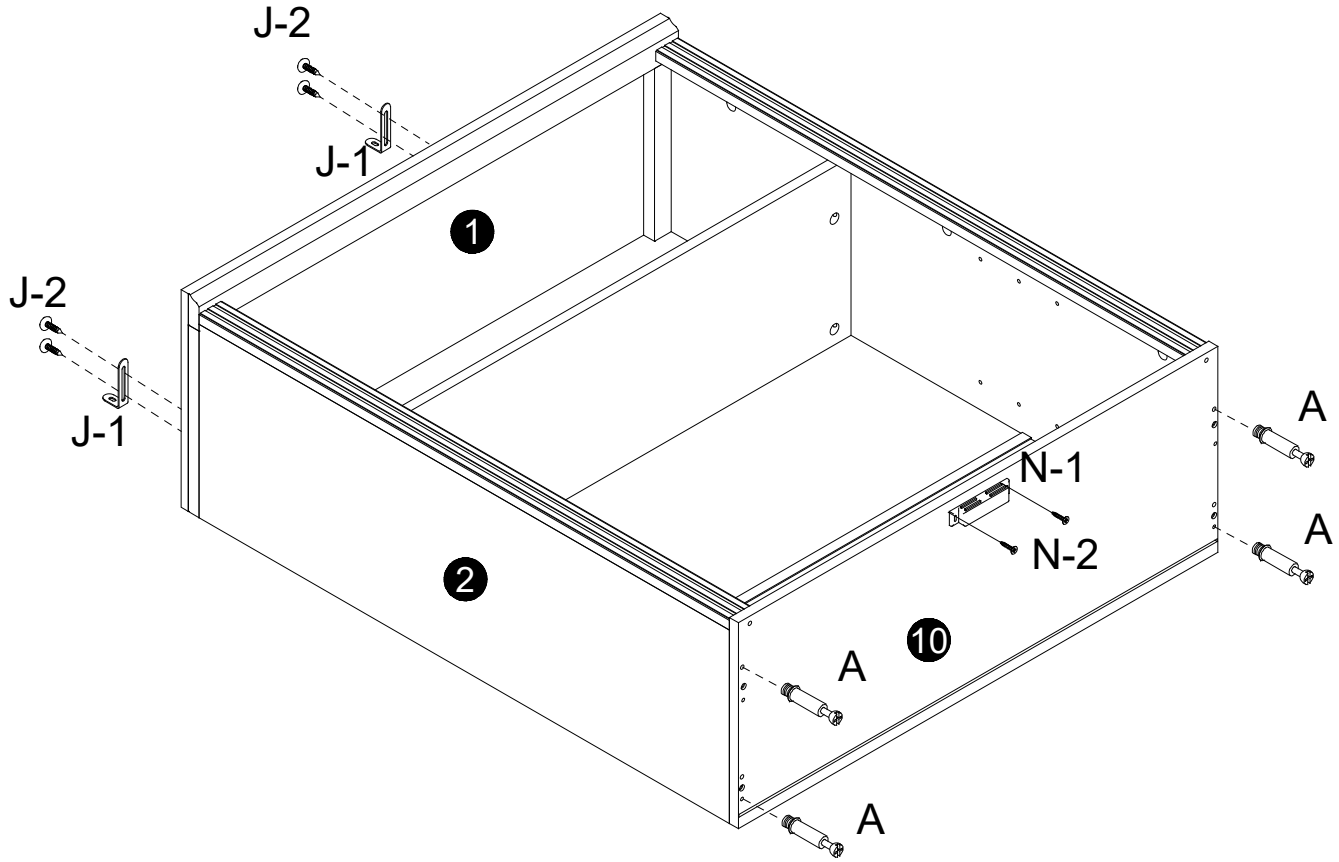
First fix the anti-rewind screw in the reserved hole of the product.

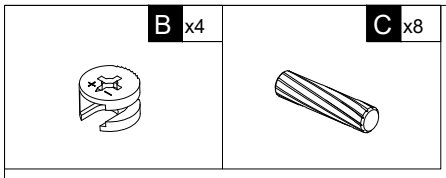


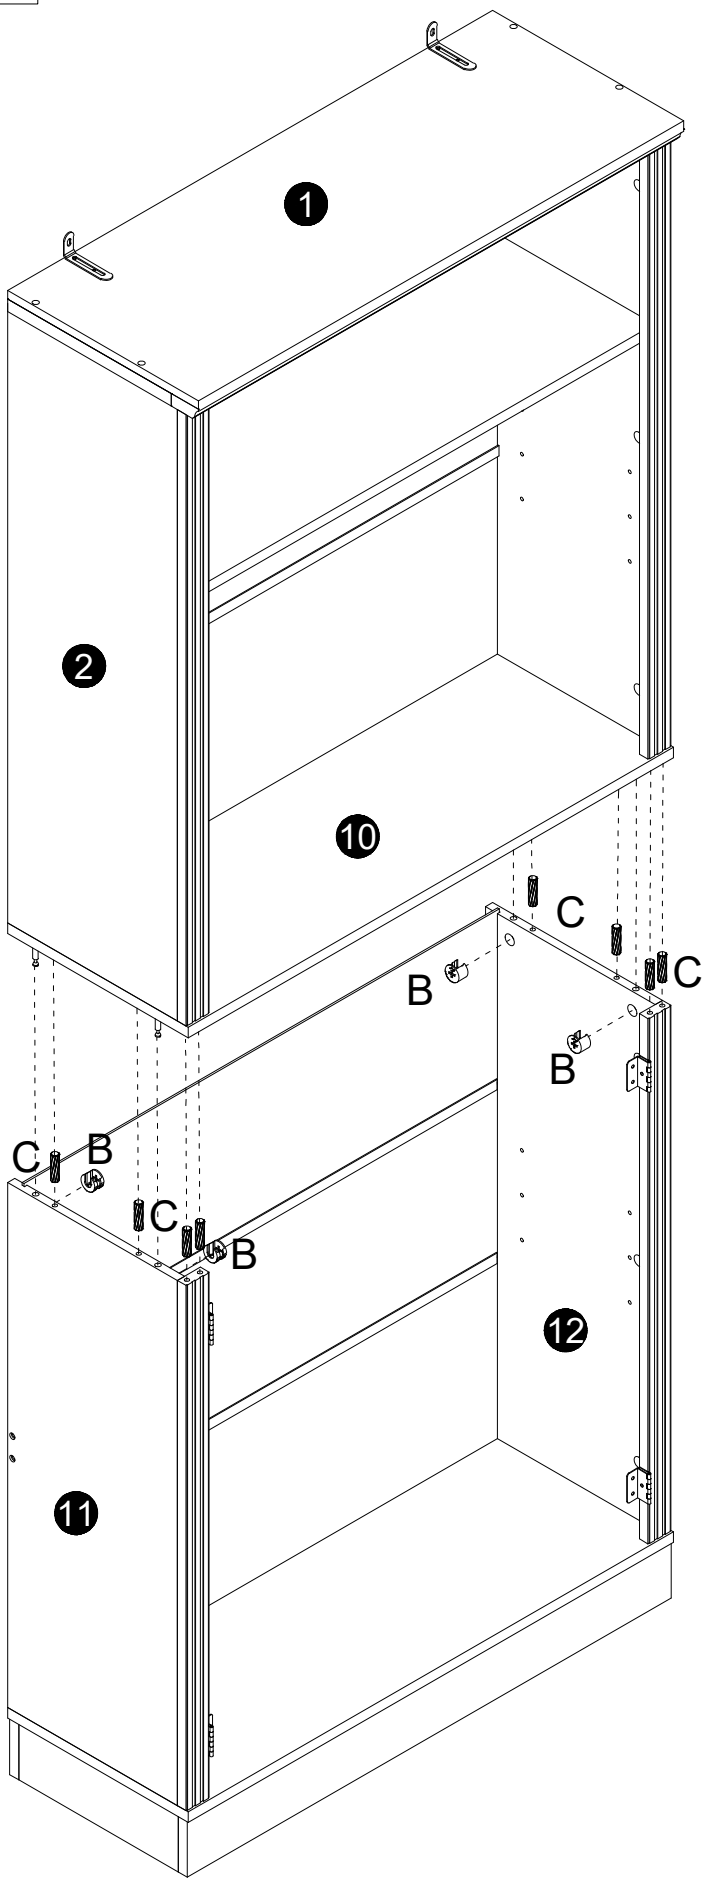
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

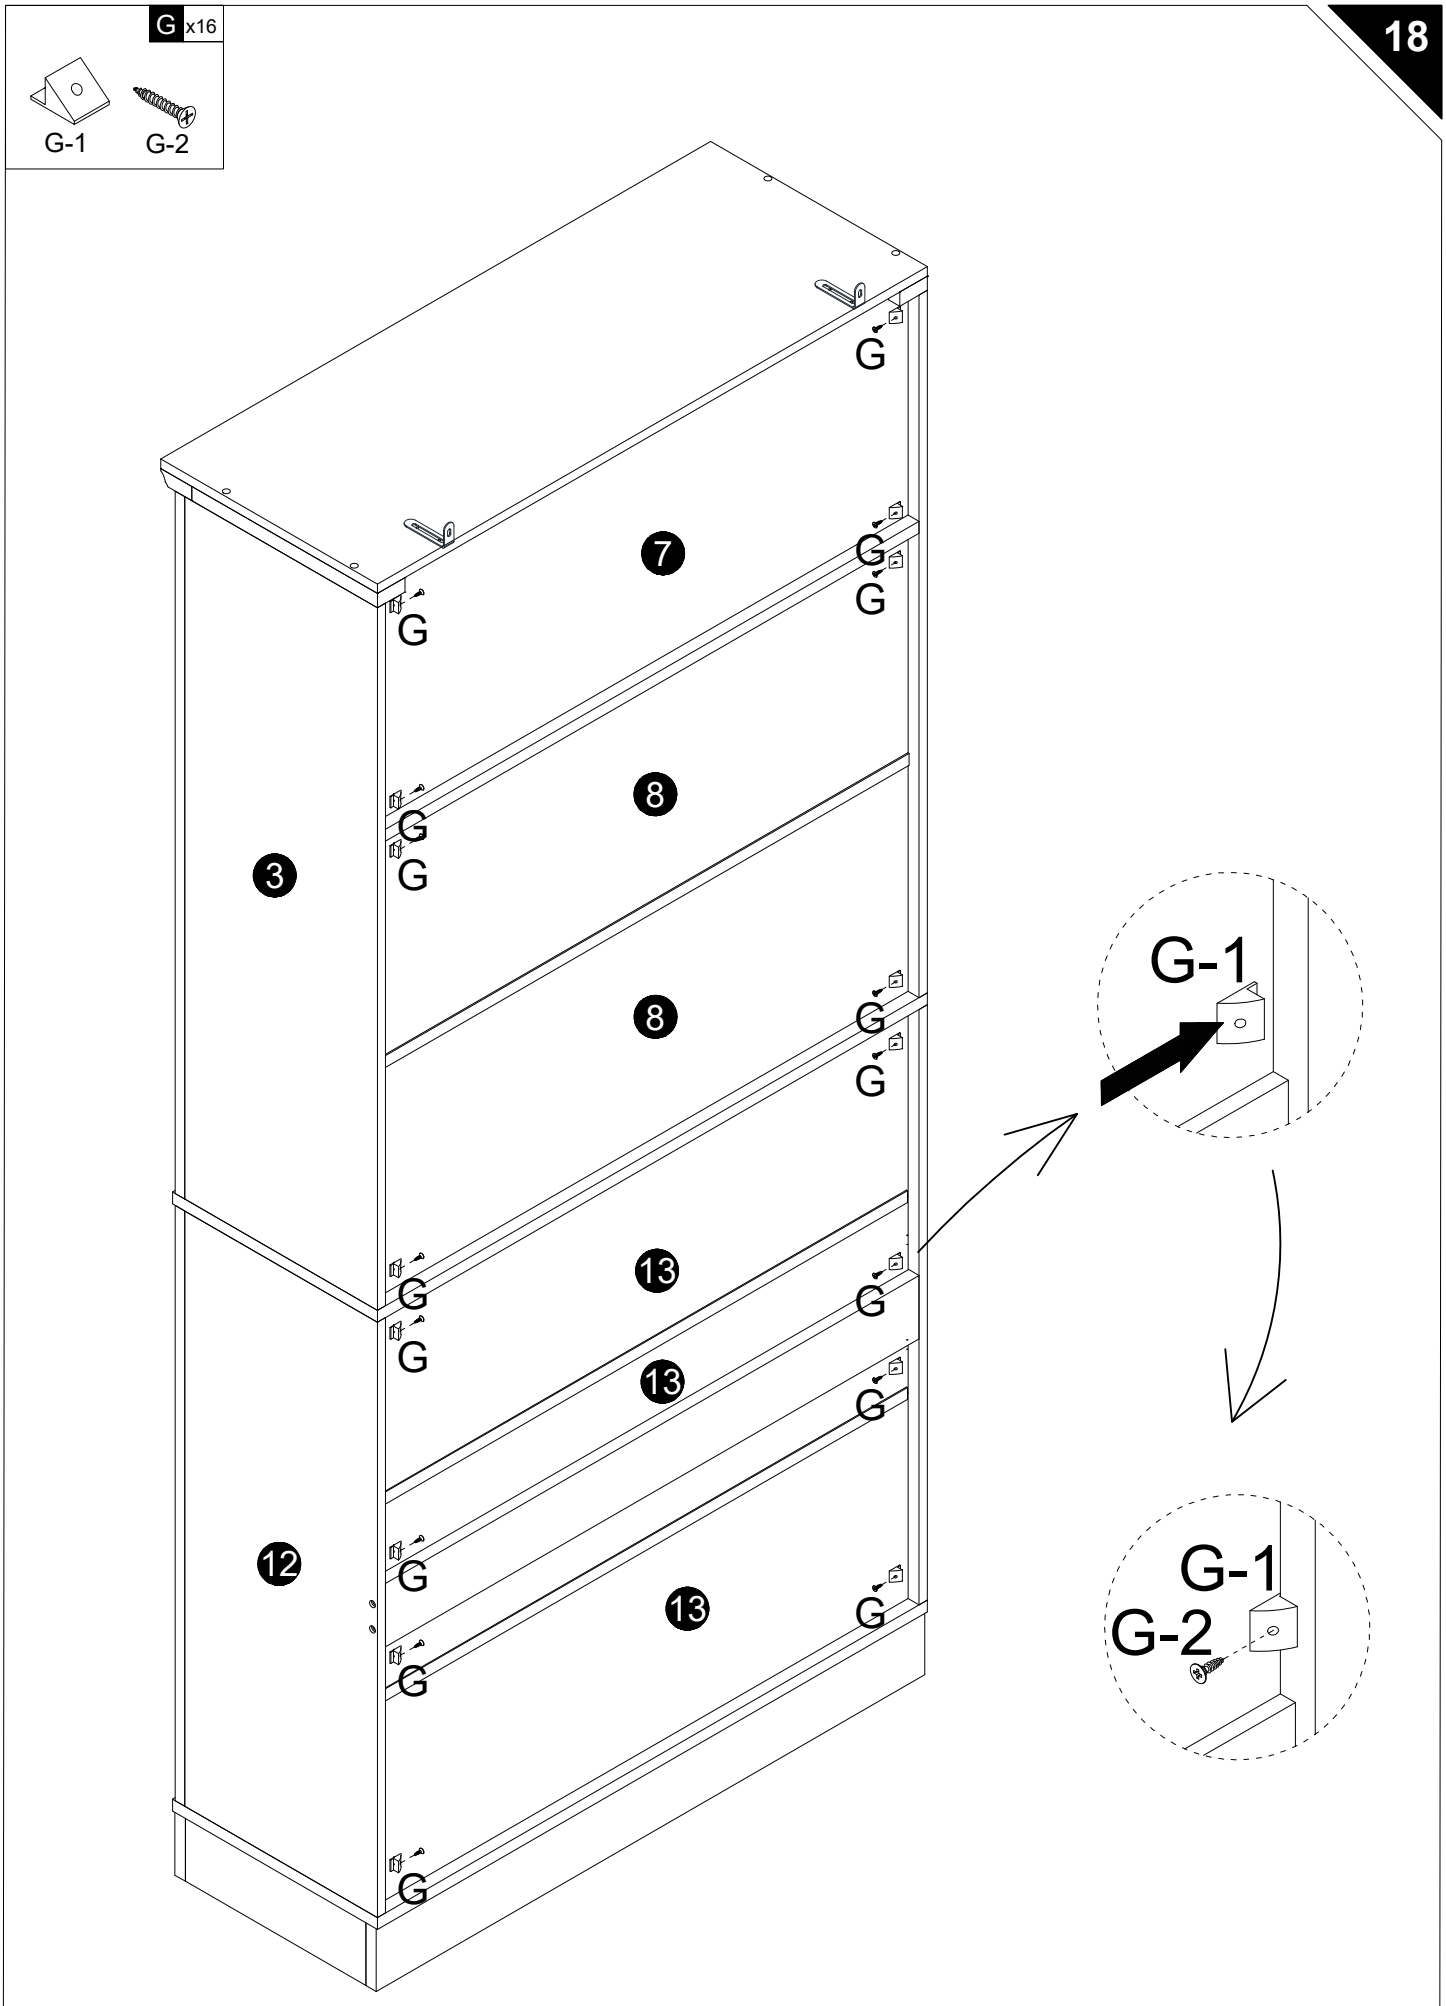


Then use a tape drill to make holes in the wall that are suitable for the product screws.

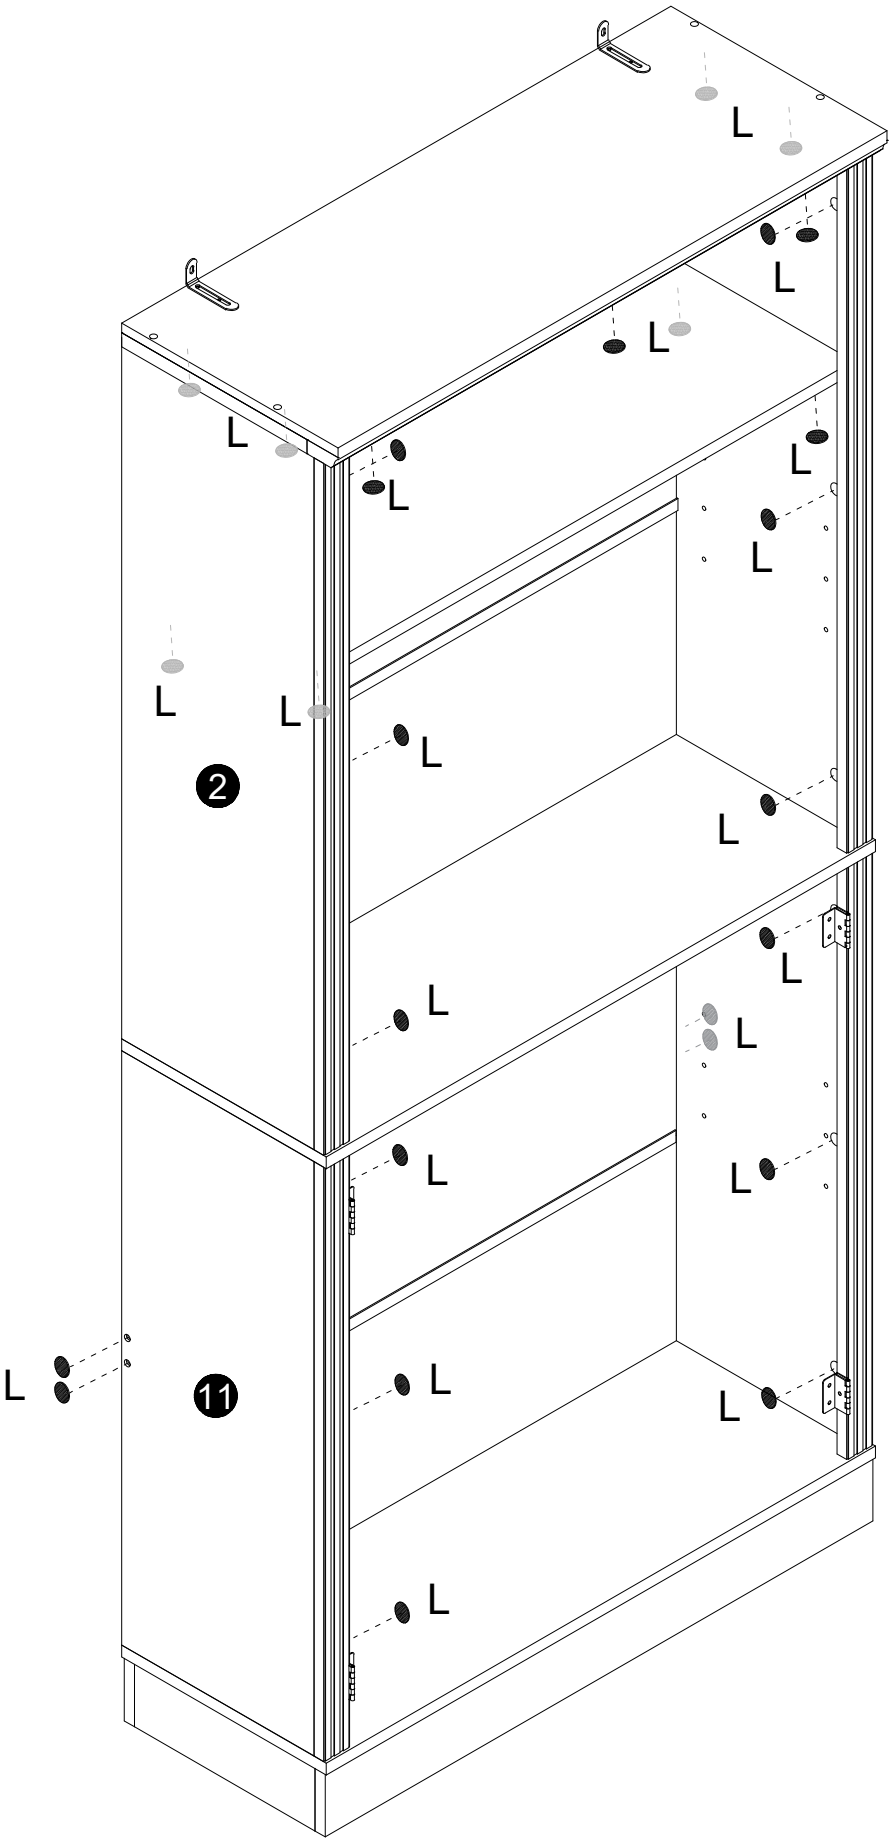


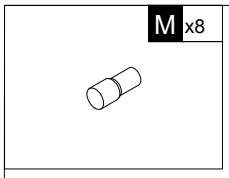

B x4
C x8

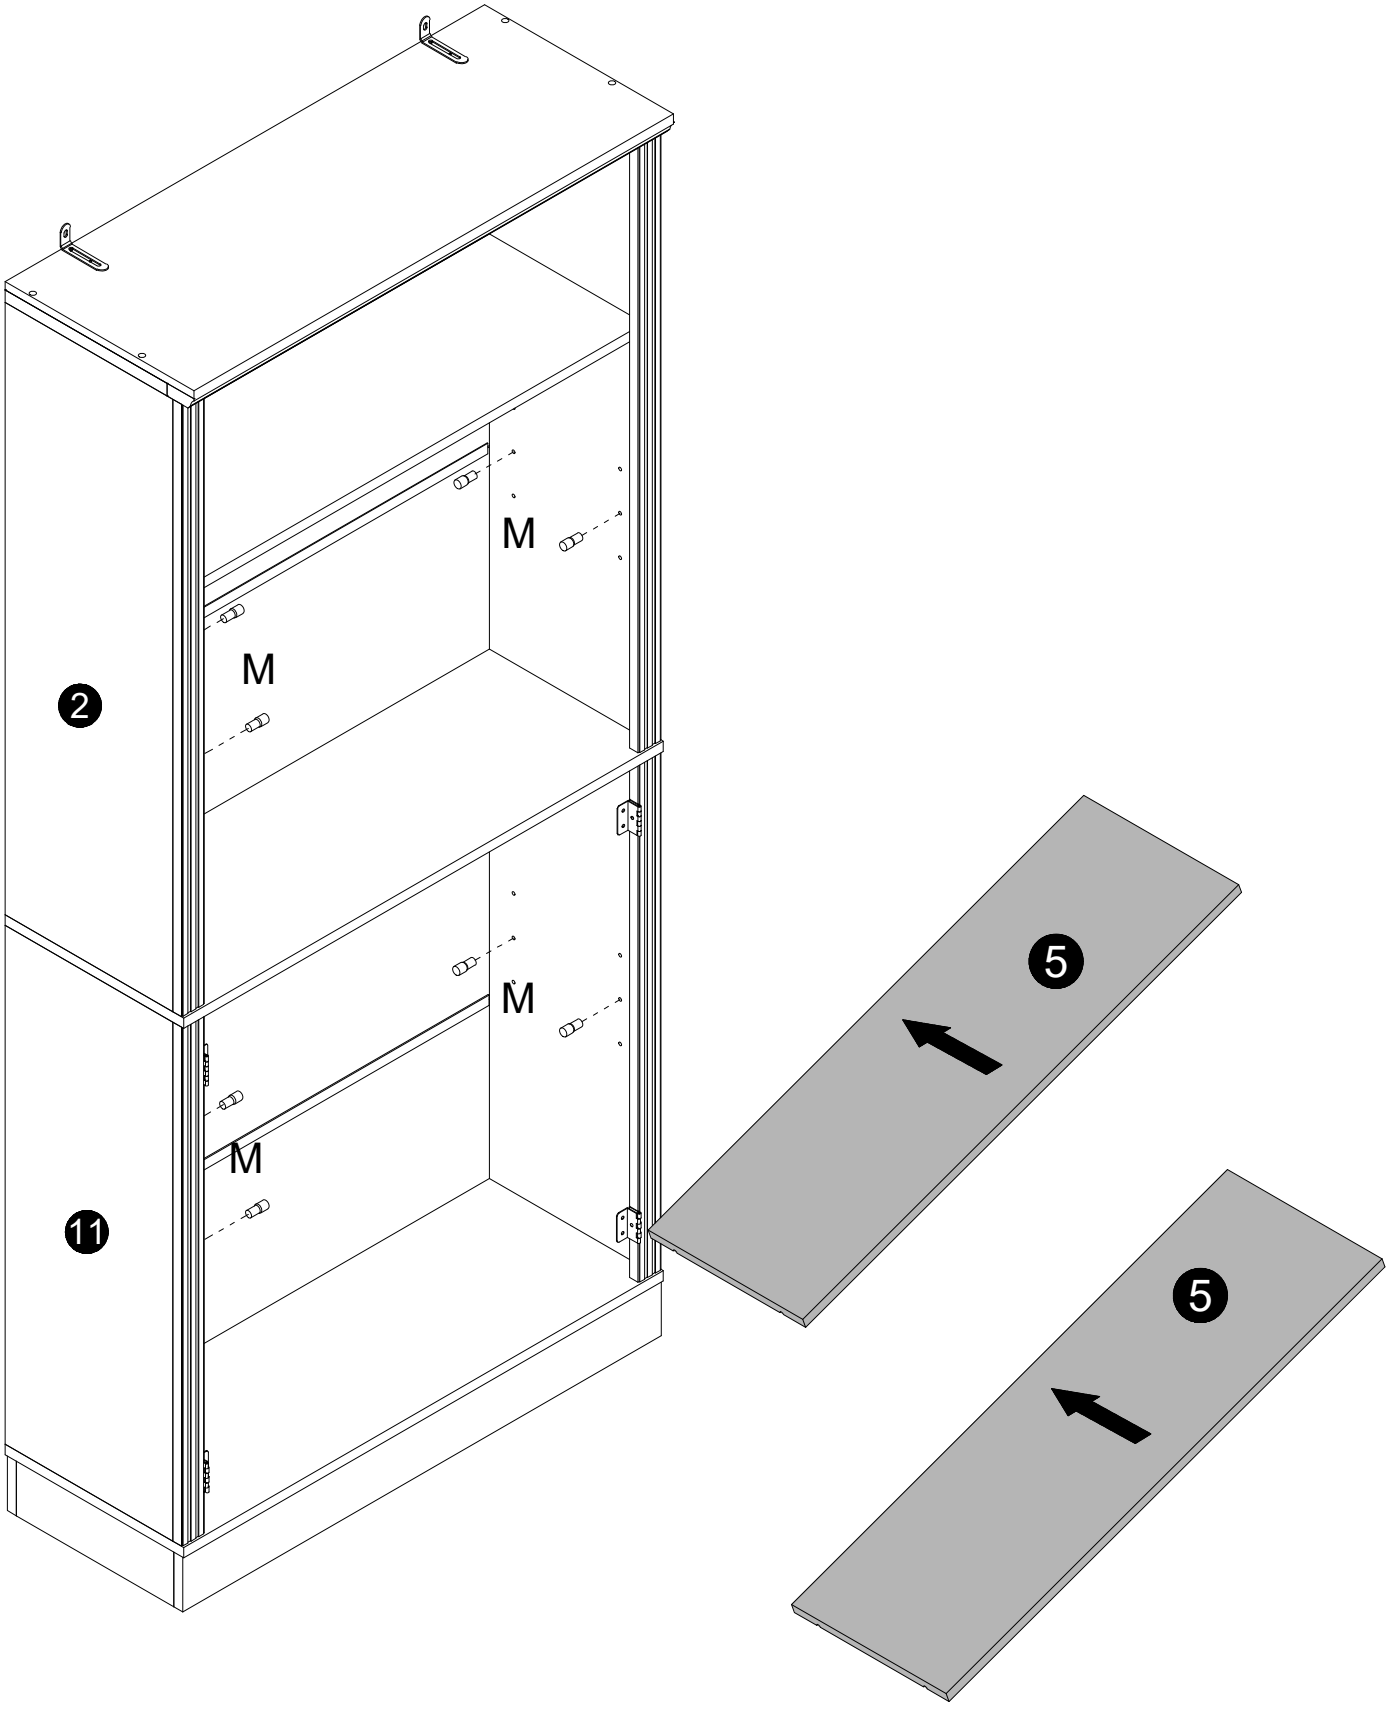

1
2
10
C
C
B
B
C
B
C
B
12
11

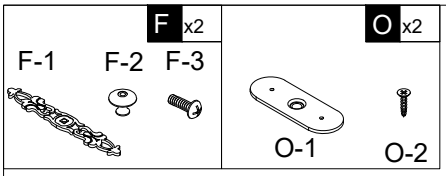

G x16
G-1
G-2
G
7
8
3
8
13
13
12
13
G-1
G-1
G-2

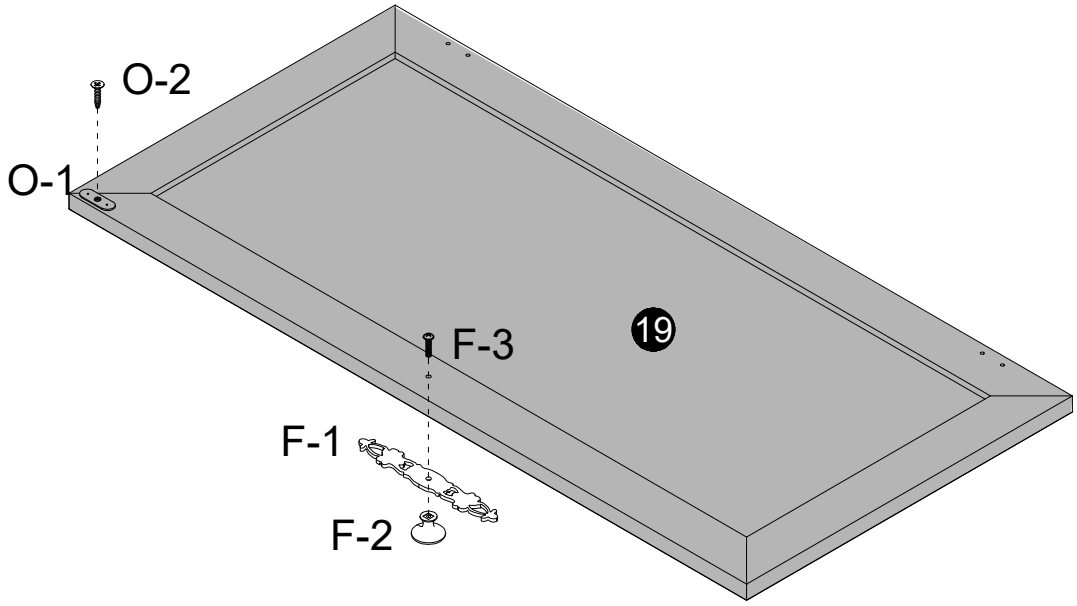
L x27
Ø15mm

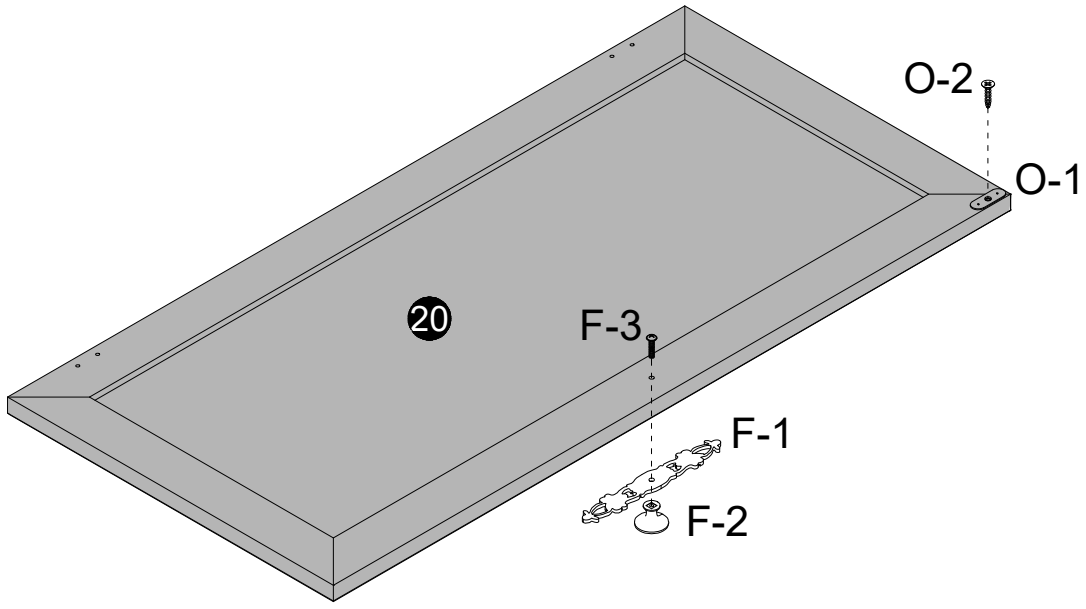



M x8

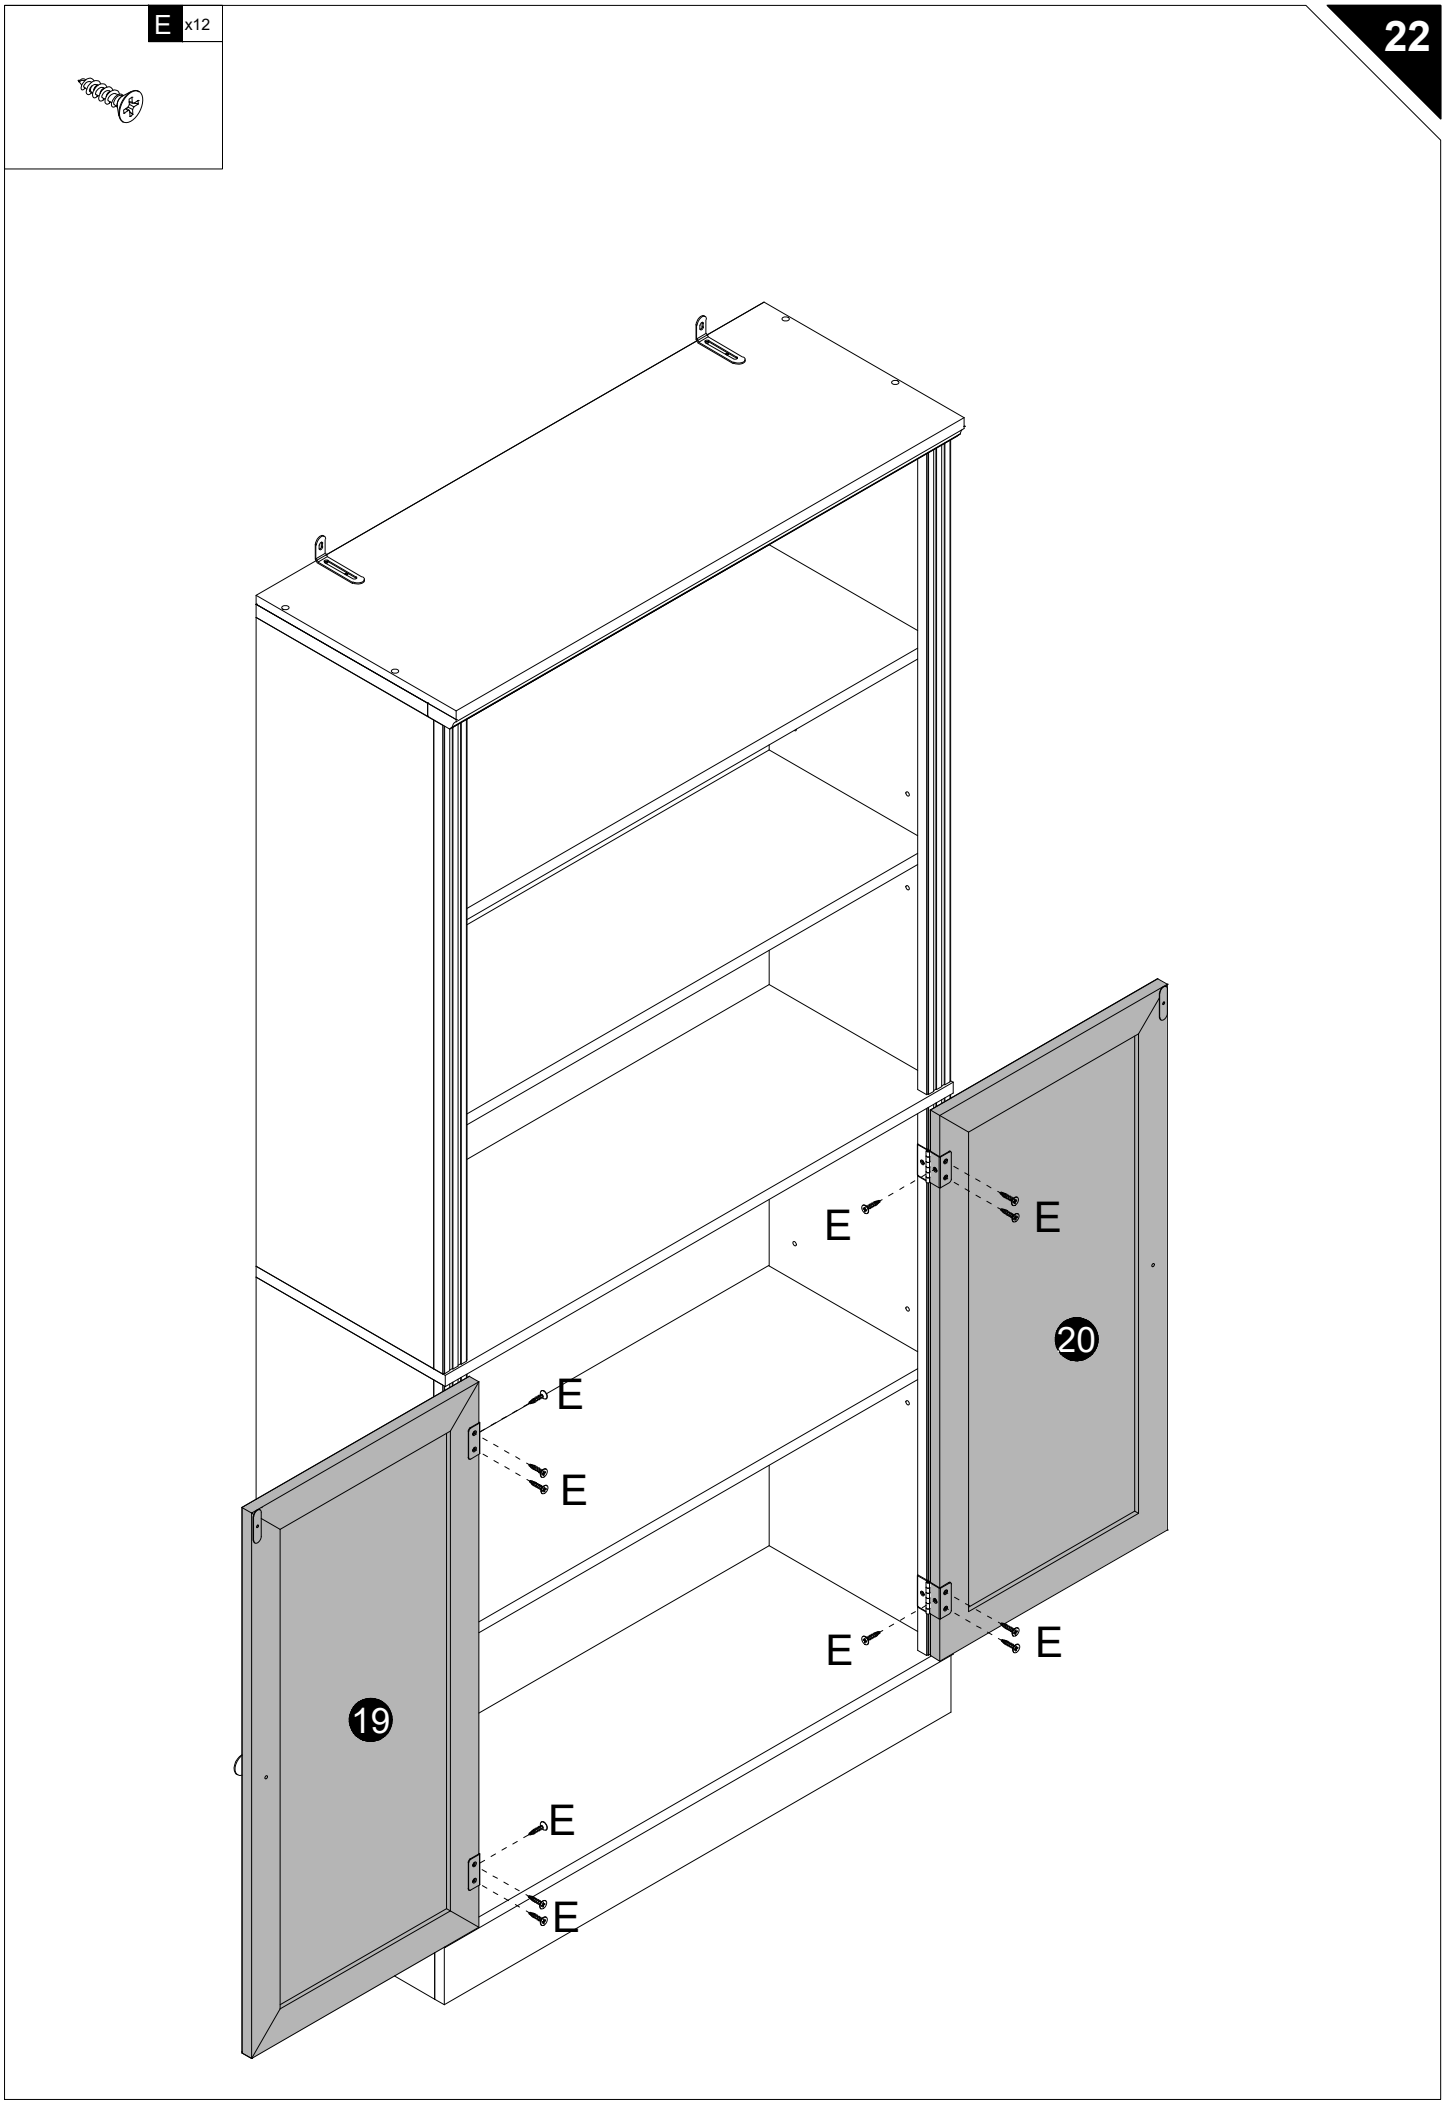

M
M
M
M
2
11
5
5

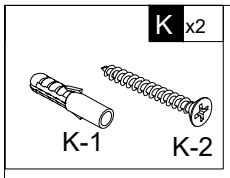

F x2
F-1
F-2
F-3
O x2
O-1
O-2

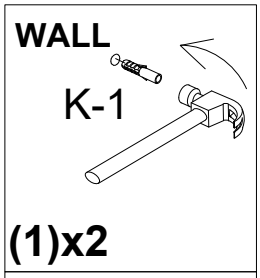

O-2
O-1
F-3
19
F-1
F-2


O-2
O-1
20
F-3
F-1
F-2

E x12

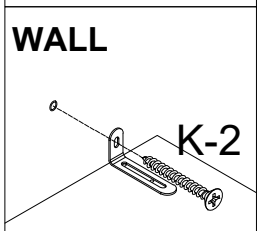






(1)x2

Then,put the expansion bolt into the hole



(2)x2

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

