



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

HARDWARE LIST

- A (12) Counter Bolts 1/4" x 5/8"
- B (14) Allen Bolts 1/4" x 1"
- C (8) Spring Washers 1/4"
- D (20) Flat Washers 1/4"
- E (6) Hex Nuts 1/4"
- F (1) Allen Wrench
- G (1) Hex Wrench

PARTS LIST

- H (2) Duo Grills
- K (2) Headboard Posts
- L (2) Footboard Posts
- M (4) Top Finials
- N (2) Side Rails
- P (3) Support Slats

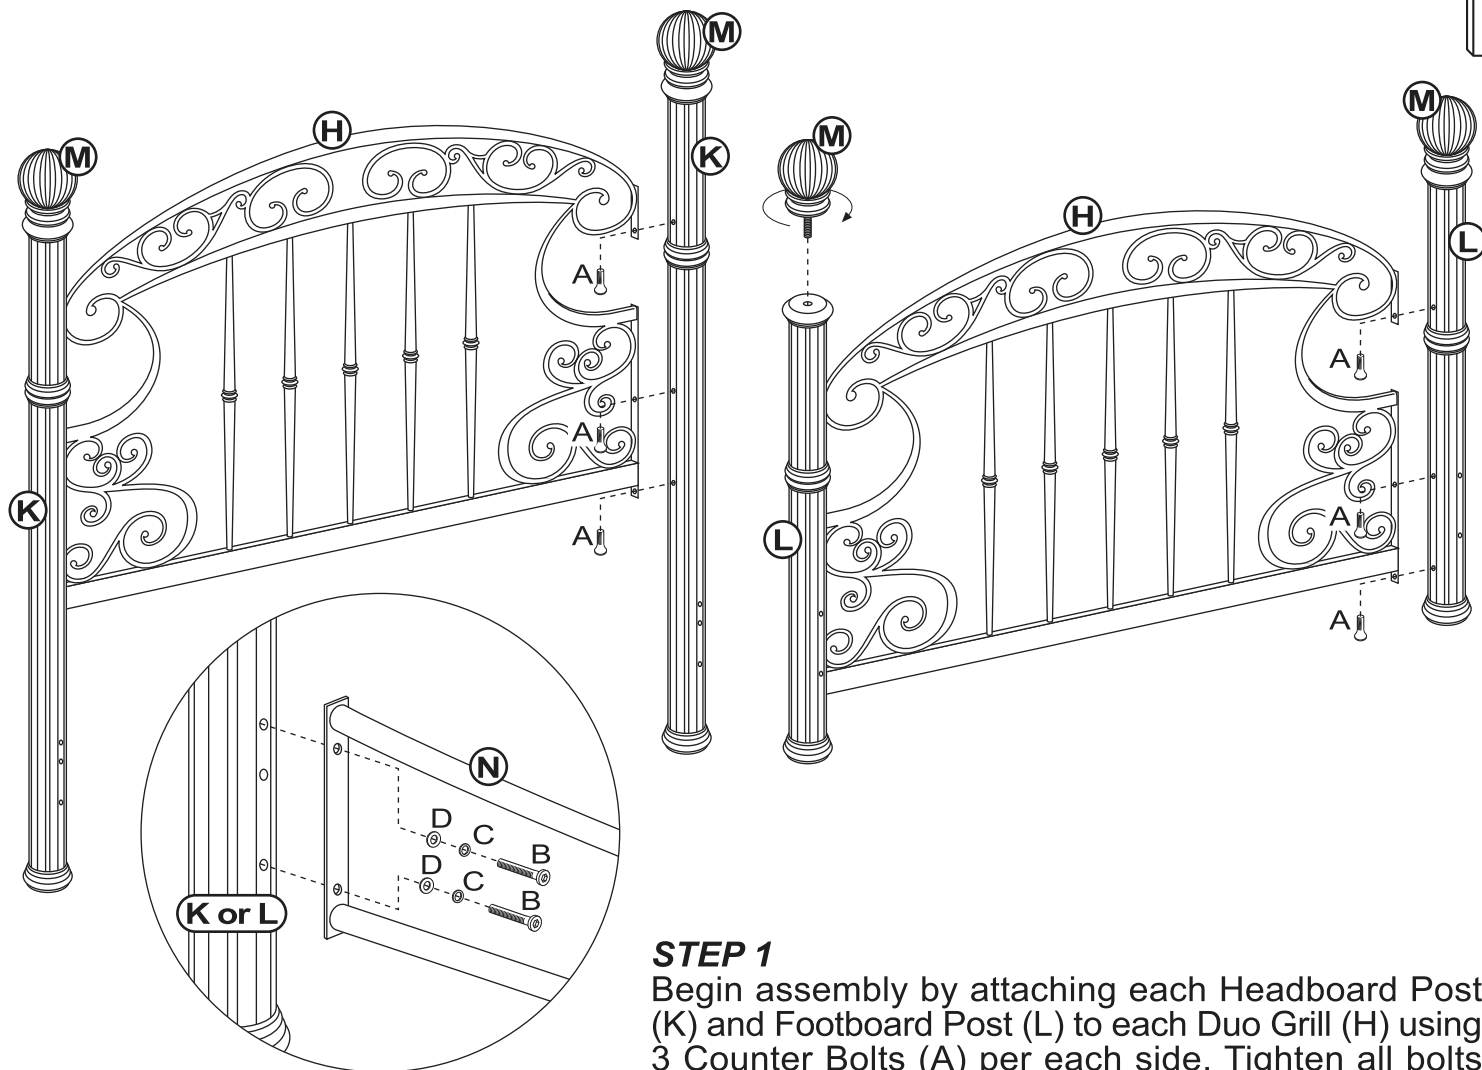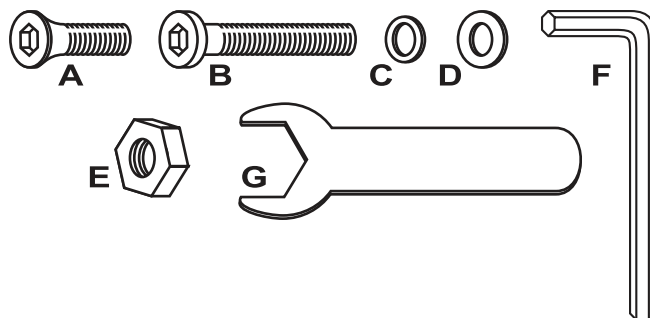

STEP 1

Begin assembly by attaching each Headboard Post (K) and Footboard Post (L) to each Duo Grill (H) using 3 Counter Bolts (A) per each side. Tighten all bolts using the Allen Wrench (F).


STEP 2

Next, attach each Top Finial (M) to the top of each Headboard Post (K) and Footboard Post (L) by firmly screwing each in place. Do not overtighten.

STEP 3

Attach each Side Rail (N) to each Headboard Post (K) and Footboard Post (L) using 2 Allen Bolts (B), 2 Spring Washers (C) & 2 Flat Washers (D) from the inside to secure in place. Tighten all bolts. See next page for more assembly instructions.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

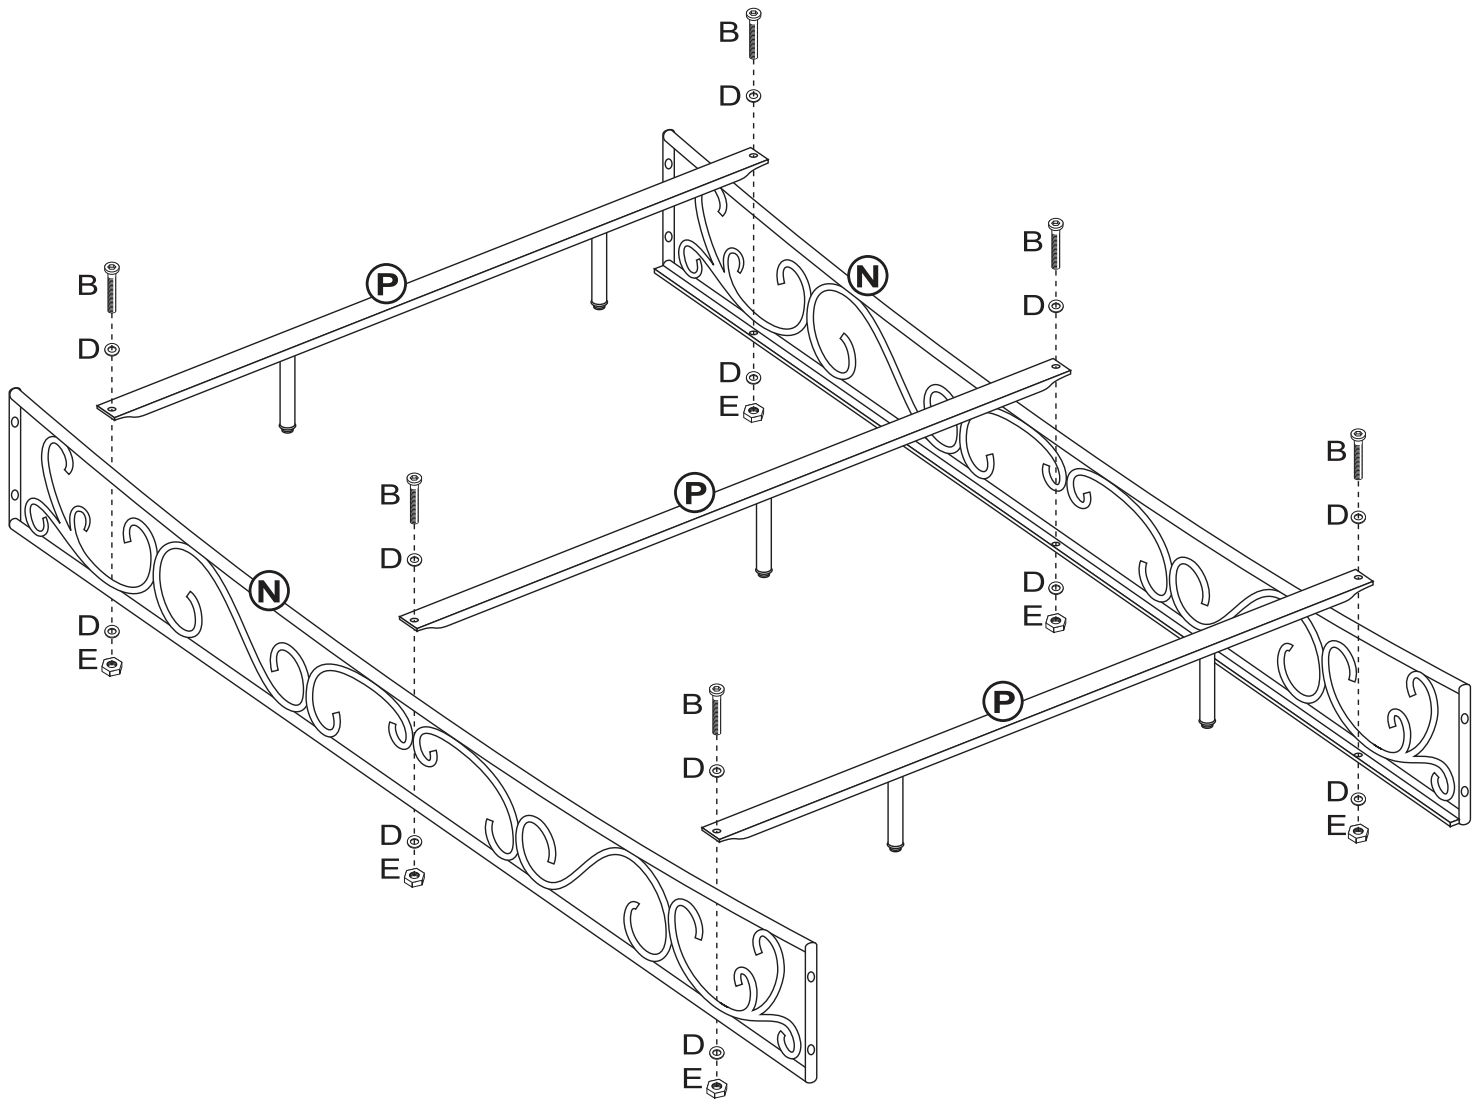

STEP 4

Attach each Support Slat (P) to the inside of each Side Rail (N) using 1 Allen Bolt (B) and 1 Flat Washer (D) from the top; and 1 Flat Washer (D), and 1 Hex Nut (E) from the bottom per each slat, per each side. Tighten all bolts and nuts using the Allen Wrench (F) & Hex Wrench (G) that has been provided. The assembly of your new bed is now complete.