



NO TOOLS NEEDED • For best results, follow Assembly Steps in the order presented.


# 1 PIECES

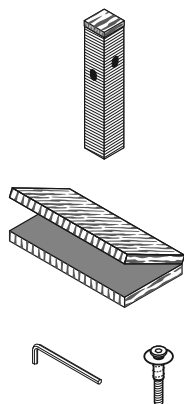


Unfold the base.  
Tighten the screw  
through the base and  
into the post.  
The metal sleeve on  
the screw will implant  
itself into the wood.

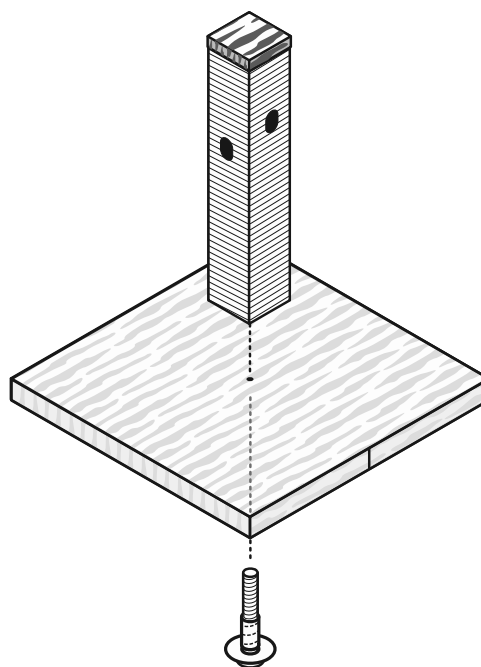

# 2 PIECES

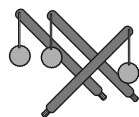

For each bounce 'n spring arm :  
① Insert the screw post into the  
threaded hole at an angle.  
② Screw securely into place.

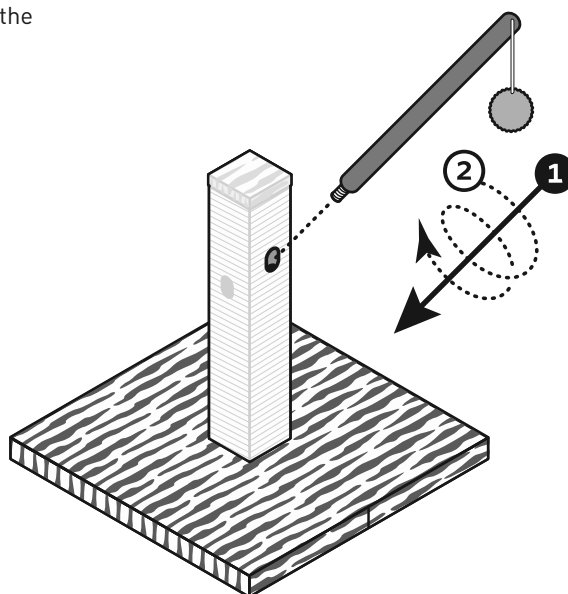

Assembly completed. ■