



# ASSEMBLY INSTRUCTIONS

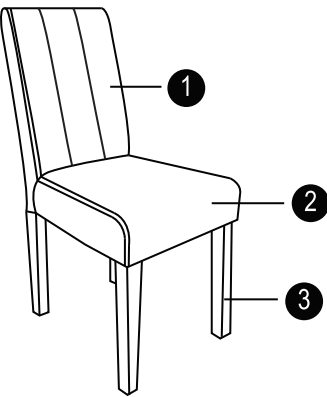


**1**

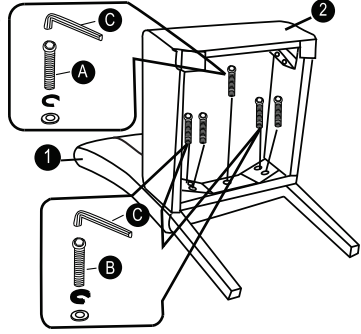


put the screws in the holes,tight the screws, but not too tight,80% is ok.

**2**

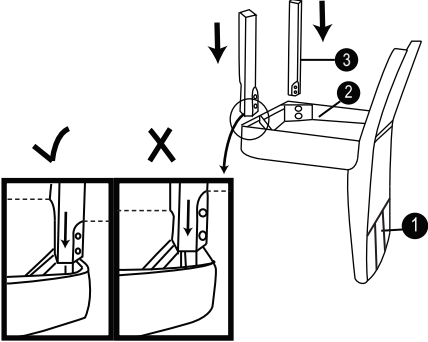


Important please make sure the cam studs face out as shown

**3**

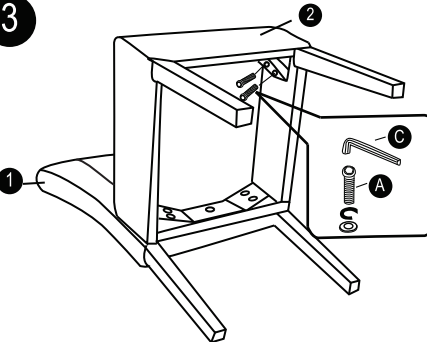


Put the screws in the holes, tight the screws, but not too tight,80% is ok.

**4**

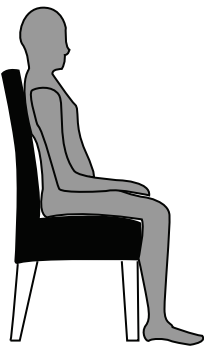


Then adjust the balance of the chair.

**5**

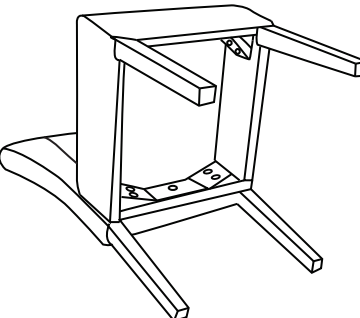


Tight all the screws to 100%

**6**

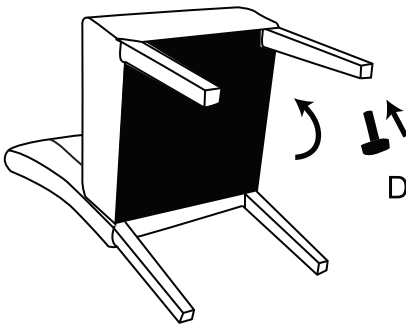



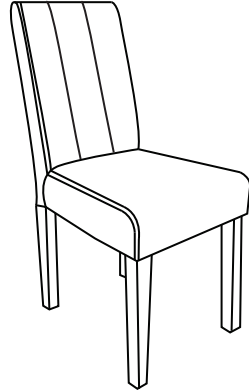

Stick the black part on the seat

**7**



| HARDWARE LIST | CODE | PARTS     | QTY. |
|---------------|------|-----------|------|
|               | 1    | BACK      | 1    |
|               | 2    | SEAT      | 1    |
|               | 3    | FRONT LEG | 2    |

| HARDWARE LIST | CODE | PARTS   | QTY. |
|---------------|------|---|------|
|               | A    | M8x65mm    | 5    |
|               | B    | M8x75mm    | 4    |
|               | C    | ALLEN KEY  | 1    |
|               | D    | FOOT NAIL  | 2    |

If your chairs are wobbly after assembly, please check following instruction

