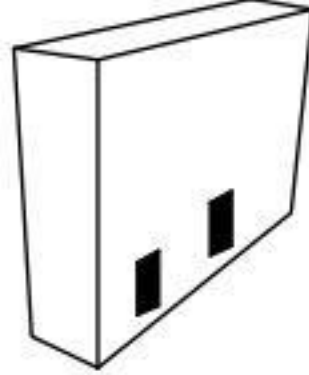

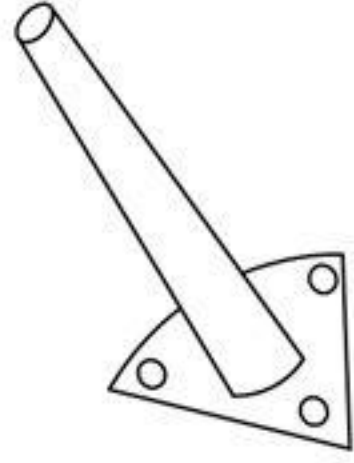



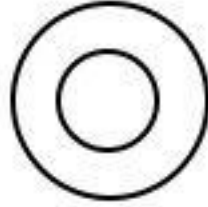
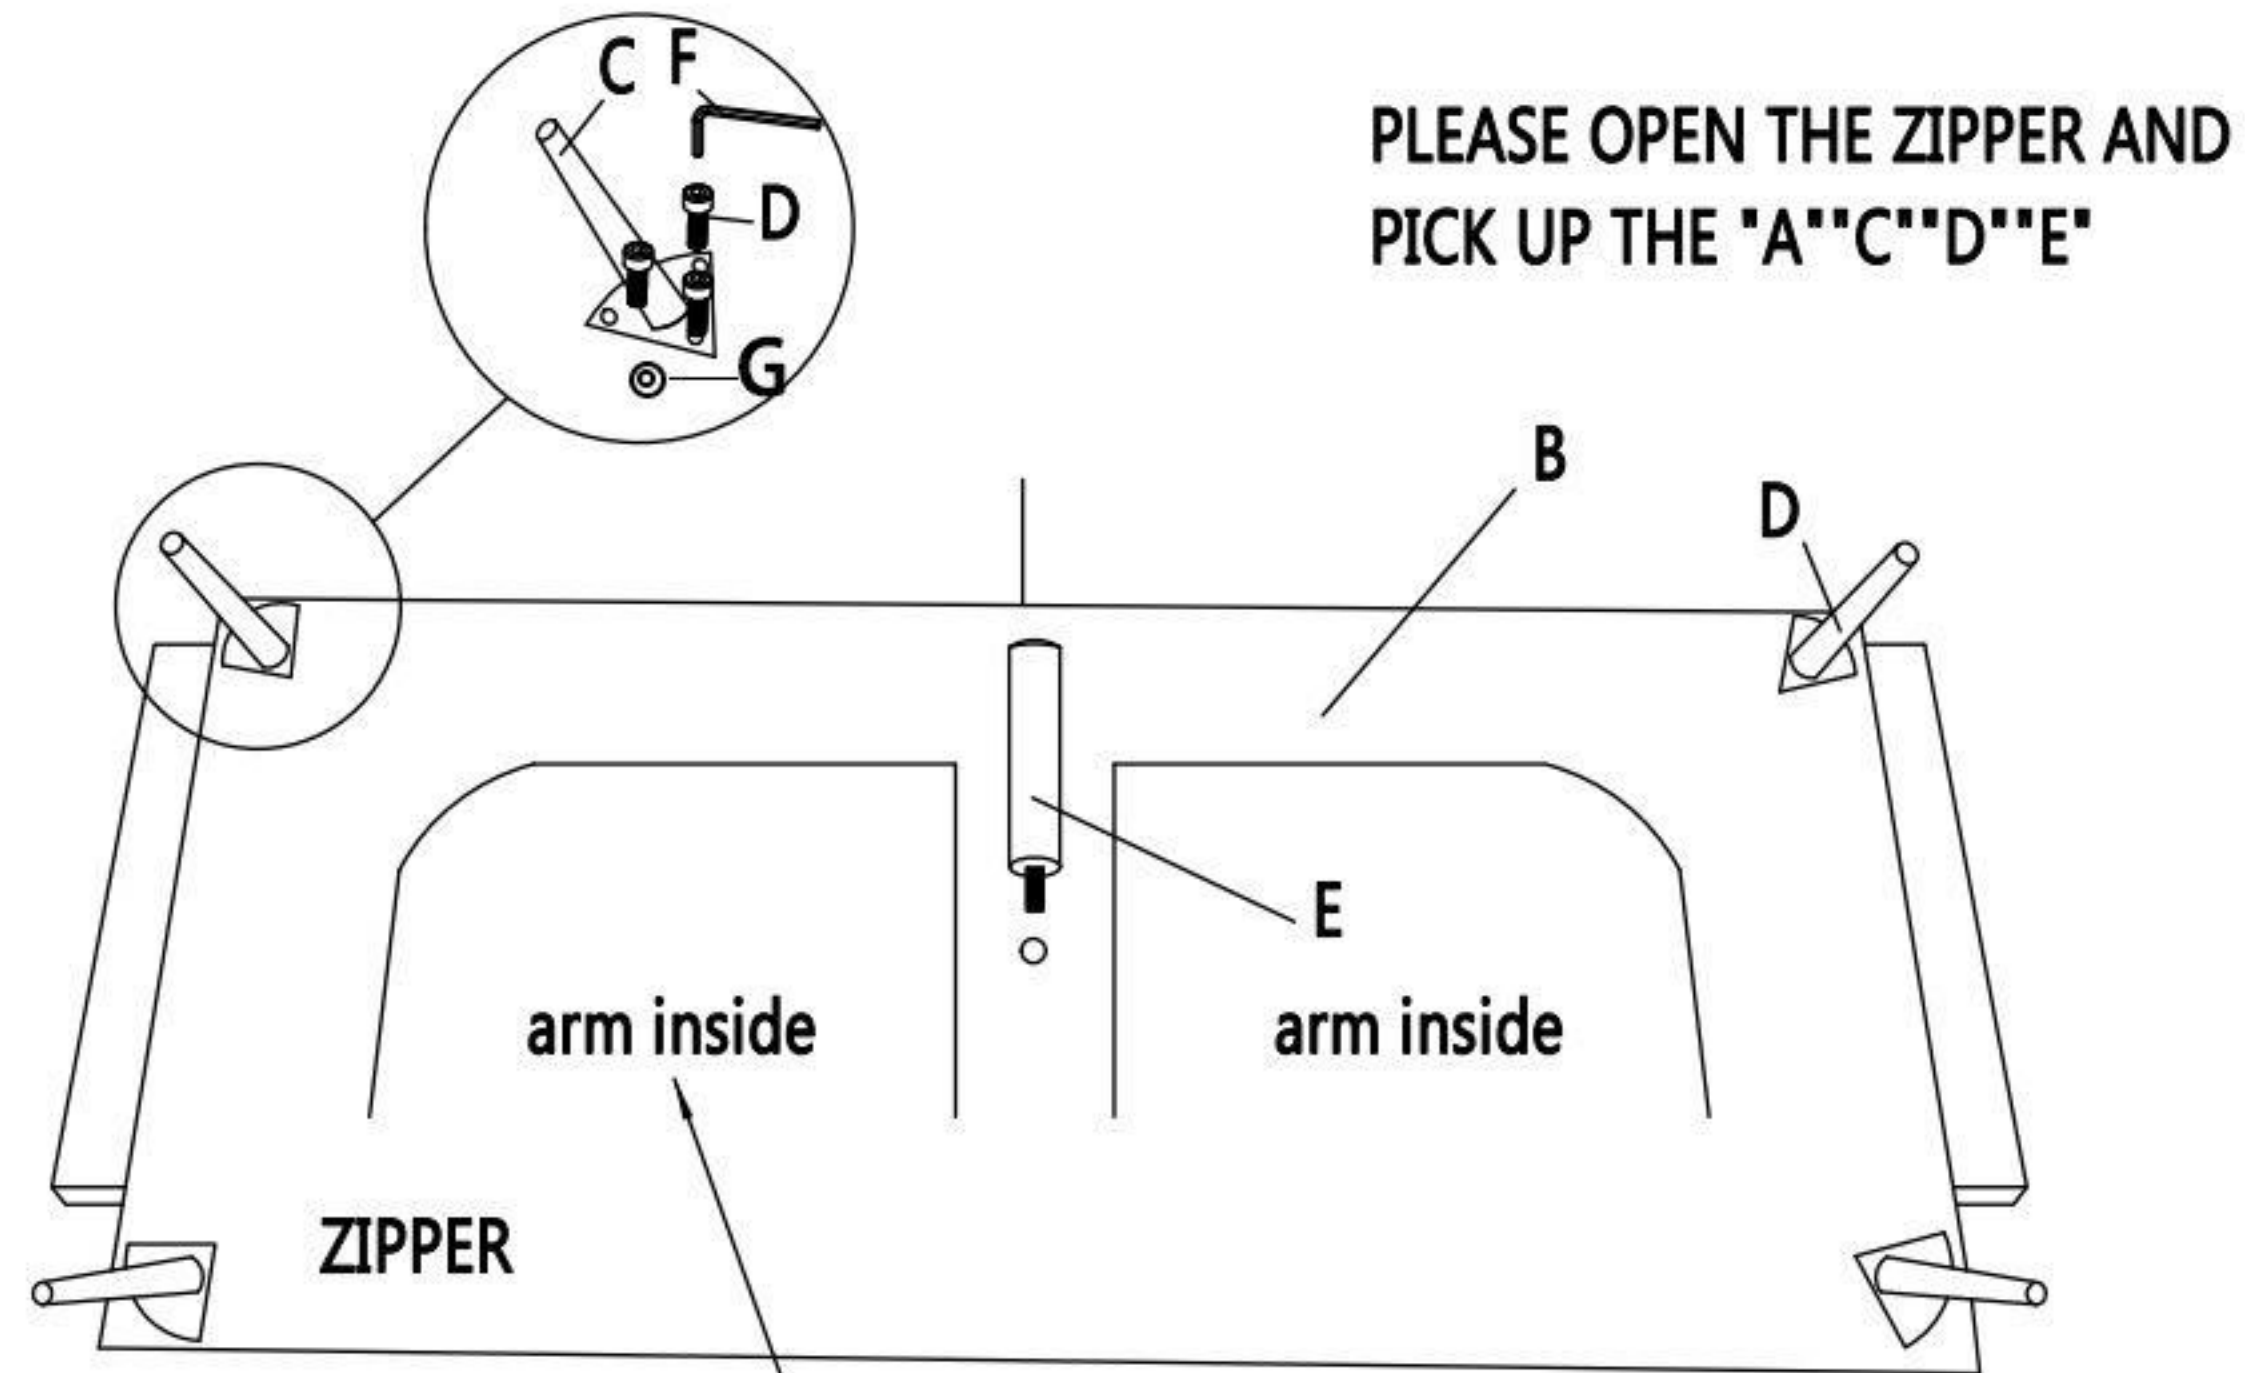


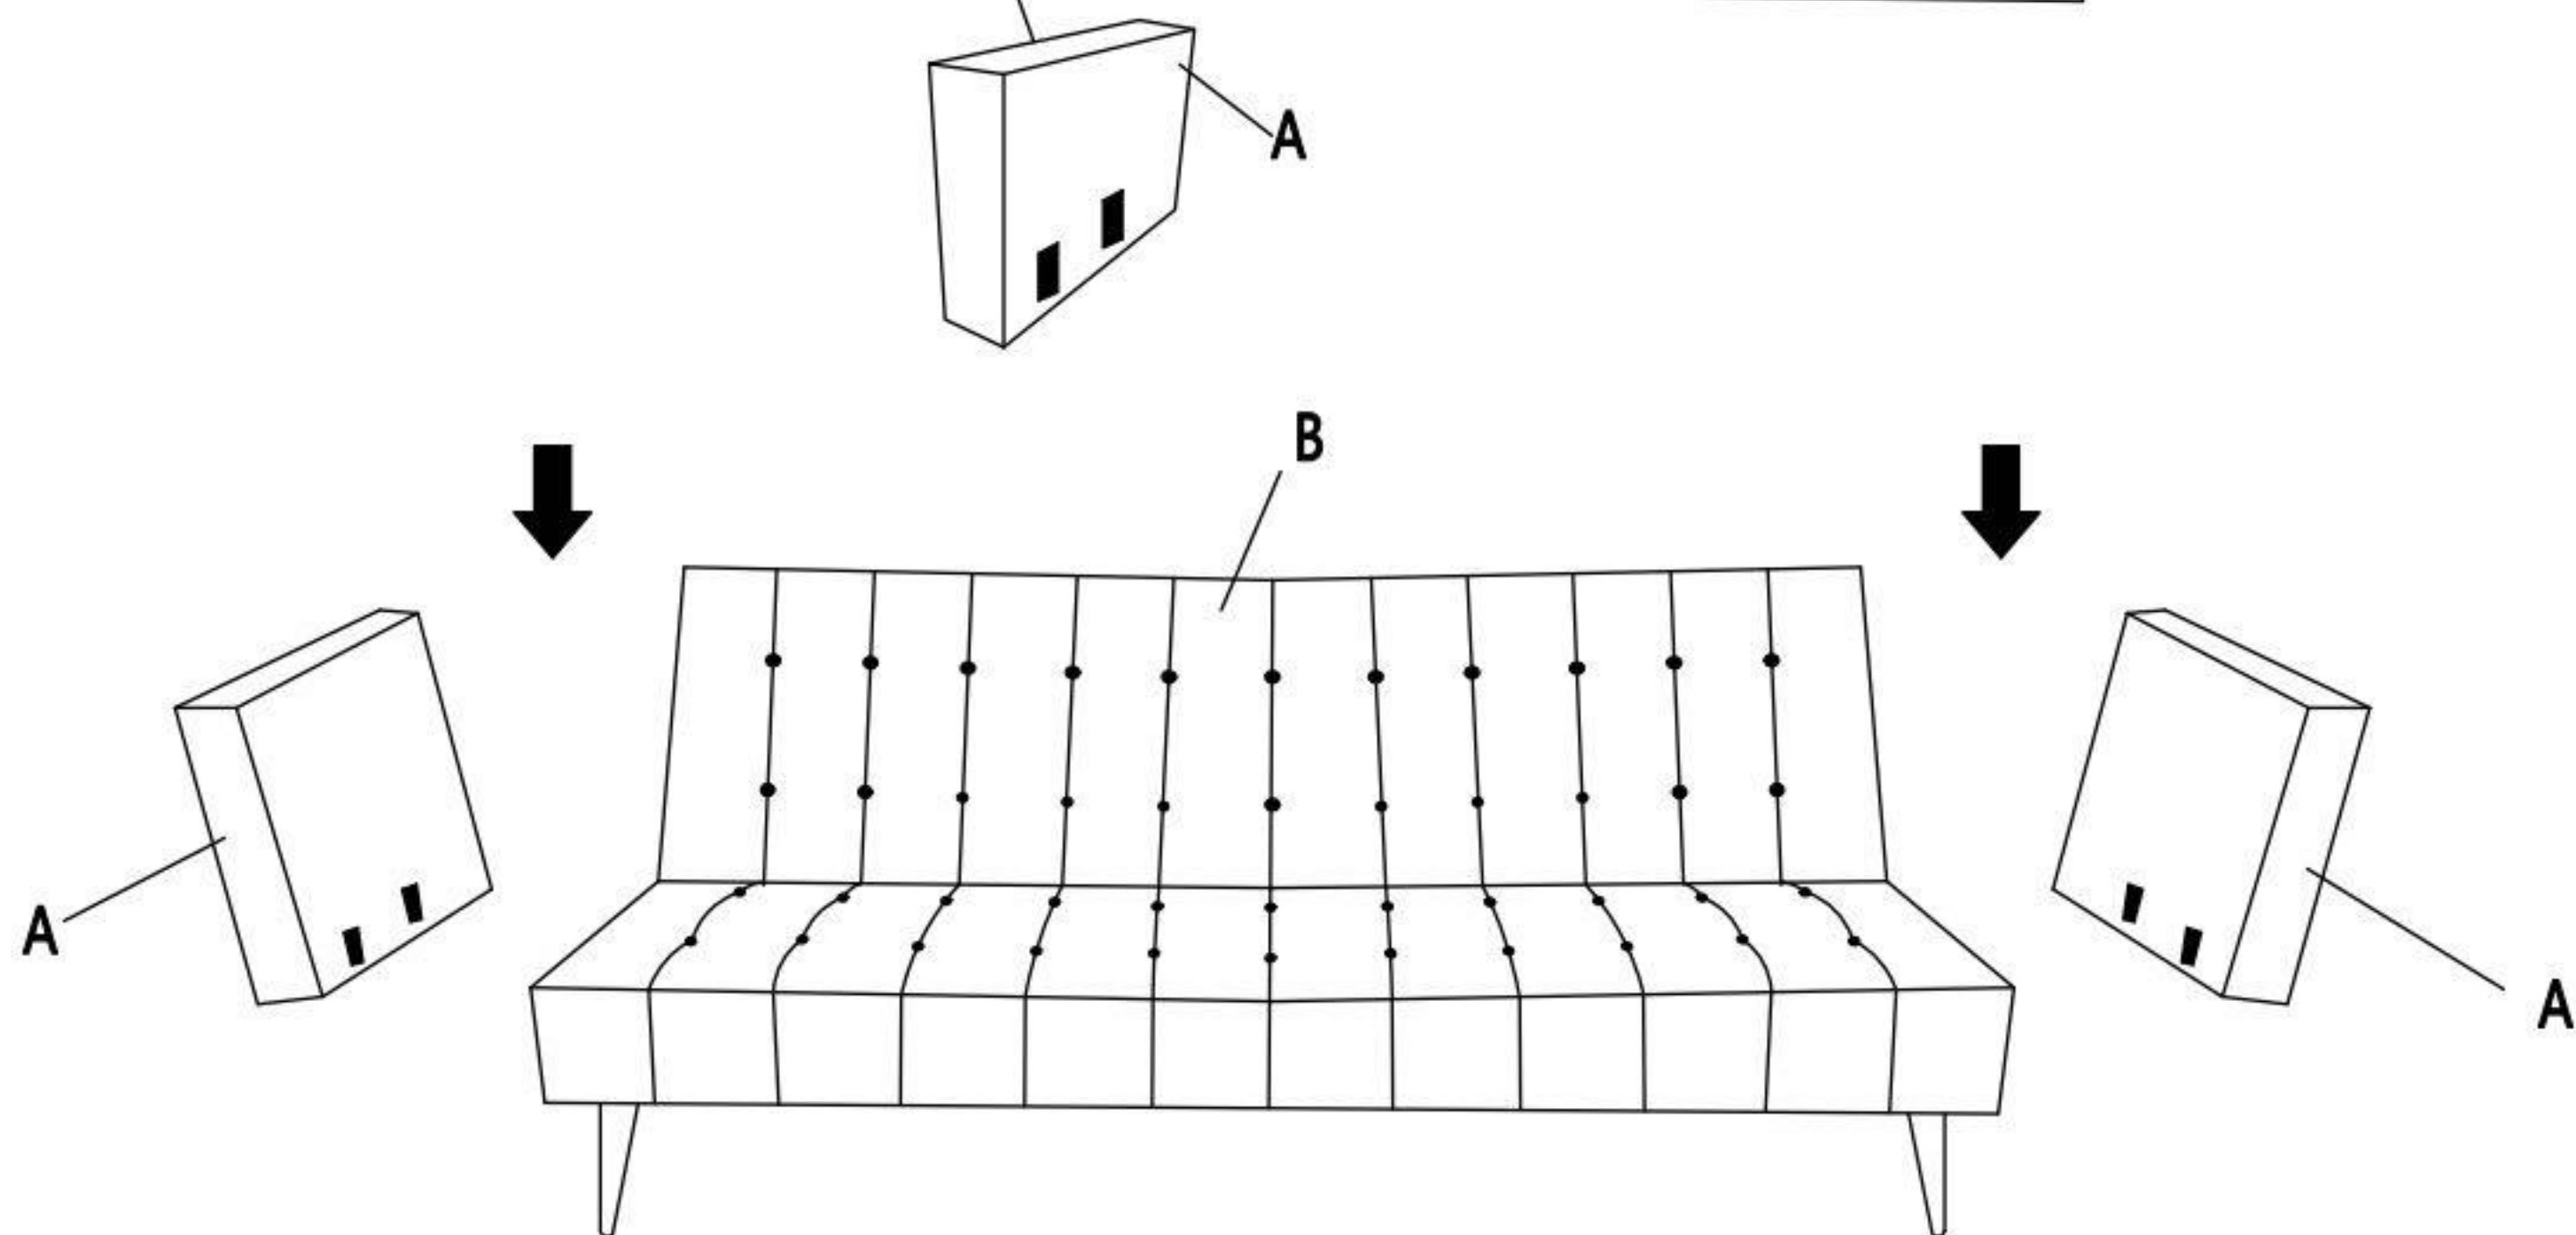
ASSEMBLY INSTRUCTION

armrest	part of sofa	leg	screw	metal leg	wrench	SPACER
						
A x2	B x1	C x4	D x12	E x1	F x1	G x12

Step1



Step2



Step3

