

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.

The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.


We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.

Best Regards,

Customer Care Specialist


ASSEMBLY INSTRUCTION

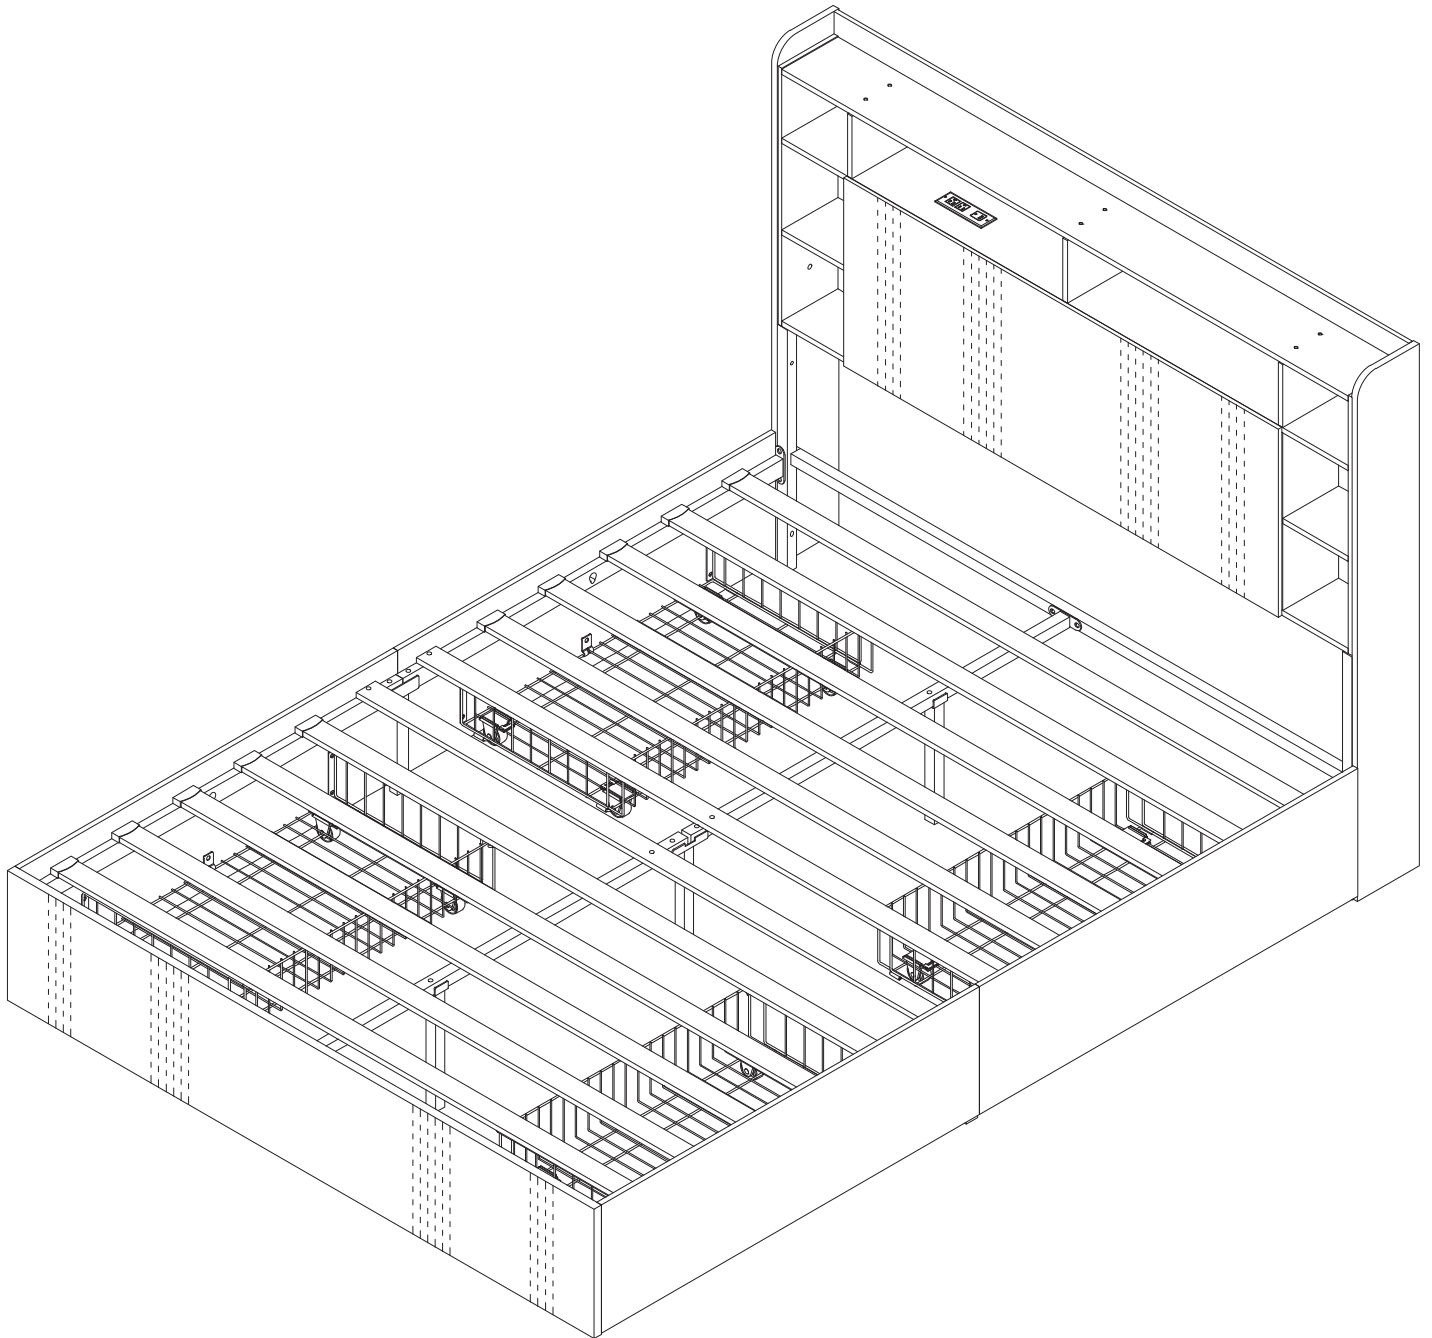




WARNING

Need Two Or More People To Complete

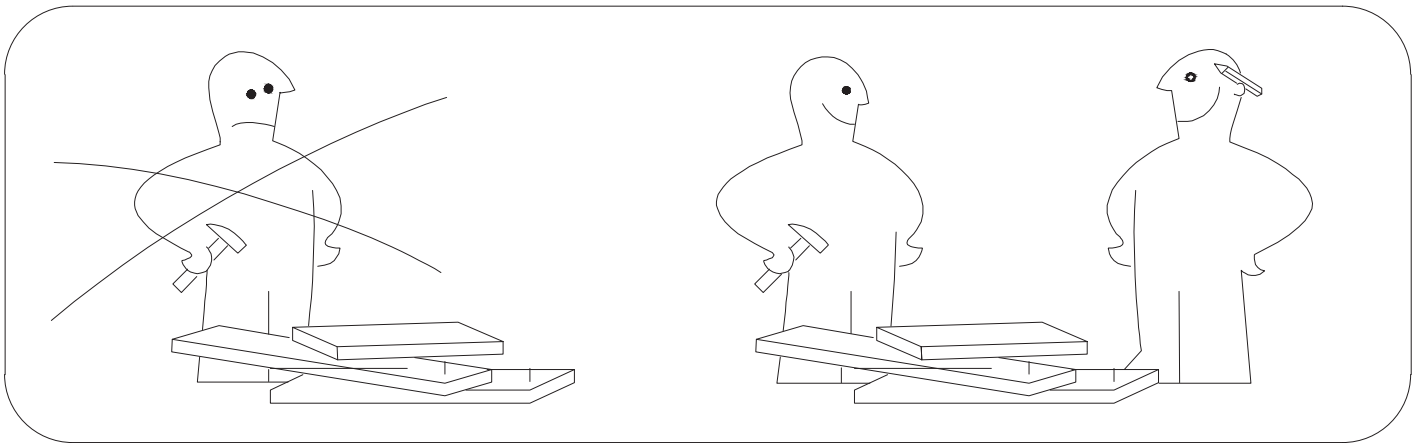


Assemble Item On a Clean Flat Surface

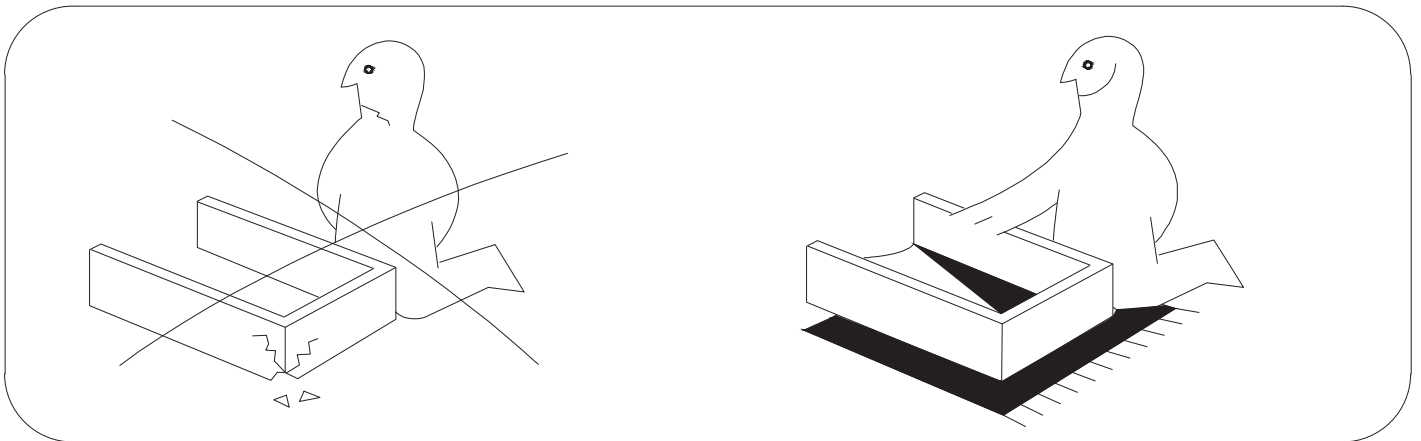

- Please check you have all hardware before assembling.
 - Please ensure you have the name of the item and hardware part required and quantity.
 - If you have any questions, please contact us by original purchase platform.
- we will reply you ASAP.




















EXPLODED DRAWING:

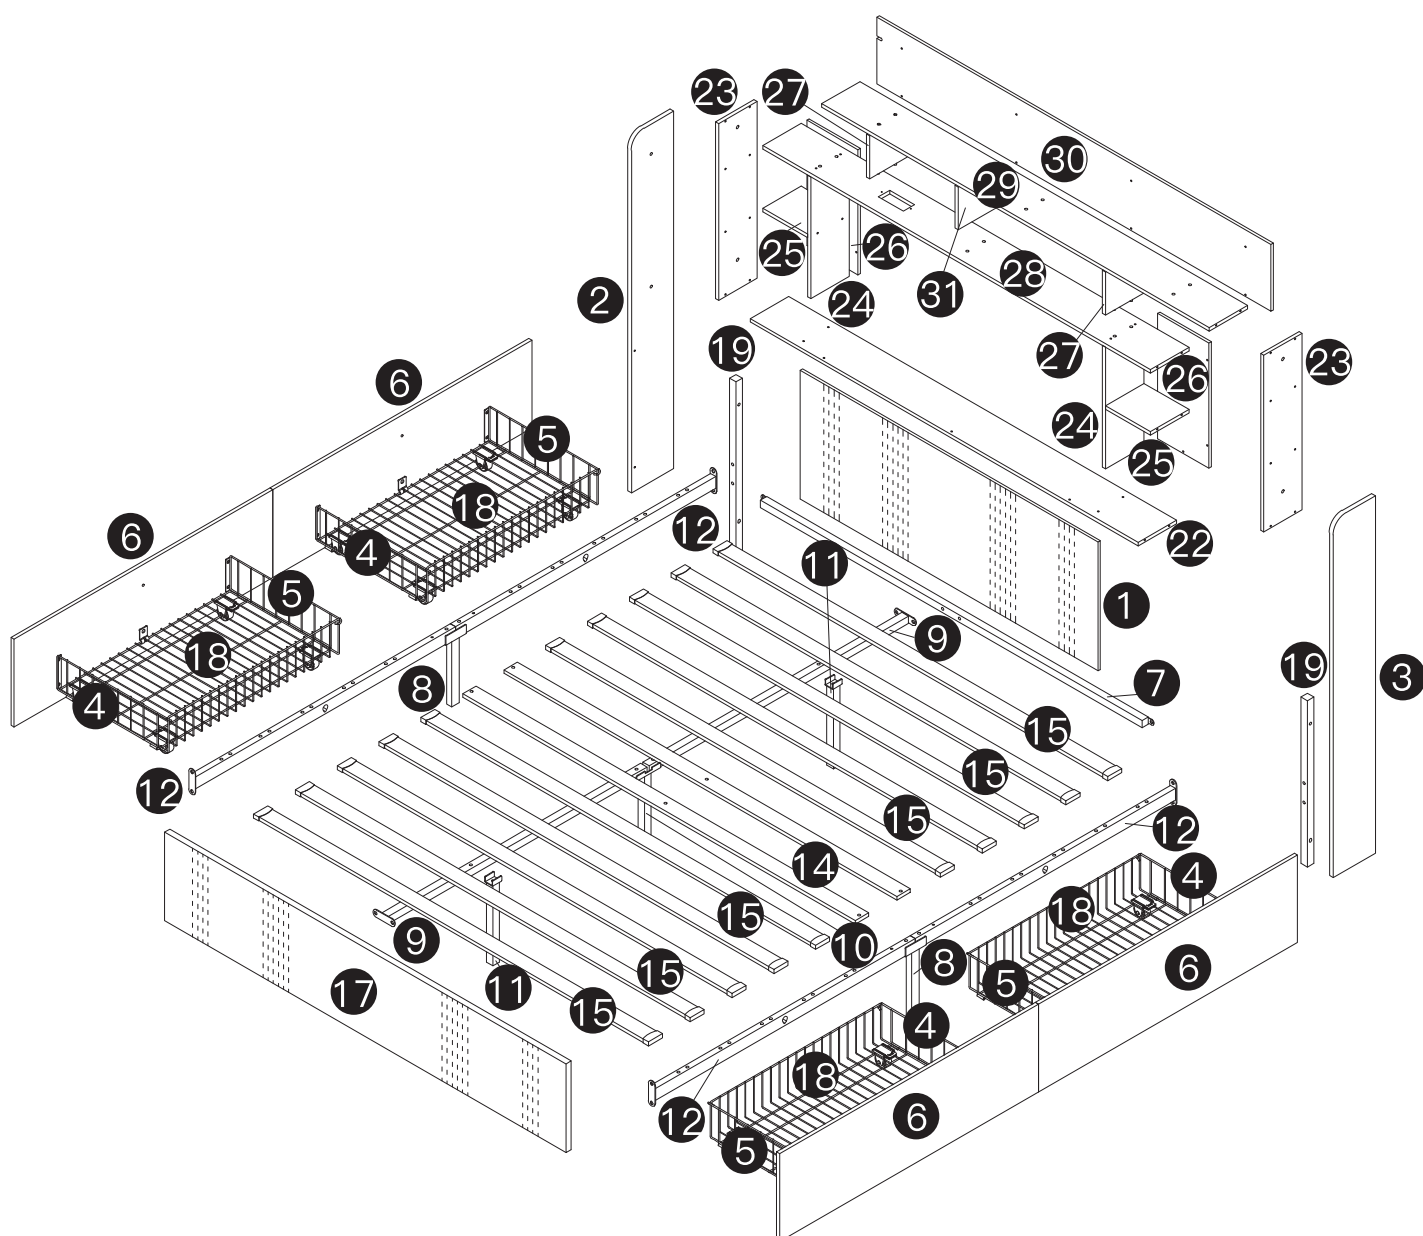


Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.

If there is any parts missing or defective, please contact us with purchase platform message immediately to get replacement parts.





PARTS:

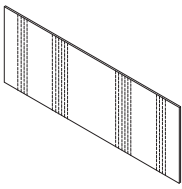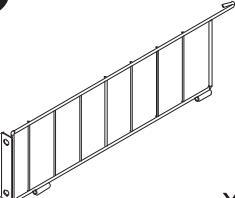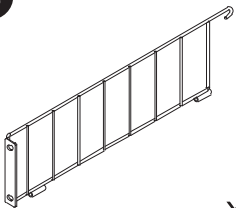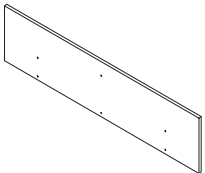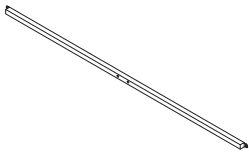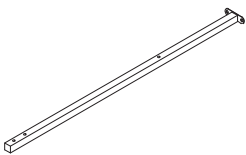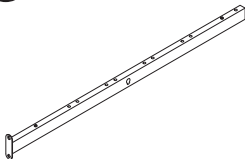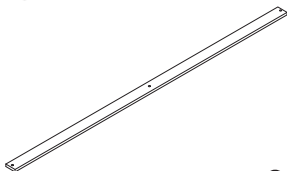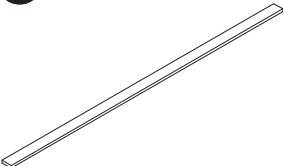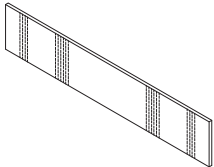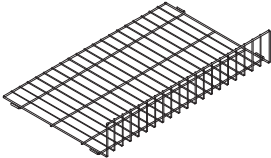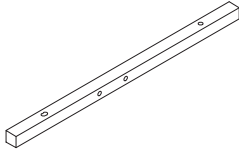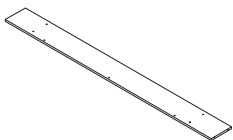1  x1	2  x1	3  x1	4  x4
5  x4	6  x4	7  x1	8  x2
9  x2	10  x1	11  x2	12  x4
13  x6	14  x2	15  x10	16  x20
17  x1	18  x4	19  x2	20  x16
21  x4	22  x1	23  x2	24  x2

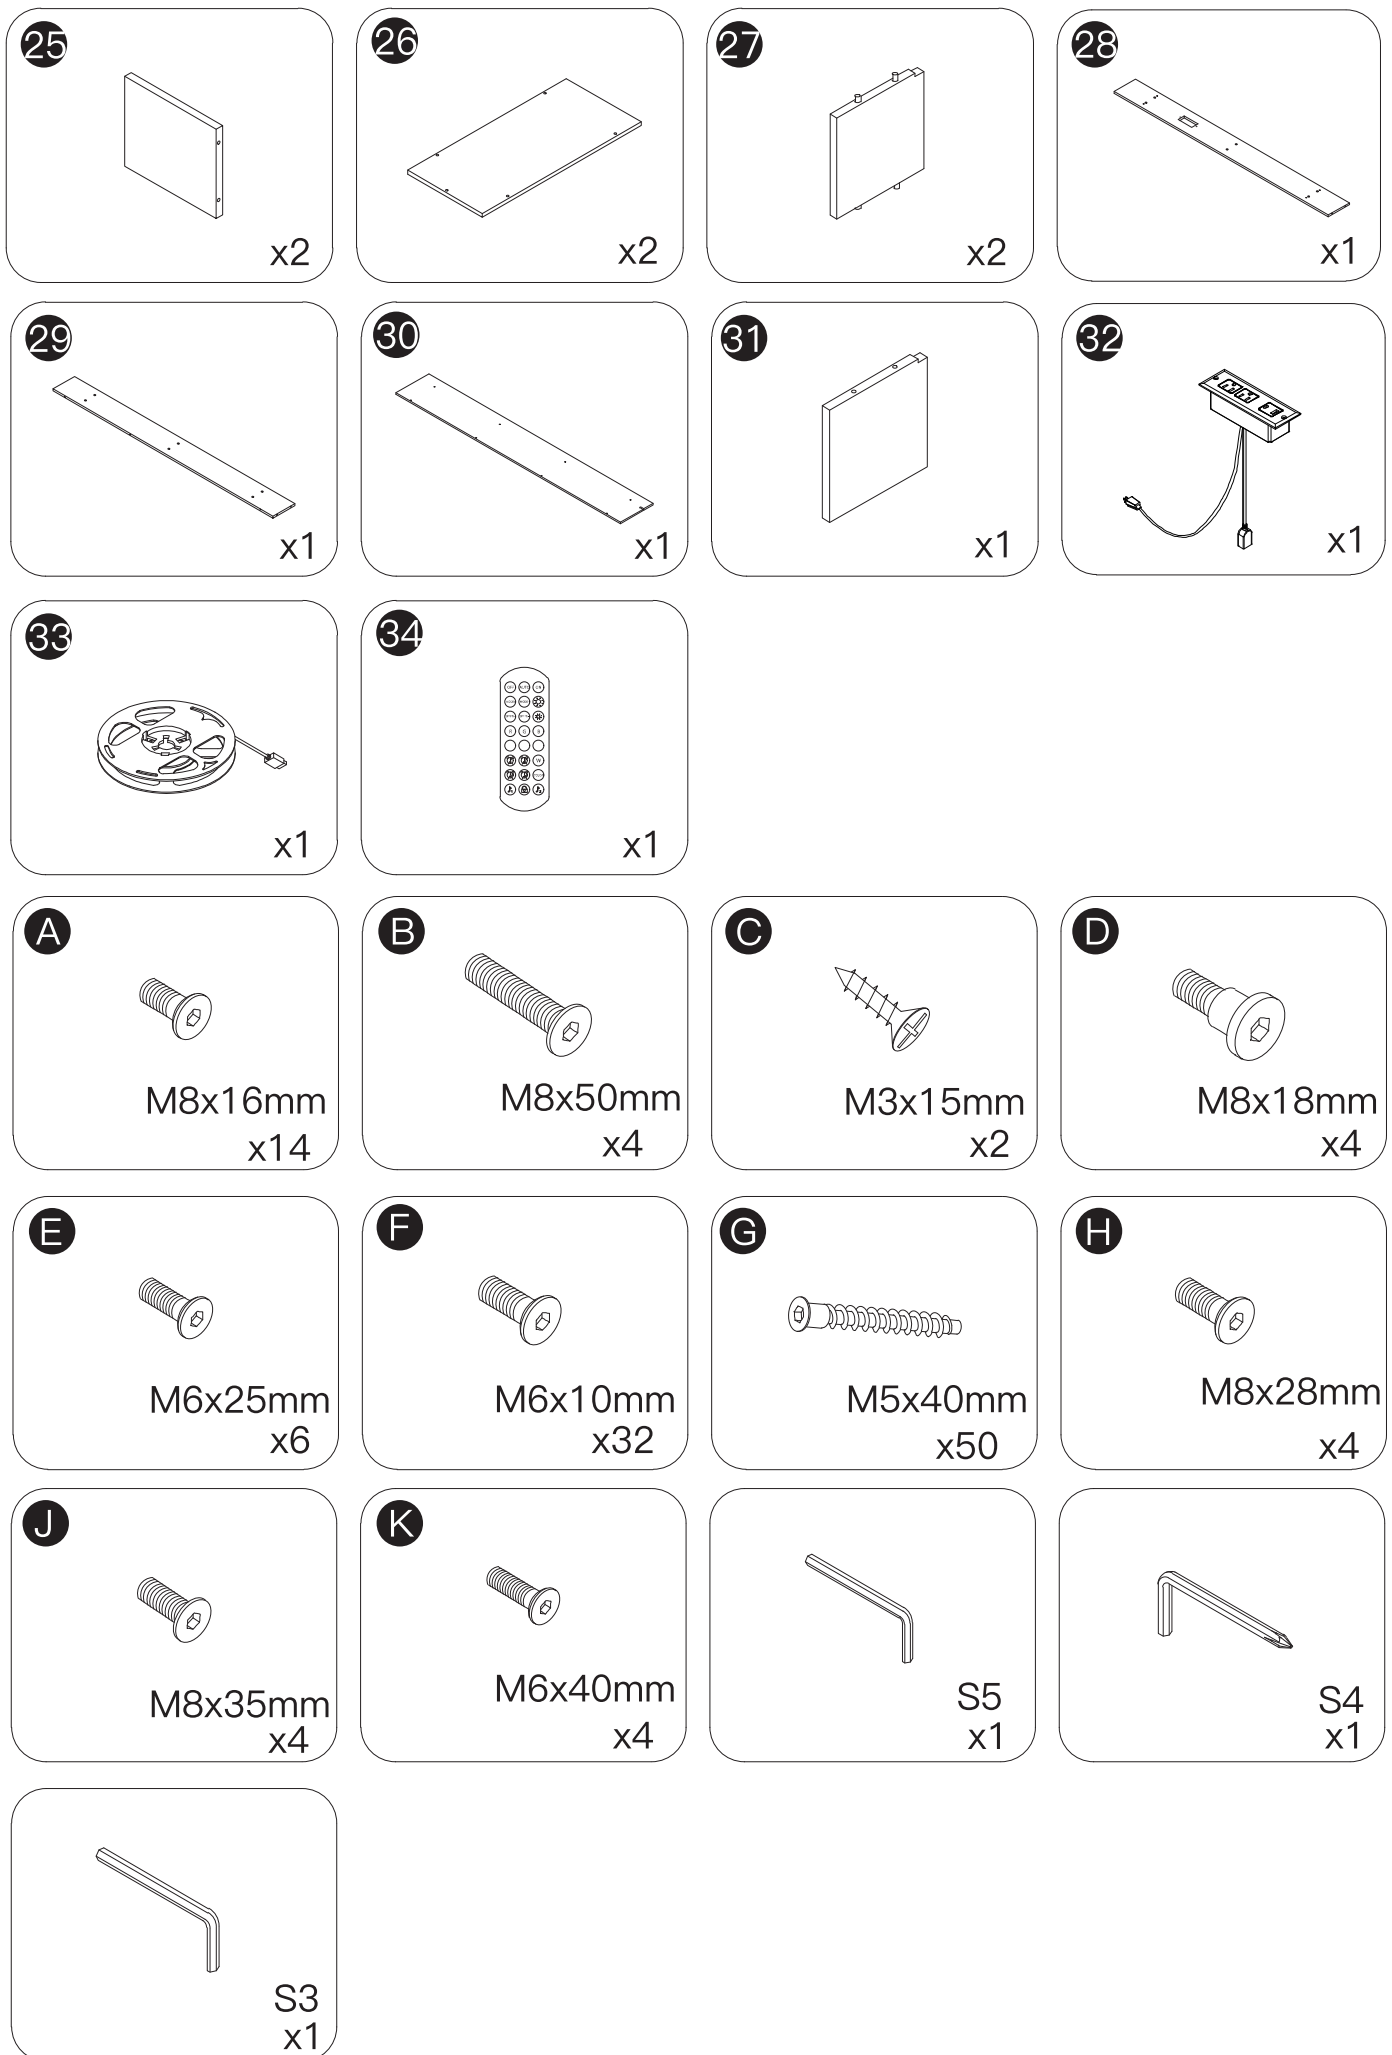



HOW TO INSTALL

STEP 1

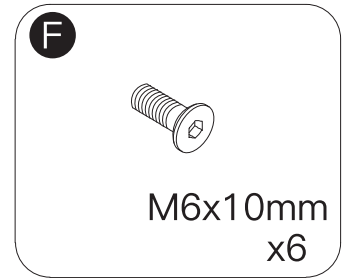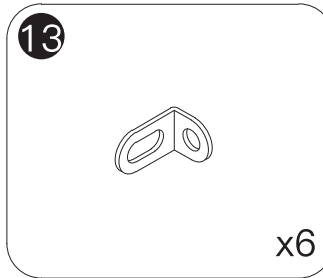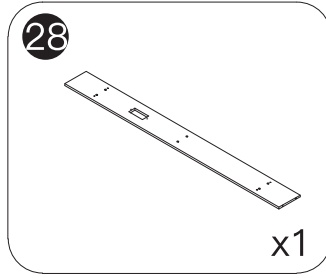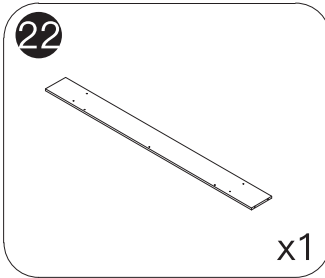

NOTICE:




Make sure the shorter side of part 13 is installed on part 22 & 28.

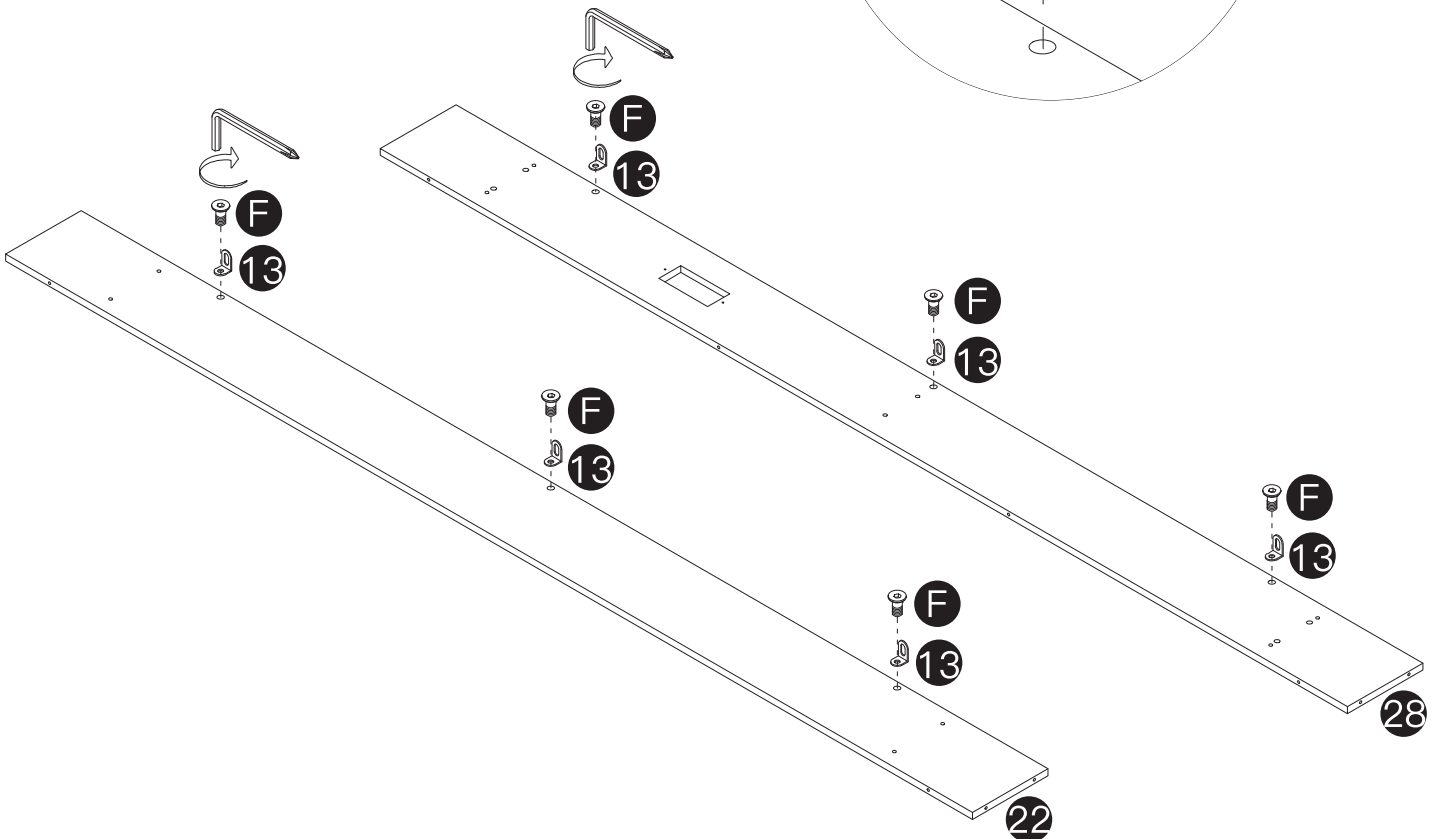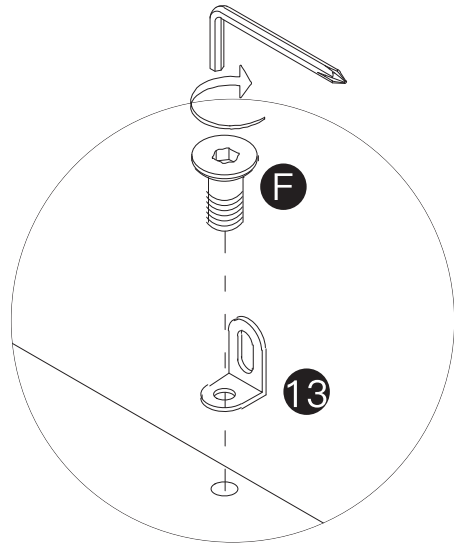


NOTICE:

DO NOT tighten part F until all frames are installed.

STEP 2

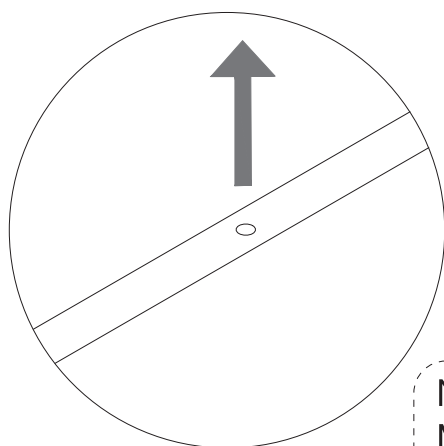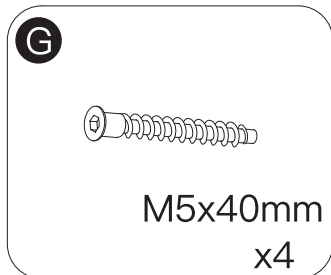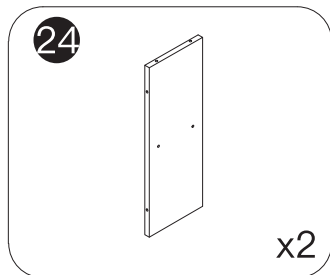

NOTICE:
Make sure the side with holes of part 22 & 24 are facing upwards.

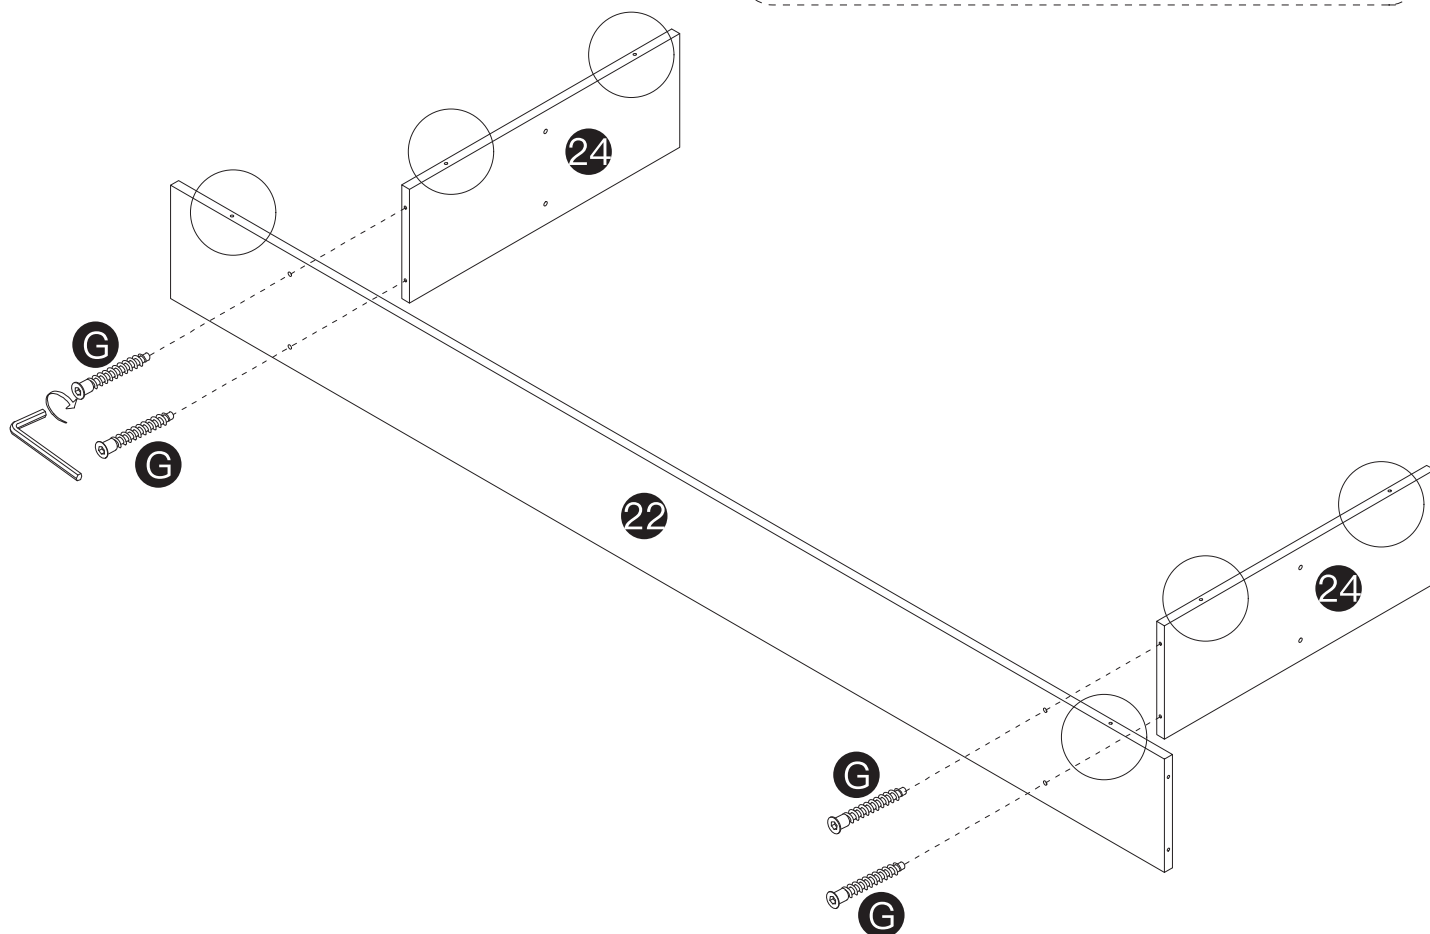


STEP 3

G




M5x40mm
x4

25



x2

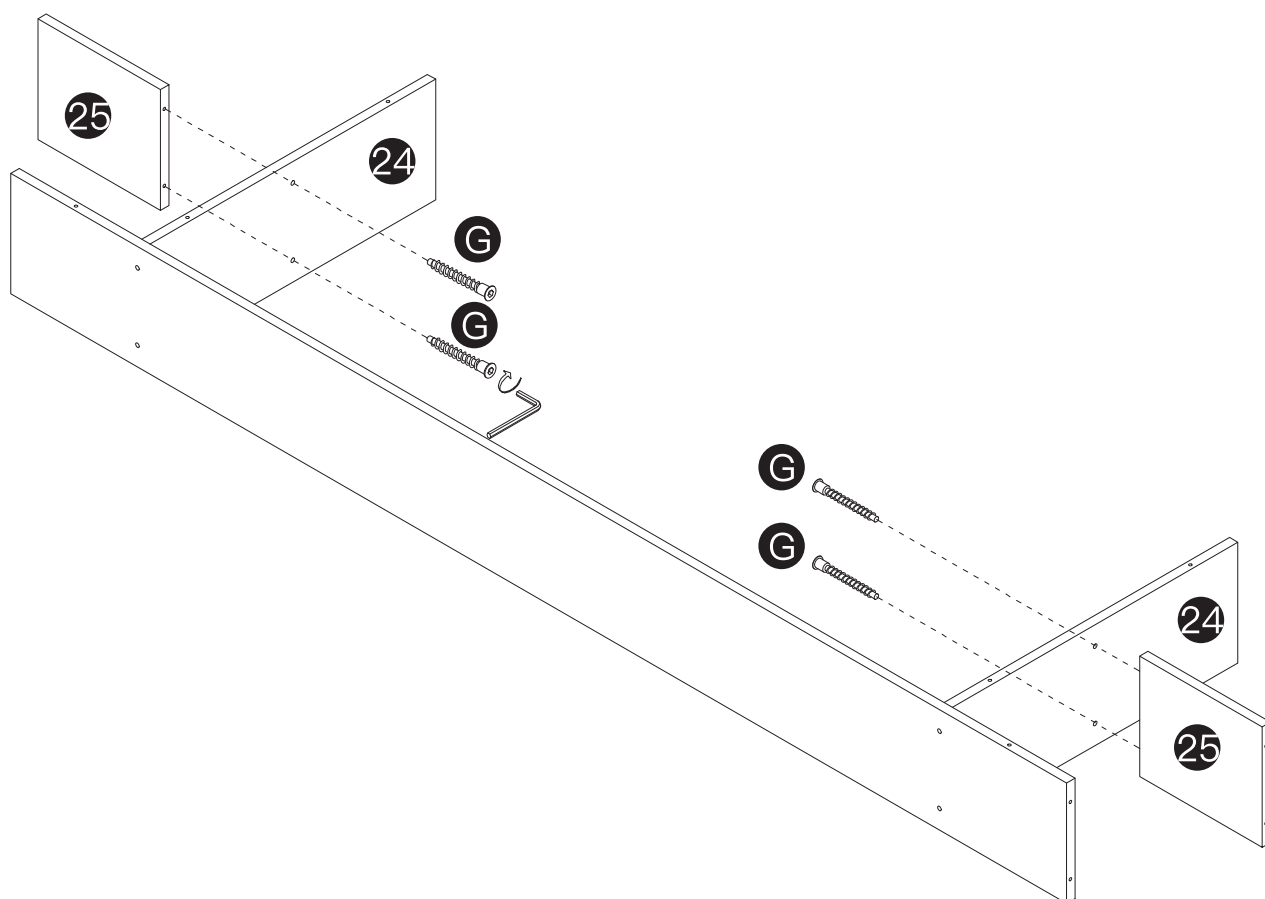


STEP 4

G






M5x40mm
x4

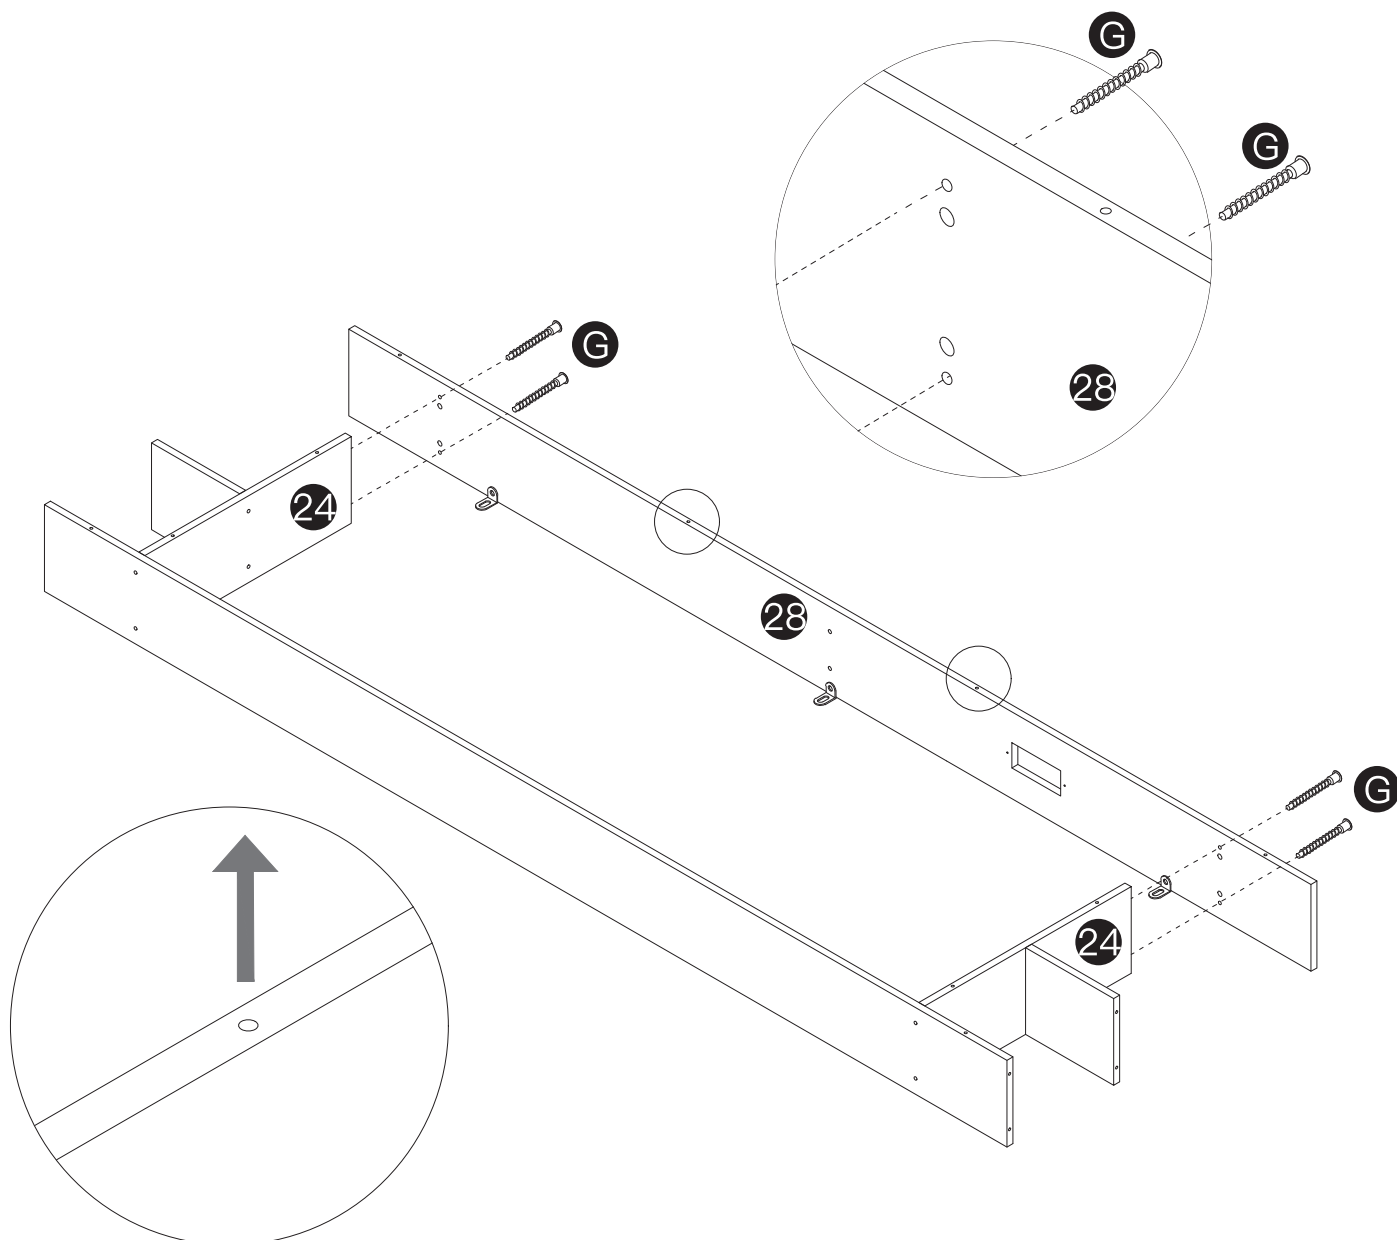





NOTICE:

Make sure the side with hole of part **28** are facing upwards.



STEP 5

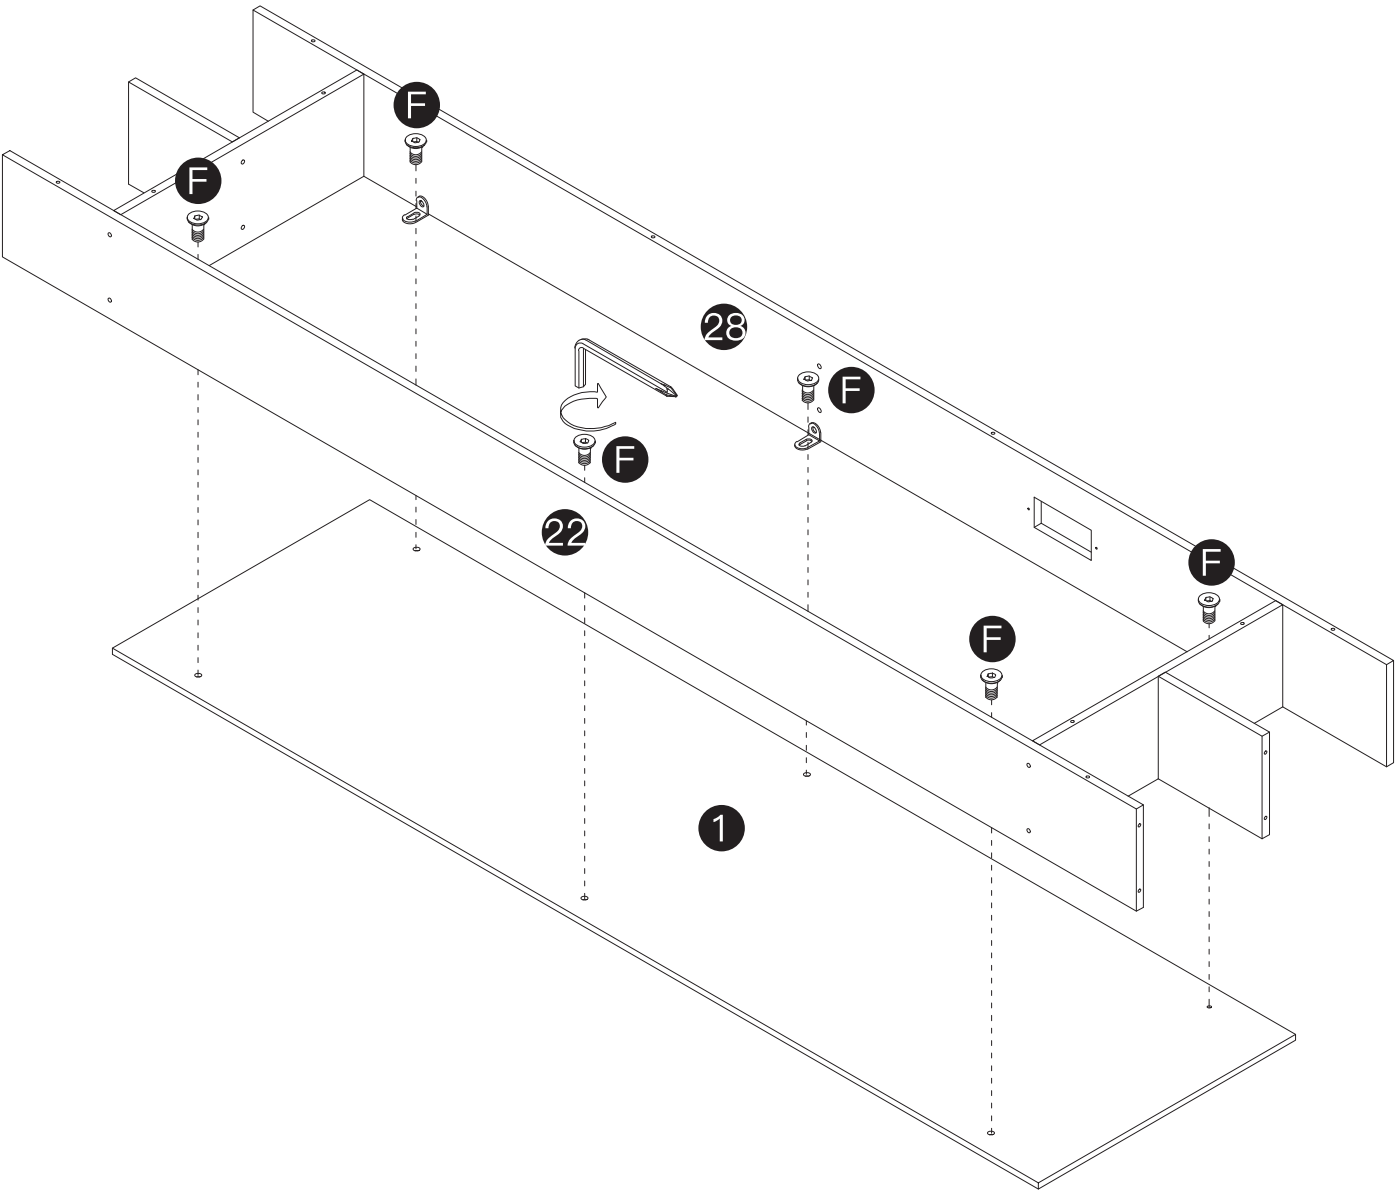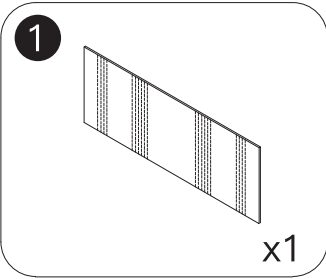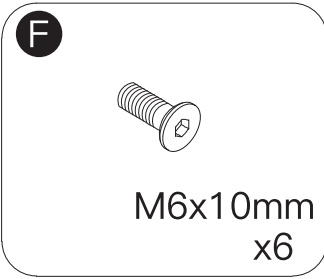

STEP 6

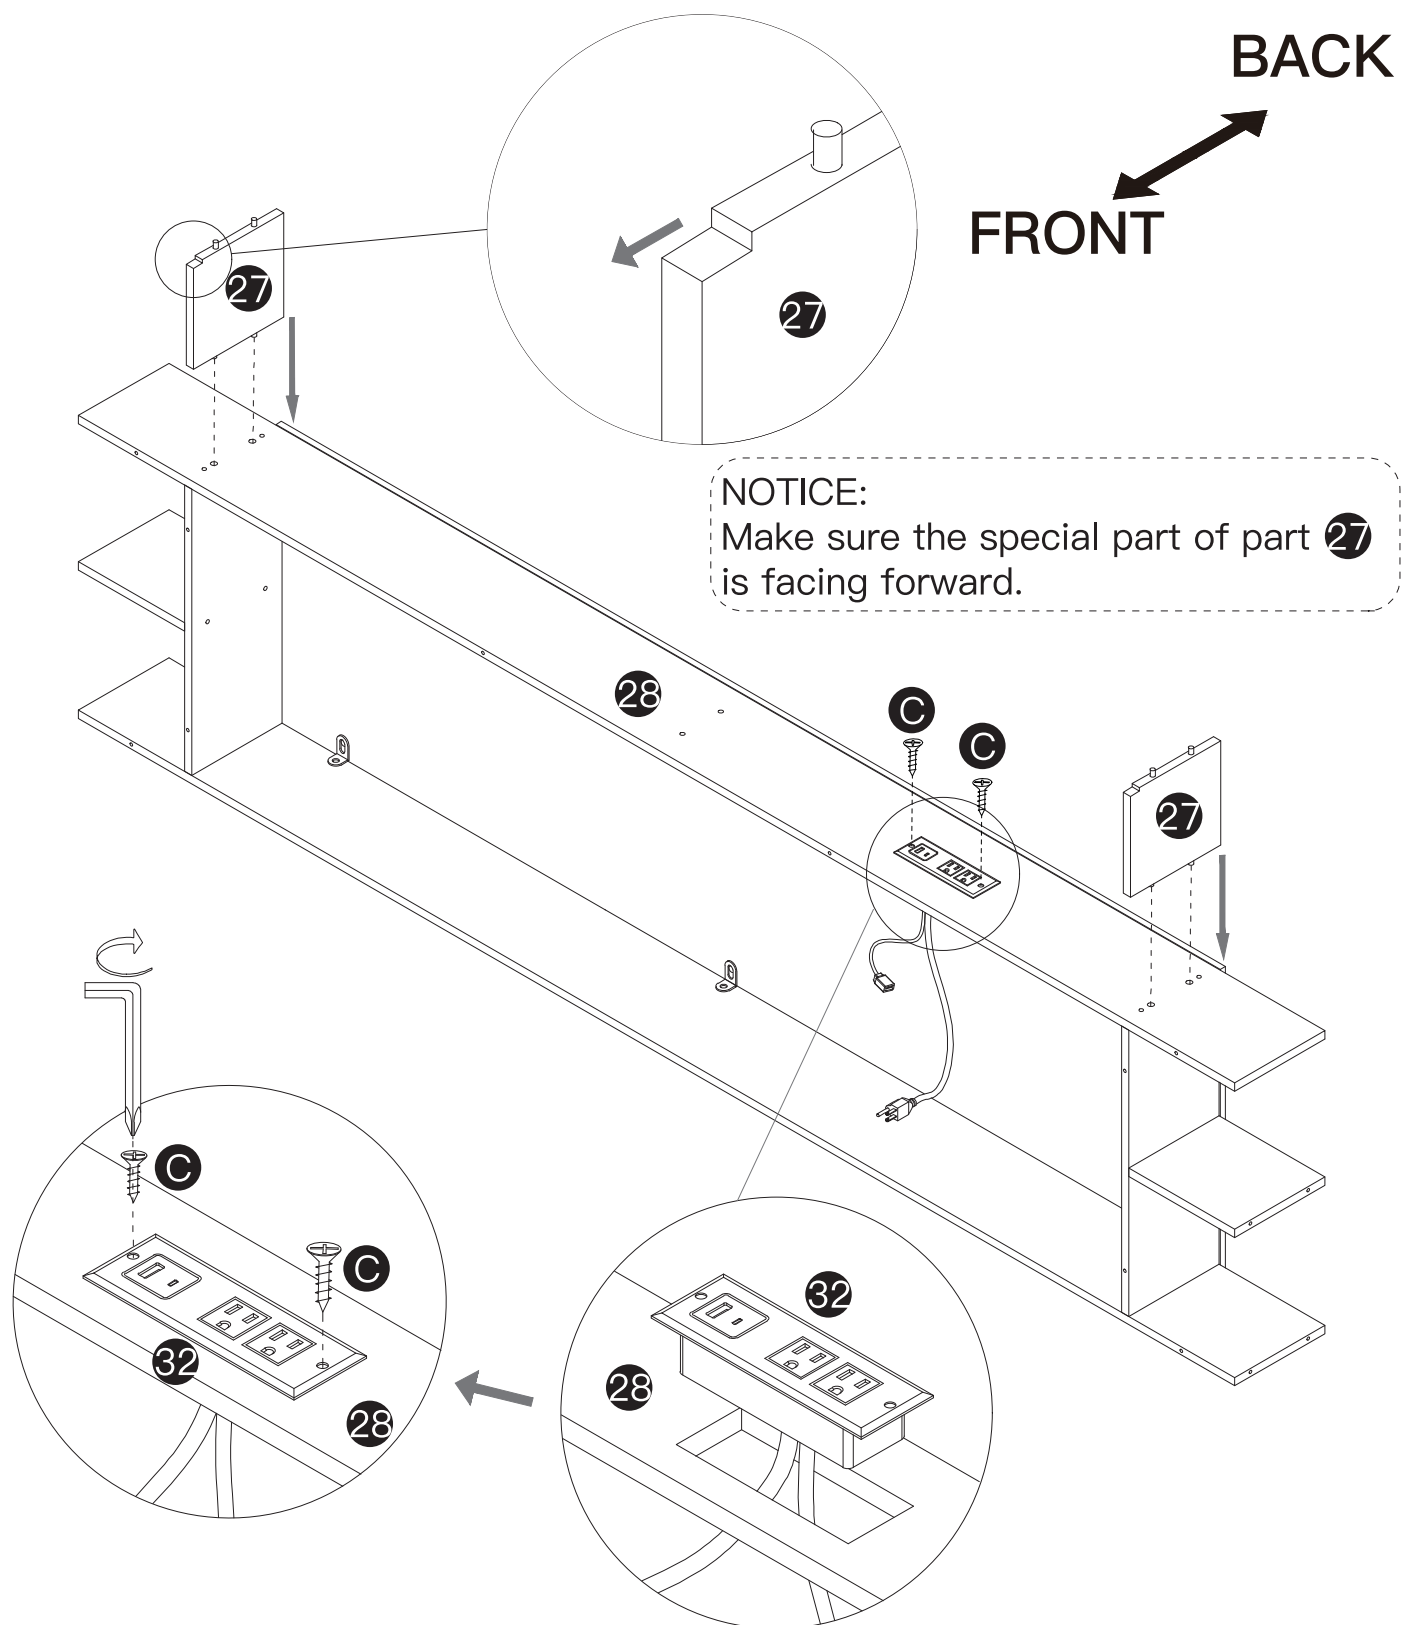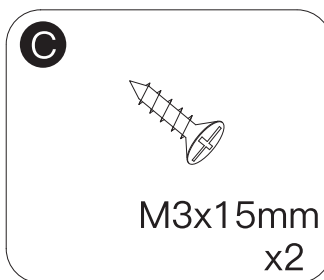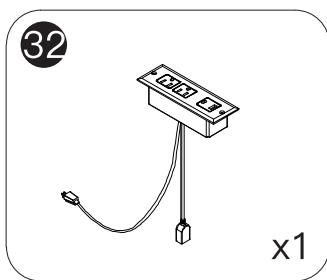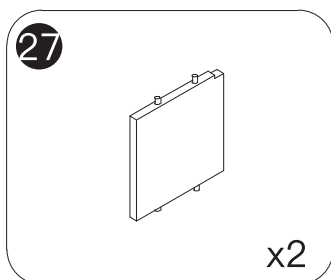


STEP 7



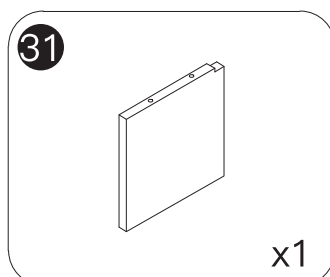
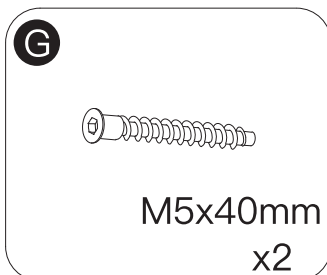


NOTICE:

Ensure that the special part of part **31** is oriented in the same direction as the special part of part **27**.

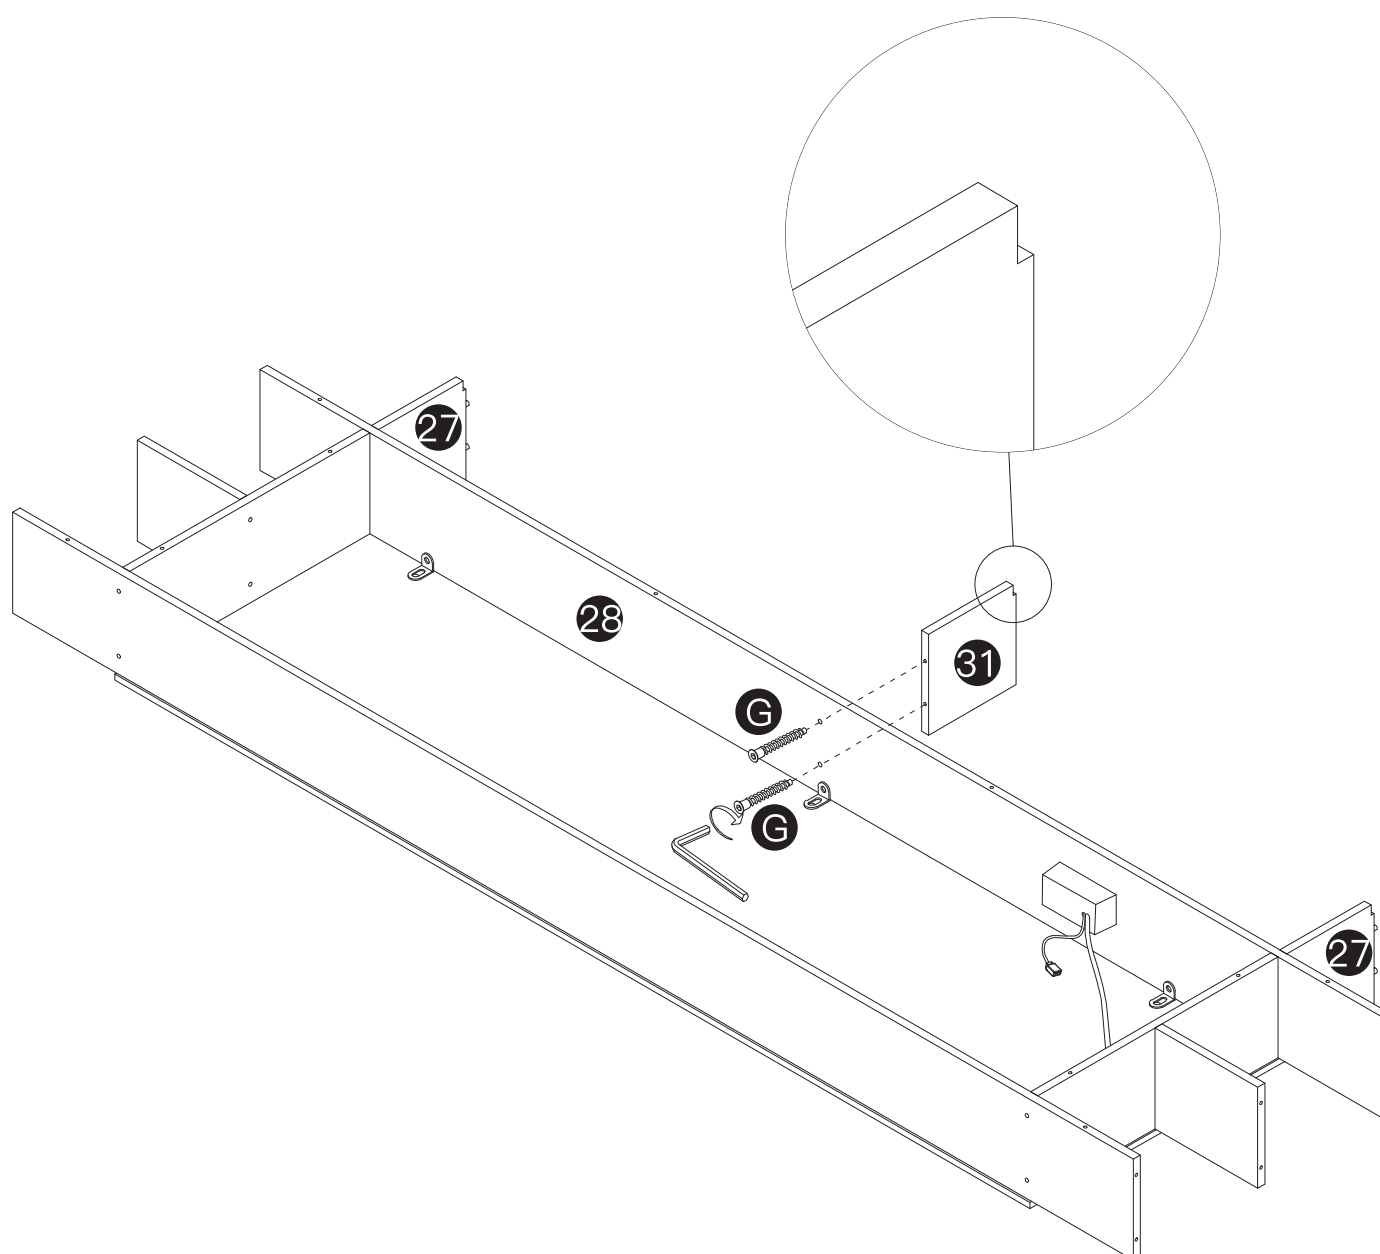

STEP 8

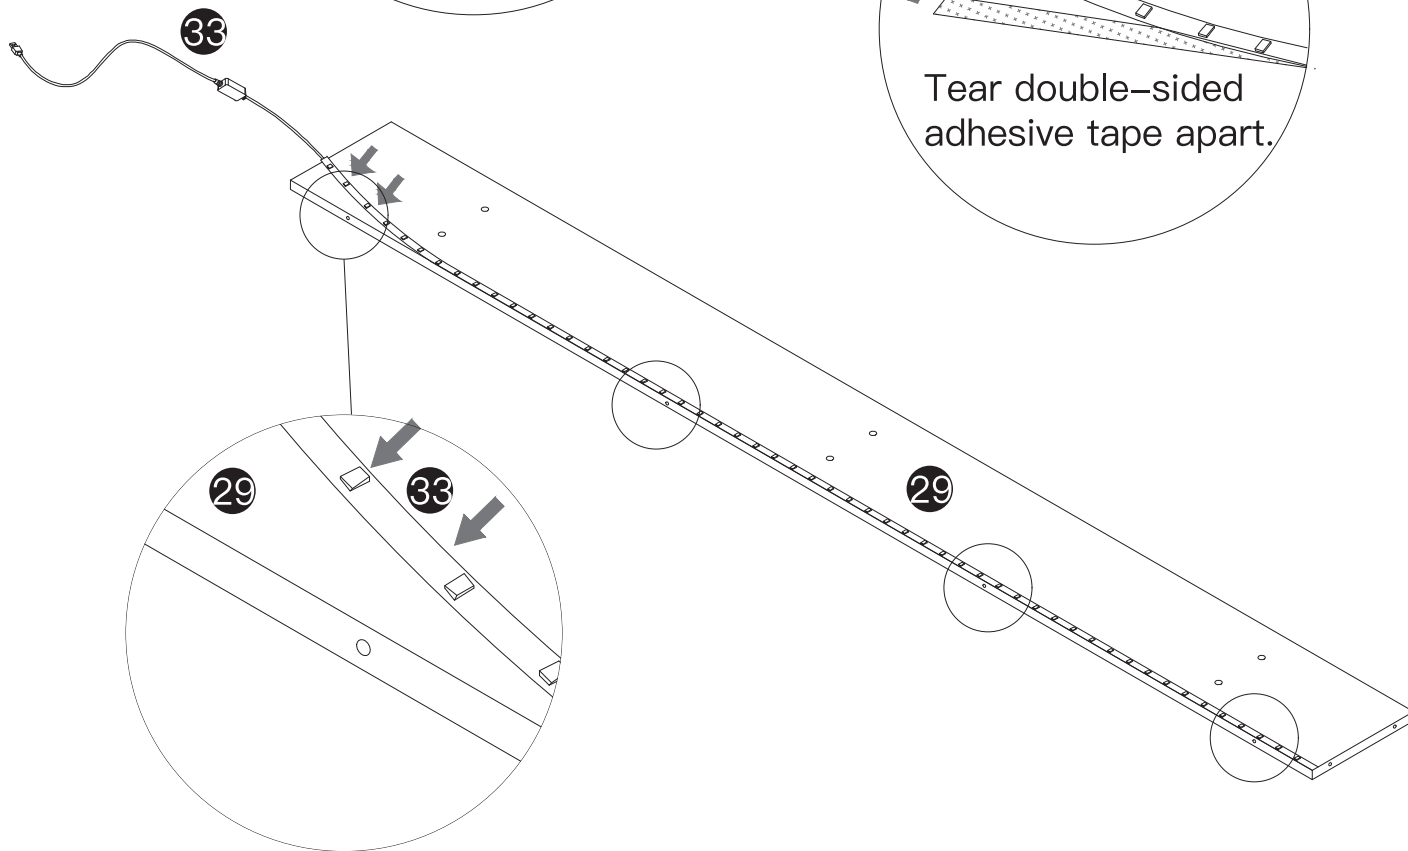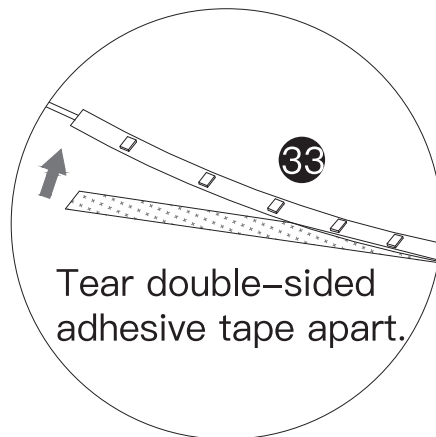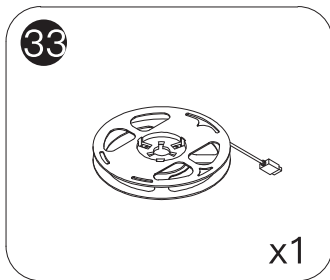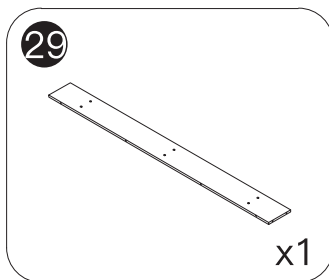

NOTICE:


Attach part 33 to the side of part 29 near the side with the hole.

STEP 9



G



M5x40mm
x2

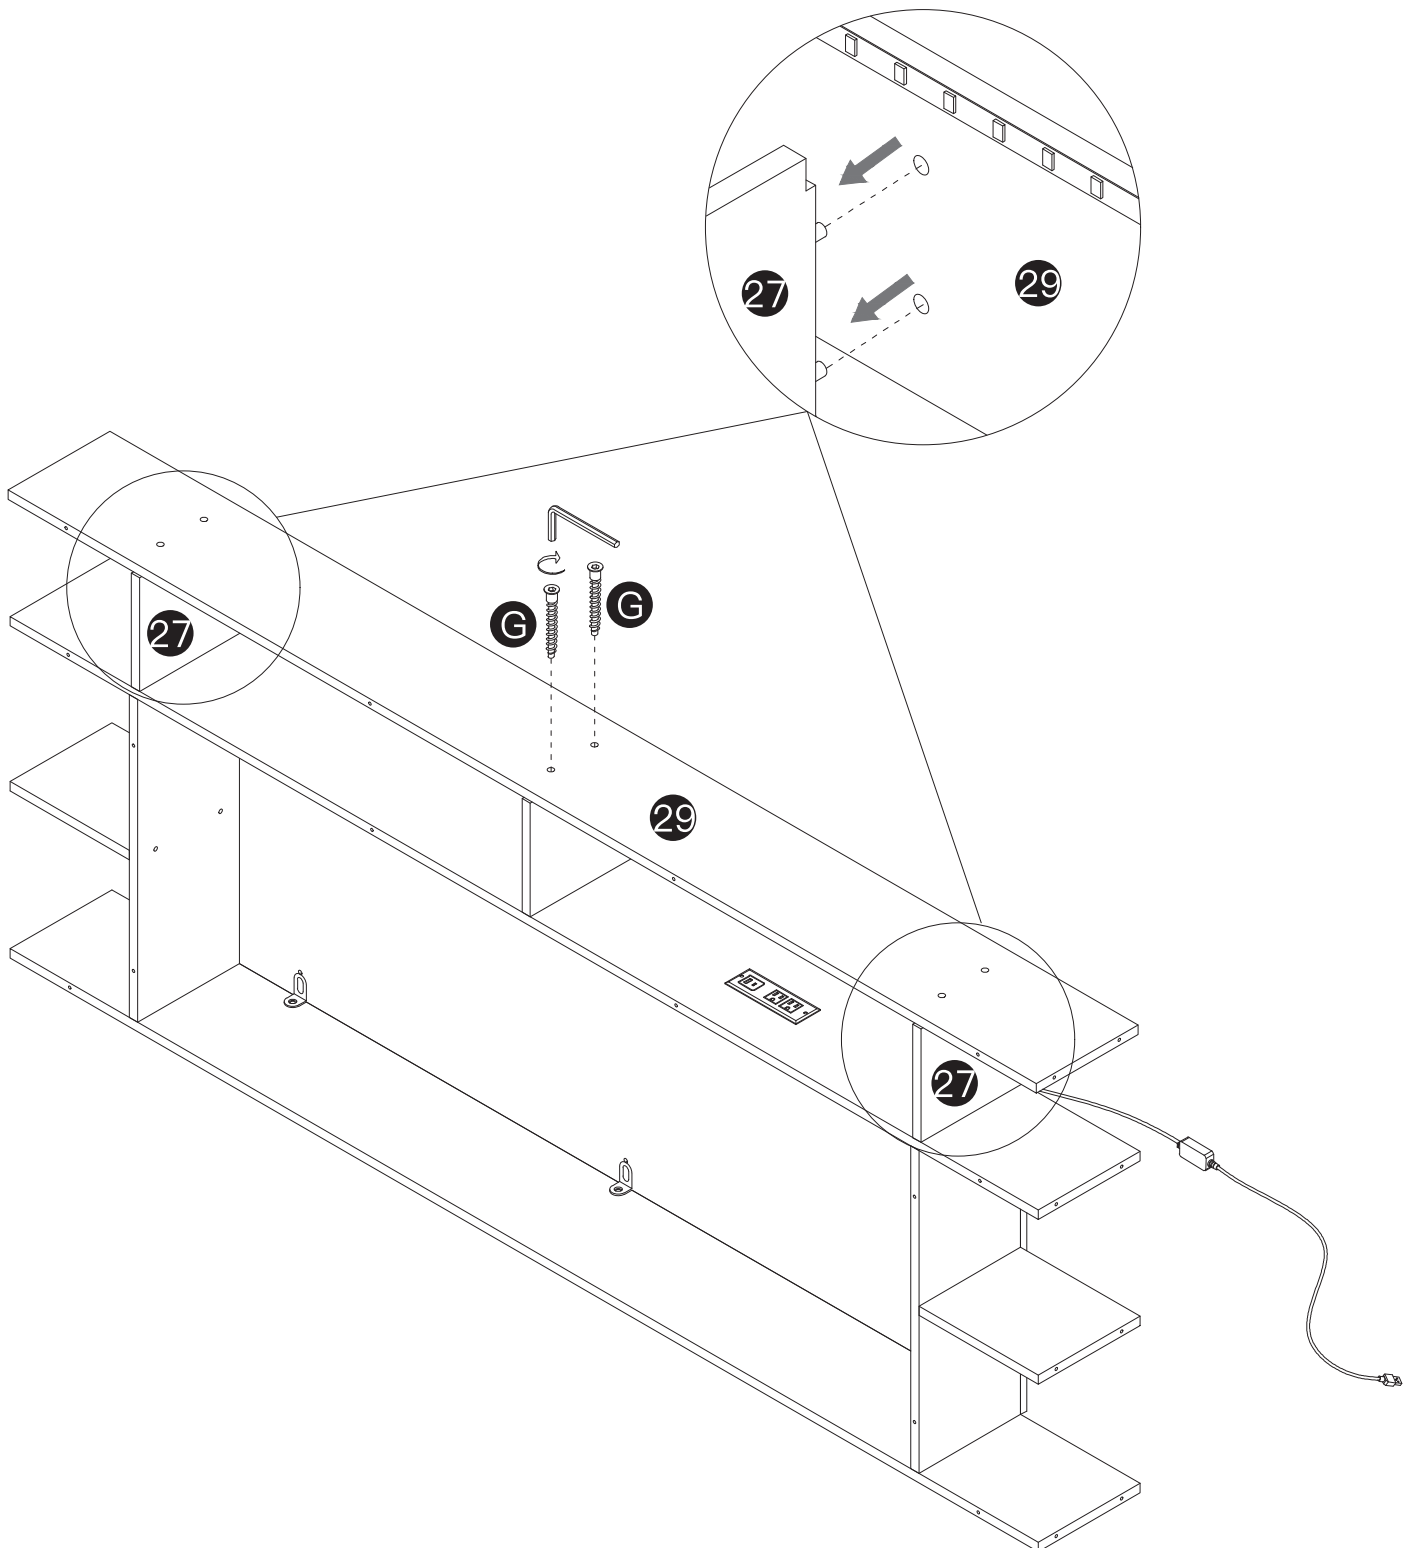

STEP 10

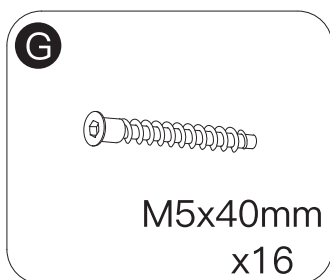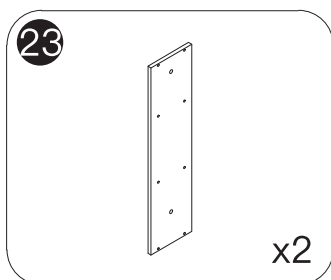


BACK

FRONT

NOTICE:





Make sure the side with two holes of part 23 are facing upwards.

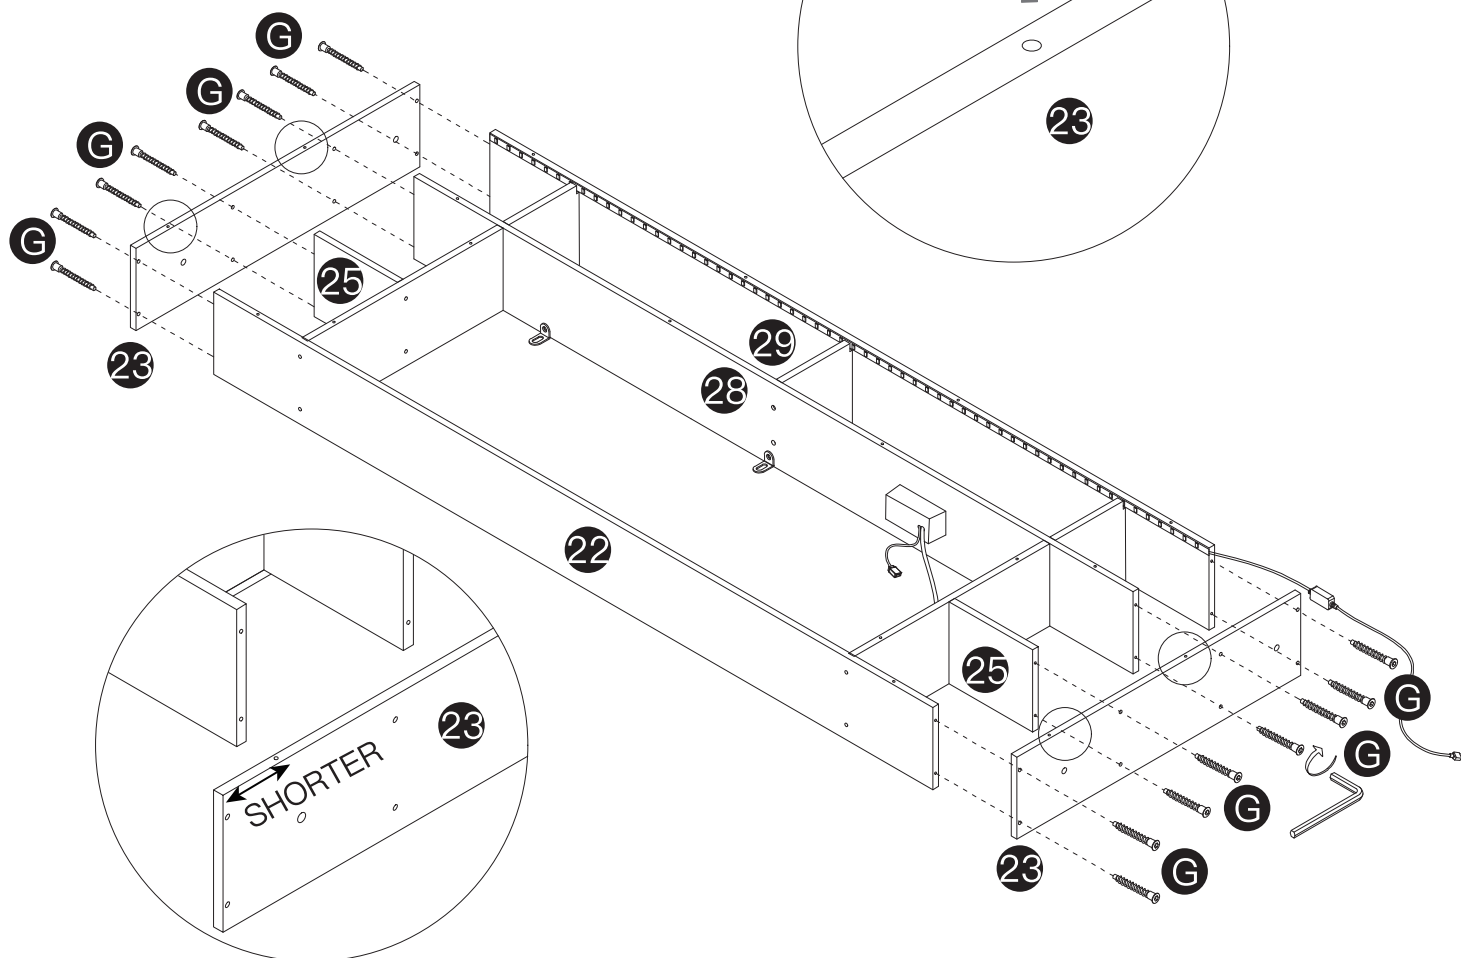

NOTICE:


Make sure the shorter side of part 23 near the side hole is in front.

STEP 11

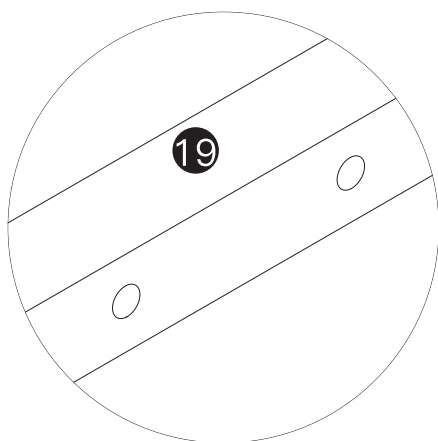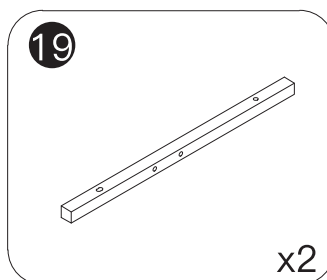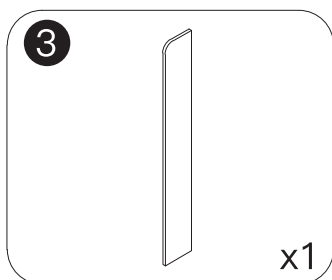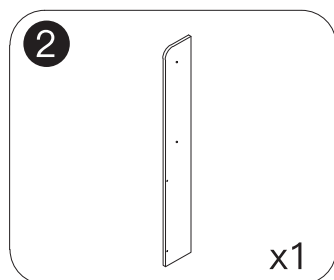

NOTICE:

Ensure that the two holes in the part 19 face towards the side of the parts 2 & 3 that has a circular arc.

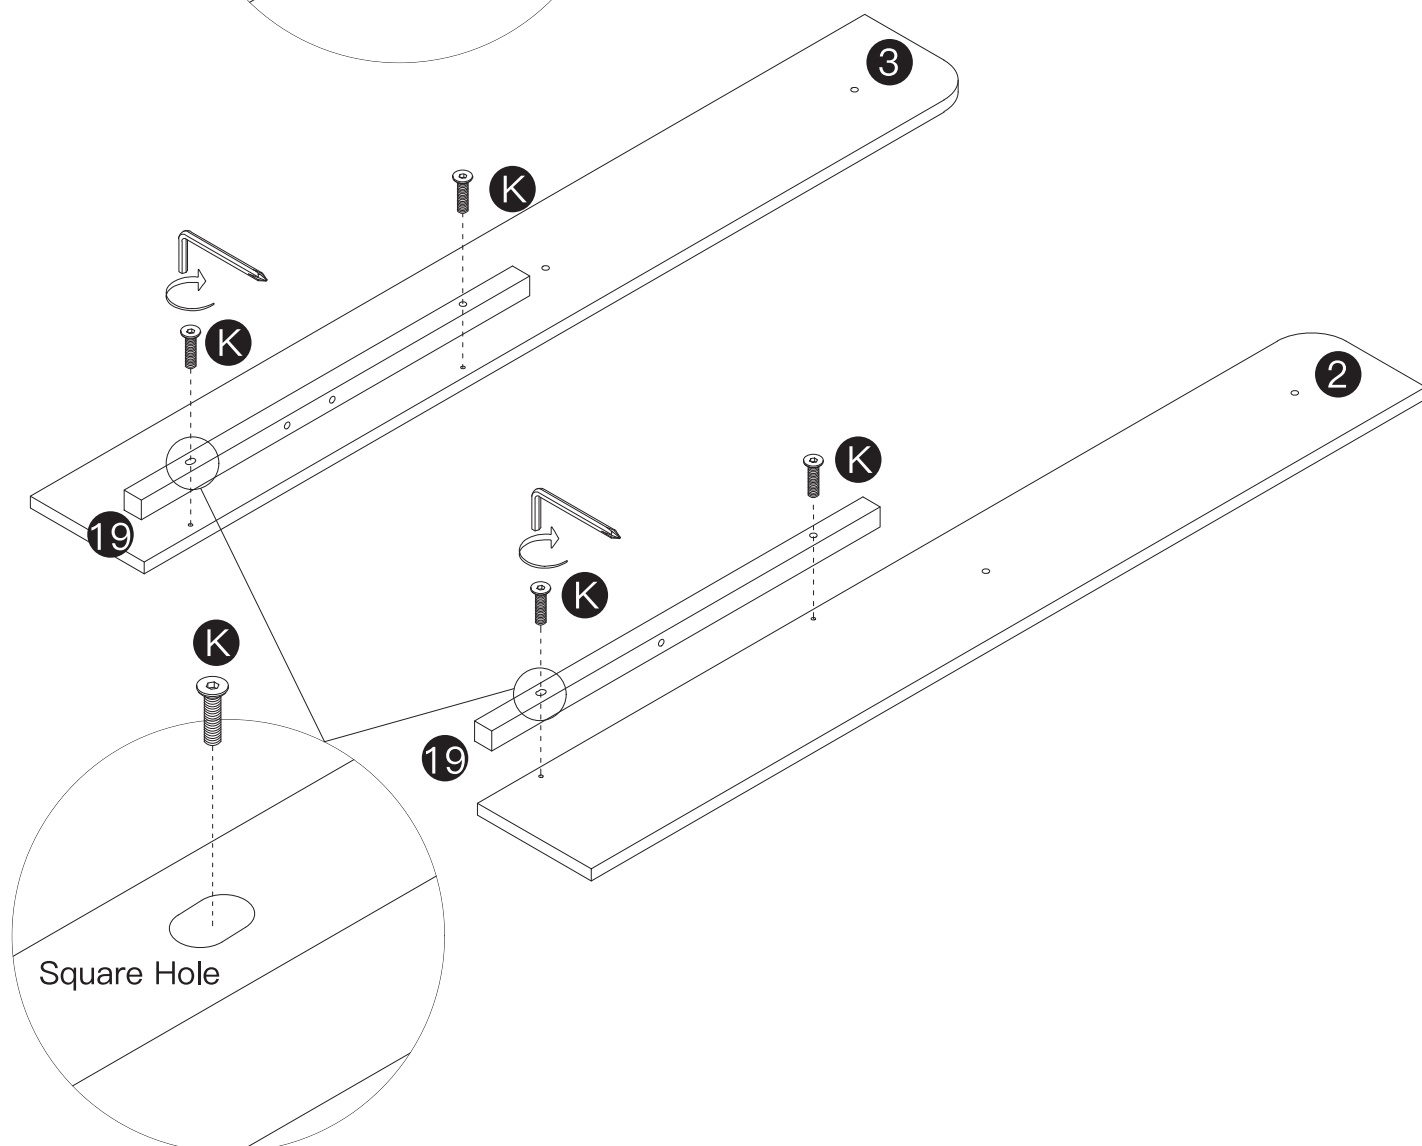


STEP 12




H



M8x28mm
x4


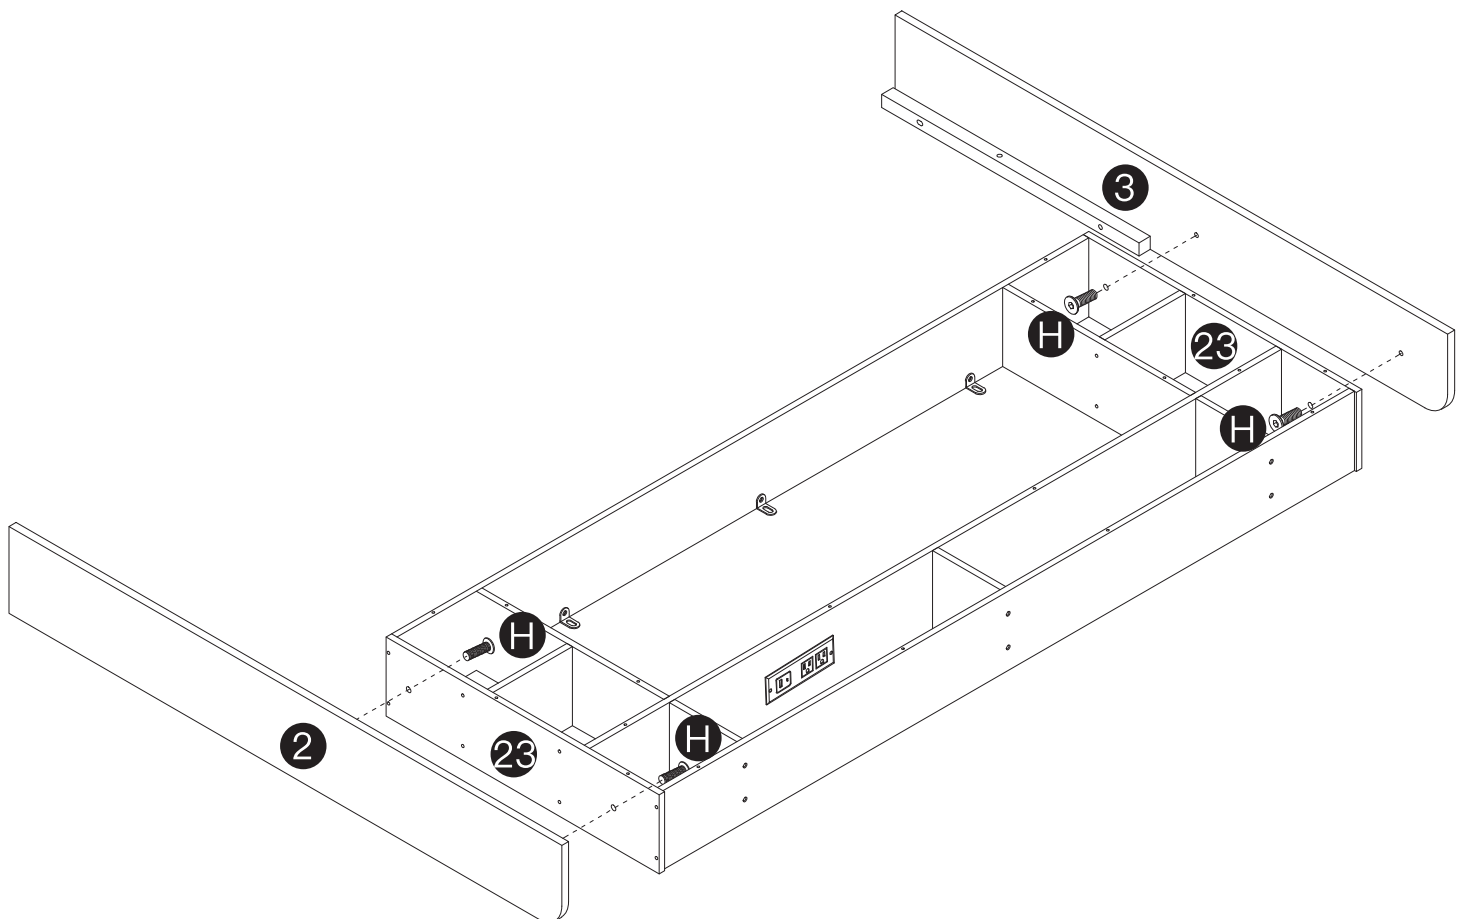


STEP 13


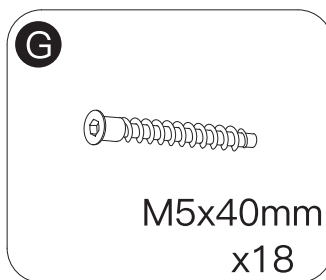
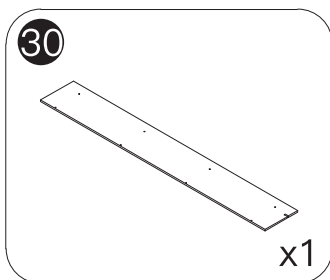
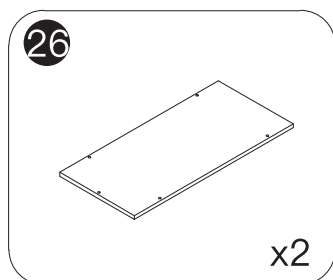


NOTICE:






The wire for the neon light leads out from this gap.

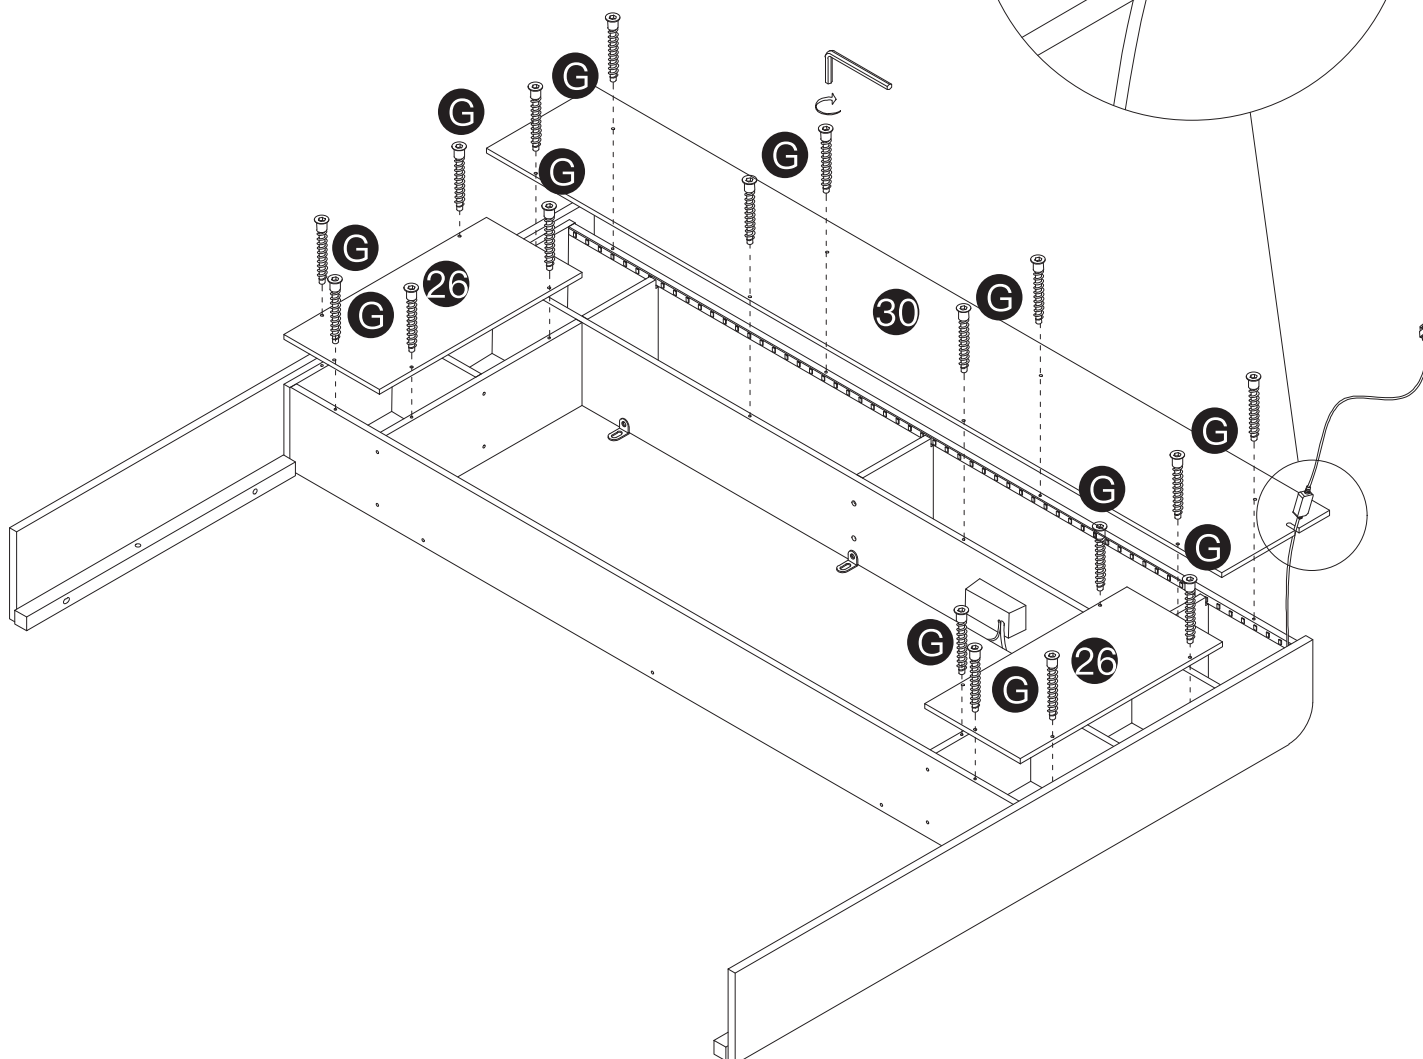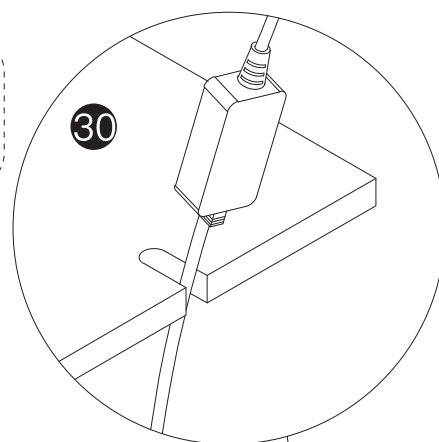






STEP 14

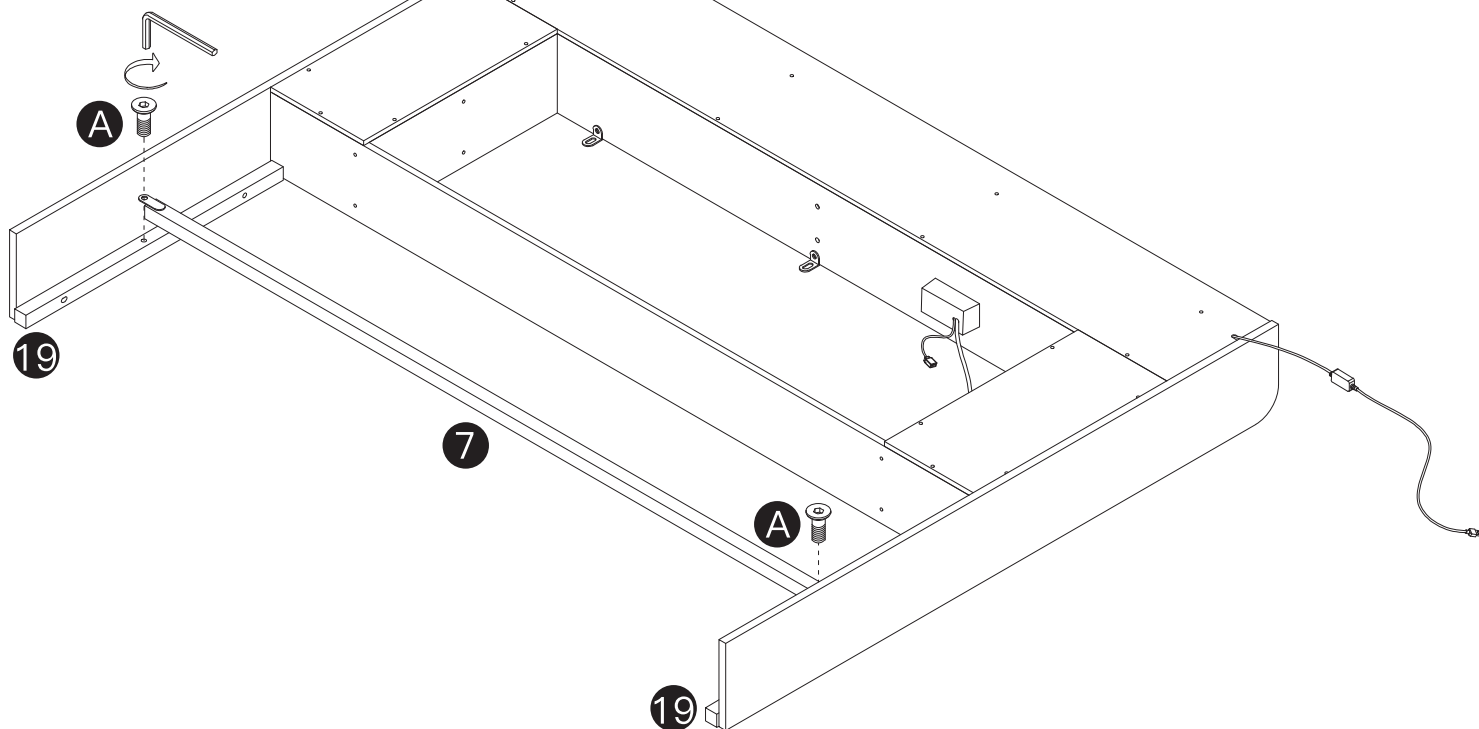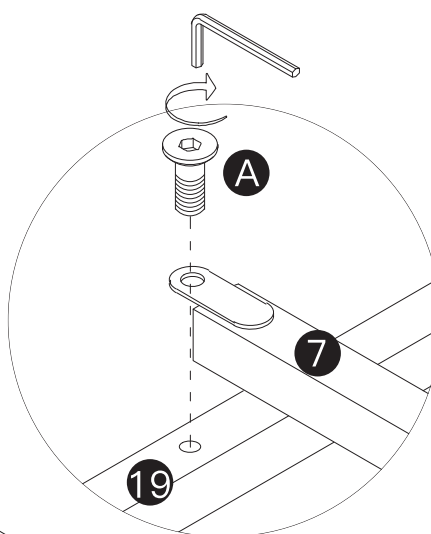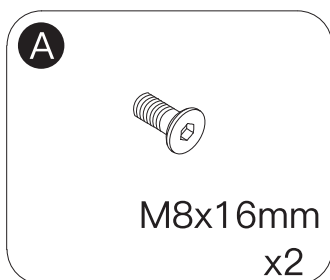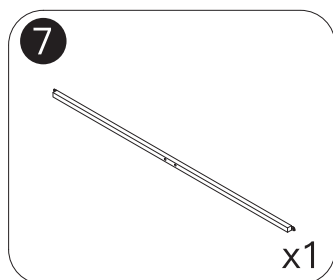

STEP 15

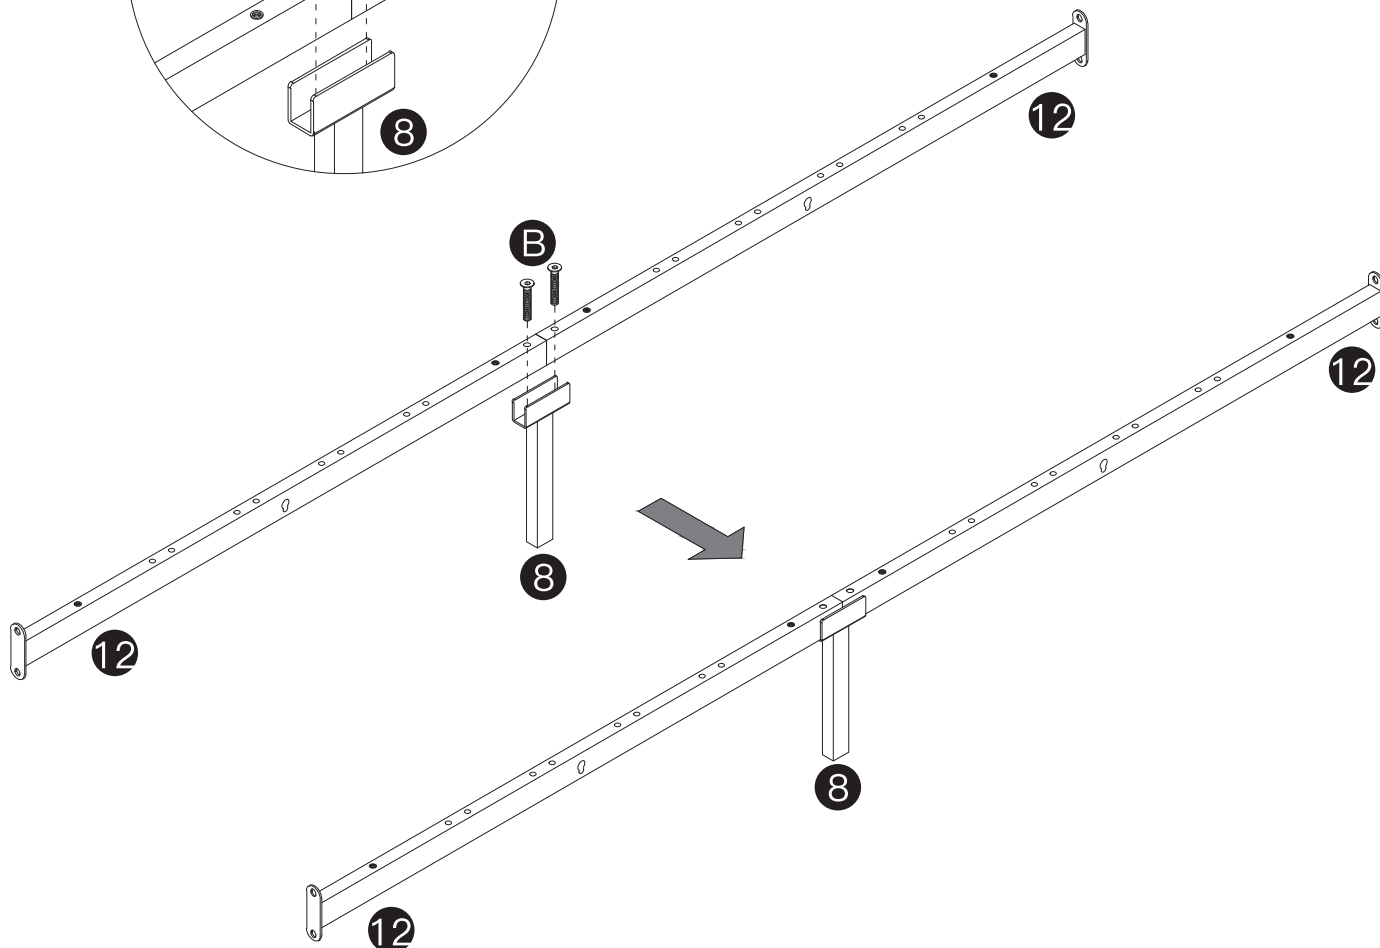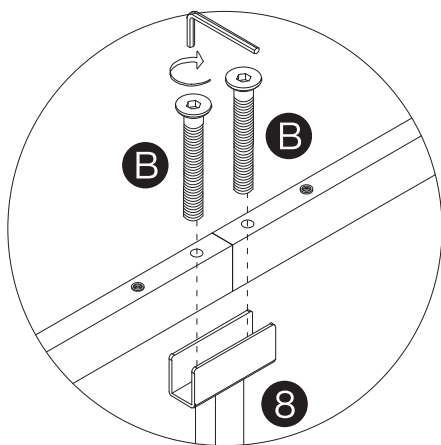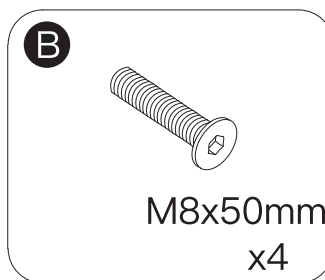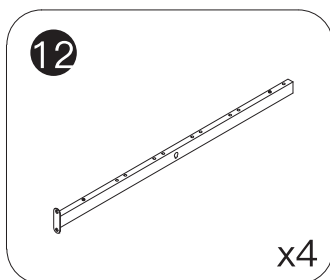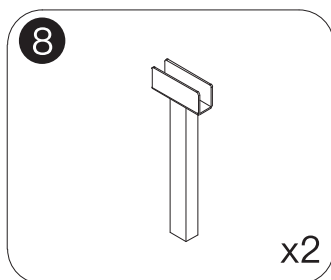

STEP 16

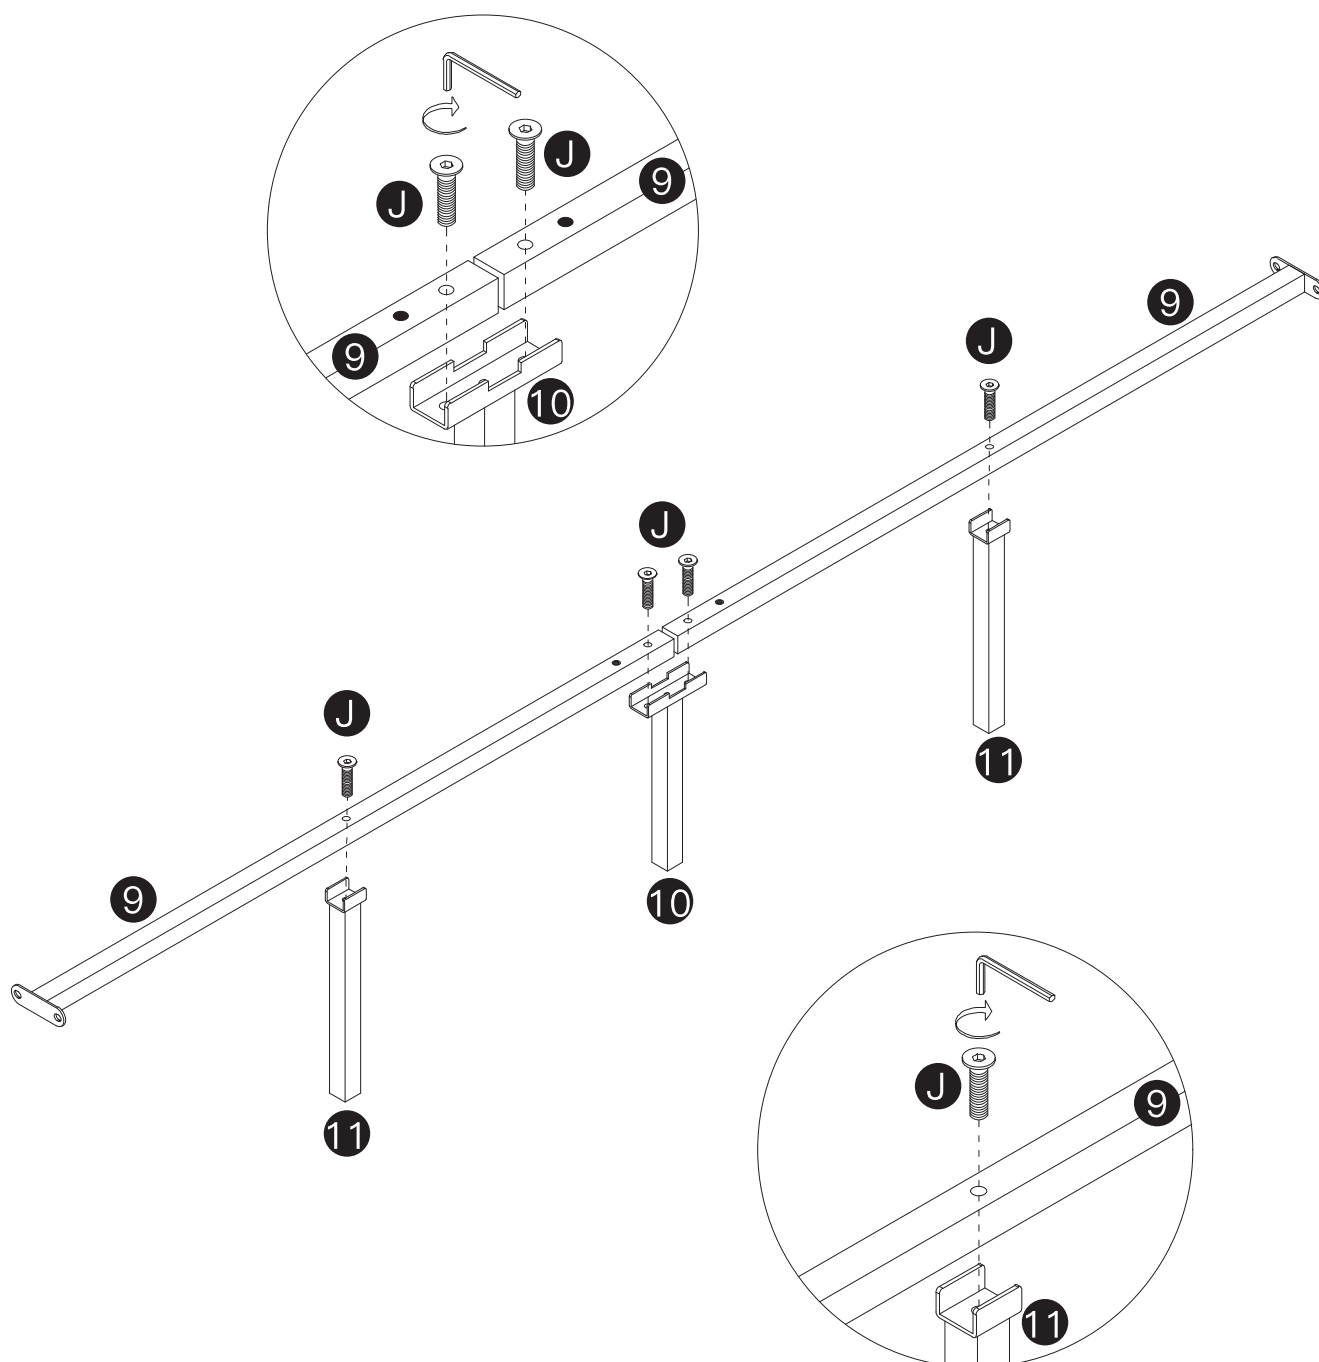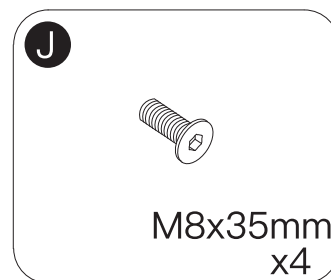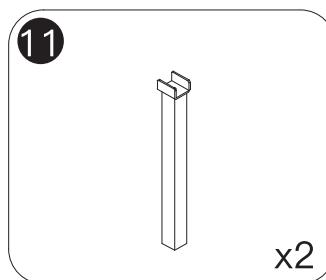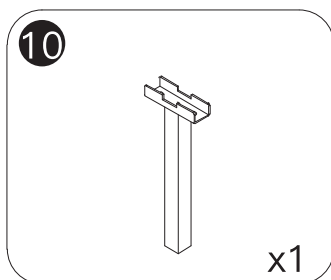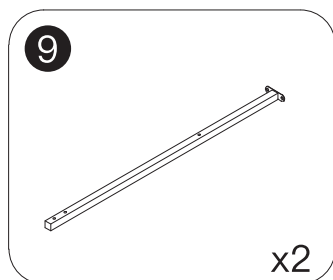


STEP 17

A



M8x16mm
x6

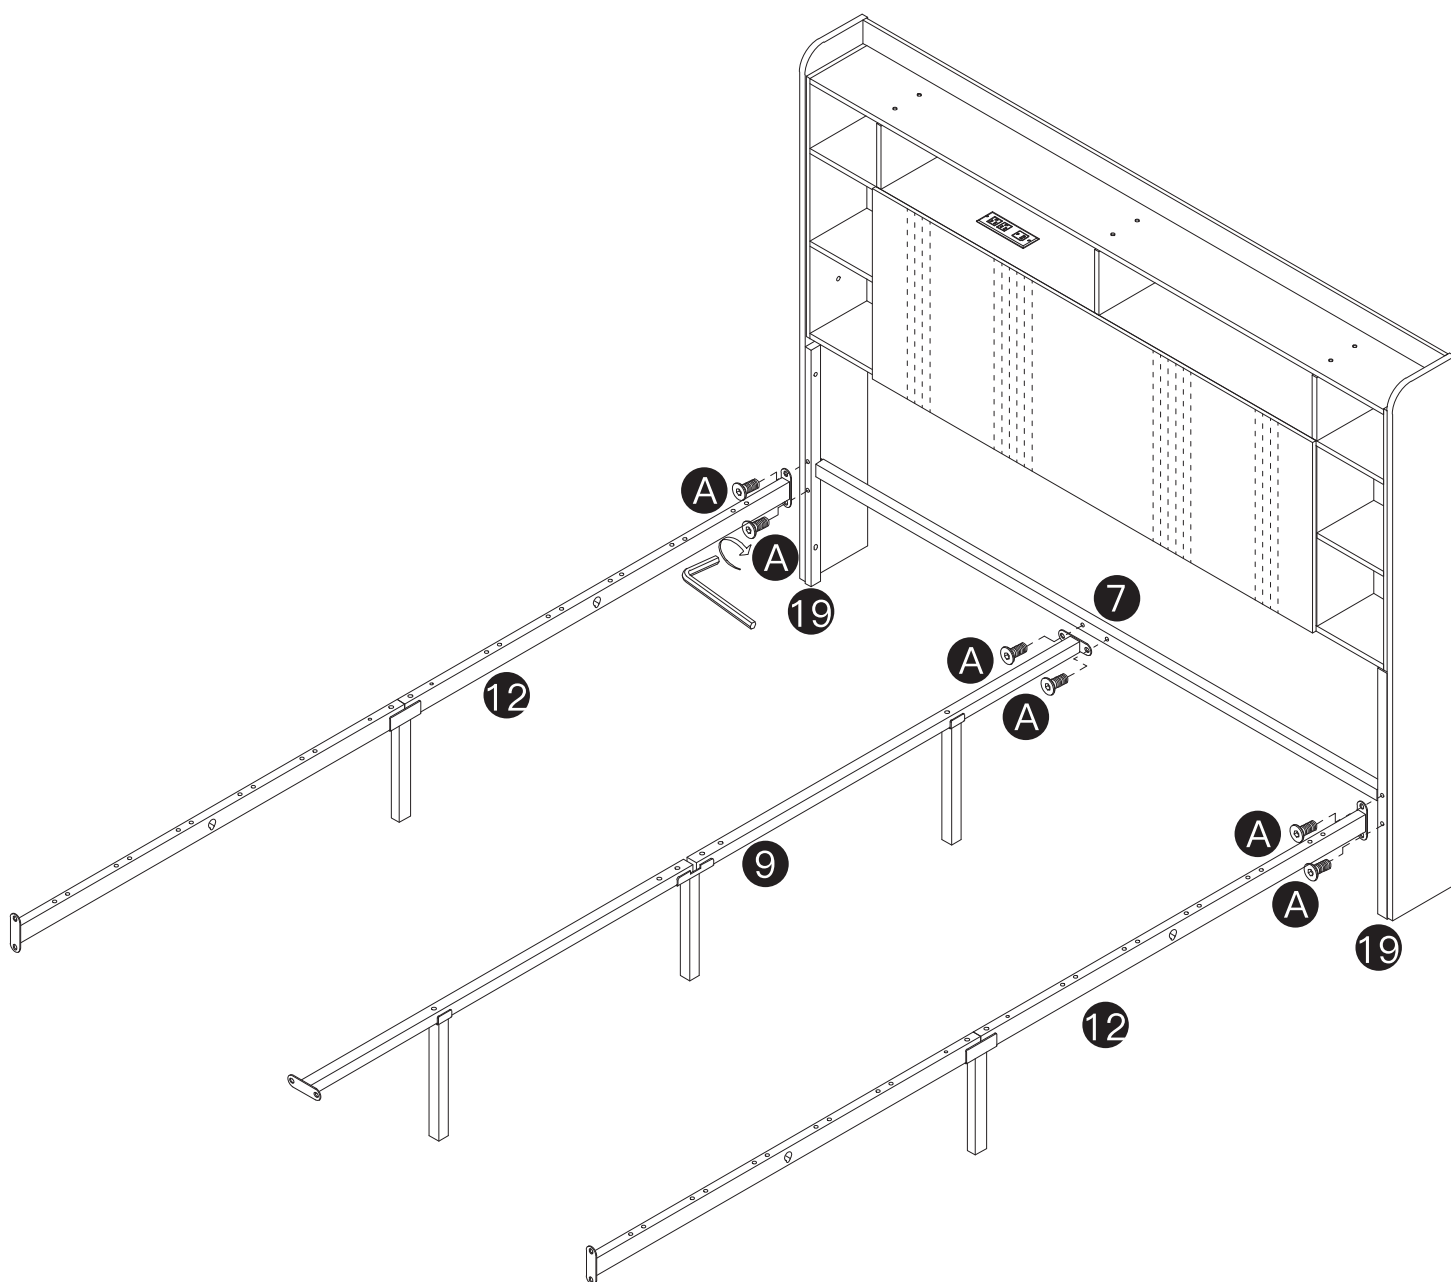


STEP 18

A




M8x16mm
x6

17

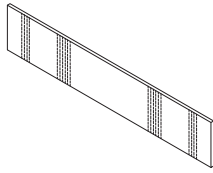


x1

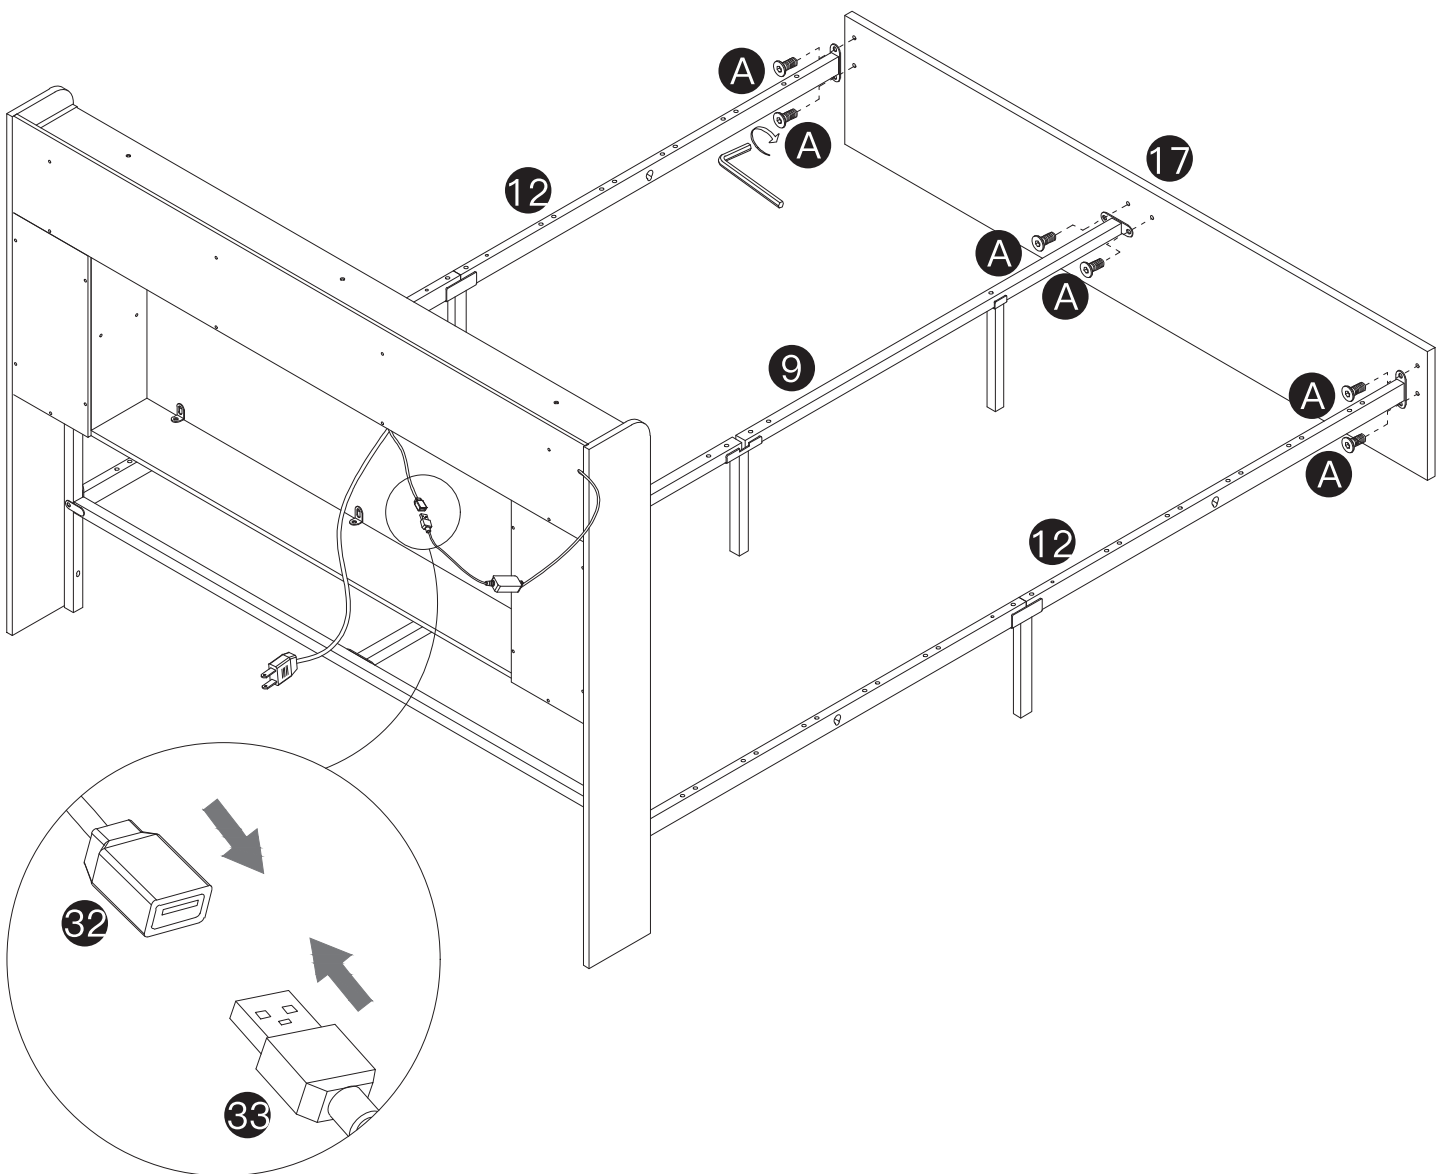

STEP 19

14


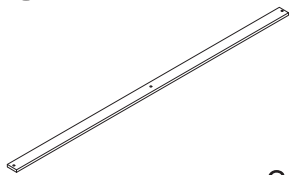


x2




E



M6x25mm
x6

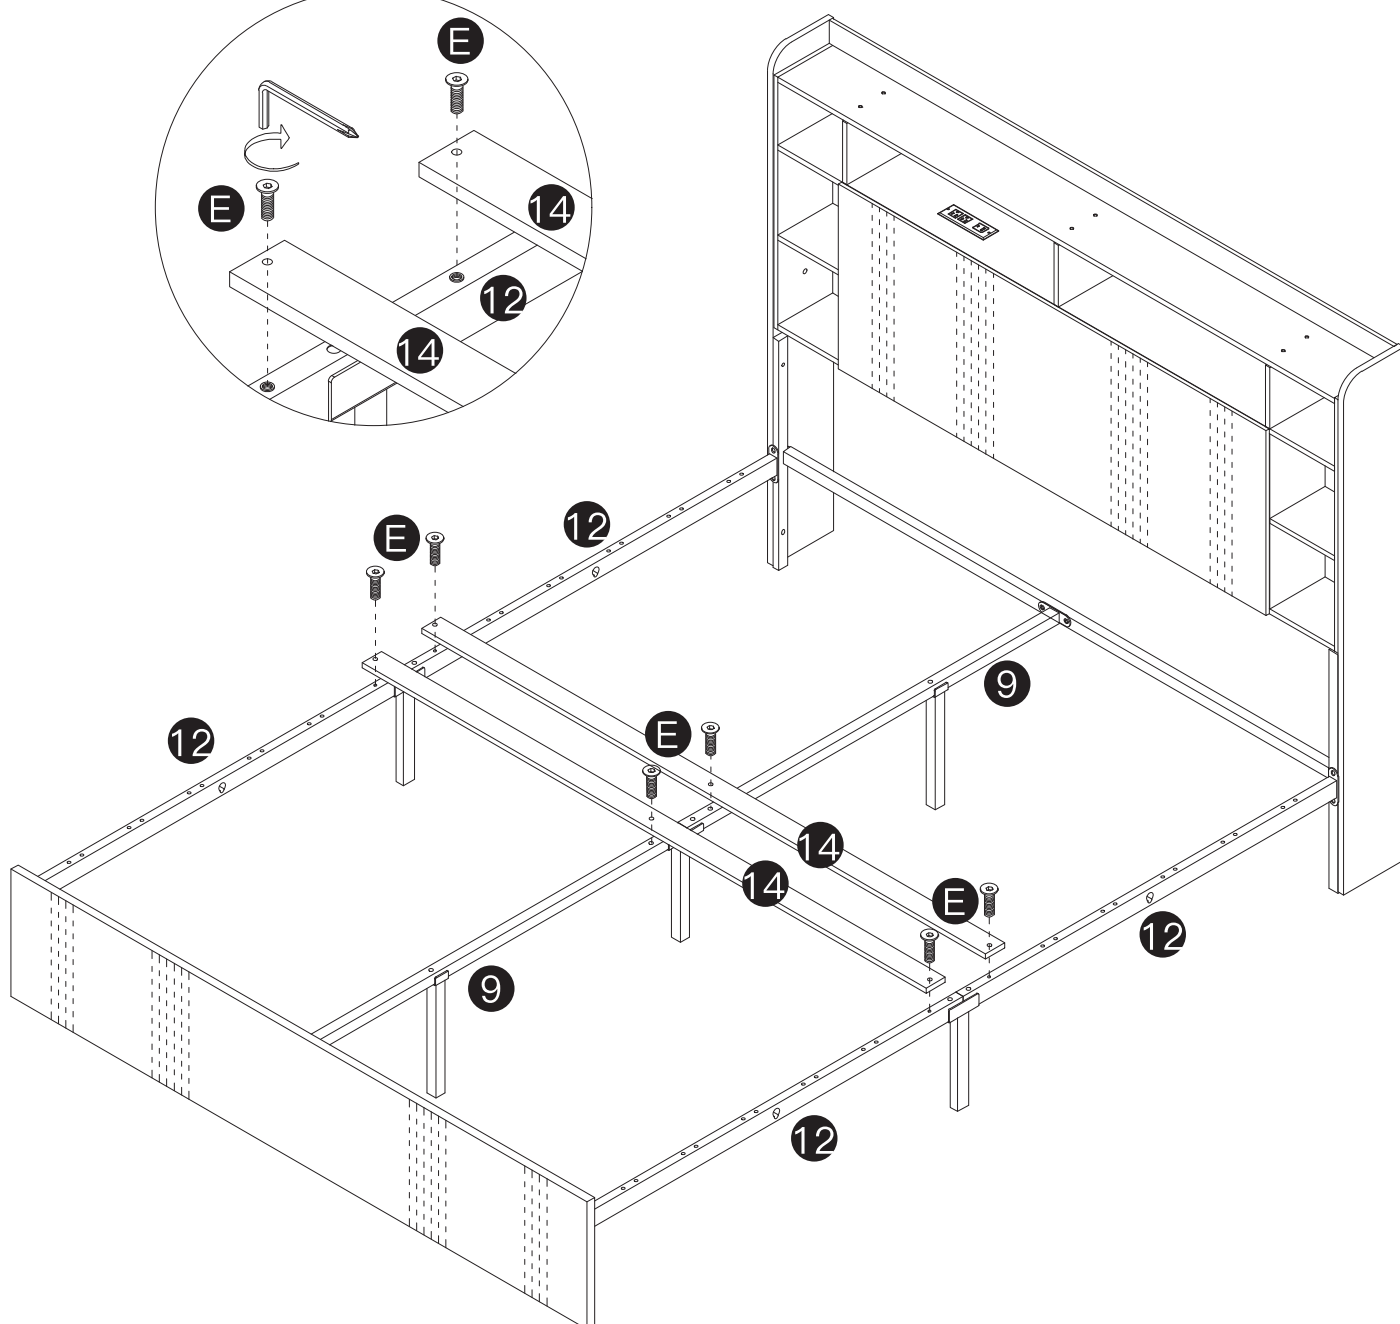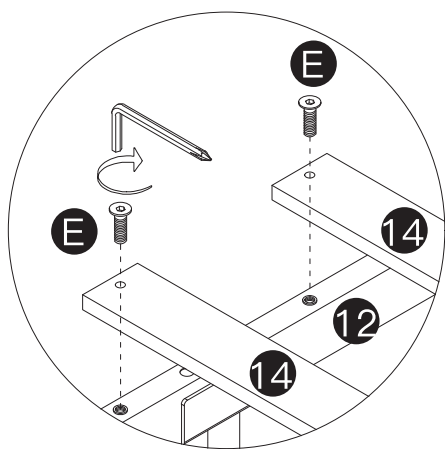


STEP 20






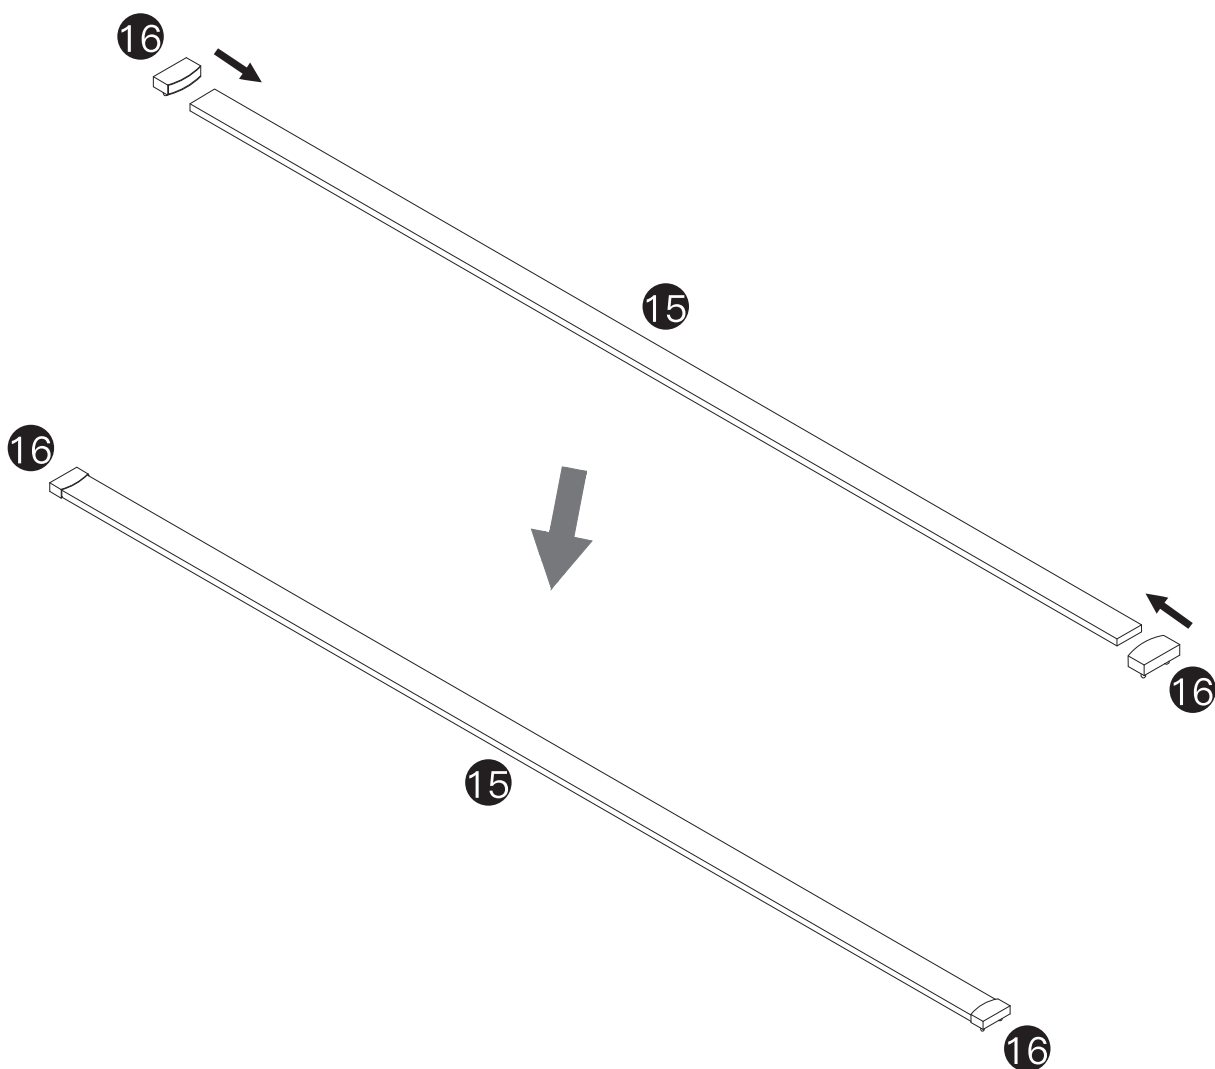
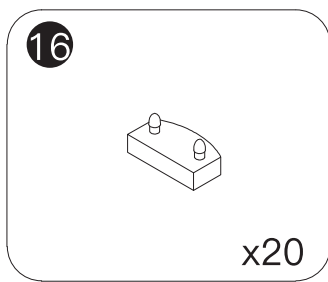
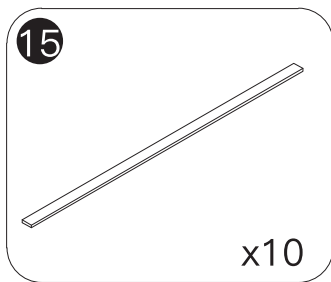


x10

STEP 21



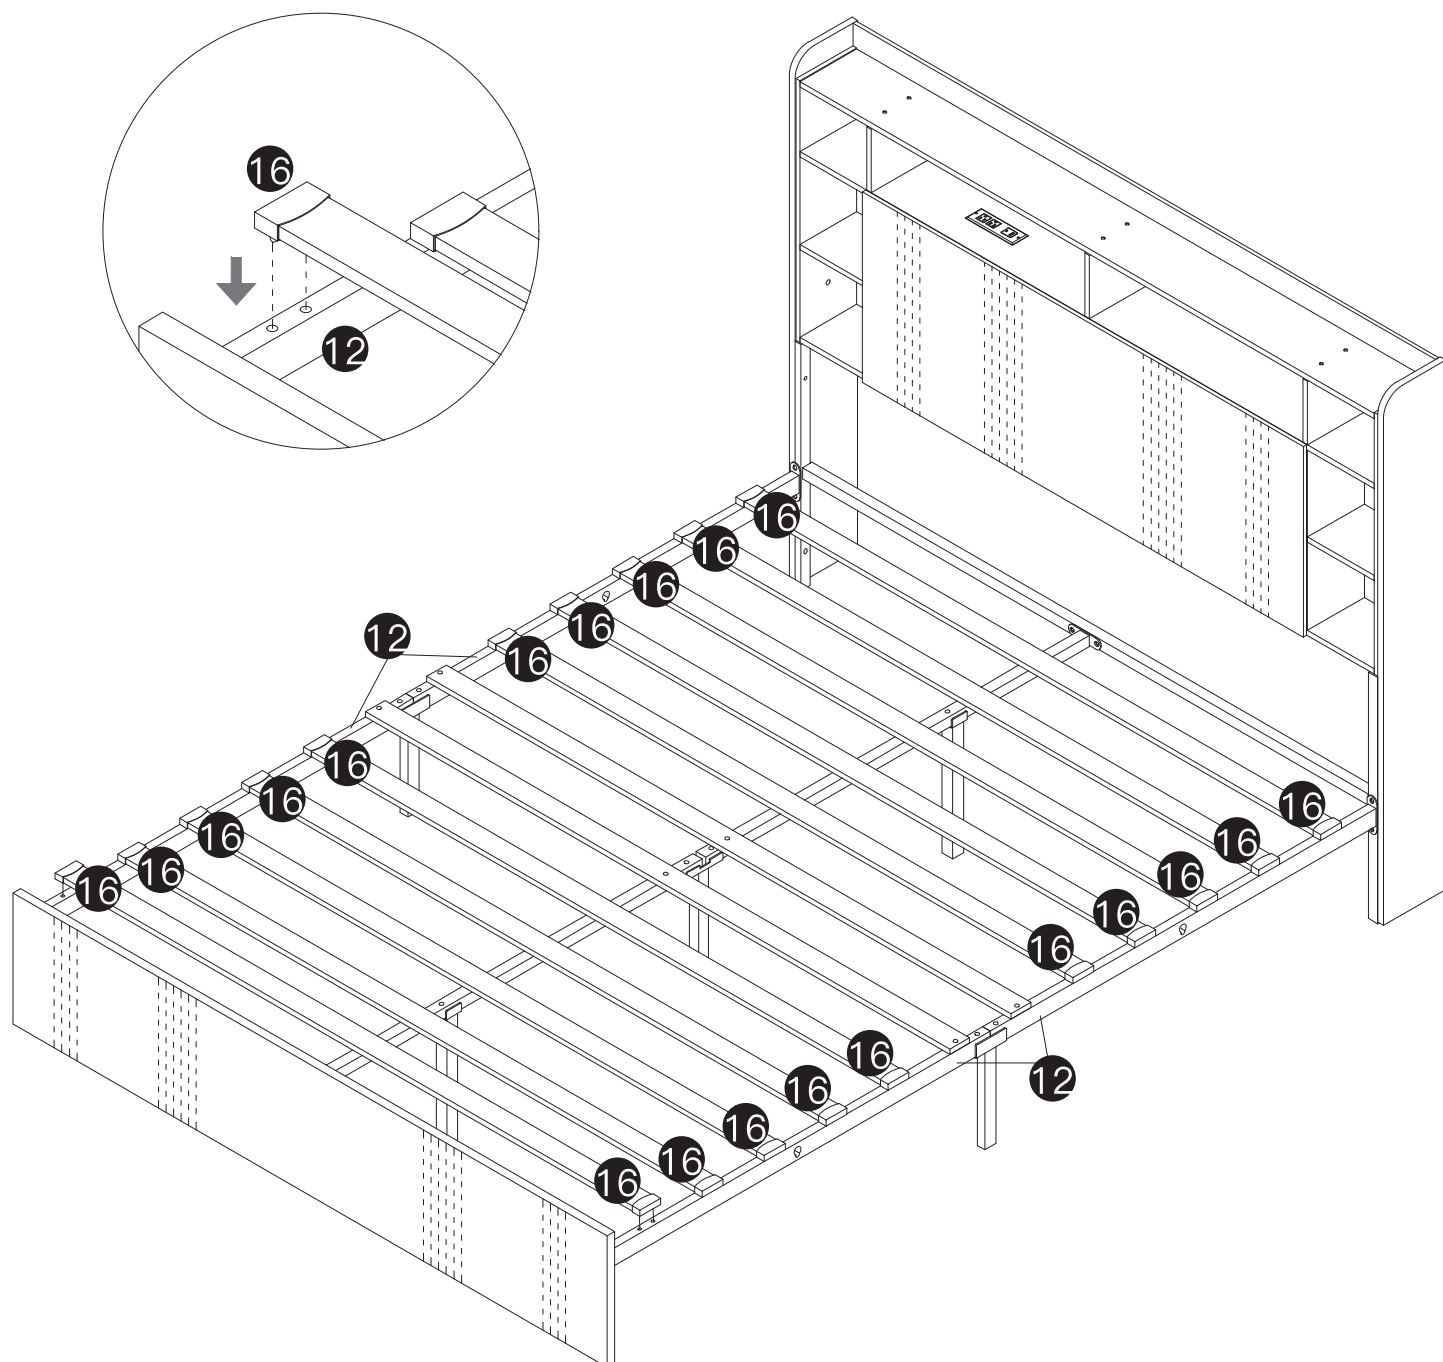


STEP 22

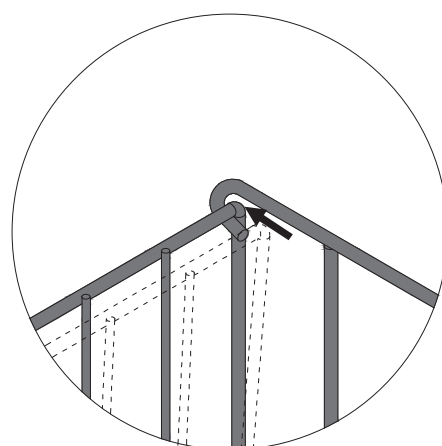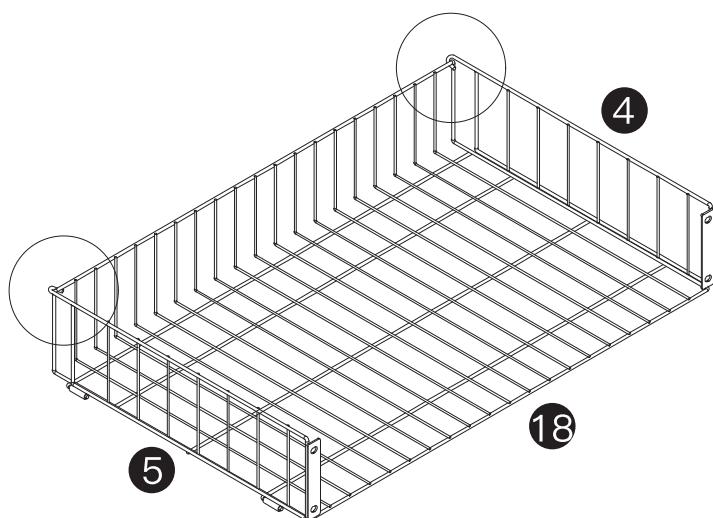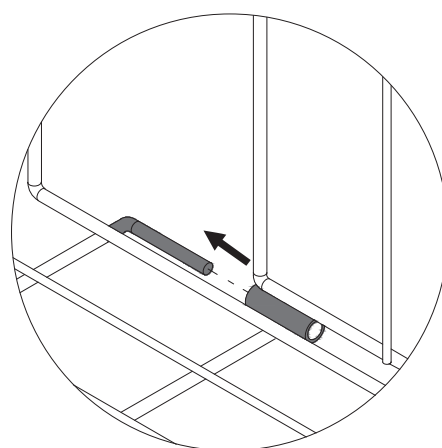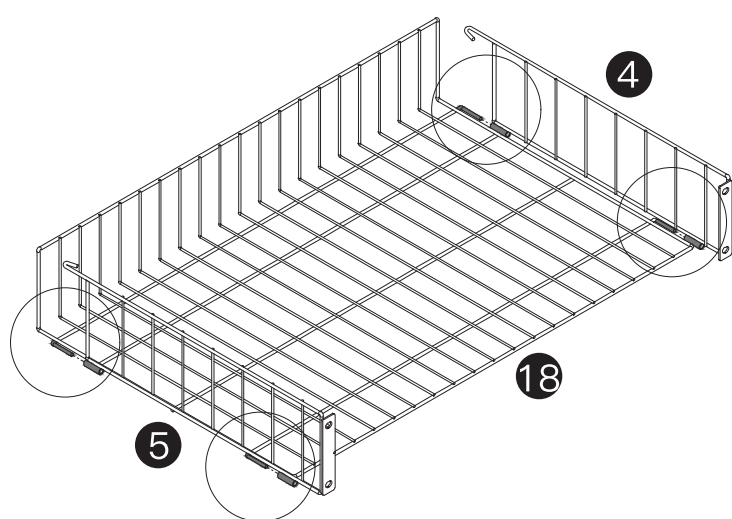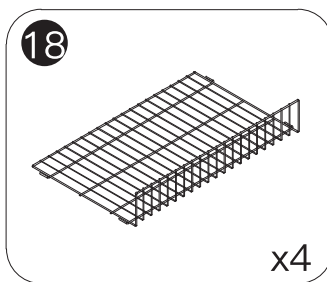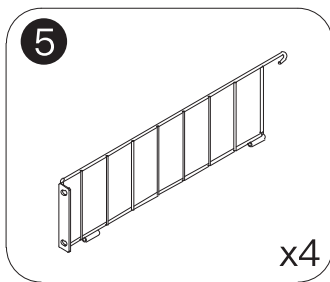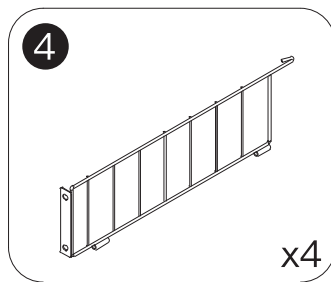



x4

STEP 23

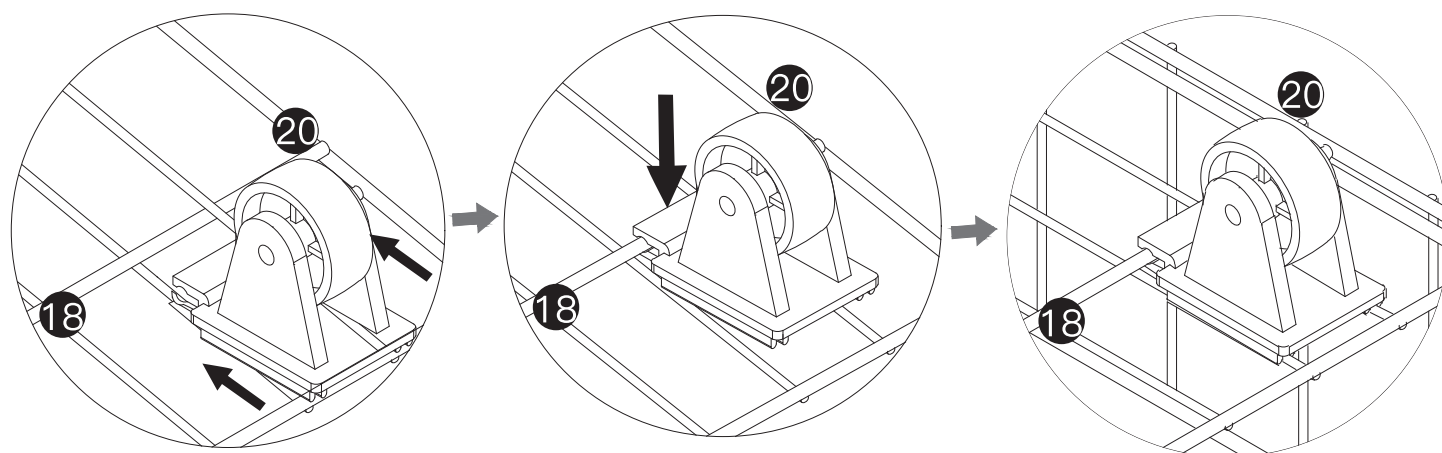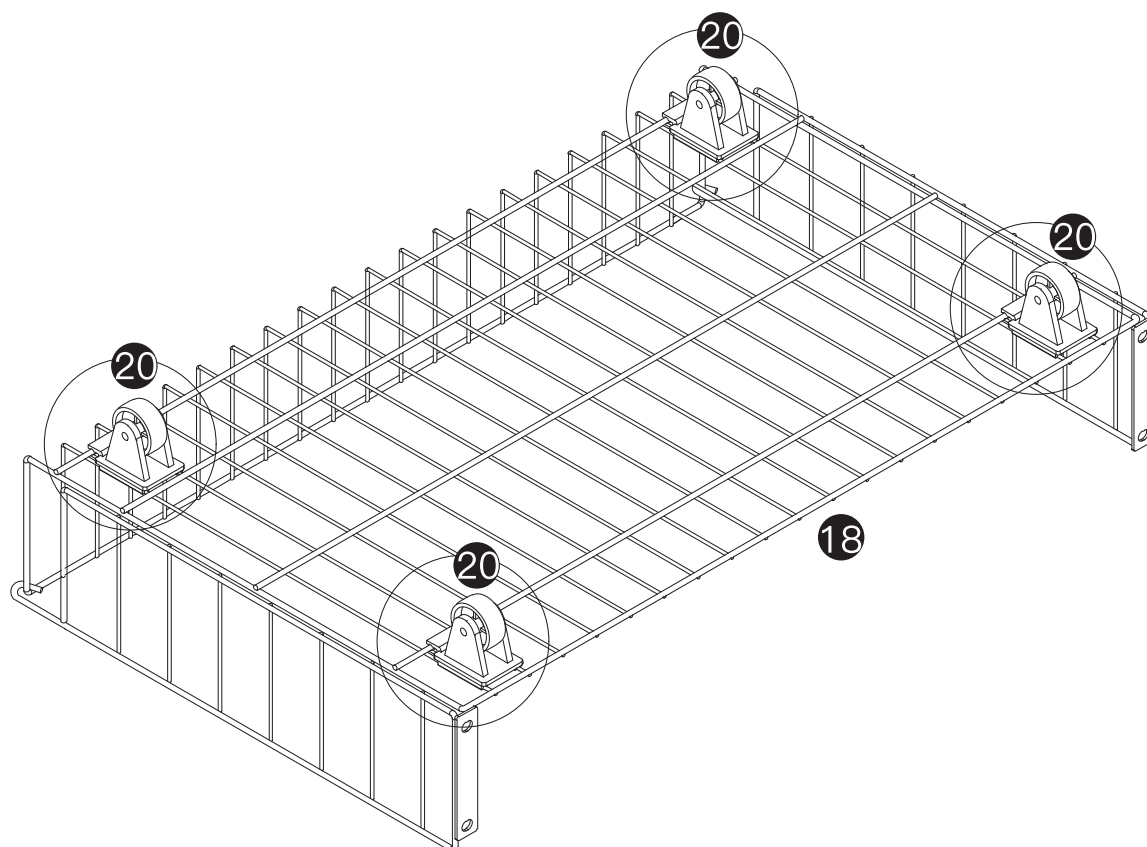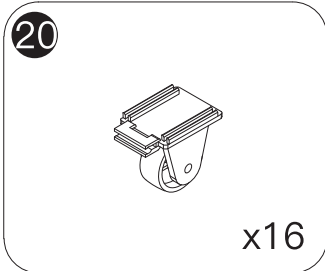




x4

STEP 24

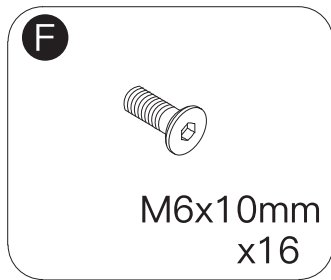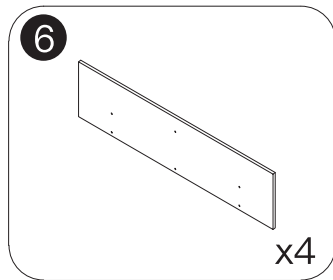





NOTICE:

Make sure the frame is installed on the shorter side of the front panel.

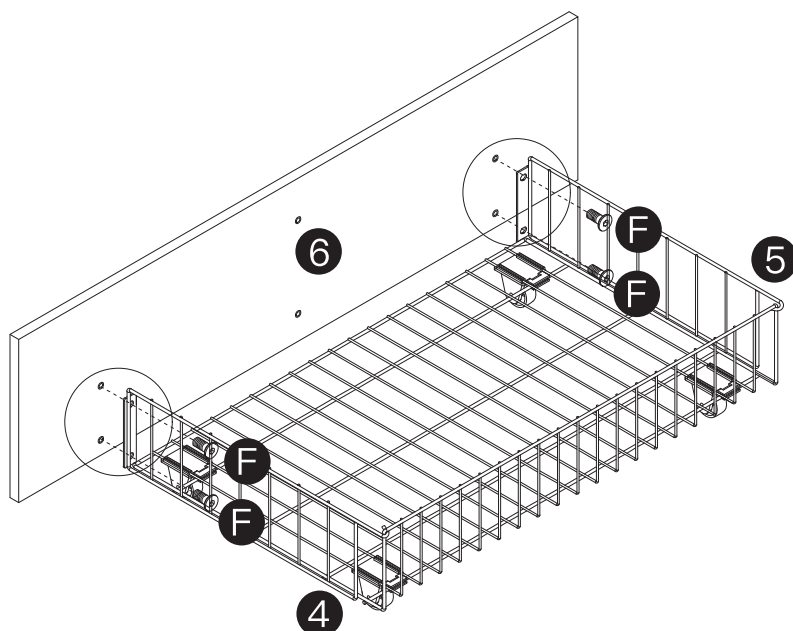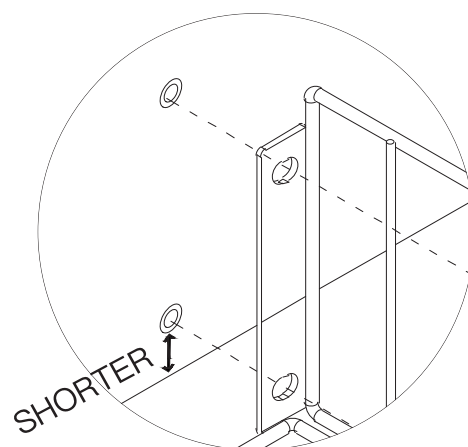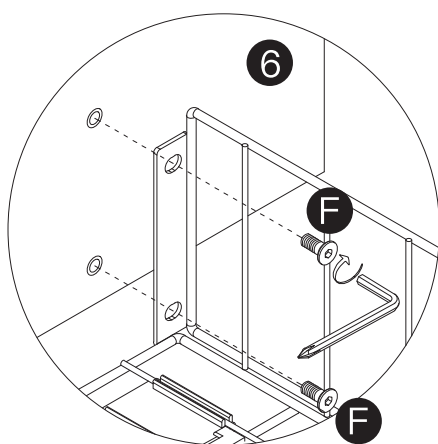

x4

STEP 25

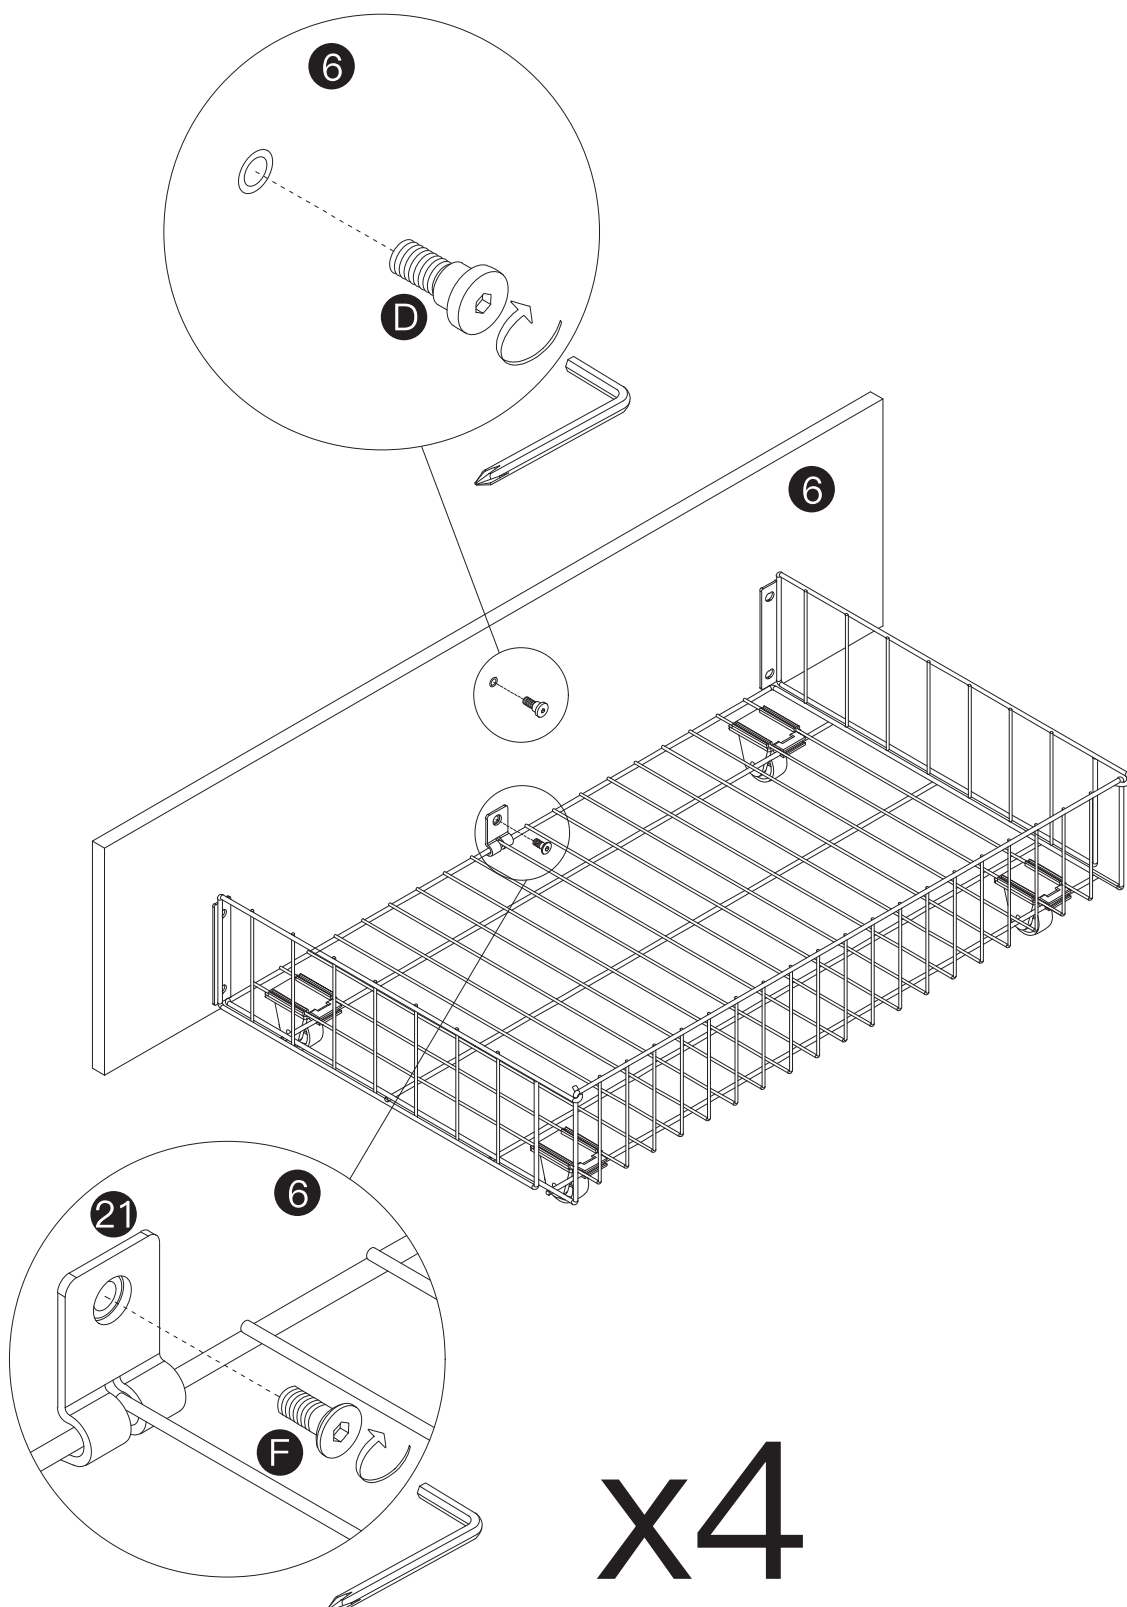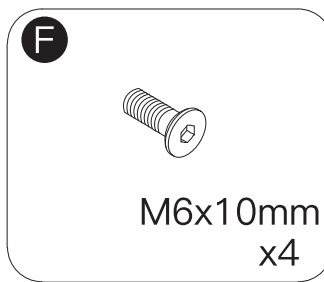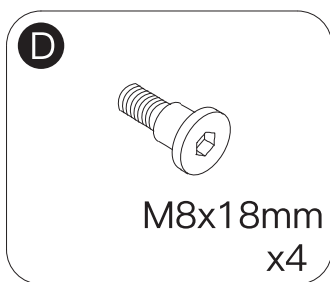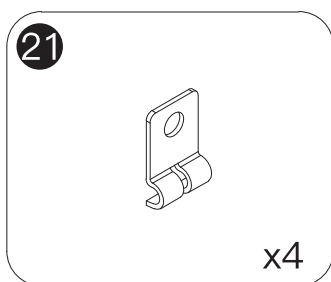

STEP 26

