



ASSEMBLY INSTRUCTIONS

BEDHOUSE WITH TRUNDLE

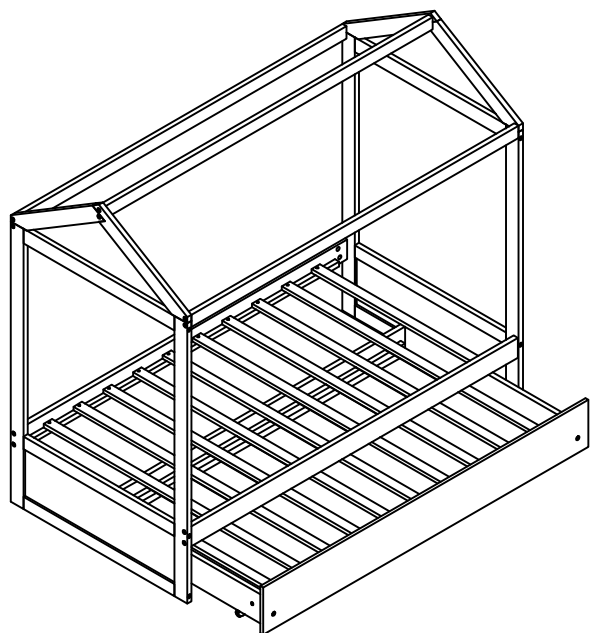











1

DETAIL VIEW



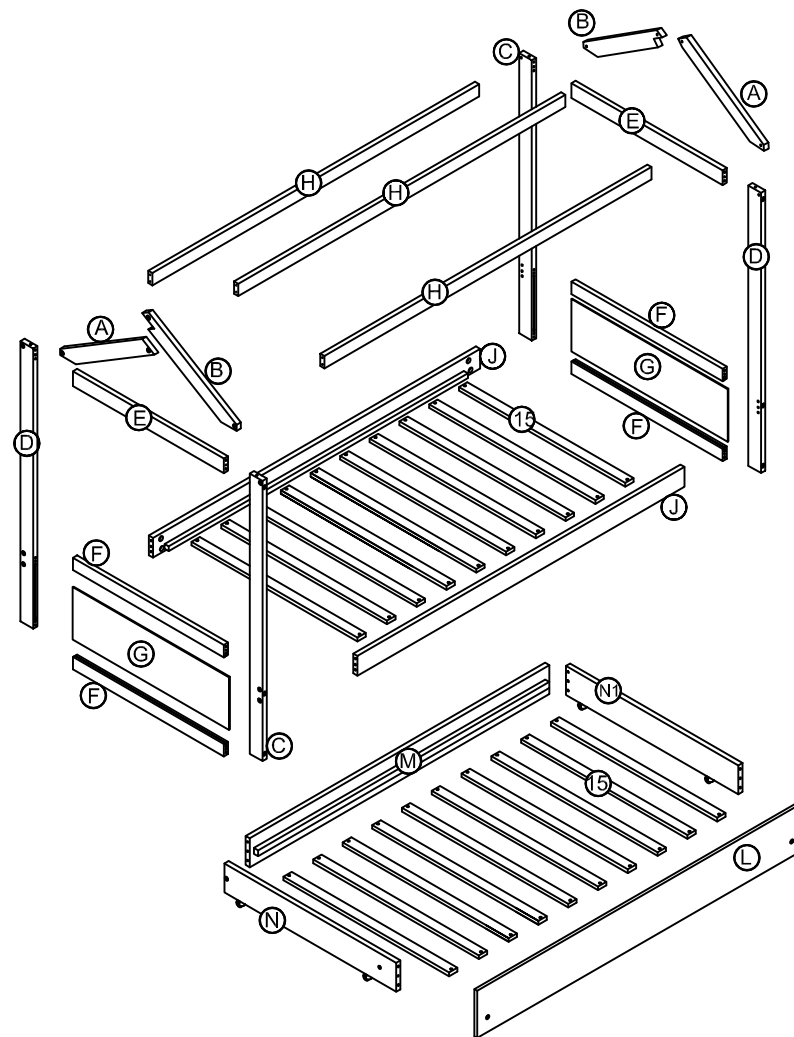


2


PART LISTS

G 	H 	J 
Side panel - 2pcs	Guard rail top 3pcs	Side rail upper -2pcs
15 	L 	M 
Upper slat - 20pcs	Drawer front - 1pc	Drawer back - 1pc
A 	B 	C 
Cap for lower HB&FB-2pcs	Cap for upper HB&FB-2pcs	Upper leg HB&FB -2pcs
D 	E 	F 
Upper leg HB&FB -2pcs	Horizontal bar HB&FB-2pcs	Horizontal bar HB&FB-4pcs
N/N1 		
Drawer Left/Right - 2pcs		

HARDWARE LISTS


1  Ø10 x 30 mm Wood dower 40pcs	2  Ø1/4" x 65 mm Hex-Head bolts (12pcs)	3  Ø6" x 110 mm Wood Screws (12pcs)
4  Ø6" x 70 mm Hex-Head bolts (12pcs)	5  Ø1/4" x 15 mm(9.5mm) Horizontal-Hole bolts 12pcs	6  # 4 x 30mm Wood Screws (40pcs)
7  # 4 x 20mm Wood Screws (8pcs)	8  Wheels Ø32 (4pcs)	9  (1/4")4.5*58mm Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

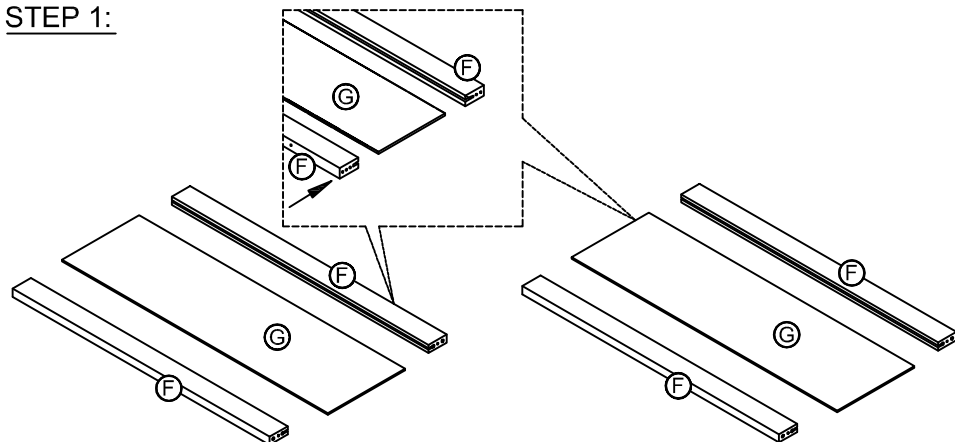


STEP 2:

01	03
24PCS	12PCS

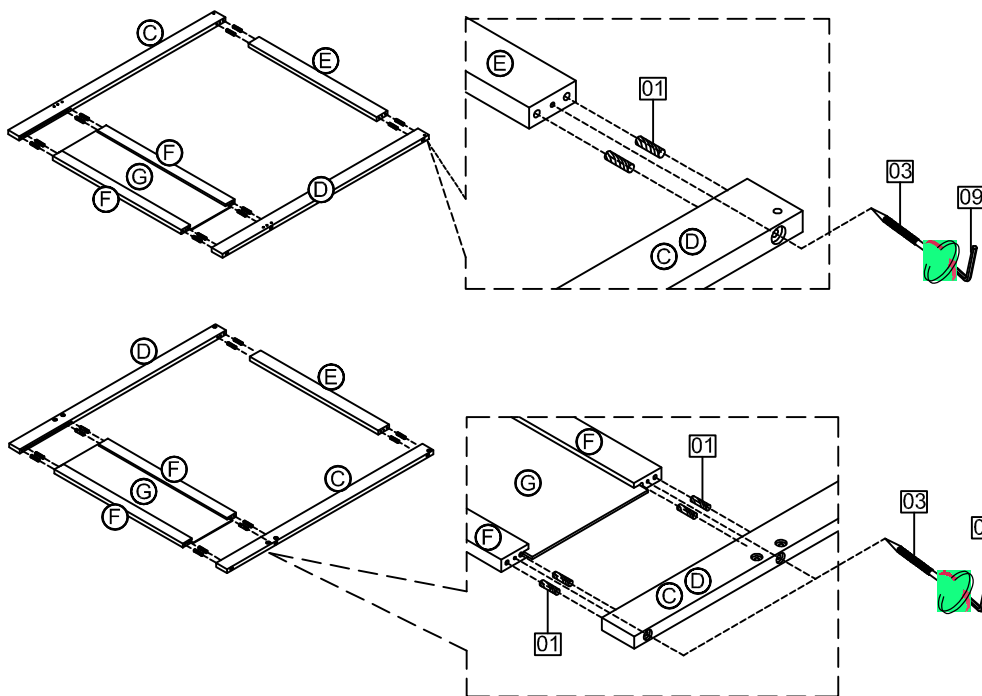

STEP 3:


05	01	02
8PCS	4PCS	8PCS

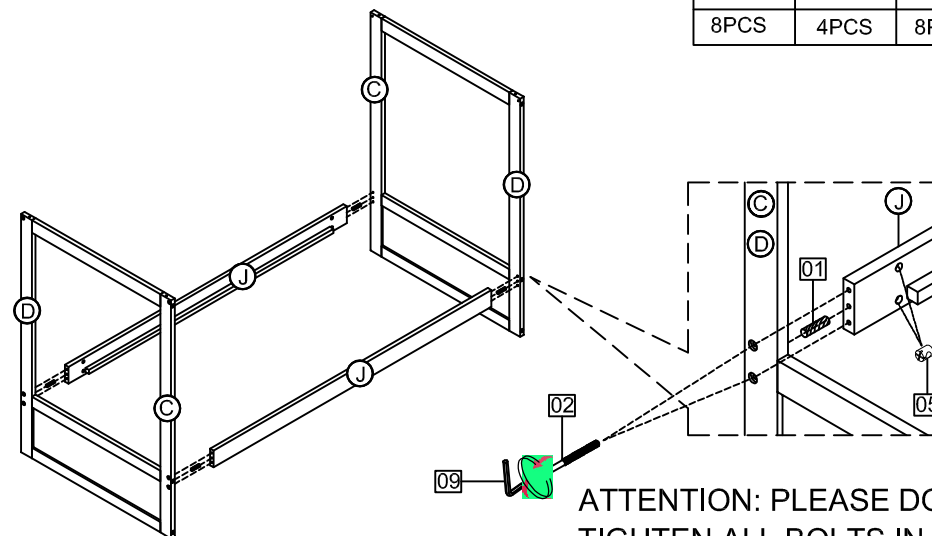


ATTENTION: PLEASE DON'T
TIGHTEN ALL BOLTS IN
THIS STEP, JUST TIGHTEN
80%

STEP 4:

04
8PCS

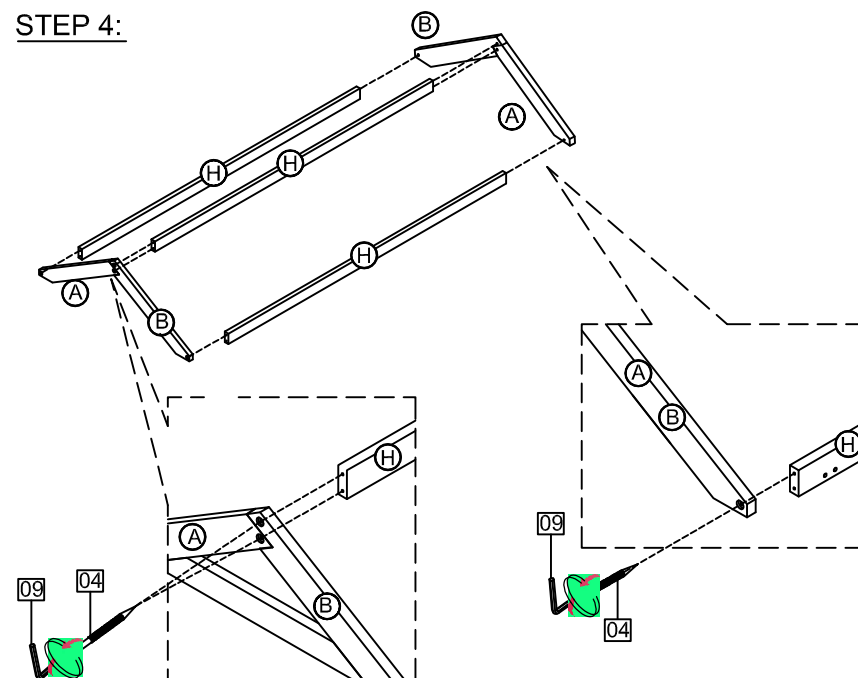


STEP 5:

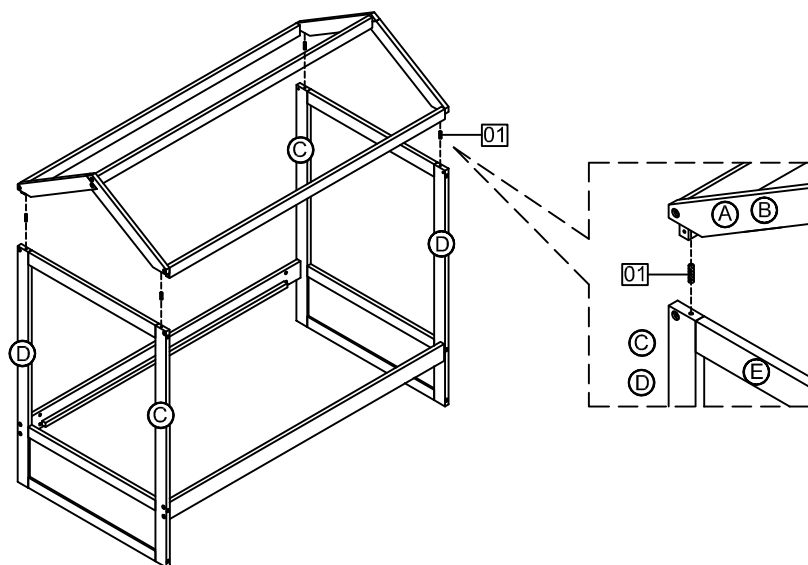


01	
4PCS	

STEP 6:

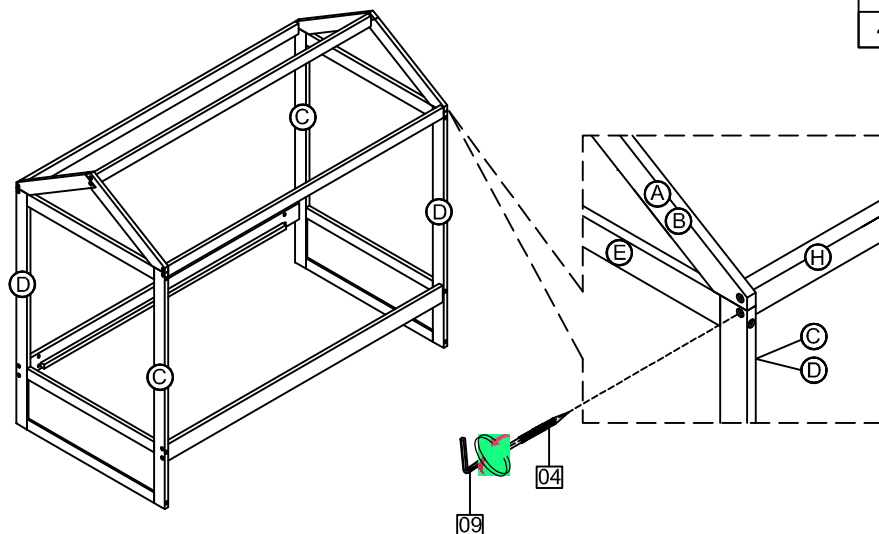

04	
	4PCS


STEP 7:

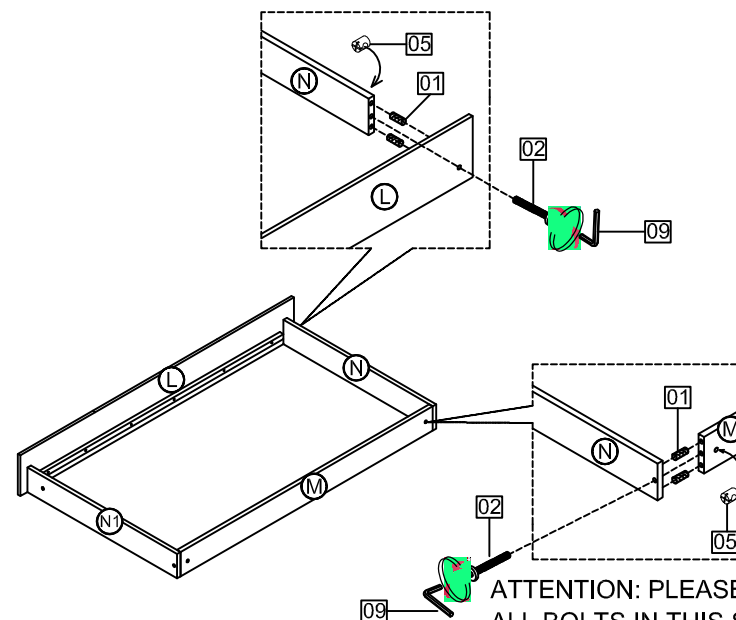

01		02	
8PCS		4PCS	
		05	
		4PCS	

ATTENTION: PLEASE DON'T TIGHTEN ALL BOLTS IN THIS STEP, JUST TIGHTEN 80%

STEP 8:

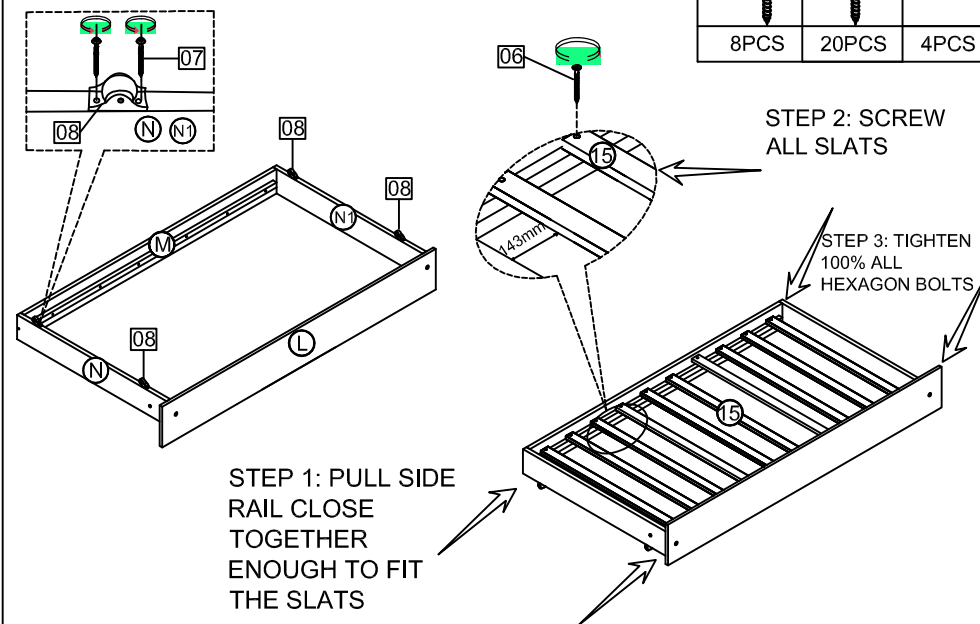

07		06		08	
8PCS		20PCS		4PCS	


STEP 2: SCREW
ALL SLATS

STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS


STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS

STEP 9:


STEP 2: SCREW
ALL SLATS



06

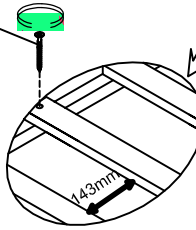

STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS

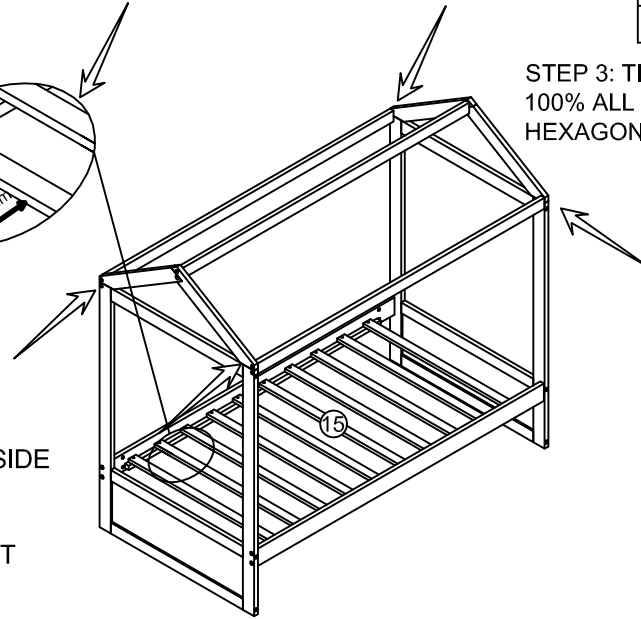

STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

STEP 10:

Assembly Complete

