

Easy to Install




1

Measure length and position bracket.



2

Attach the bracket to the wall.

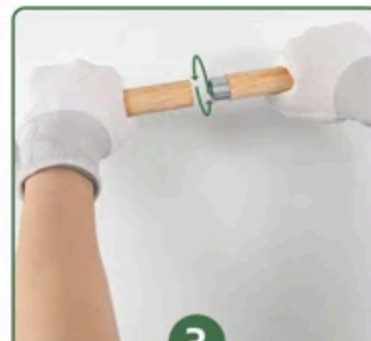

3

Connection 1-inch rod according to the window length(Horizontal Alignment)



4

After hanging the curtains pull out the telescopic rod to adjust your length and screw the finials into the ends(Adjustable).



5

Place it on the bracket and lock the screws to complete the installation.