


# Installation Instructions




Step 1.  
Connect the legs to the frame with SN.1 as shown.

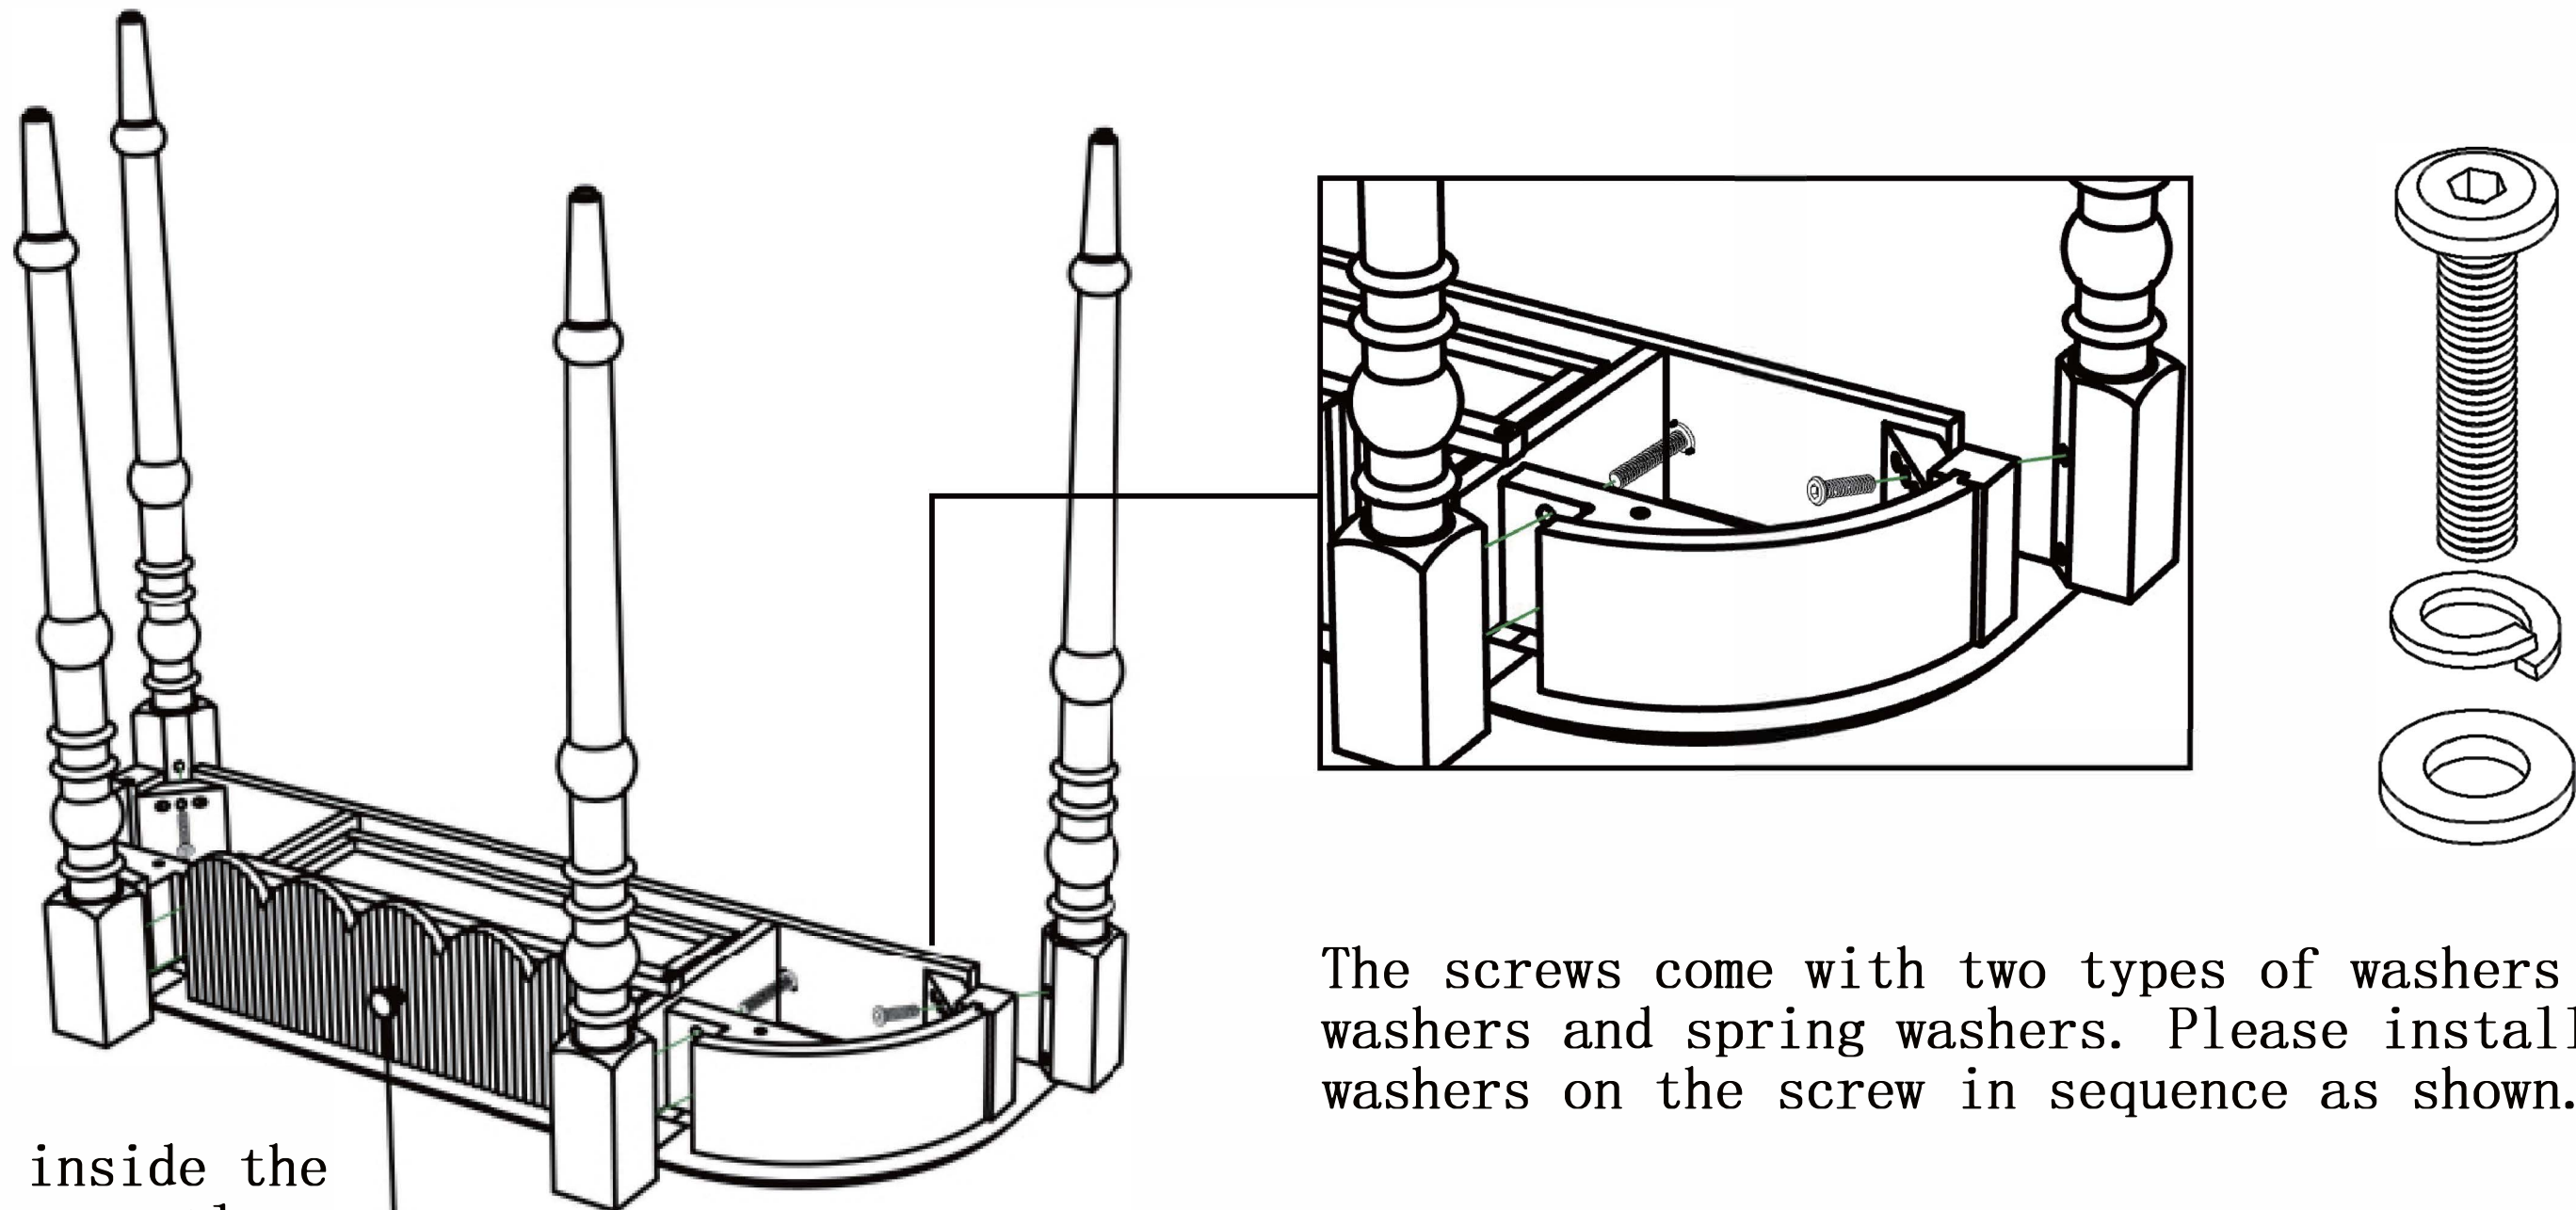


The screws come with two types of washers - flat washers and spring washers. Please install the washers on the screw in sequence as shown.

Remove the handle installed inside the drawer and then install it correctly according to the diagram.

## Installation Hardware List
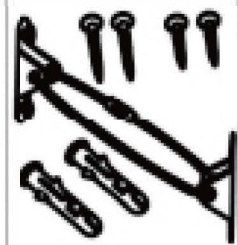
| SN | Name              | Diagram  | Spec  | Qty |
|----|-------------------|--|-------|-----|
| 1  | Allen Screw       |   | M8*50 | 8   |
| 2  | Allen Wrench      |   |       | 1   |
| 3  | Anti-Tip Hardware |  |       | 1   |
| 4  |                   |  |       |     |
| 5  |                   |  |       |     |
| 6  |                   |  |       |     |
| 7  |                   |  |       |     |
| 8  |                   |  |       |     |
| 9  |                   |  |       |     |

Step 2.  
Connect the anti-tip hardware to the table as shown, installation is complete.

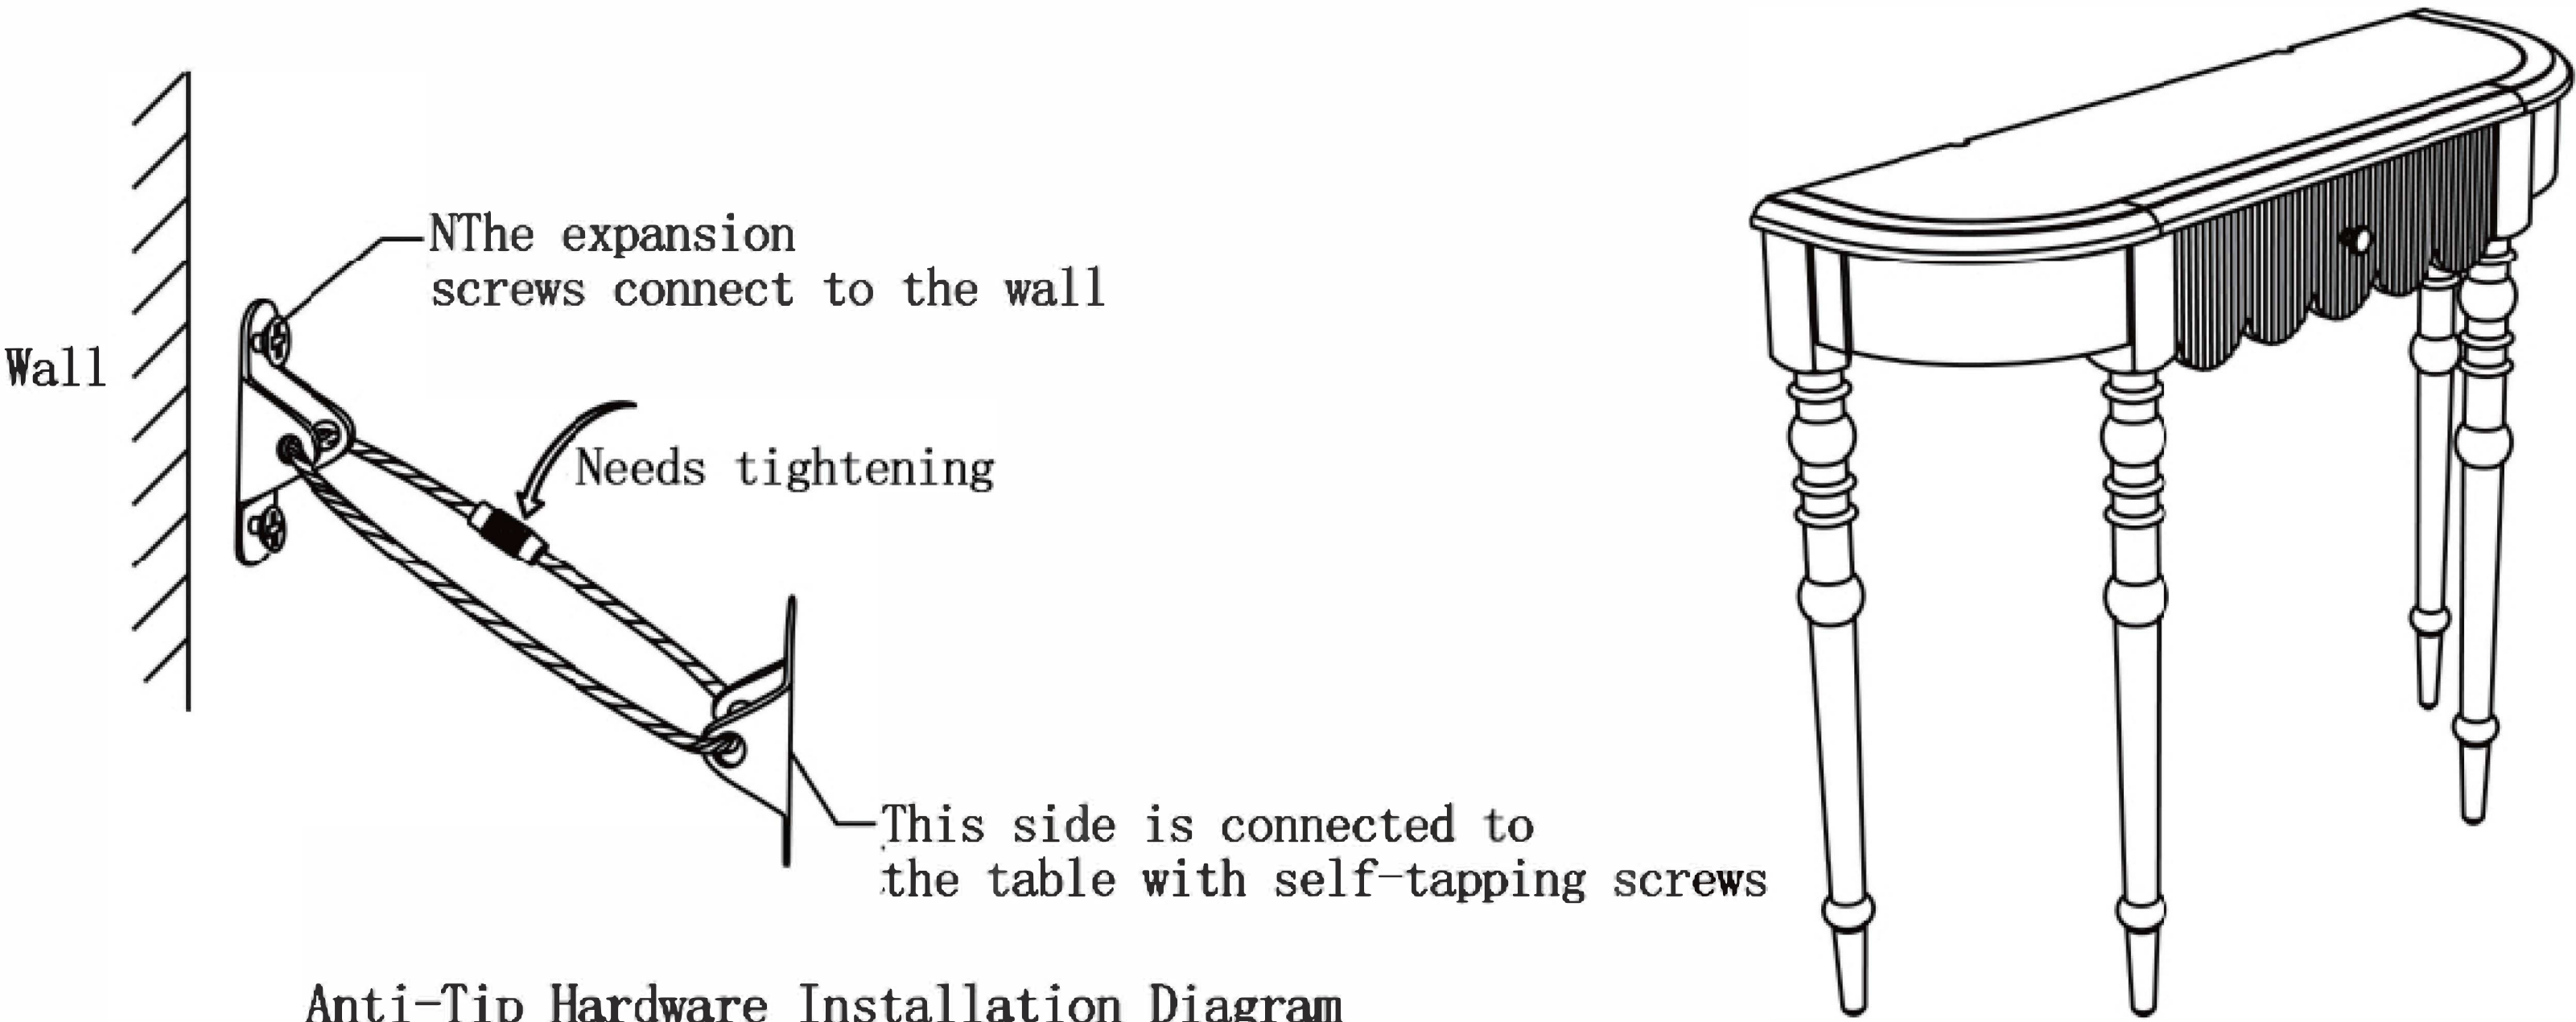

Anti-Tip Hardware Installation Diagram