

SHELF

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:





















- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.






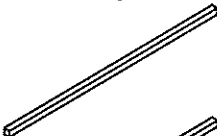
















Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION


(A) FIXED SHELF		1 PC	(K) TOP PANEL		1 PC
(B) LEFT SIDE PANEL		1 PC	(L) BASE SUPPORTER		1 PC
(C) RIGHT SIDE PANEL		1 PC	(M) BACK PANEL		1 PC
(D) LEFT FRONT LEG		1 PC	(N) REMOVABLE SHELF		1 PC
(E) RIGHT FRONT LEG		1 PC	(O) LEFT SIDE PANEL OF DRAWER		3 PCS
(F) LEFT BACK LEG		1 PC	(P) RIGHT SIDE PANEL OF DRAWER		3 PCS
(G) RIGHT BACK LEG		1 PC	(Q) REAR PANEL OF DRAWER		3 PCS
(H) BOTTOM FRAME		1 PC	(R) DRAWER BOTTOM SLAT		3 PCS
(I) TOP FRAME		1 PC	(S) BOTTOM BOARD OF DRAWER		3 PCS
(J) WOOD COLUMN		1 PC	(T) DRAWER FRONT		3 PCS

ASSEMBLY INSTRUCTION

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	LARGE CAM BOLT L=29mm		6 pcs
2	LARGE CAM LOCK $\varnothing 15\text{mm}$		6 pcs
3	SMALL WOODEN DOWEL $\varnothing 8 \times 25\text{mm}$		12pcs
4	THREADED SCREW $\varnothing 7 \times 48\text{mm}$		8pcs
5	LARGE MACHINE SCREW $\varnothing 6 \times 60\text{mm}$		4pcs
6	LARGE WOOD SCREW $\varnothing 4 \times 50\text{mm}$		6pcs
7	NAIL		30pcs
8	BRACKET $\varnothing 5\text{mm}$		12pcs
9	MEDIUM WOOD SCREW $\varnothing 4 \times 30\text{mm}$		8pcs
10	SMALL WOOD SCREW $\varnothing 4 \times 25\text{mm}$		5pcs
11	SMALL CAM BOLT L=20mm		8pcs
12	SMALL CAM LOCK $\varnothing 12\text{mm}$		8pcs
13	LARGE WOODEN DOWEL $\varnothing 6 \times 30\text{mm}$		4pcs
14	METAL HANDLE $48 \times 48 \times 14\text{mm}$		2pcs
15	SHORT MACHINE SCREW $\varnothing 4 \times 10\text{mm}$		2pcs
16	ANTI-TIP HARDWARE		1 pc
17	SMALL ANTI-TIPPING SCREW $\varnothing 4 \times 25\text{mm}$		1 pc
18	WALL ANCHOR SCREW $\varnothing 5 \times 40\text{mm}$		1 pc
19	PLASTIC WALL ANCHOR $\varnothing 8 \times 40\text{mm}$		1 pc
20	GLUE 10g		1 pc

ASSEMBLY INSTRUCTION


- ①Screw 1 into A;
- ②Align B,C with A; put 2 into B,C and screw down.

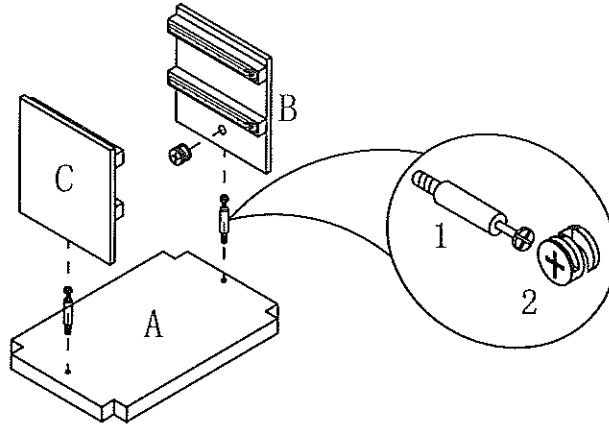

STEP1


STEP2

- ①Screw 1 into D,E,F,G; 3 drop 20 and insert A,B,C.
- ②Align D,E,F,G with A,B,C; put 2 into B,C and screw down.

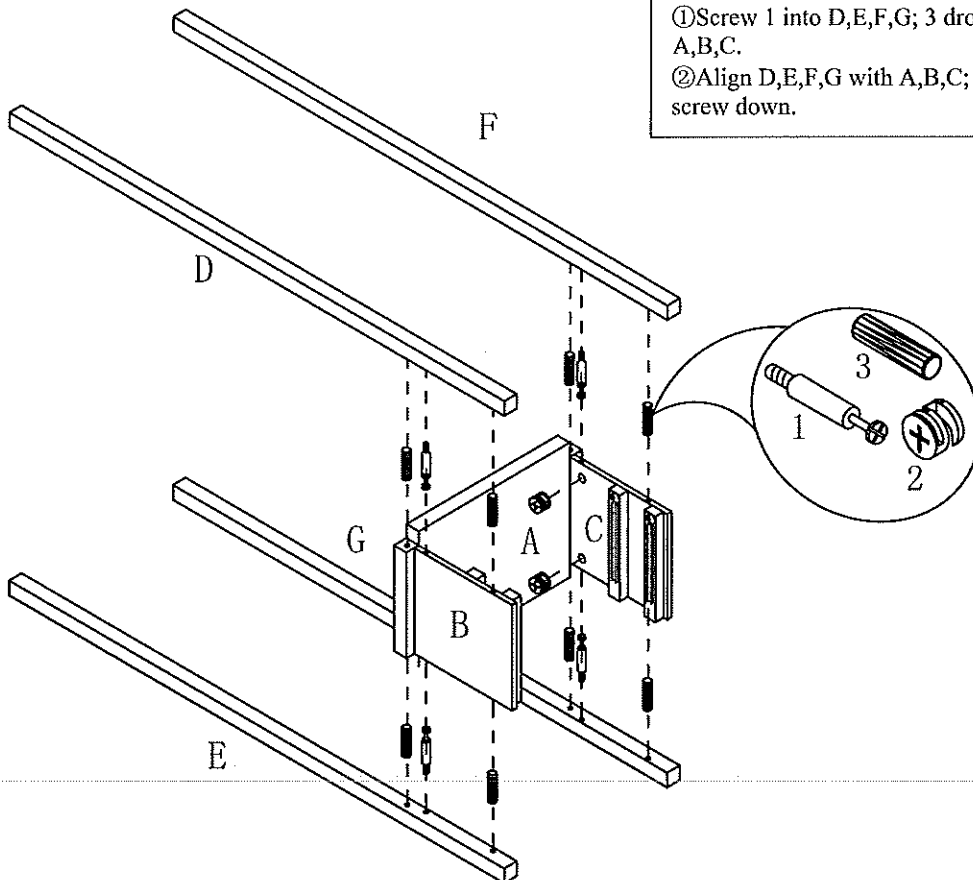


ASSEMBLY INSTRUCTION

- ① 3 drop 20 and insert B,C;
- ② Align H with B,C; 4 through H to B,C and screw down.
- ③ Align I with D,E,F,G; 4 through I to D,E,F,G and screw down.

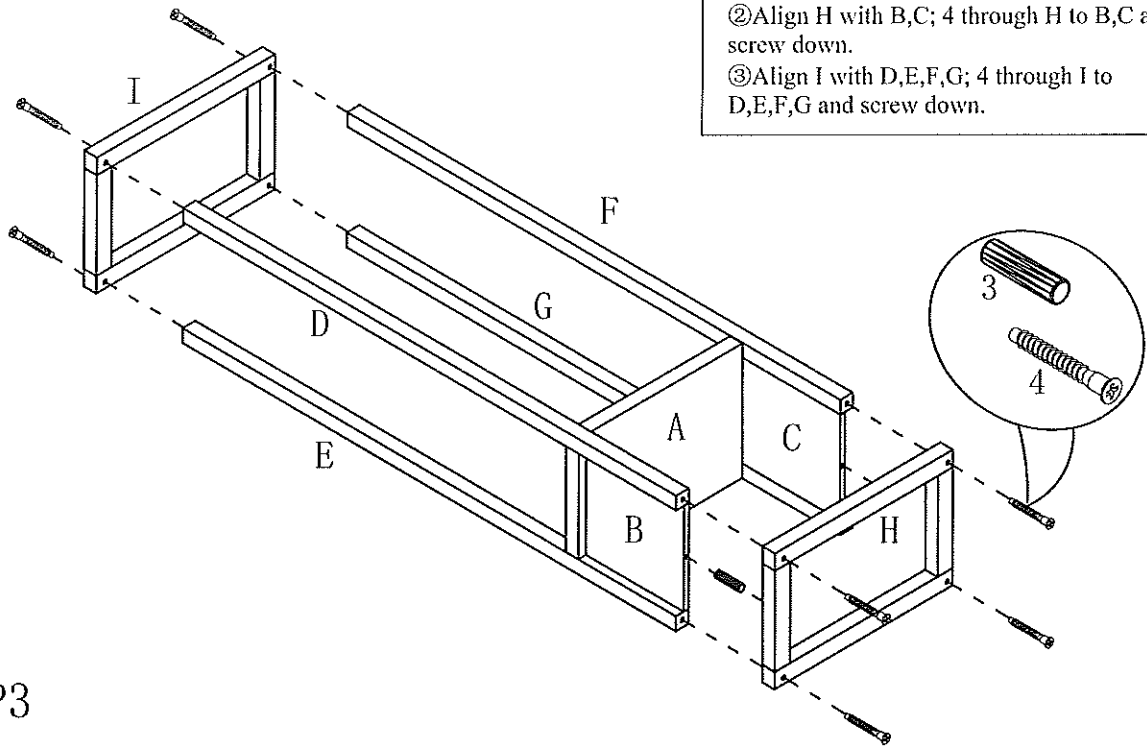

STEP3


STEP4

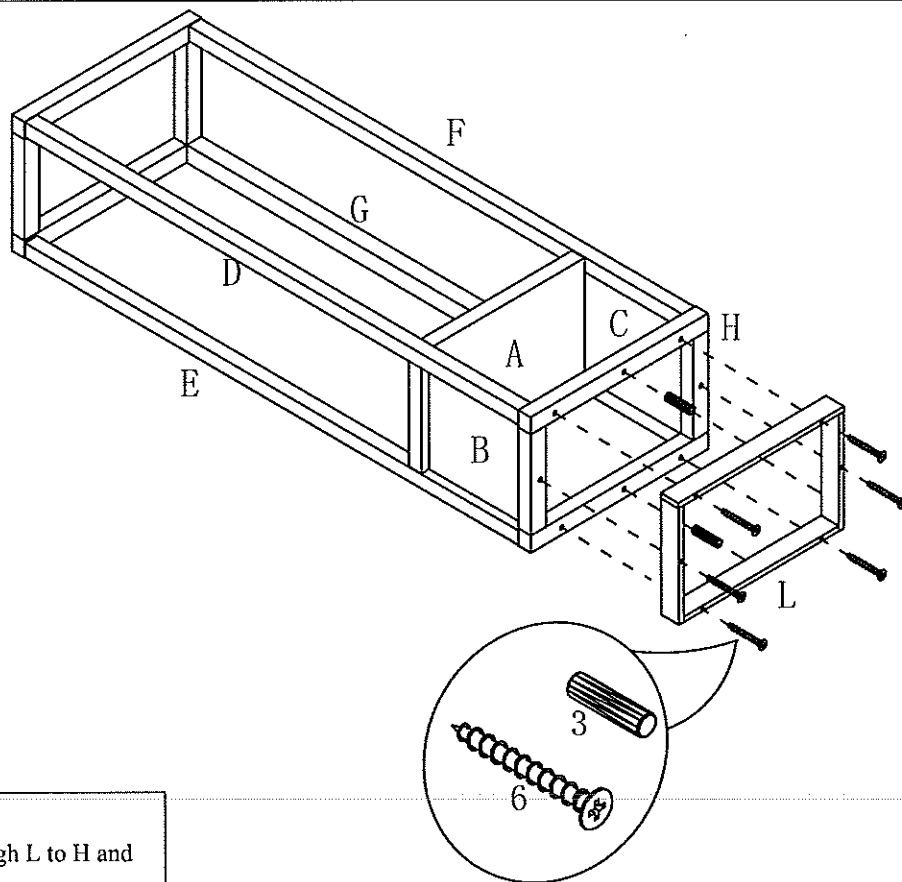

- ① 3 drop 20 and insert H;
- ② Align L with H; 6 through L to H and screw down.


ASSEMBLY INSTRUCTION

7 through M to E,G,H,I, A and nail down tightly.

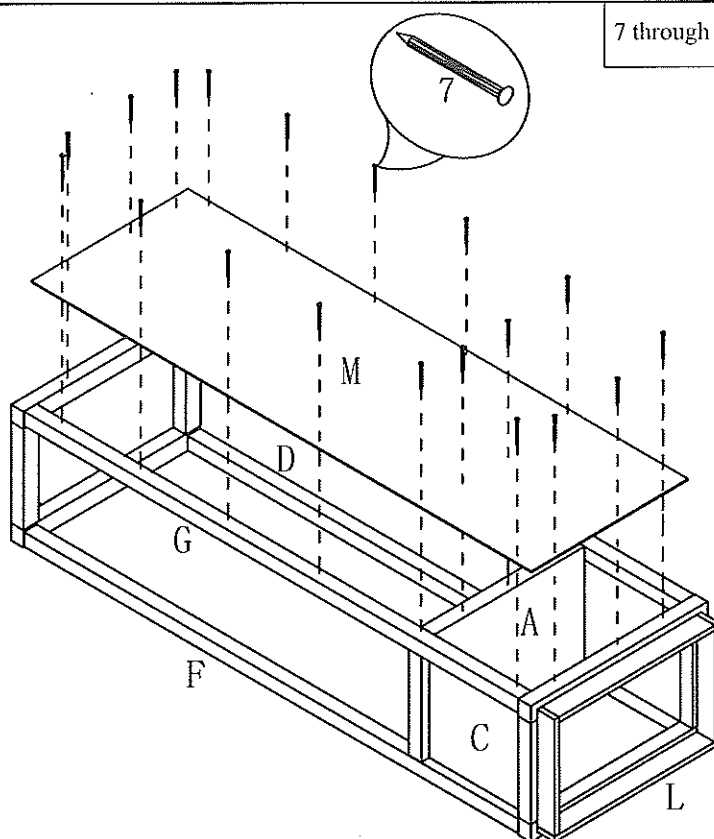

STEP5


STEP6

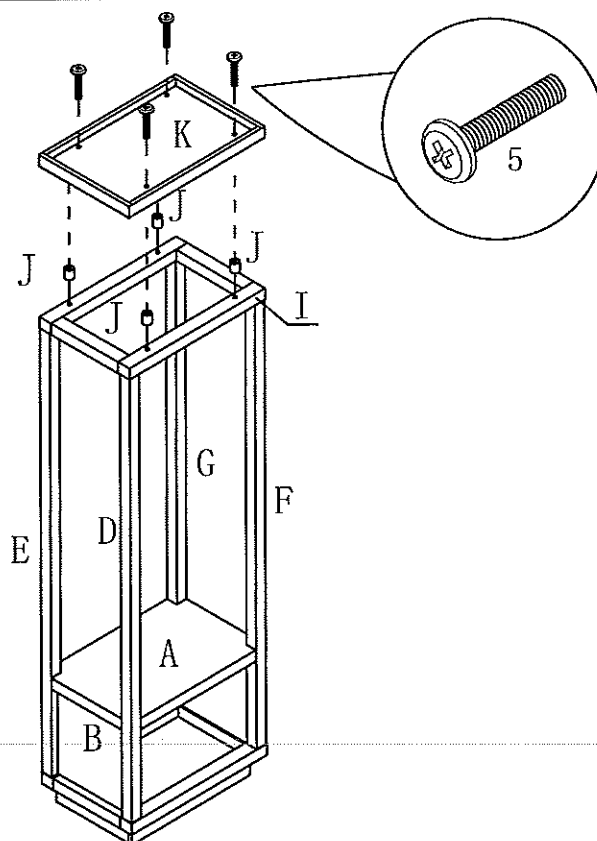

- ①Align J with K,I.
- ②5 through K, J, to I and screw down.

ASSEMBLY INSTRUCTION


- ①9 through O to Q and screw down.
- ②9 through P to Q and screw down.

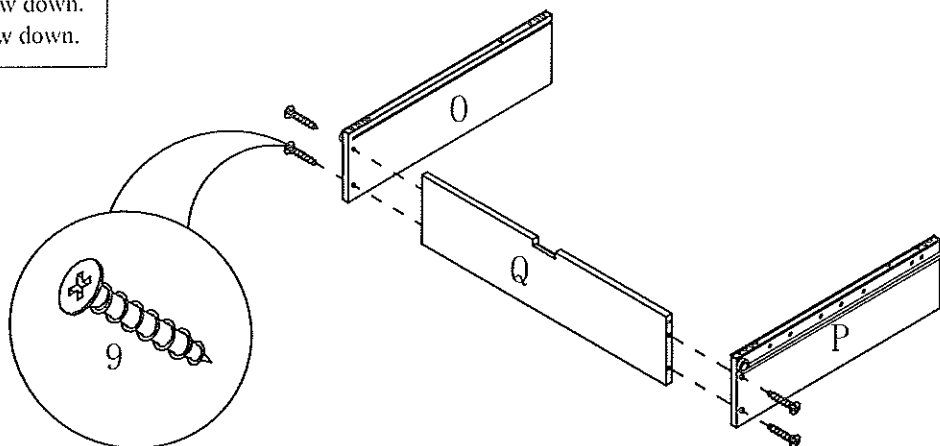


STEP7

STEP8

- ①Insert S to the groove of O,P and arrive the groove of Q.
- ②10 through R to Q and screw down.

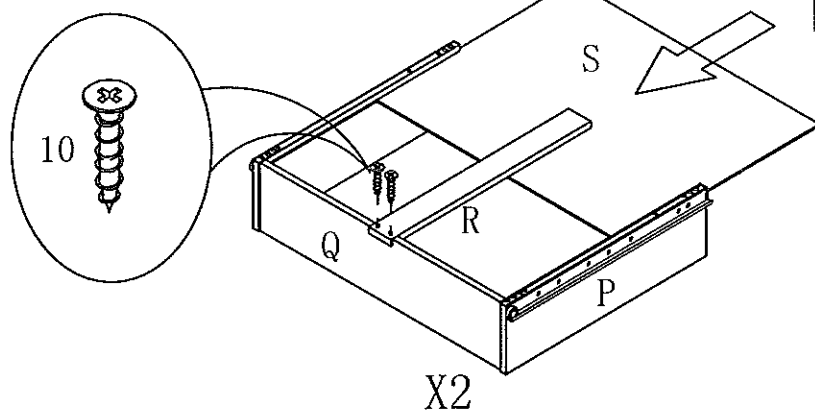


STEP9

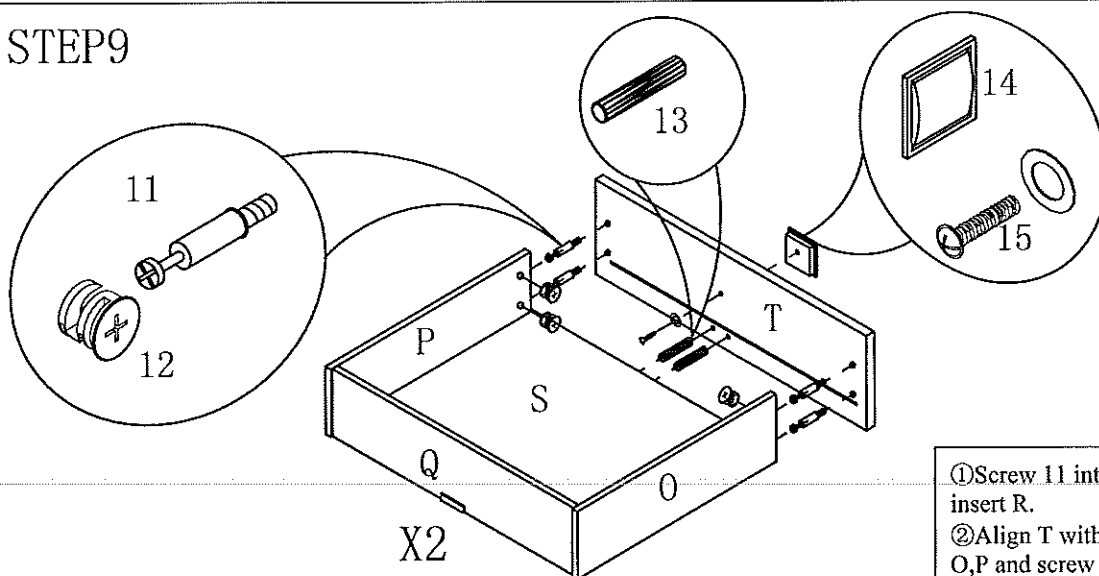

- ①Screw 11 into T, 13 drop 20 and insert R.
- ②Align T with O,P,R; put 12 into O,P and screw down.



ASSEMBLY INSTRUCTION

- ①Insert 8 into D,E,F,G.
- ②Put N onto the 8.

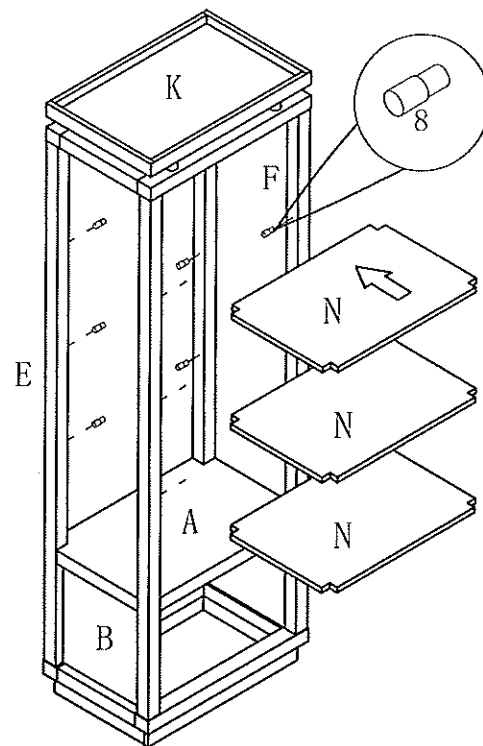

STEP10

STEP11

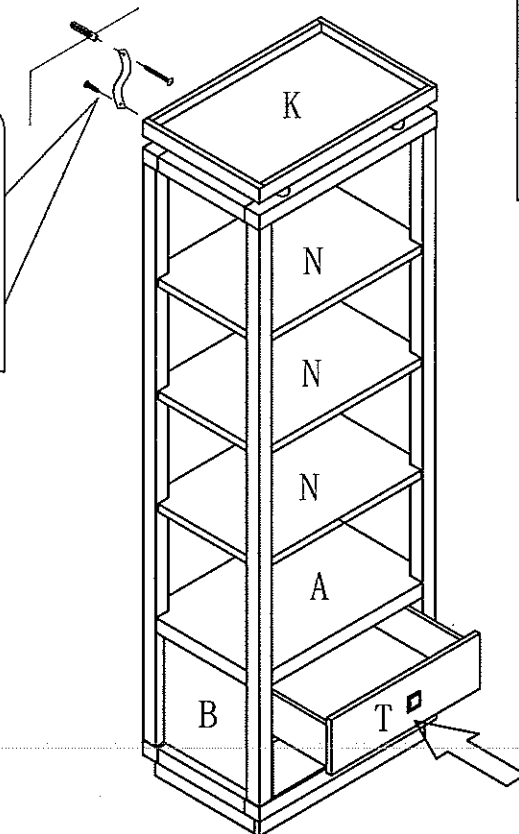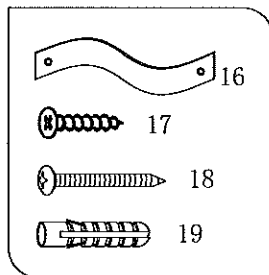

- ①Put the drawer into the position
- ②Drill a Hole in the wall parallel with K, knock 19 into the hole.
- ③17 through one side of 16 to K and screw down. 18 through the other side of 16 to 19 and screw down.