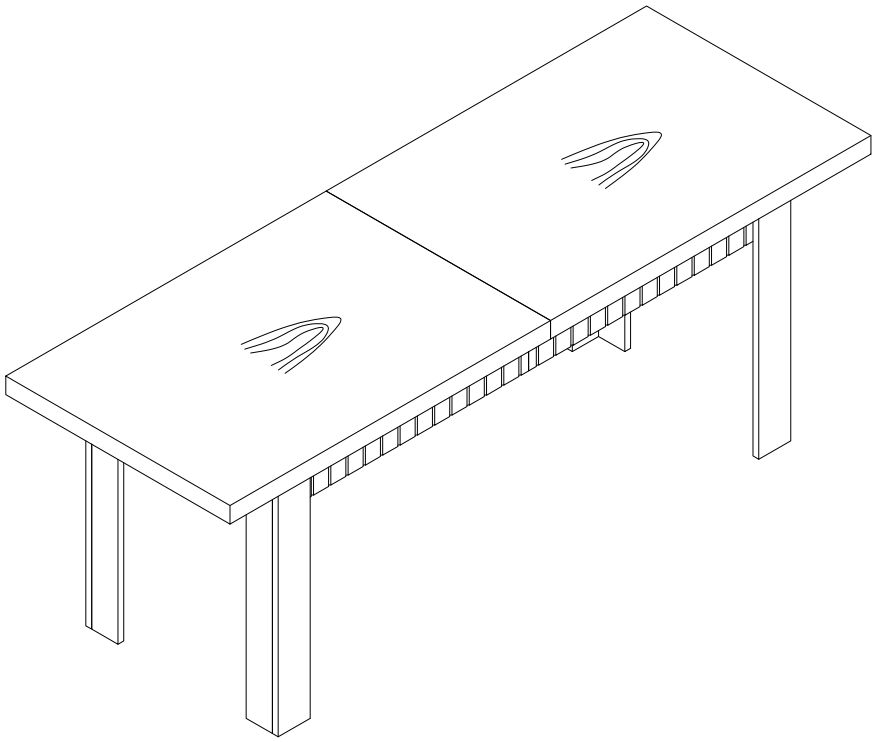
Assembly Instructions



Dining Table

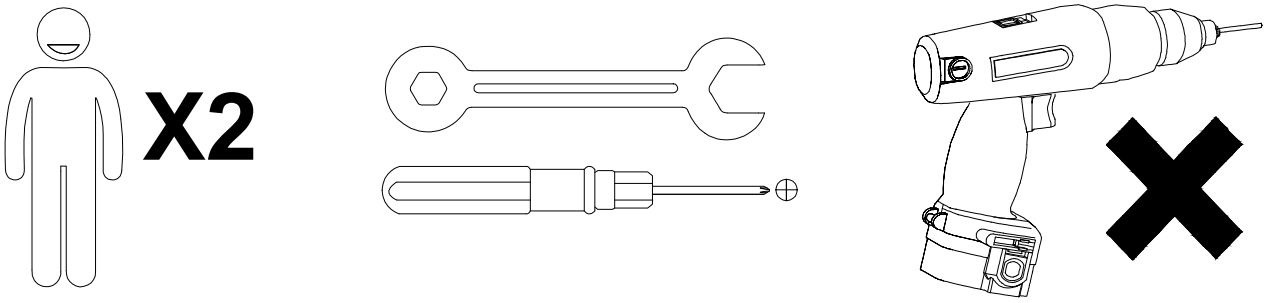
Contact Us

We're here to help you.


Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.




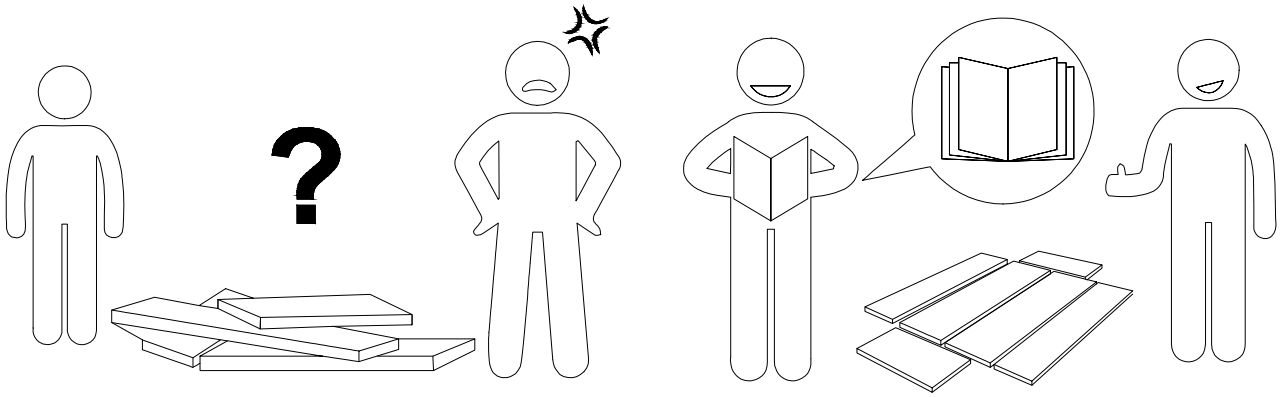
We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.




AVOID SCRATCHES

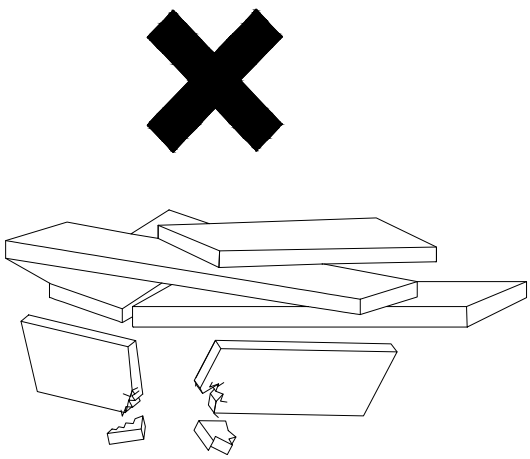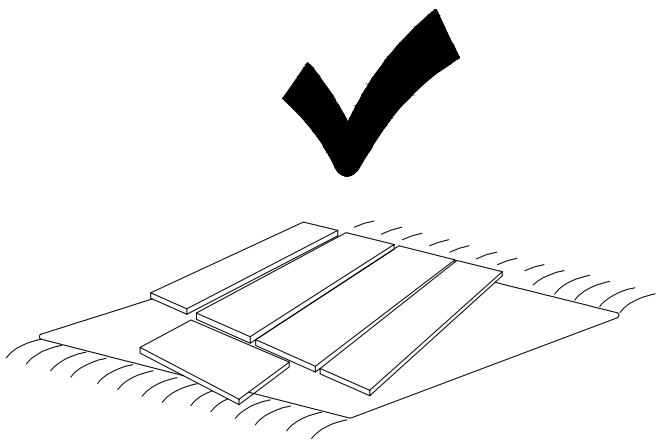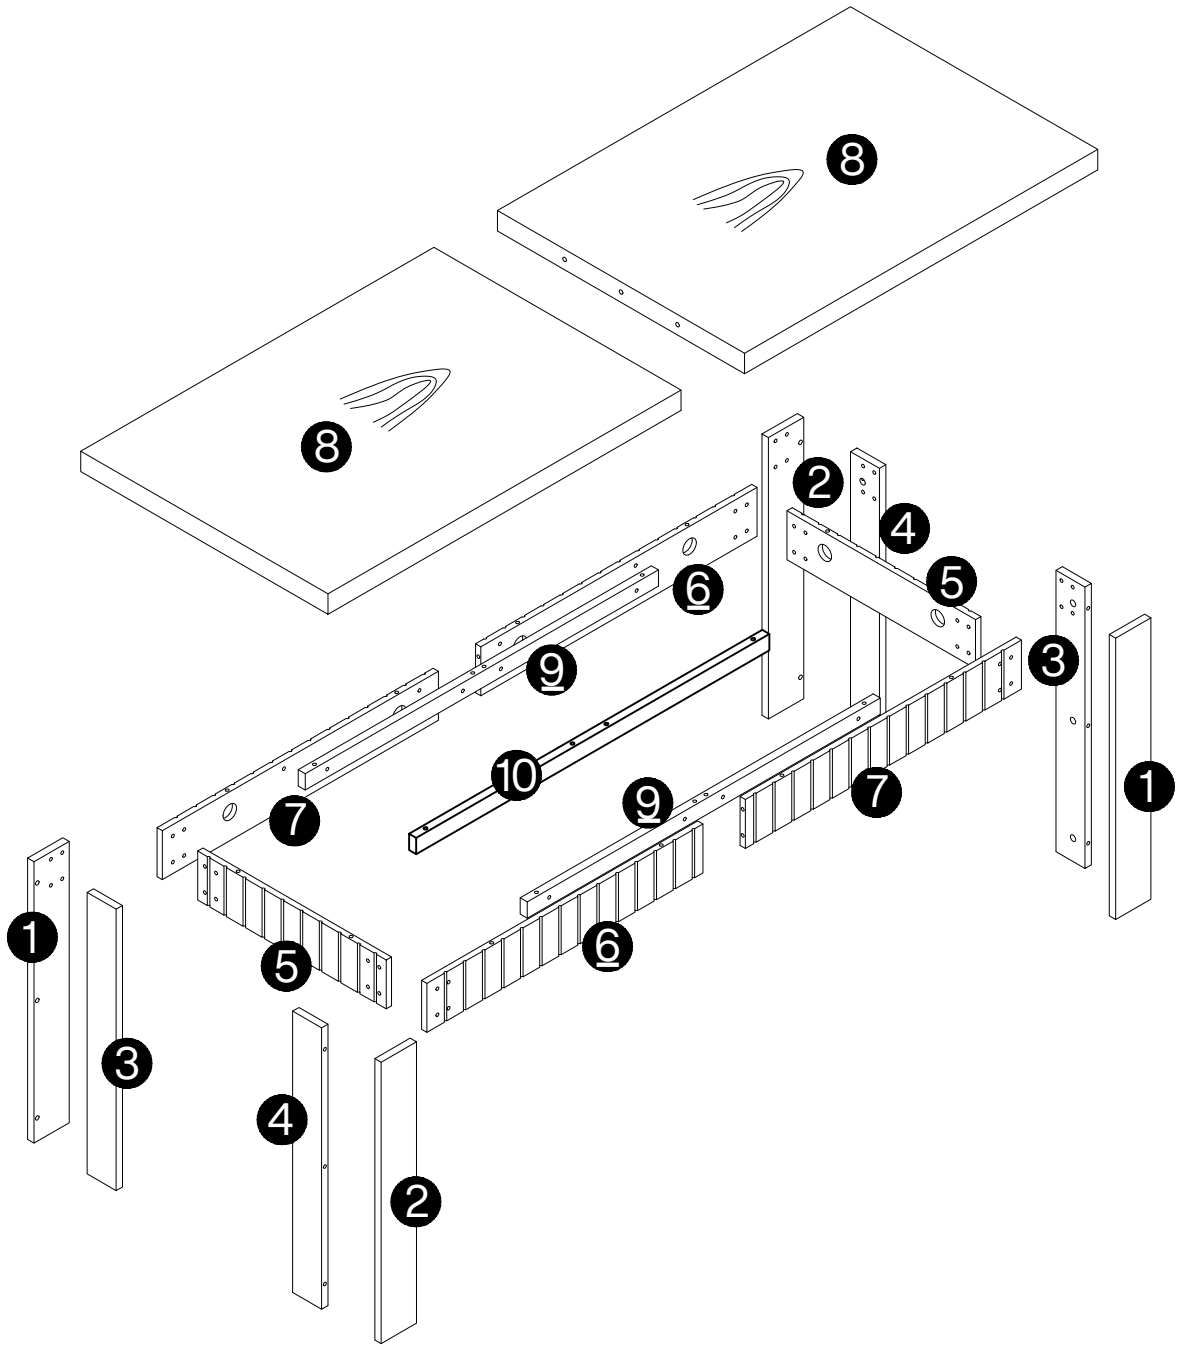In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.






















⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

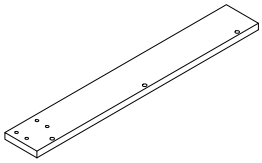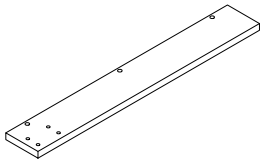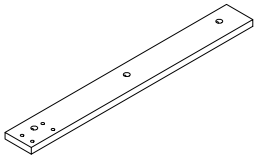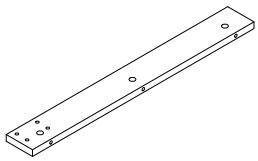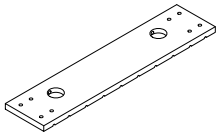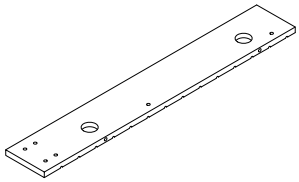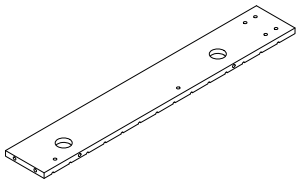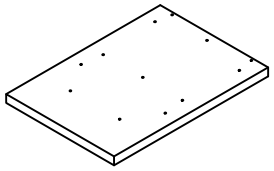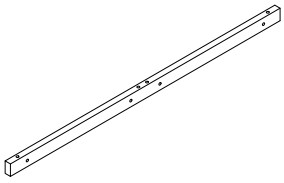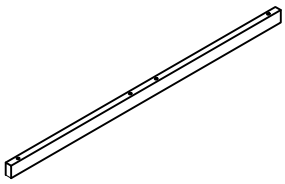Parts List

1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs
5  2 pcs	6  2 pcs	7  2 pcs	8  2 pcs
9  2 pcs	10  1 pc		


Hardware List

A	B	C	D	E	F	G
 M6x40mm	 Ø15x12mm	 Ø8x30mm	 M6x25mm	 M6x30mm	 M6x55mm	 M6x30mm
12 pcs	12 pcs	4 pcs	32 pcs	8 pcs	12 pcs	12 pcs


H	I	J	K	L	M	N
 M6x10x5	 M10	M6x70mm	 Ø14x4mm	 M4	 Ø10x40mm	 Ø21mm
12 pcs	1 pc	12 pcs	8 pcs	1 pc	3 pcs	8 pcs

Installation of Cams and Pins

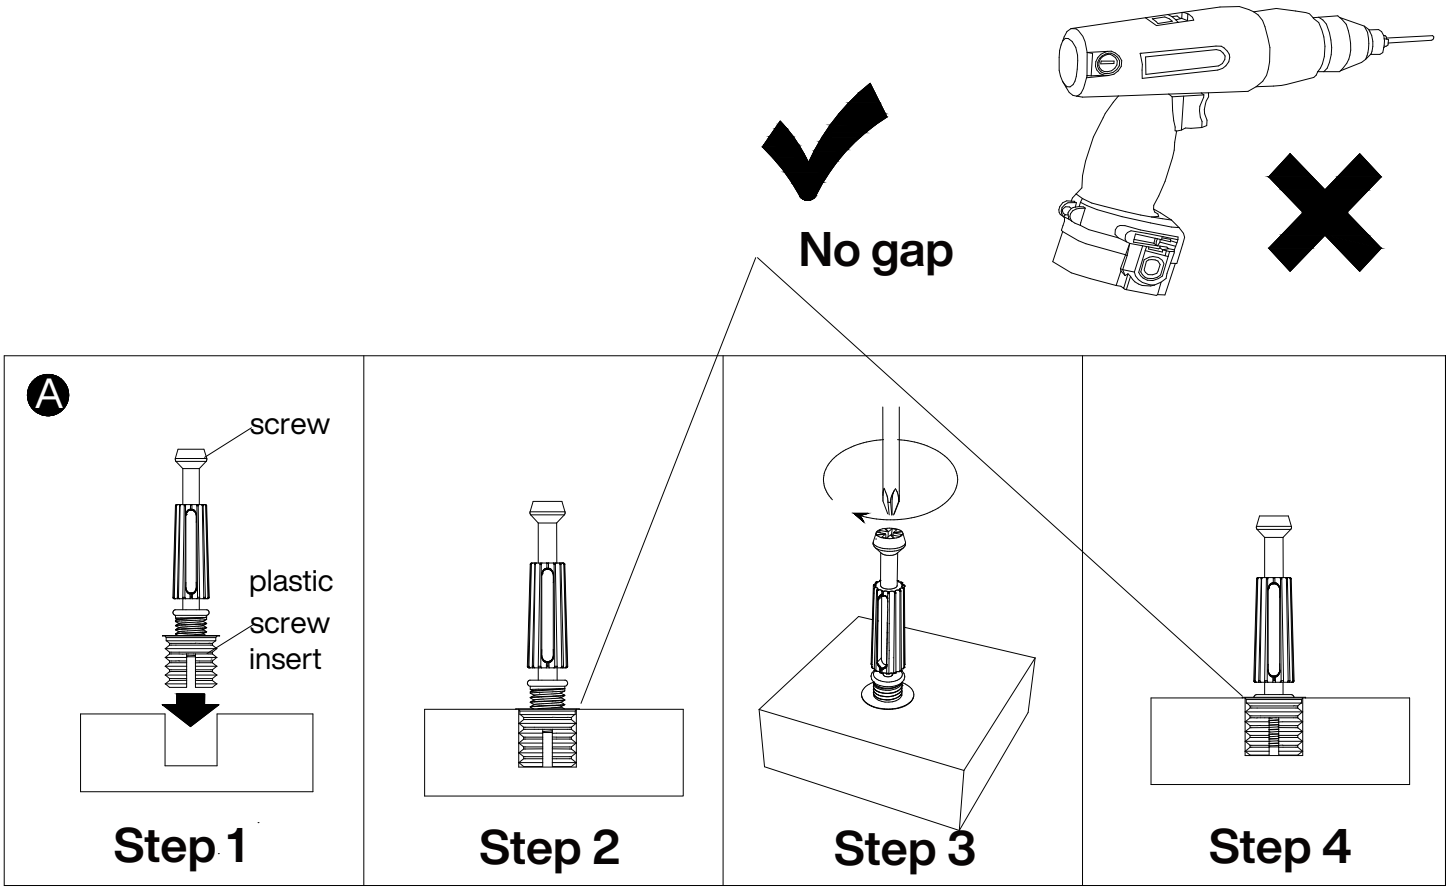Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.




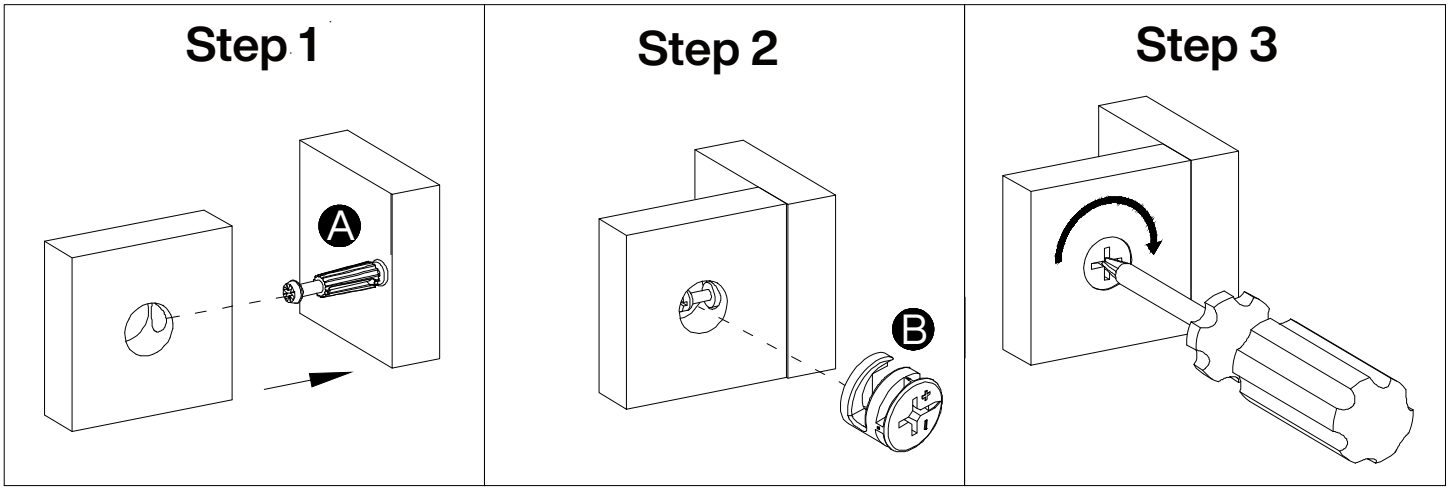Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.




1

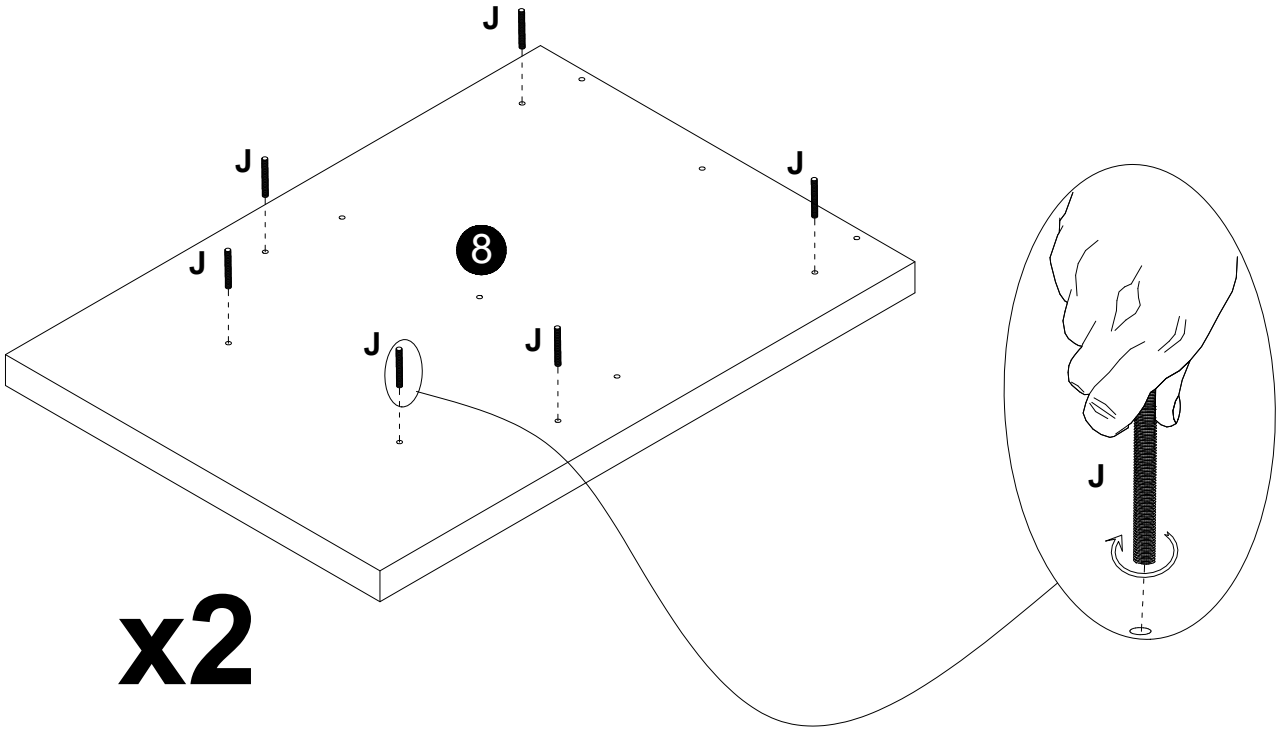
J
M8x70mm
12 pcs



2

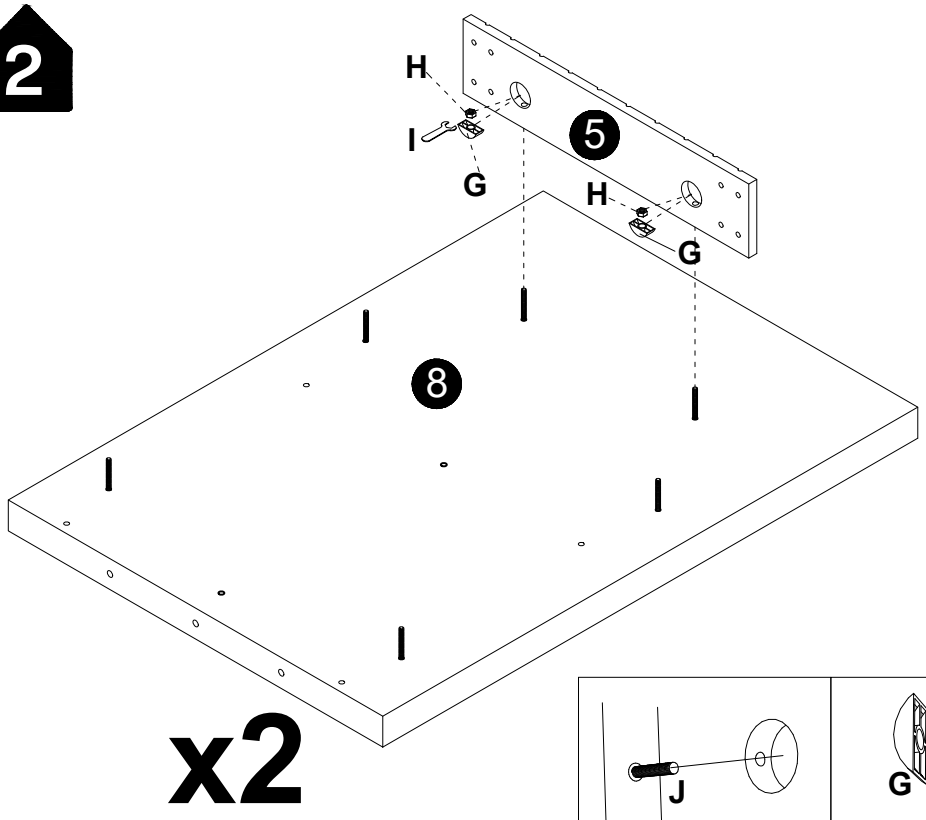


G	H	I
		
M6x30mm	M6x10x5mm	M10
4 pcs	4 pcs	1 pc

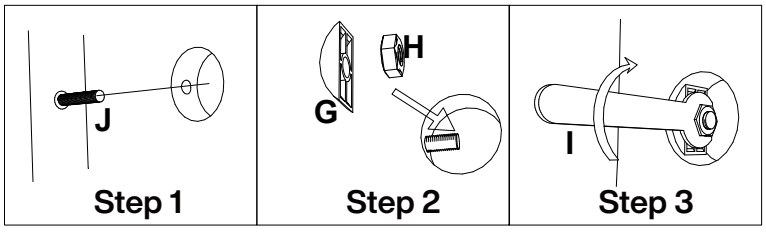



3


G	H
	
M6x30mm	M6x10x5mm
8 pcs	8 pcs

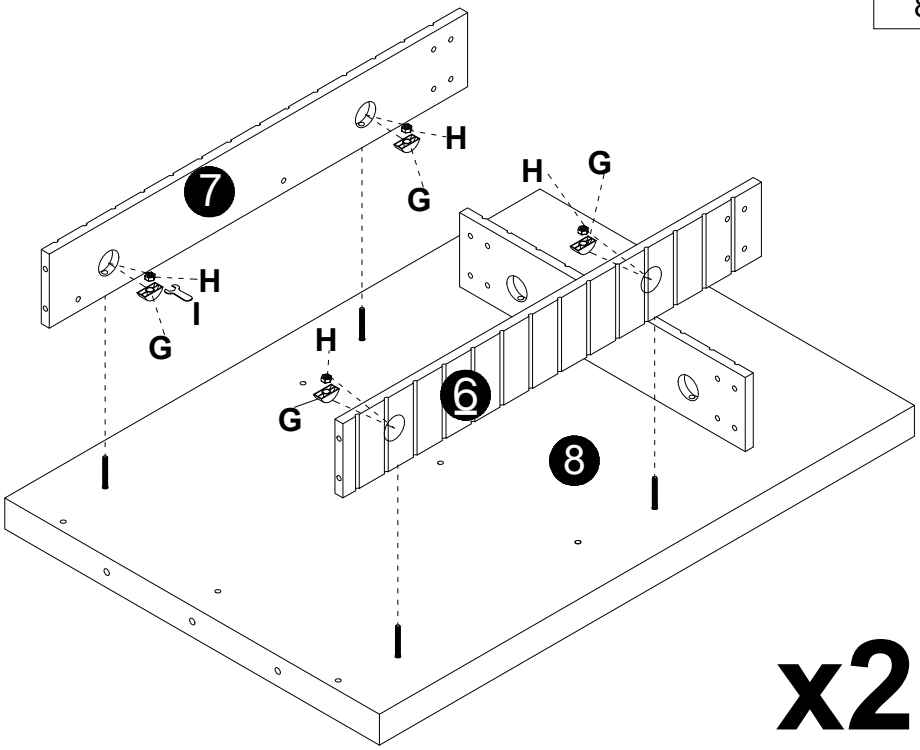


x2

4

C	M
	
Ø8x30mm	Ø10x40mm
4 pcs	3 pcs

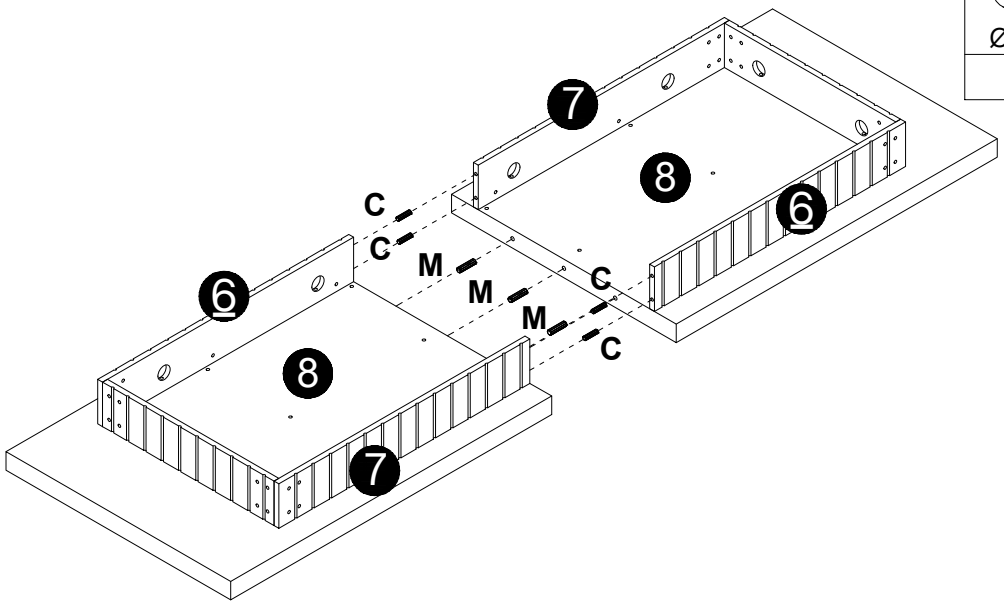


5

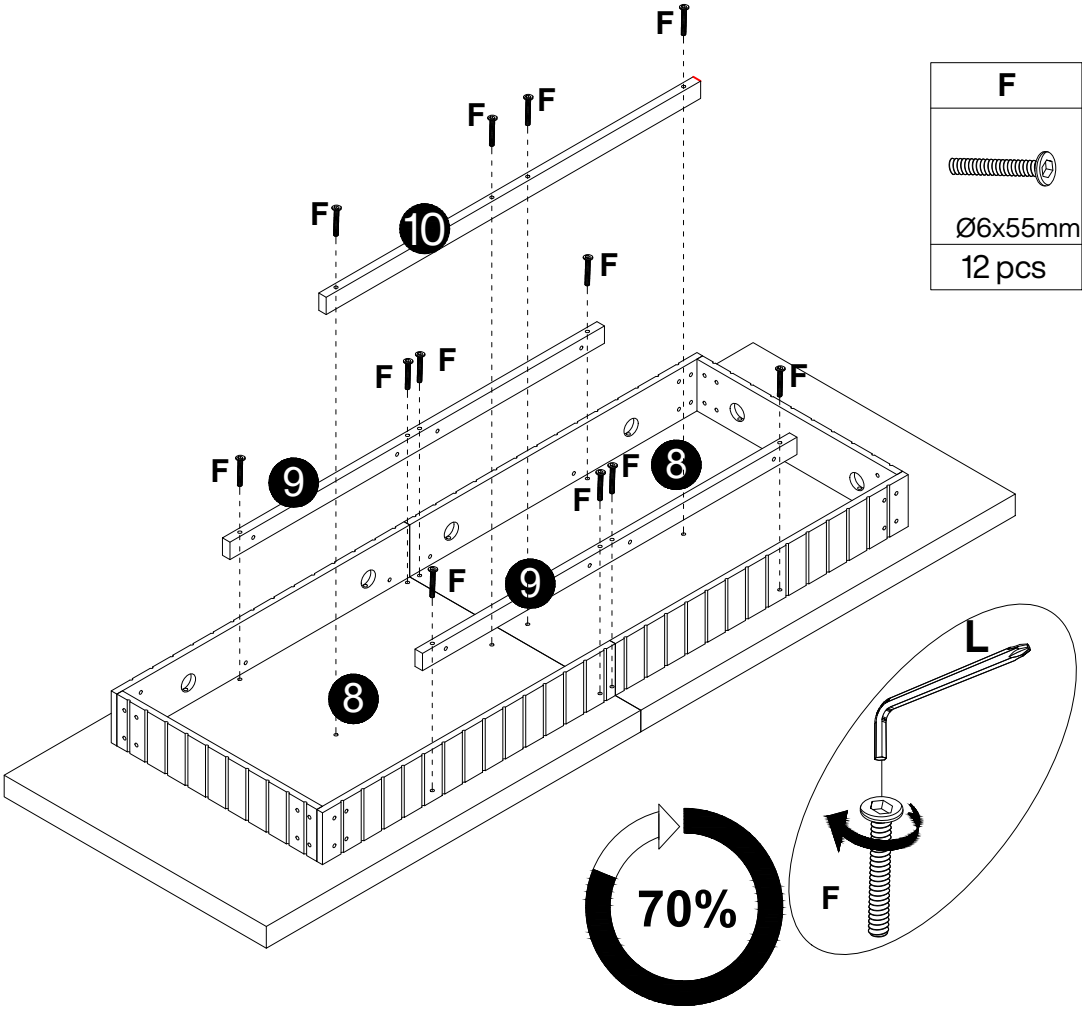

F	L
Ø6x55mm	M4
12 pcs	1 pc


pre-drill 70%

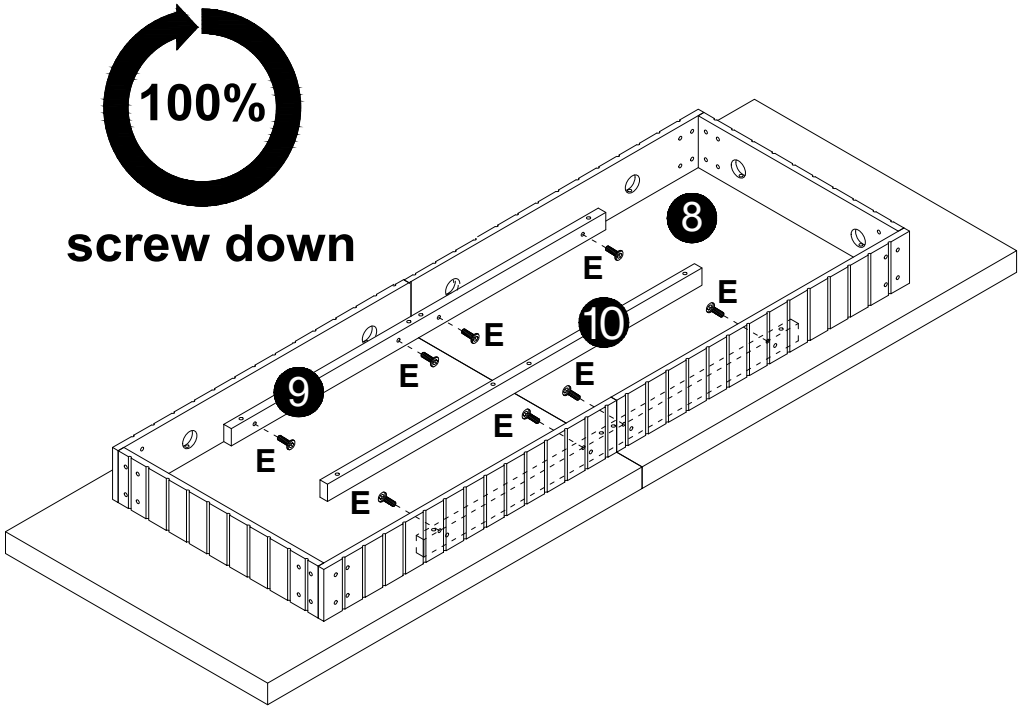6




E
Ø6x30mm
8 pcs

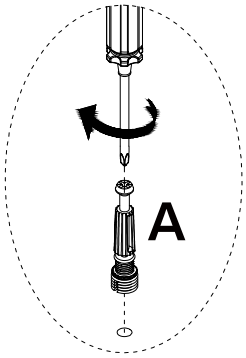7



A

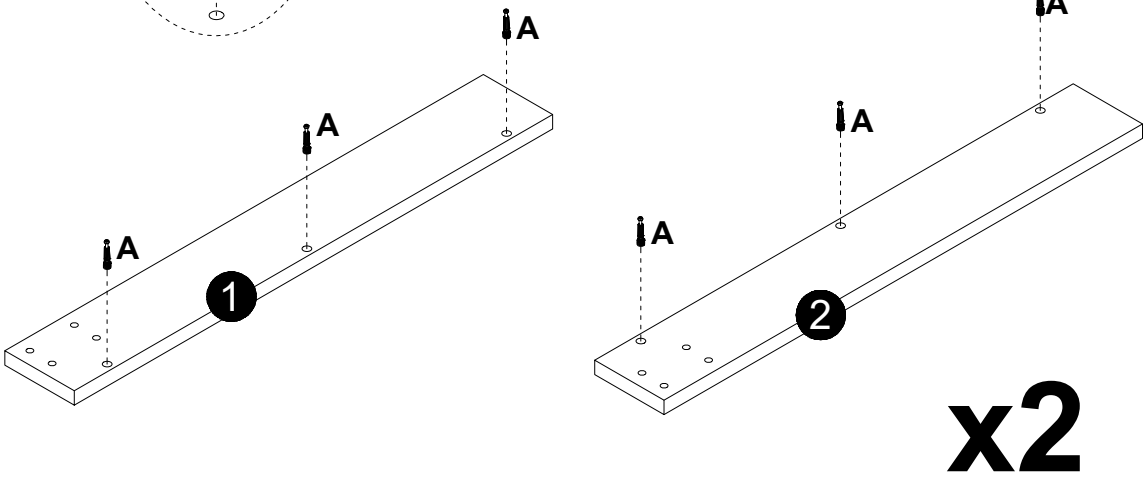
M6x40mm
12 pcs




8


B

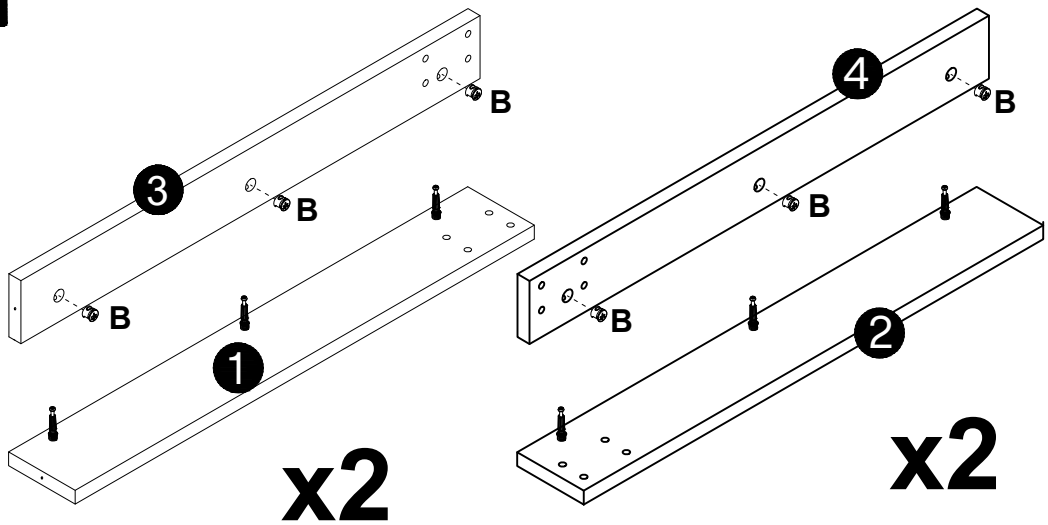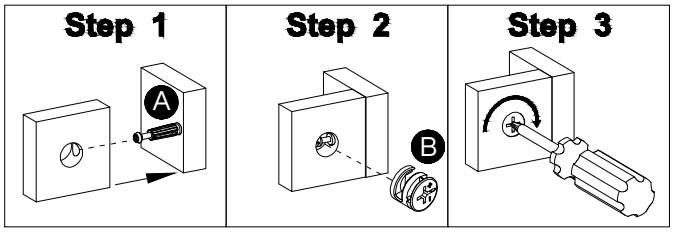
Ø15x12mm
12 pcs






9

D

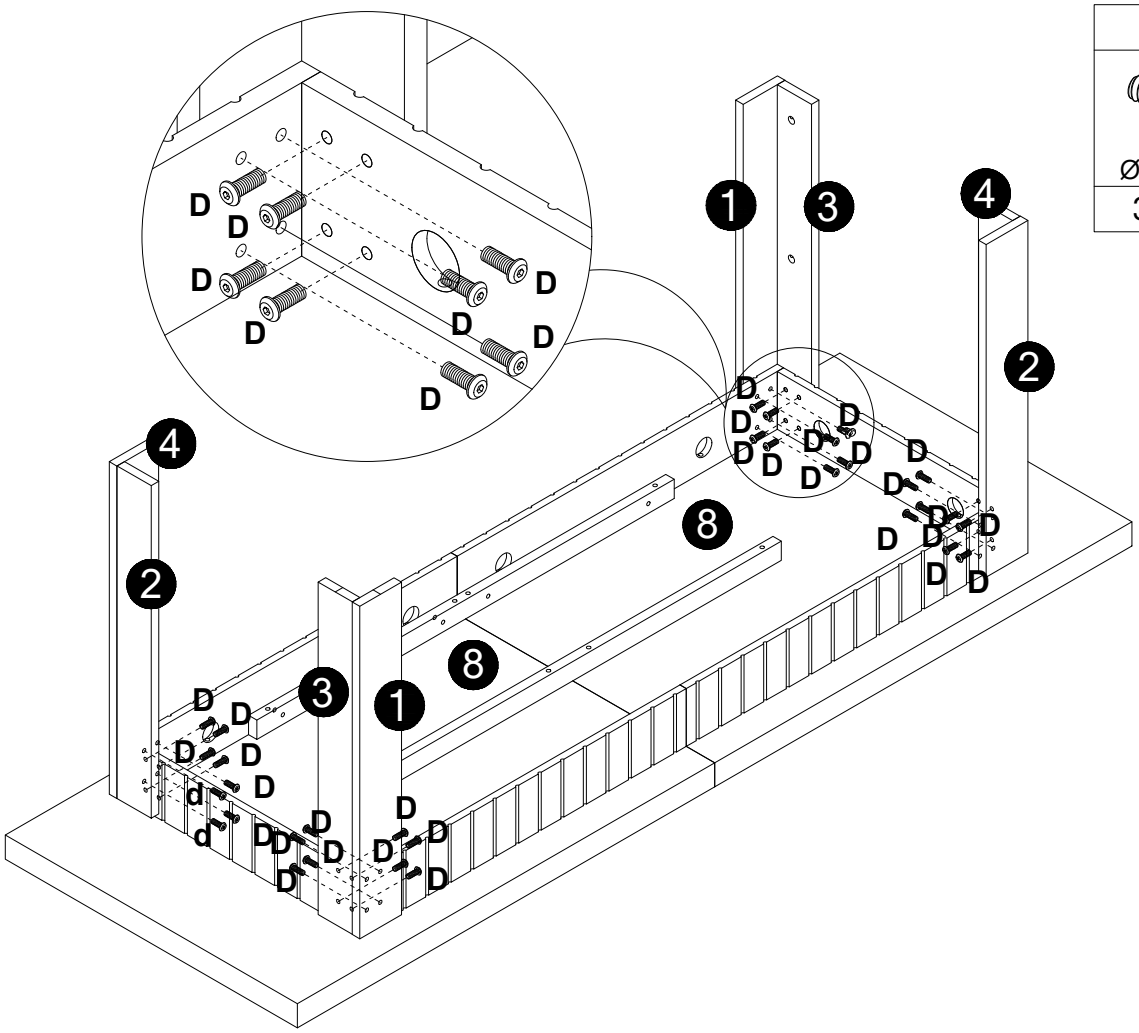Ø6x25mm
32 pcs




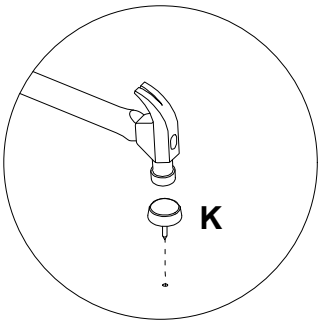10

K	N
	
Ø14x4mm	Ø21mm
8 pcs	8 pcs



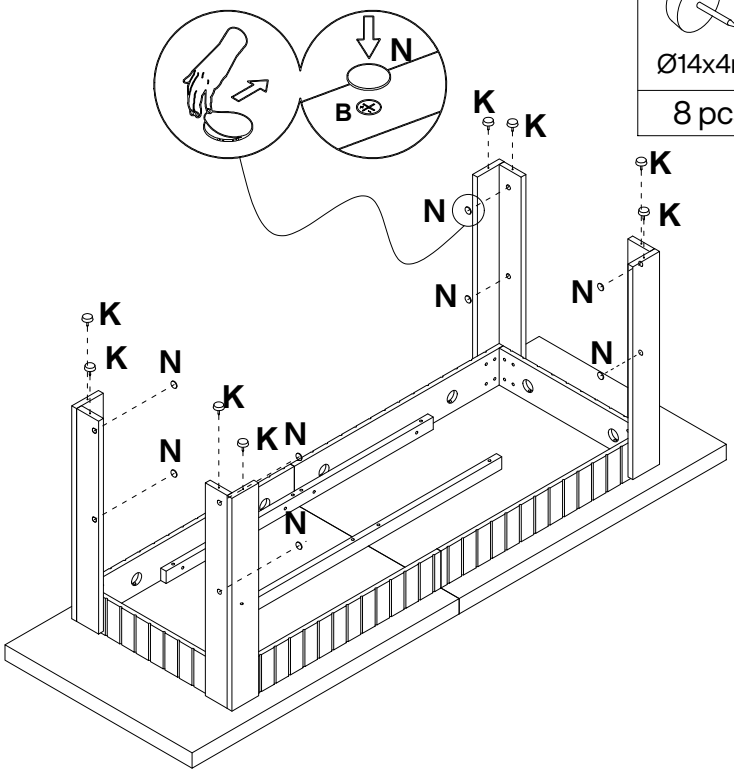⚠ Caution! Tap lightly



Thank you for your support!

