



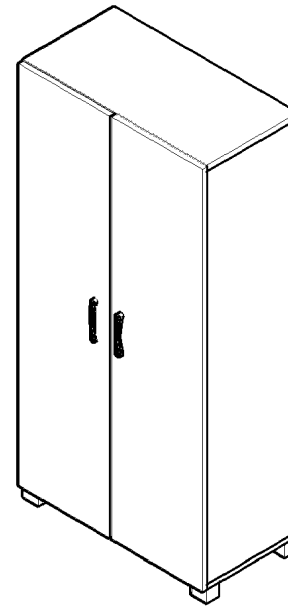







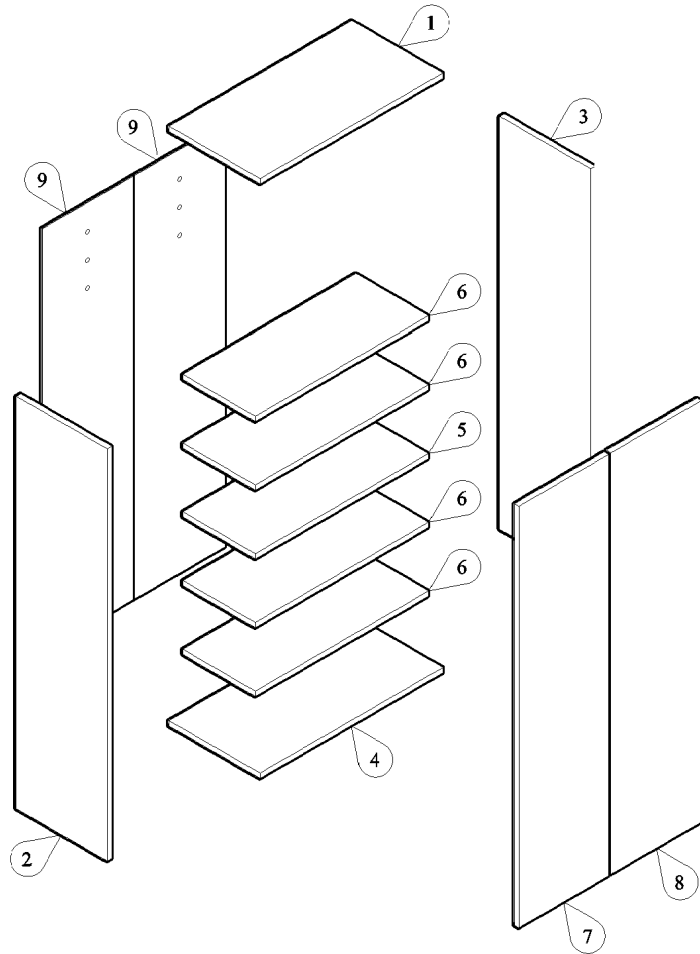








PANEL POSITION





	HARDWARE	QUANTITY
A	 SCREW M6x50MM	12 PCS
B	 IRON SHELF SUPPORT	16 PCS
C	 PVC HANDLE 128MM SCREW M4x28MM	2 PCS 4 PCS
D	 HINGES 5/8" SCREW M3.5x16MM	6 PCS 36 PCS
E	 PVC CABINET LEG SCREW M4x28MM	4 PCS 8 PCS
F	 PVC "H" RAIL	1 PC
G	 POWER PIN	30 PCS
H	 ALLEN KEY	1 PC
I	 NYLON COTTON	1 PC
J	 WALL PLUG	1 PC
K	 SCREW M4x28MM	1 PC
L	 WOSE	2 PCS
M	 SCREW M3.5x16MM	1 PC
N	 BUFFER	4 PCS




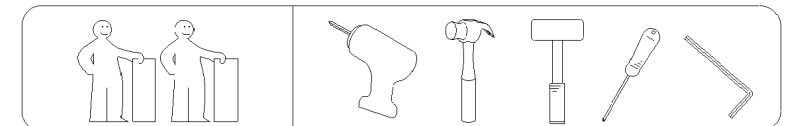




START ASSEMBLY



STEP 1

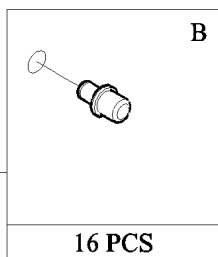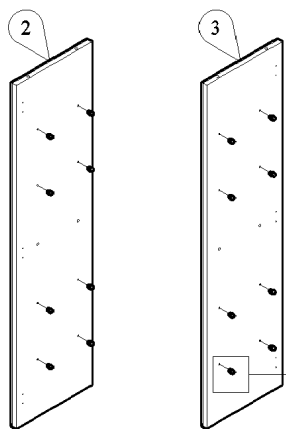



STEP 2

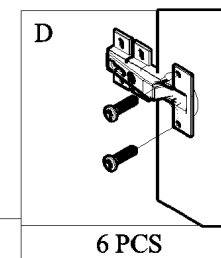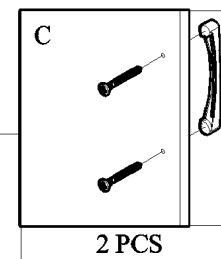


STEP 3

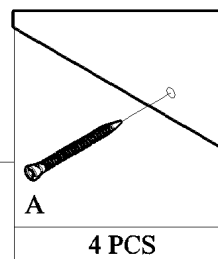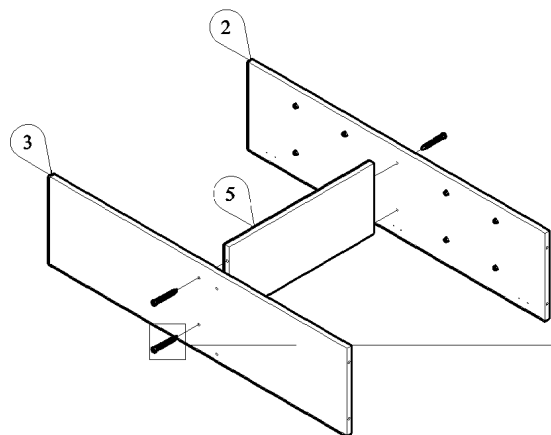


STEP 4

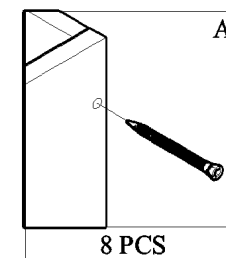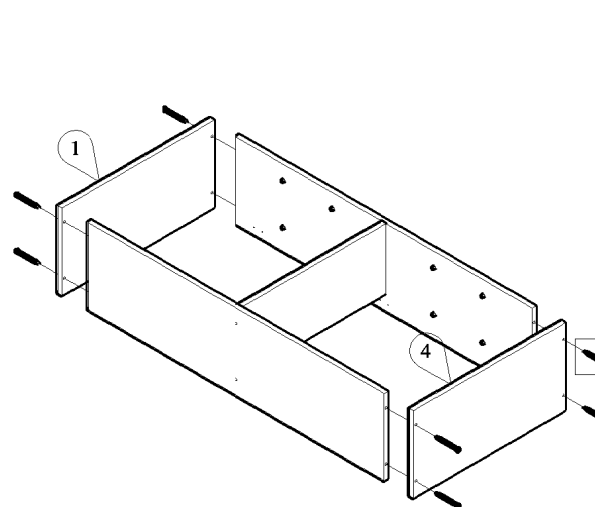


STEP 5

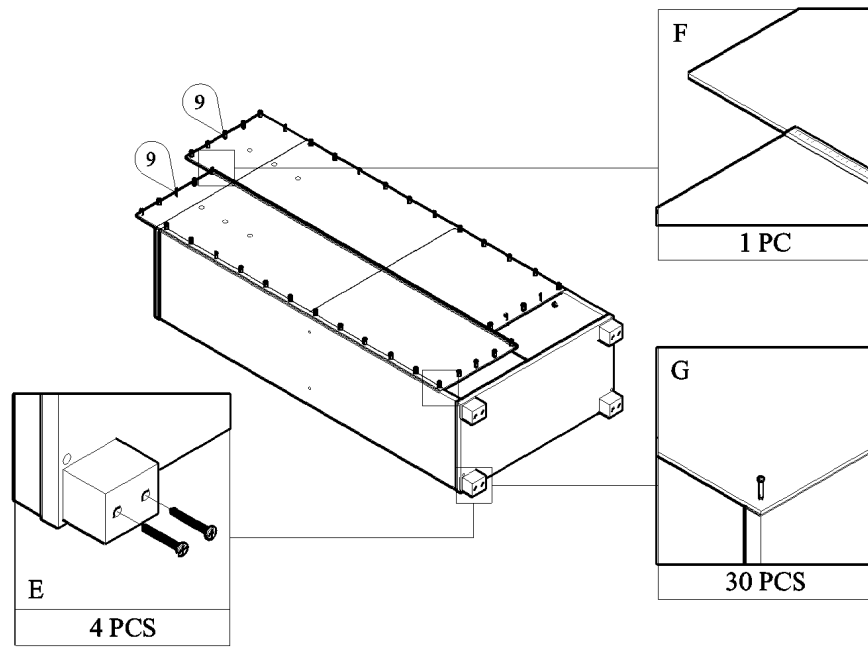


STEP 6

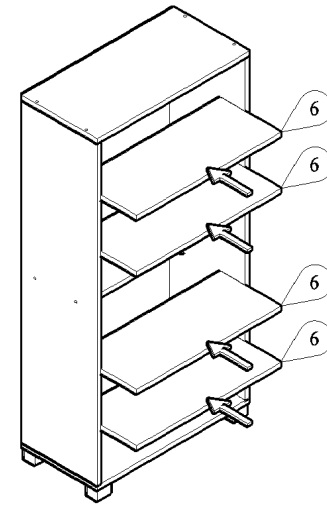




STEP 7

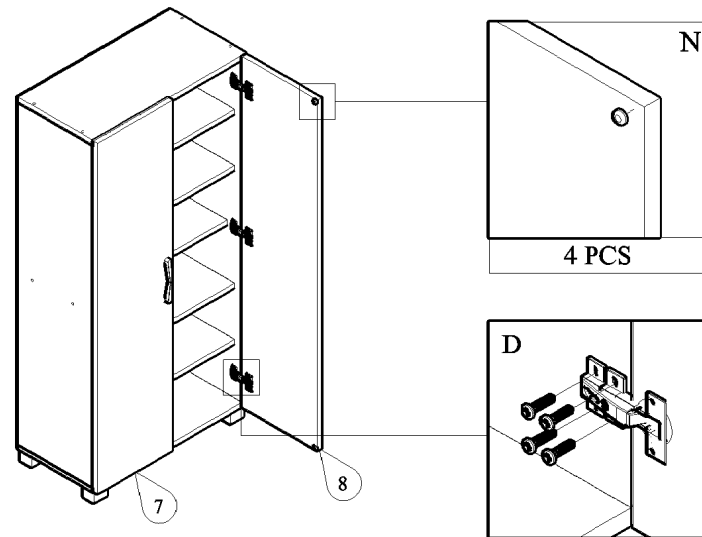






STEP 8

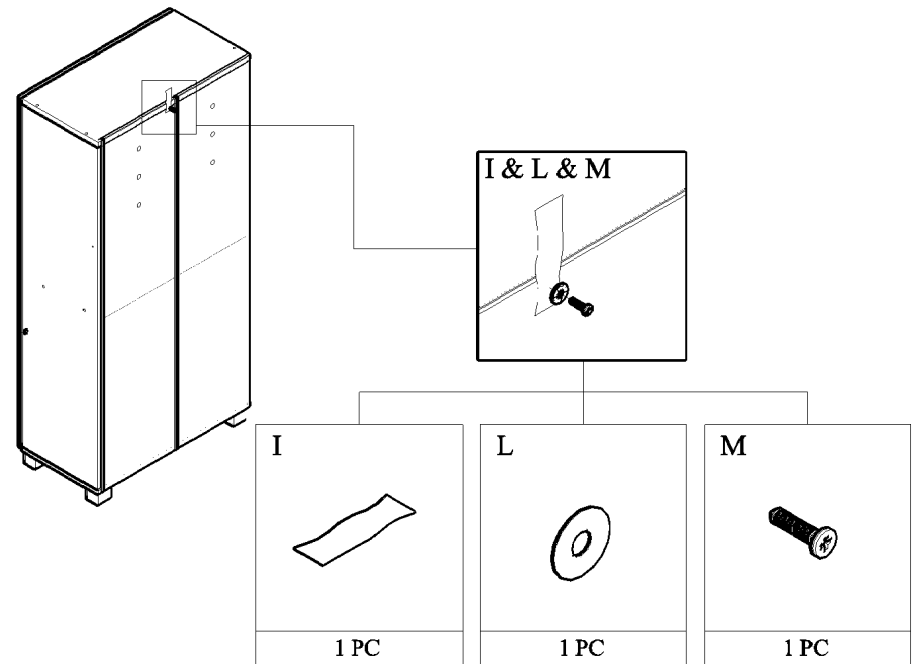

STEP 9

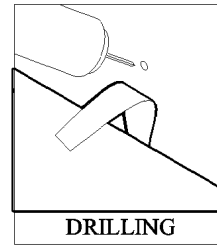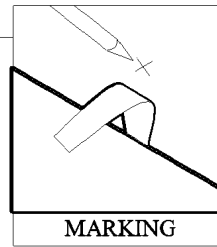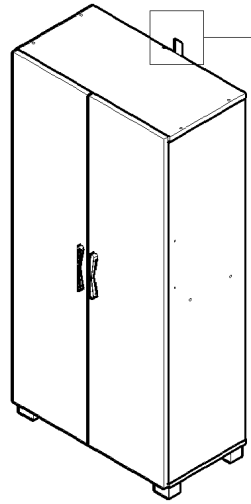

STEP 10

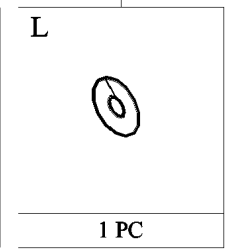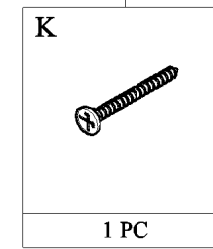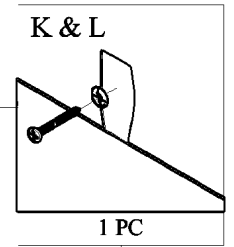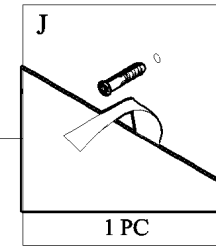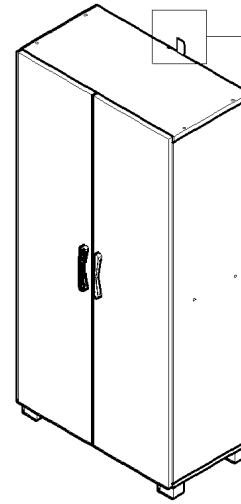

COMPLETED

