

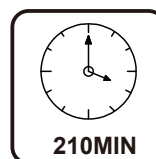
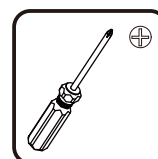
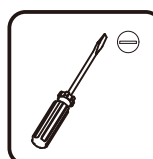



Installation & Assembly

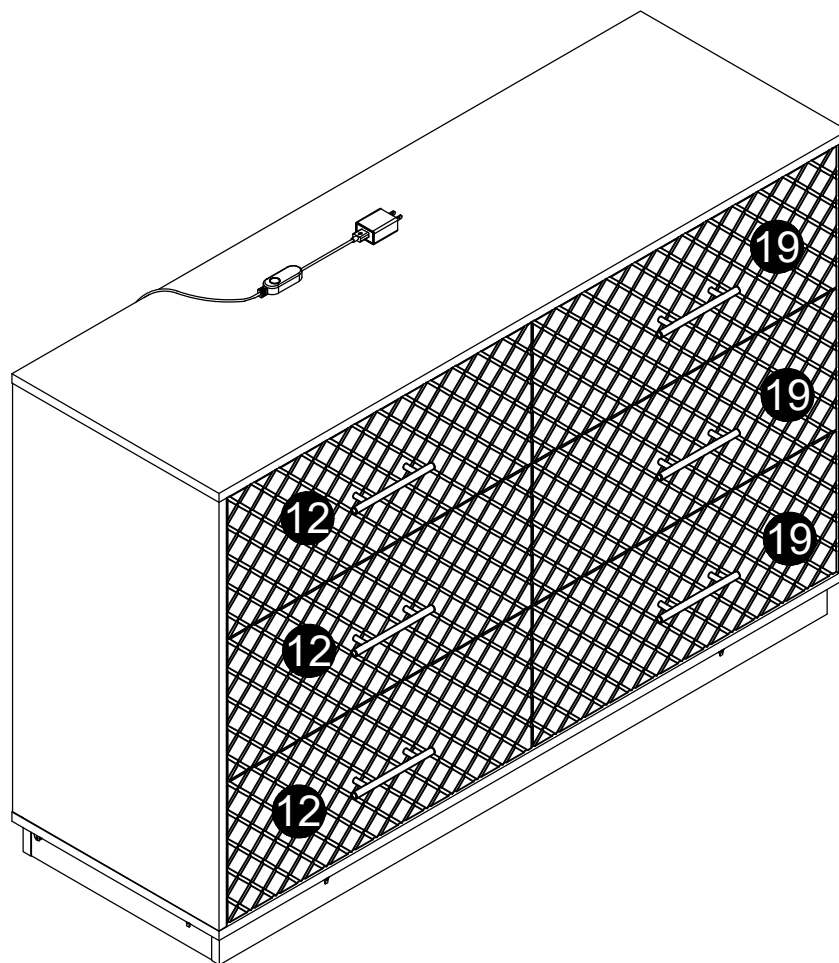


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

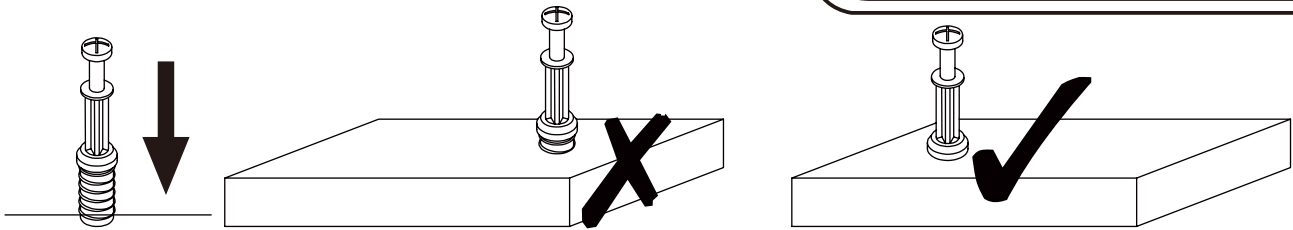


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

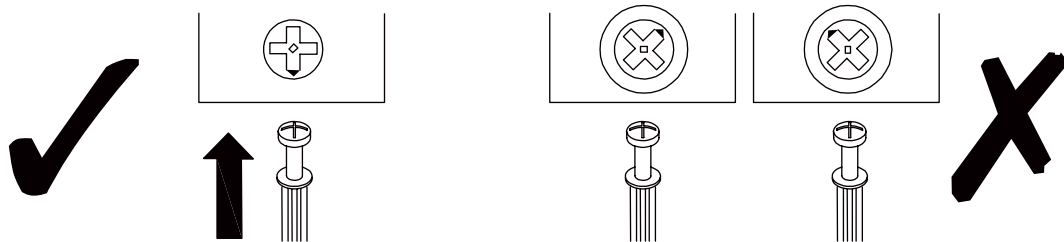









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









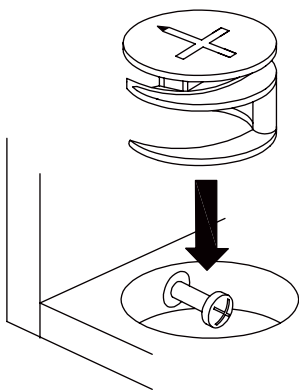



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

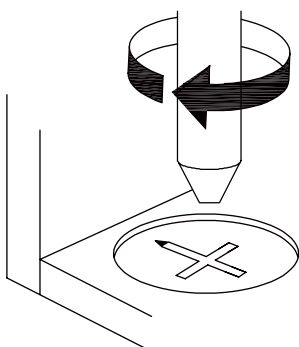


EN_Turn cam lock clockwise to tighten.

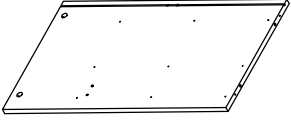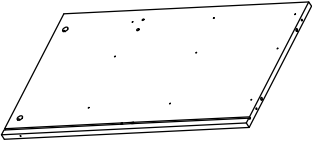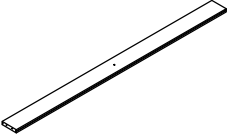NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x2	
7		x1	
8		x1	
9		x1	
10		x1	

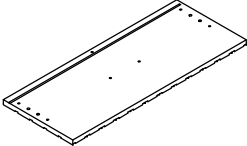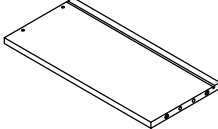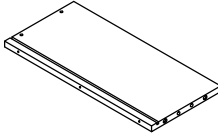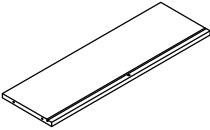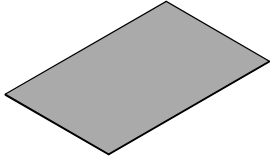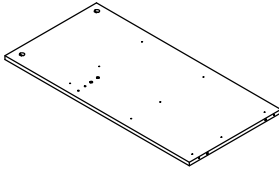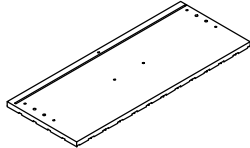
NO.	PARTS	QTY	SPARE
11		x1	
12		x3	
13		x6	
14		x6	
15		x6	
16		x6	
17		x6	
18		x1	
19		x3	
	 Hardware Kit		







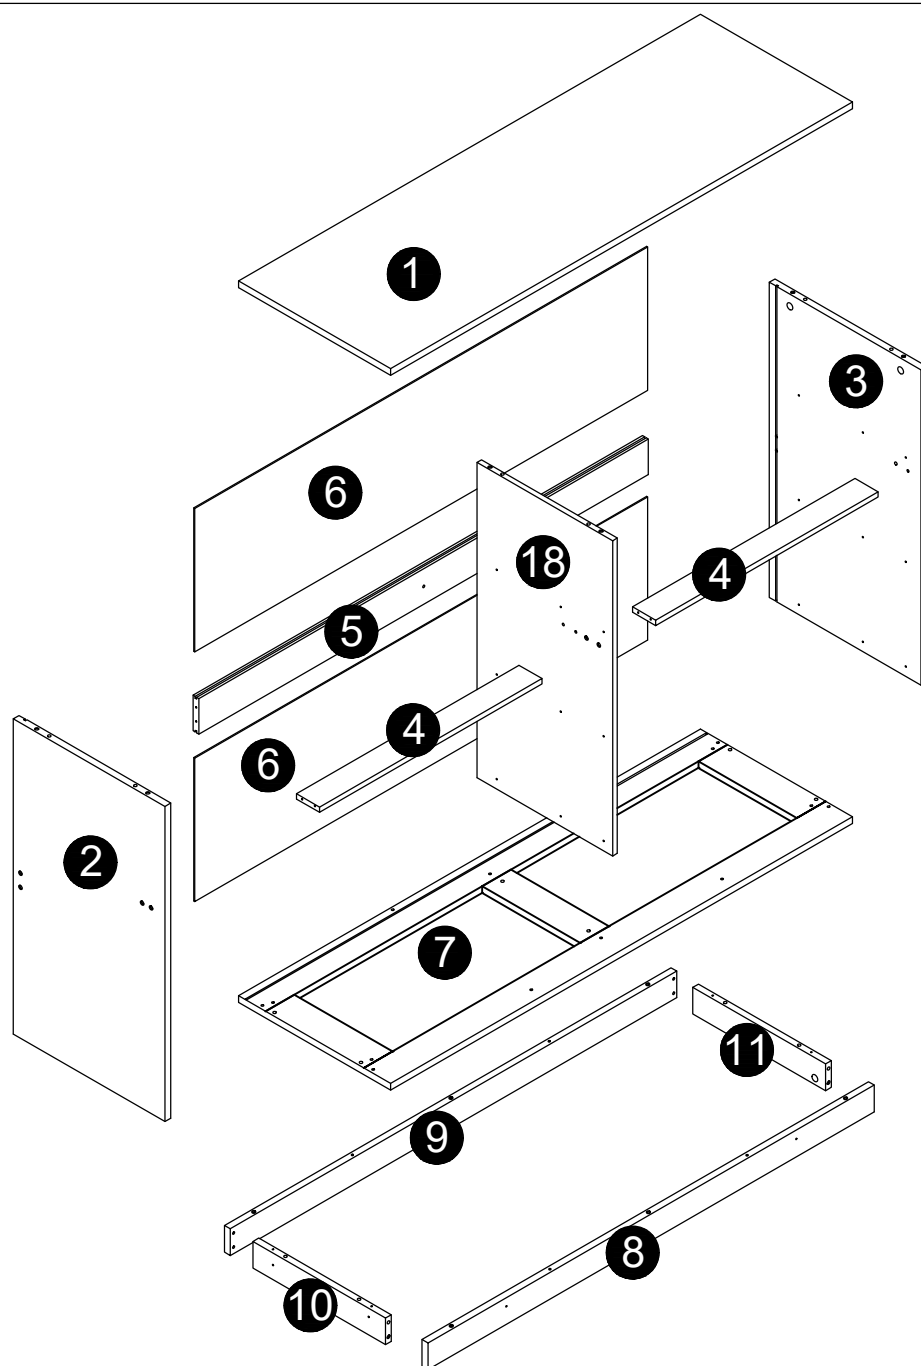


Left Drawer

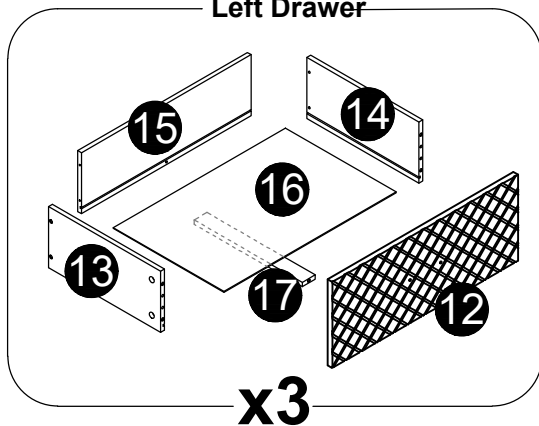

Right Drawer

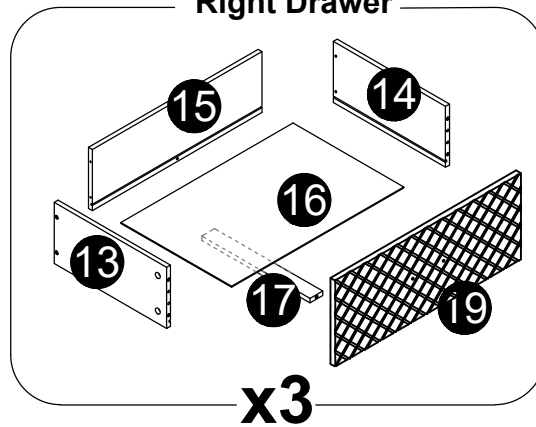


A x38 Ø6x35mm +2(spare) 	B x38 Ø15x10mm +2(spare) 	C x48 Ø6x30mm +3(spare) 	D x55 Ø4x35mm +3(spare) 	E x72 Ø3.5x12mm +4(spare) 	F x6 
G x14 Ø3x16mm +1(spare)  	H x1 	I x13 Ø15mm +1(spare) 	J x3 Ø4x14mm 	K x2 	L x2 Ø6x30mm 
M x1 	N x5 Ø3x12mm +1(spare)  	O x1 	P x8 Ø4x30mm +1(spare) 	Q x1 	CL x6 350mm 
CR x6 350mm 	DL x6 350mm 	DR x6 350mm 			



A x30	C x24	D x30
		

x6

01

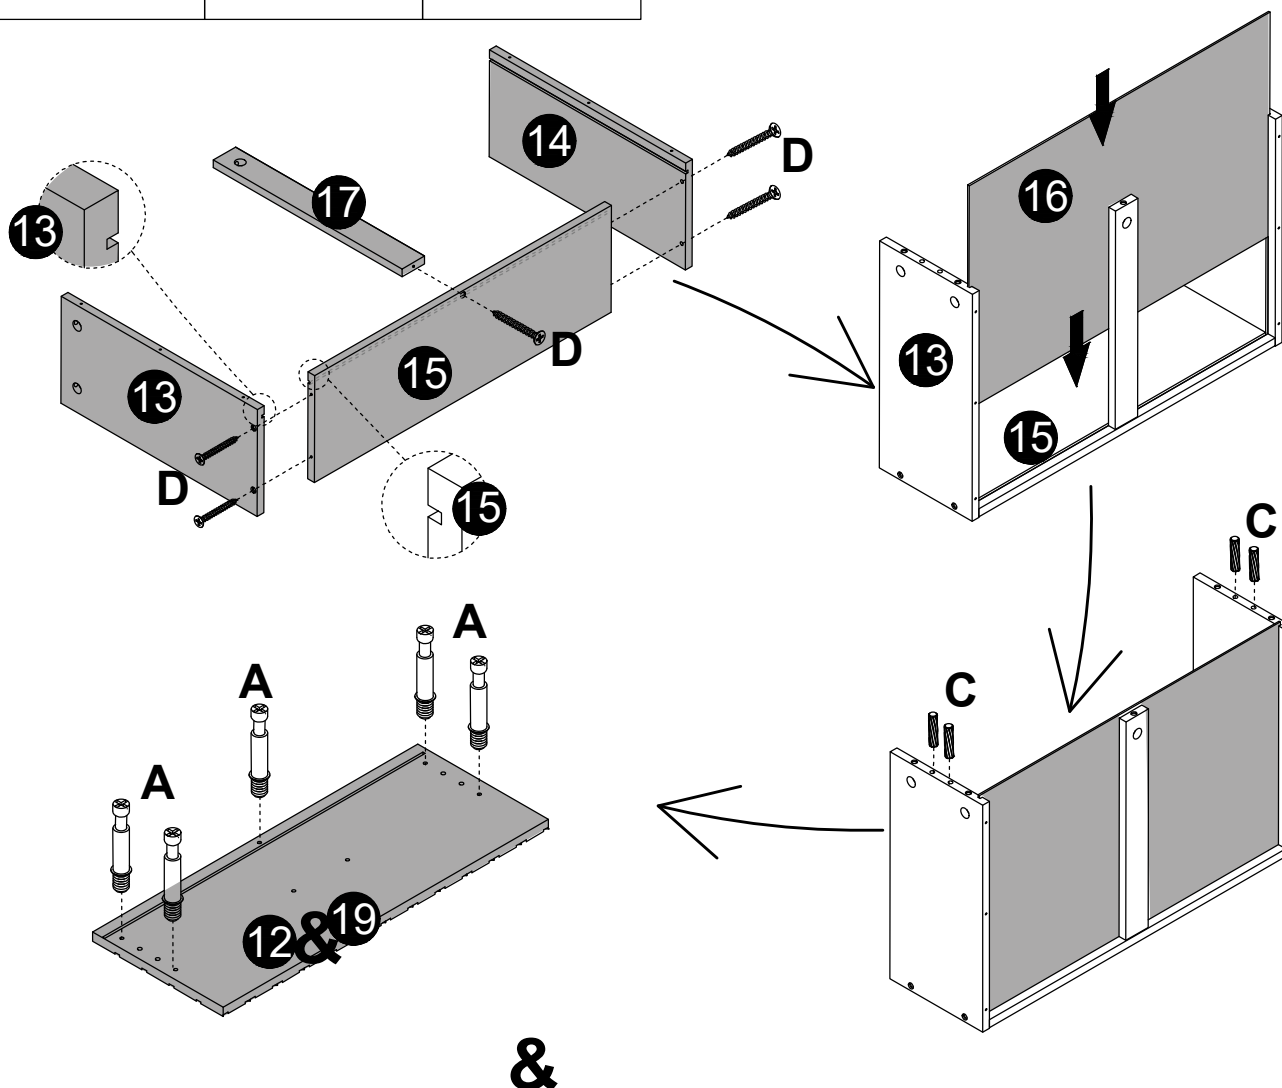

F x6

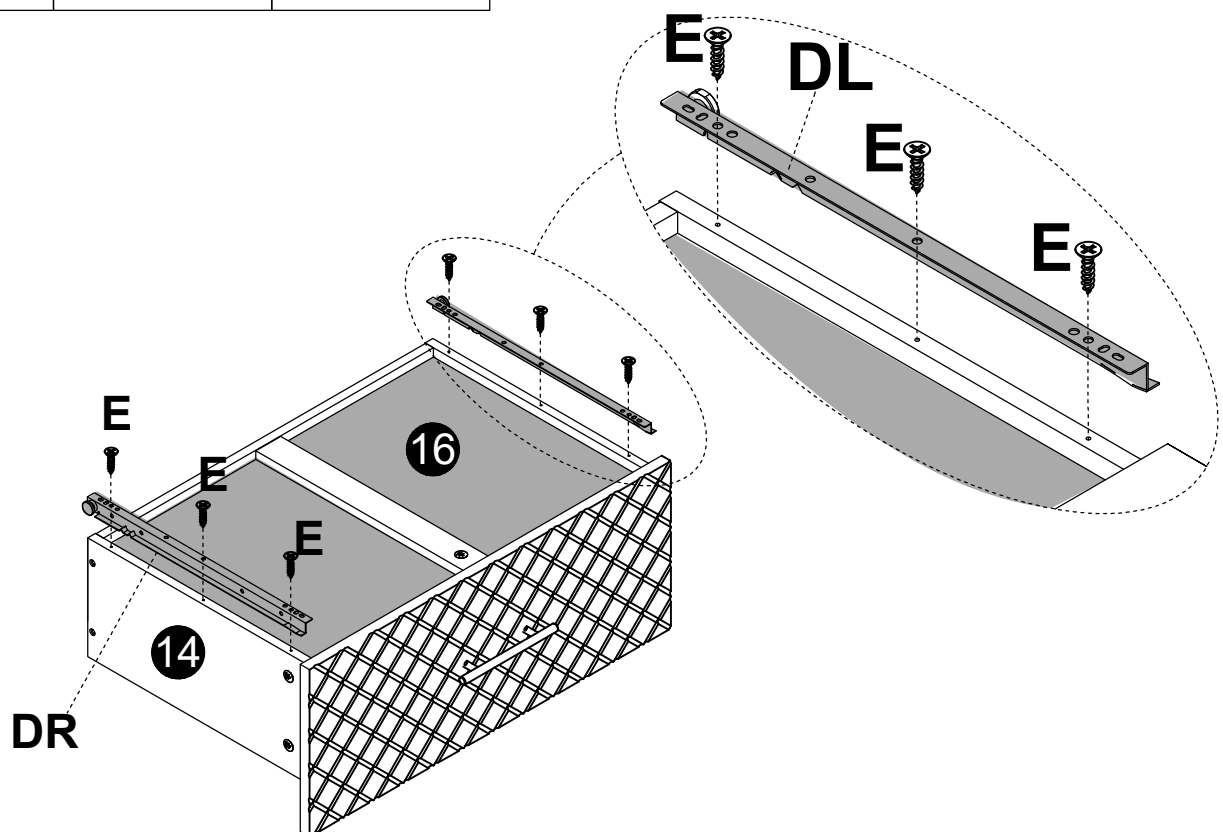DR_{x6}

04

A x2

C x2



A

8

Notice

10

11


C

C

B x2

C x10

D x4



05

D

C

C

C

11

B

C

9

C

C

8

B

C

10



C

C


D

P x8

06

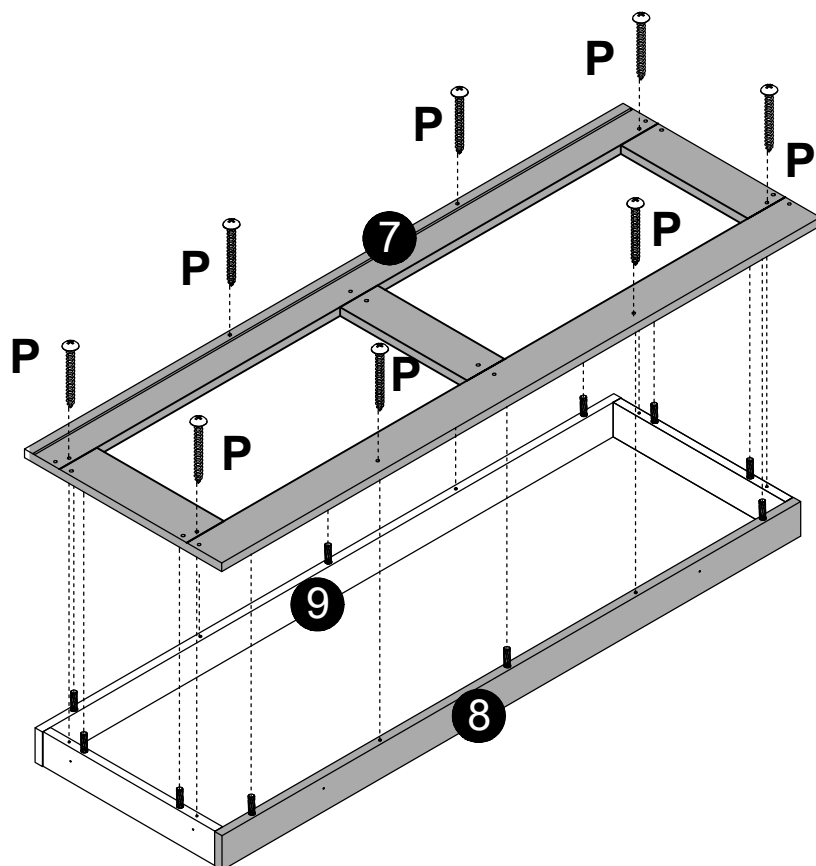



07

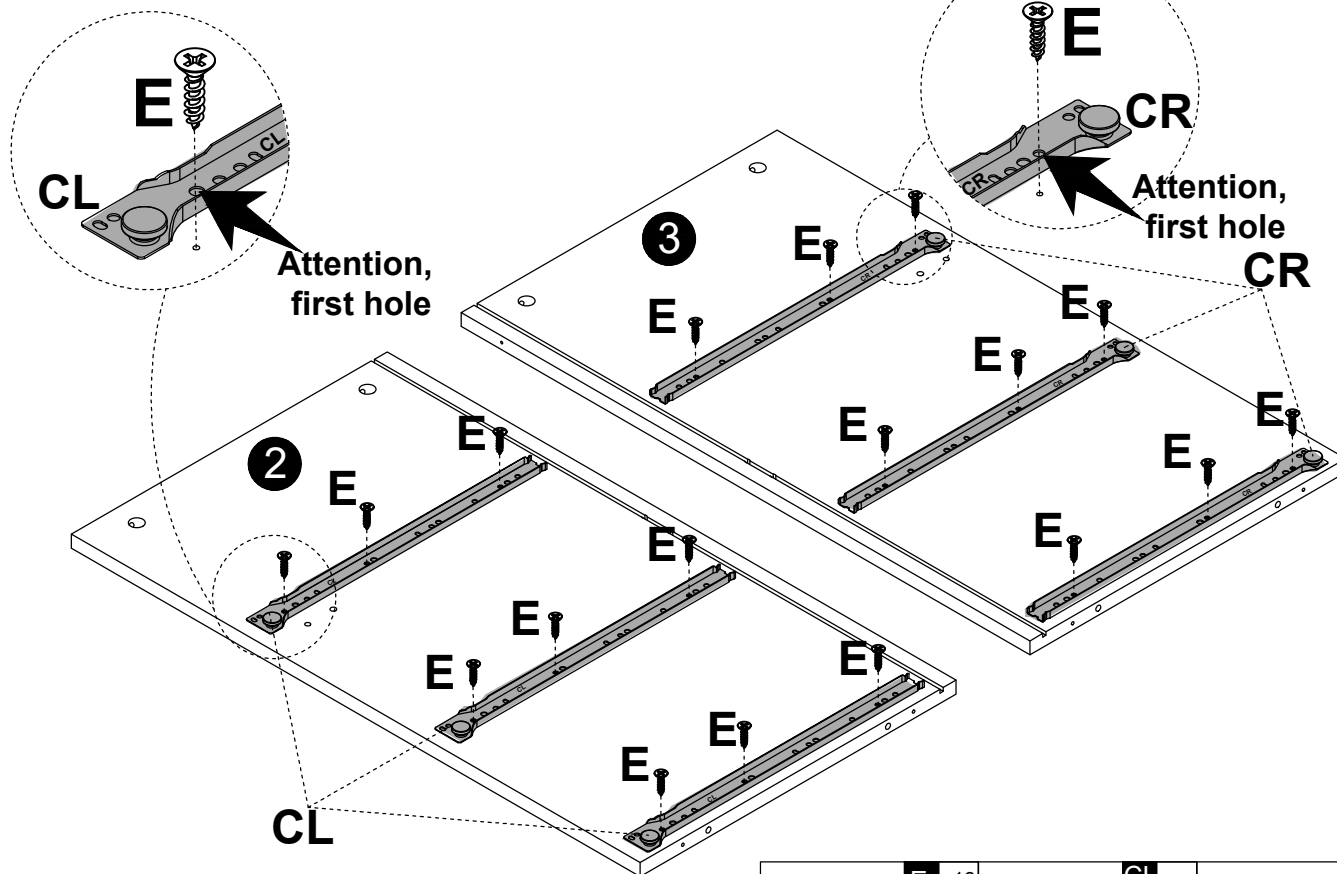

E x18

CL x3

CR x3





E x18

CL x3

CR x3


08



Notice

Notice

18

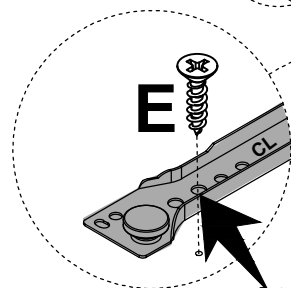


Attention,
second hole

CL




180°

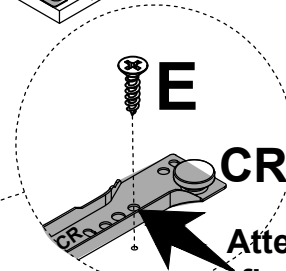

Attention,
first hole

CR

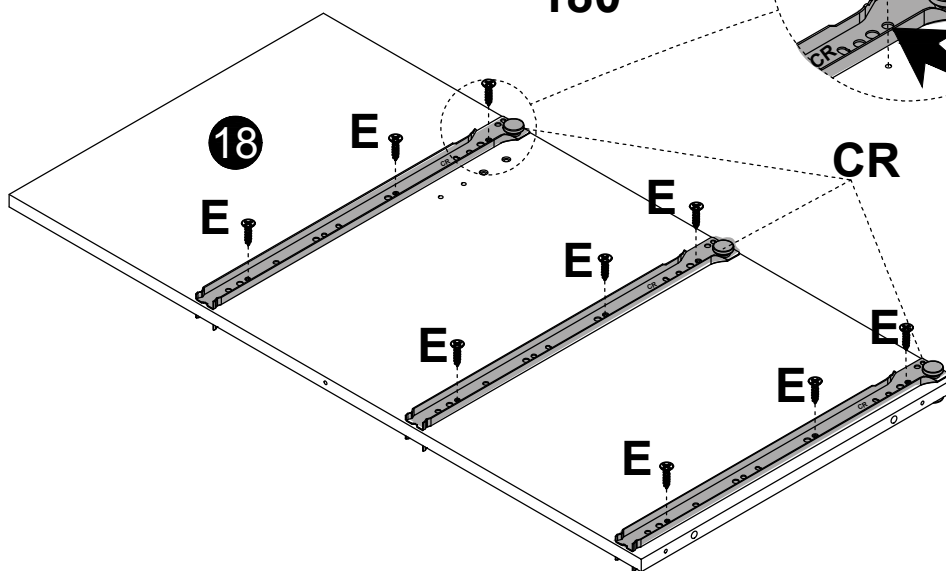

D x4




Note: At least two people are required for this step.

09



Notice


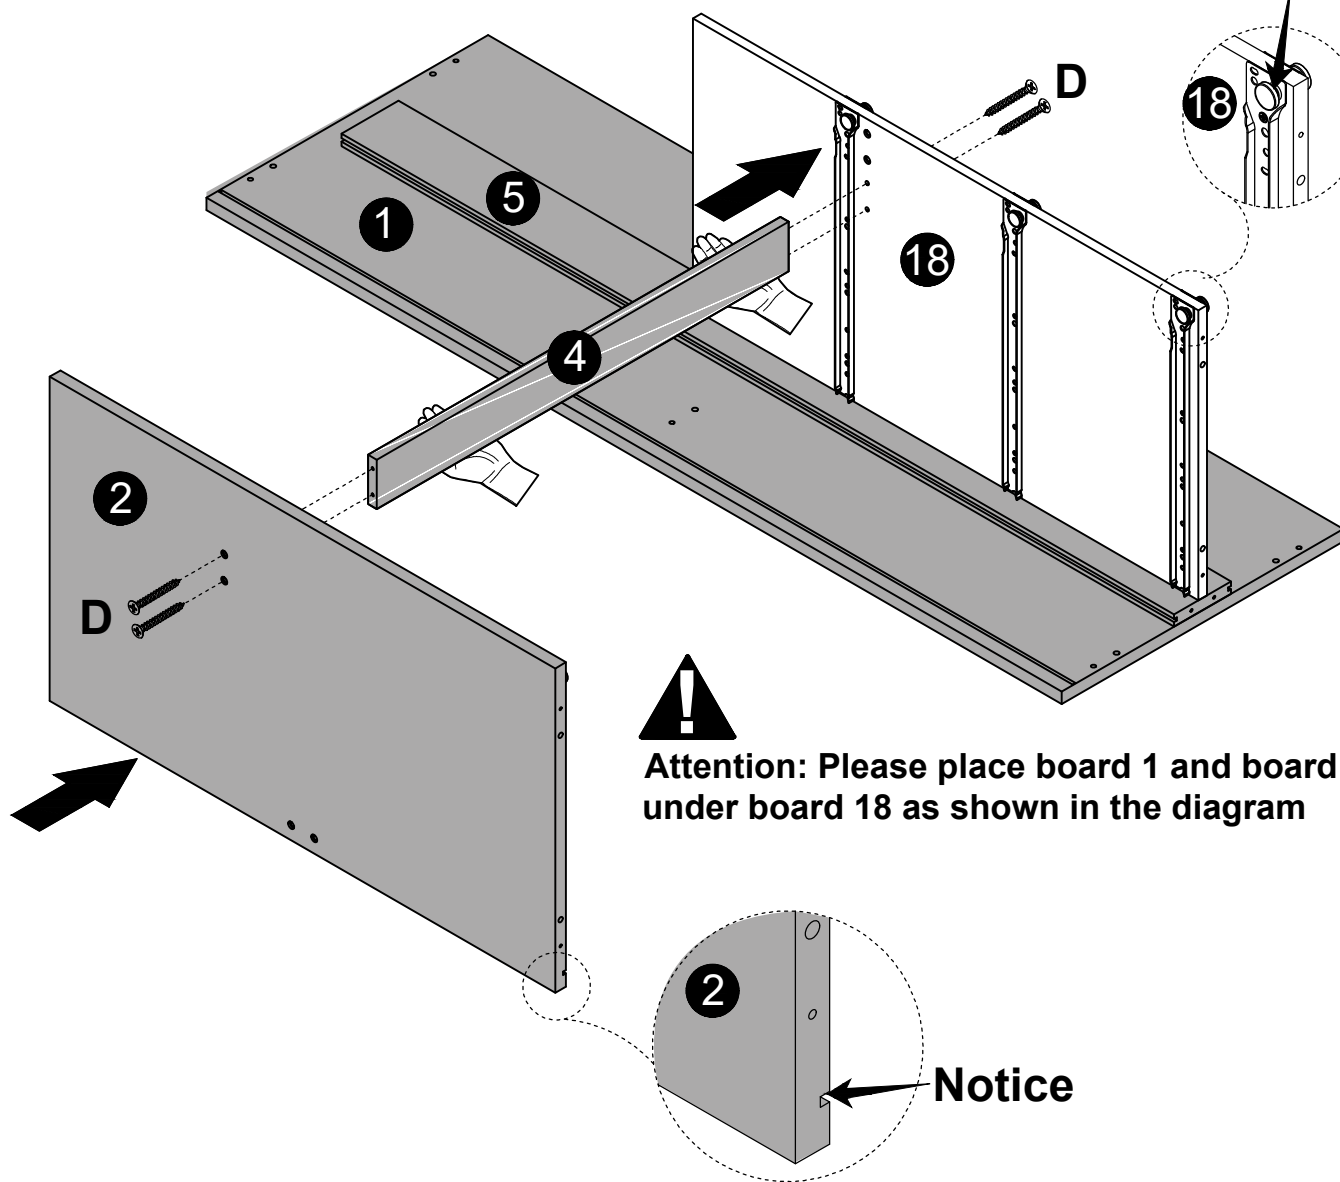



D x4



Note: At least two people are required for this step.

10

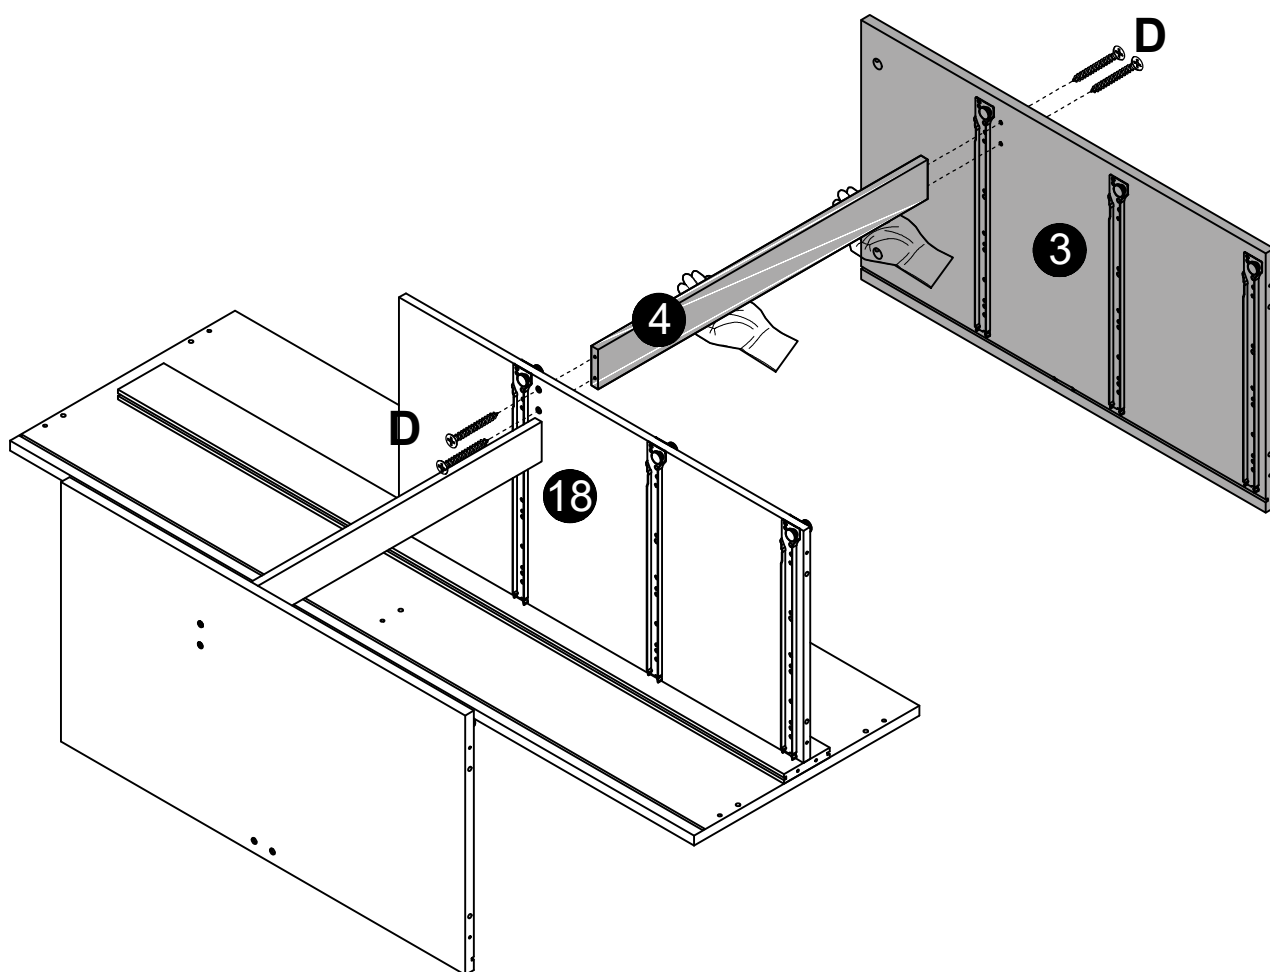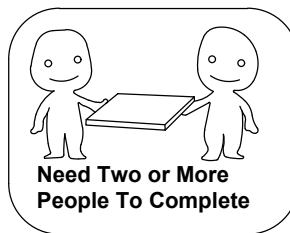


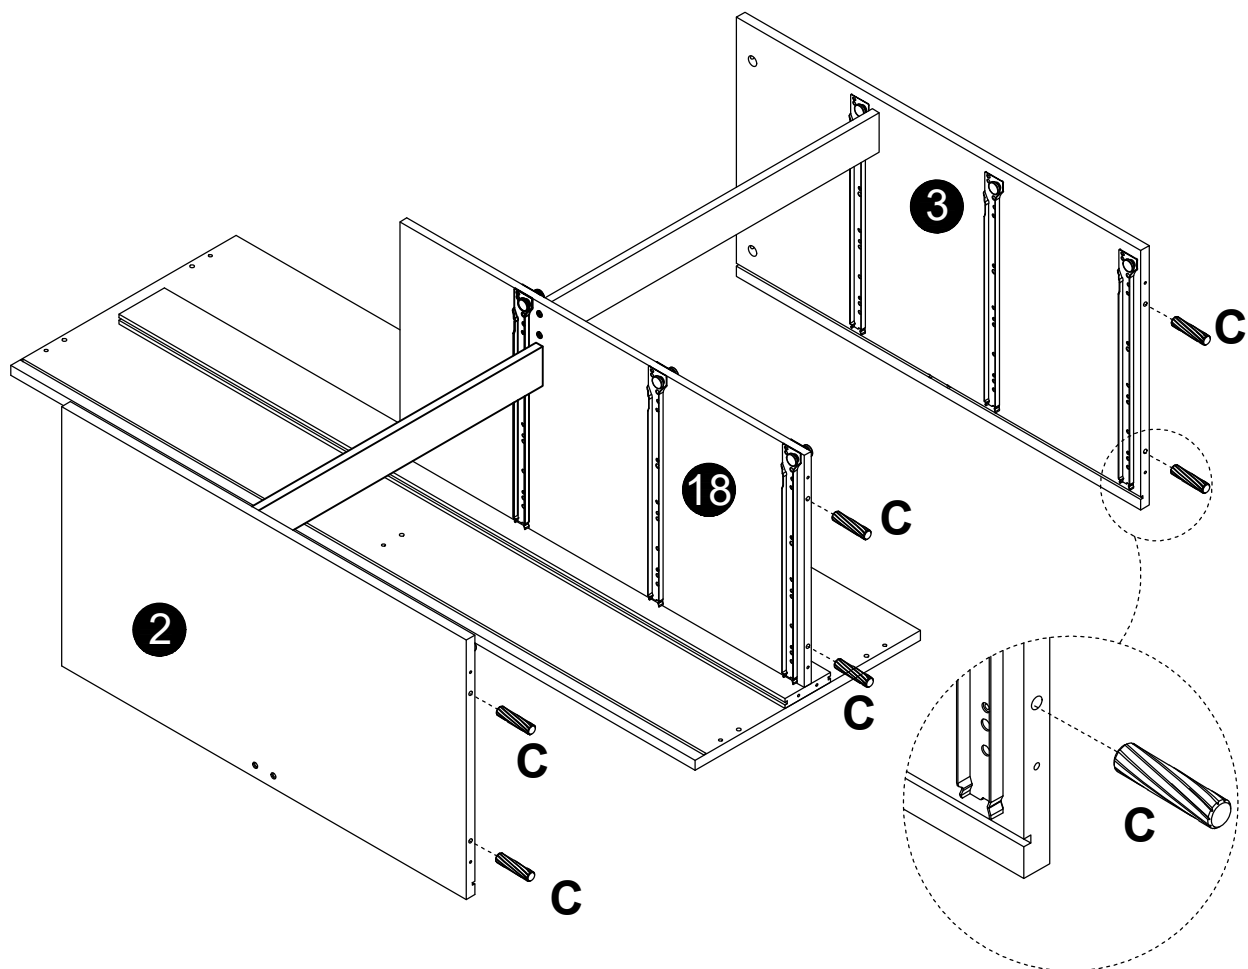



D x6




Note: At least two people are required for this step.

12

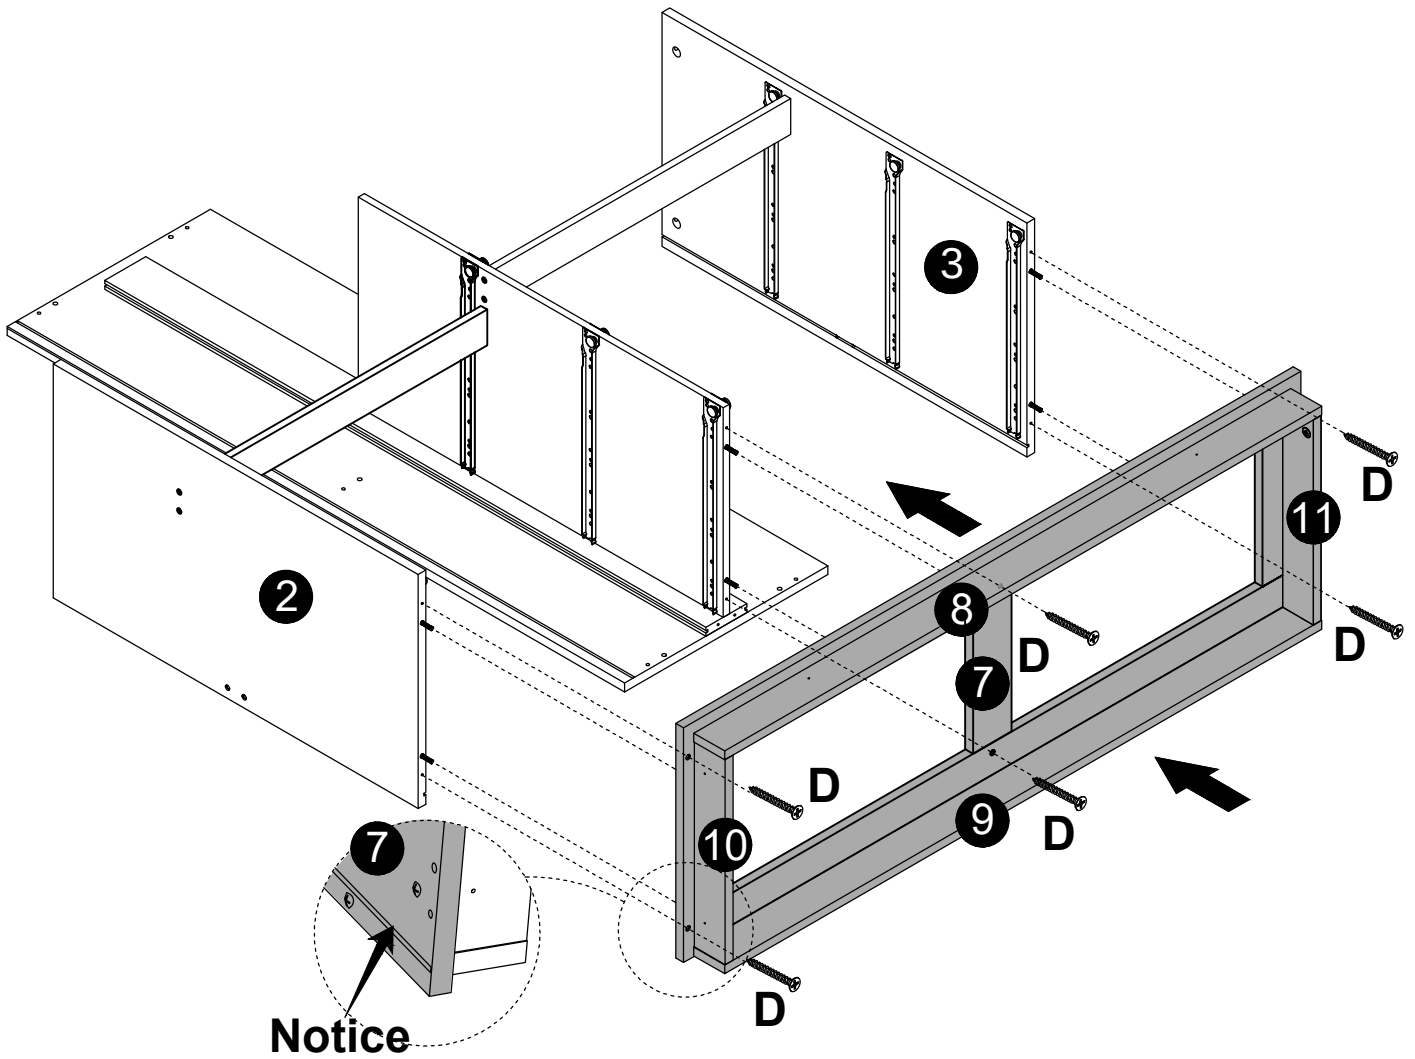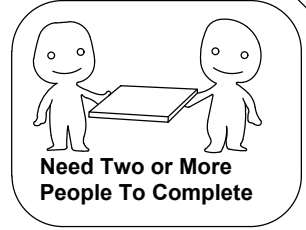


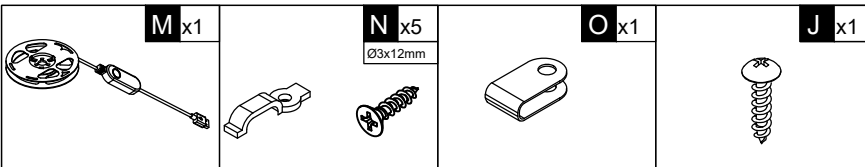

- (1) Please unfold the light strip (M) and peel off a small piece of protective film on the back of the light strip M at the right end, as shown in the picture

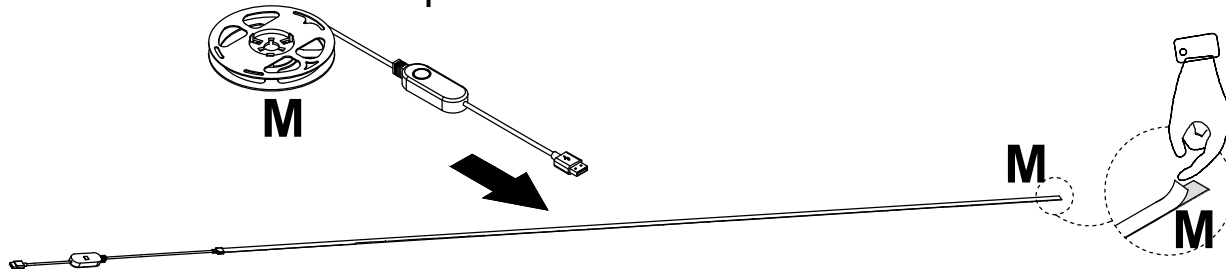


- (2) Then please pull the light strip M from the bottom of board 11 according to the arrow direction as shown in the figure, tear off the adhesive on the back of the light and stick the light strip M to board 8, and finally to board 10, as shown in the figure

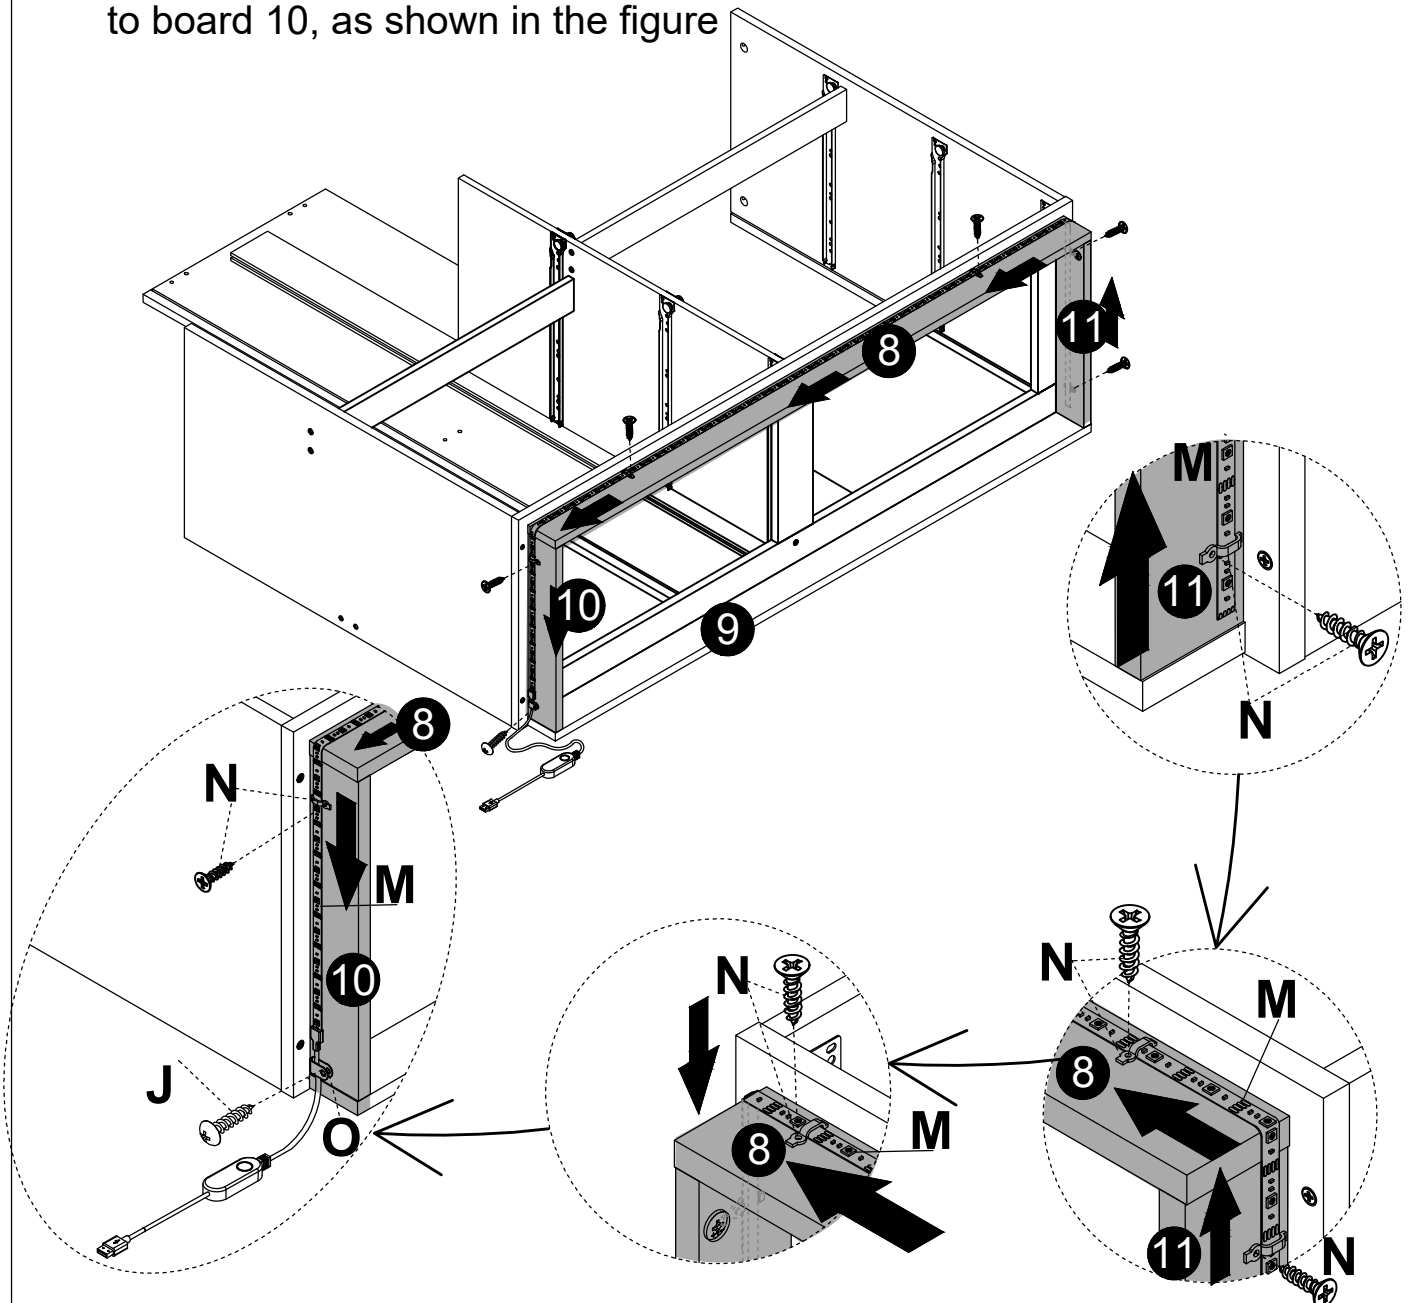

C x6









Note: At least two people are required for this step.

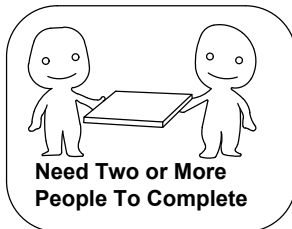

**Need Two or More
People To Complete**

14

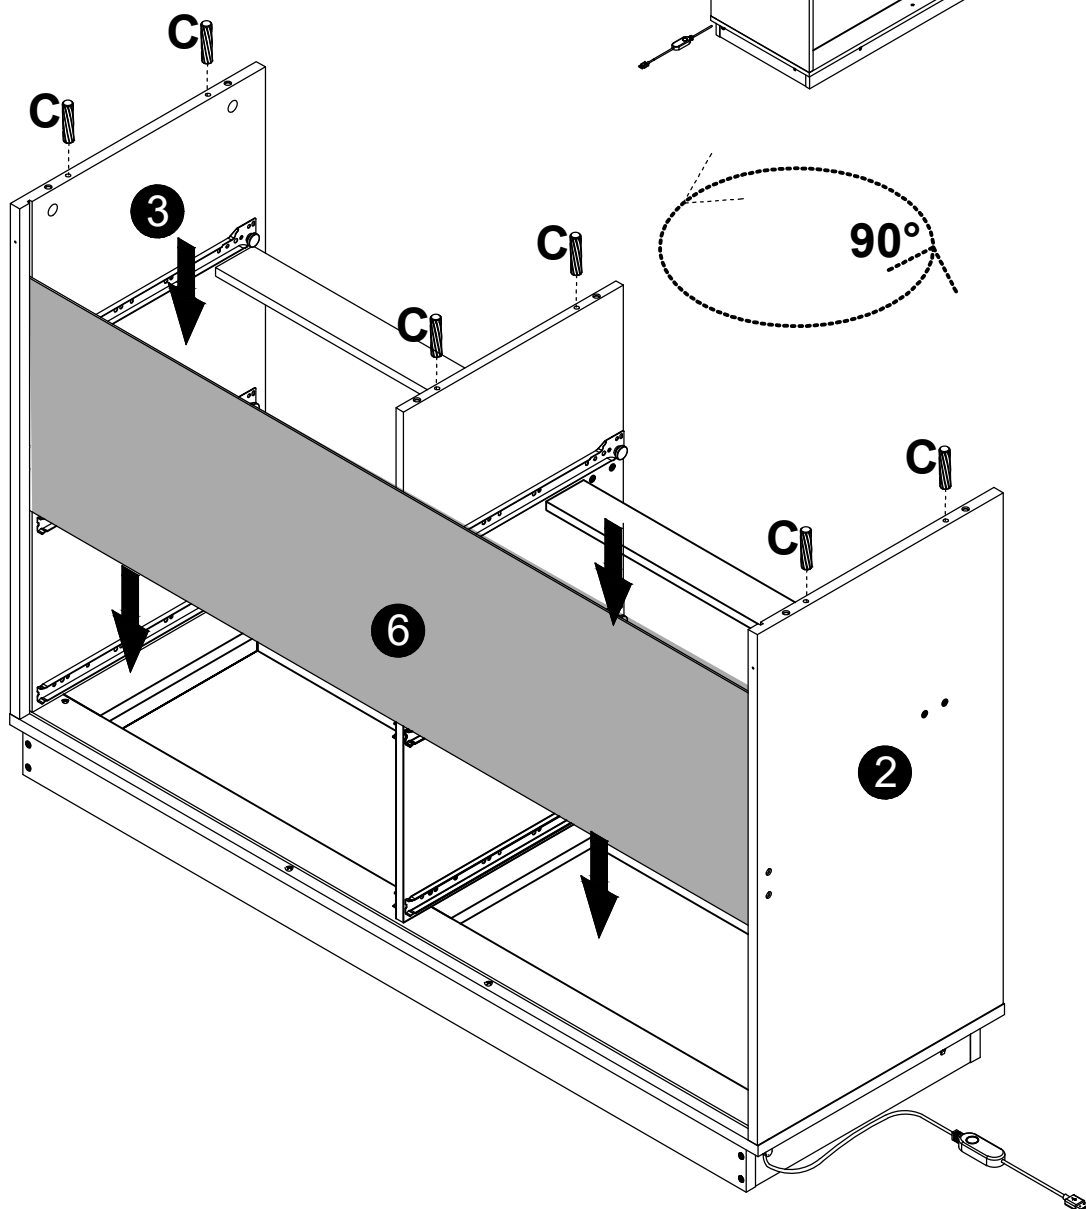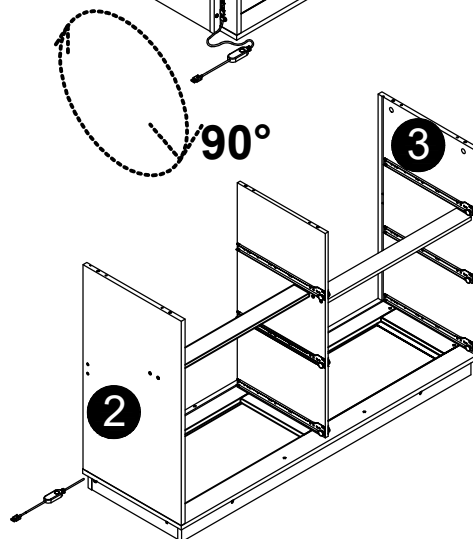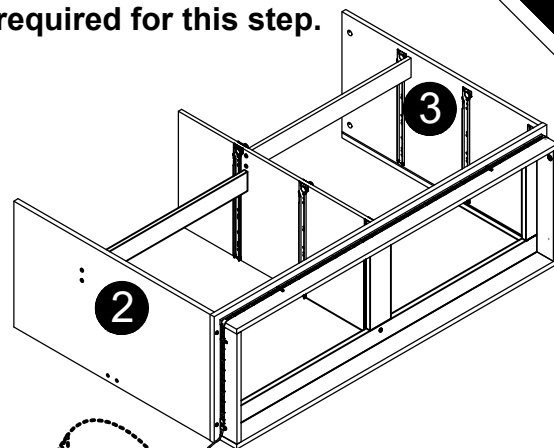

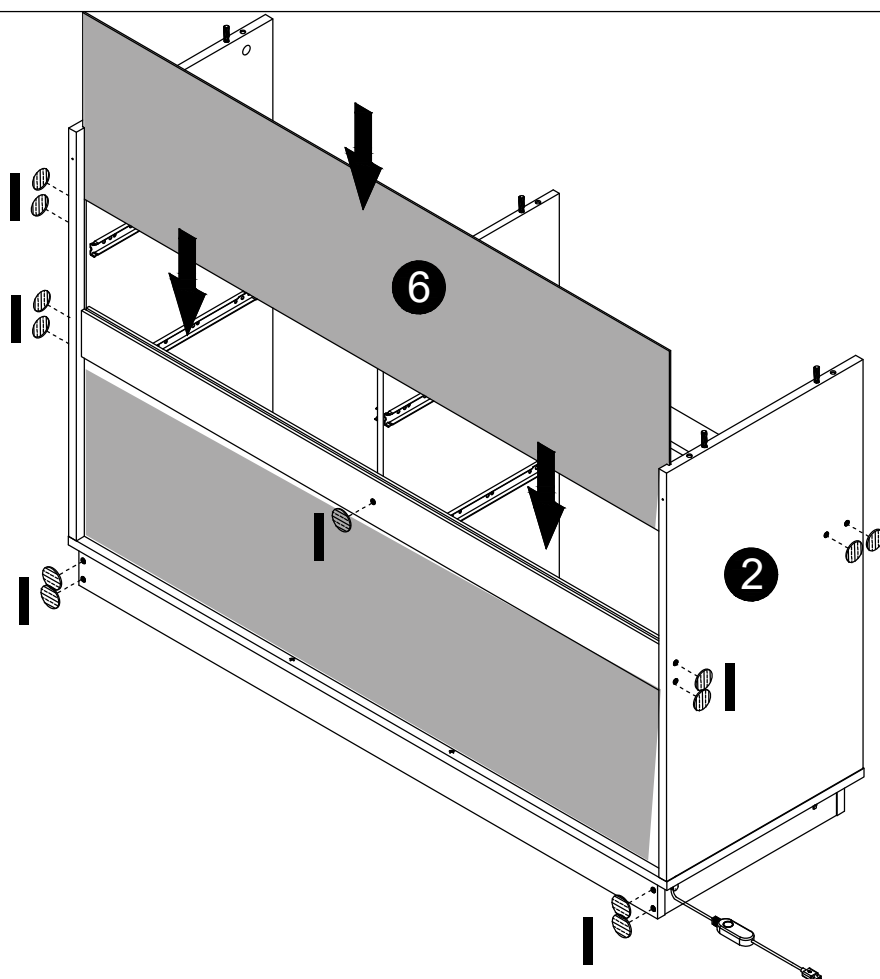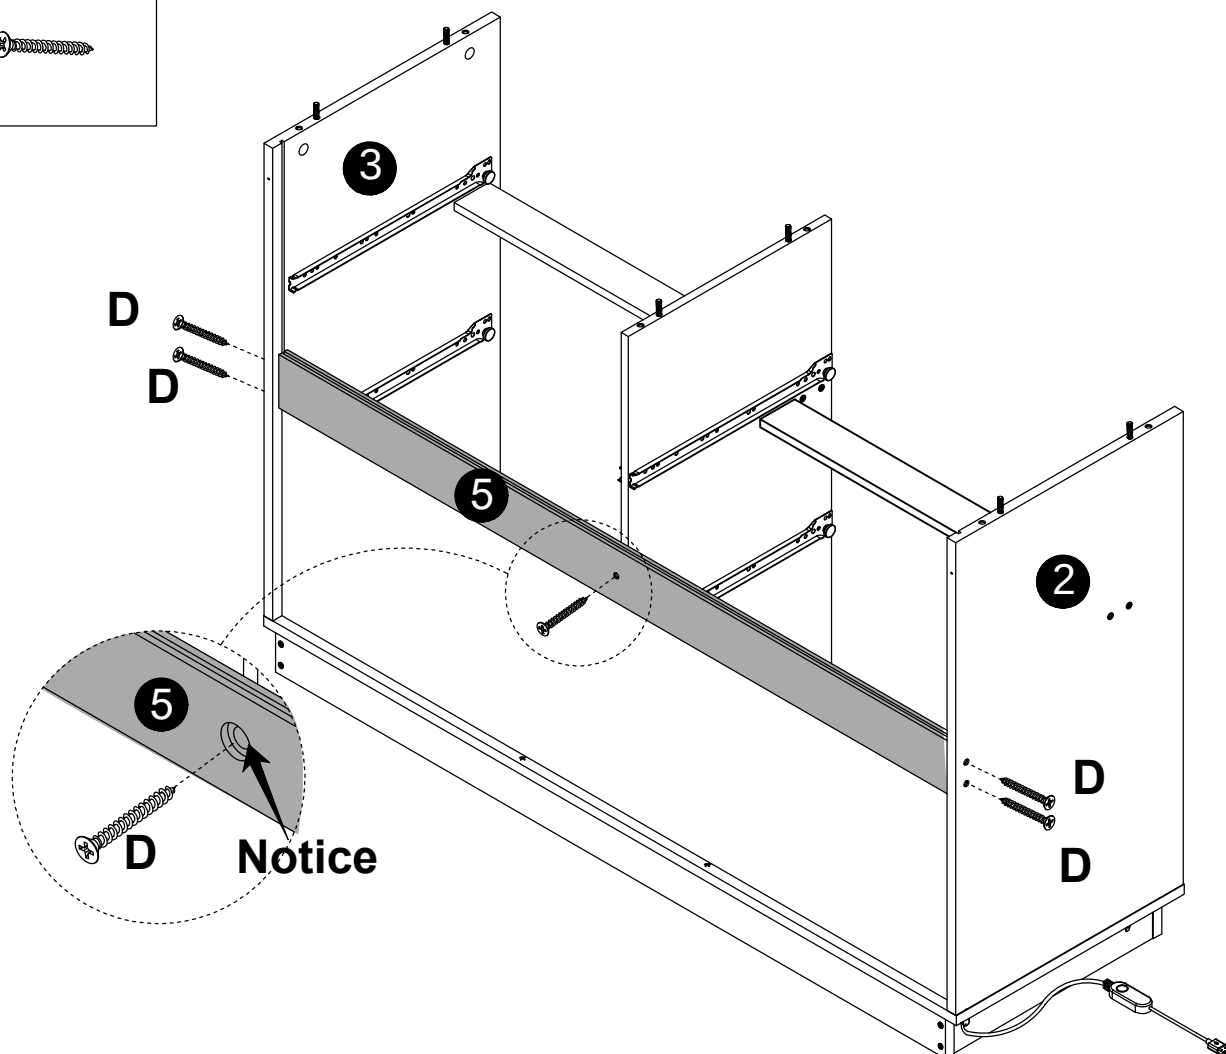



A x6



B x6





Note: At least two people are required for this step.

17



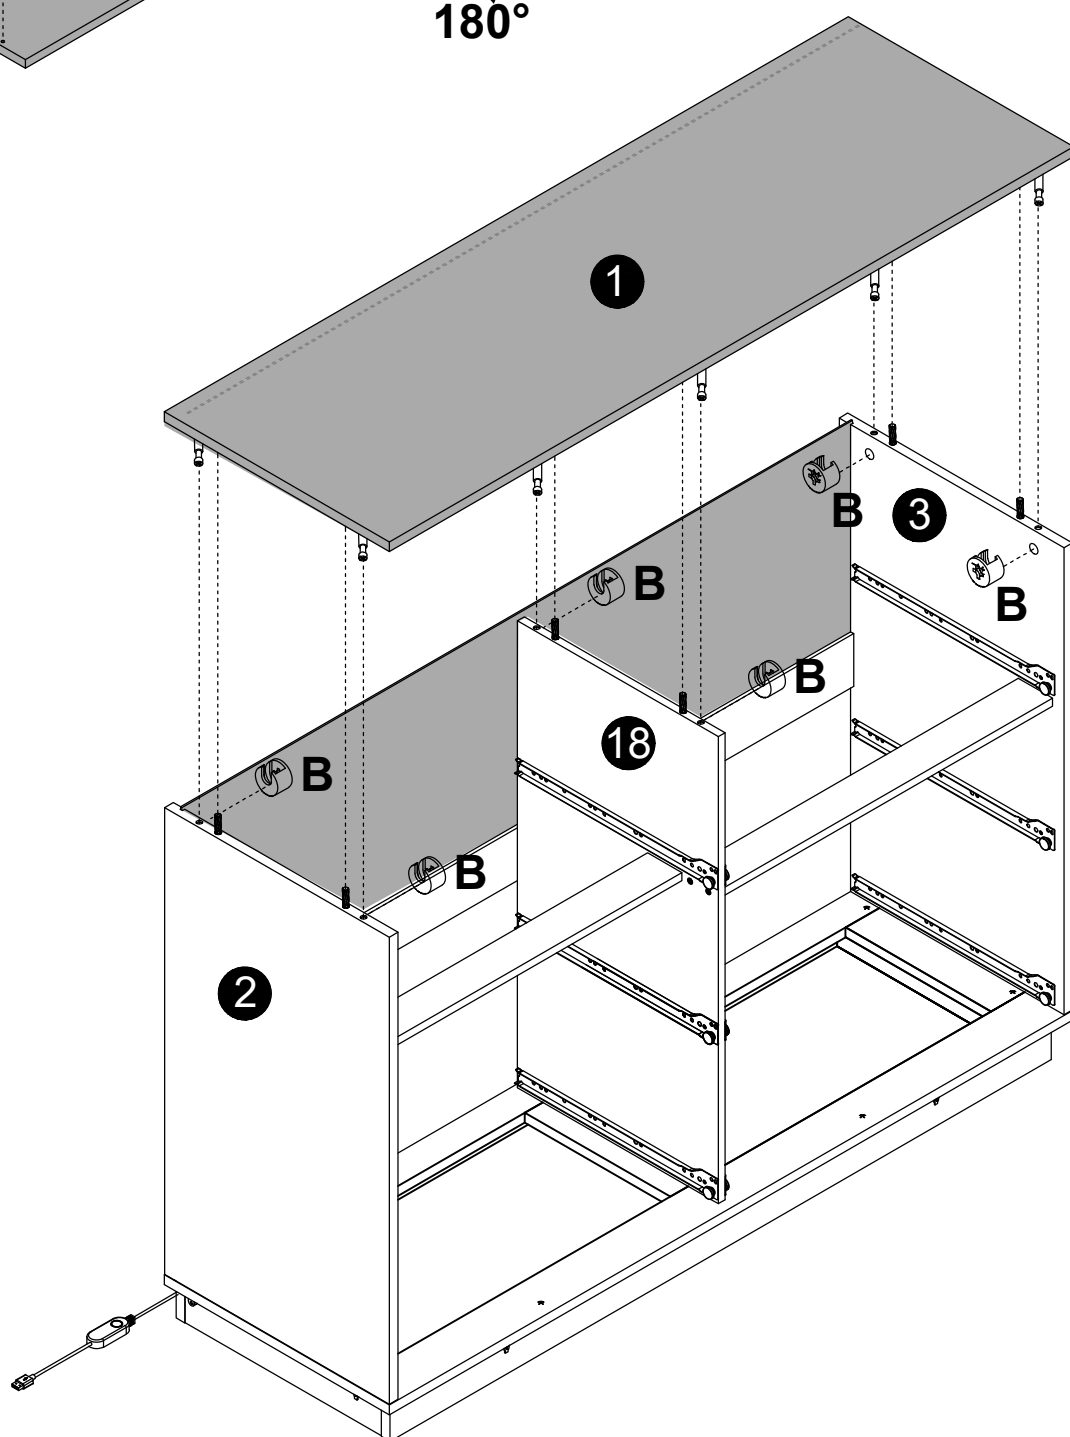
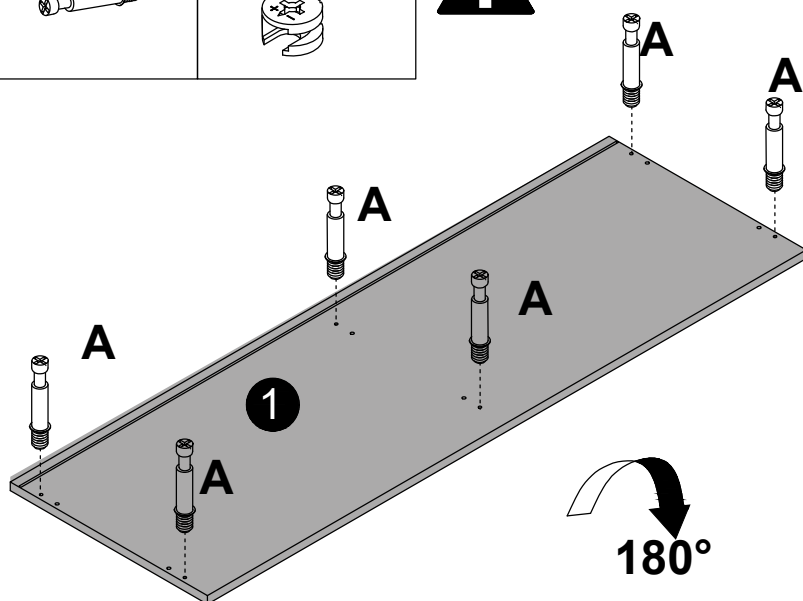


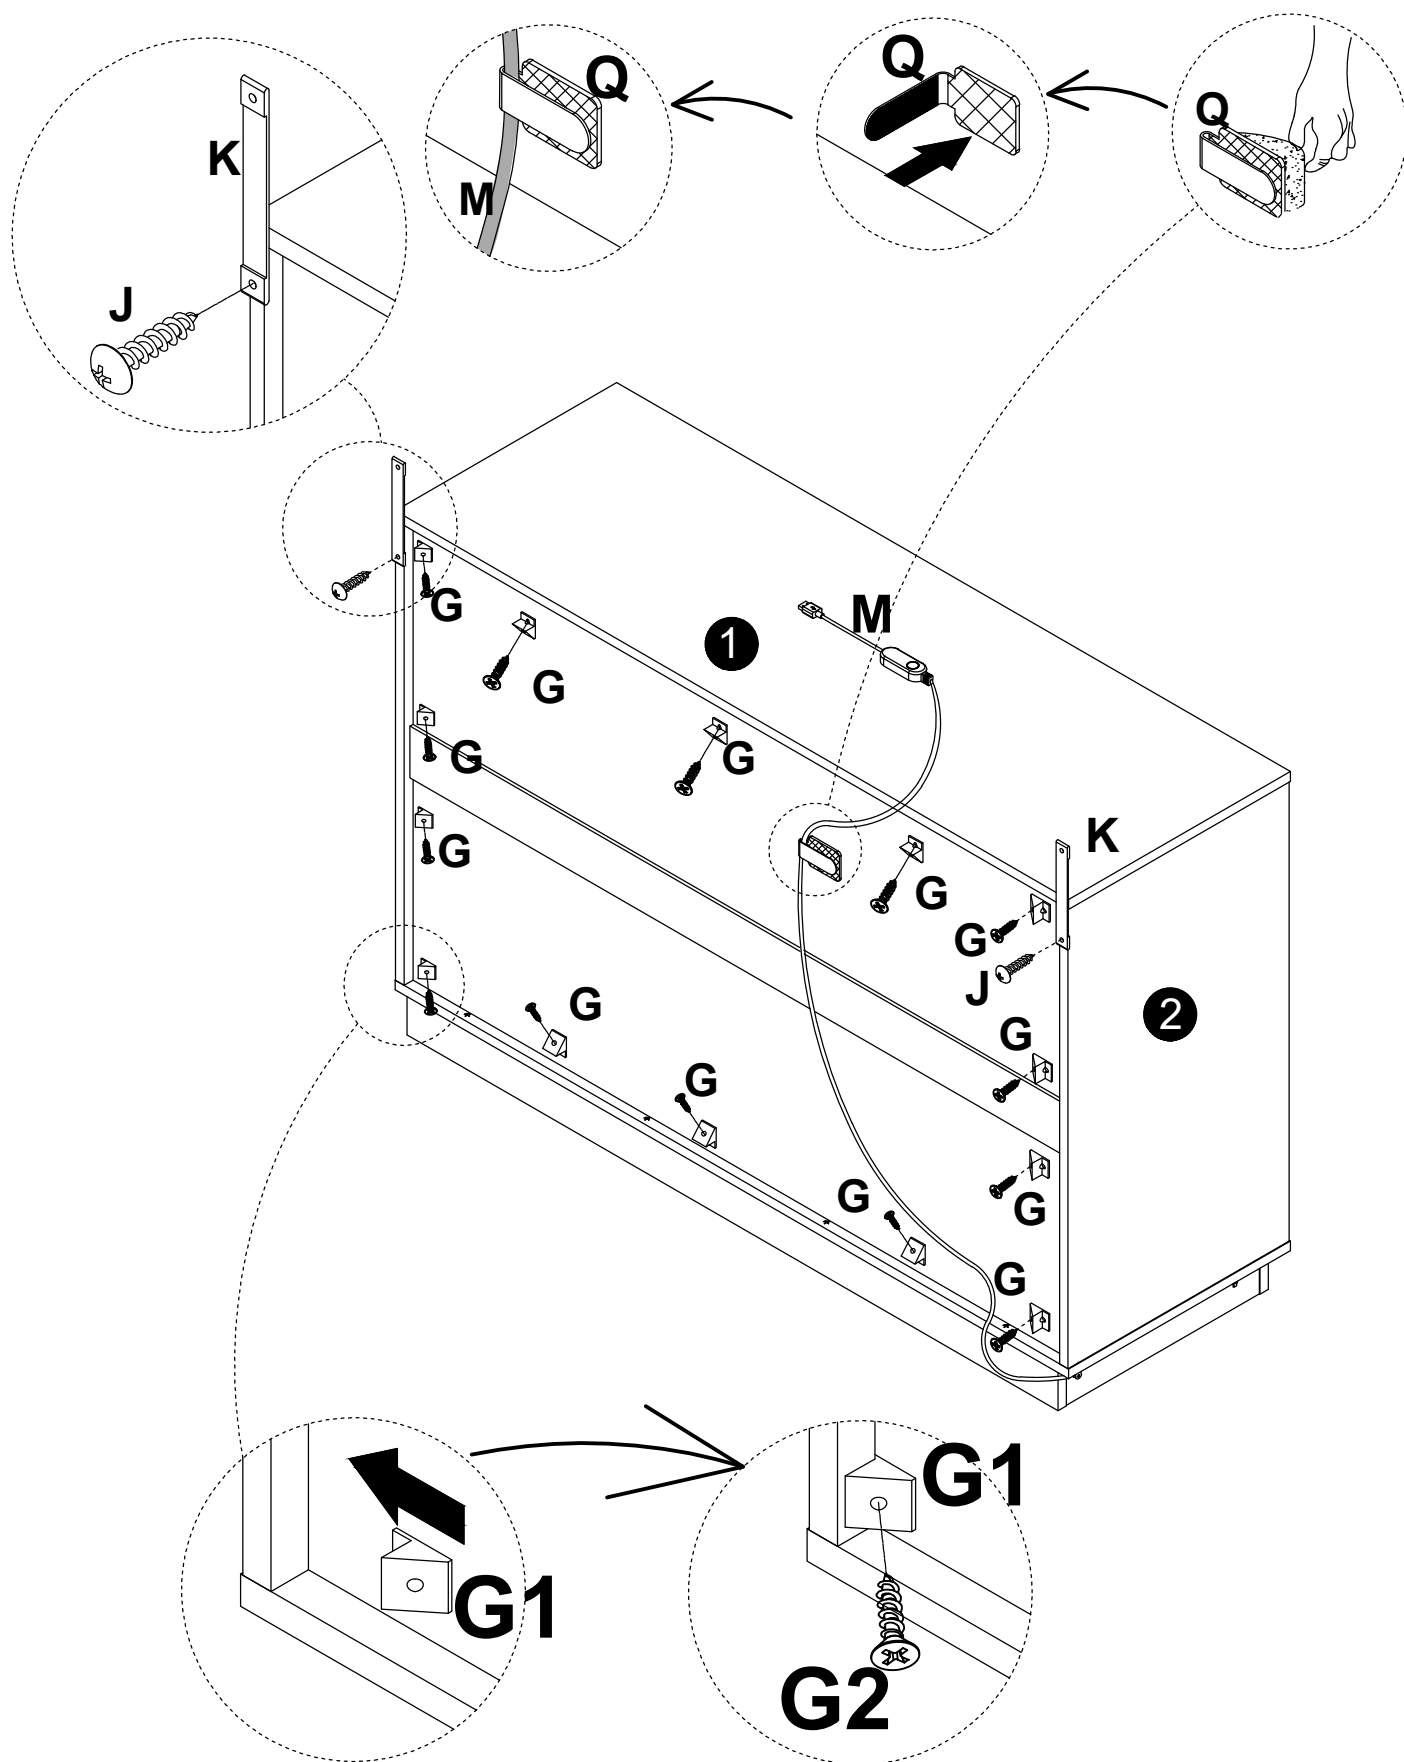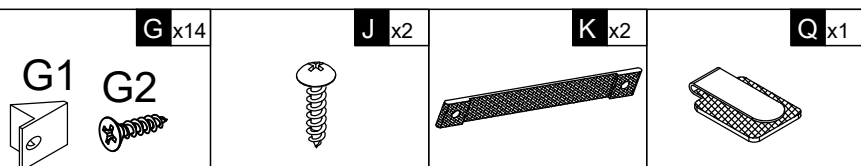

Attention: The drawer is divided into left drawer and right drawer.
The picture shows the left drawer installed in the cabinet.

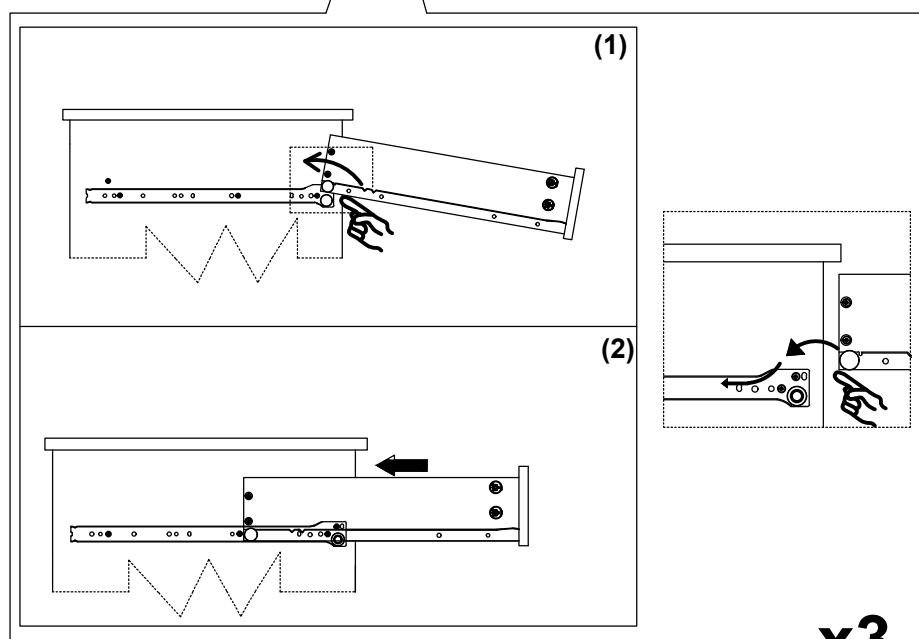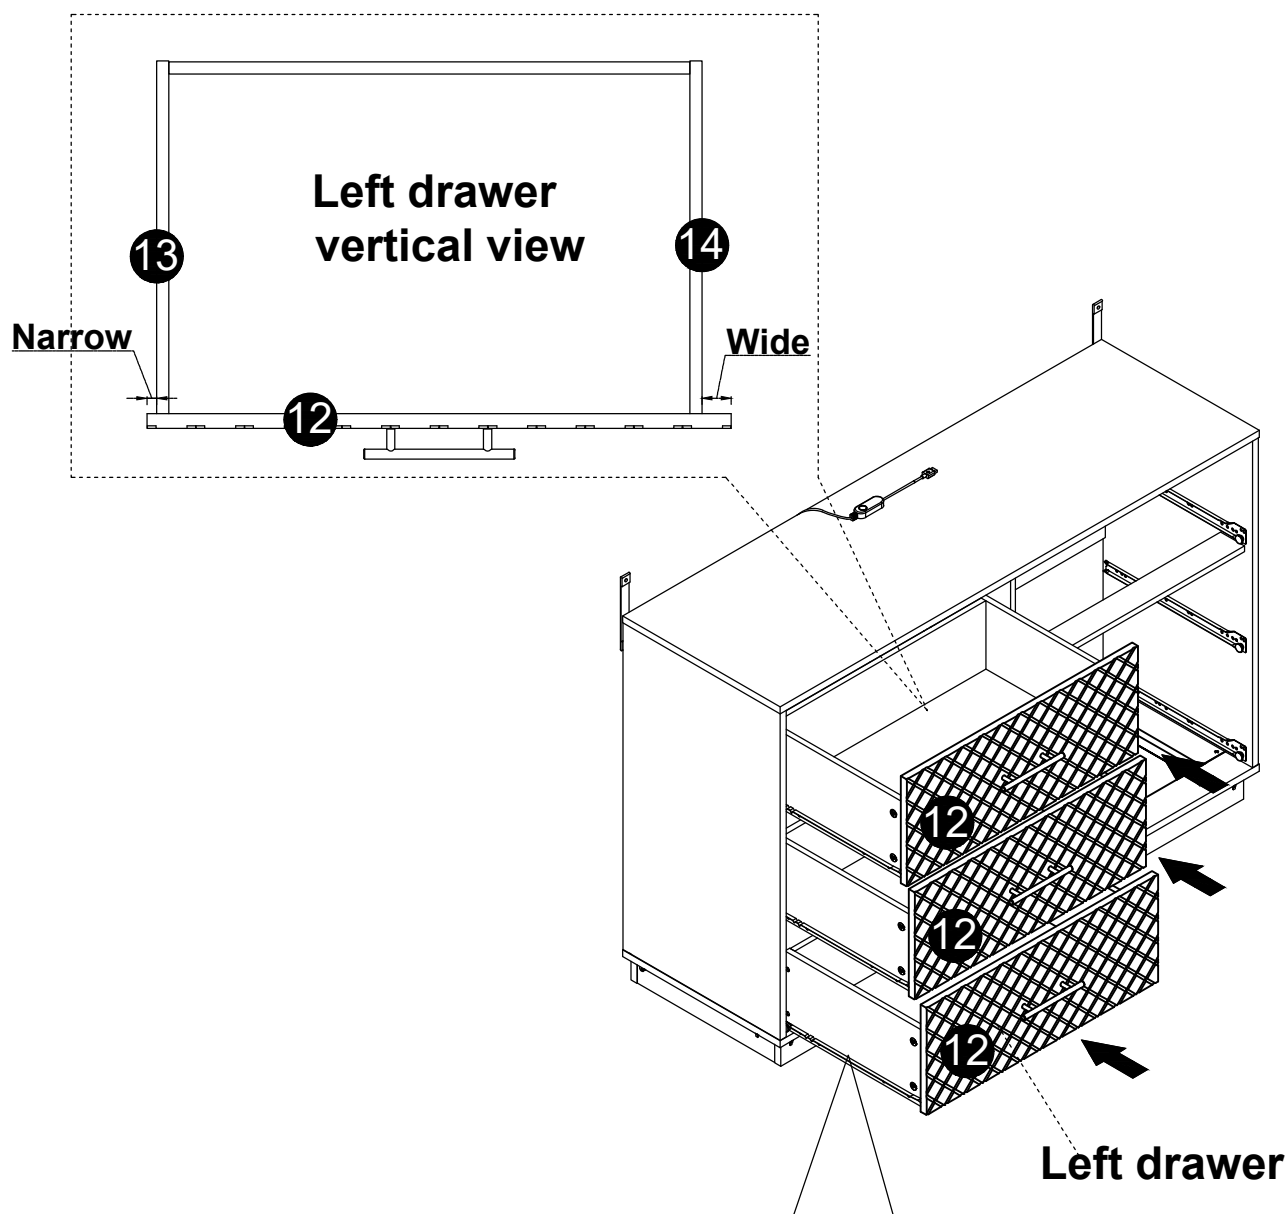

Attention: The drawer is divided into left drawer and right drawer.
The picture shows the right drawer installed in the cabinet.

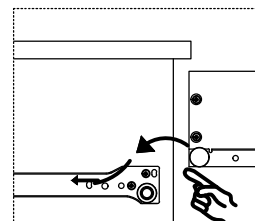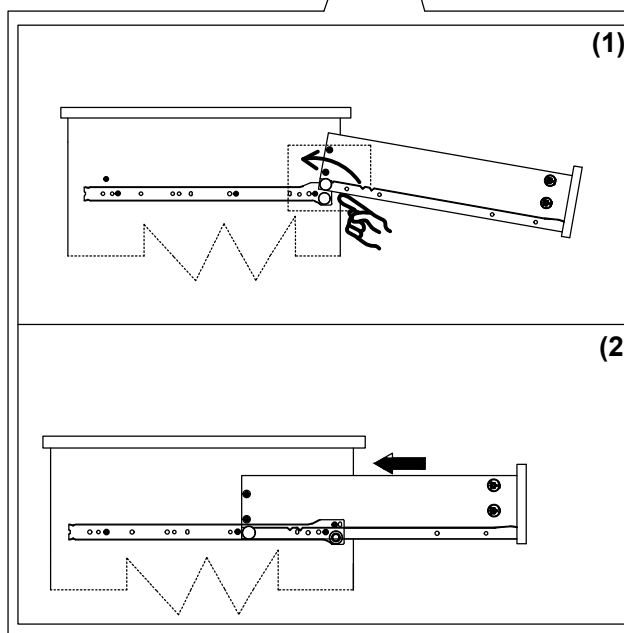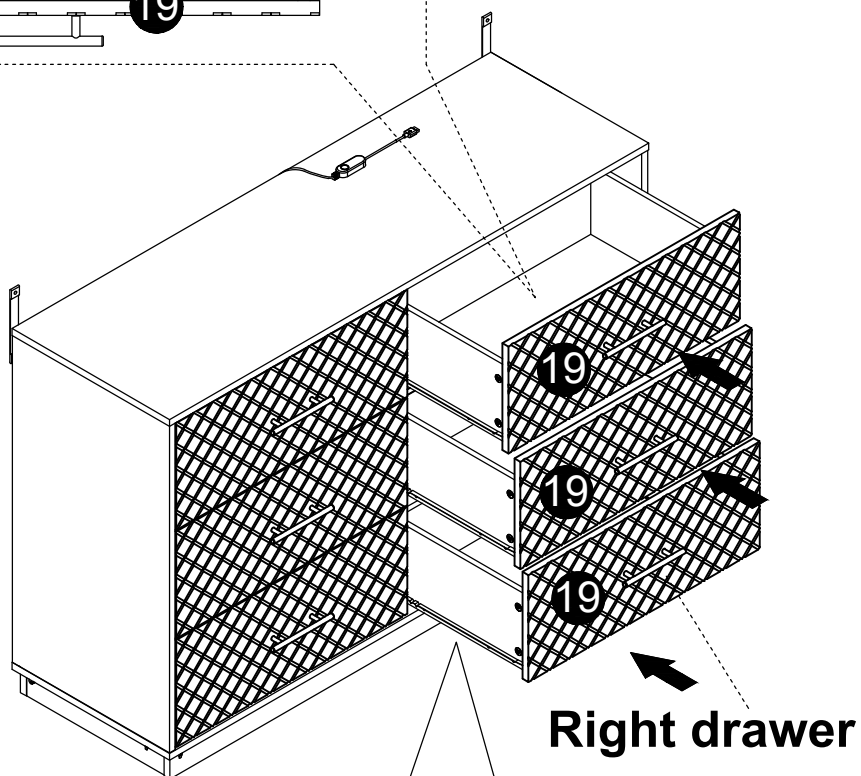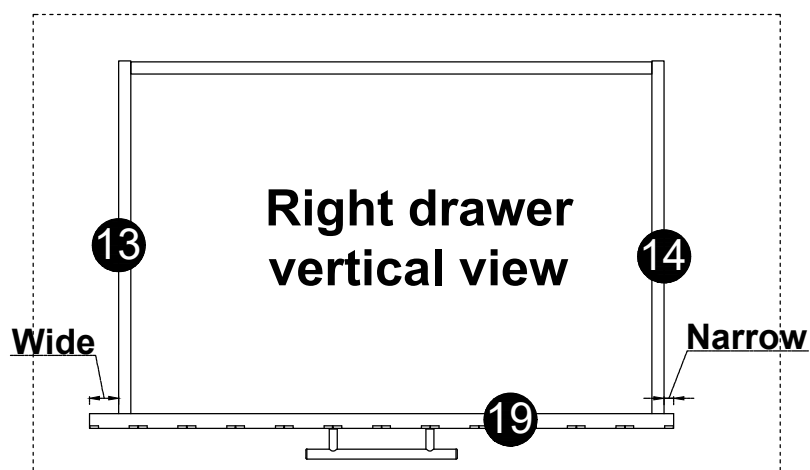


x3


D x2




L x2

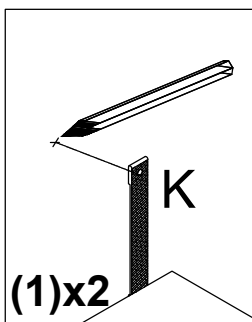


First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

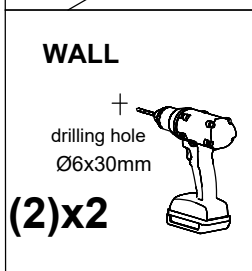


Then use a tape drill to make holes in the wall that are suitable for the product screws.

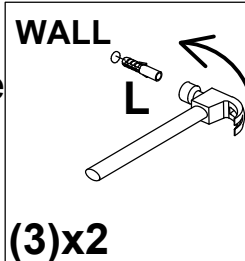

Then, put the expansion bolt into the hole

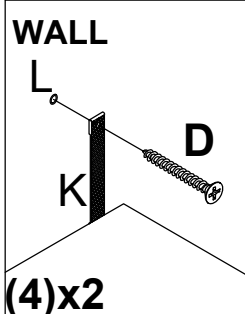


Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

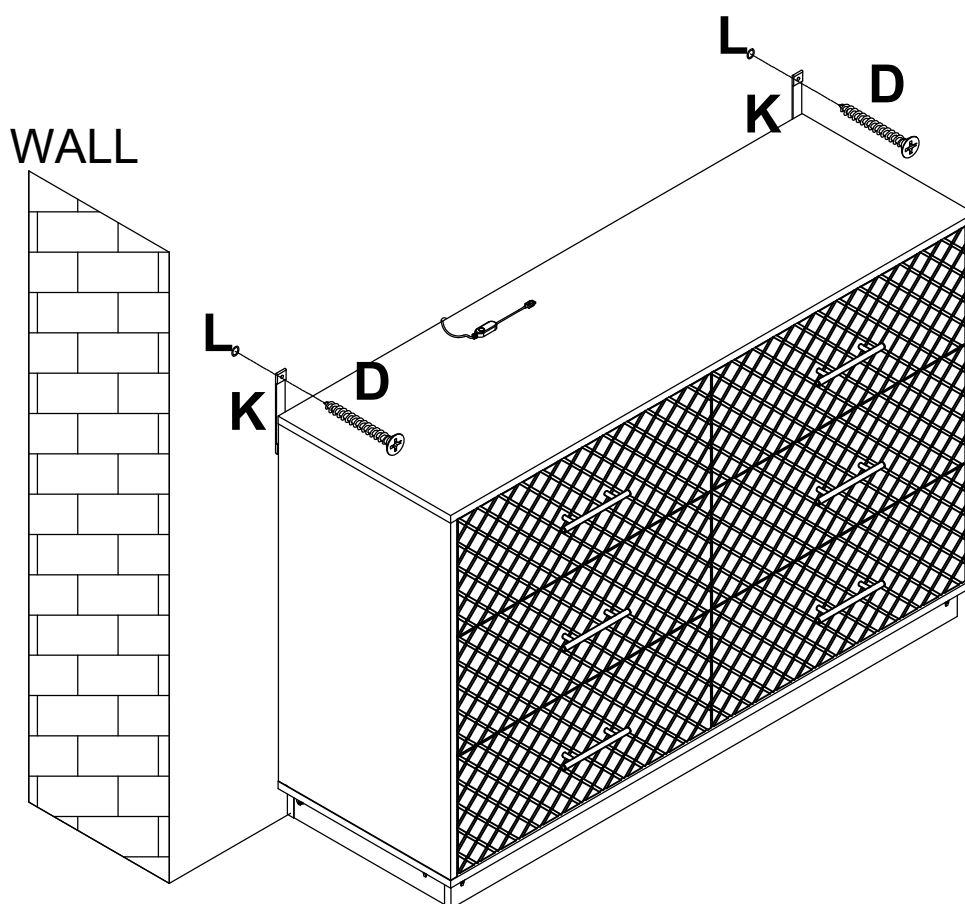

H x1

Done

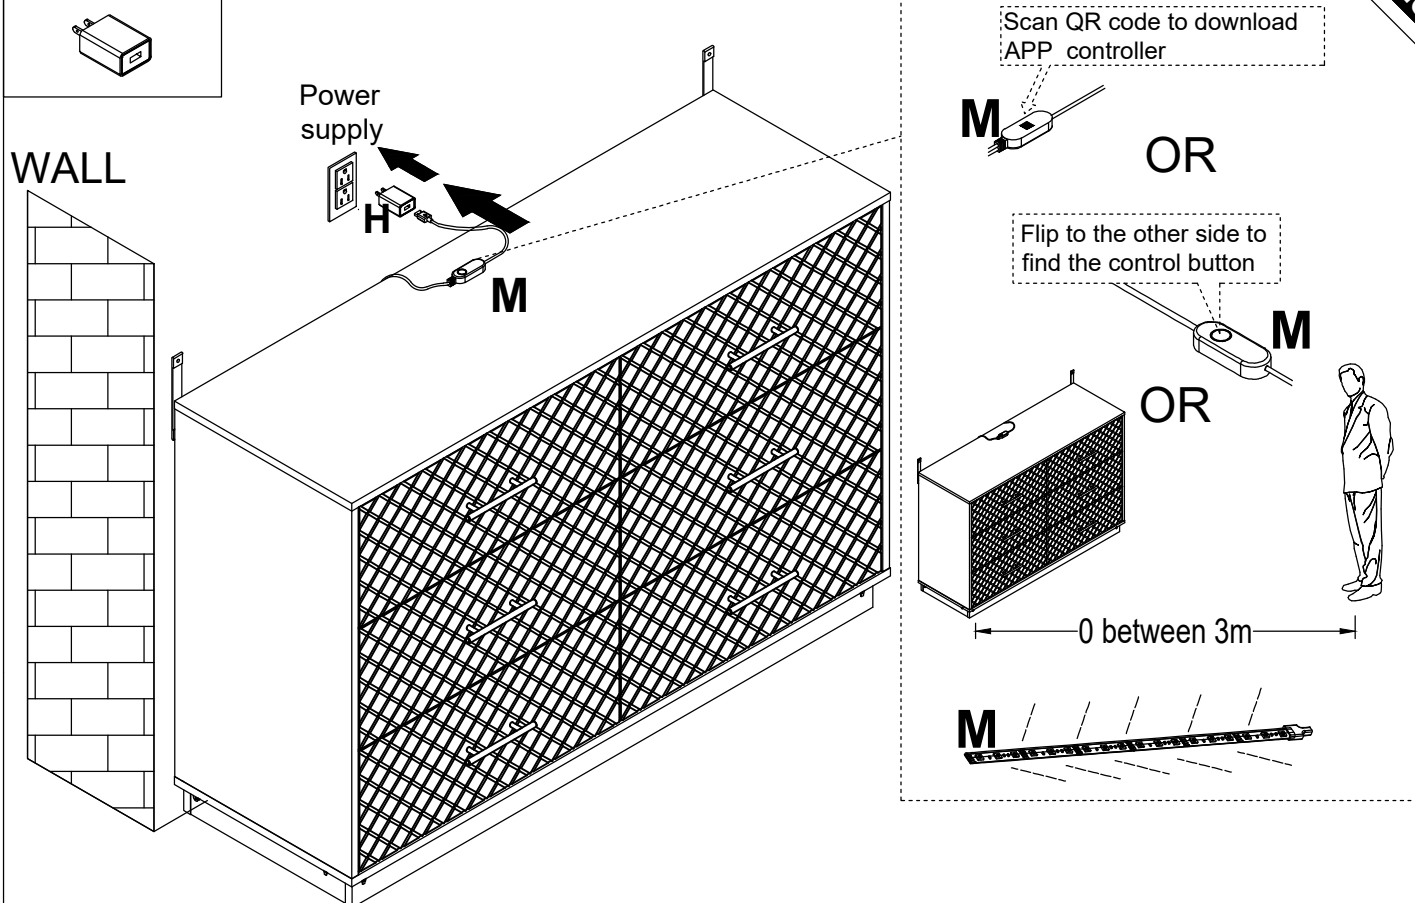

Short Press:

1. **Cycle through seven static colors:** The light cycles through seven predefined static colors.
2. **Three-color jump mode:** The light dynamically jumps between three specific colors.
3. **Sound control mode:** The light responds to sound input, changing colors or patterns.
4. **Power off:** The light turns off.
5. **Loop:** The sequence repeats in a continuous loop.

Long Press (3 seconds):

1. **First long press (3 seconds):** Activates the radar function (LED flashes once to indicate activation).
2. **Second long press (3 seconds):** Deactivates the radar function (LED flashes three times to indicate deactivation).
3. **Toggle in a loop:** Each long press toggles between activating and deactivating the radar function.

Radar Function:

1. **Automatic turn-off:** If a person moves away and no motion is detected for 60 seconds, the light automatically turns off.
2. **Automatic turn-on:** When a person comes within a 3-meter range, the light automatically turns on via motion detection.

This functionality provides a versatile and user-friendly lighting system with both manual and automatic control options.