

J5V004

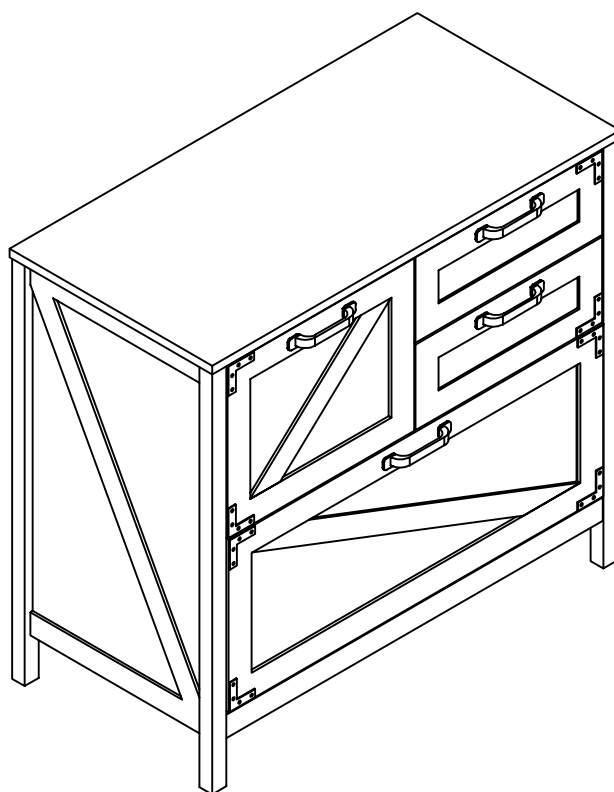


As this item contains many parts, please read the installation instruction carefully before installation. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice @gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

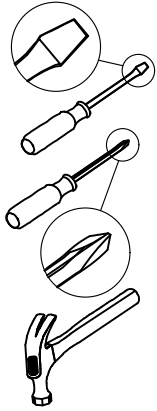


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

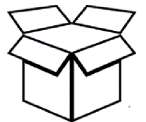


Board Identification

Not actual size

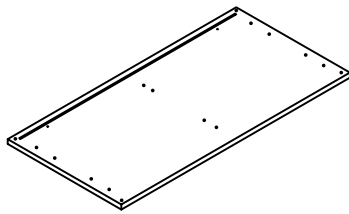


①
TOP PANEL

Qty:1

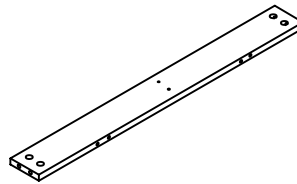


②
DRAWER UNDER THE
BACK SUPPORT BAR

Qty:1

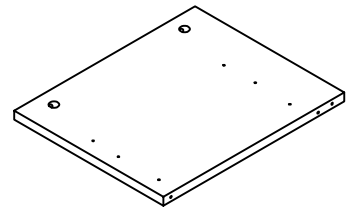


③
CENTER DIVIDER

Qty:1

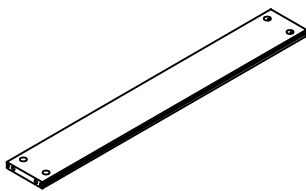


④
REAR SUPPORT BAR

Qty:1

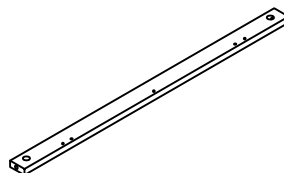


⑤
LOWER FRONT
SUPPORT BAR

Qty:1

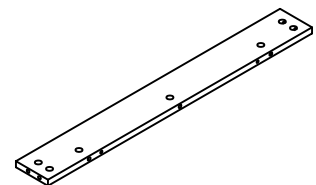


⑥
BOTTOM FRONT
SUPPORT BAR

Qty:1

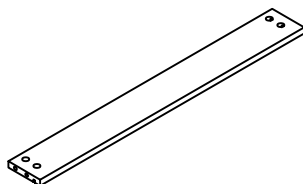


⑦
BOTTOM REAR
SUPPORT BAR

Qty:1

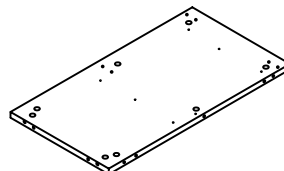

⑧
LEFT SIDE PANEL

Qty:1

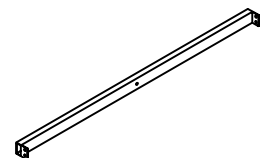


⑨
DRAWER UNDER THE
FRONT SUPPORT IRON PIPE

Qty:1

Board Identification


Not actual size

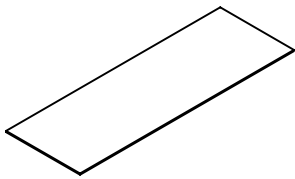

⑩

LOWER BACK PANEL


Qty:1

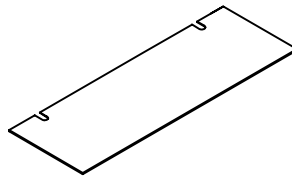

⑪

UPPER BACK PANEL


Qty:1

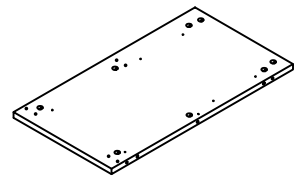

⑫

RIGHT SIDE PANEL


Qty:1

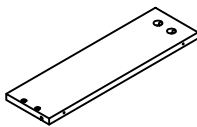

⑬

SMALL DRAWER
LEFT SIDE


Qty:2

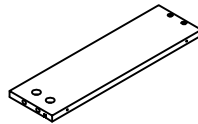

⑭

SMALL DRAWER
RIGHT SIDE


Qty:2



⑮

SMALL DRAWER
BACK PANEL


Qty:2

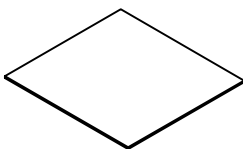

⑯

SMALL DRAWER
BOTTOM


Qty:2

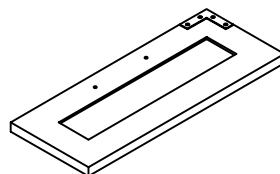

⑰

UPPER SMALL
DRAWER FRONT

Qty:1

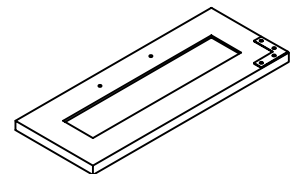


⑱

LOWER SMALL
DRAWER FRONT


Qty:1

Board Identification


Not actual size

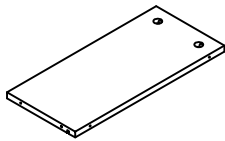


①9
DRAWER LEFT SIDE
Qty:2

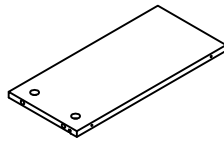


②0
DRAWER RIGHT SIDE
Qty:2

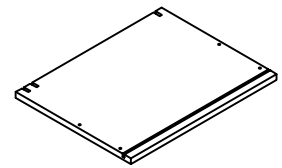


②1
DRAWER BACK PANEL
Qty:1

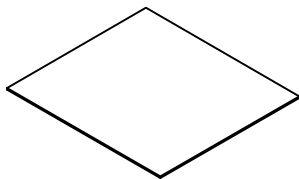


②2
DRAWER BOTTOM
Qty:1

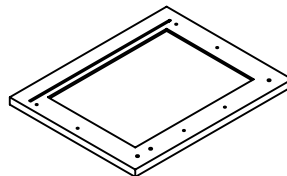


②3
DRAWER FRONT
Qty:1

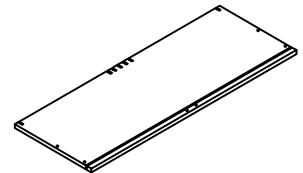


②4
DRAWER BACK PANEL
Qty:1

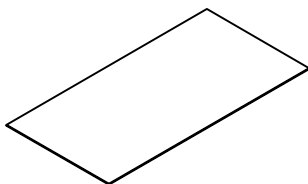

②5
DRAWER BOTTOM
Qty:1




②6
DRAWER BOTTOM
SUPPORT BAR
Qty:1

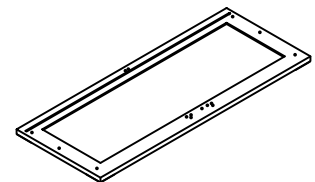

②7
DRAWER FRONT
Qty:1

Board Identification

Not actual size

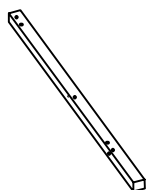

②⑧

LEFT FRONT
CABINET LEG


Qty:1



②⑨

LEFT REAR
CABINET LEG


Qty:1

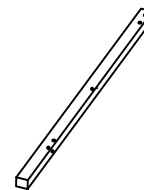

③①

RIGHT FRONT
CABINET LEG

Qty:1

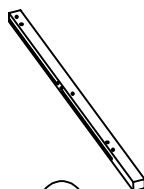


③②

RIGHT REAR
CABINET LEG


Qty:1

Board Identification


Not actual size

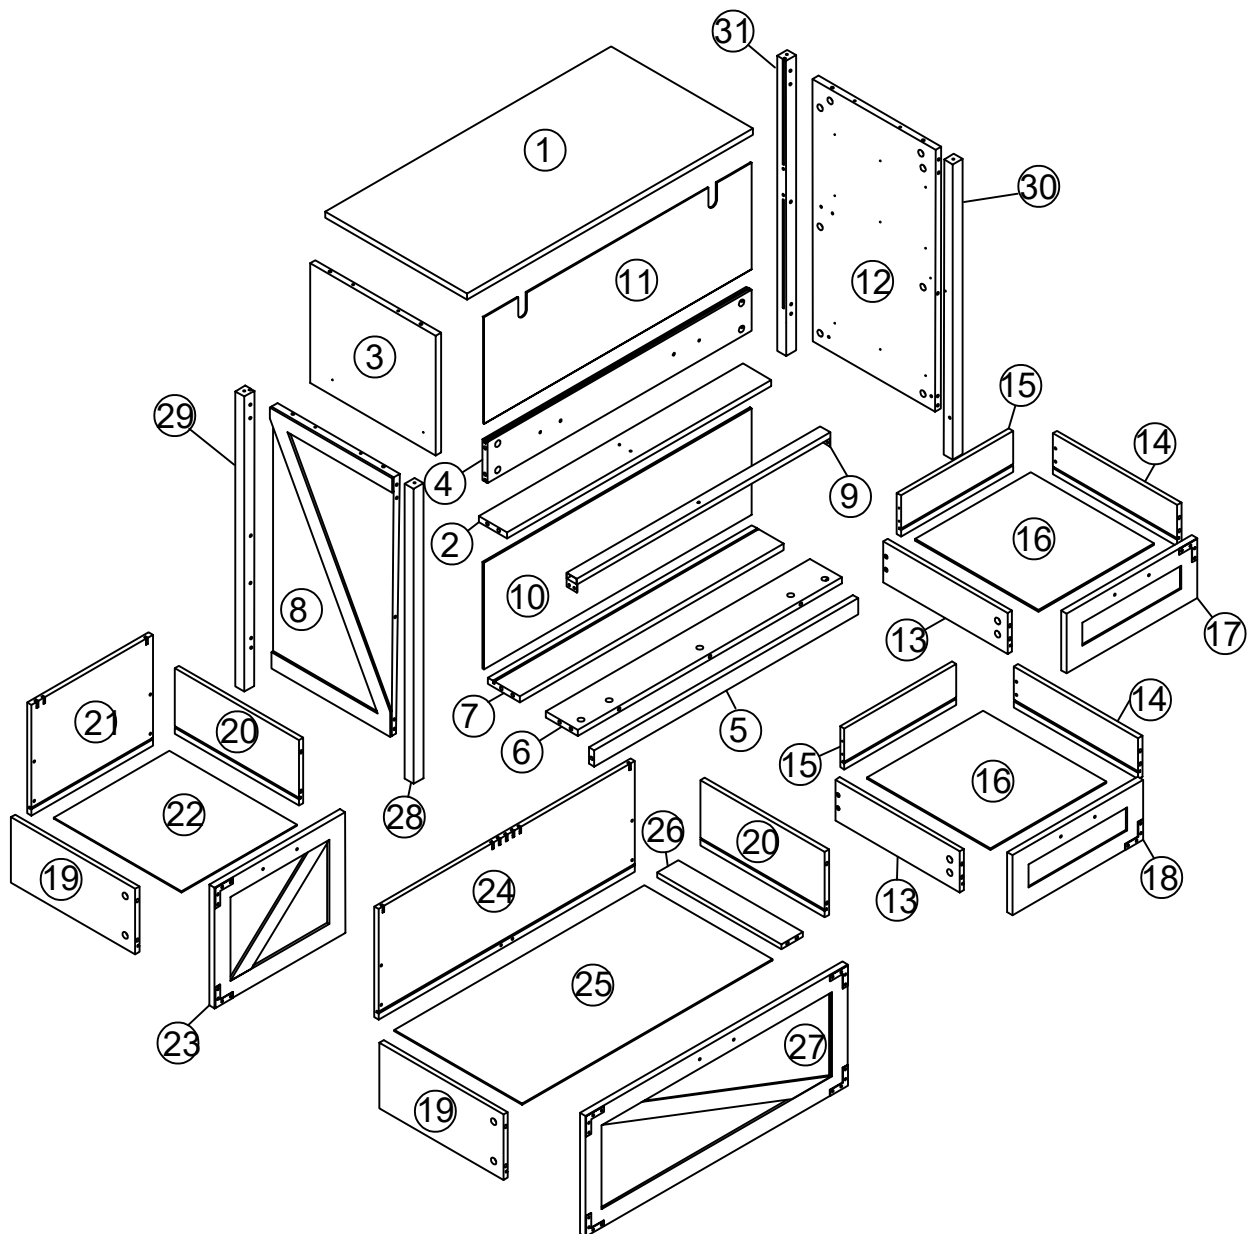


Part List

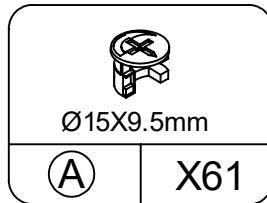


CAM LOCK
spare : 3

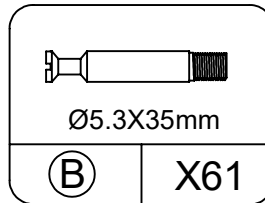


CAM BOLT
spare : 3

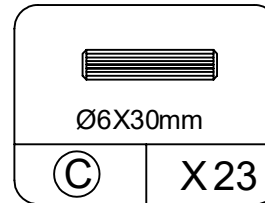


WOOD DOWEL
spare : 2

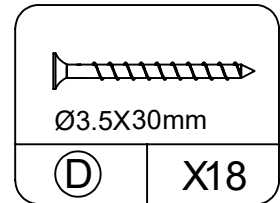


SCREW
spare : 2

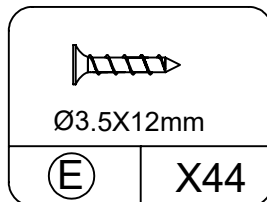


SCREW
spare : 3

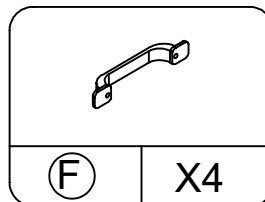


HANDLE

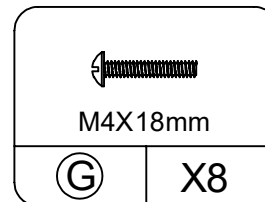


SCREW
spare : 1

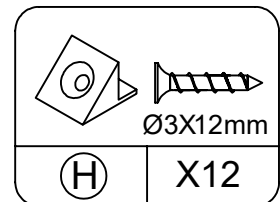


BACK PANEL BUCKLE
spare : 1

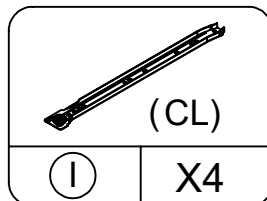


LEFT CABINET MEMBER

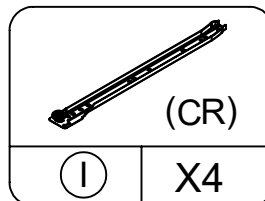

RIGHT CABINET MEMBER

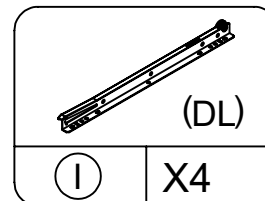


LEFT DRAWER RUNNER

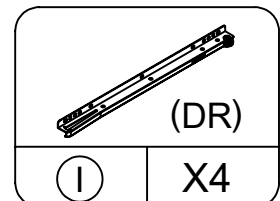

RIGHT DRAWER RUNNER



TIPPING RESTRAINT HARDWARE KIT

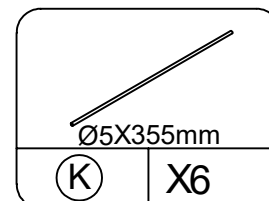


STAINLESS STEEL TUBE


Part List

Cam Lock Fastening System



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

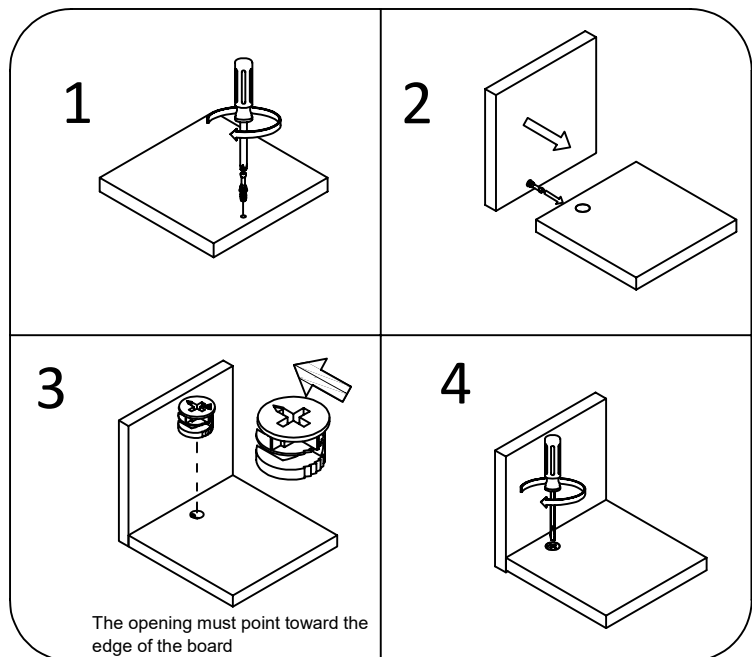


STEP1

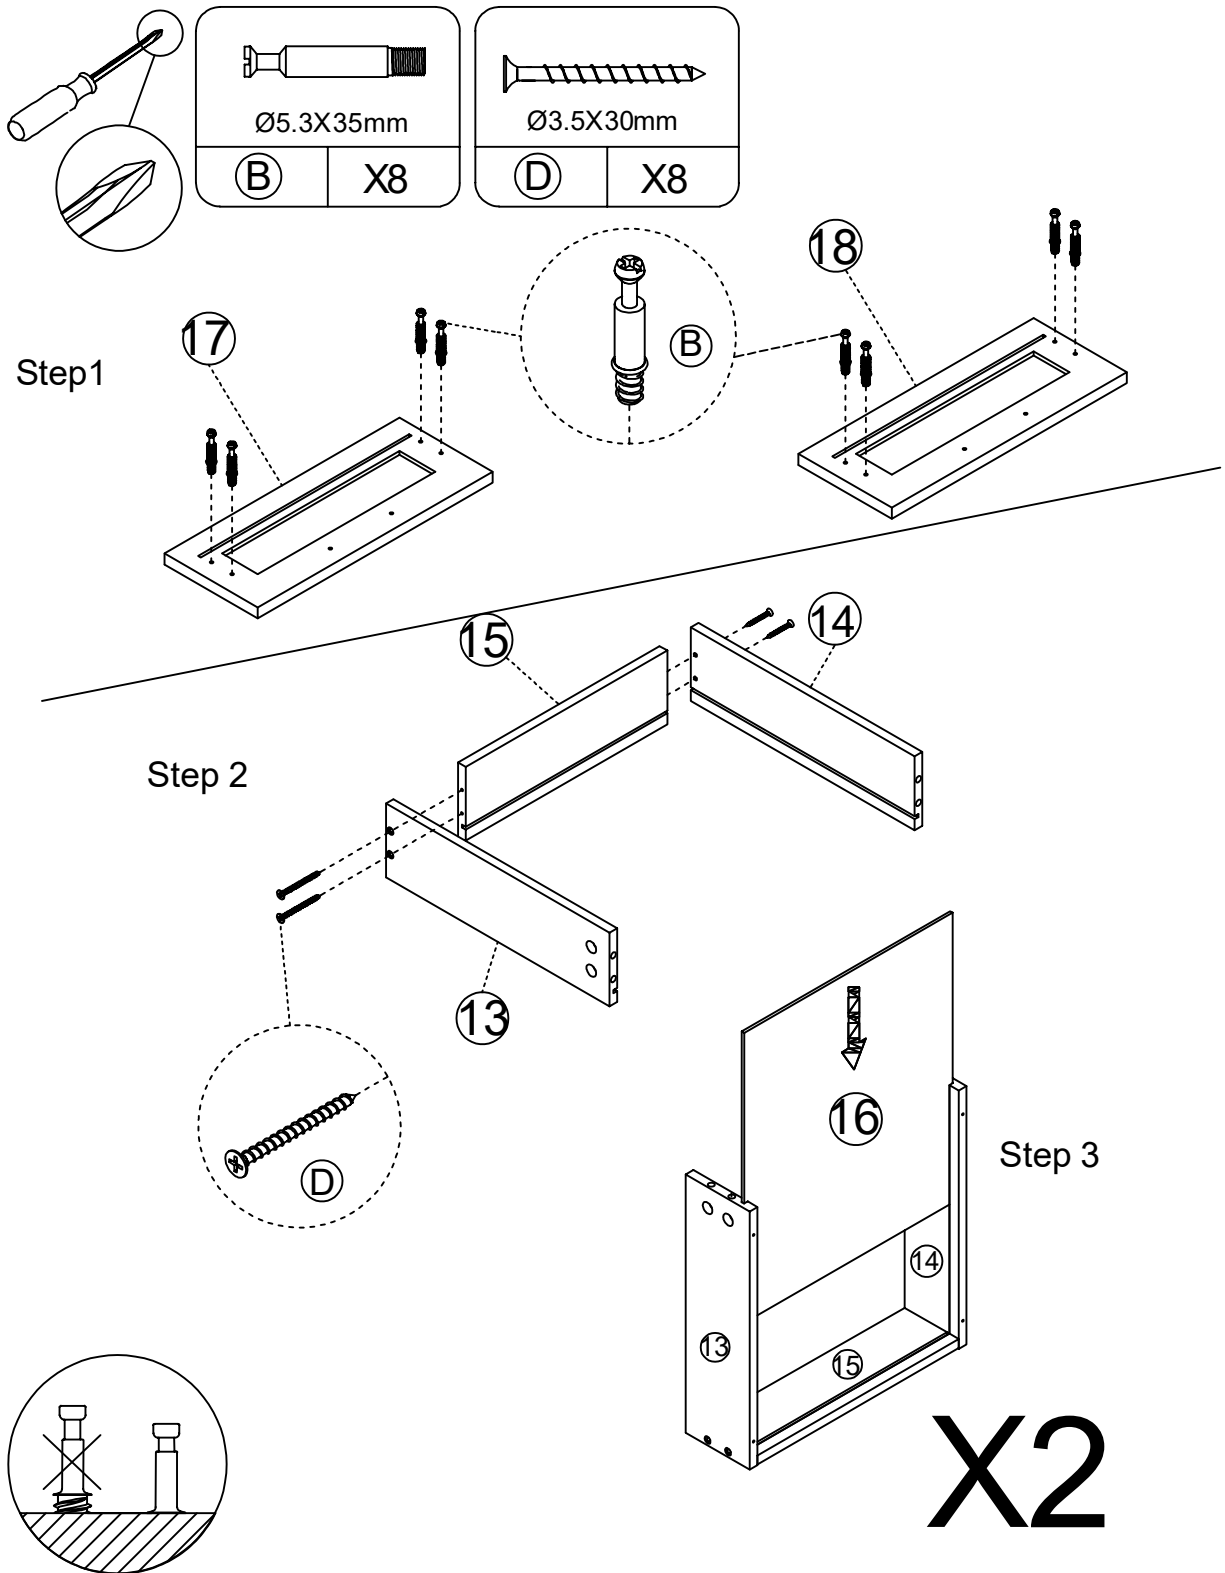

STEP2




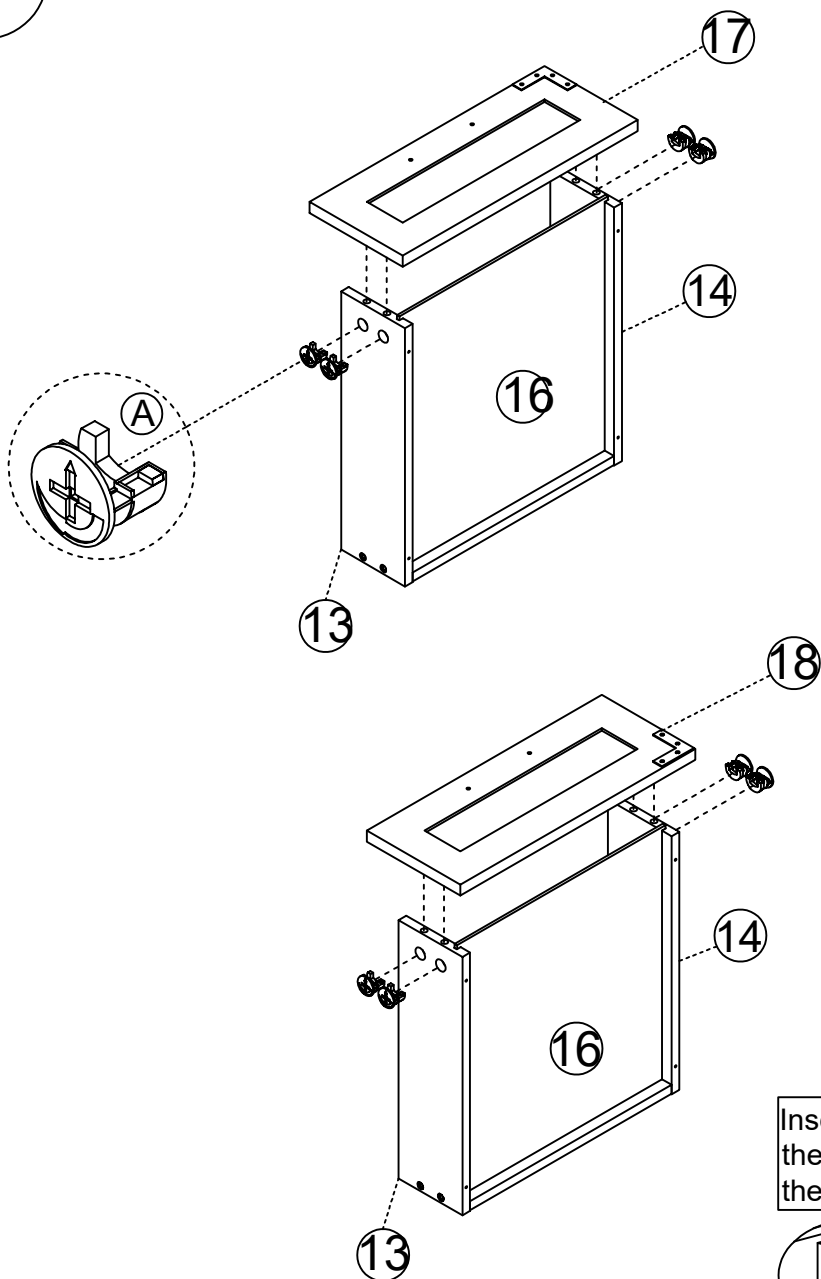
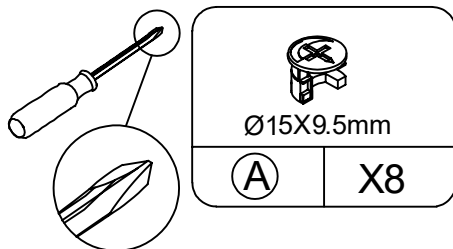


Insert the cam bolt into the hole first then insert the cam lock and lock it.





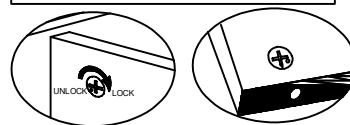


Proper orientation of CAM LOCK




STEP3

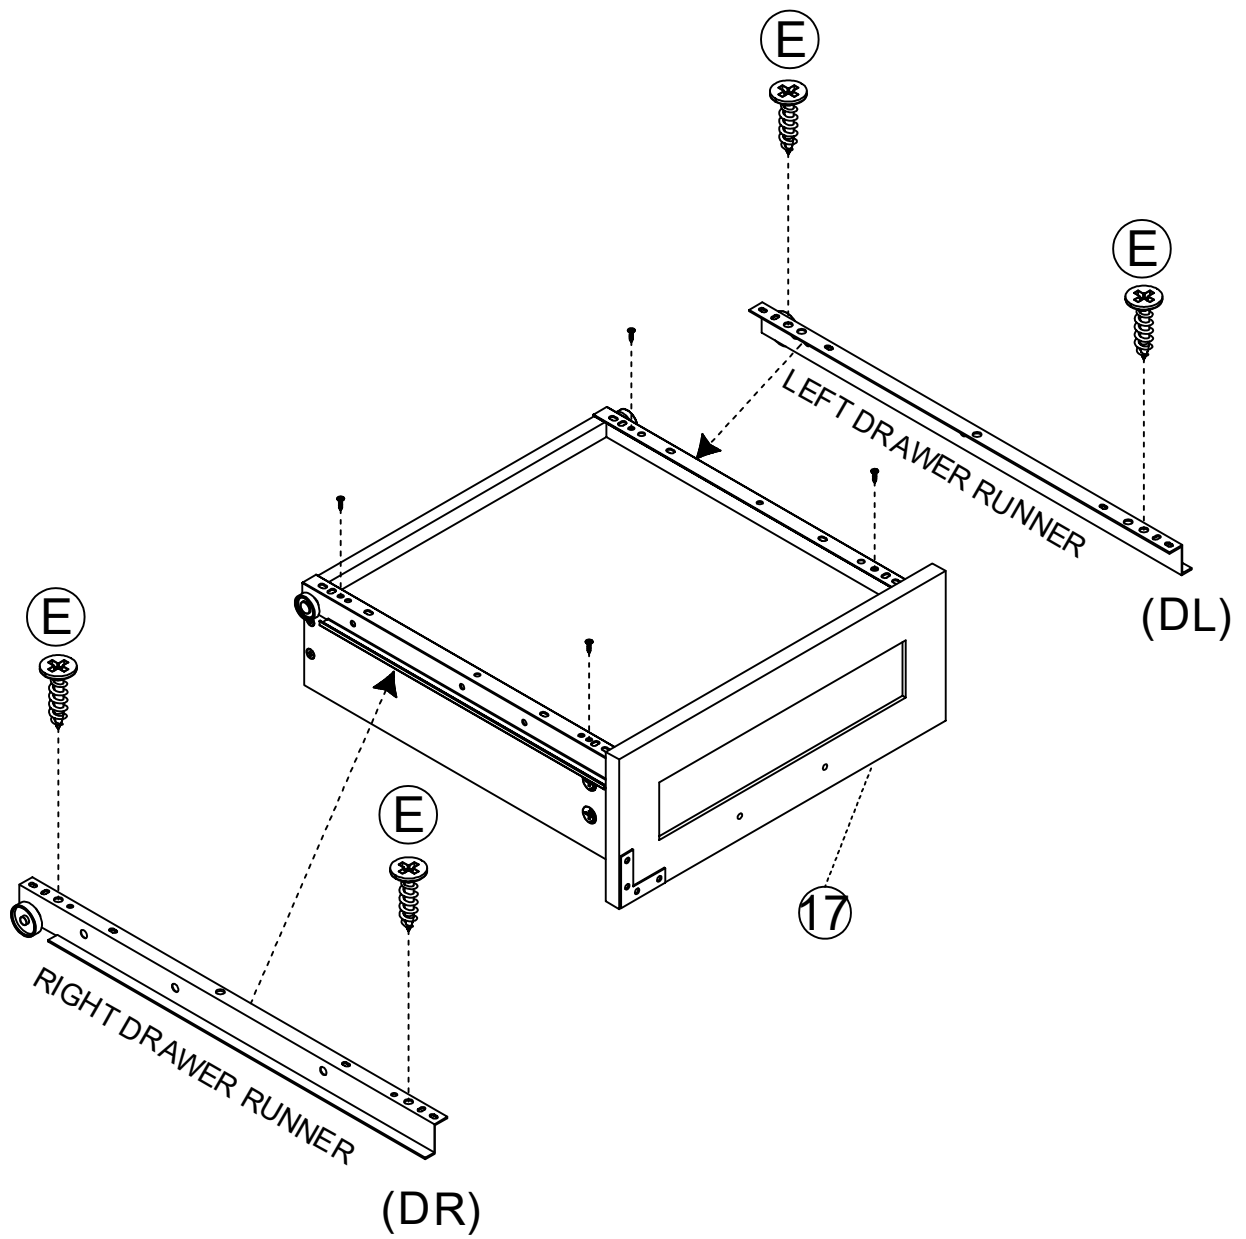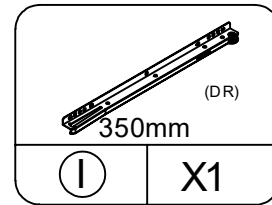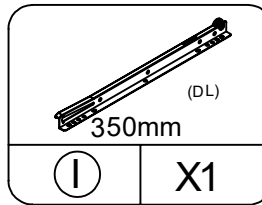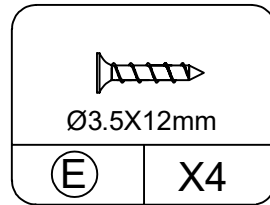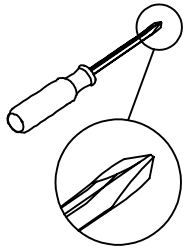







STEP4

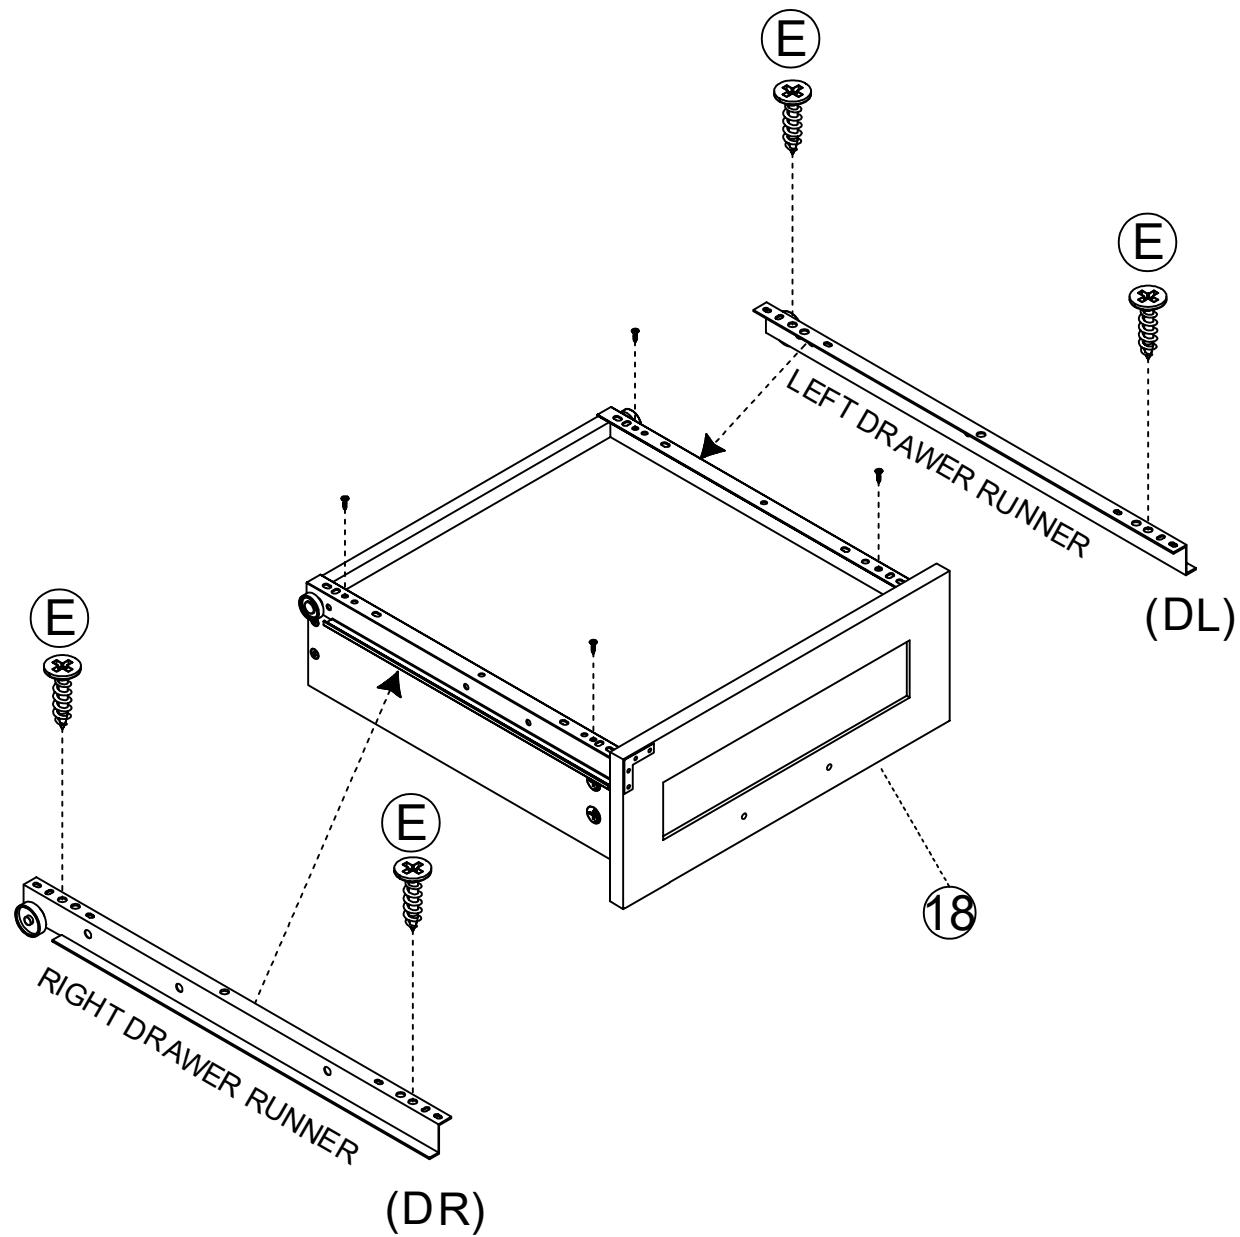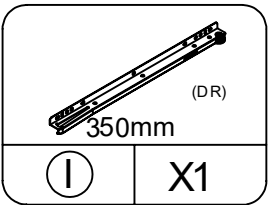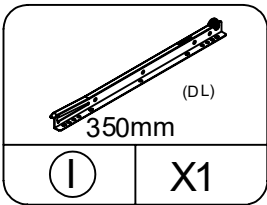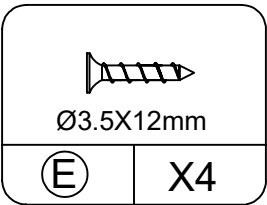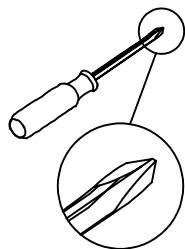


STEP5

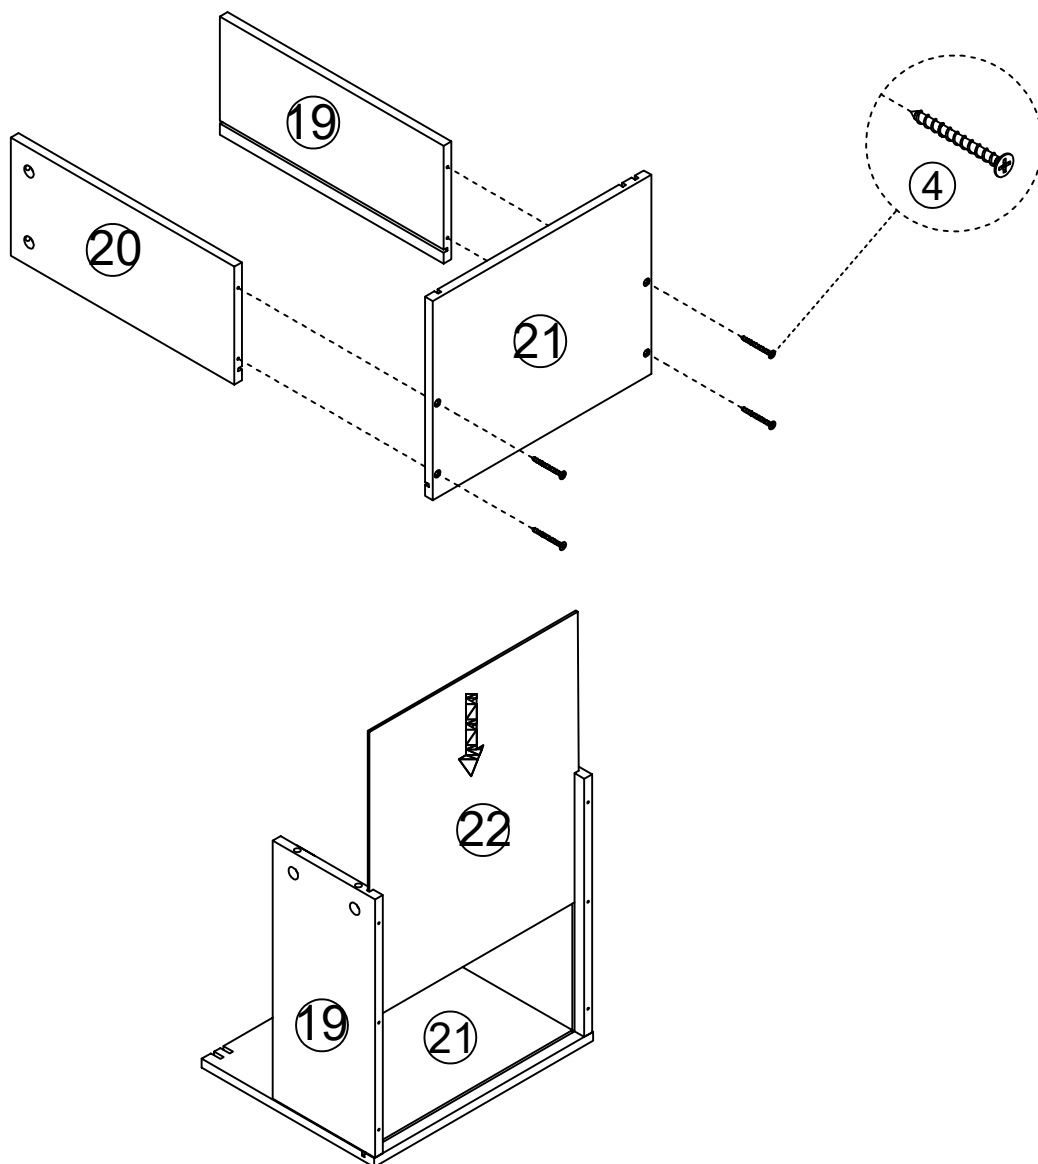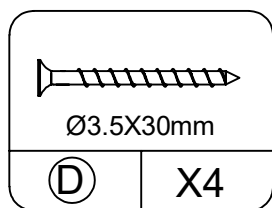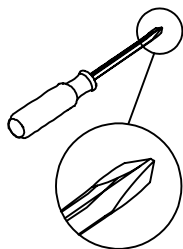

STEP6

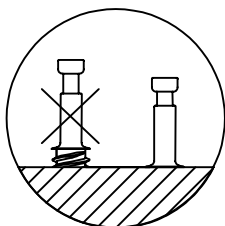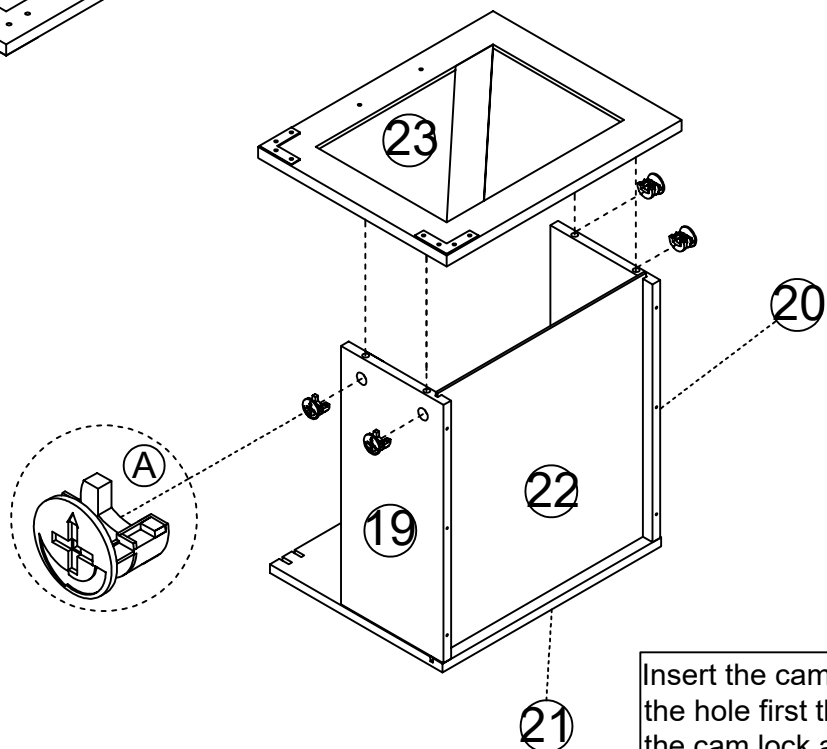
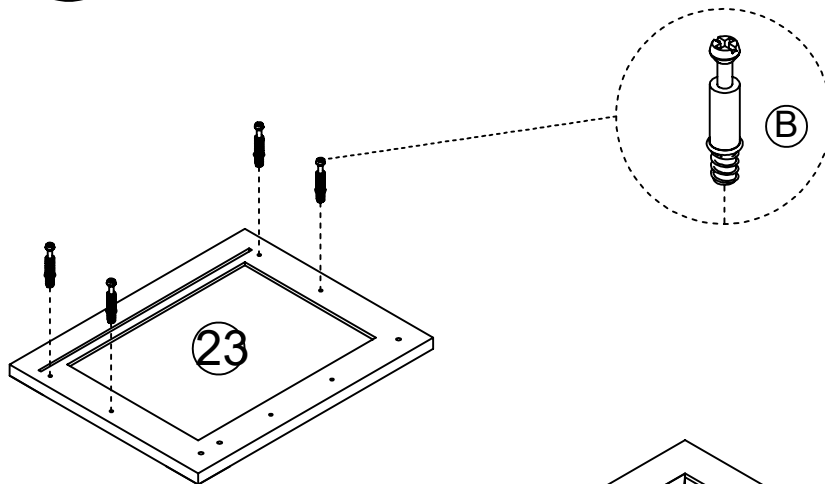
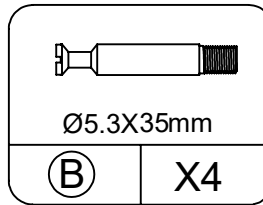
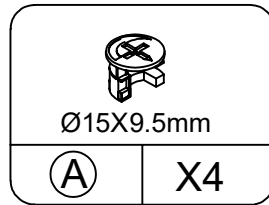
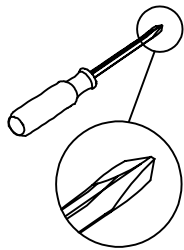


Insert the cam bolt into the hole first then insert the cam lock and lock it.





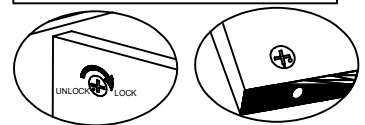


Proper orientation of CAM LOCK


STEP7

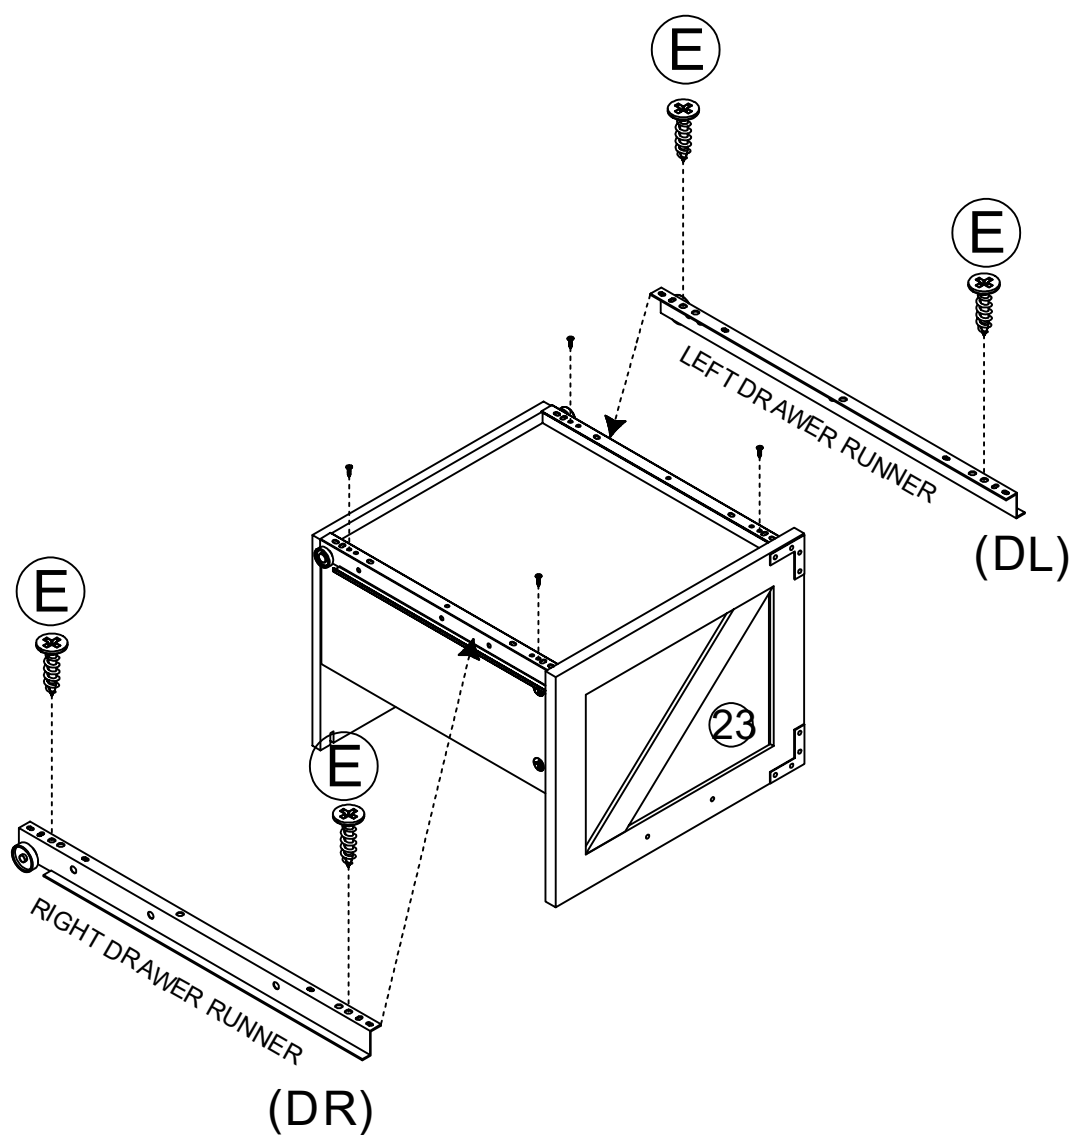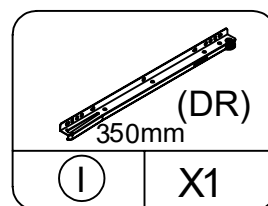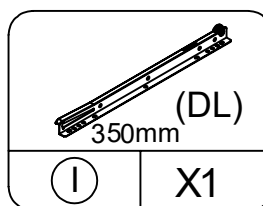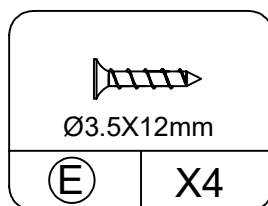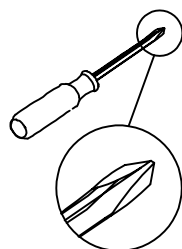

STEP8

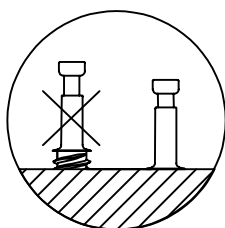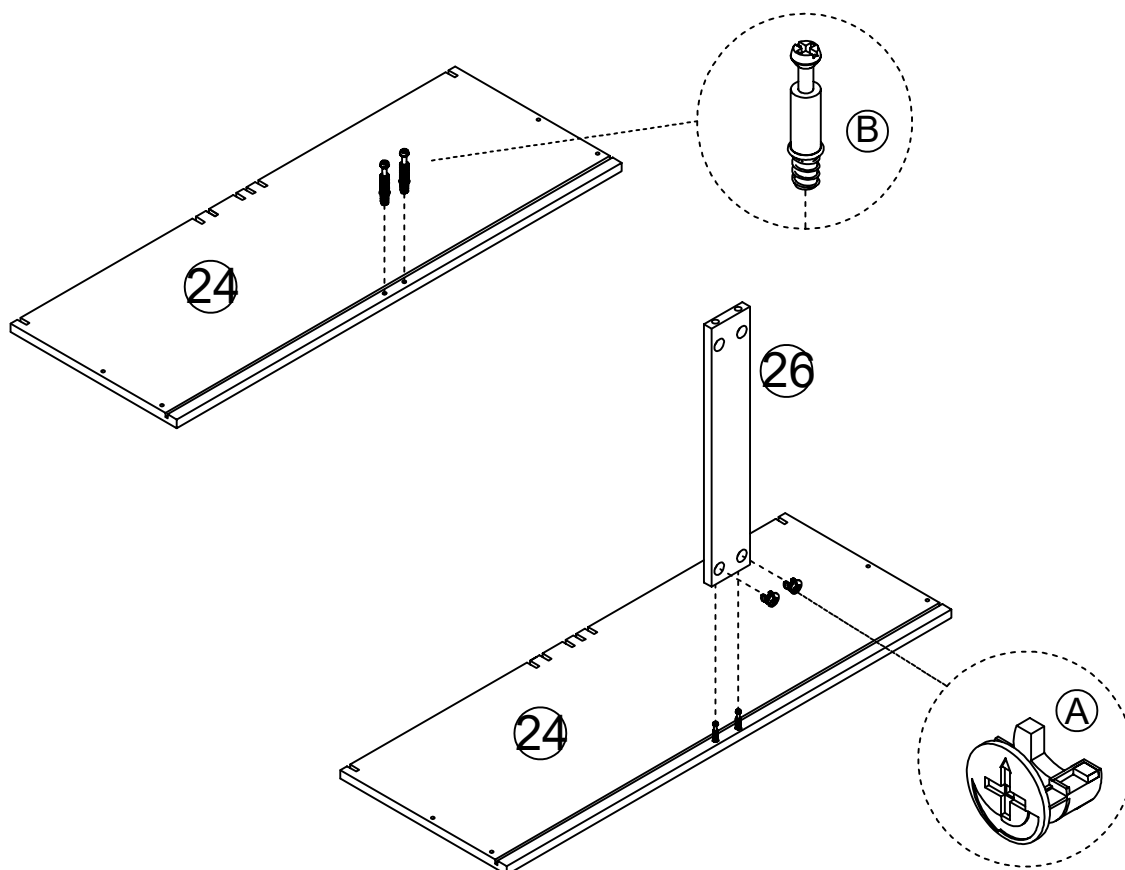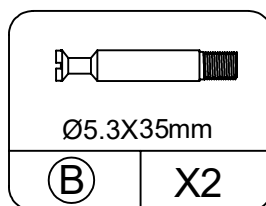
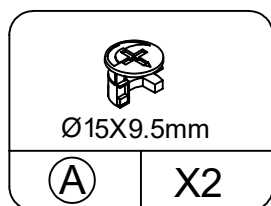
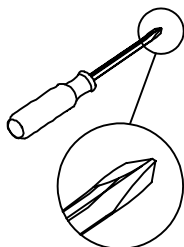


Insert the cam bolt into the hole first then insert the cam lock and lock it.

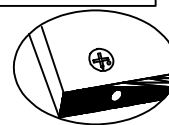


Proper orientation of CAM LOCK






STEP9

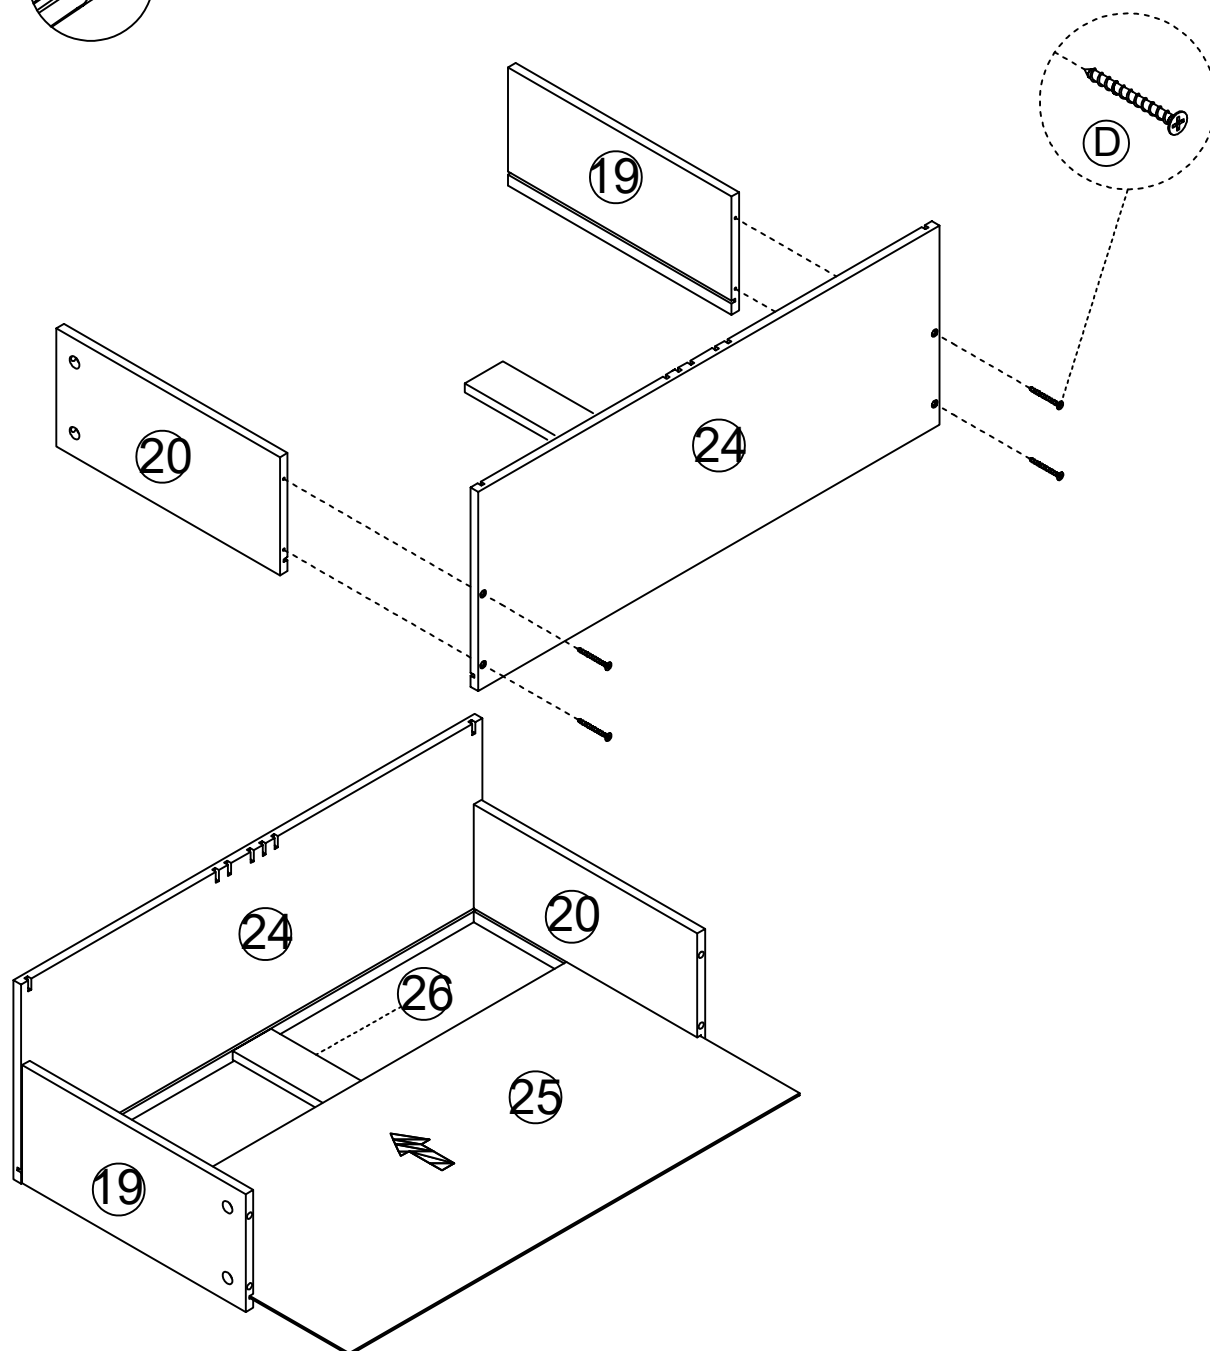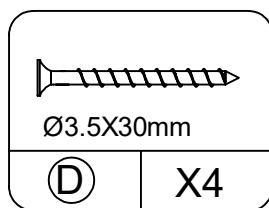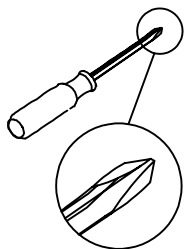









STEP10

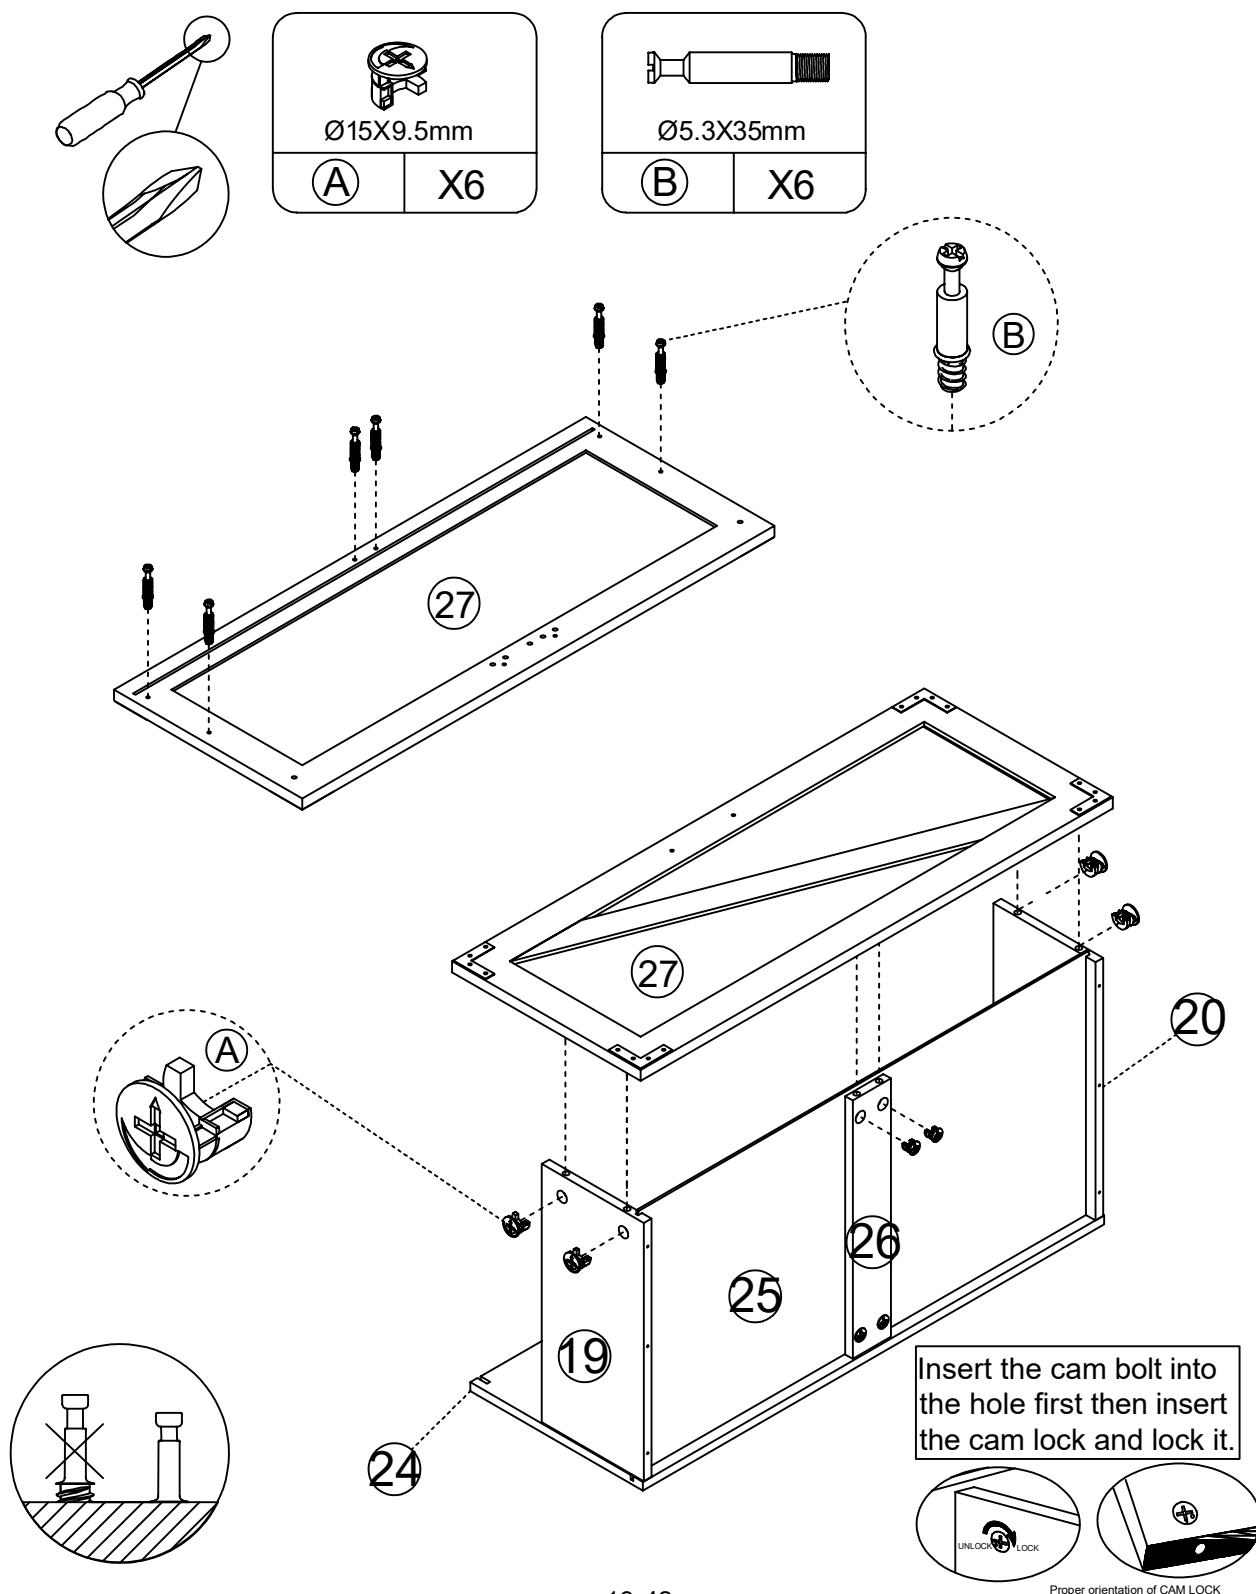


STEP11

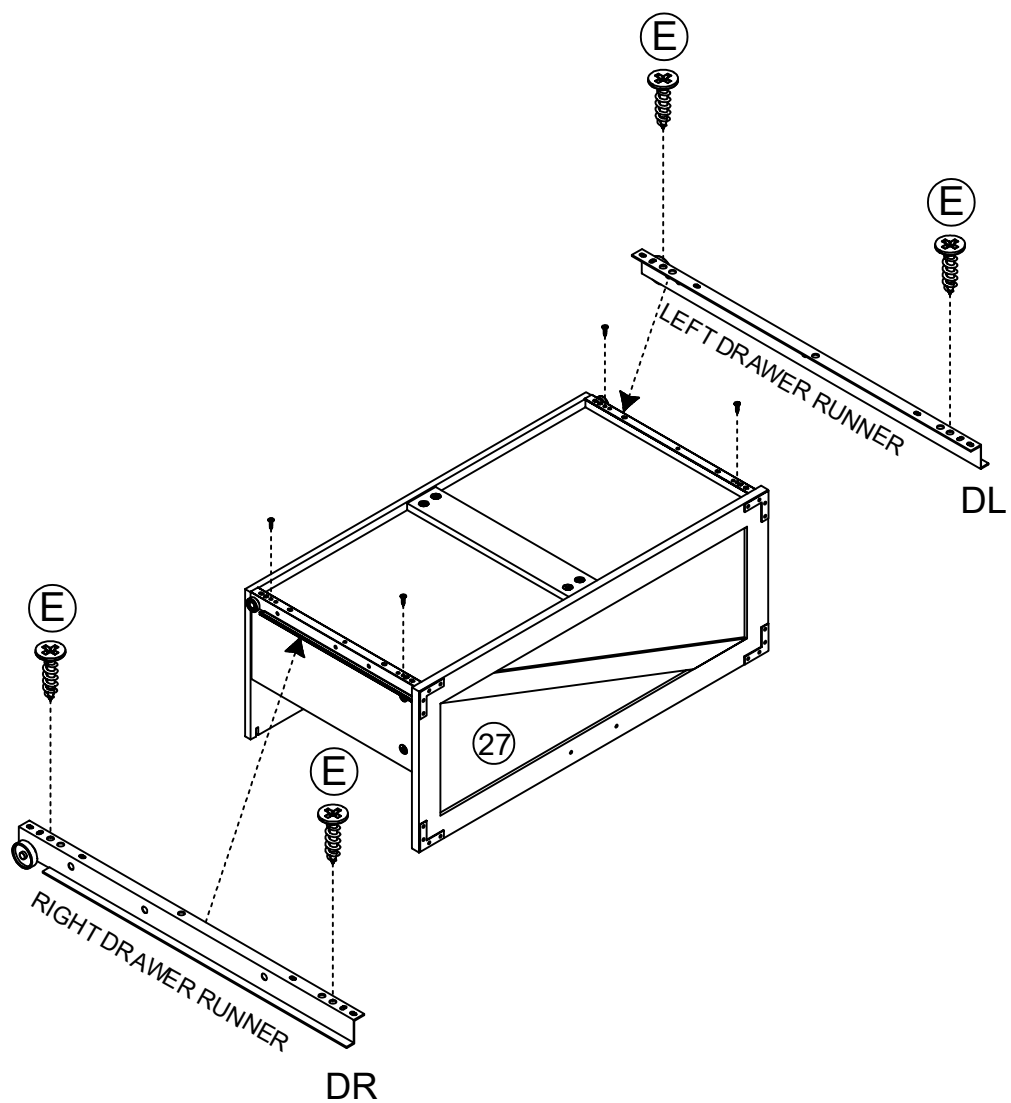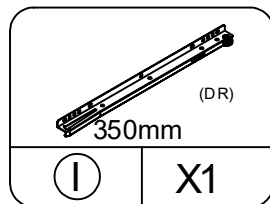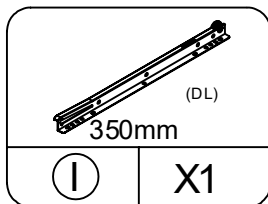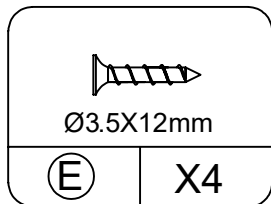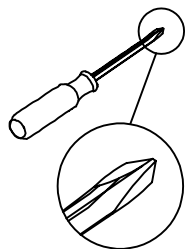


STEP12

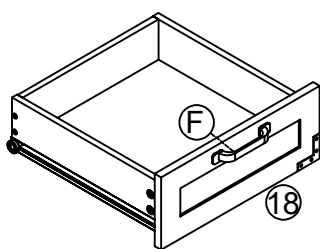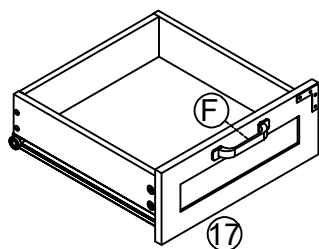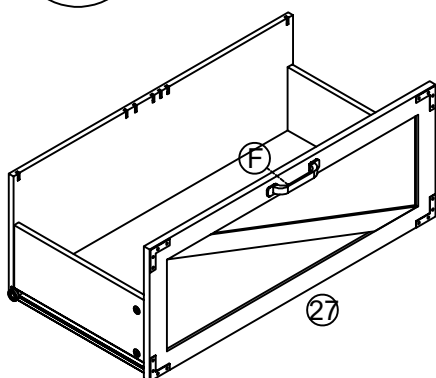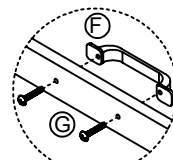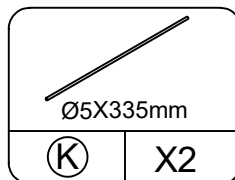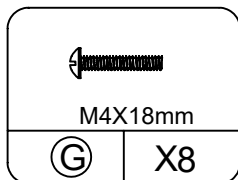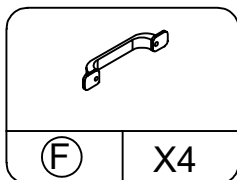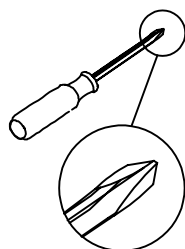


Step 2

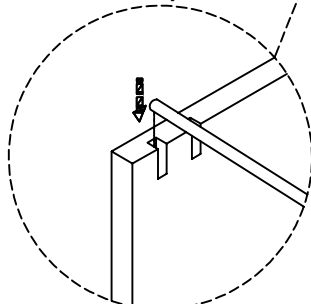

you can place A4 folders when install stainless steel tubes as shown.

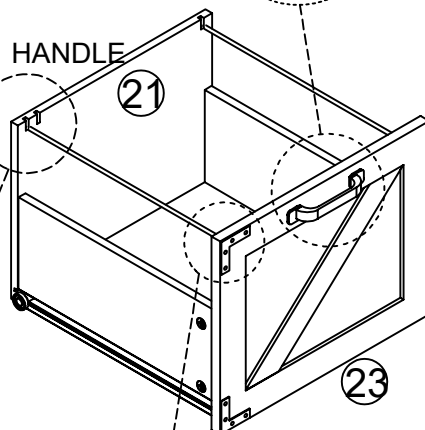


Step1

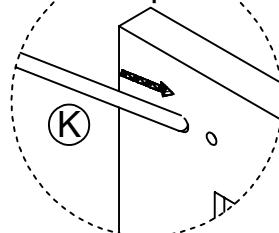

Insert the stainless steel tube into the hole at an angle

first way


Step 1

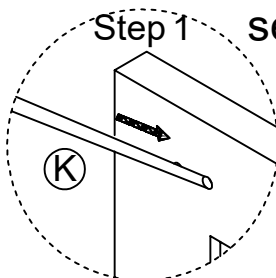

Insert the stainless steel tube into the hole at an angle



second way

Step 2

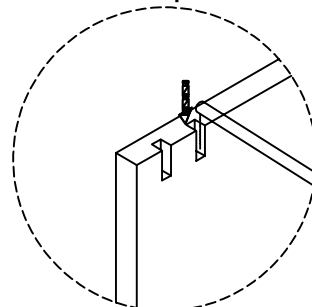


you can place letter size folders when install stainless steel tubes as shown.


STEP13

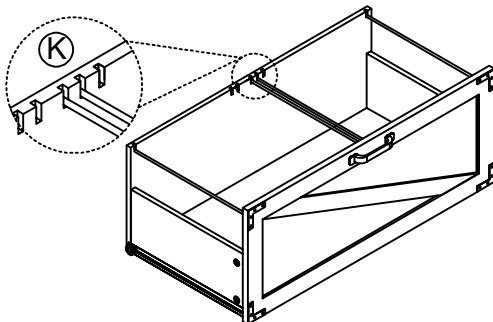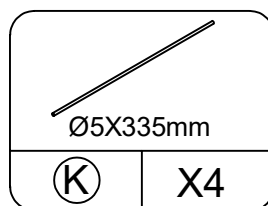


you can place legal size and A4 folders when install stainless steel tubes as shown.

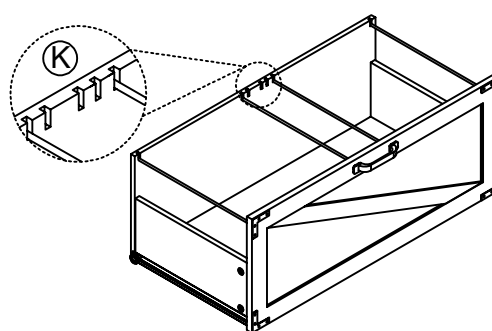


you can place two letter sizes when install stainless steel tubes as shown.

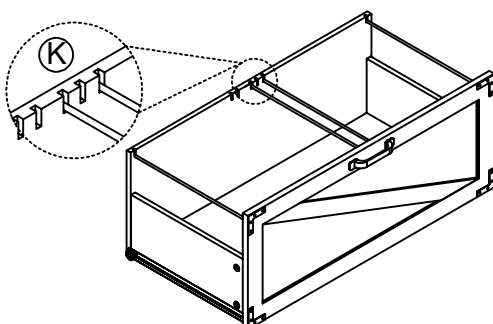

you can place legal size and letter size folders when install stainless steel tubes as shown.





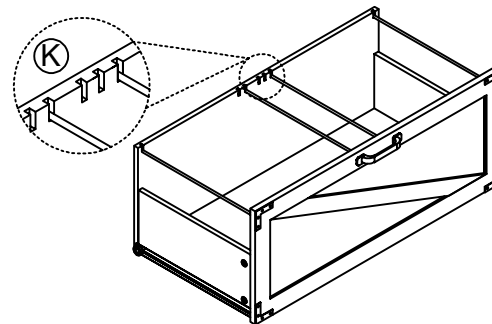


you can place letter size and A4 folders when install stainless steel tubes as shown.



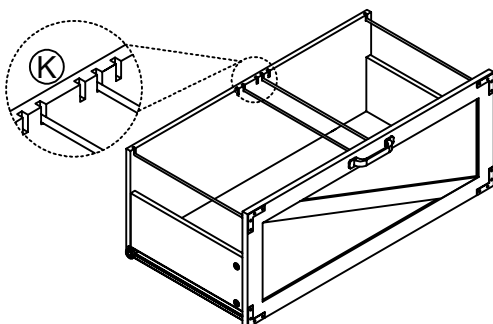


you can place two A4 folders when install stainless steel tubes as shown.


STEP14

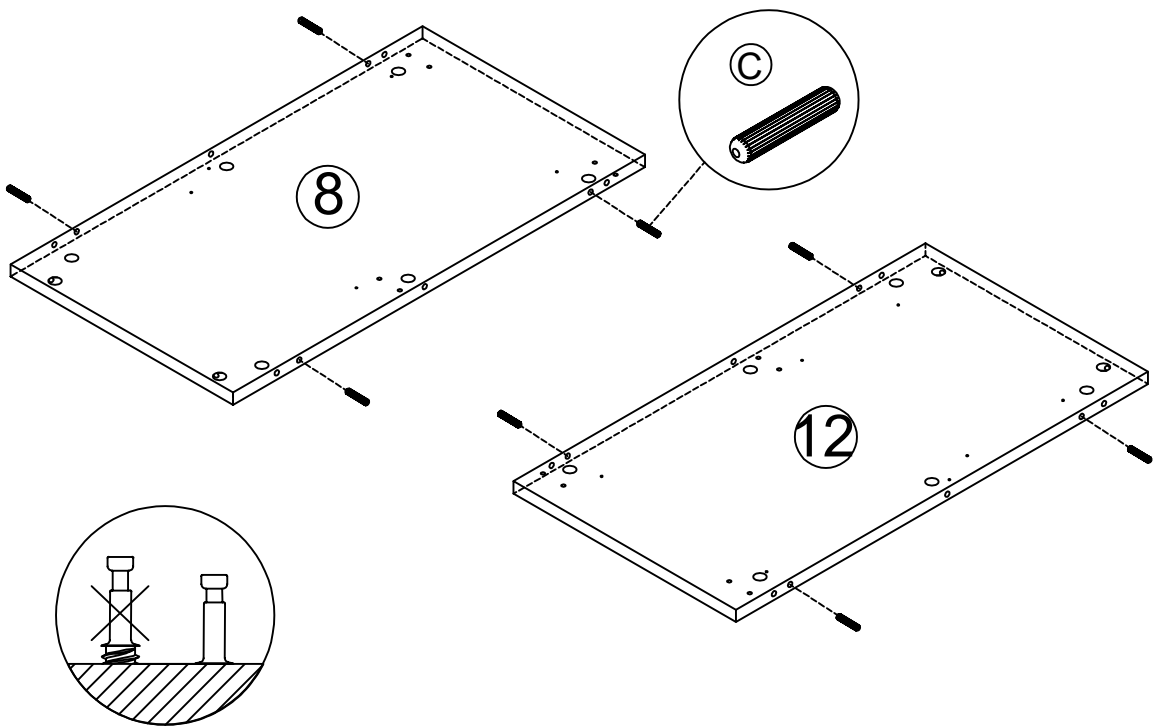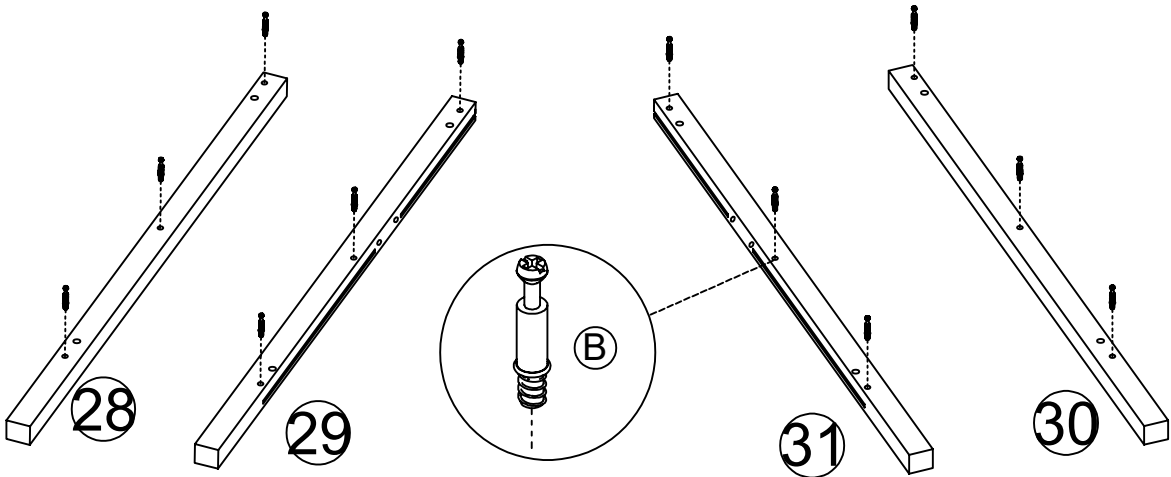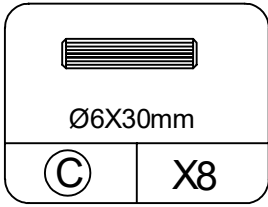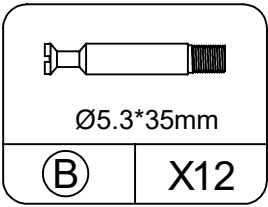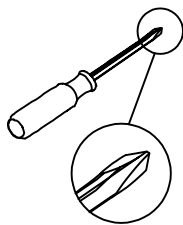

STEP15



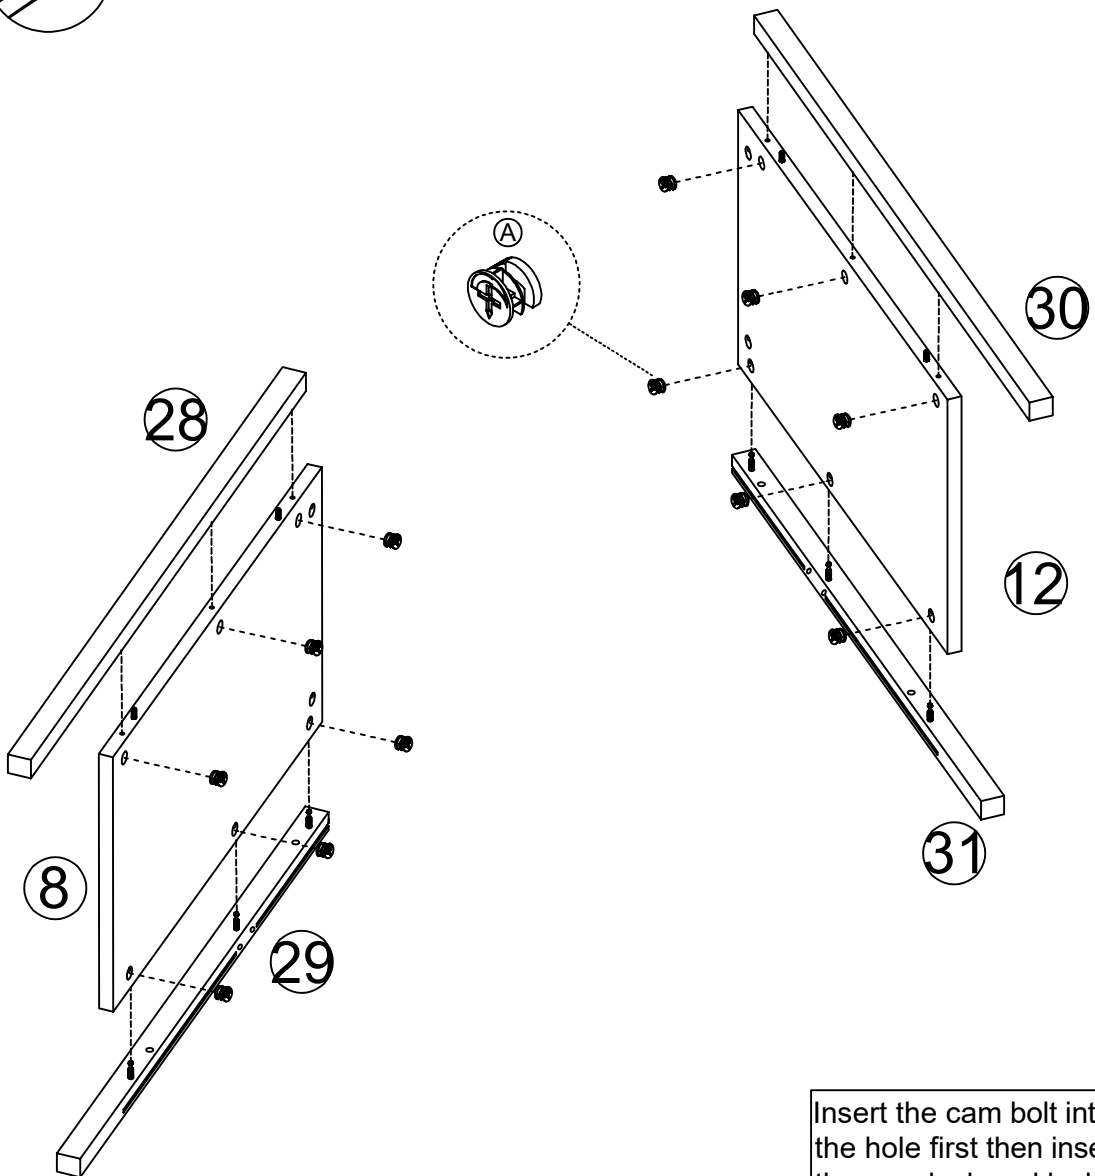
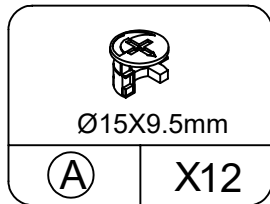
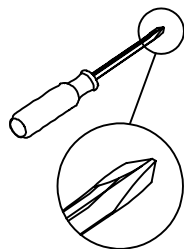


Insert the cam bolt into the hole first then insert the cam lock and lock it.






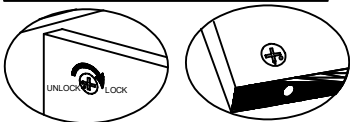


Proper orientation of CAM LOCK


STEP16

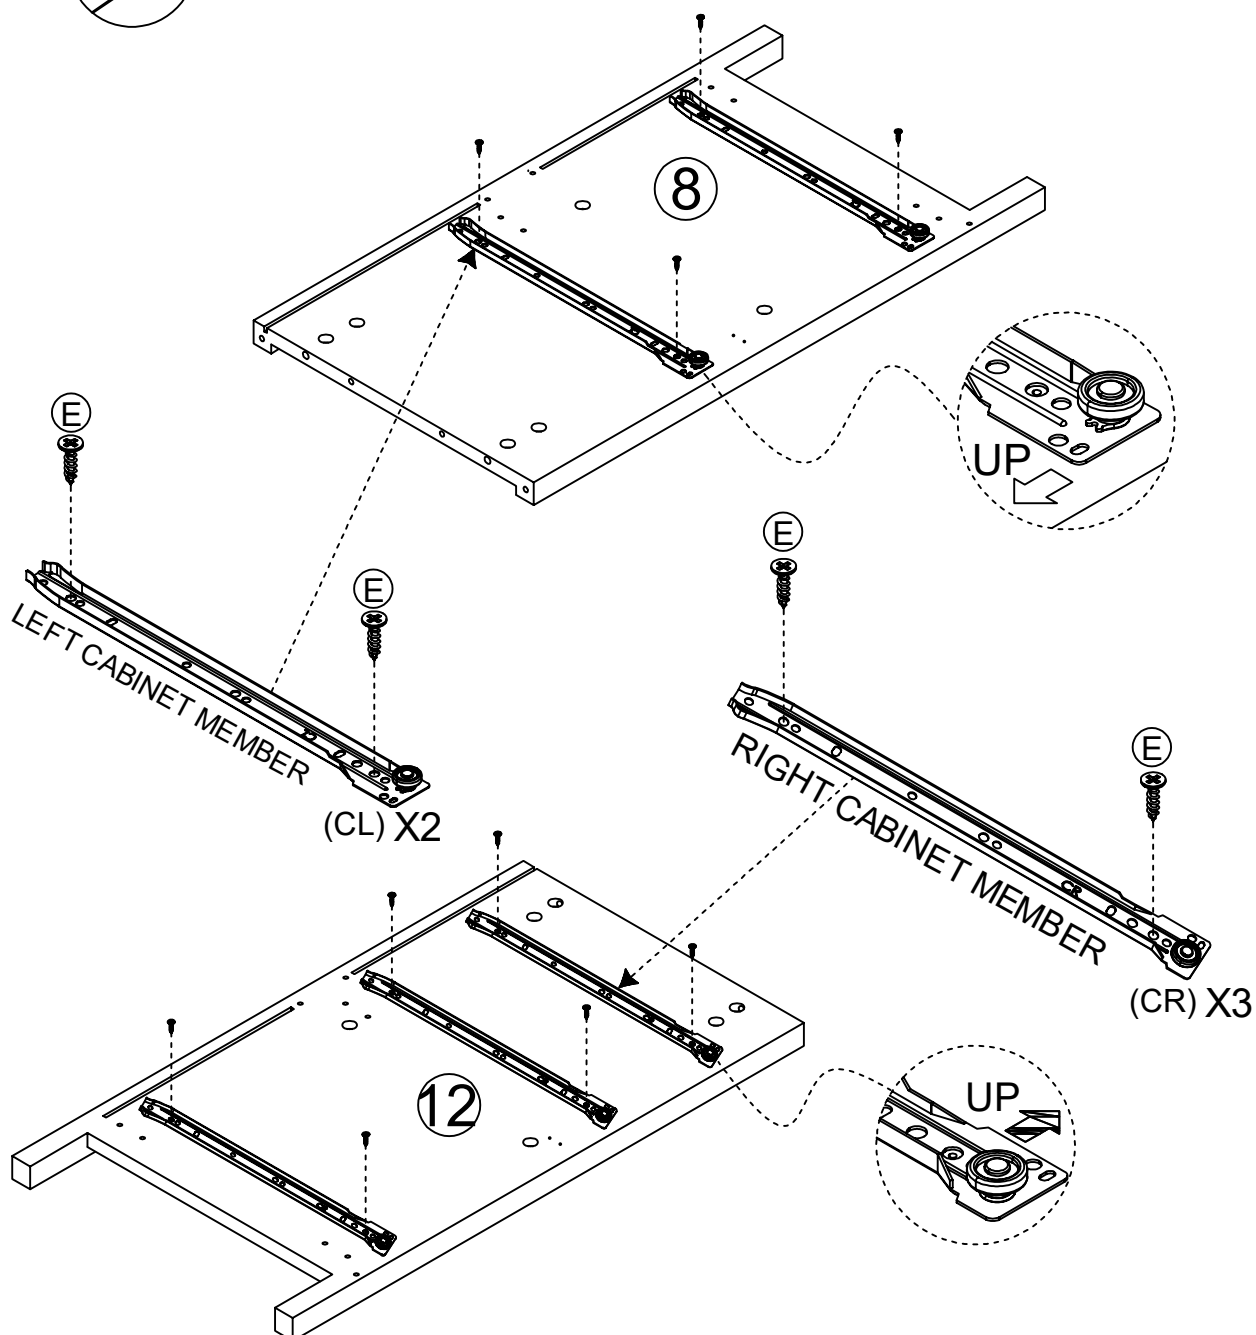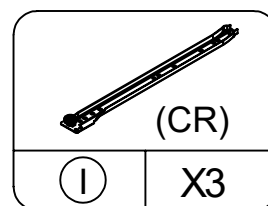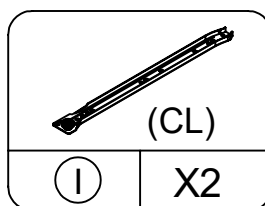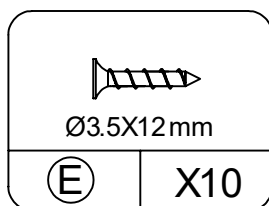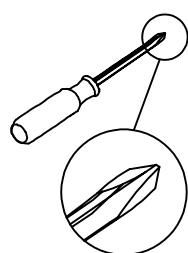




STEP17

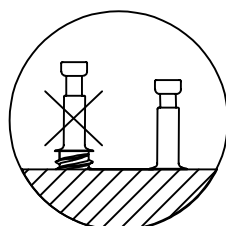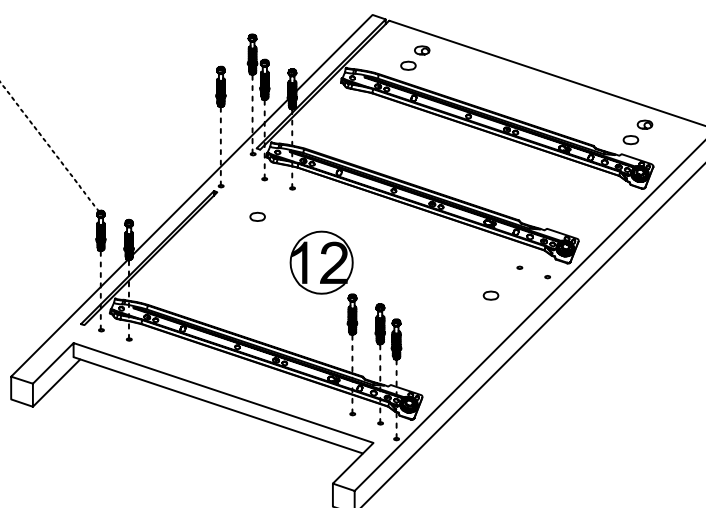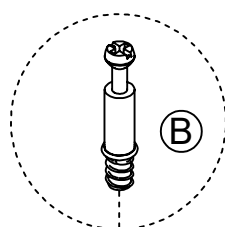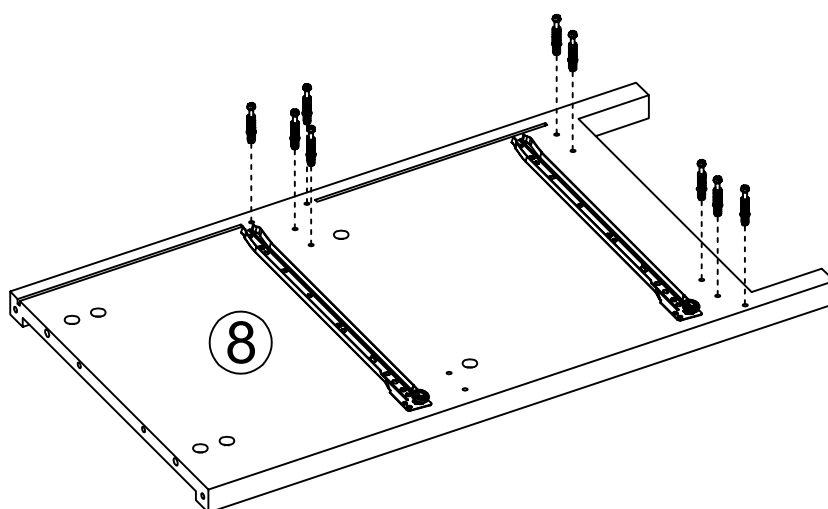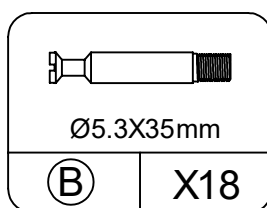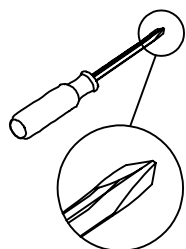




STEP18

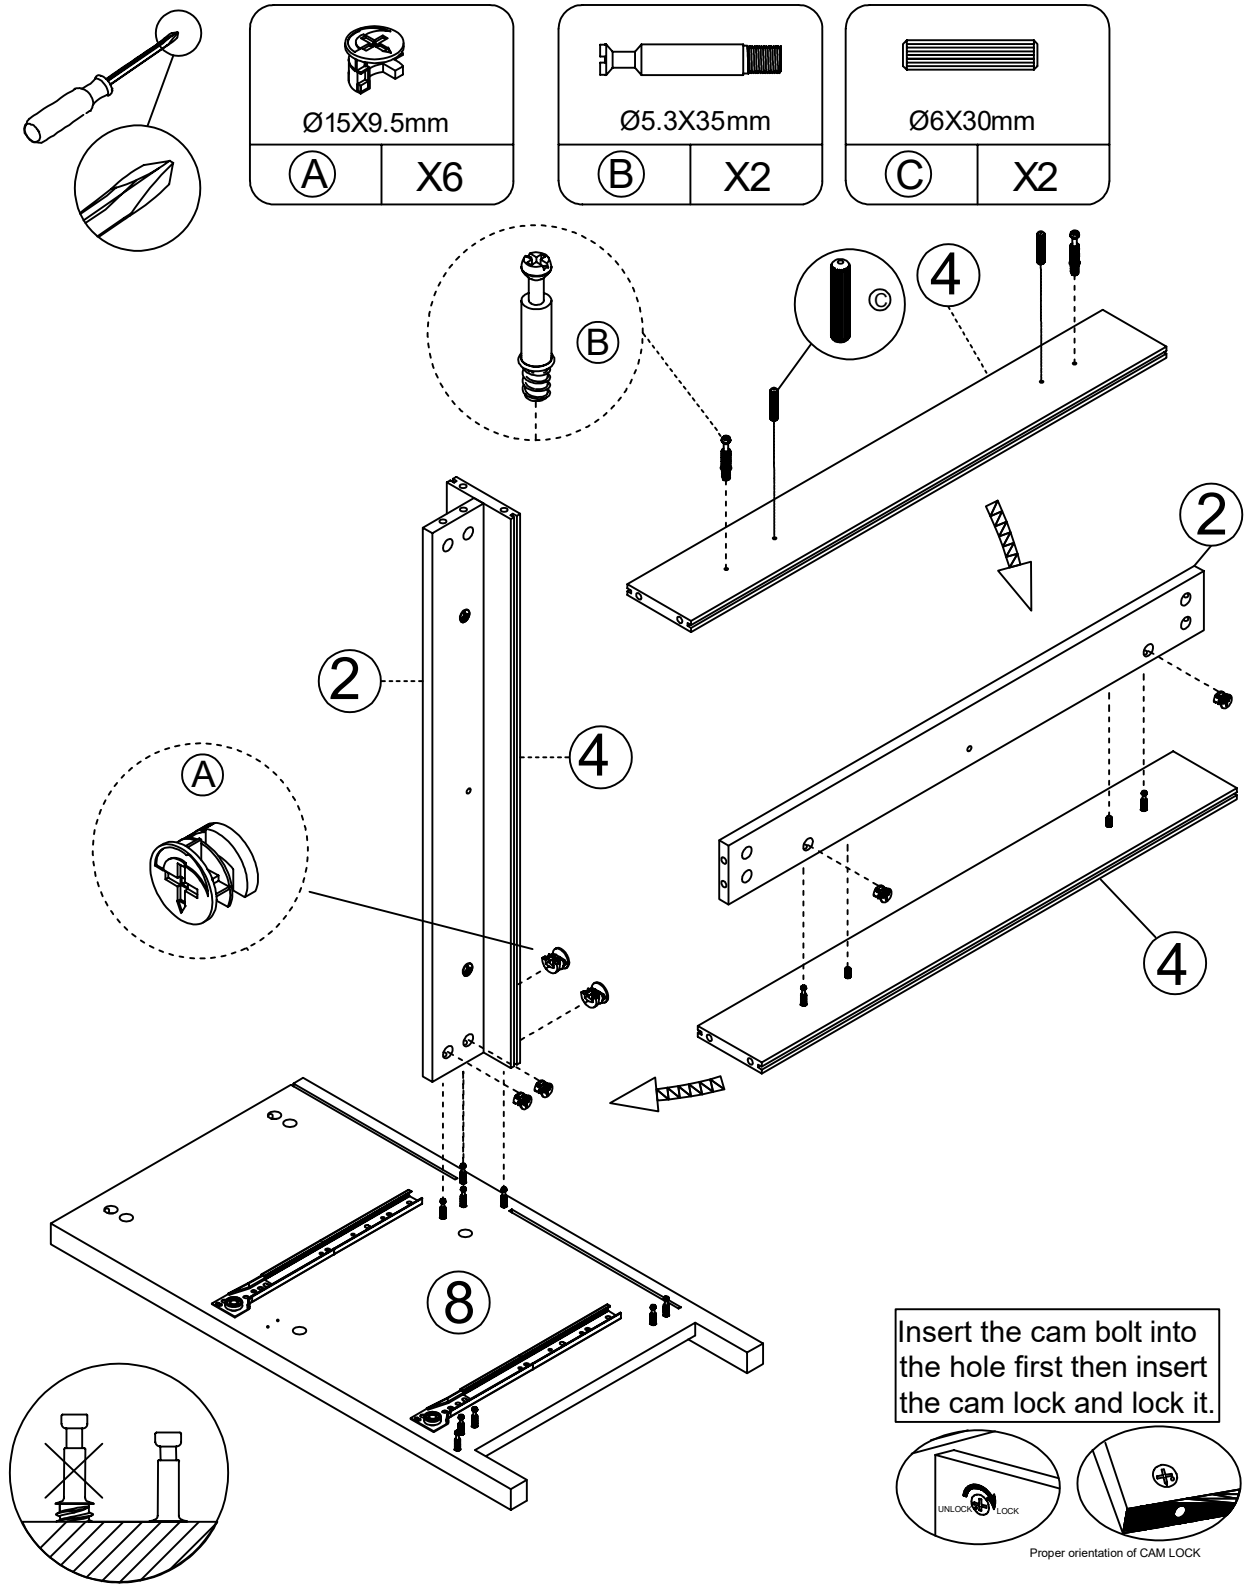


STEP19

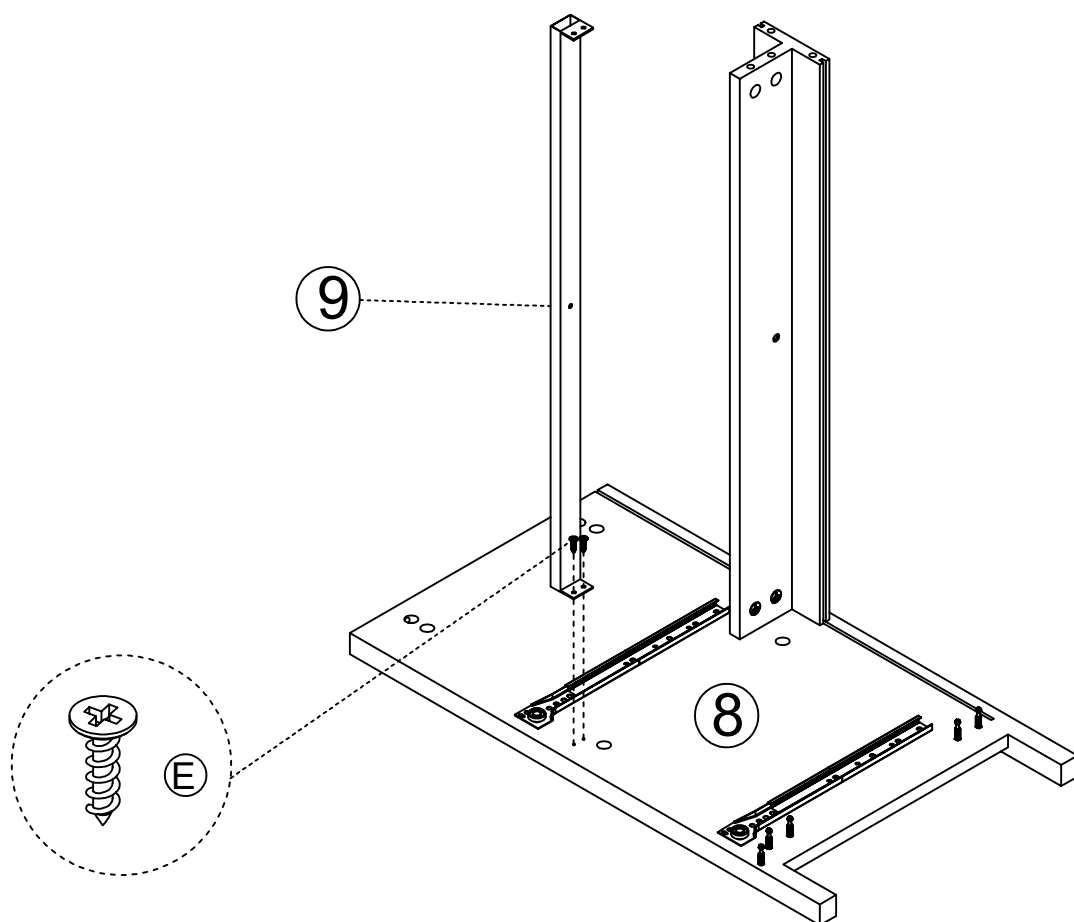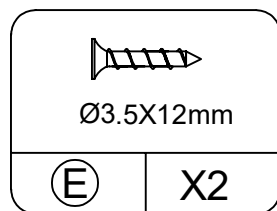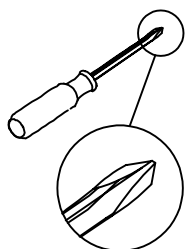

STEP20




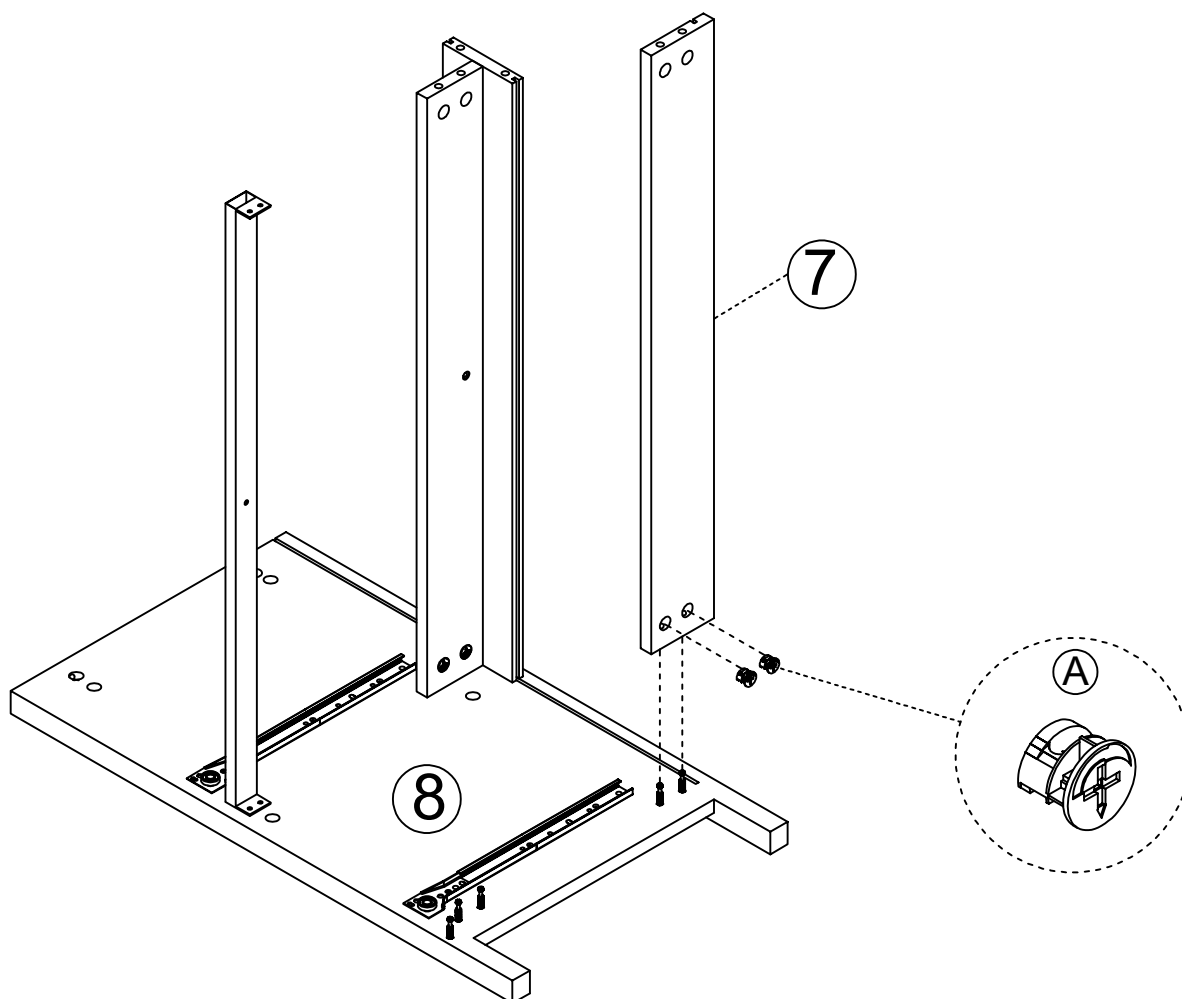
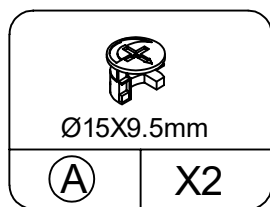
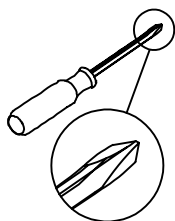


Insert the cam bolt into the hole first then insert the cam lock and lock it.

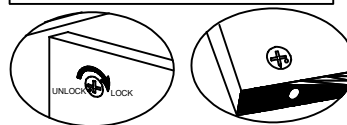


Proper orientation of CAM LOCK

STEP21

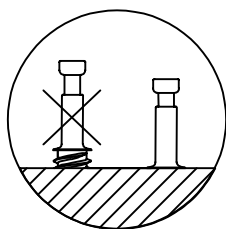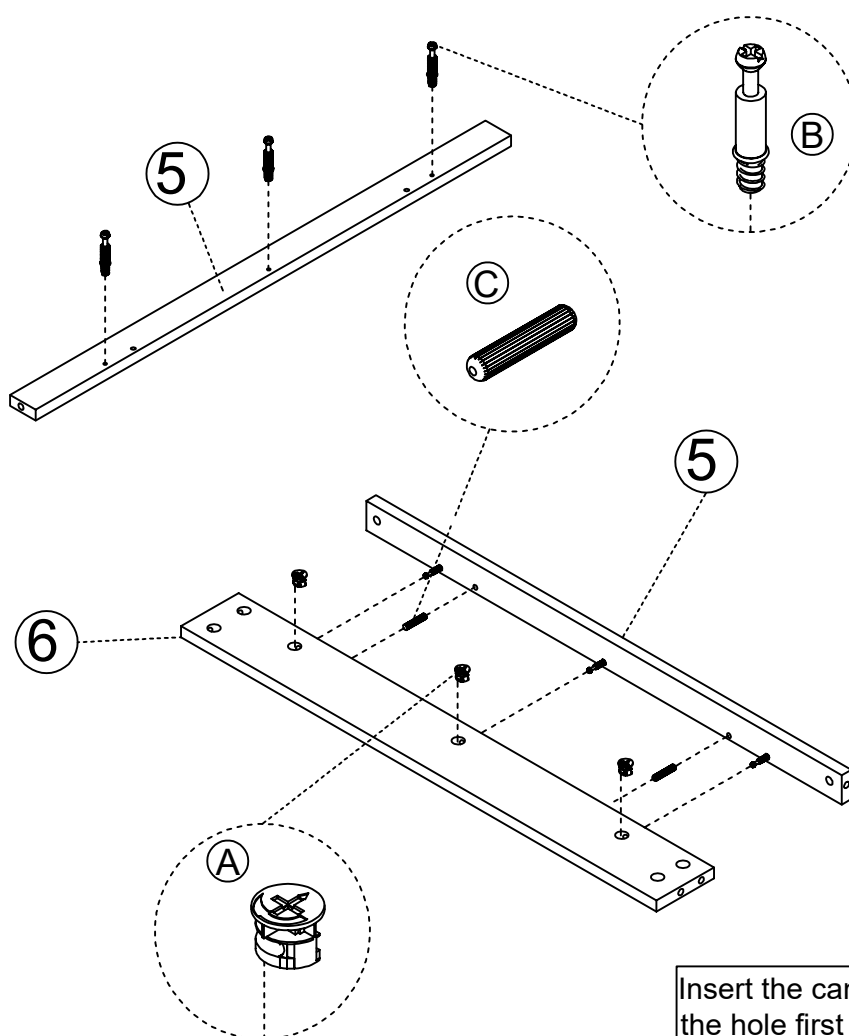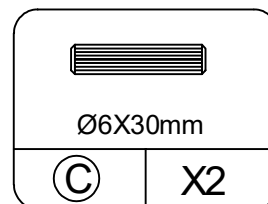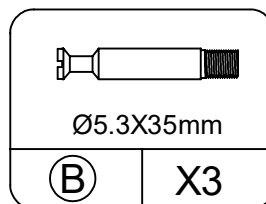
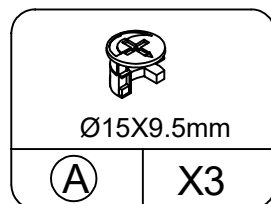
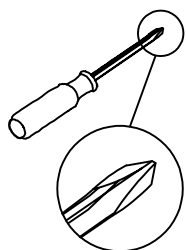


Insert the cam bolt into the hole first then insert the cam lock and lock it.

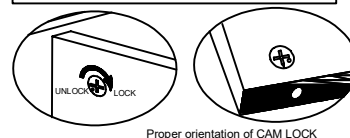


Proper orientation of CAM LOCK

STEP22

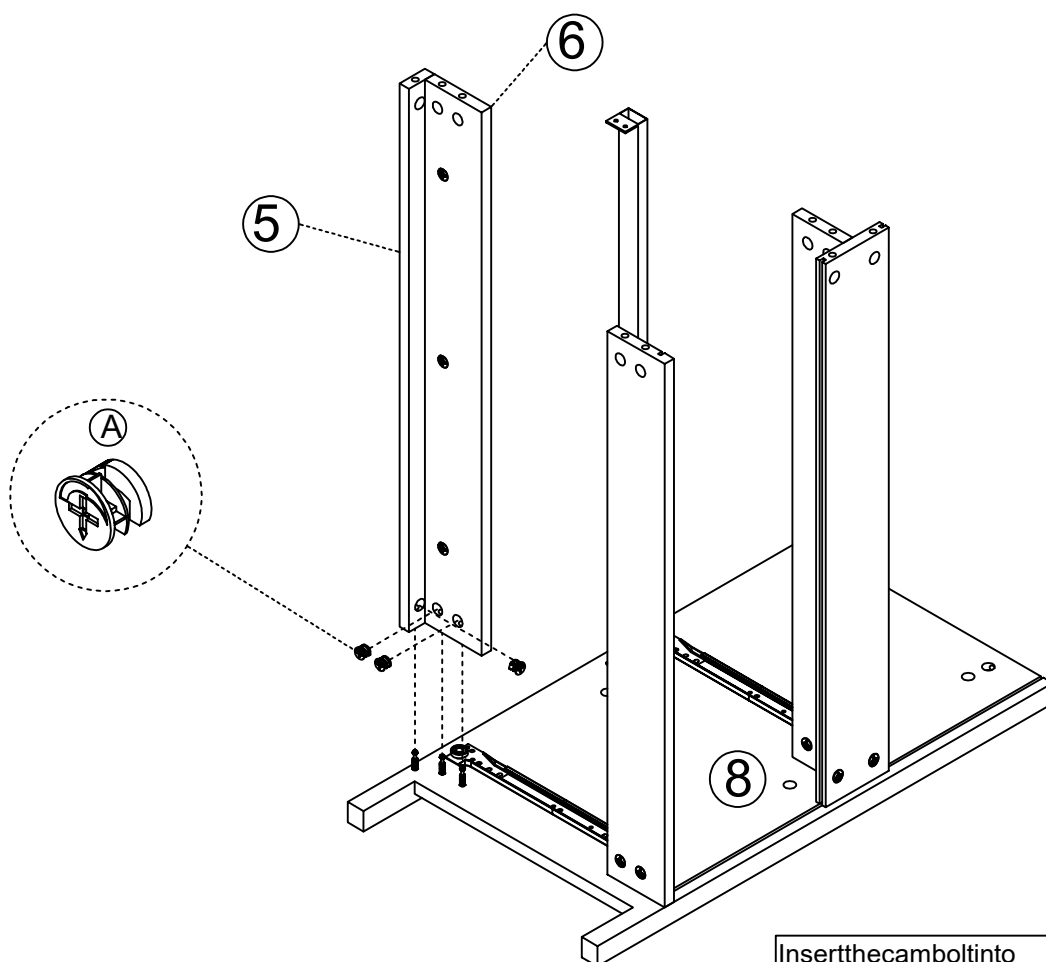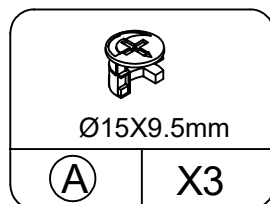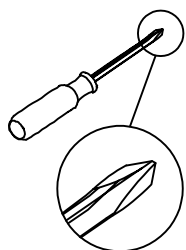


Insert the cam bolt into the hole first, then insert the cam lock and lock it.







Proper orientation is IC AM LOCK


STEP23

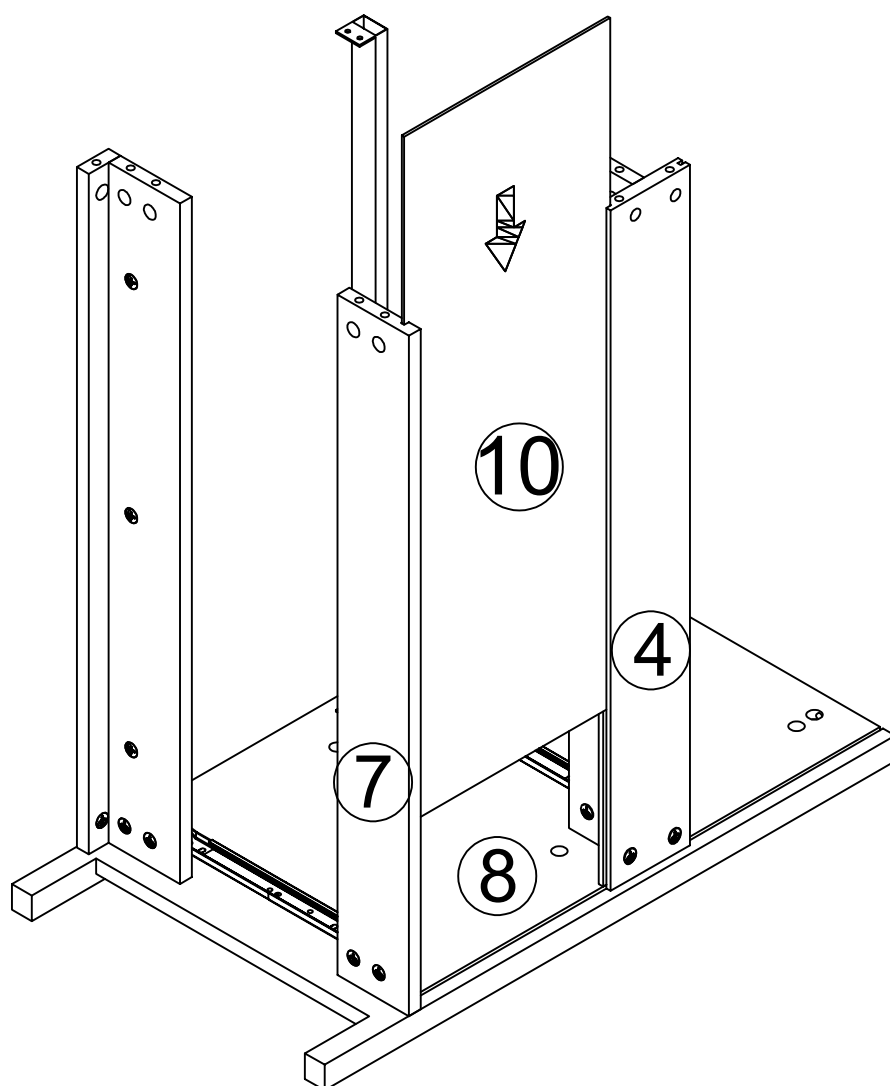

STEP24


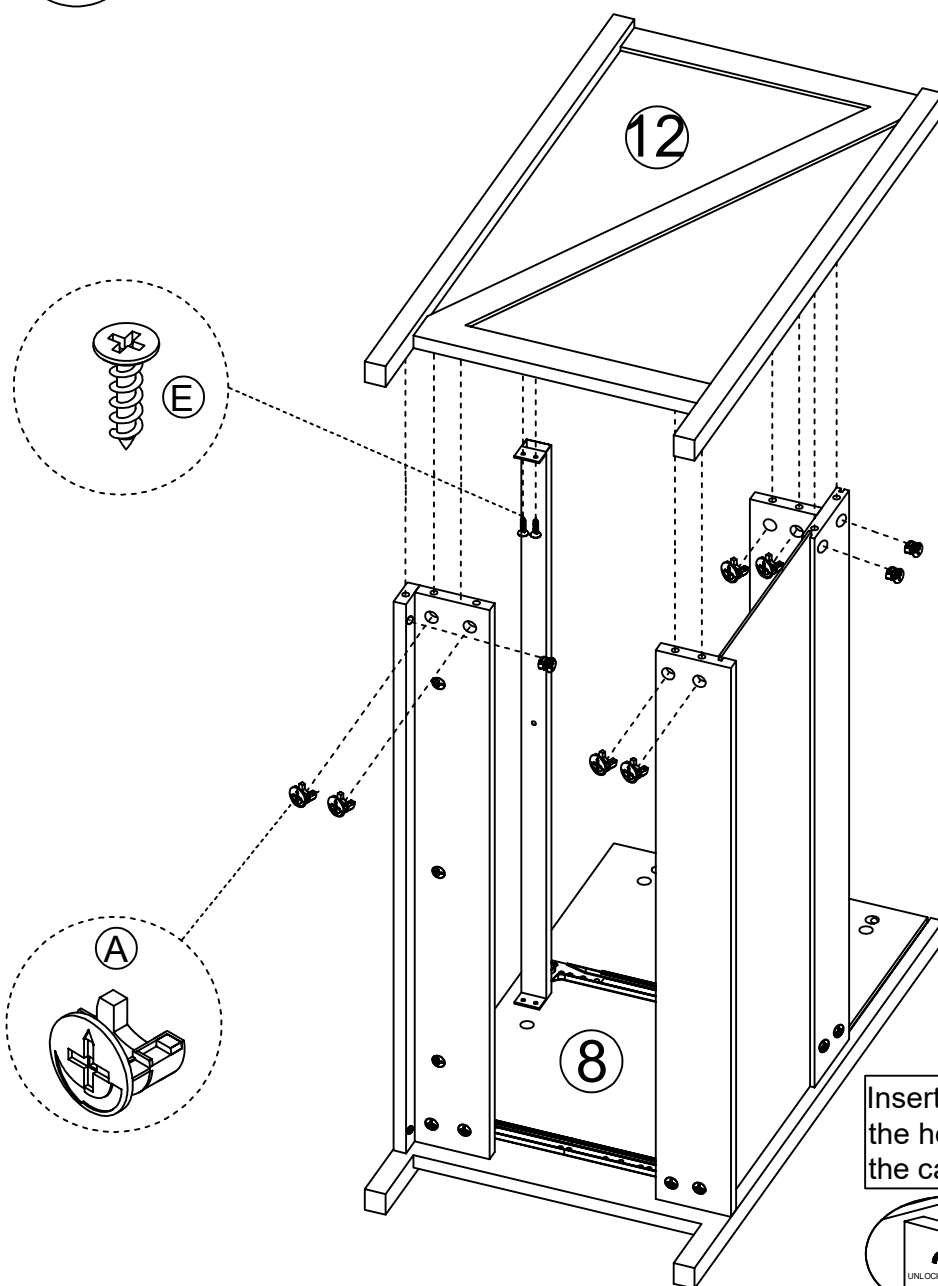
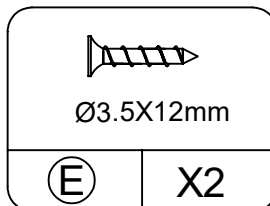
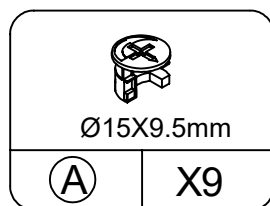
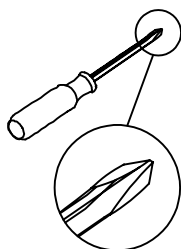


Insert the cam bolt into the hole first then insert the cam lock and lock it.




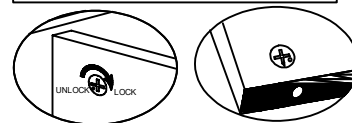


Proper orientation of CAM LOCK




STEP25

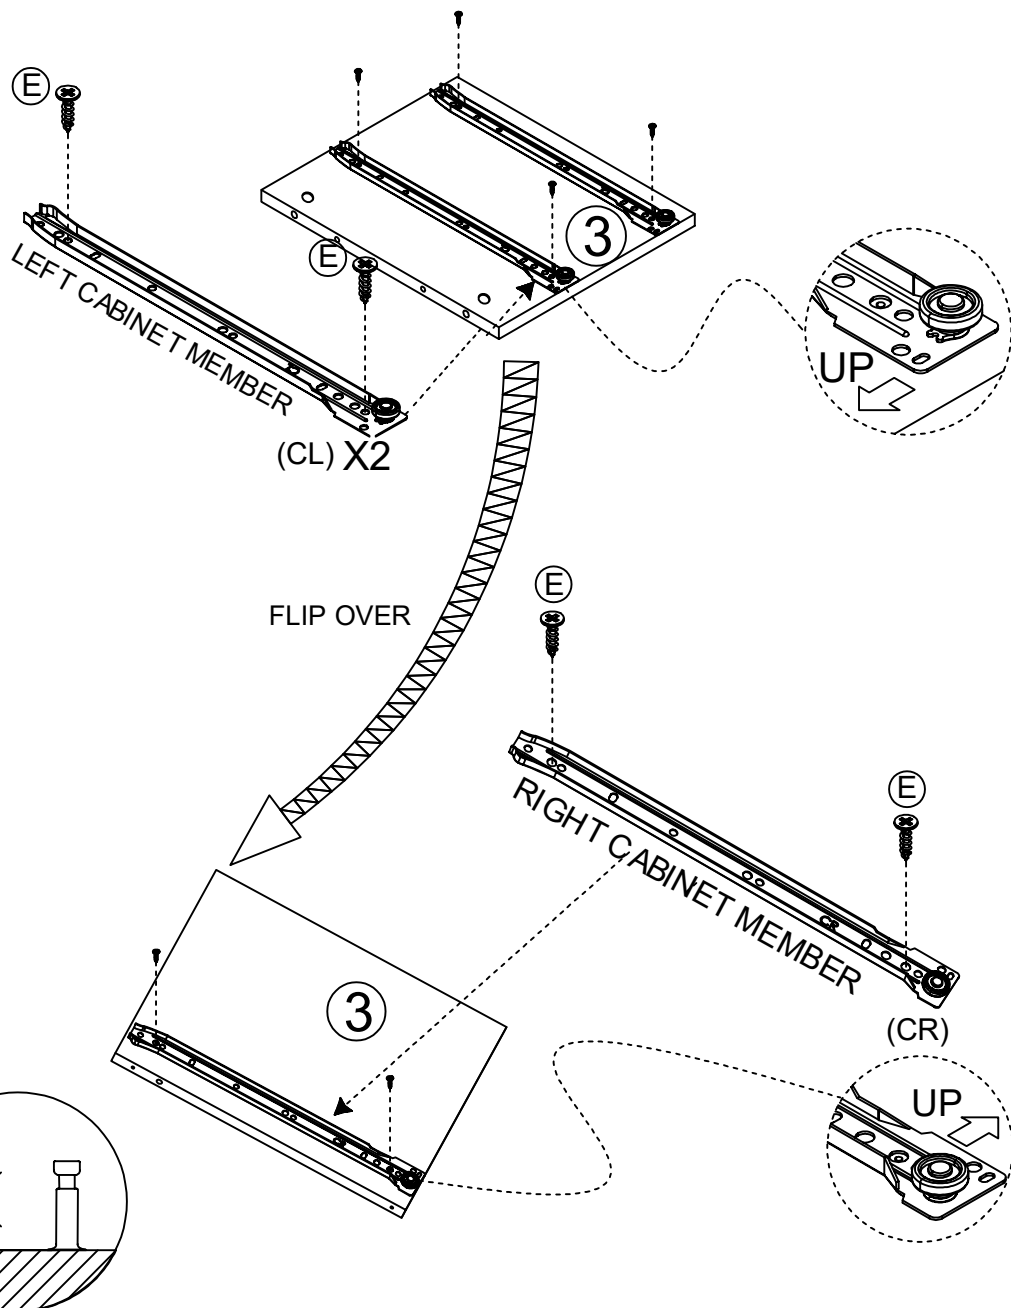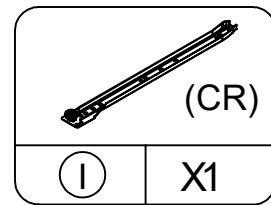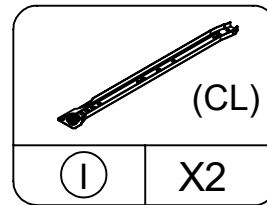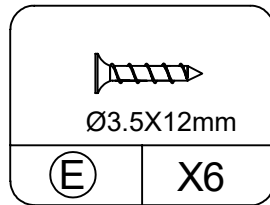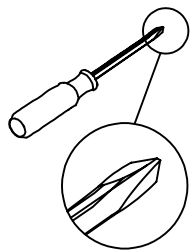







STEP26

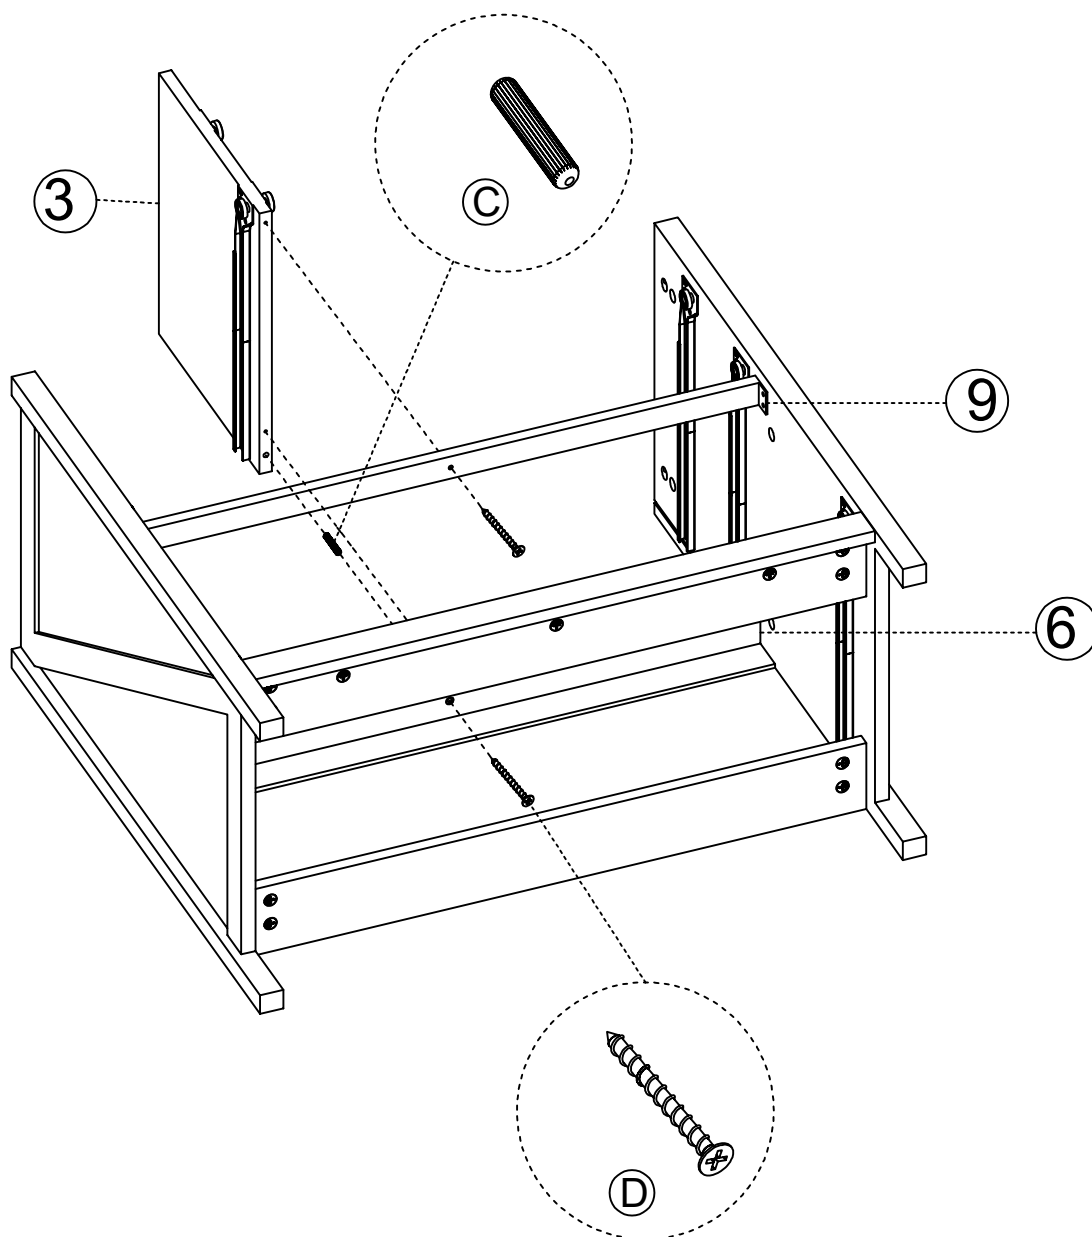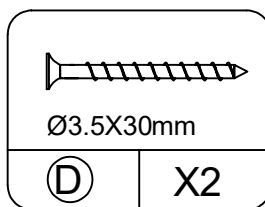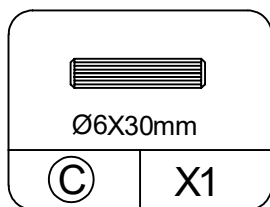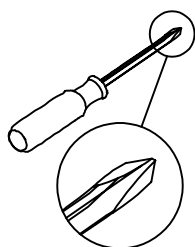





STEP27

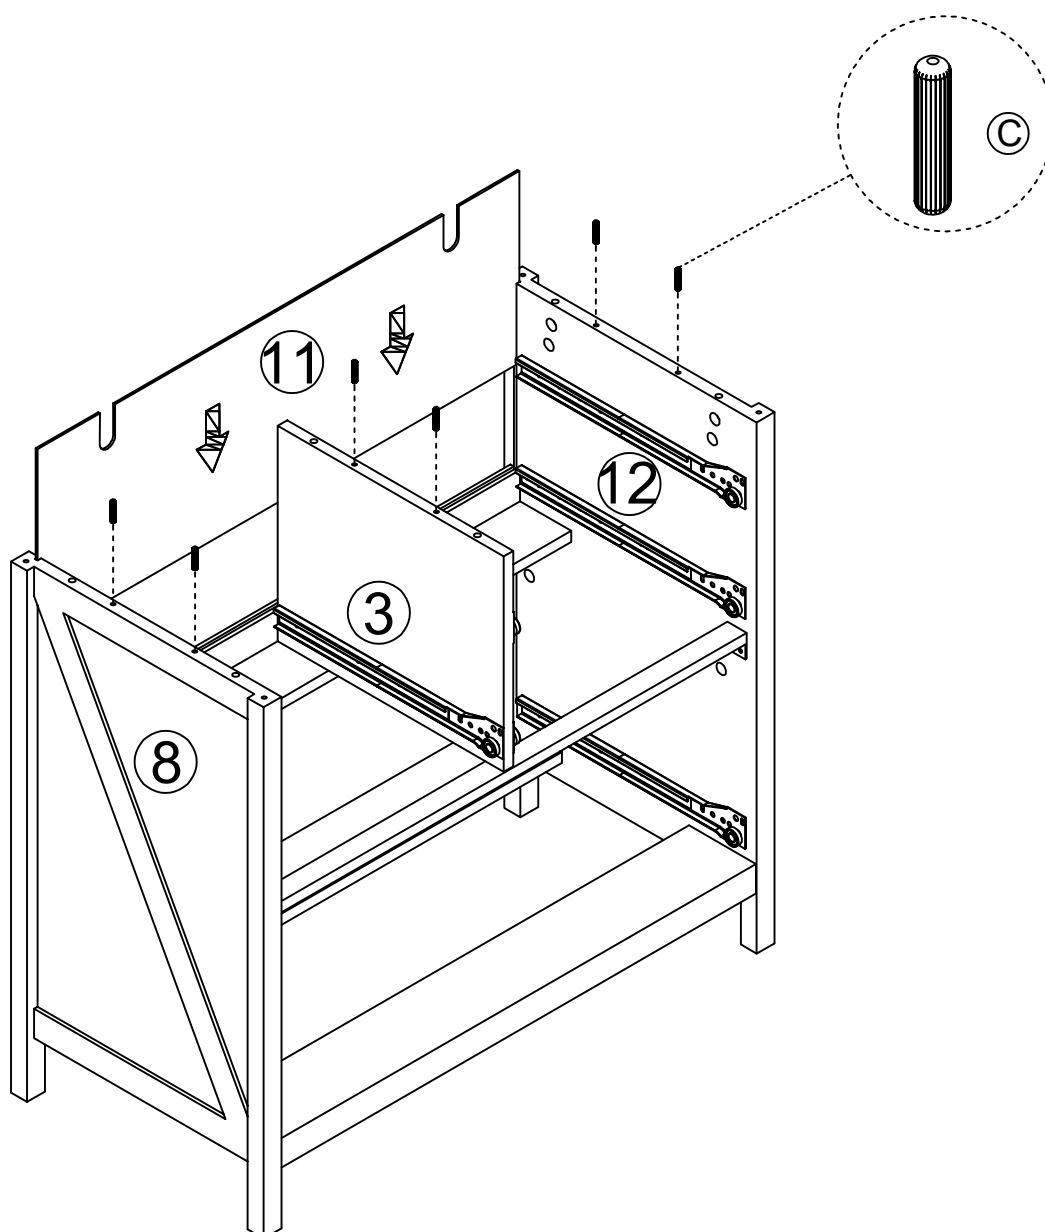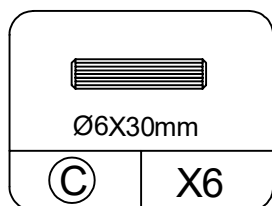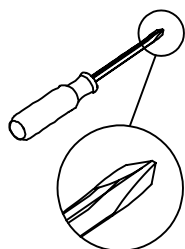


STEP28

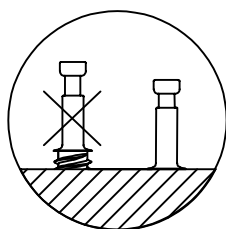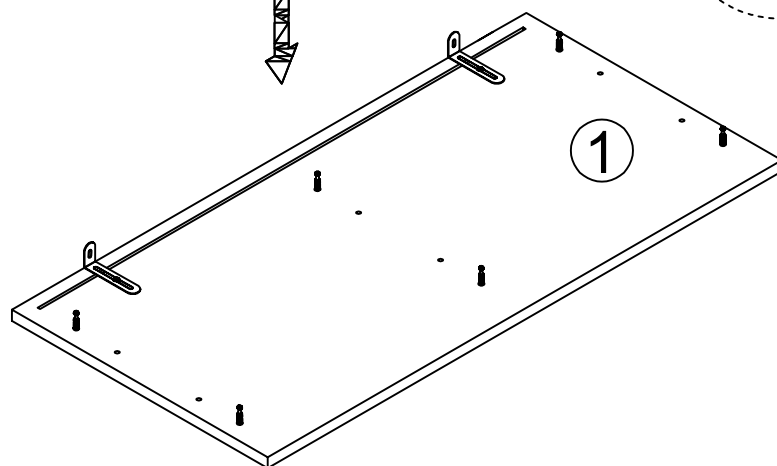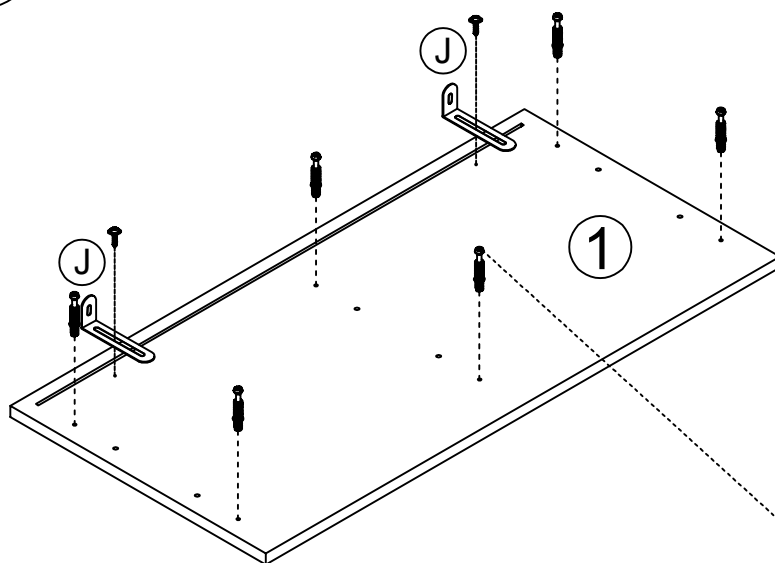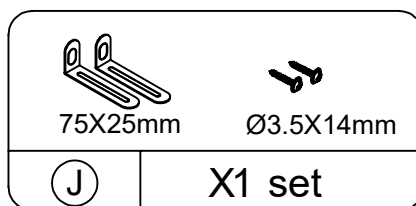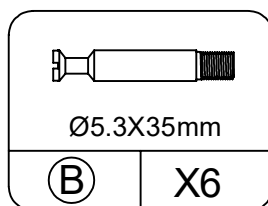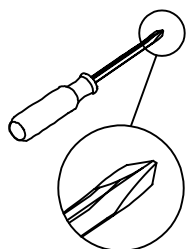

STEP29

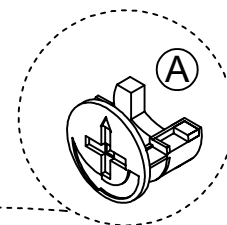
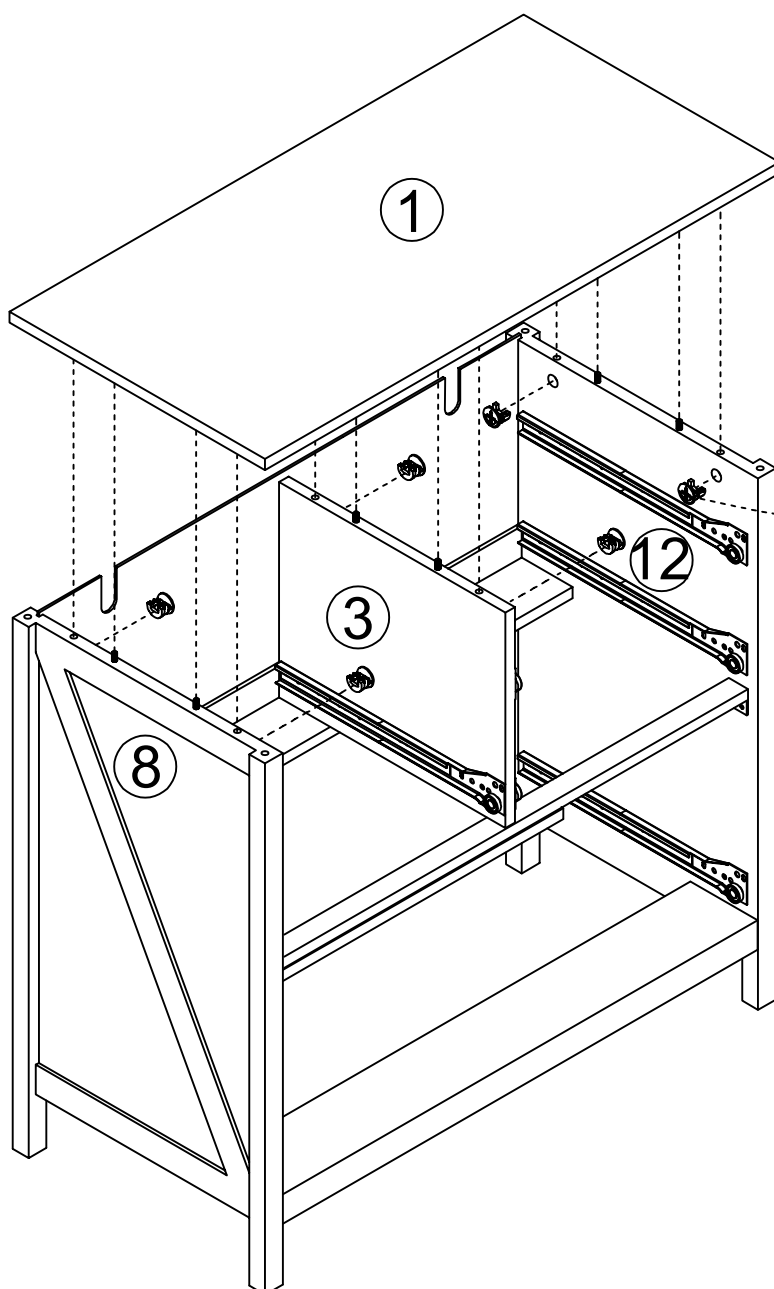
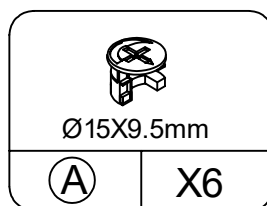
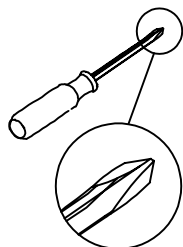


Insert the cam bolt into the hole first then insert the cam lock and lock it.

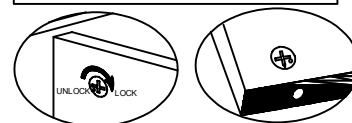


Proper orientation of CAM LOCK


STEP30

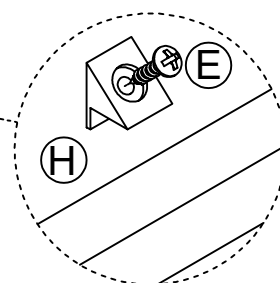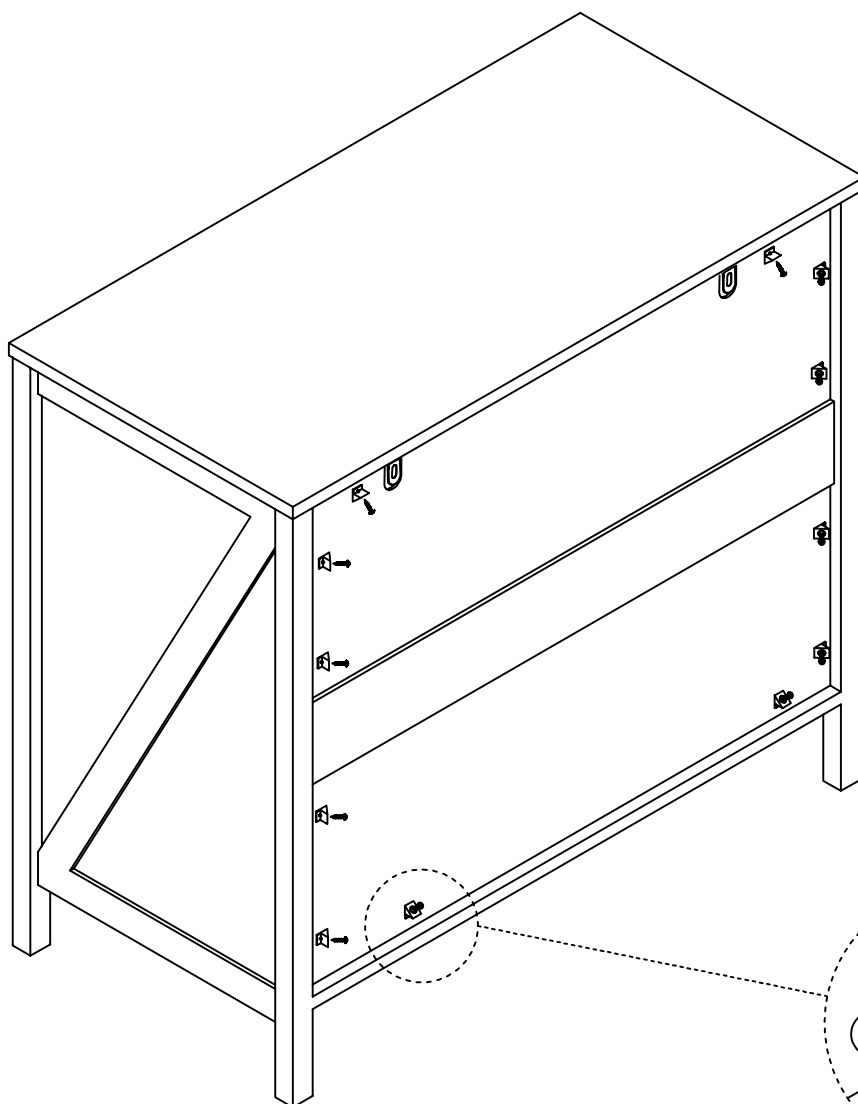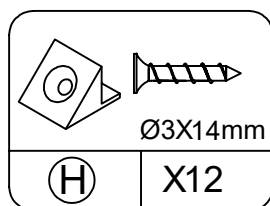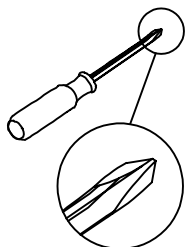


STEP31

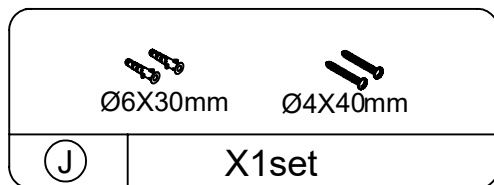


Install the tipping
restraint hardware

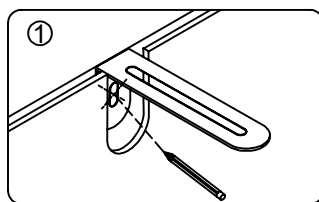

1. make mark on
the wall


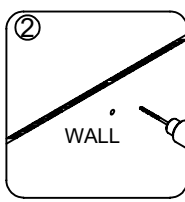


2. drill two Ø6
holes on the wall

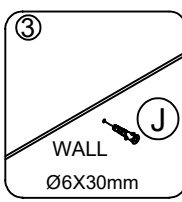


3. put two
anchors in the
holes


4. Push the cabinet close to the wall so that
the two bases are close to each other and
tighten them with screws.

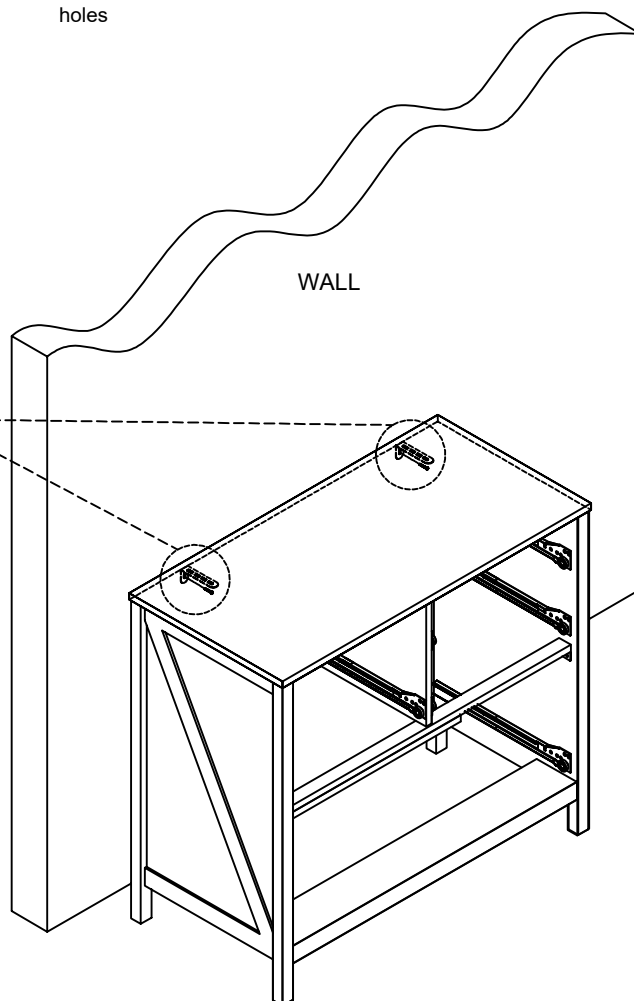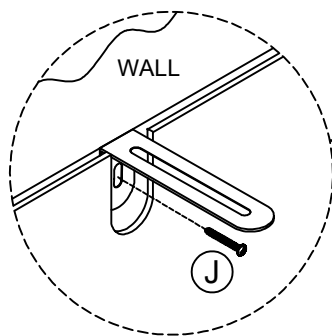

STEP32

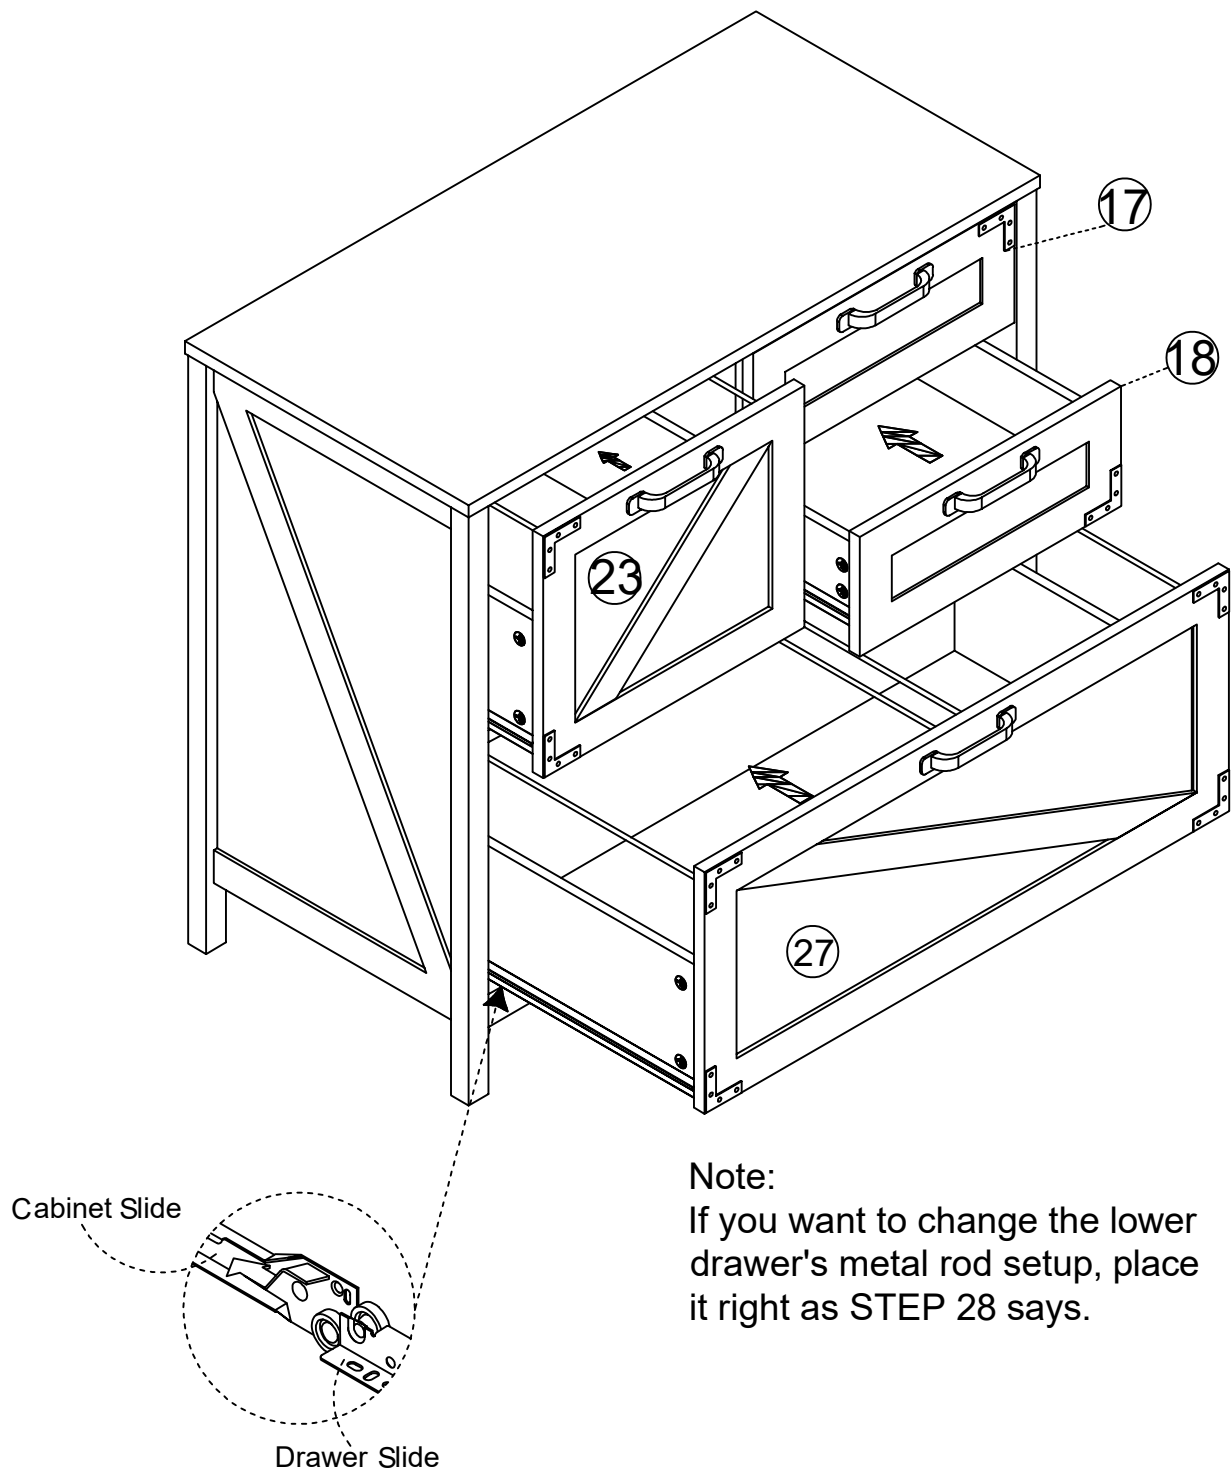

FINISH

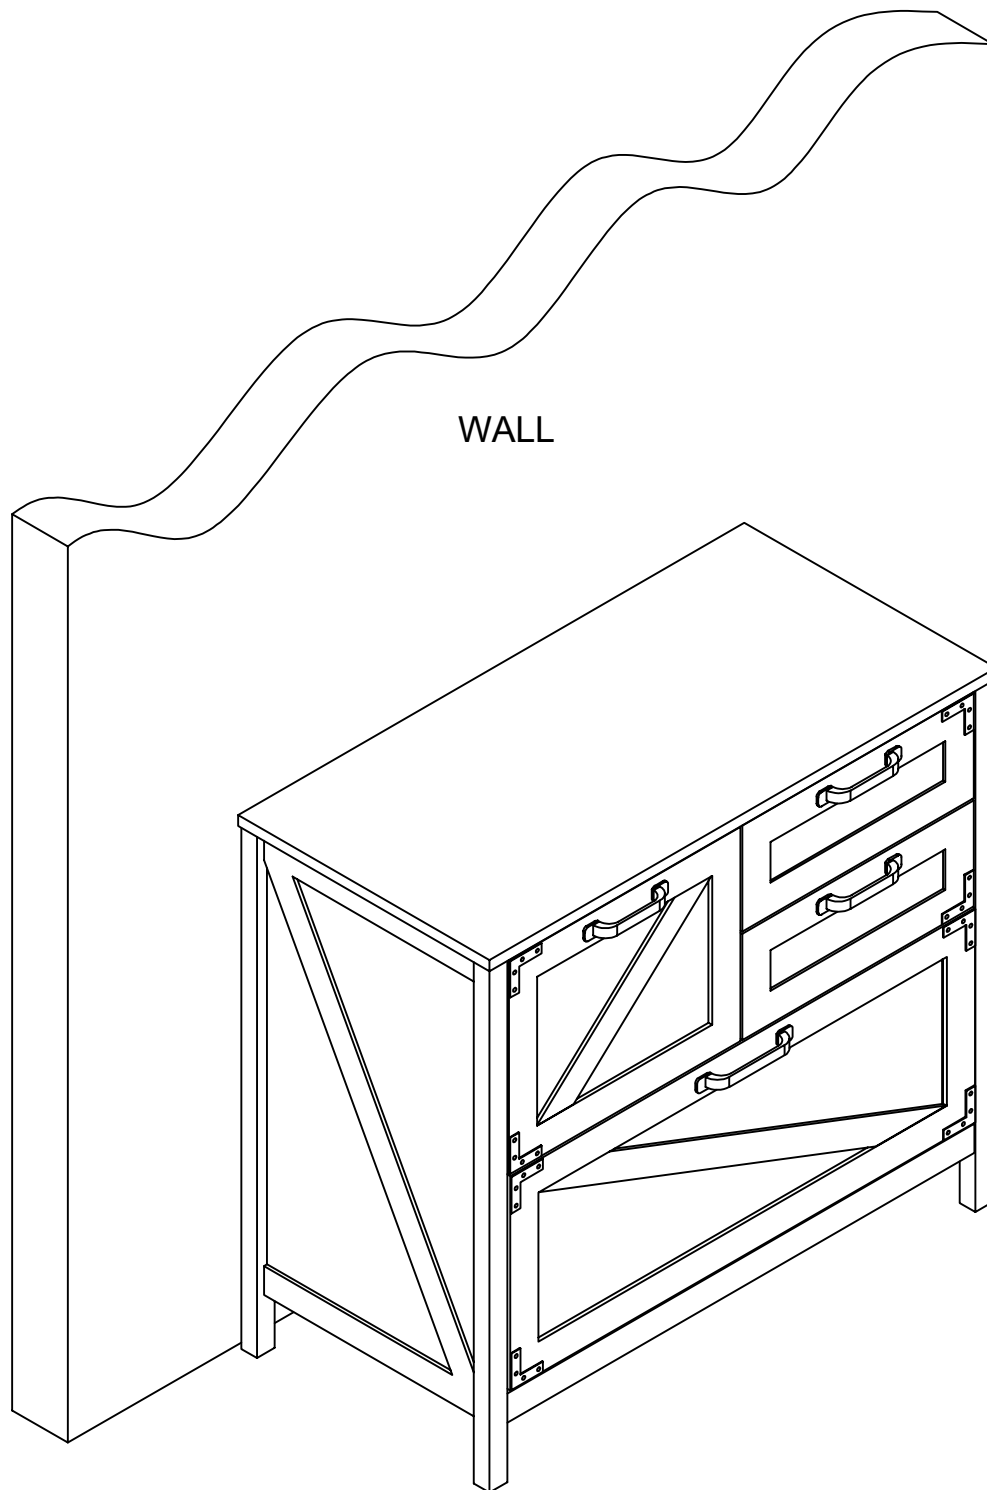

 WARNING		
		Children have died from furniture tipover. To reduce the risk of furniture tipover: •ALWAYS install tipover restraint provided. •NEVER put a TV on this product. •NEVER allow children to stand, climb or hang on drawers, doors, or shelves. •NEVER open more than one drawer at a time. •Place heaviest items in the lowest drawers. •Do not defeat or remove the drawer interlock system. This is a permanent label. Do not remove!

 ATTENTION		
		Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles: • TOUJOURS installer la retenue de basculement fournie. • NE JAMAIS mettre de téléviseur sur ce produit. • NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères. • N'ouvrez JAMAIS plus d'un tiroir à la fois. • Placez les objets les plus lourds dans les tiroirs les plus bas. • Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir. Ceci est une étiquette permanente. Ne pas enlever!

 WARNUNG		
		Kinder sind an einem Möbelkippen gestorben. So verringern Sie das Risiko eines Umklippens von Möbeln: • Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung. • Stellen Sie NIEMALS einen Fernseher an dieses Produkt. • Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen. • Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig. • Legen Sie schwerste Gegenstände in die untersten Schubladen. • Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht. Dies ist ein dauerhaftes Etikett. Nicht entfernen!