

ASSEMBLY INSTRUCTION

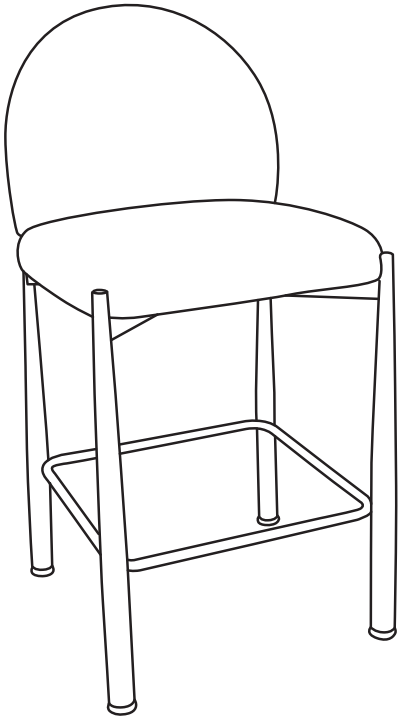

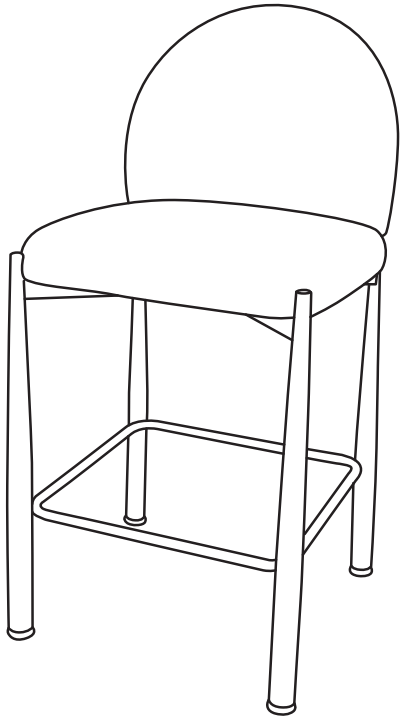


friendly reminder




To avoid confusion during assembly, please do not open all hardware bags at once.
Some screws may look similar, so please follow these steps:

Check each bag against the parts list to confirm the type and quantity match before use.

Open each bag only when prompted by the corresponding installation step.


This will keep your hardware organized and make assembly smoother.

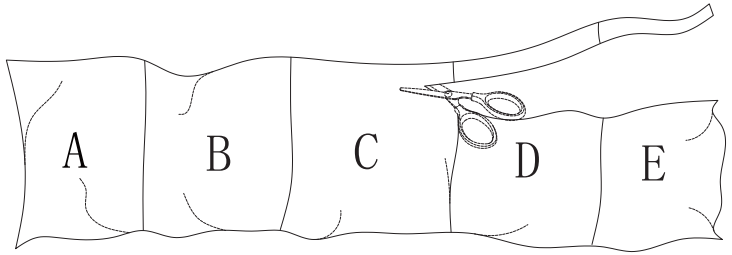

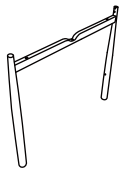Ax1	Bx1	Cx1	Dx1	Ex1	Fx4+1	Gx4+1	Hx1	Ix4+1	Jx4+1	Kx4+1	Lx4+1	Mx1
		 Front			 M6x13mm	 M6x16x1.5mm	 M6x30mm	 M6x30mm	 M6x50mm	 M6x16x1.5mm		

If you need any help during assembly, please contact us at **cs@wellzone.life**
Sharing a video and a brief description of where you're stuck will help us assist you better.


1

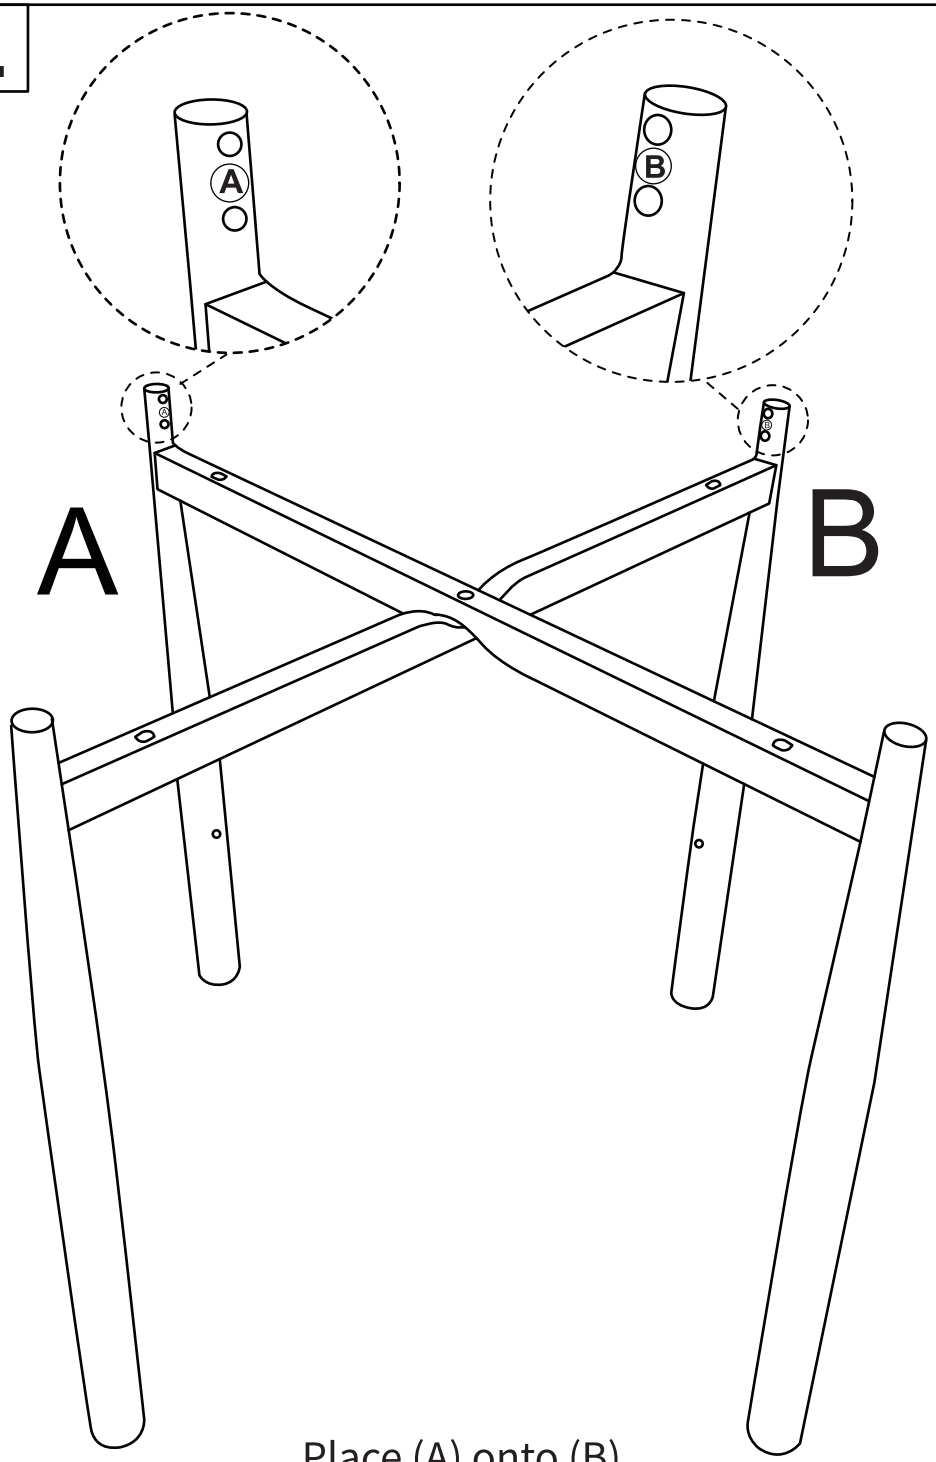

Place (A) onto (B).

2


Be sure to align A with A and B with B.

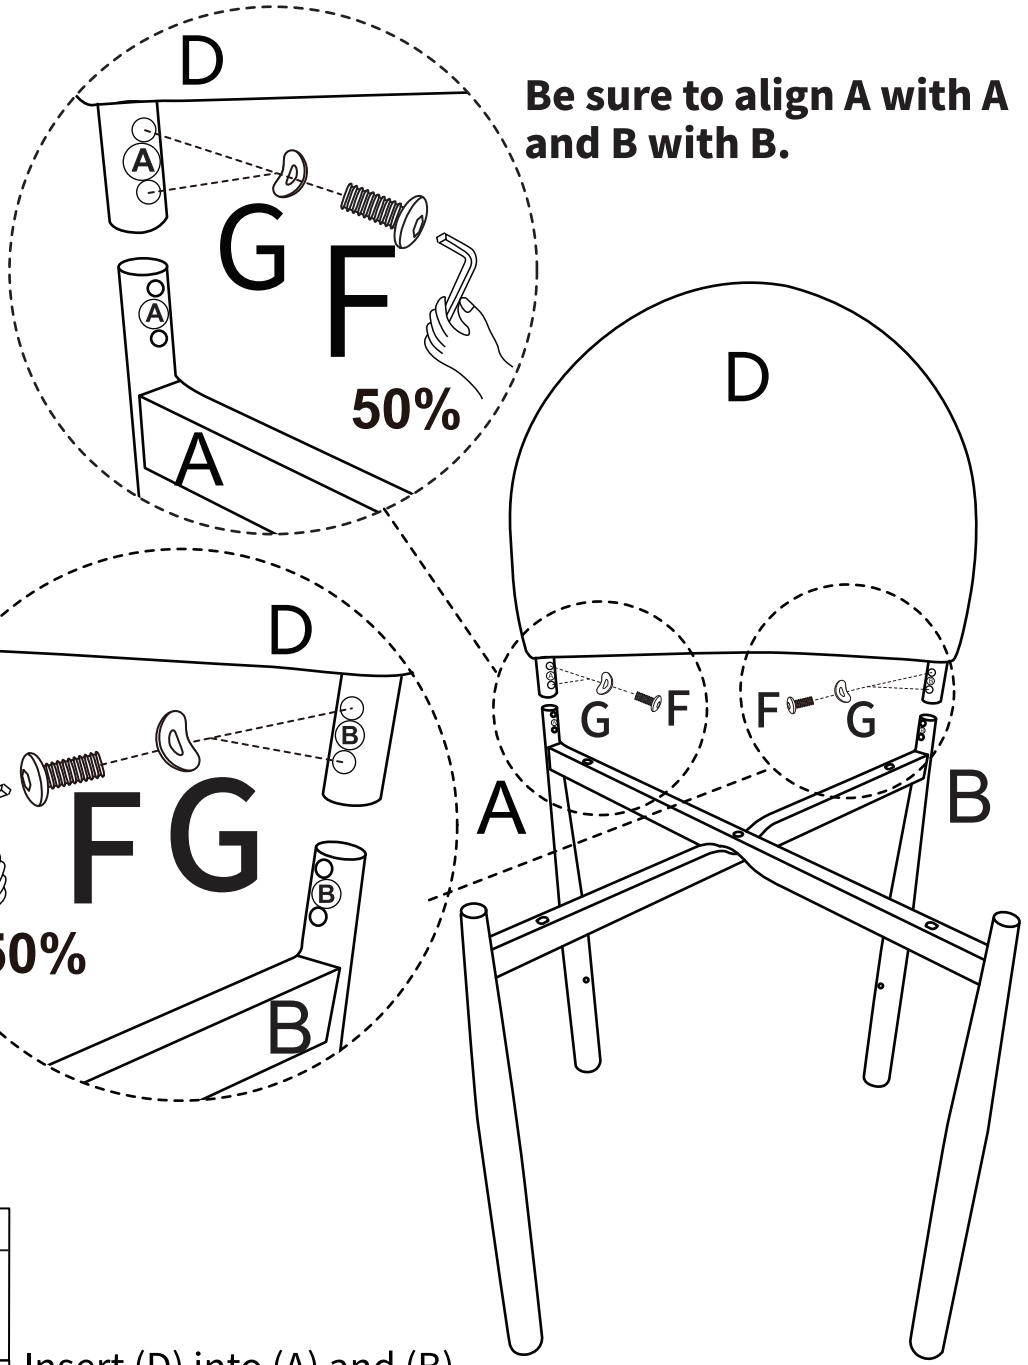

Gx4	M6x16x1.5mm
Fx4	M6x13mm

Insert (D) into (A) and (B).
Twist (F) through (G) into (A), (B), and (D) to secure them.
Note: Do not fully tighten (F); tighten to about 50% only.

3

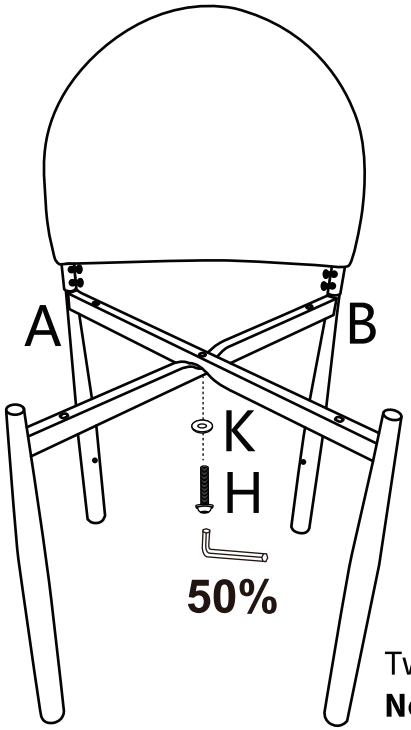

K x1



M6x16x1.5mm


H x1



M6x30mm

Twist (H) through (K) into (A) and (B).
Note: Tighten (H) to about 50% only.


4

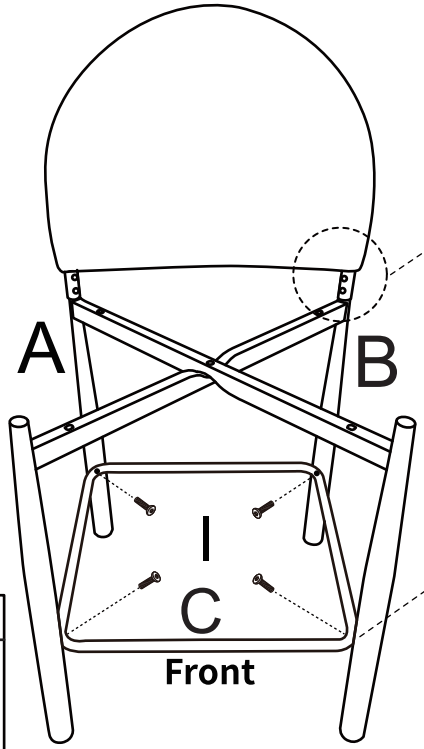

I x4




M6x30mm

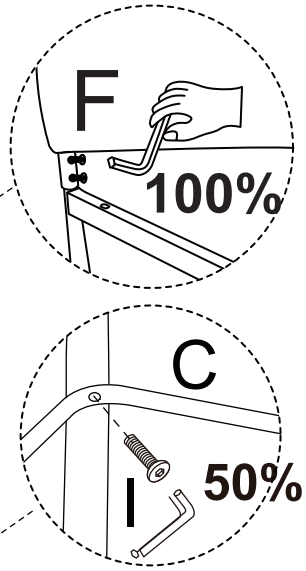

Twist (I) through (C) into (A) and (B).
Note: Tighten (I) to about 50% only.
Then tighten (F) completely.

5

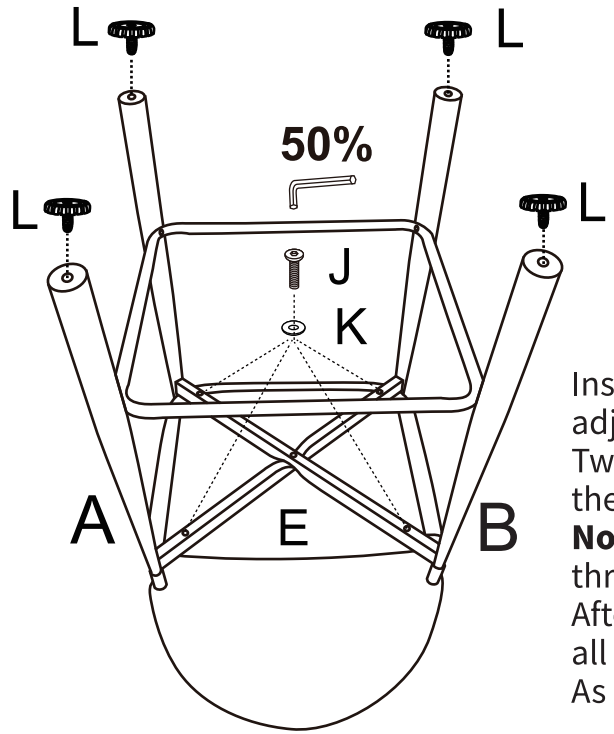

L x4



K x4




M6x16x1.5mm

J x4



M6x50mm

Insert (E) firmly into the base frame, adjusting it to align the bottom holes. Twist (J) through (K) into (A) (B) and the seat cushion (E) to connect them.
Note: Do not fully tighten the first three (J), tighten to about **50%** only. After installing the last (J), fully tighten all previously installed screws.
As shown, twist (L) into (A) and (B).

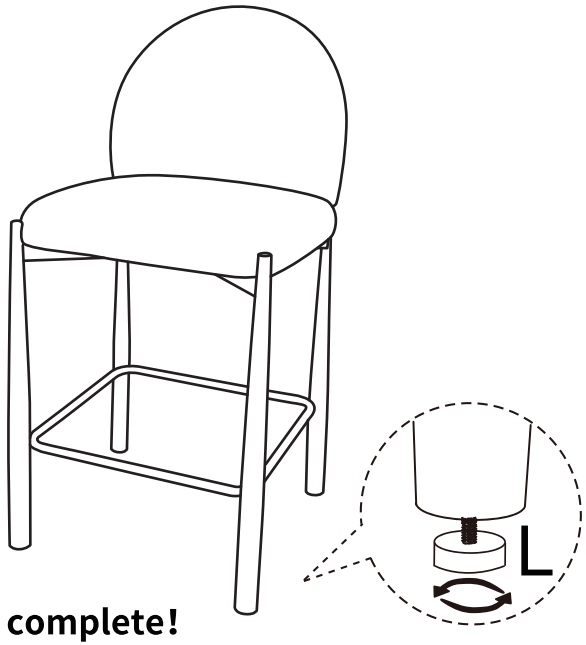

Assembly complete!

If you feel that the chair is leaning to one side due to uneven ground,rotate the foot pads to adjust it.