





Assembly Instructions

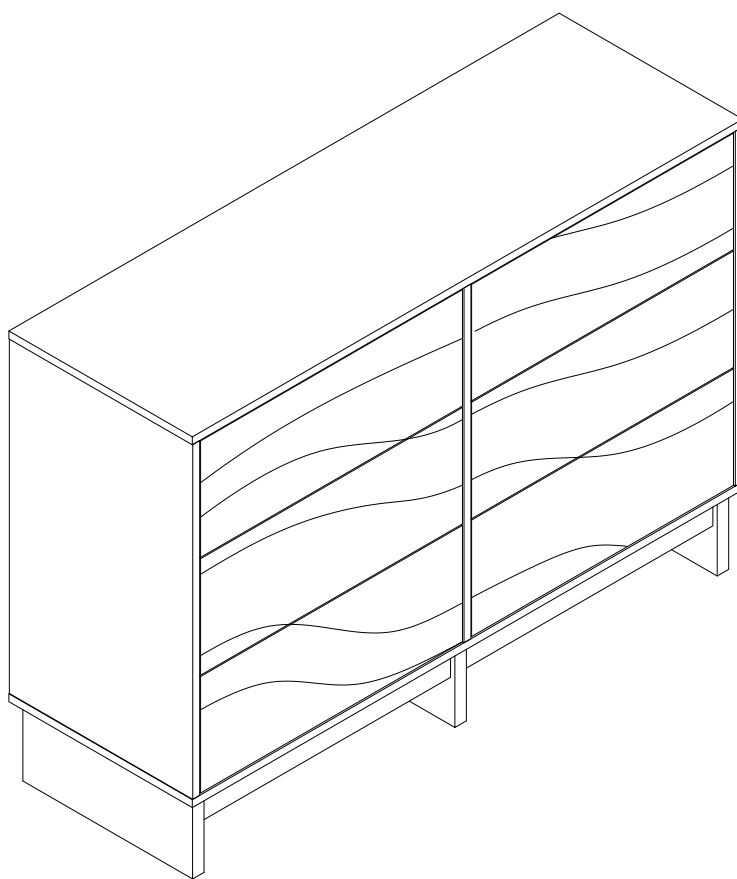

Sideboard


Model No.
SQ-CBG-7001-1.5

The beginning of installation may feel confusing and painful, but it will get better.

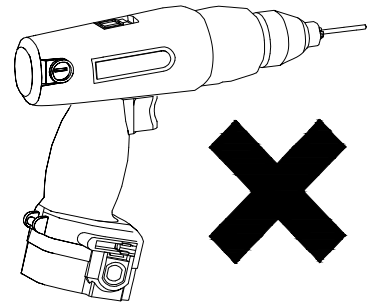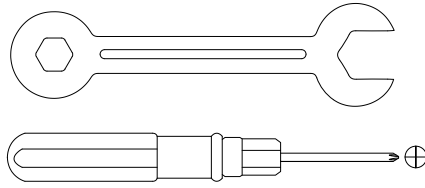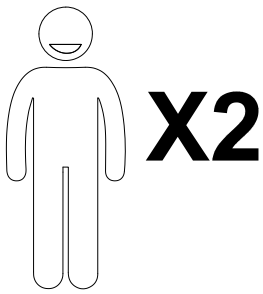



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

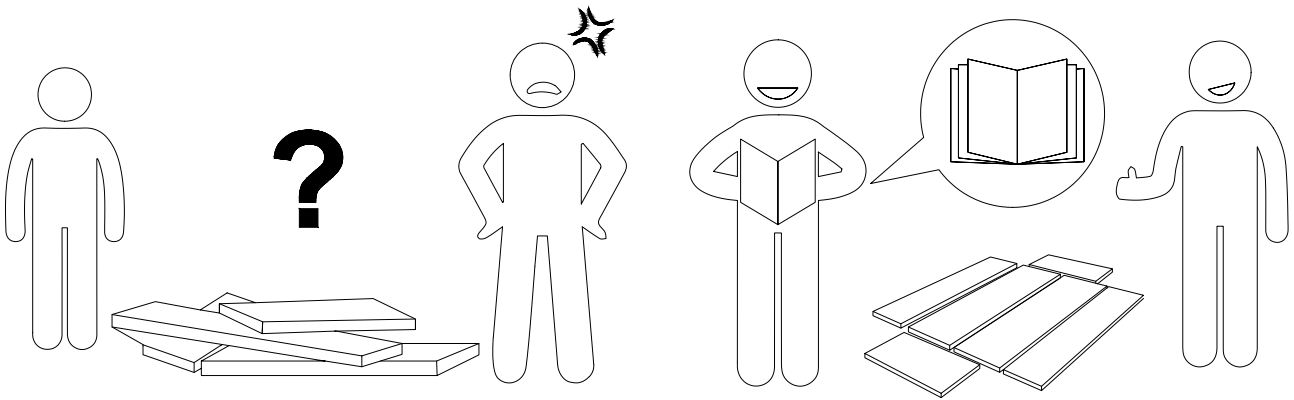

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.





















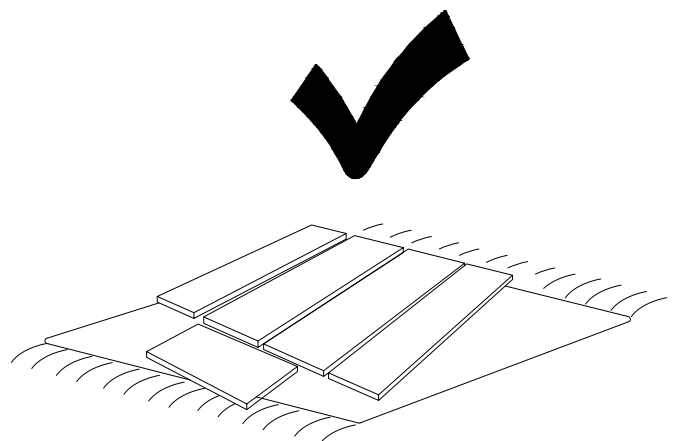
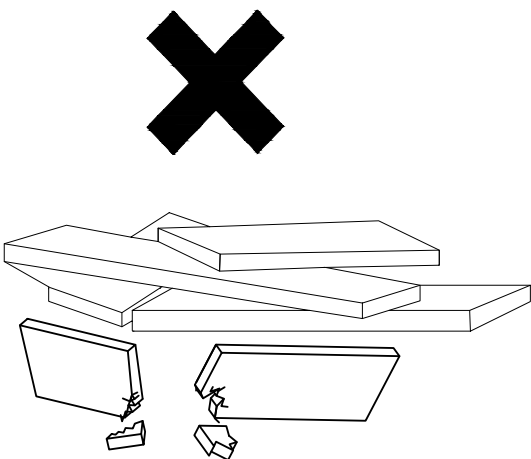


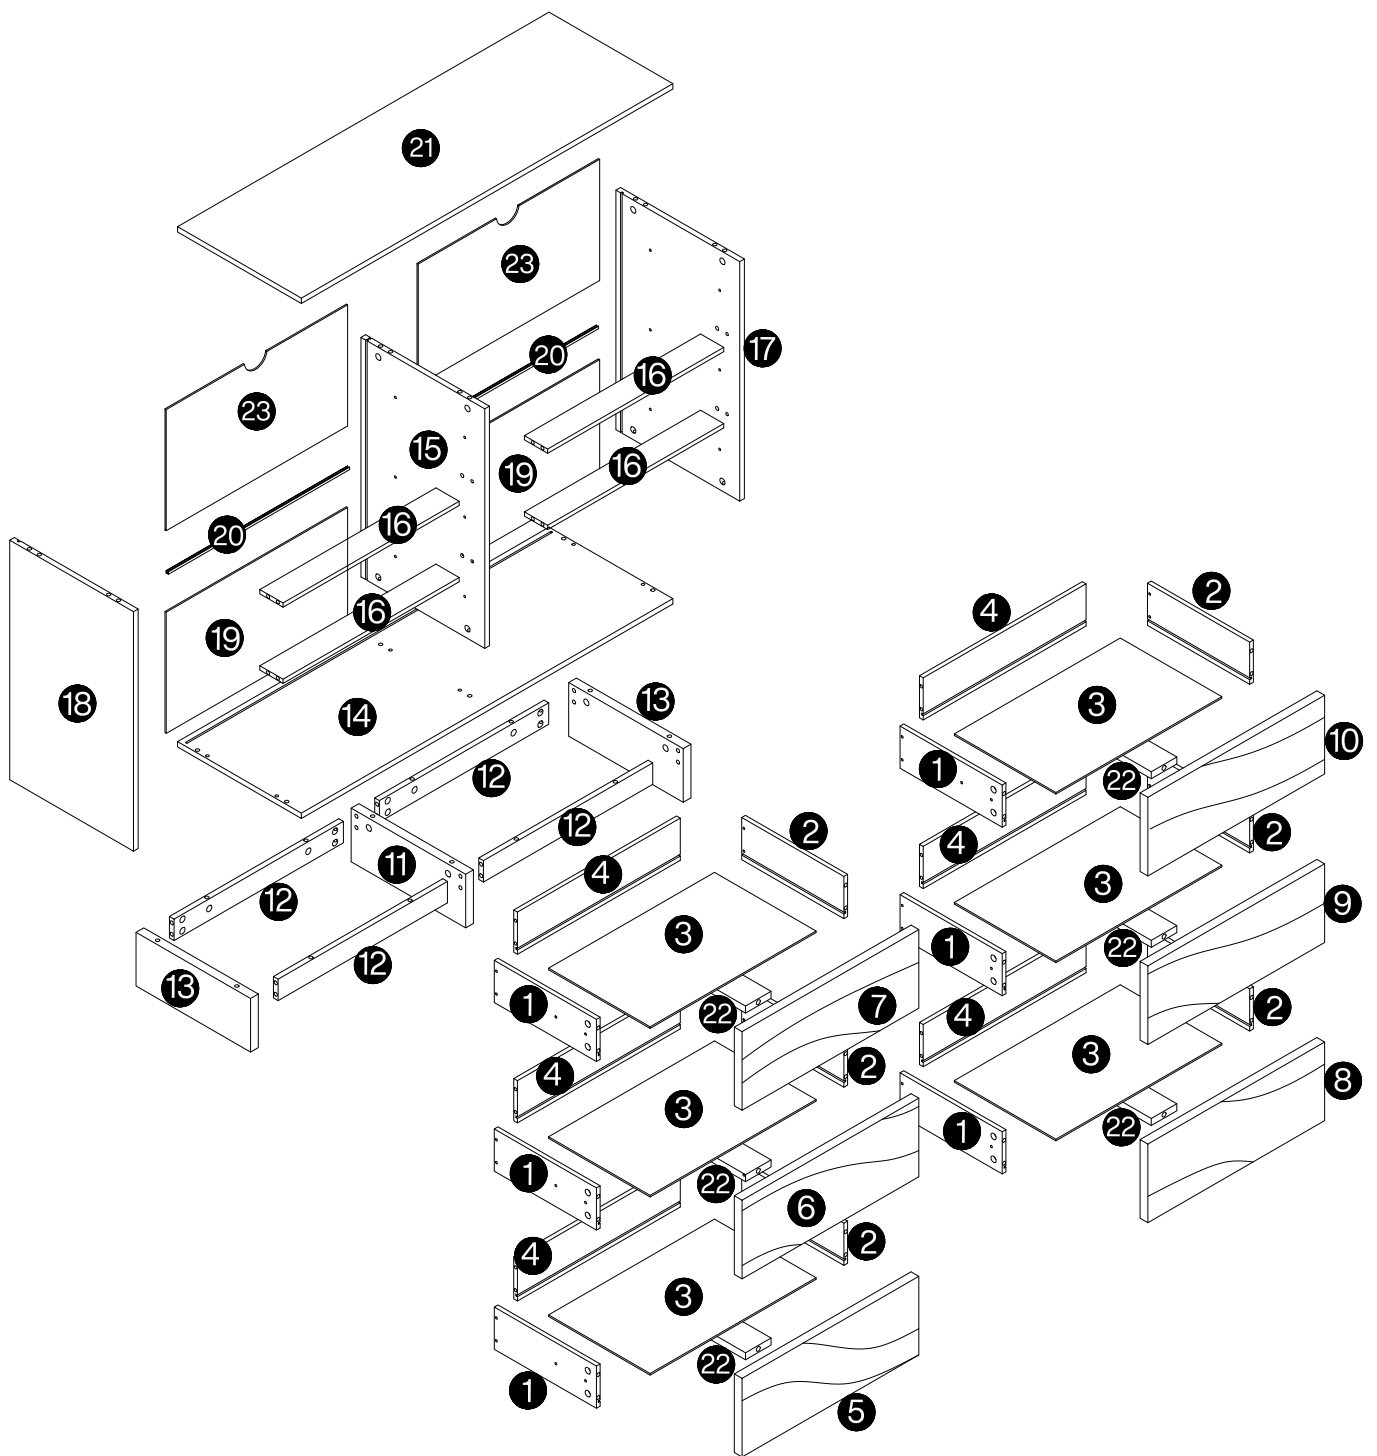




Caution



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

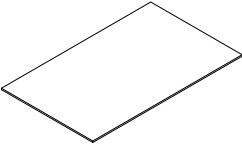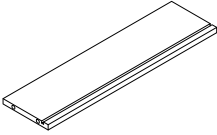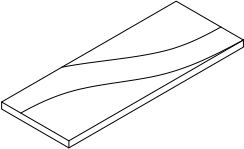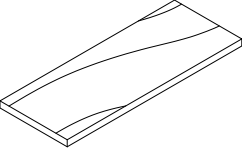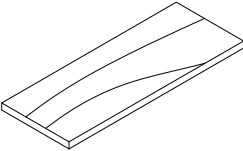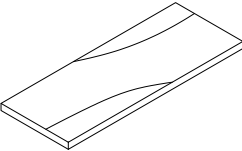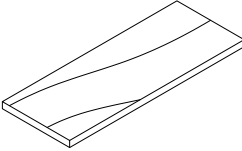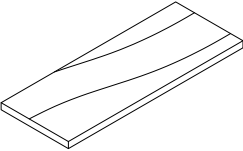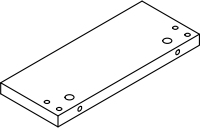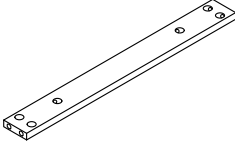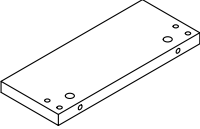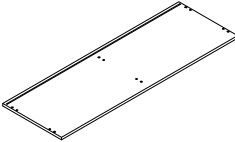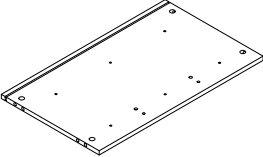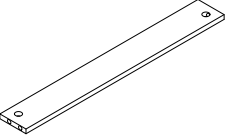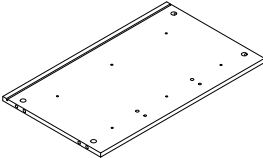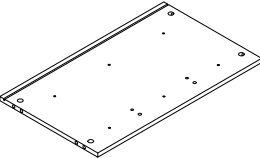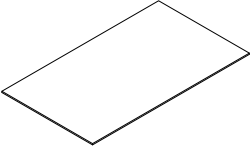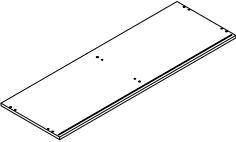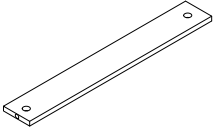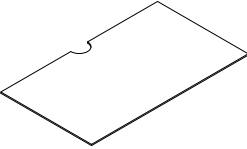1  6pcs	2  6pcs	3  6pcs	4  6pcs	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  1 pc
11  1pc	12  4pcs	13  2pcs	14  1 pc	15  1 pc
16  4pcs	17  1pc	18  1pc	19  2pcs	20  2pcs
21  1 pc	22  6pcs	23  2pcs		


Hardware List

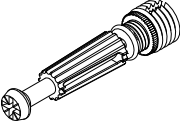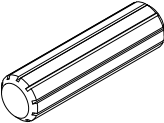A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	Ø8x30mm	300 mm	Ø3.5x12mm	Ø3.5X35 mm
86+2 pcs	86+2 pcs	20+2 pcs	6 sets	68+4 pcs	24+2 pcs

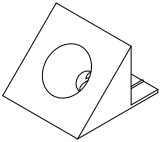
G	H	I	J	K	L
	 M6X14 mm				
16+2 pcs	6+1pcs	2pcs	1 pc		

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

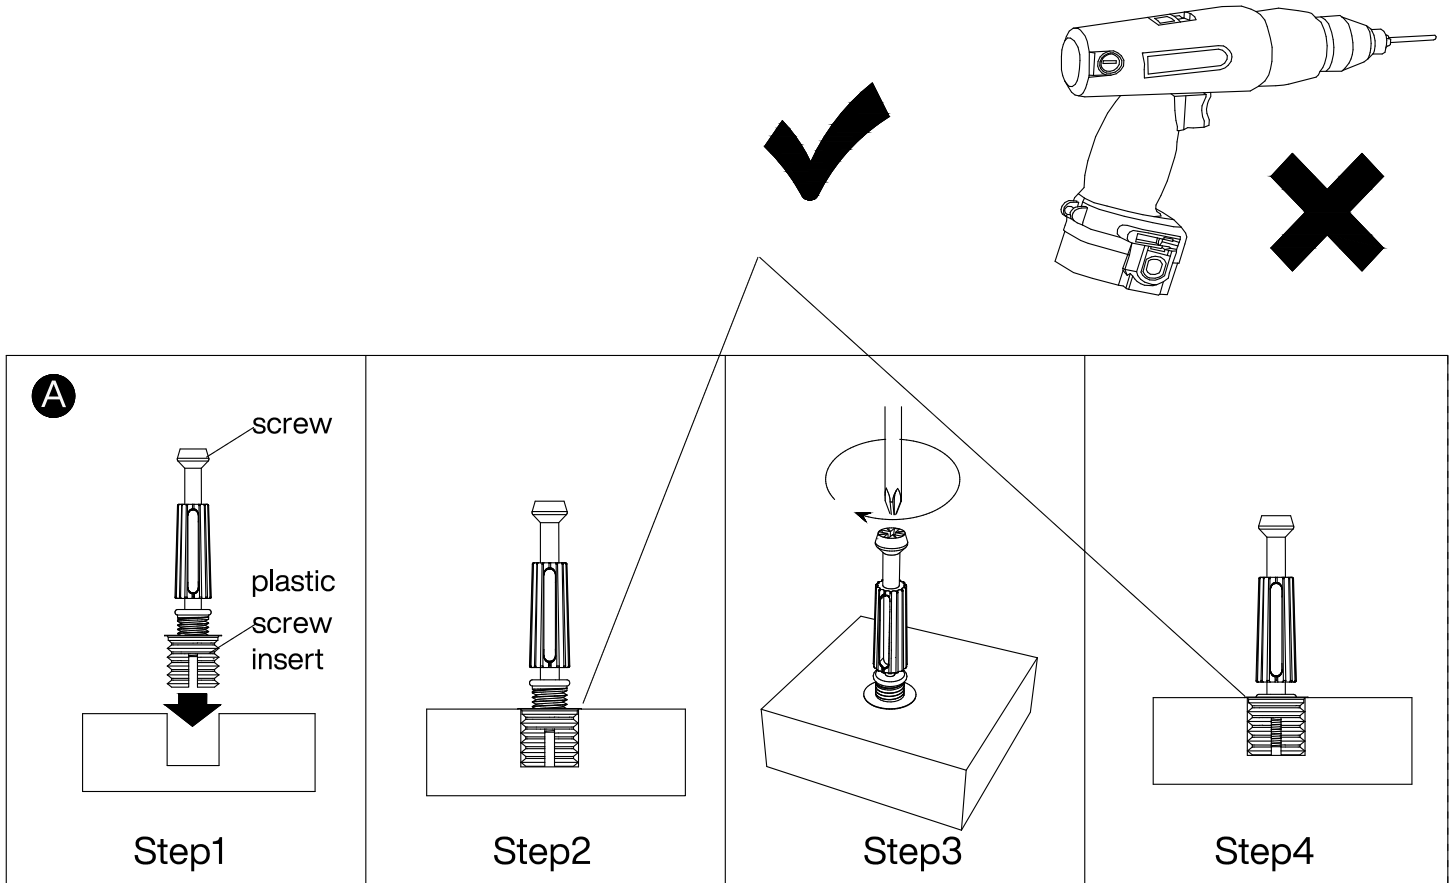


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

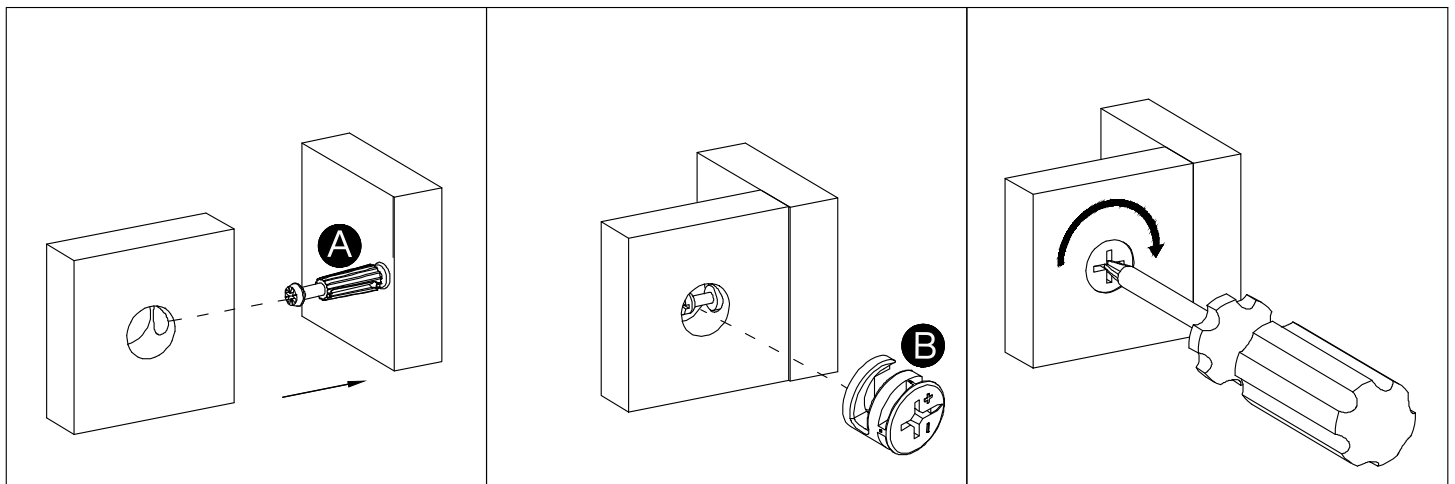

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "D" to each side, and then gently push up the lever of component "D-2"



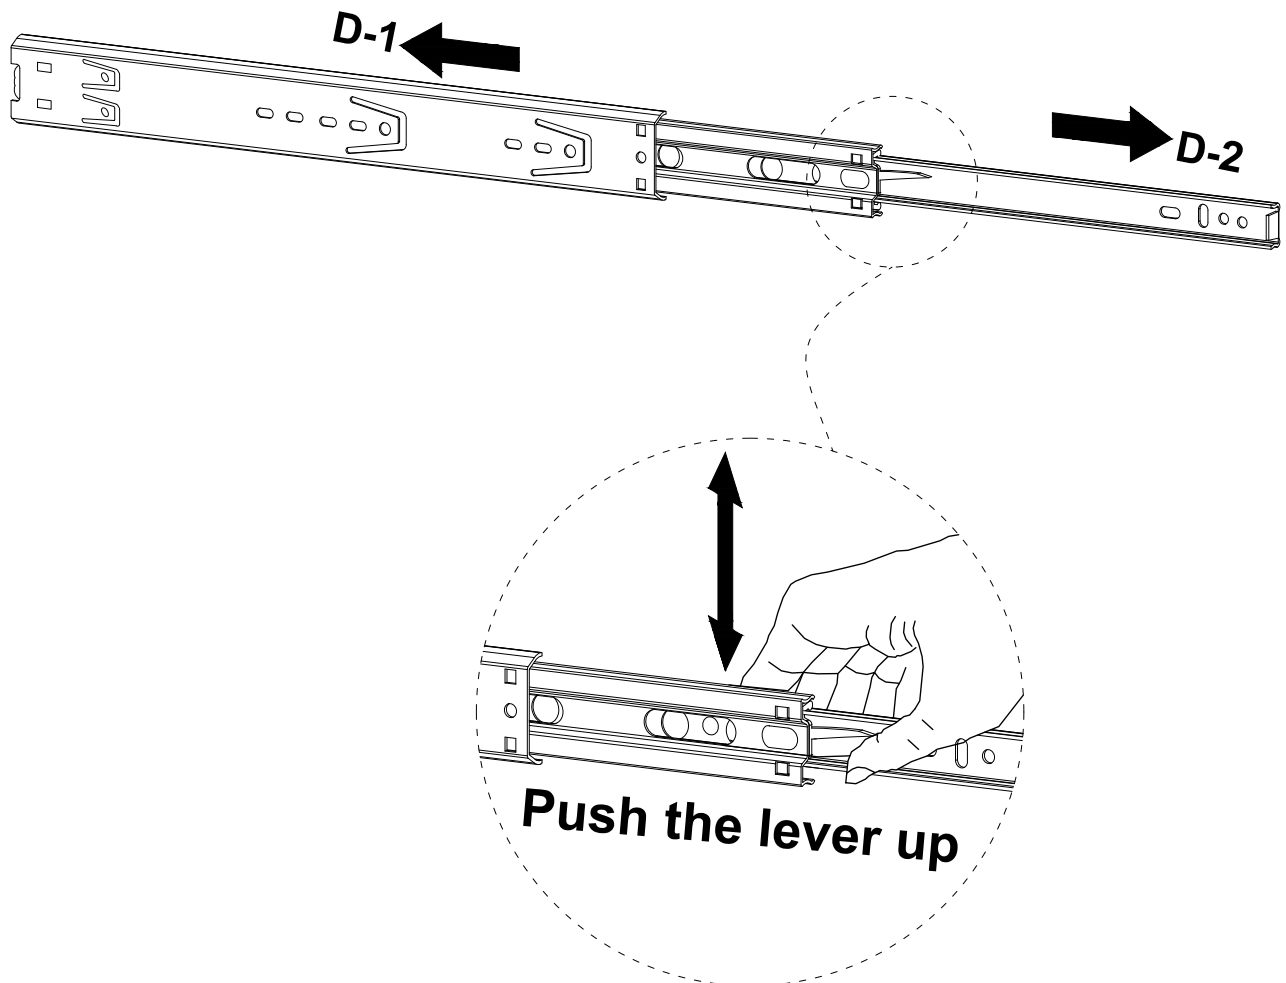


Step 2

Split component "D-1" and "D-2"

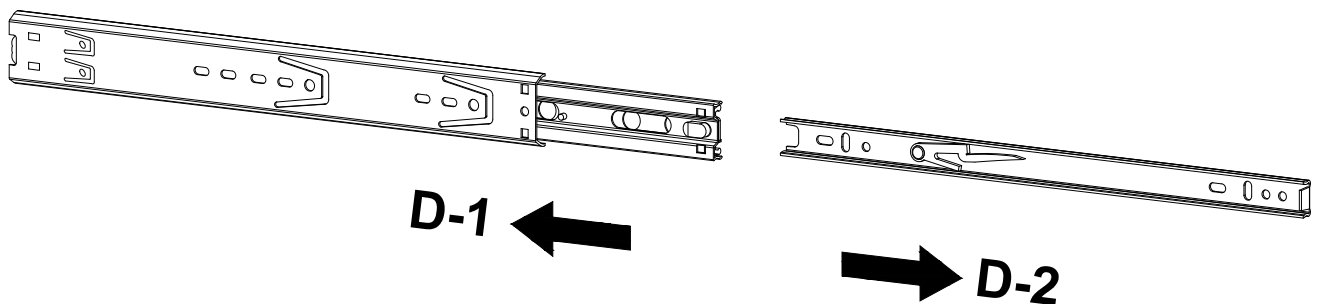




1

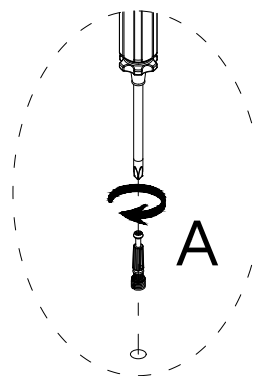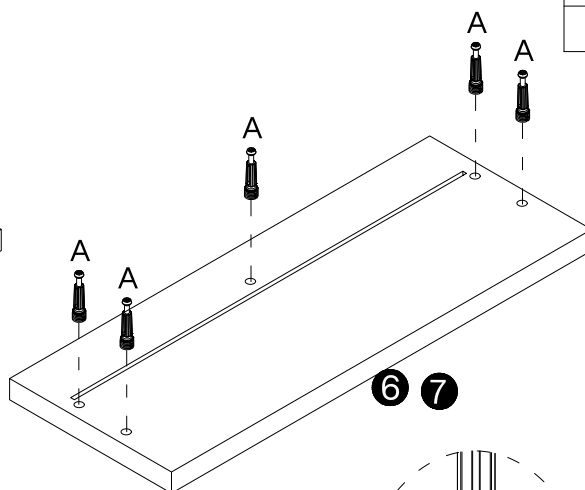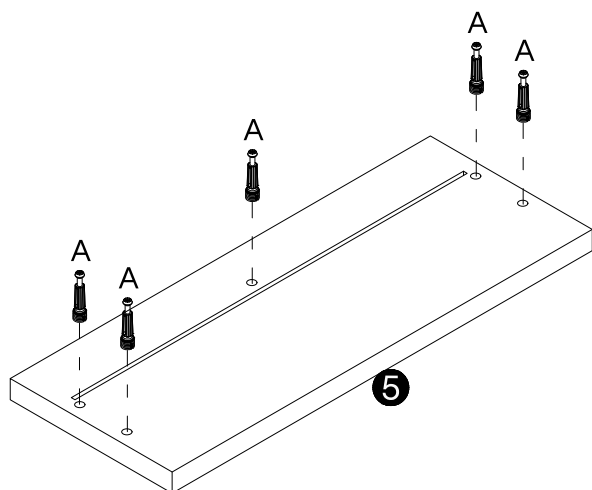

A

M6x40mm
15 pcs


2

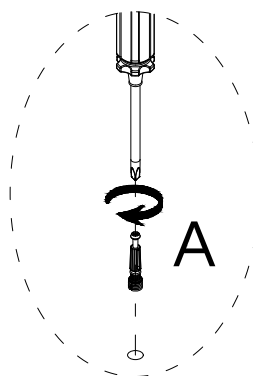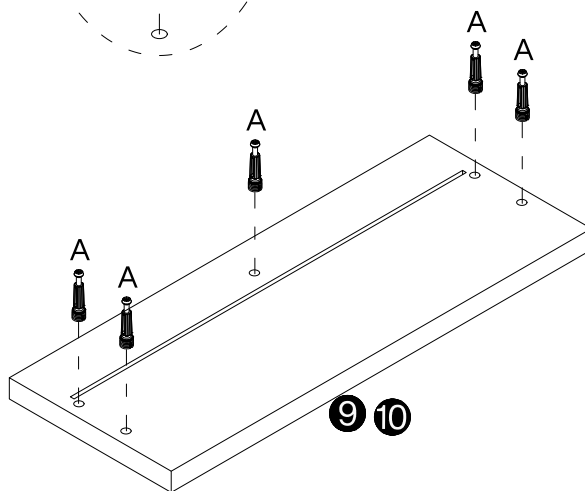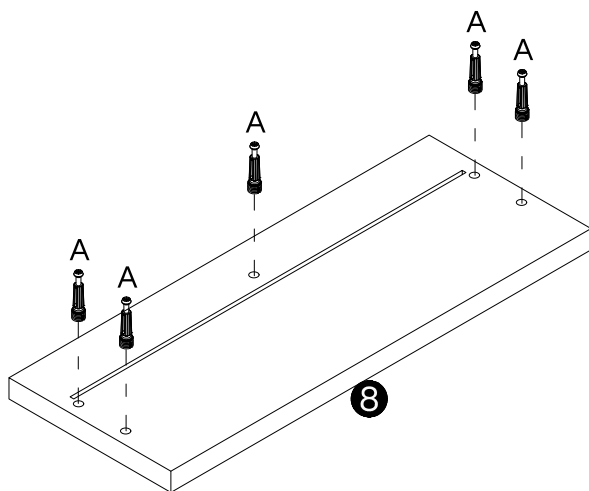

A


M6x40mm
15 pcs

3

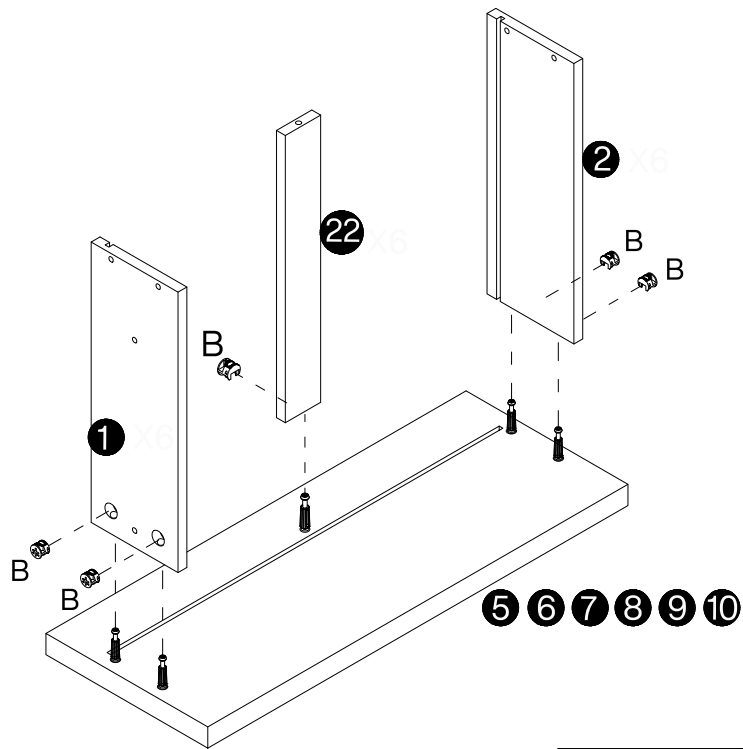


B

Ø15X10 mm
30 pcs


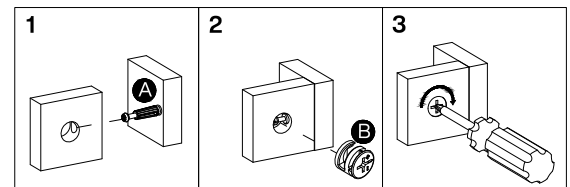


4

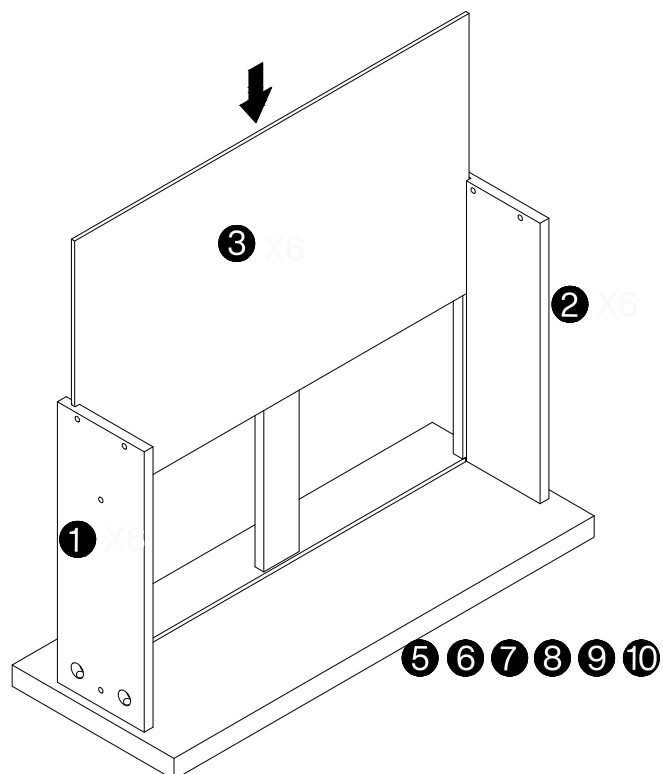

5



B	F
	
Ø15X10 mm	Ø3.5x35mm
6 pcs	24 pcs

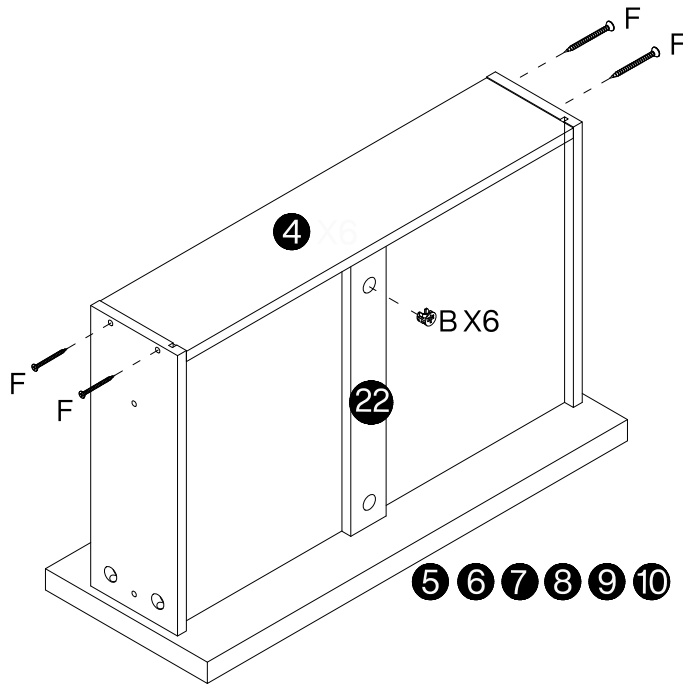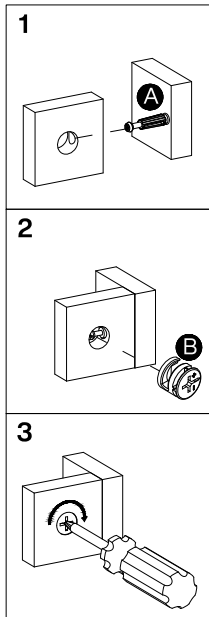


5 6 7 8 9 10

6



D-2	E
	
12 pcs	Ø3.5x12mm
12 pcs	24 pcs

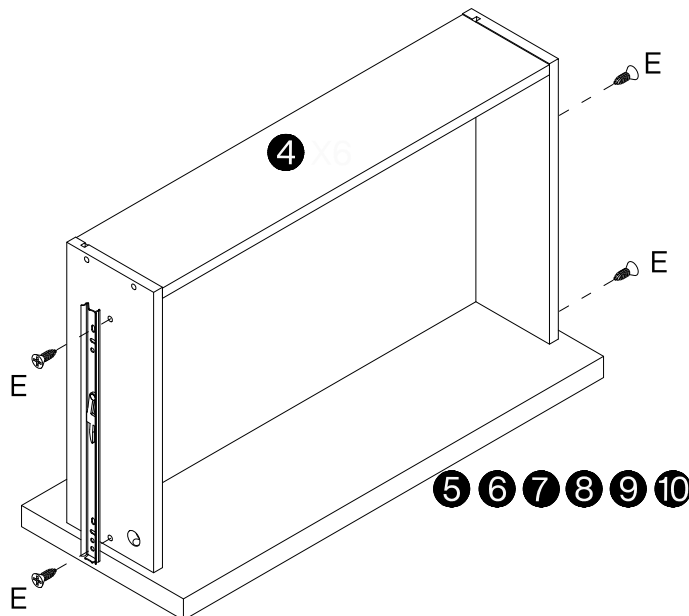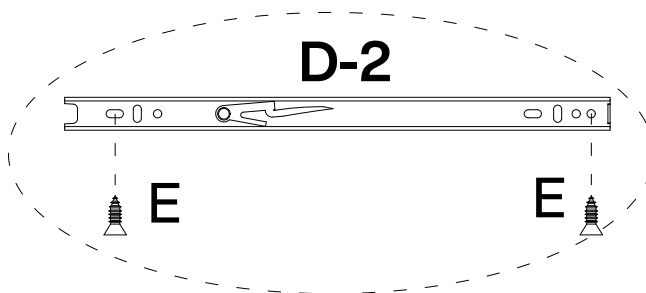


5 6 7 8 9 10

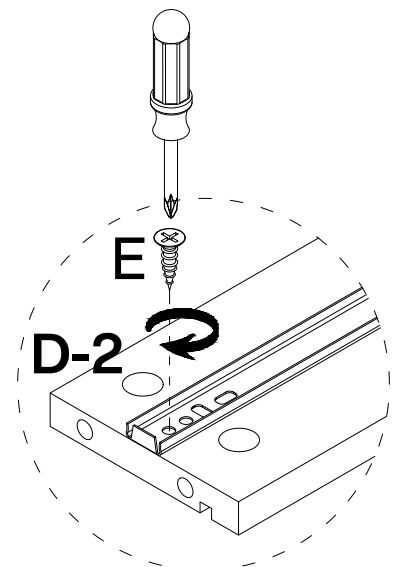


7

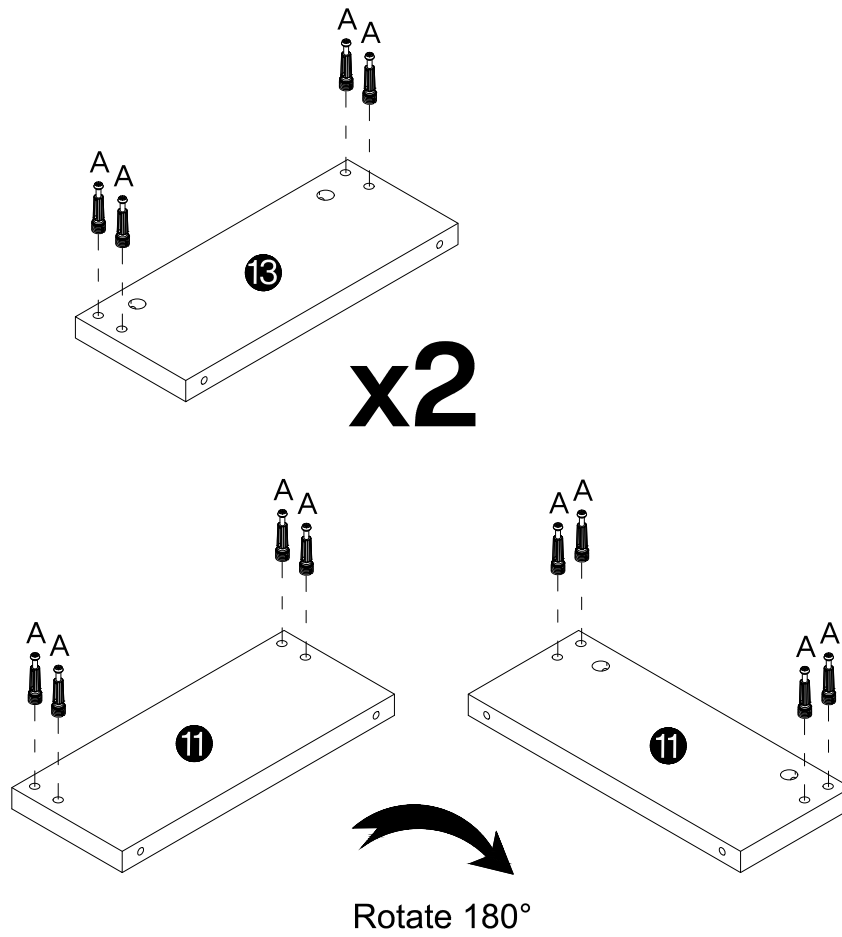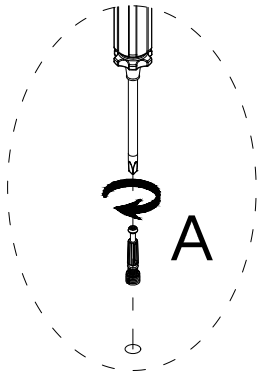


A

M6x40mm
16 pcs

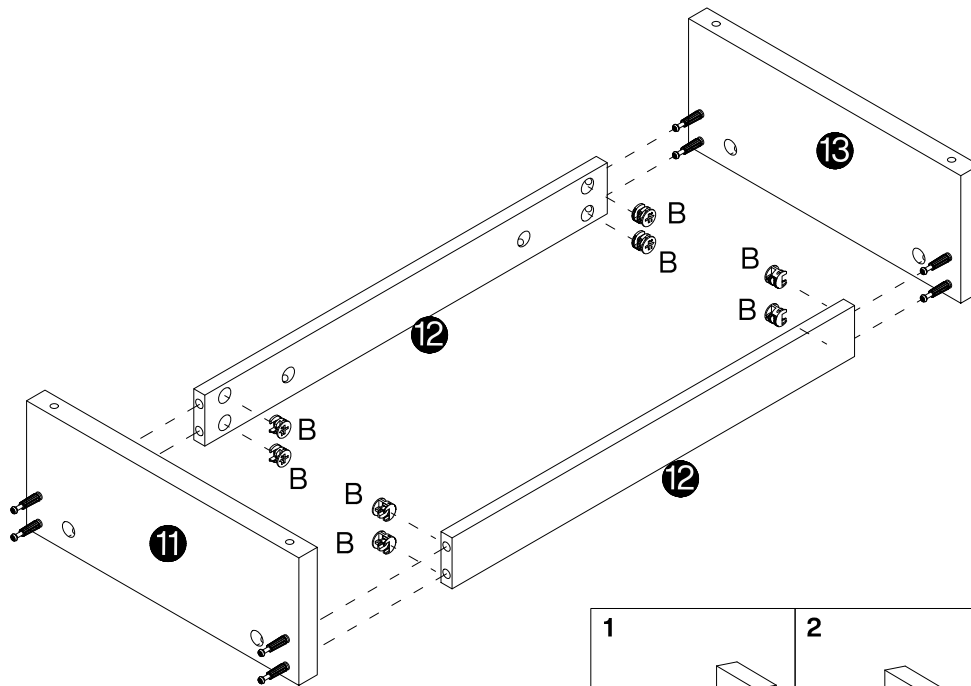8




B

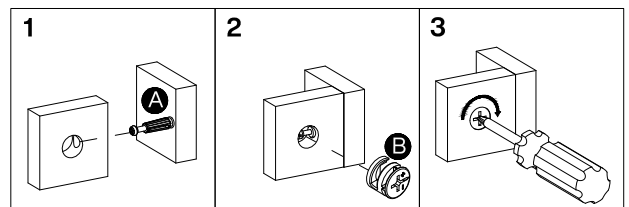Ø15X10 mm
8 pcs




9

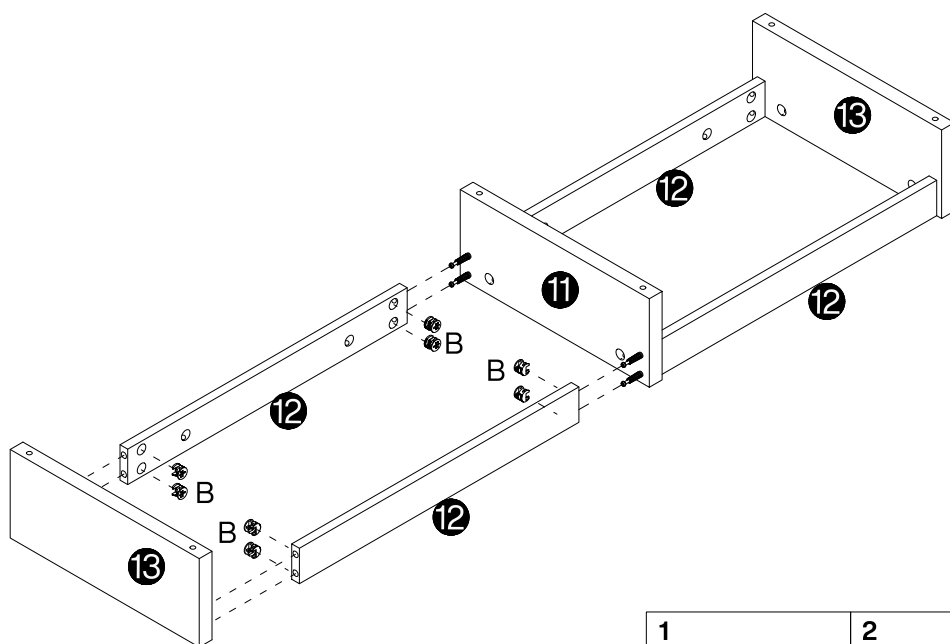



B


Ø15X10 mm
8 pcs

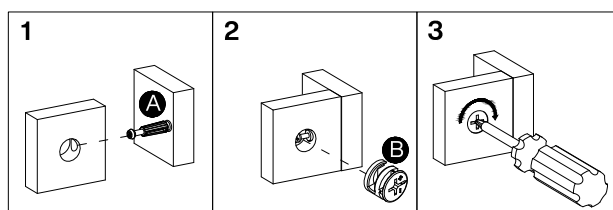

10

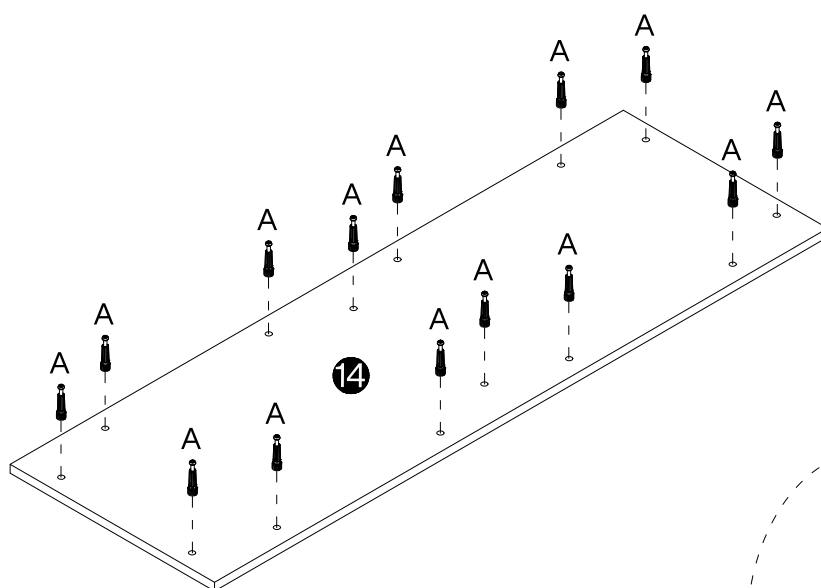



A

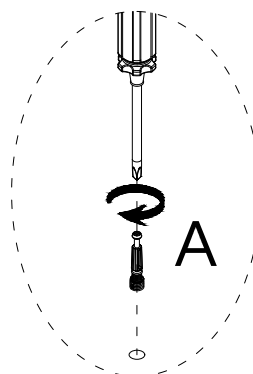M6x40mm
14 pcs



11

B

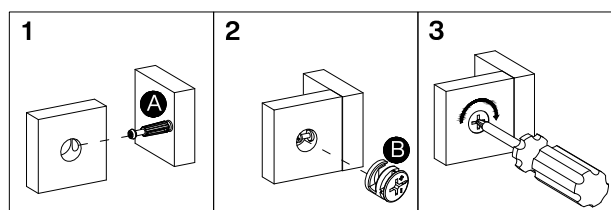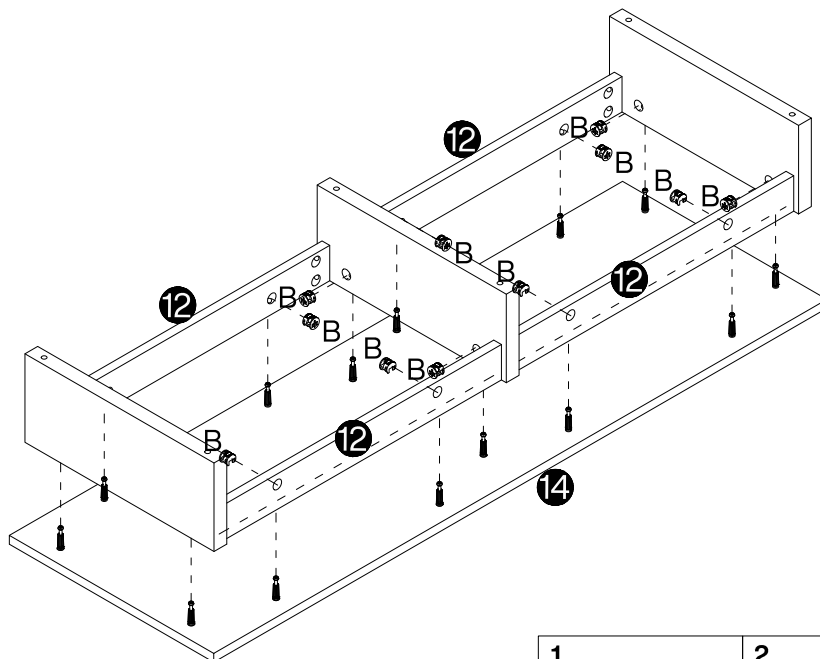
Ø15X10 mm
14 pcs




12

H


M6X14 mm
6 pcs

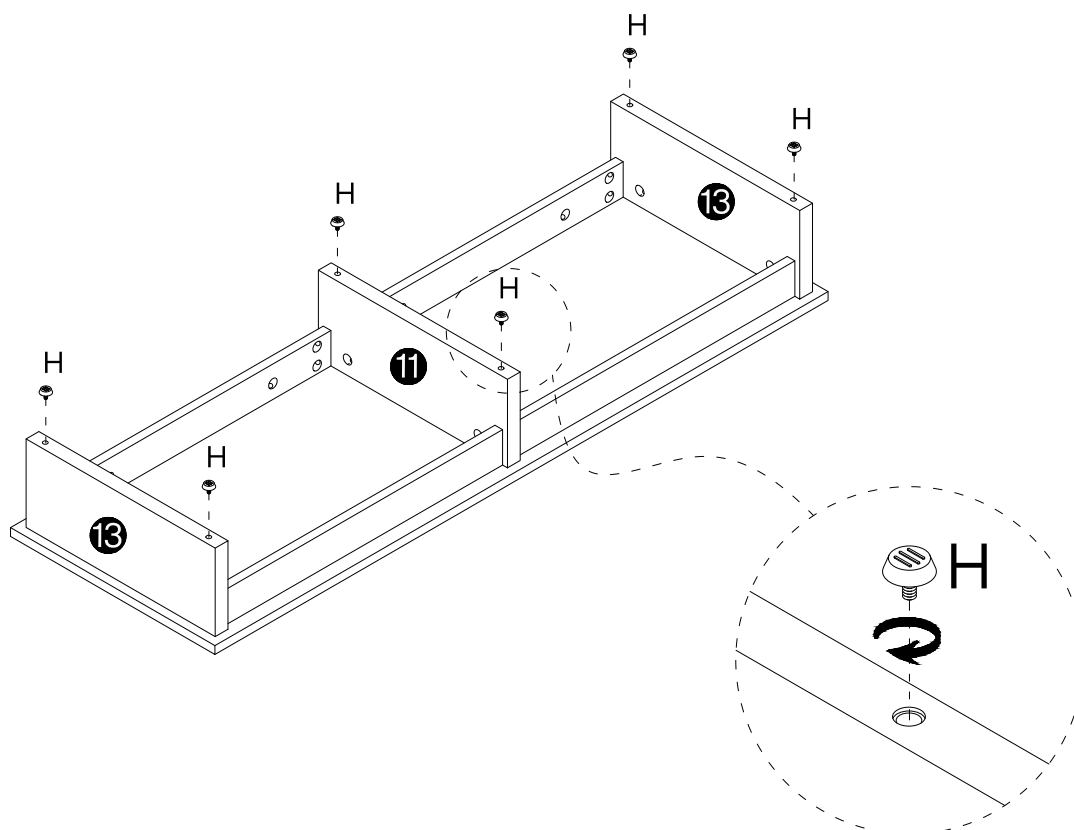


13

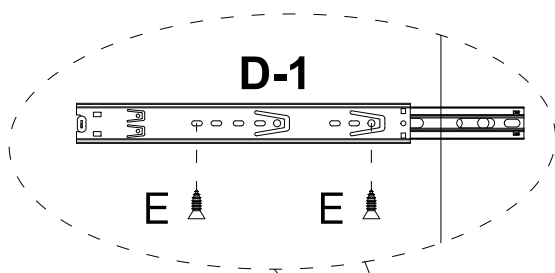



D-1	E
3 pcs	6 pcs

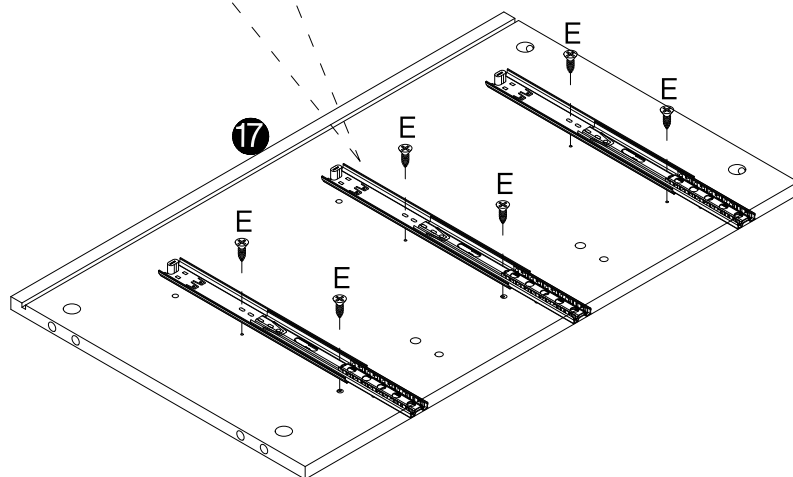

14

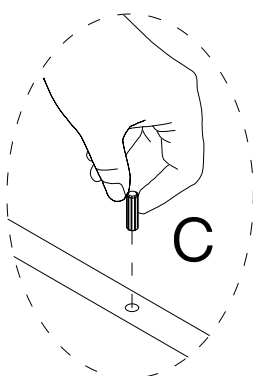


C	A
Ø8x30mm	M6x40mm
4 pcs	2 pcs

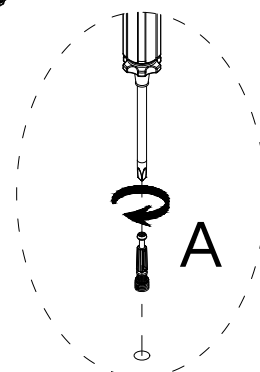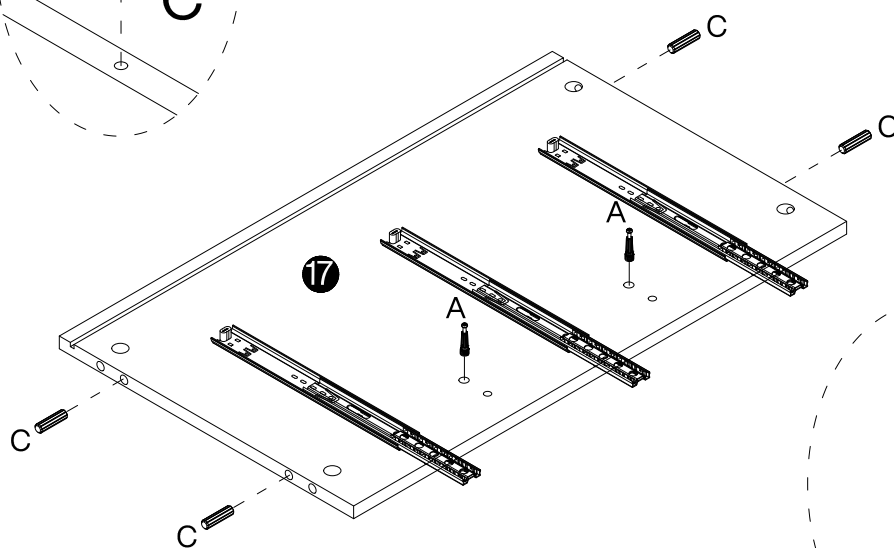



15

D-1	E
	 Ø3.5x12mm
3 pcs	6 pcs

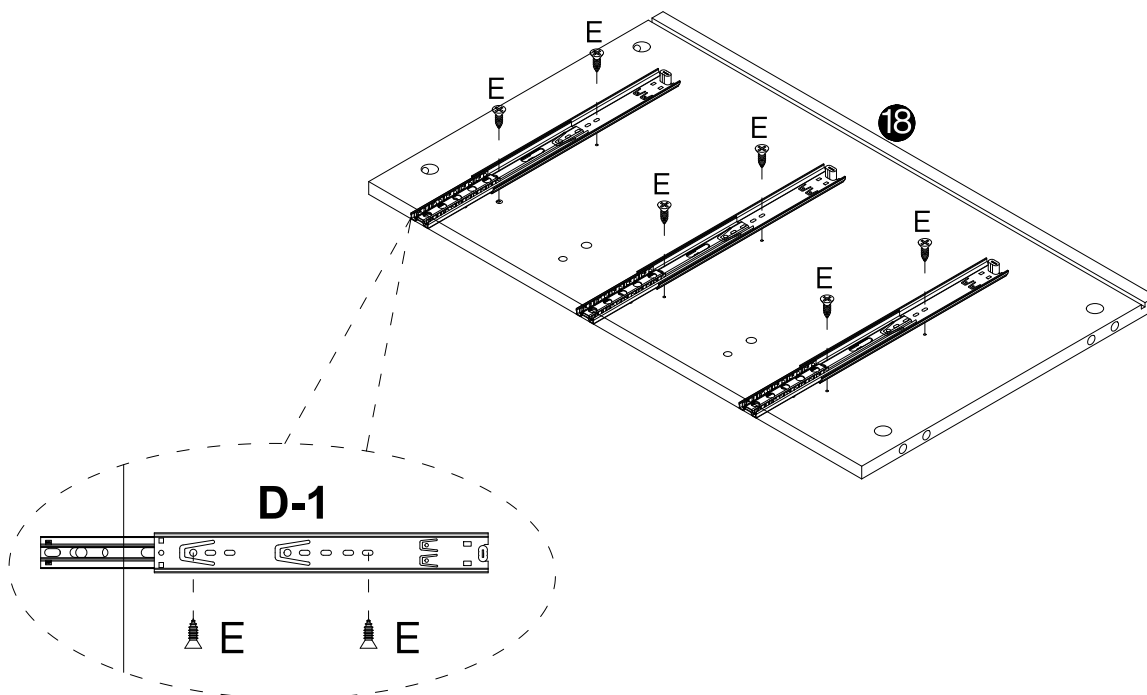


16


C	A
 Ø8x30mm	 M6x40mm
4 pcs	2 pcs

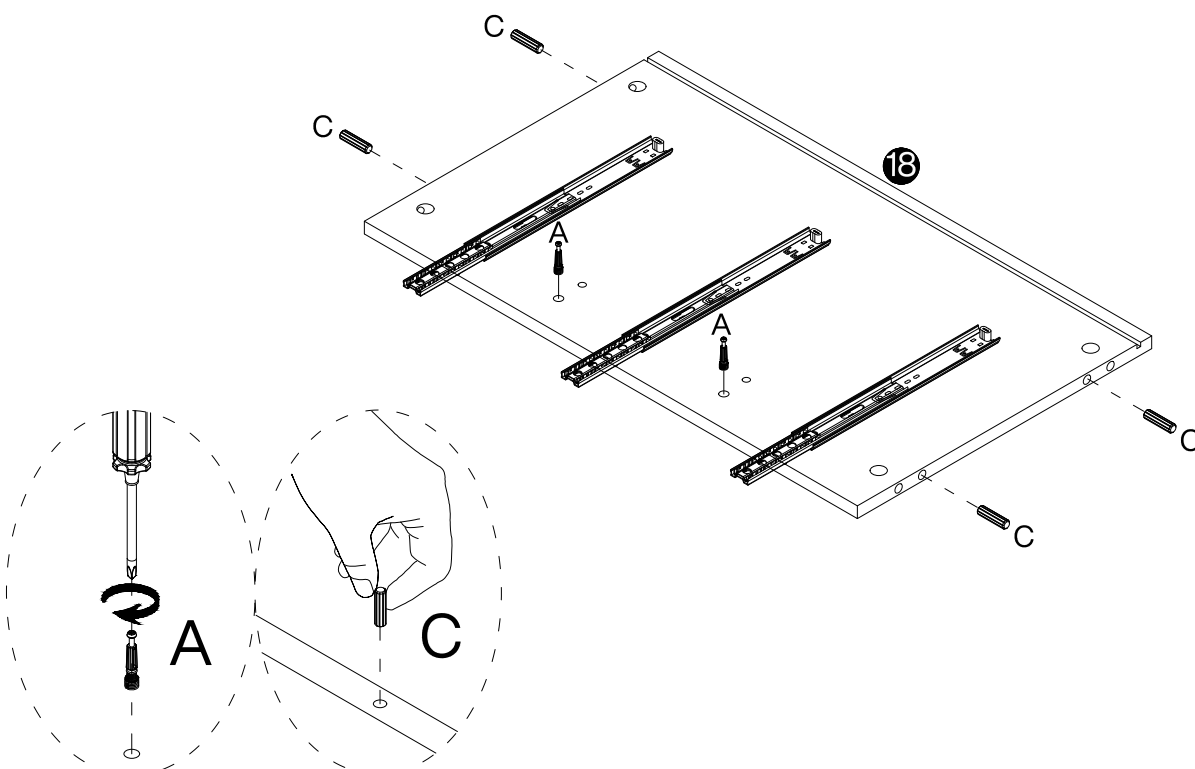

17

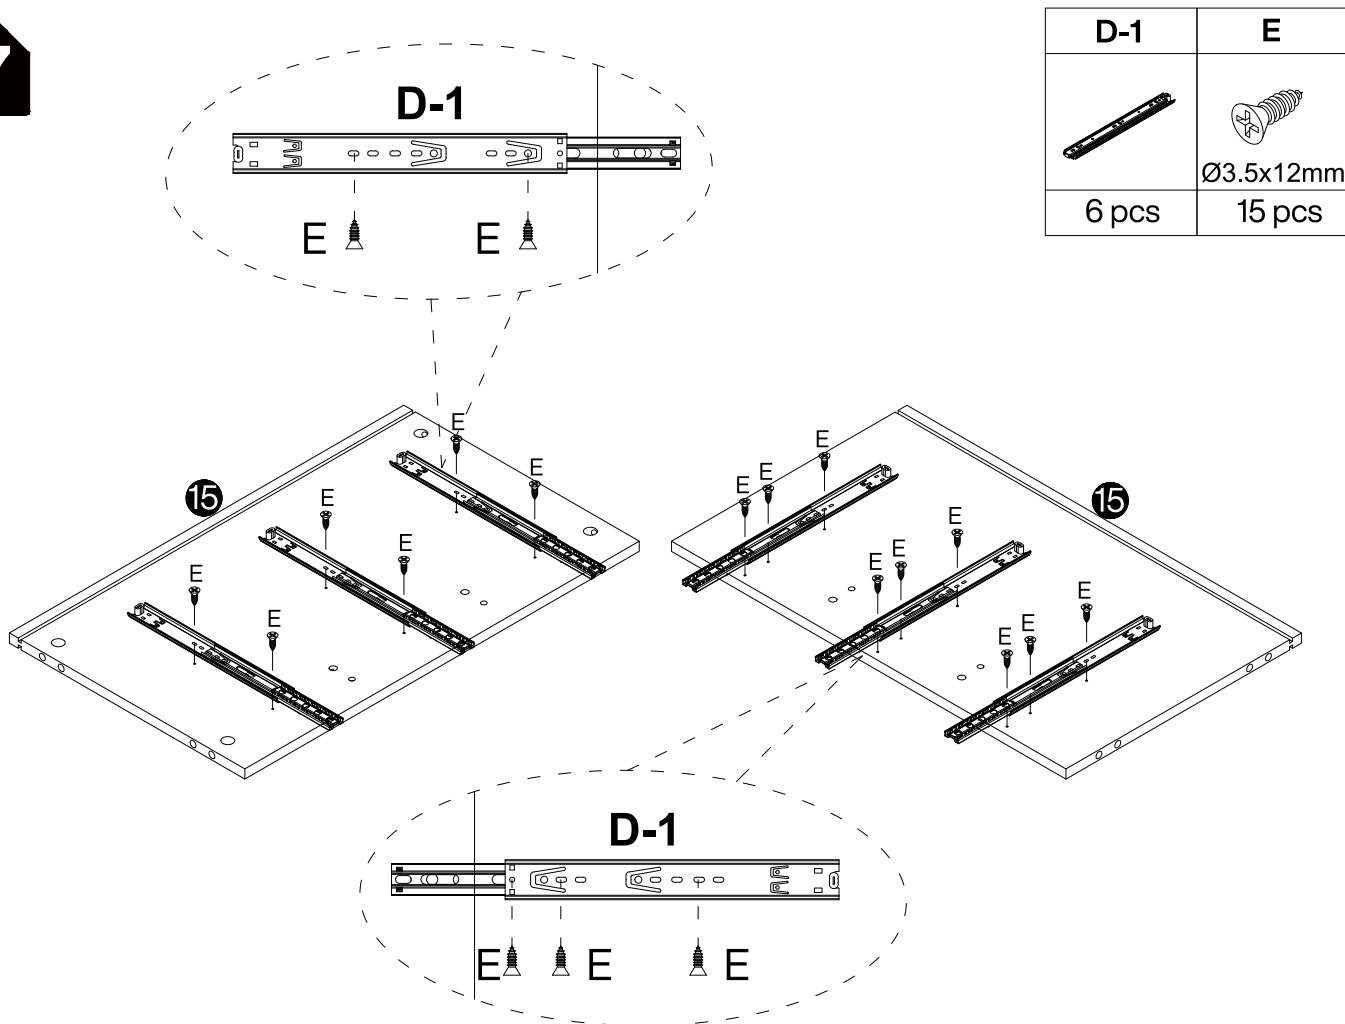


18

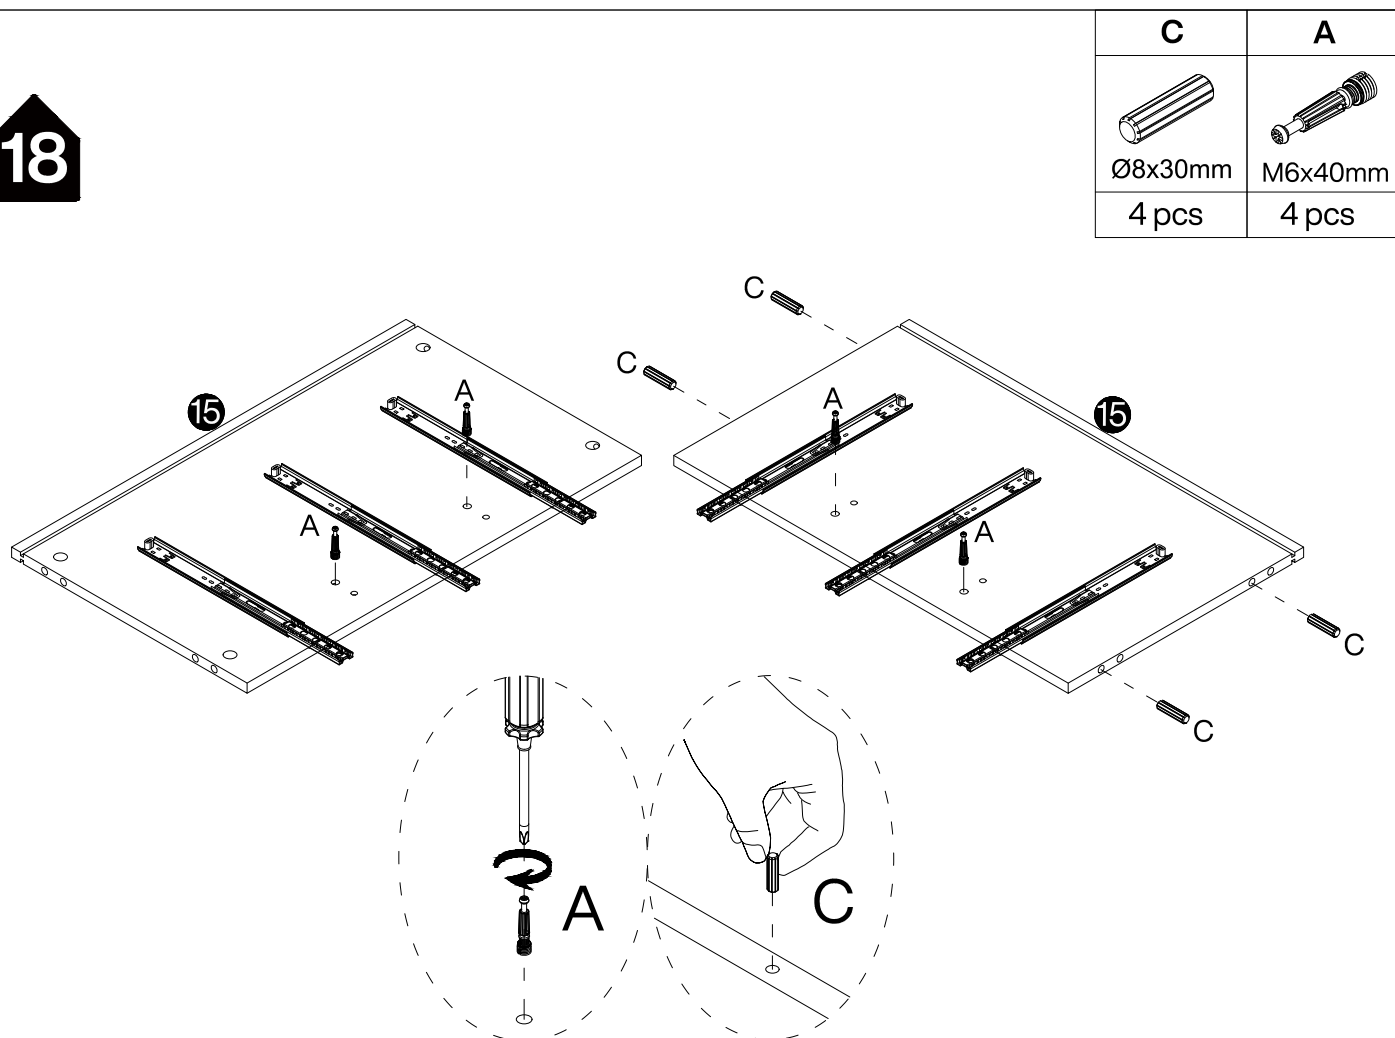

19

C



Ø8x30mm
8 pcs

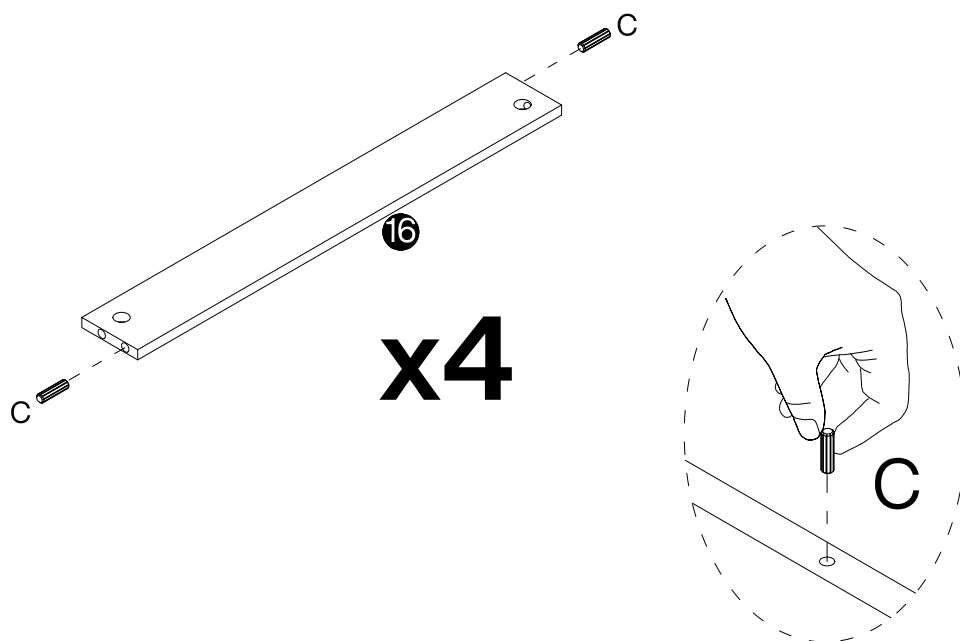


20

B

Ø15X10 mm
4 pcs

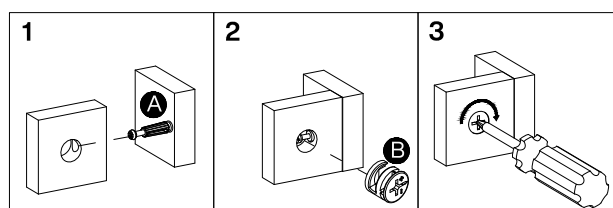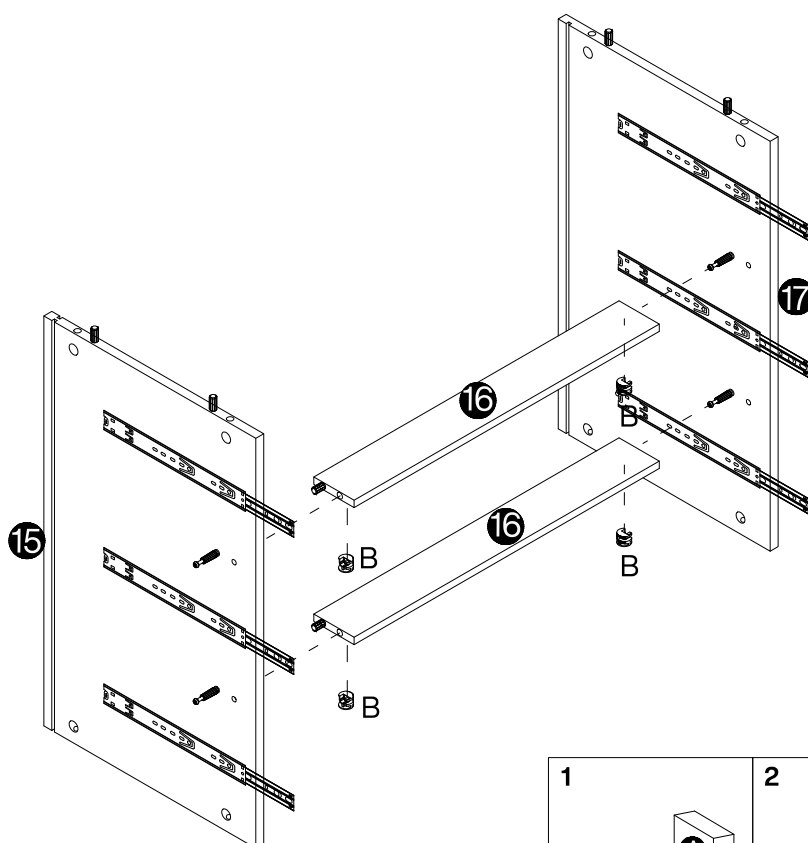

21

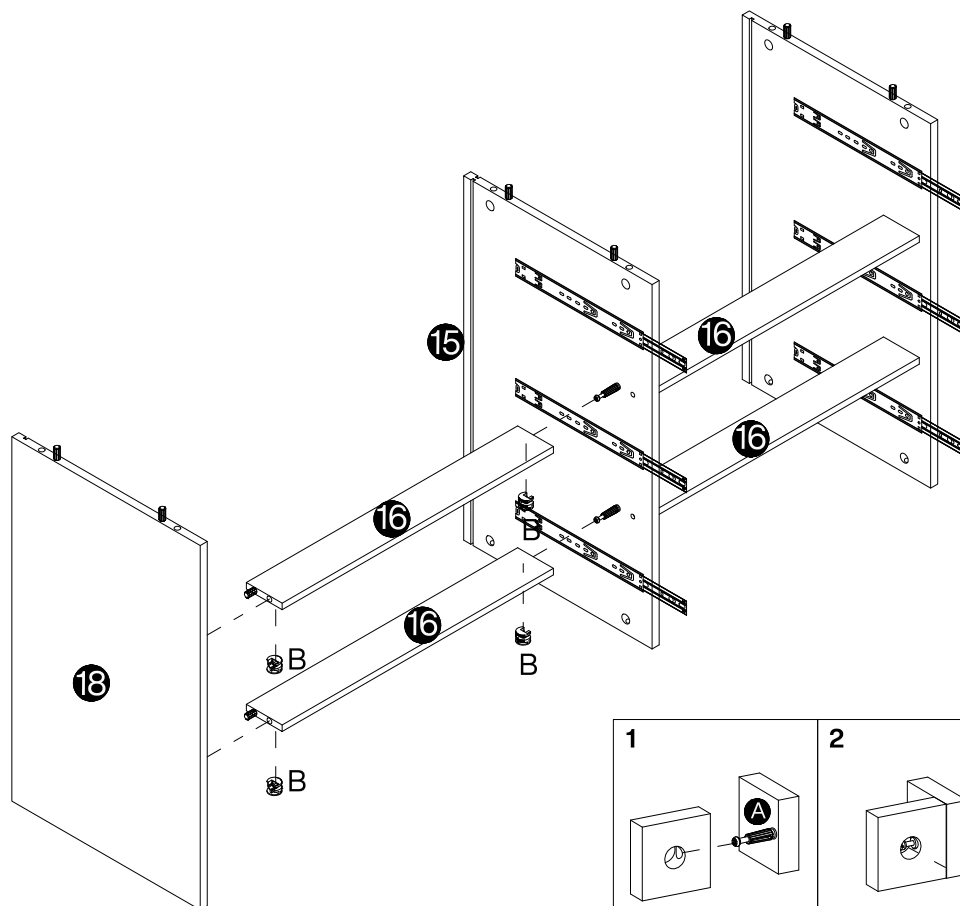


B




Ø15X10 mm

4 pcs

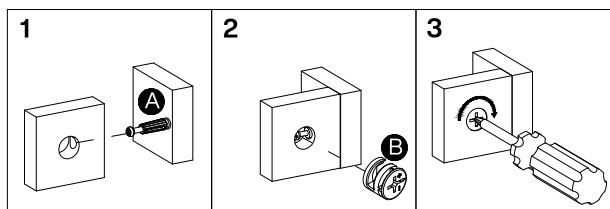

22

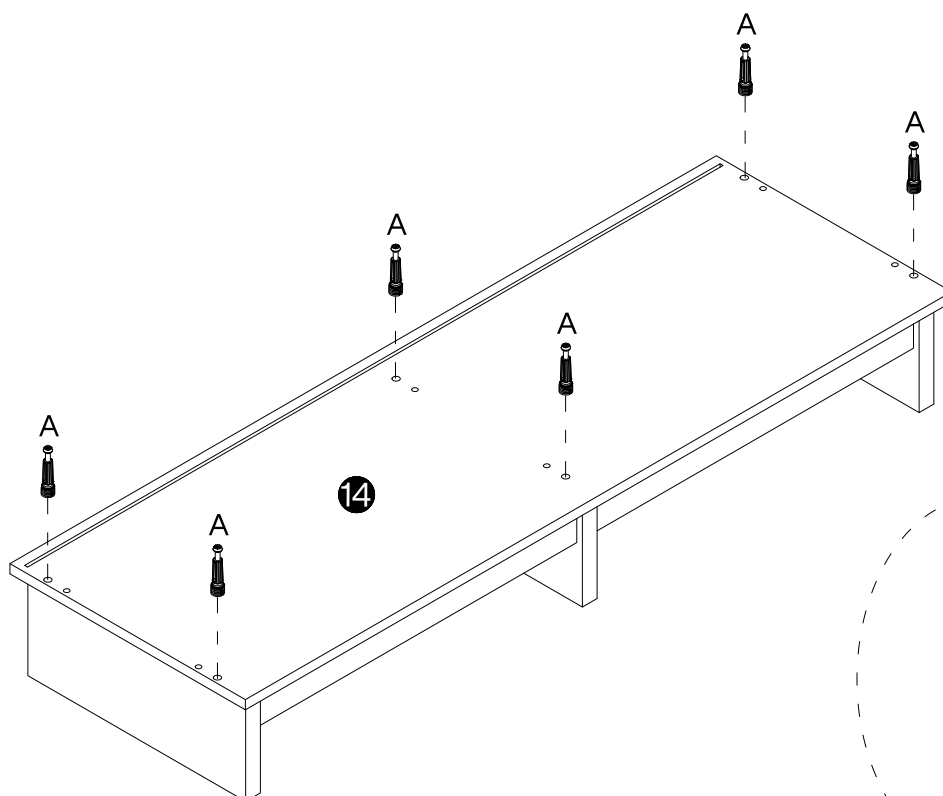


A



M6x40mm



6 pcs

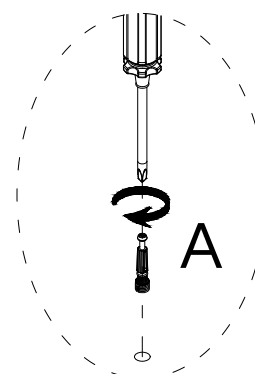


23

B



Ø15X10 mm
6 pcs

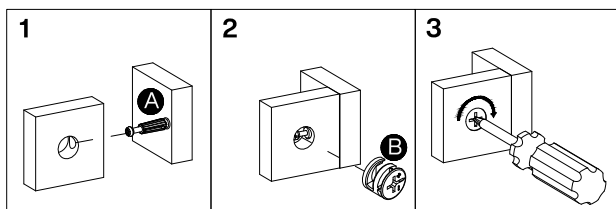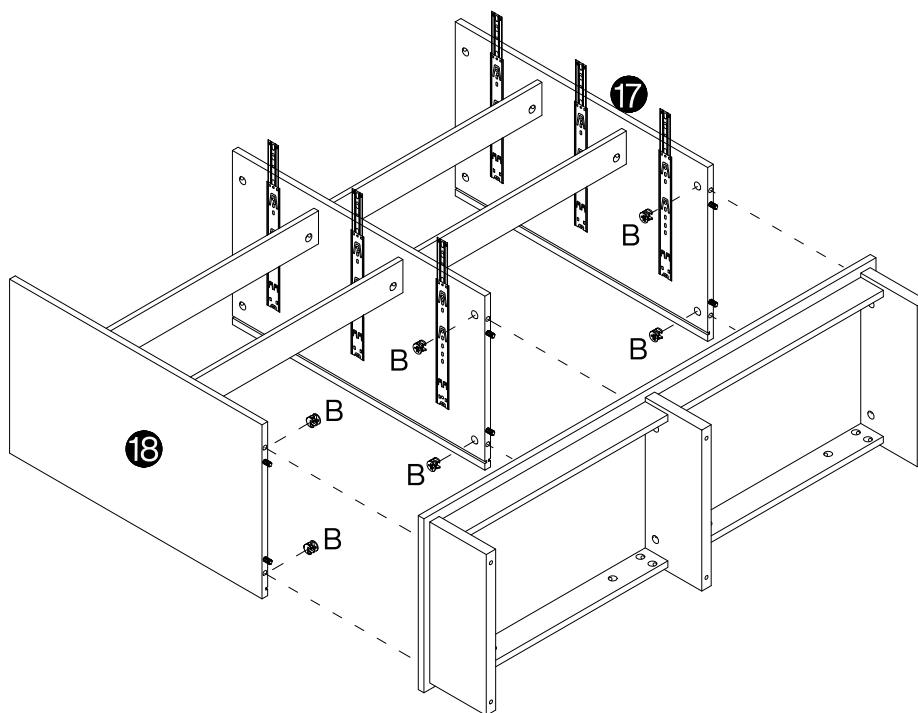


24

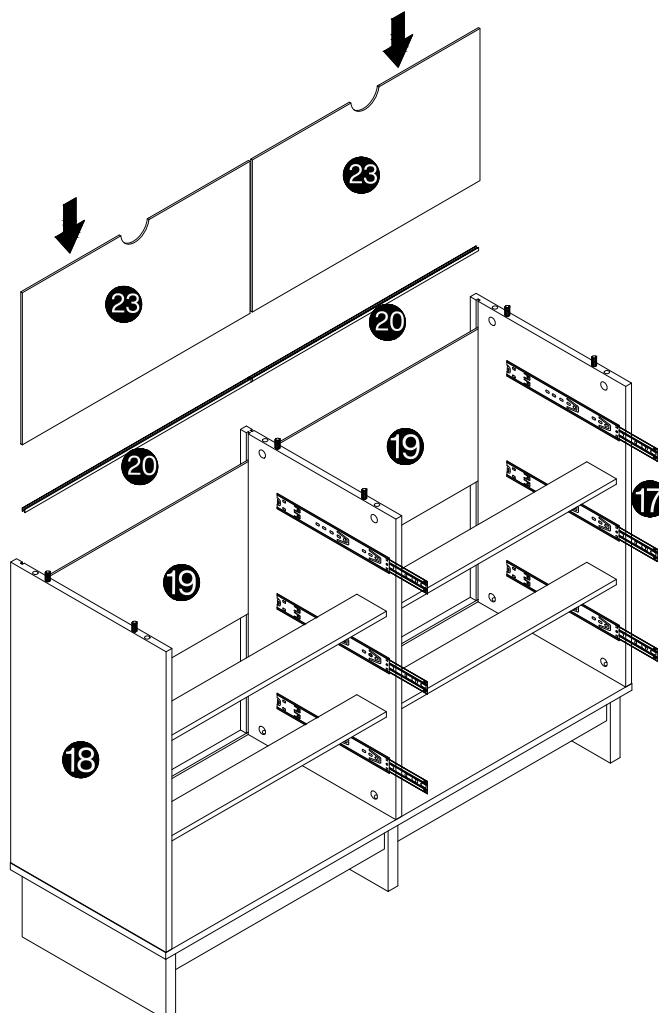

25

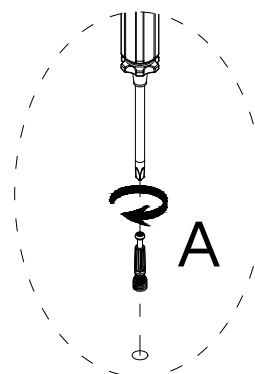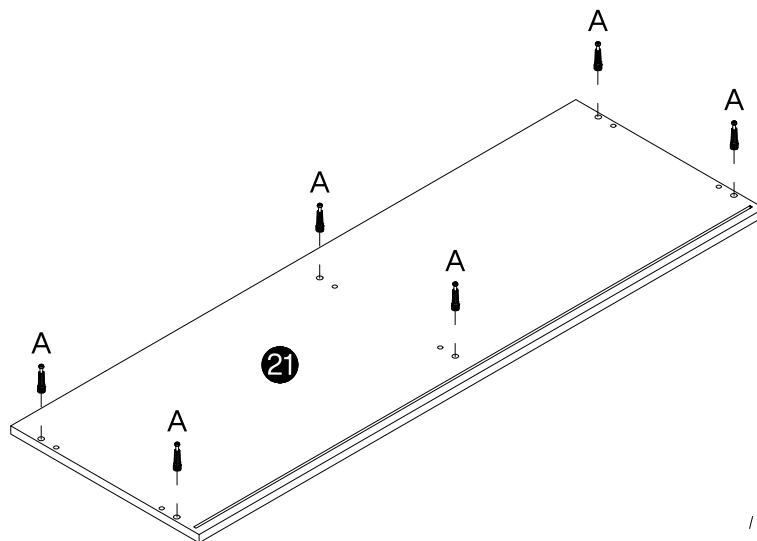



A



M6x40mm

6 pcs

26

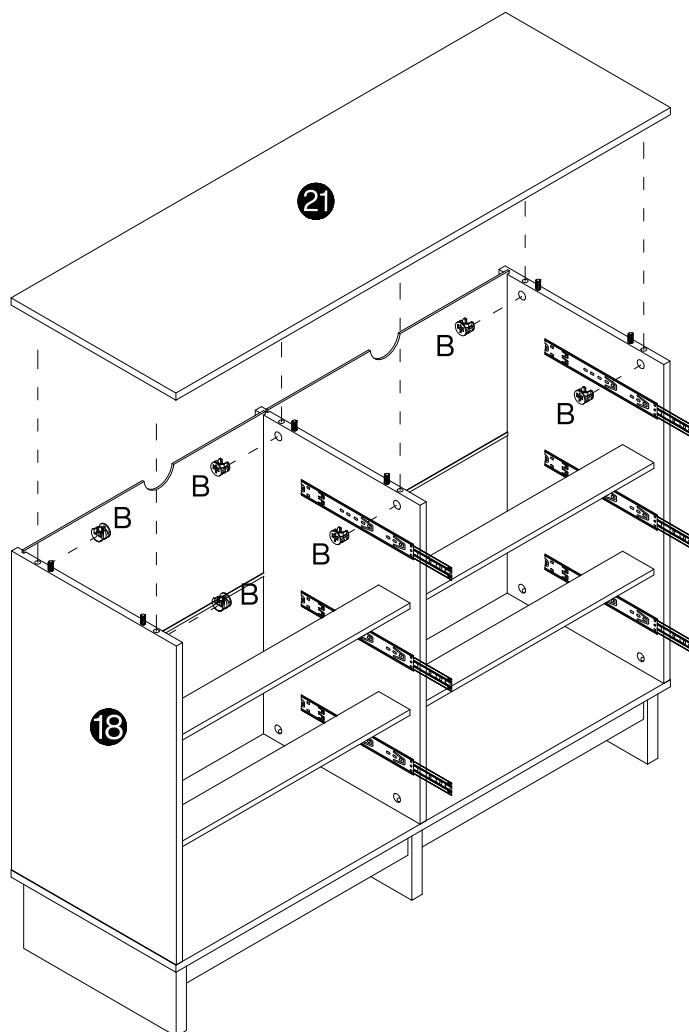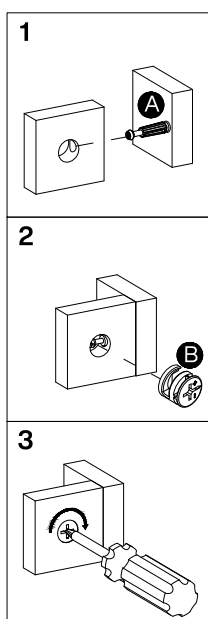


B




Ø15X10 mm

6 pcs


27

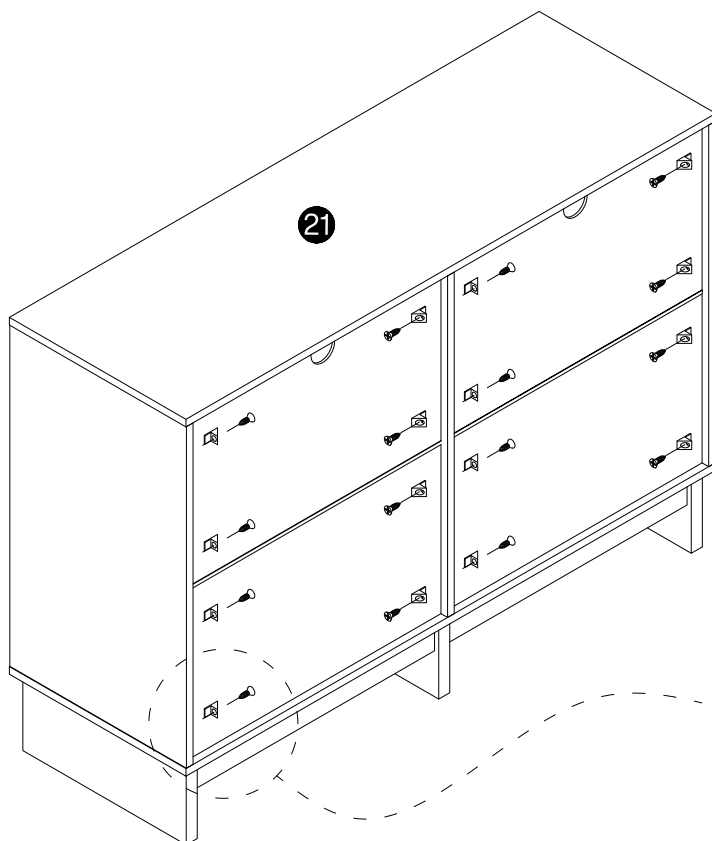

G	E
16 pcs	16 pcs




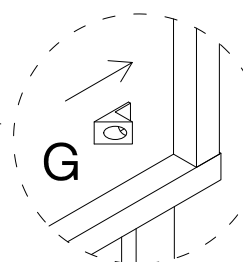


Step 1

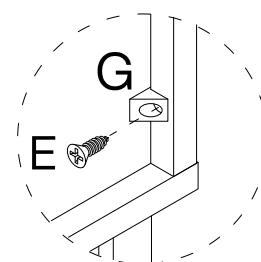


Step 2

28

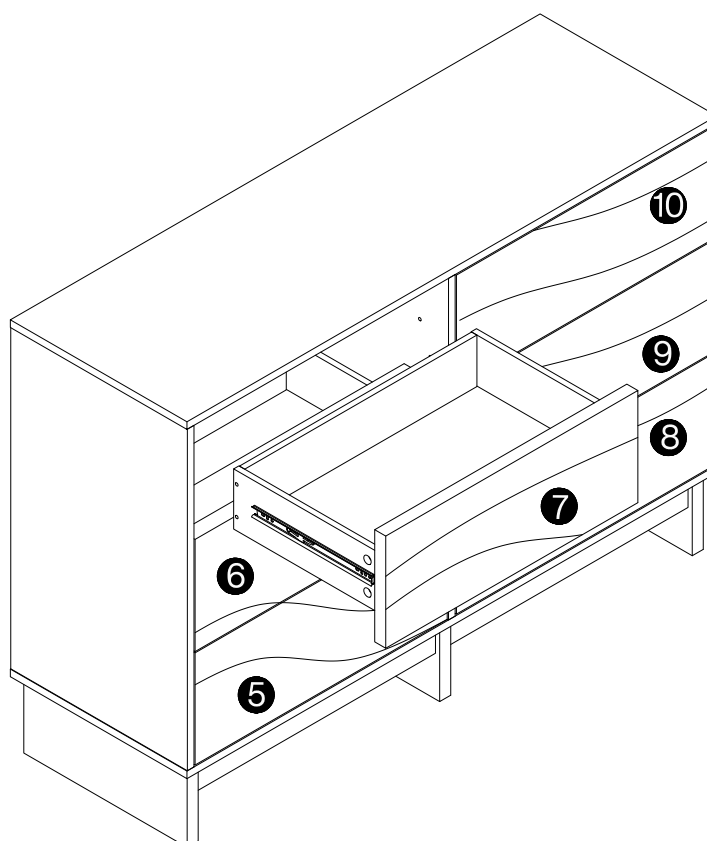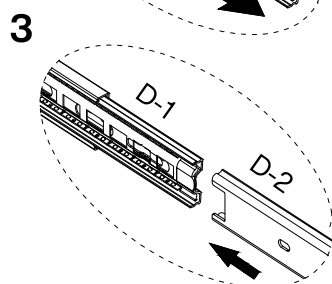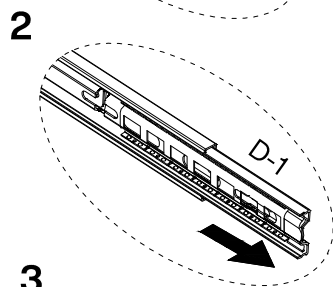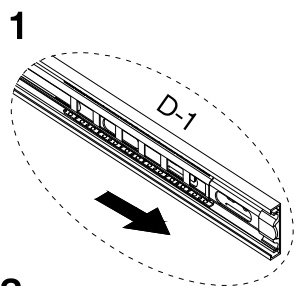


Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

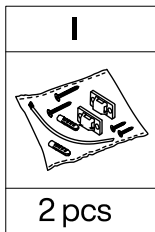


Wall

Step1



Step2

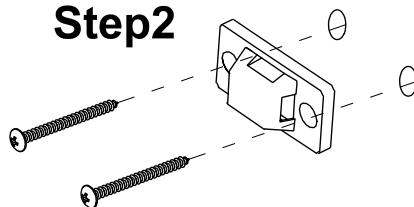

Step3

