

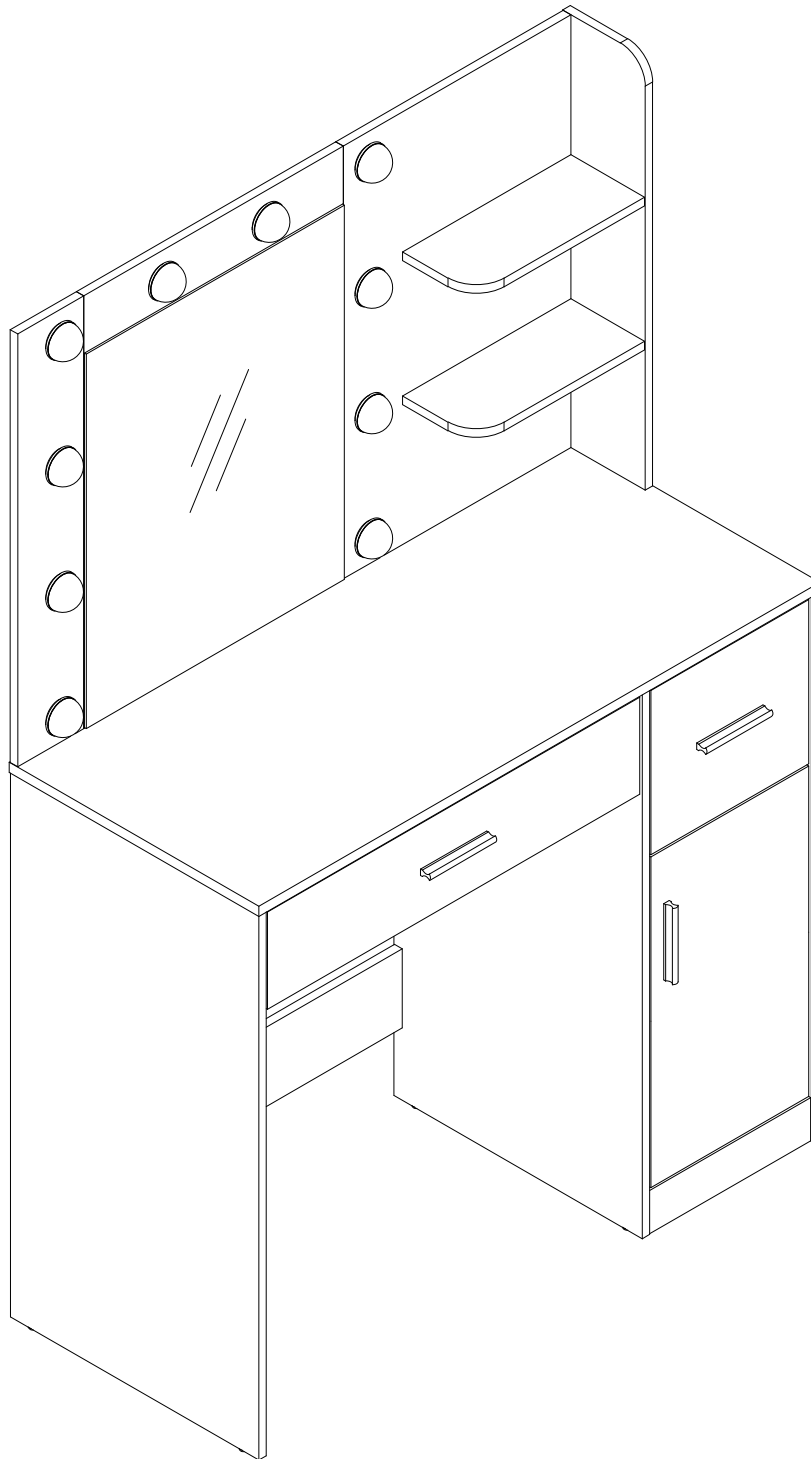



ASSEMBLY INSTRUCTIONS

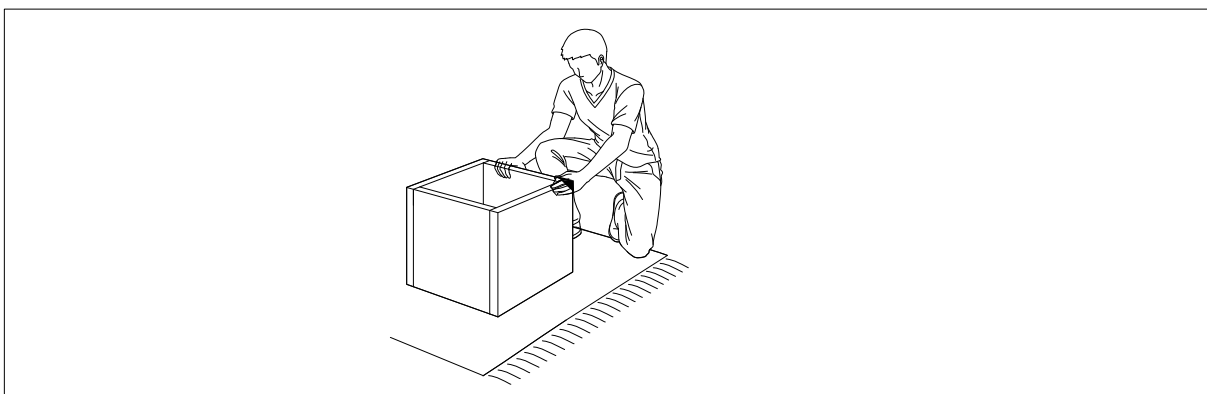

WARNING!

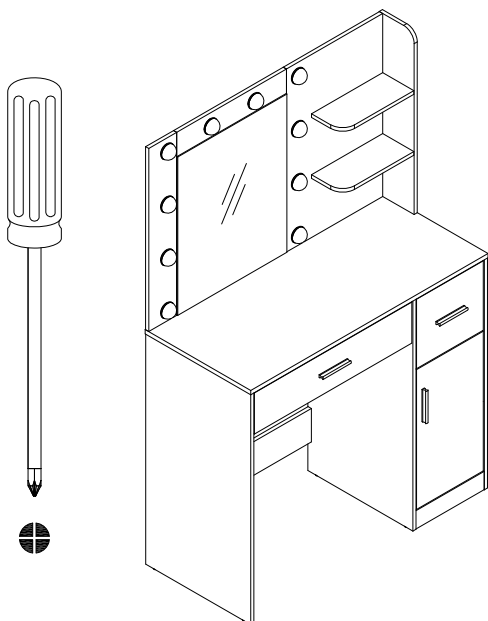


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.























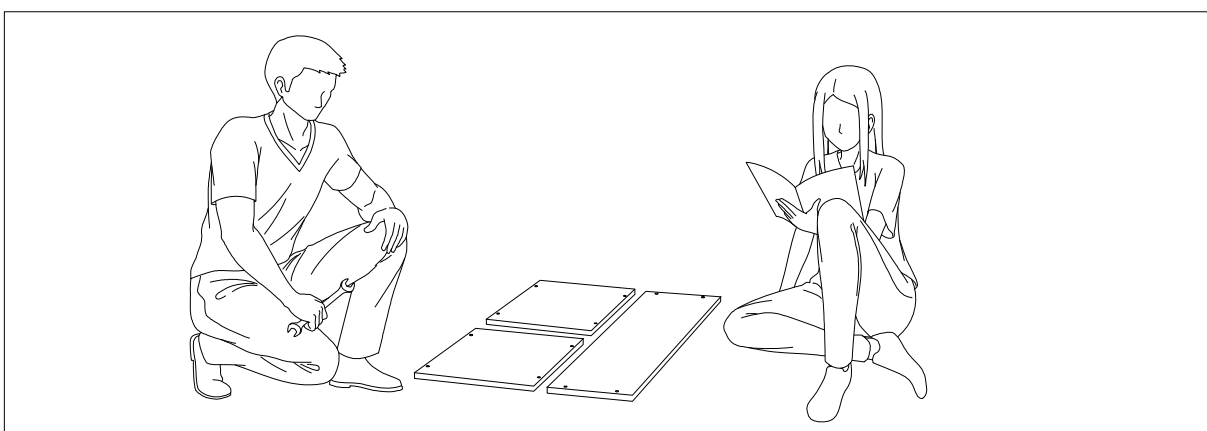


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.















PACKAGE CONTENT

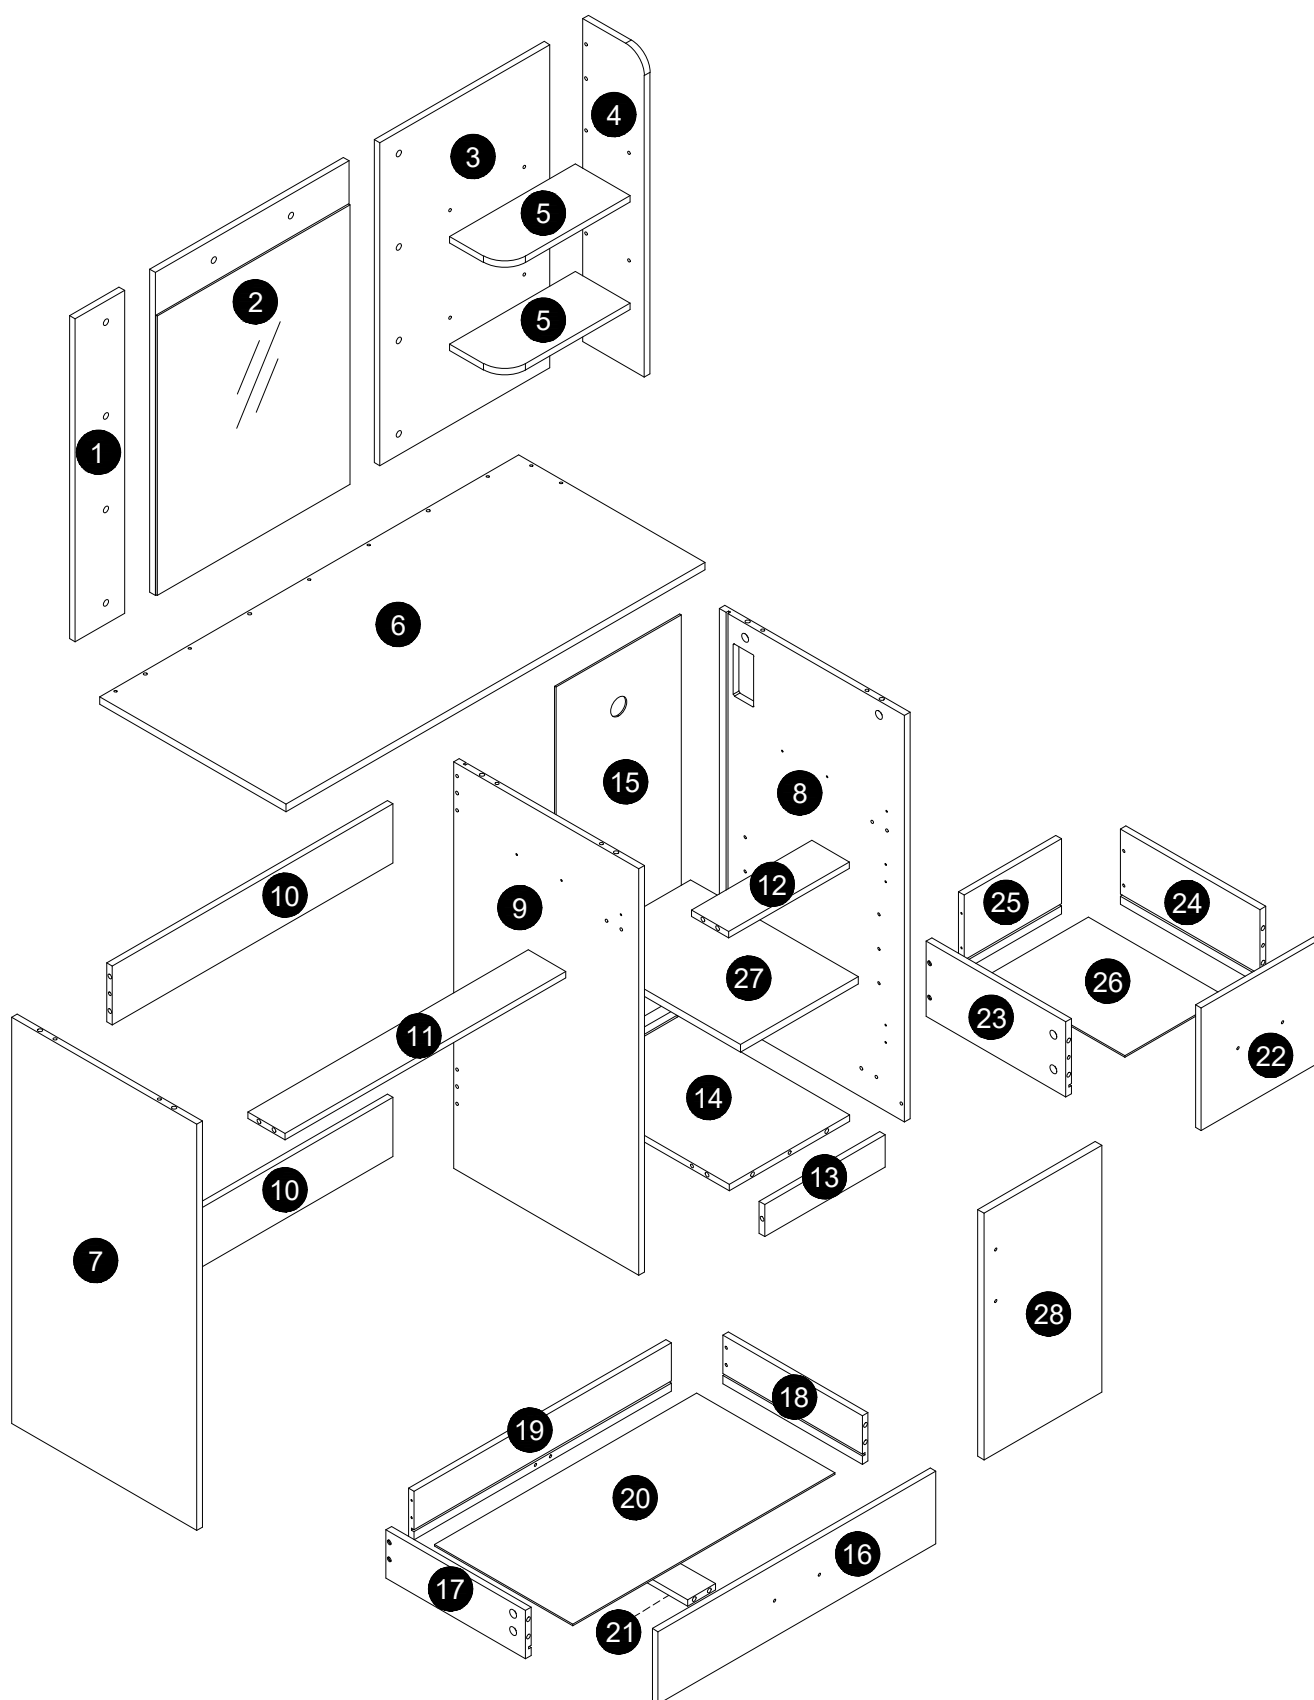

BOARD IDENTIFICATION

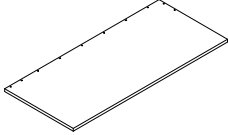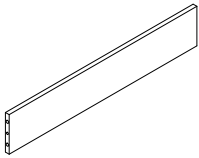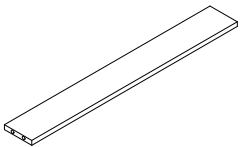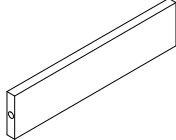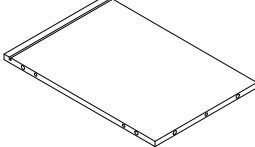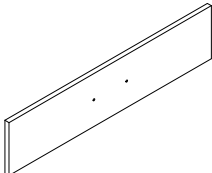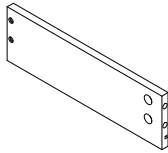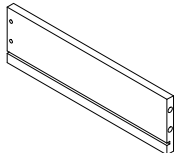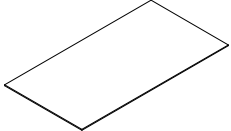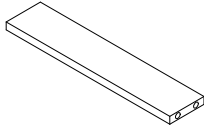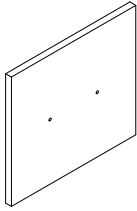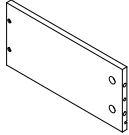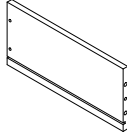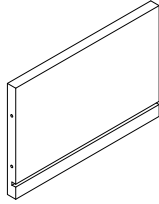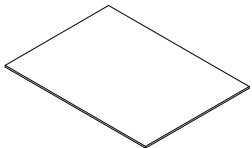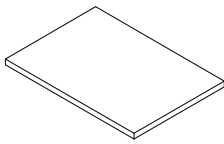 1 1PC	 2 1PC	 3 1PC	 4 1PC	 5 2PCS
 6 1PC	 7 1PC	 8 1PC	 9 1PC	 10 2PCS
 11 1PC	 12 1PC	 13 1PC	 14 1PC	 15 1PC
 16 1PC	 17 1PC	 18 1PC	 19 1PC	 20 1PC
 21 1PC	 22 1PC	 23 1PC	 24 1PC	 25 1PC
 26 1PC	 27 1PC	 28 1PC		





HARDWARE PART LIST

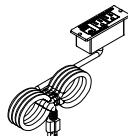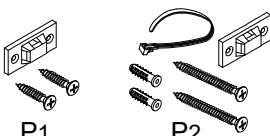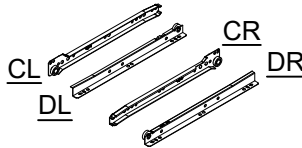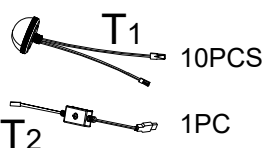A X50+2  Ø6x34mm	B X50+2  Ø15x9.5mm	C X23+1  Ø6x30mm	D X2  Ø35mm
E X12  Ø8x12mm	F X36+1  Ø6.5x12mm	G X17  Ø8*35mm	H X4  Ø3x15mm
I X4 	J X6 	K X4 	L X3 
M X4  Ø5/32"x16mm	N X2  Ø5/32"x18mm	O x1 	P X1SET  P1 P2
Q X6  Ø13x4mm	R X1 	S x2SET  CL DL CR DR L300mm	T X1SET  T1 10PCS T2 1PC
U X1 			




Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

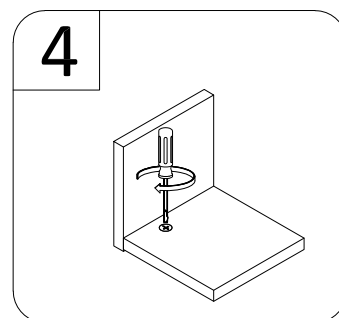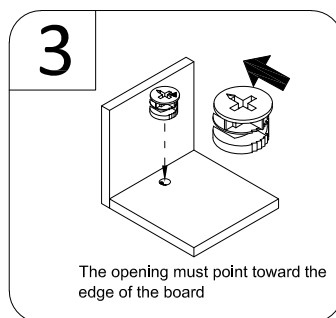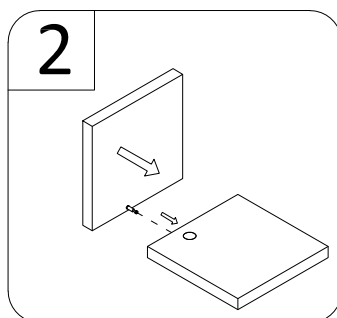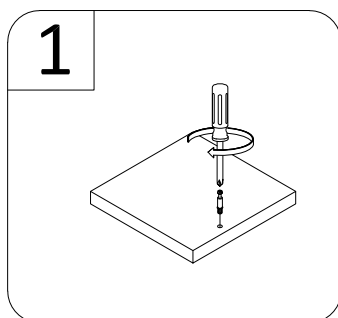


STEP 1

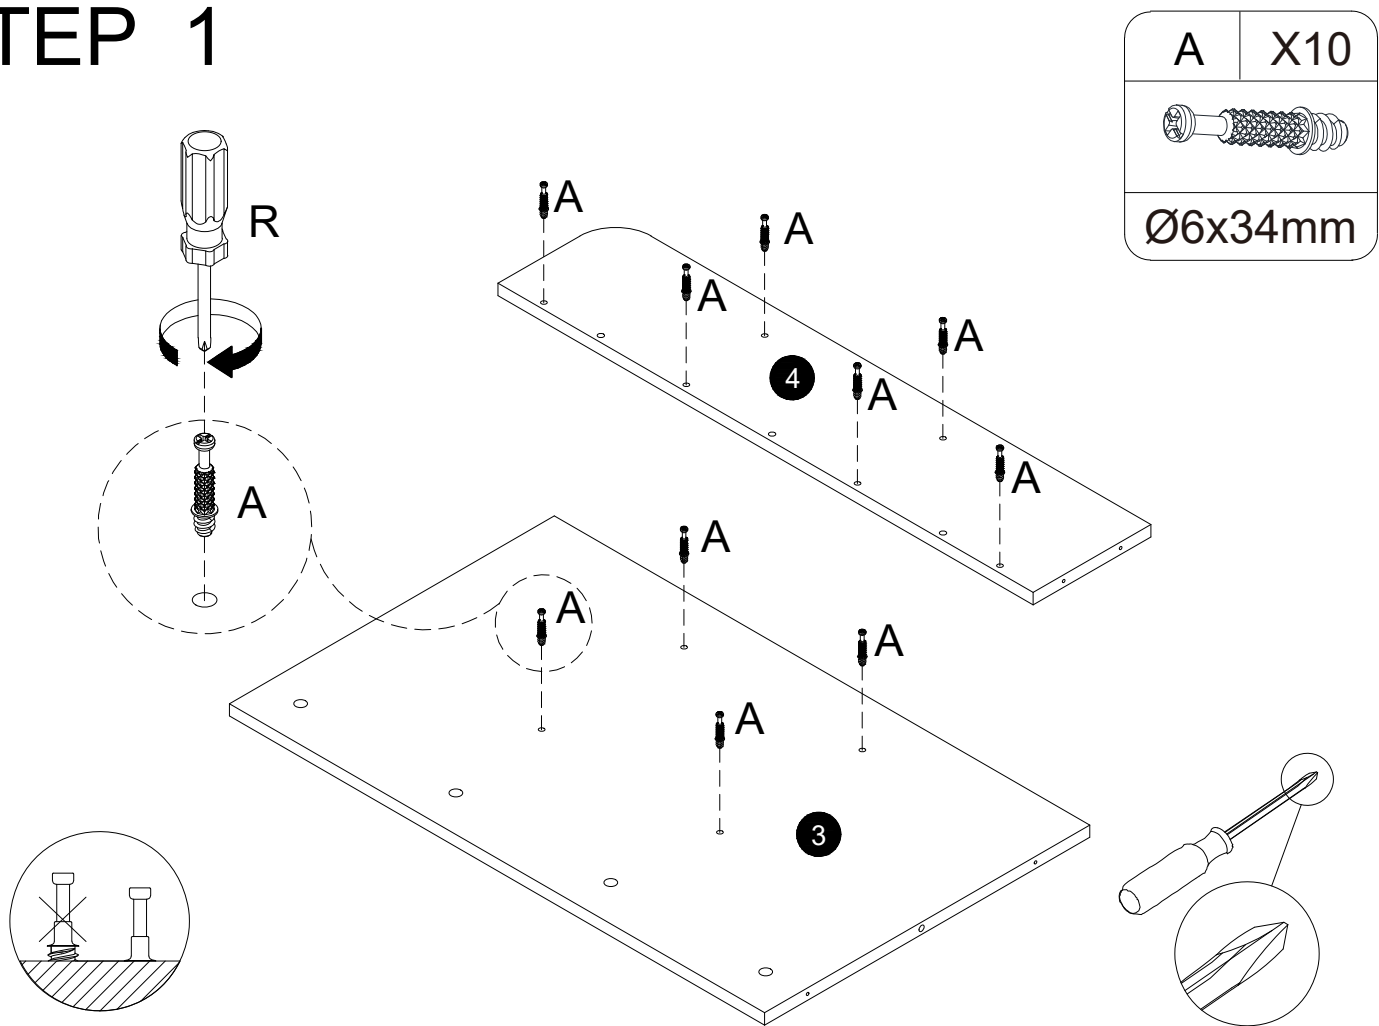


STEP 2

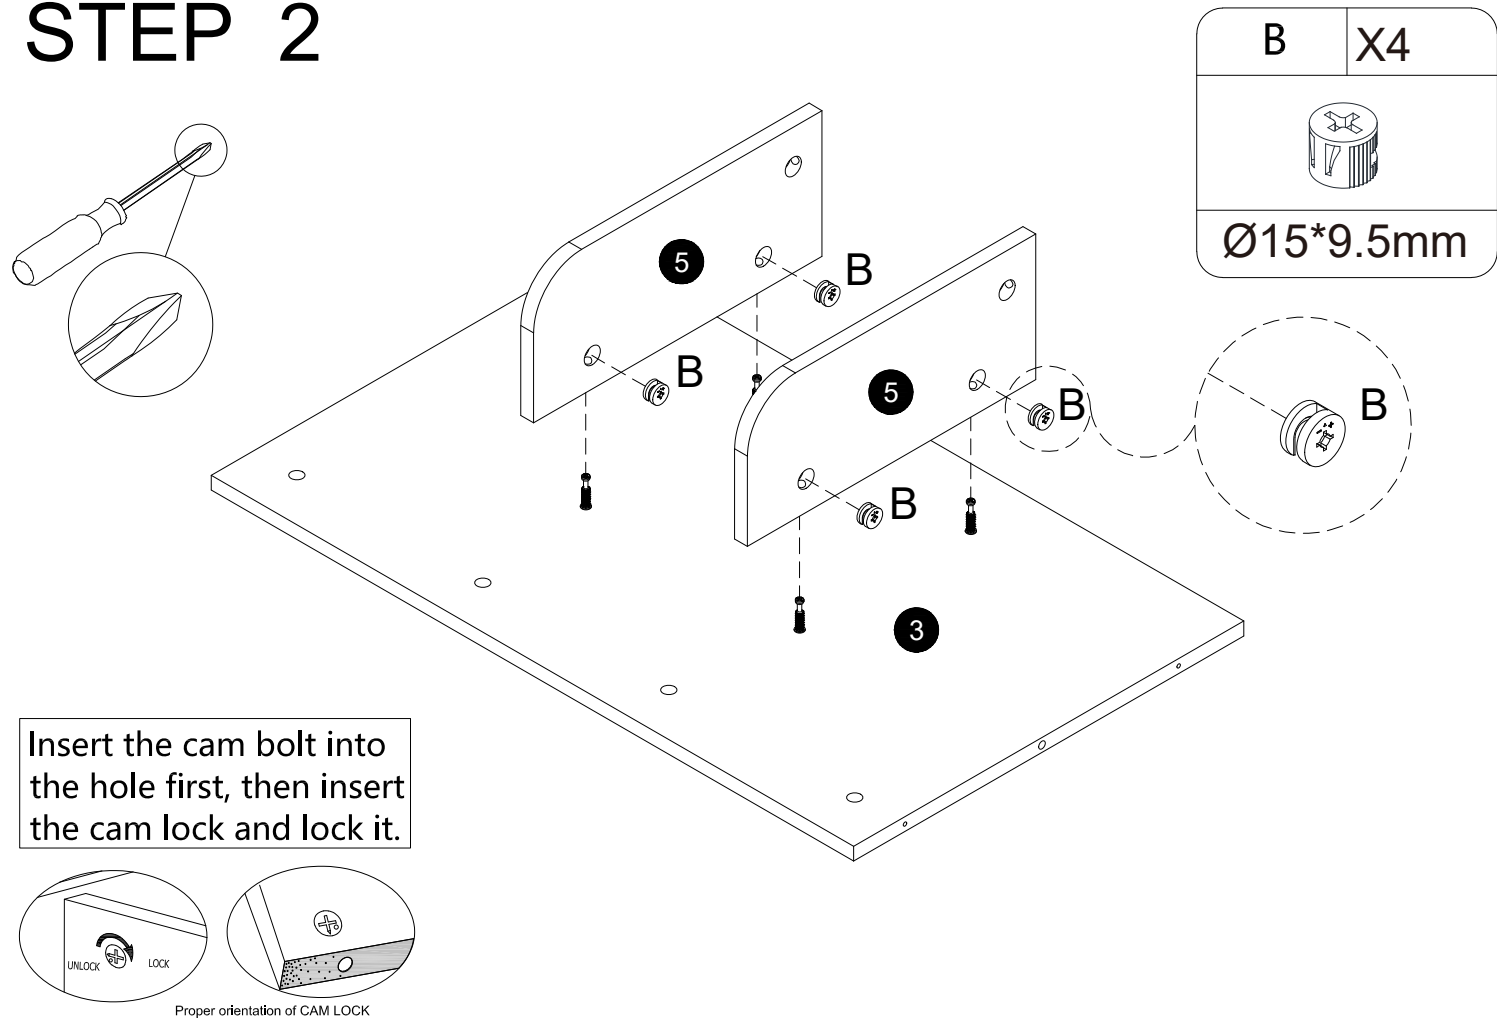


STEP 3

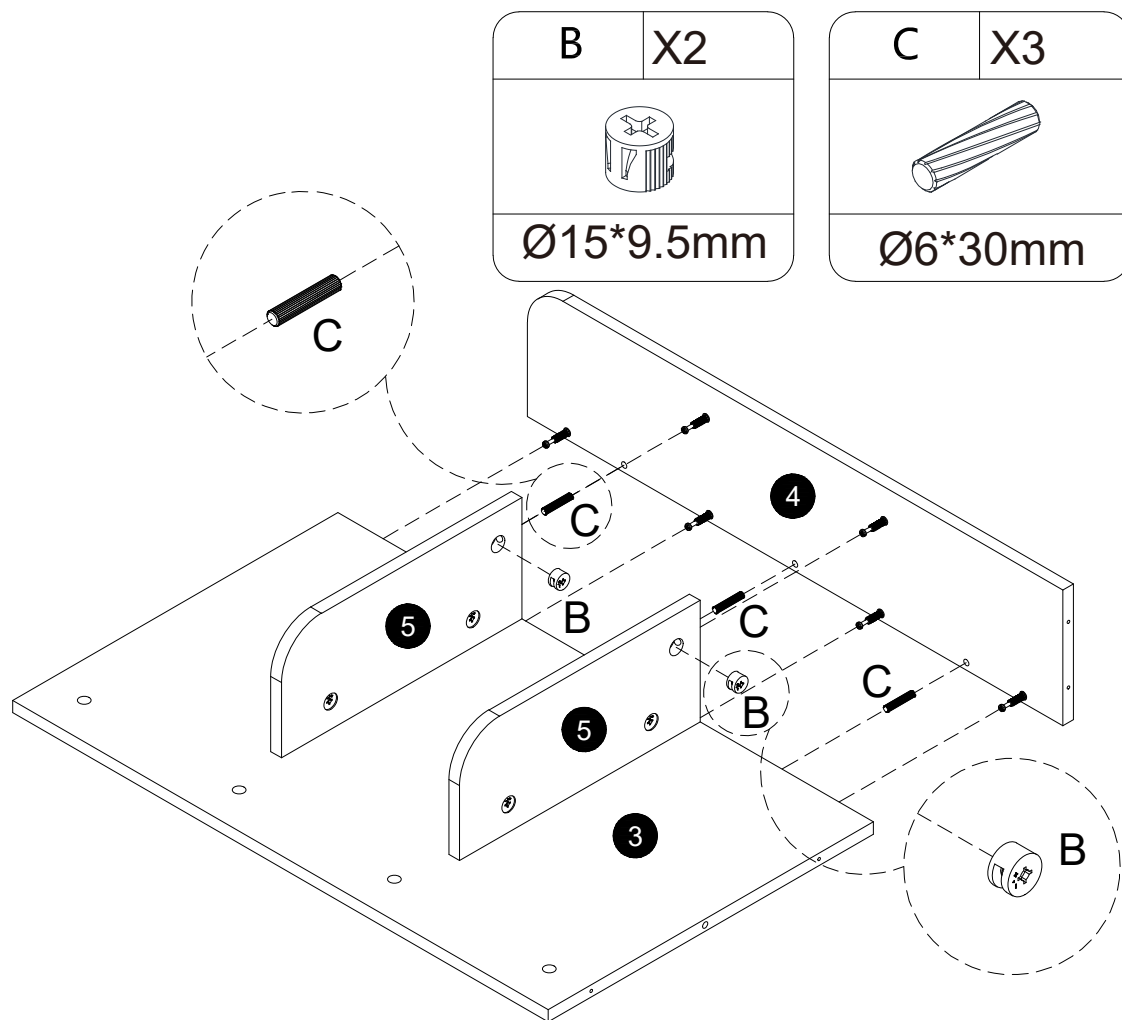


STEP 4

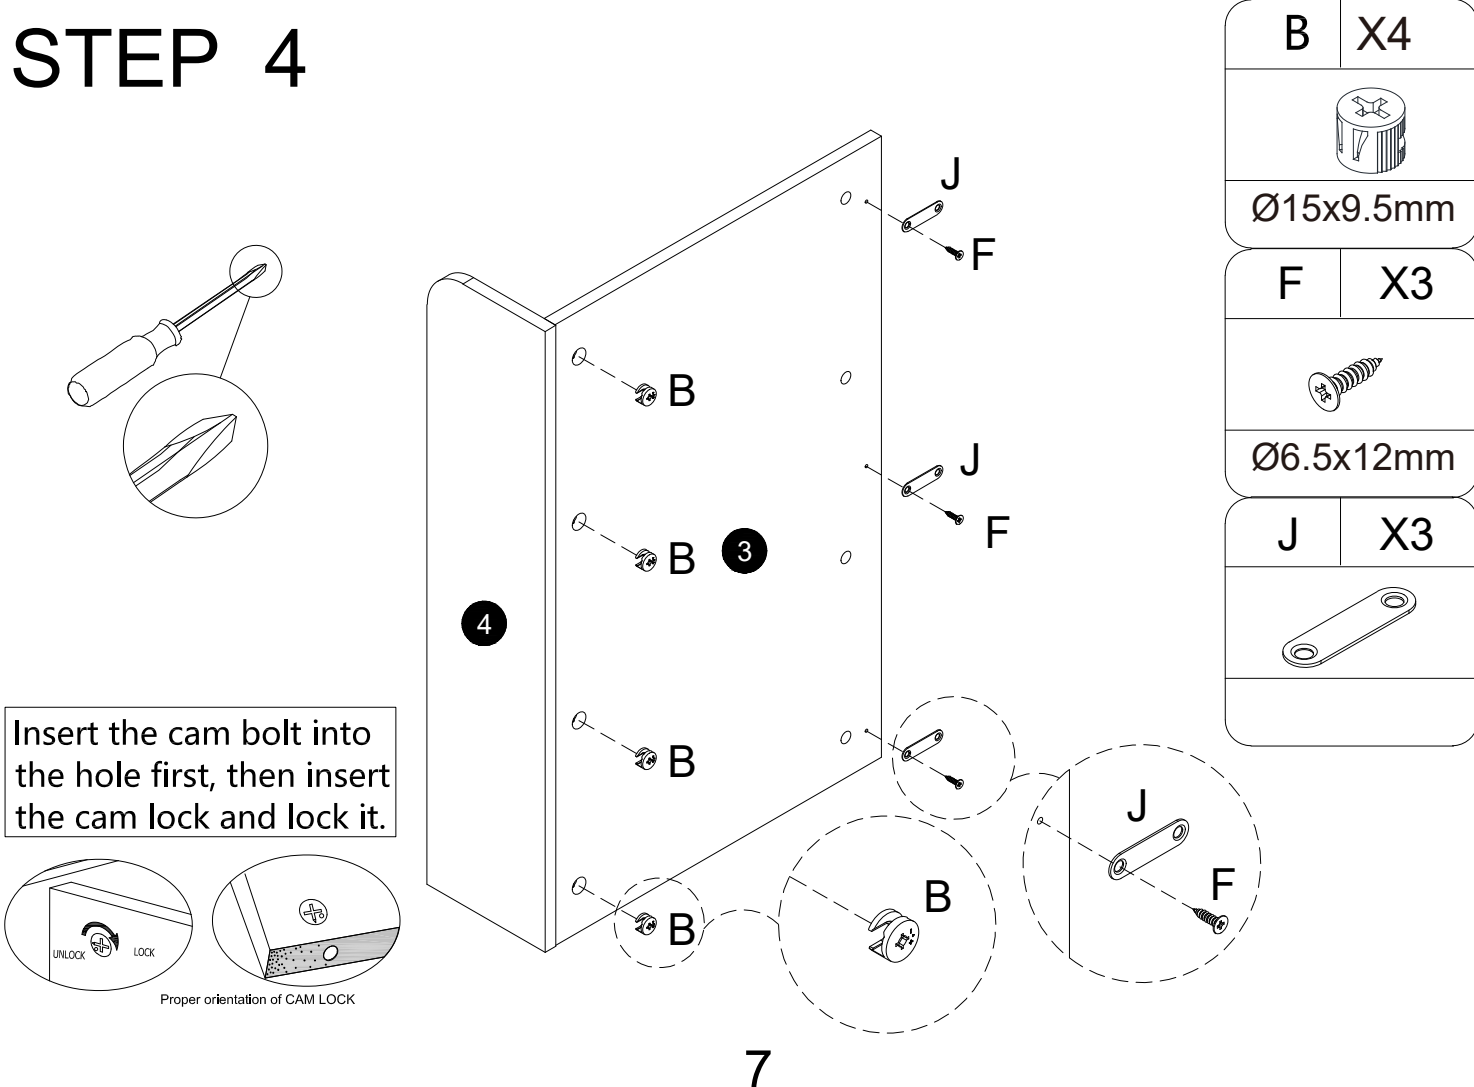


STEP 5


F	X3	J	X3
			
Ø6.5x12mm			

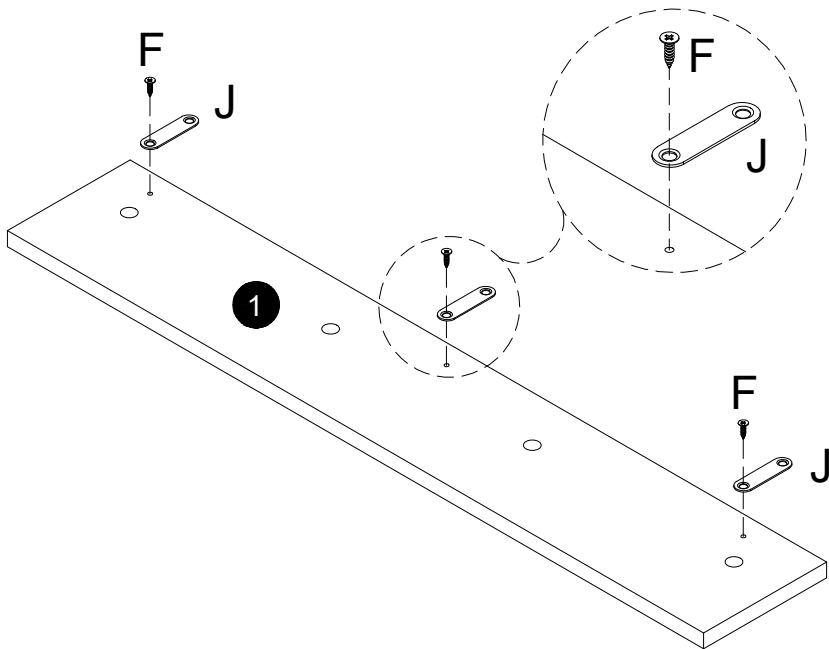


STEP 6

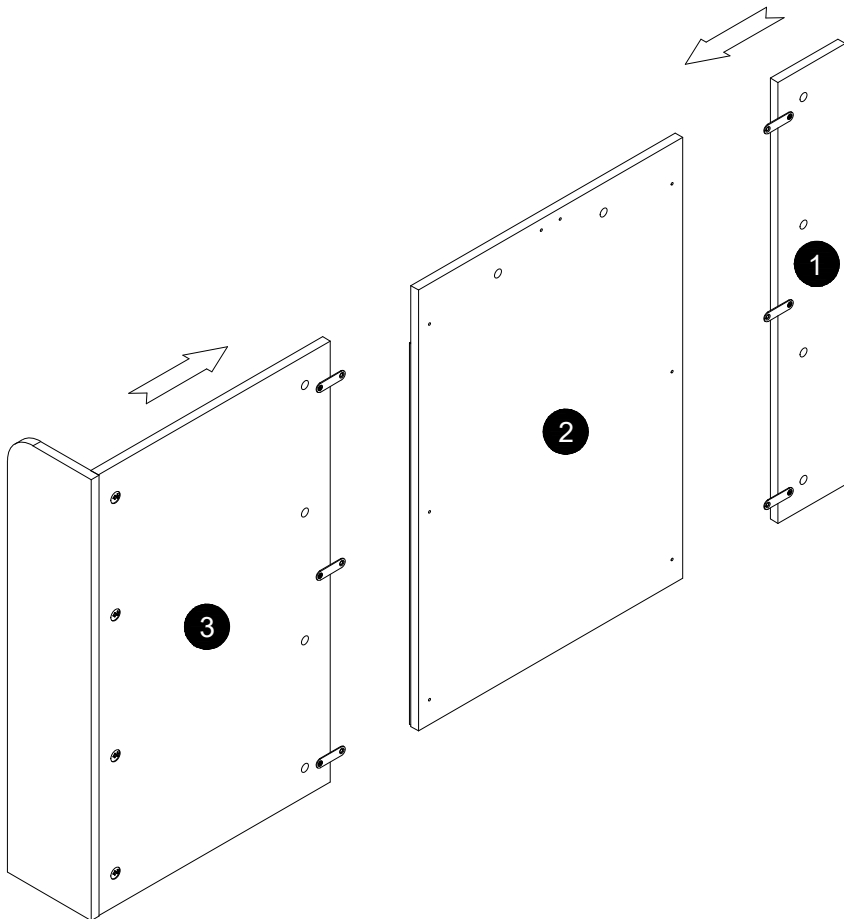


STEP 7

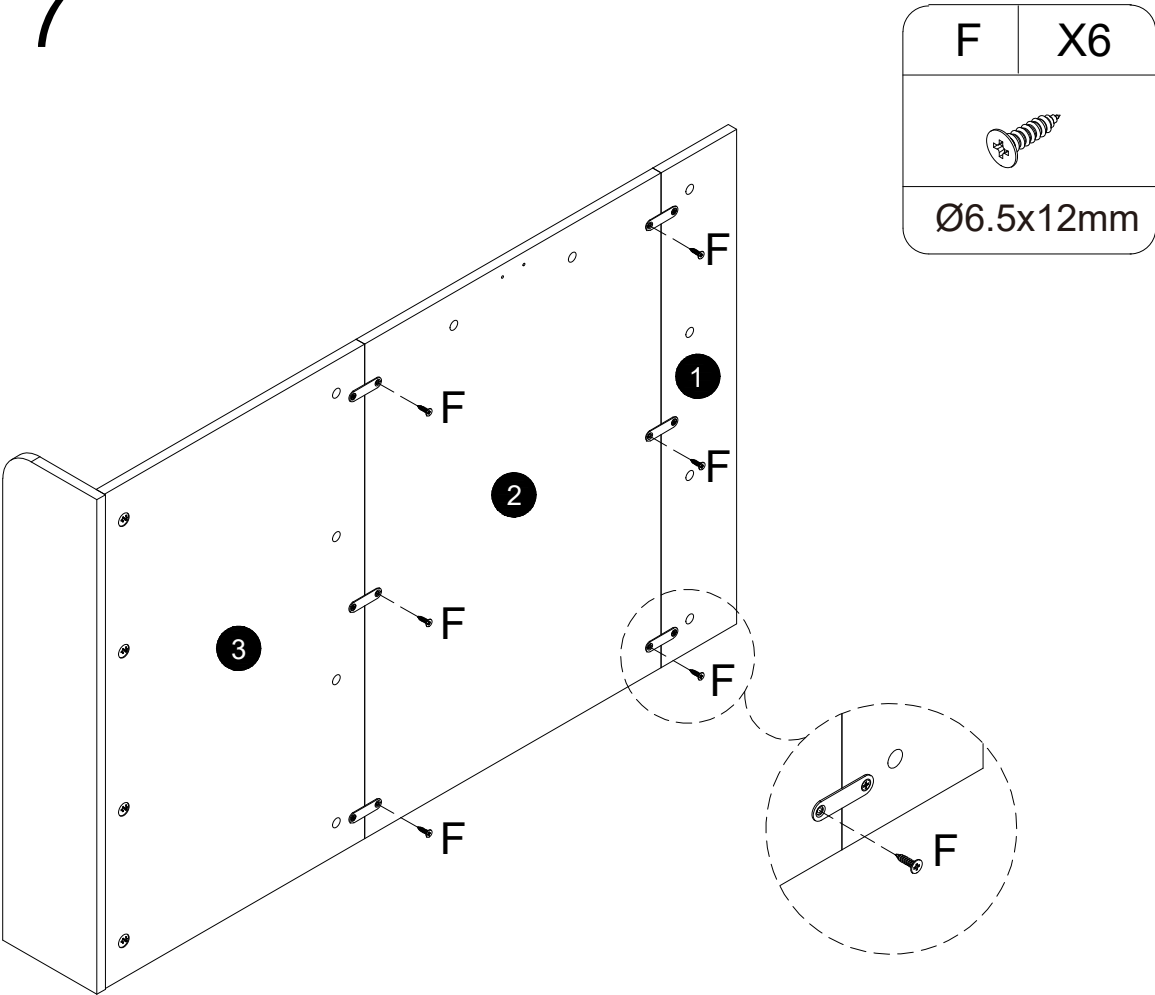


STEP 8

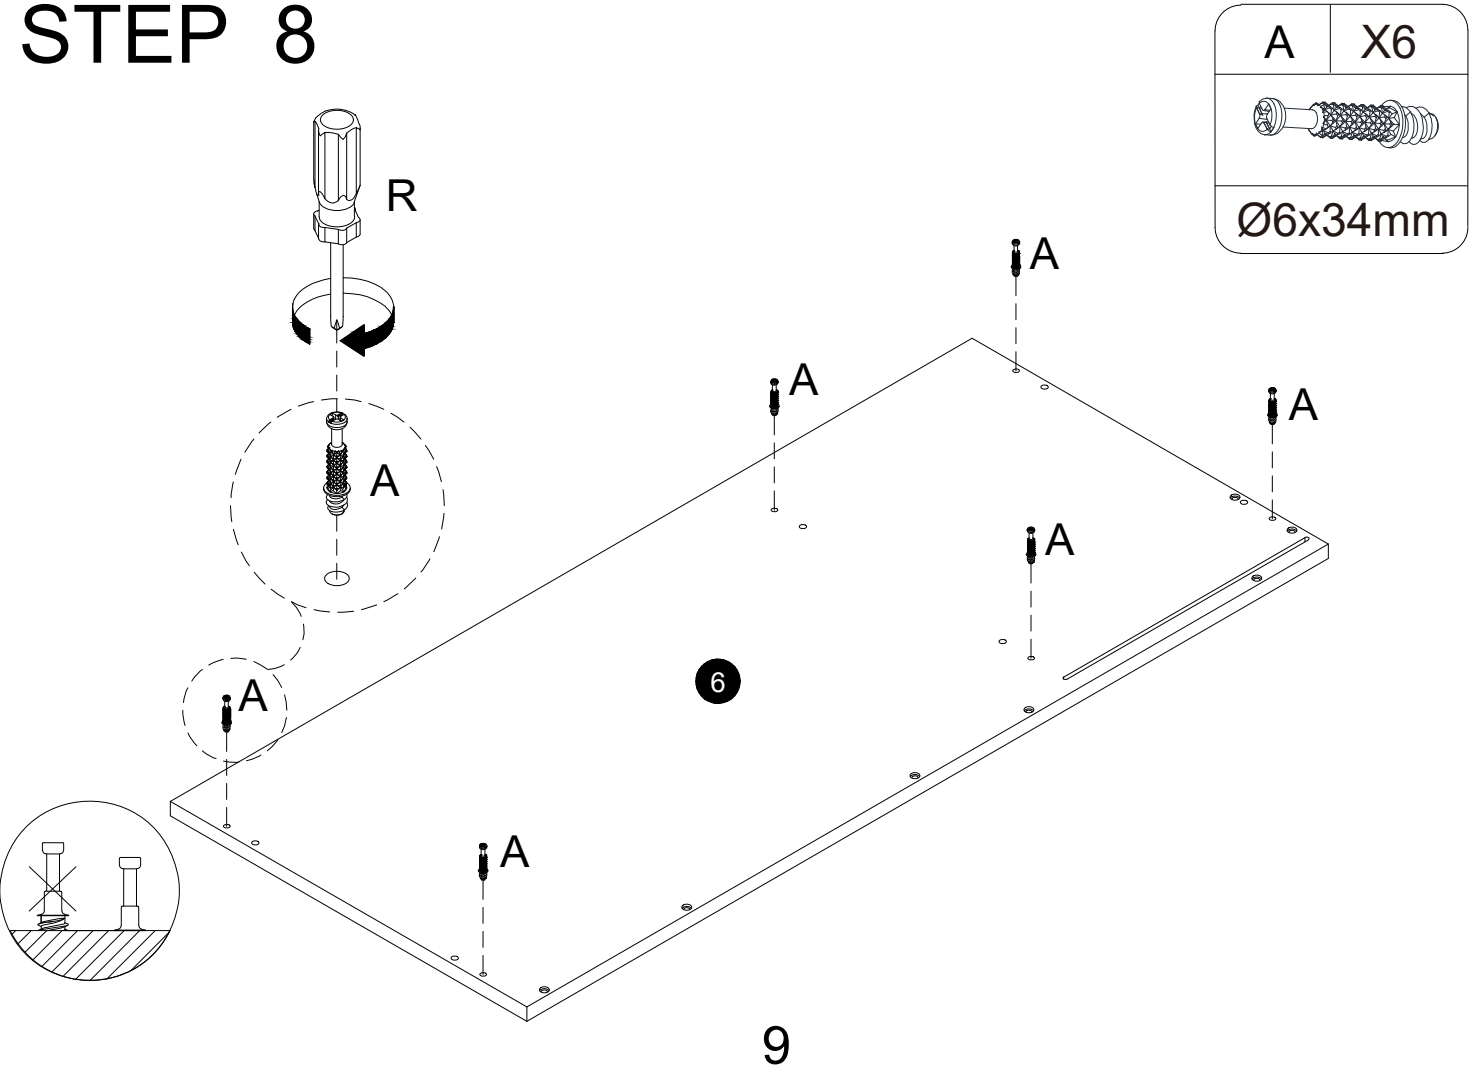

STEP 9

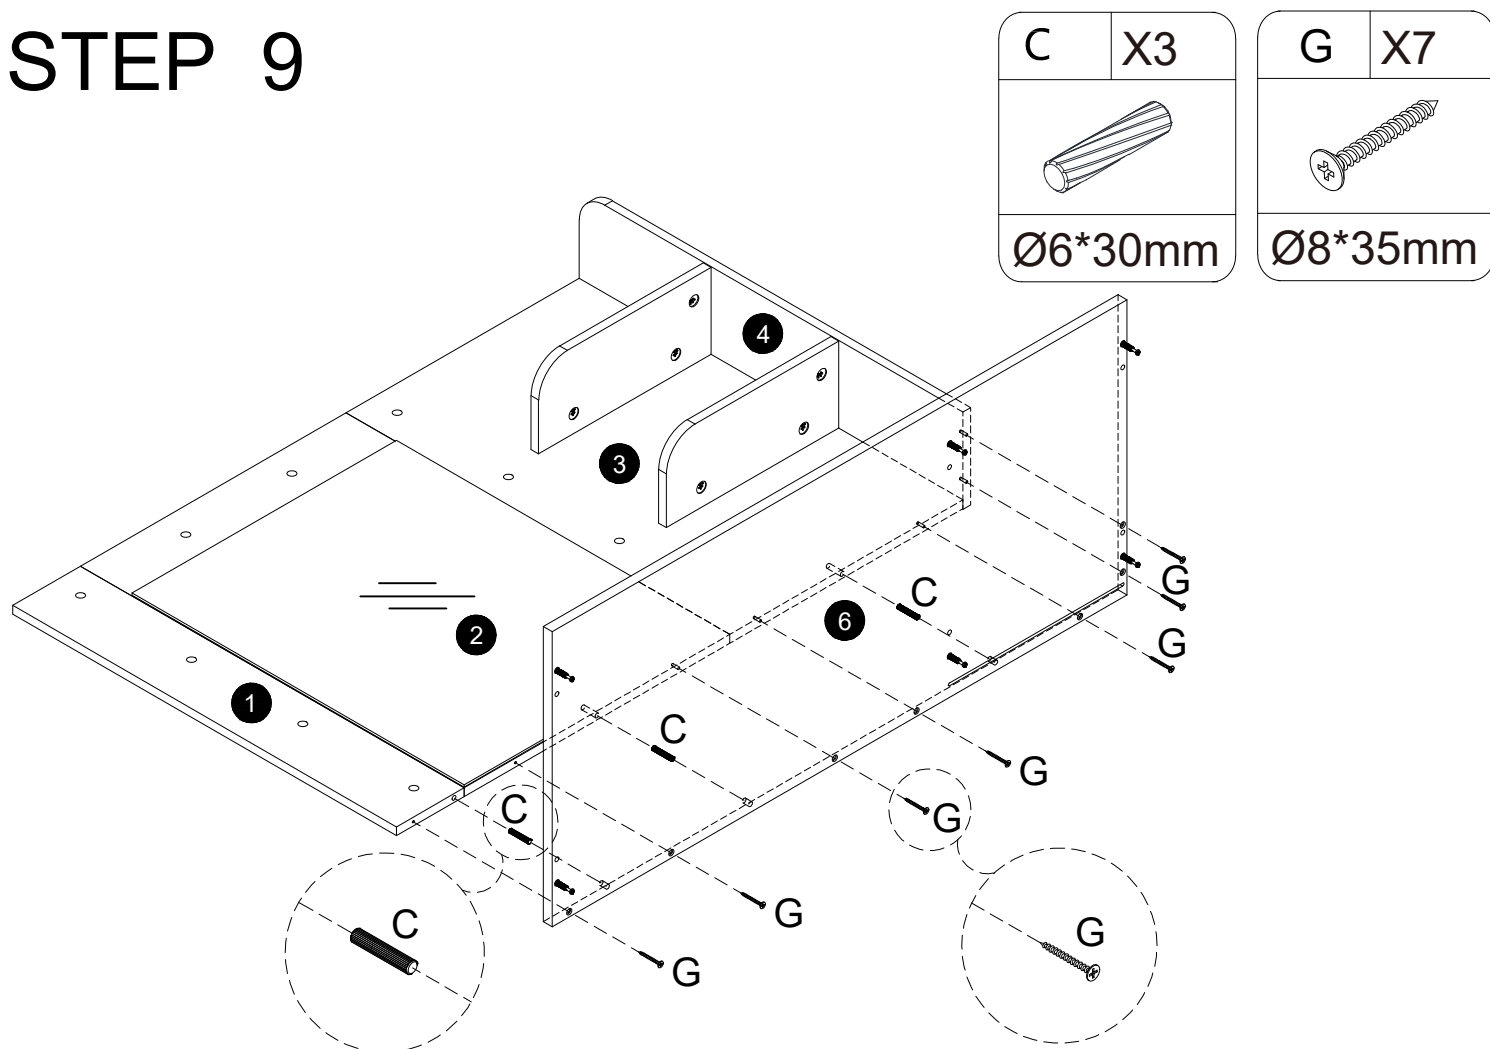


STEP 10

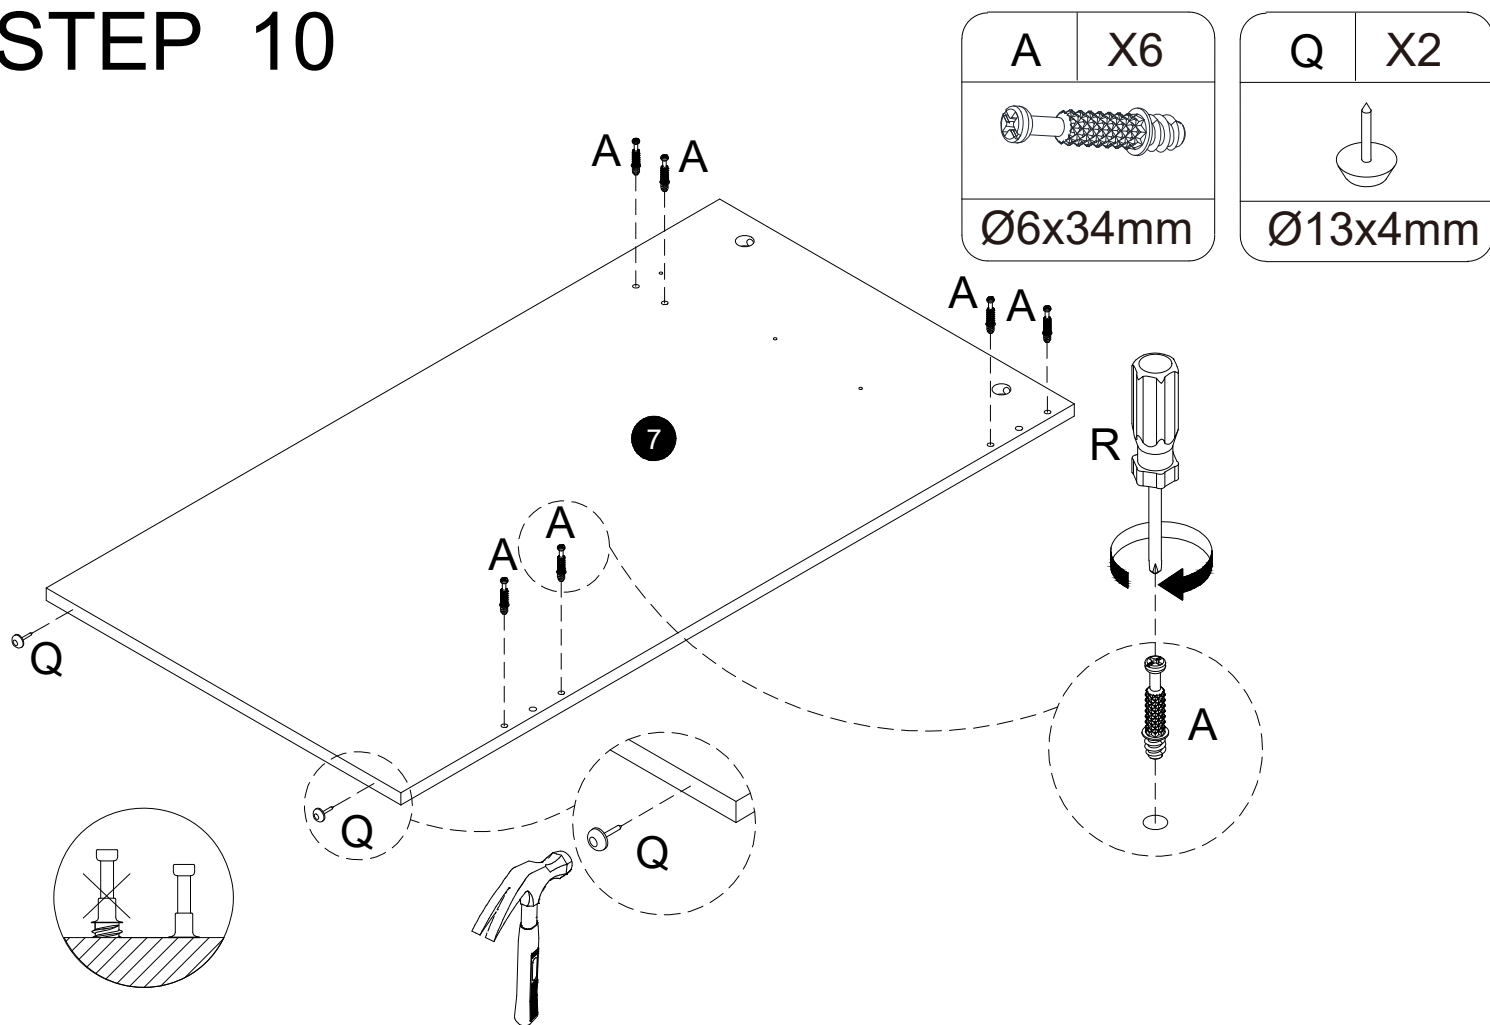


STEP 11

F	X3
	
Ø6.5x12mm	


S	X1
	
L=300mm	

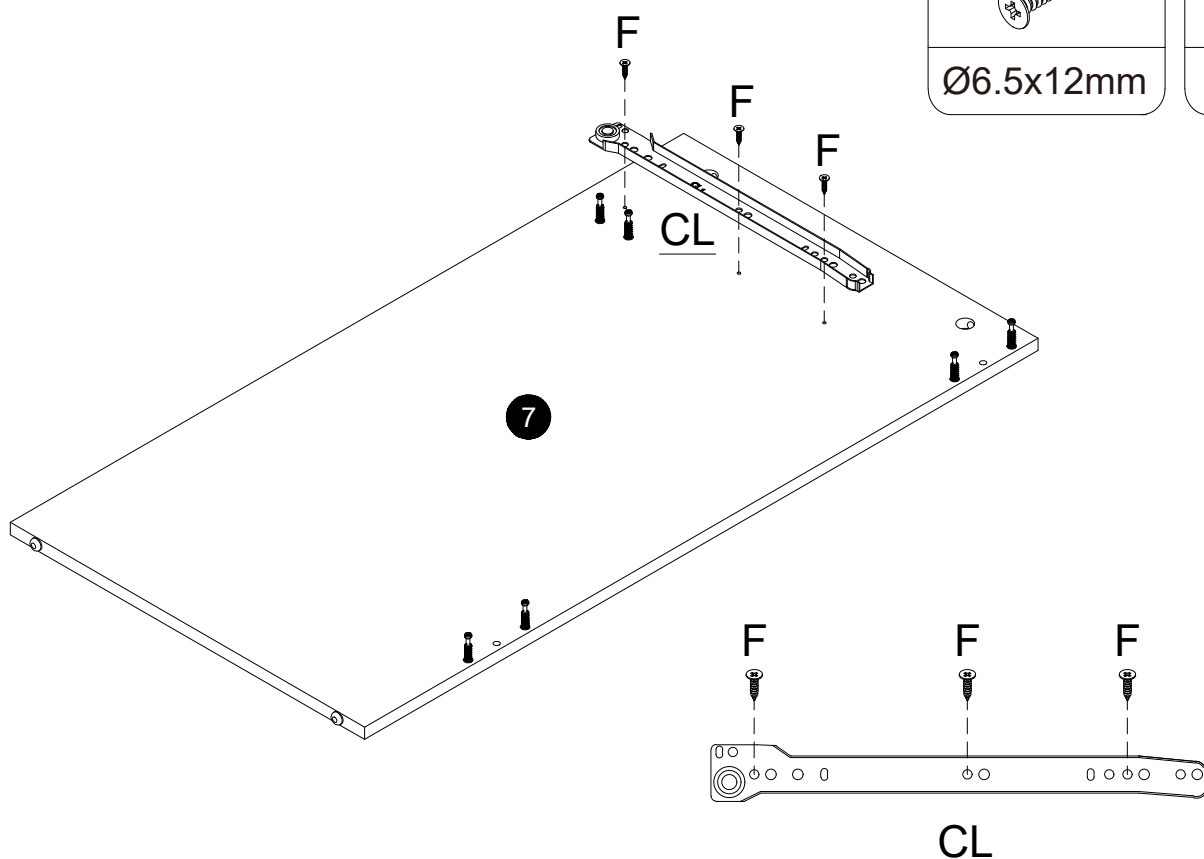


STEP 12

A	X5
	
Ø6x34mm	


Q	X2
	
Ø13x4mm	

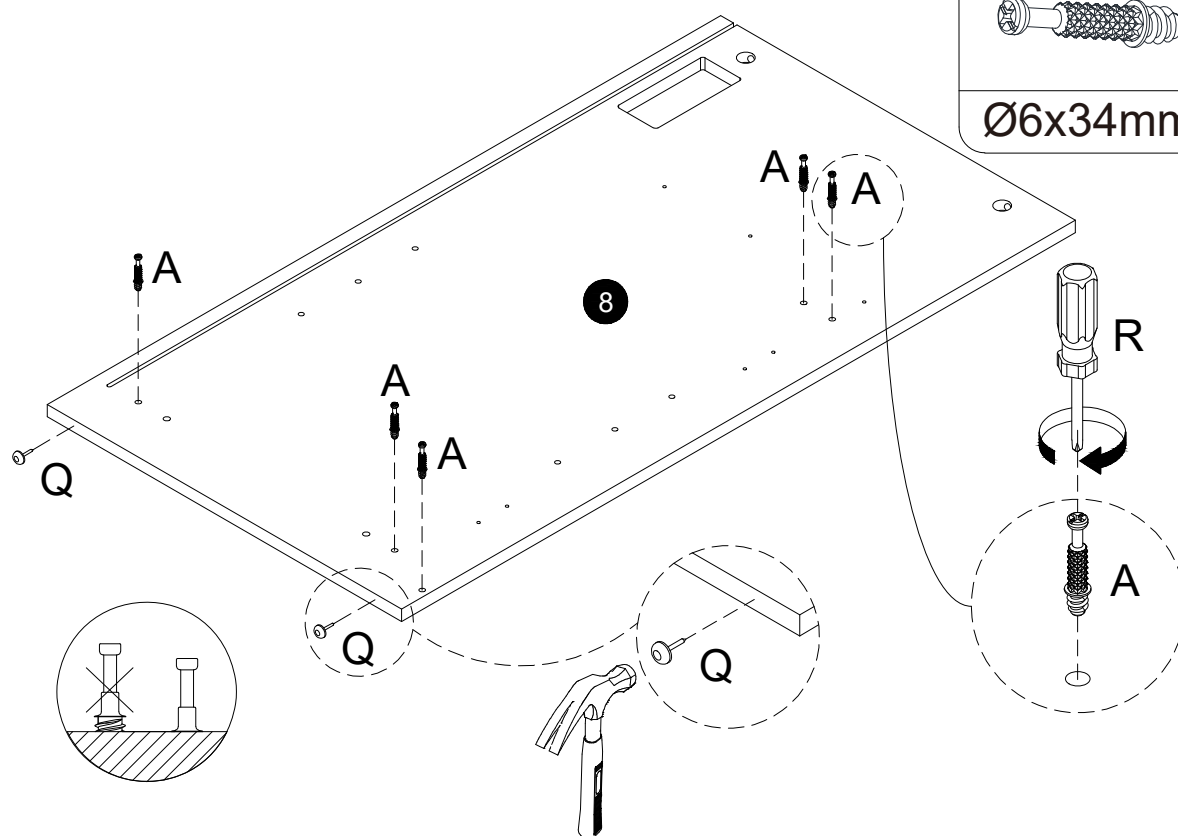

STEP 13


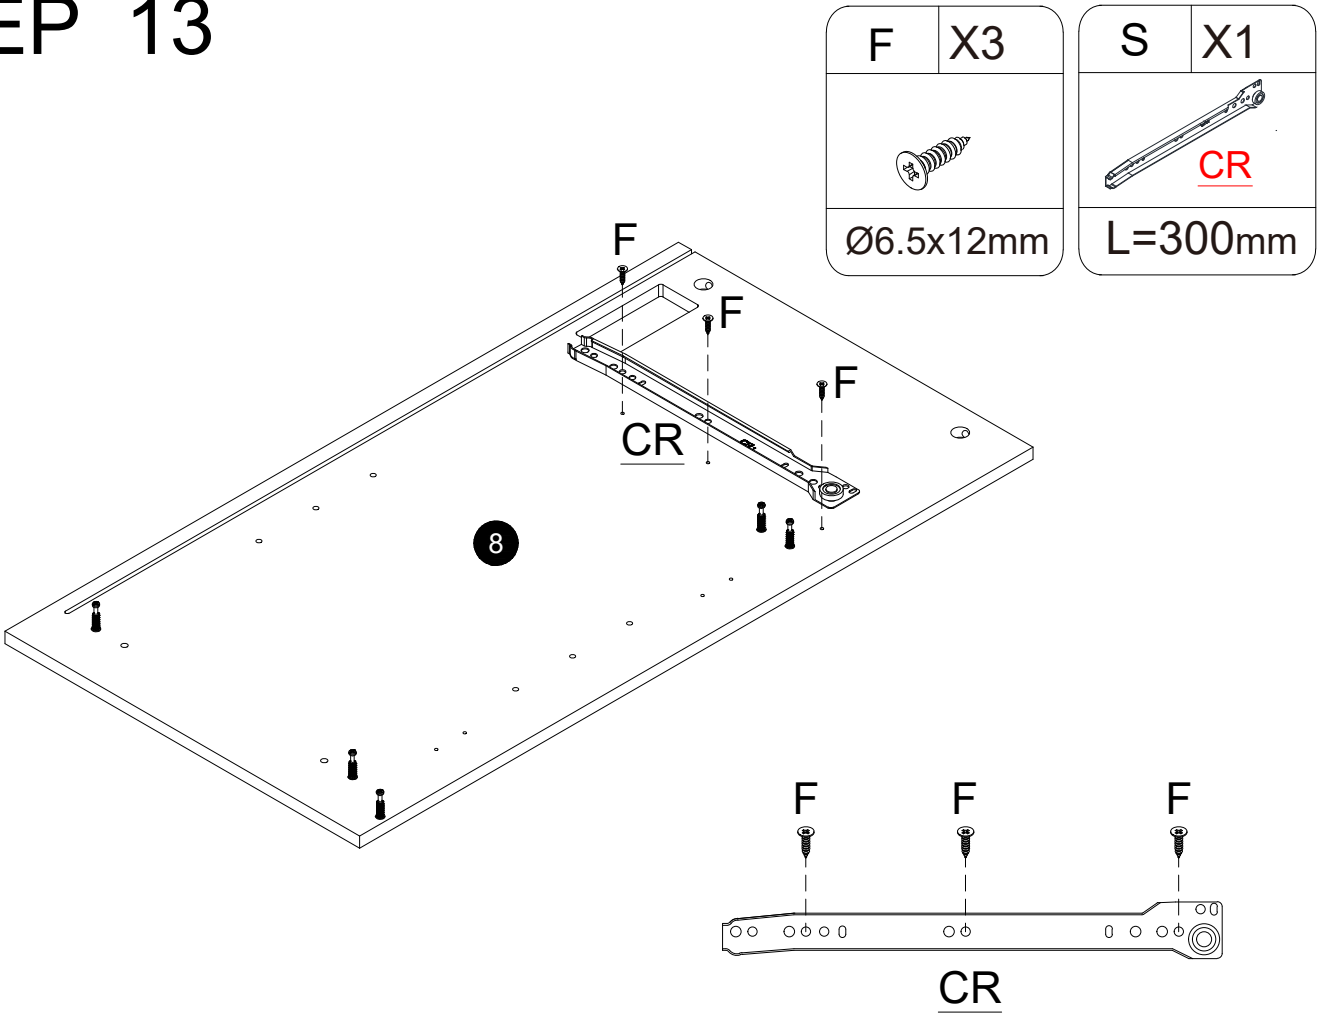


STEP 14

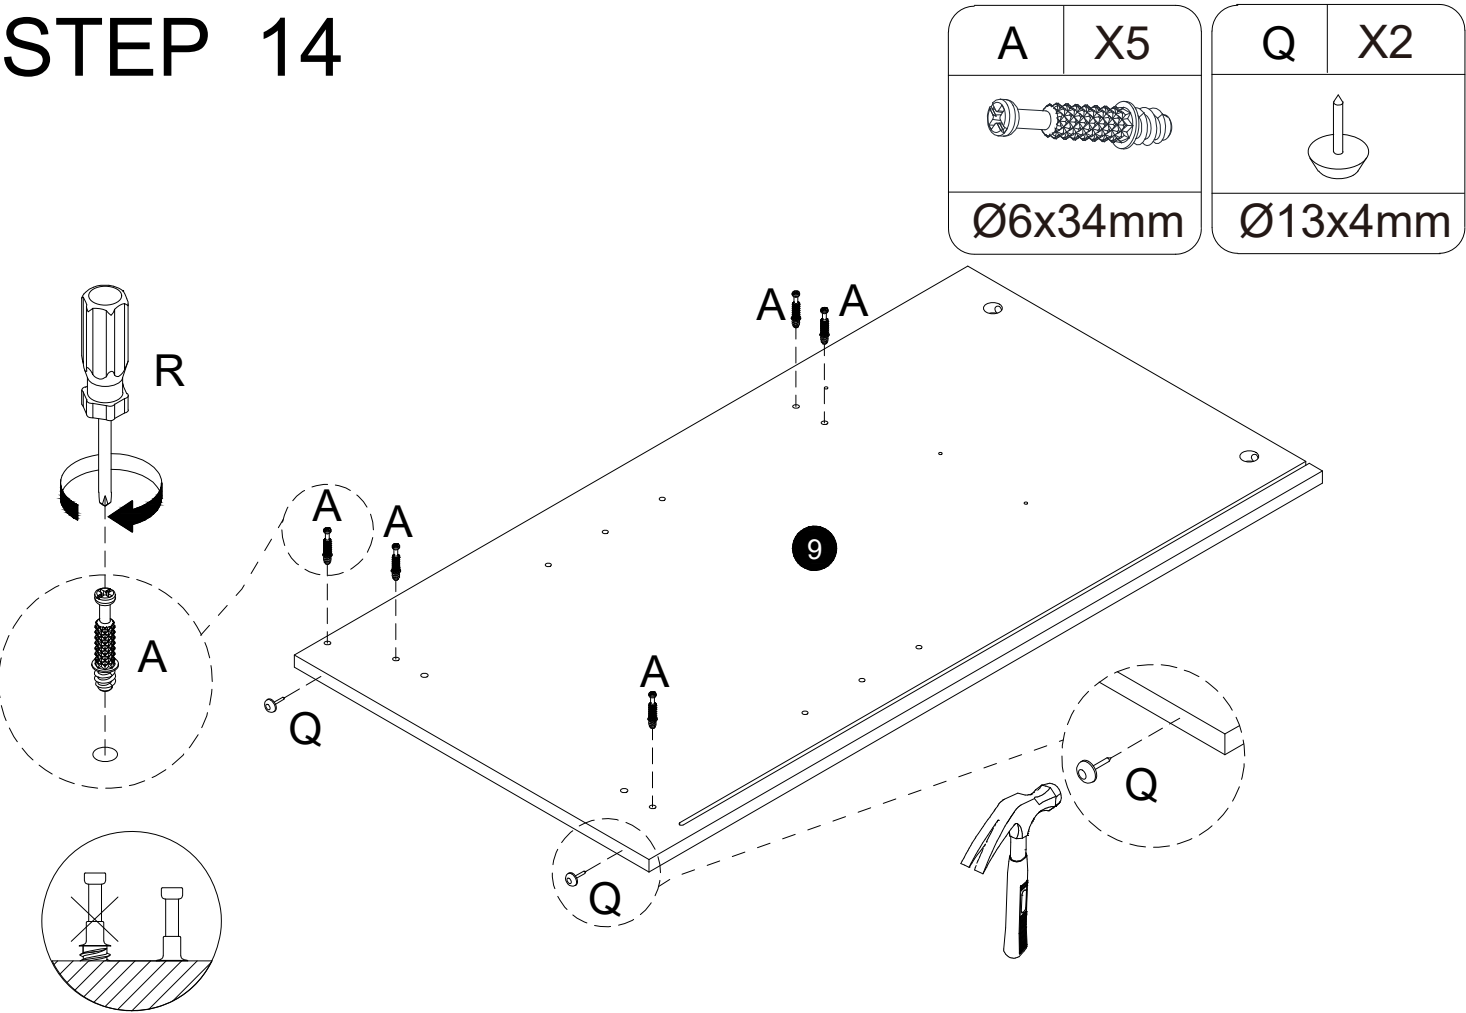



STEP 15

F	X3	S	X1
			
Ø6.5x12mm		L=300mm	

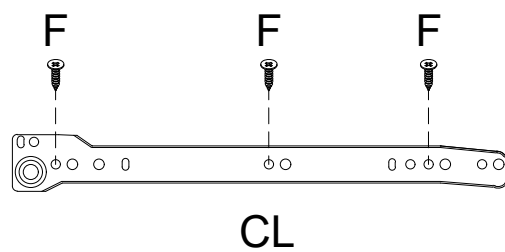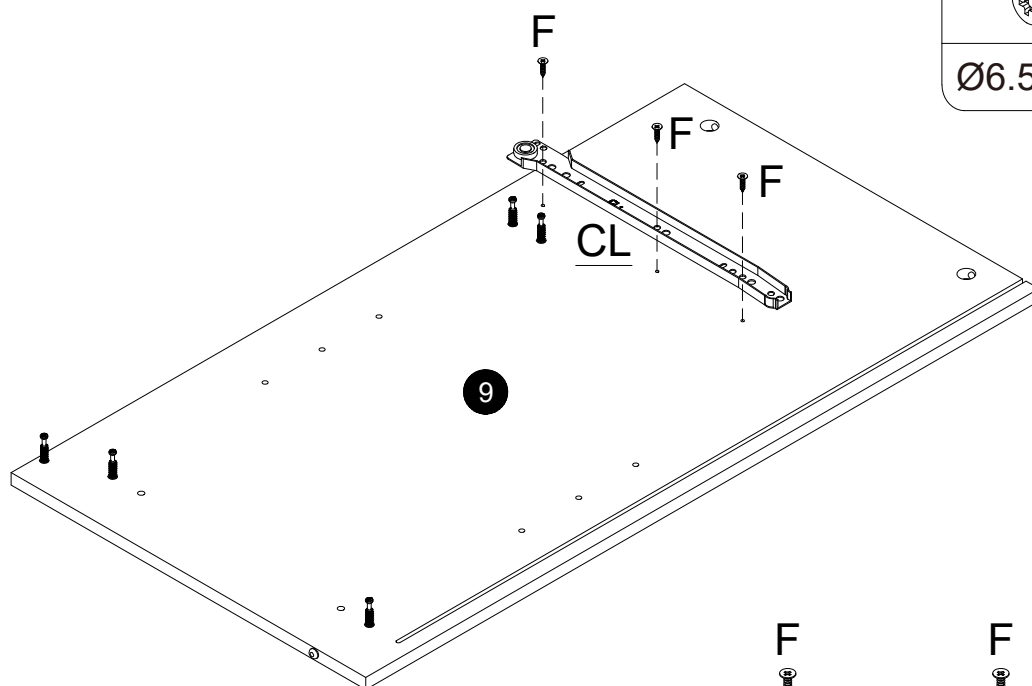



STEP 16

A	X6
	
Ø6x34mm	

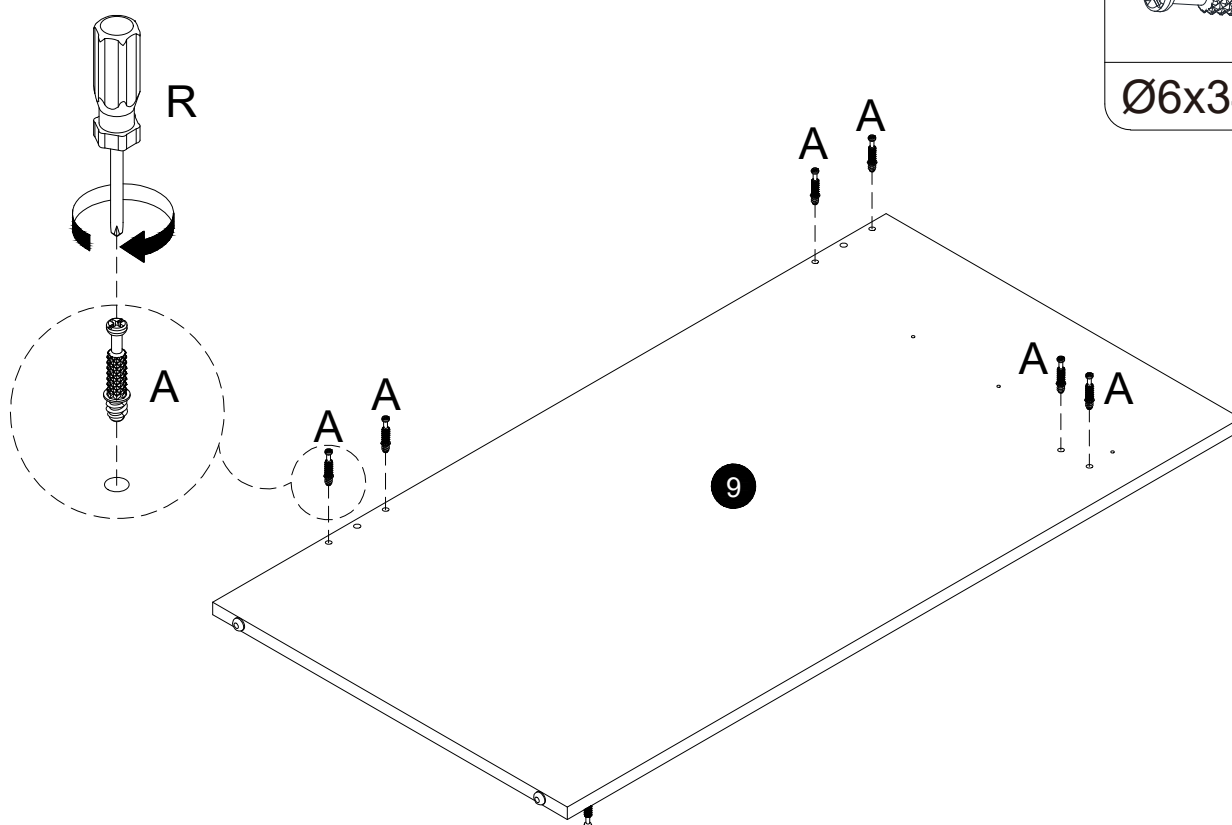



STEP 17

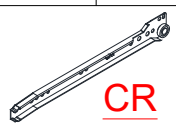F	X3	S	X1
			
Ø6.5x12mm		L=300mm	


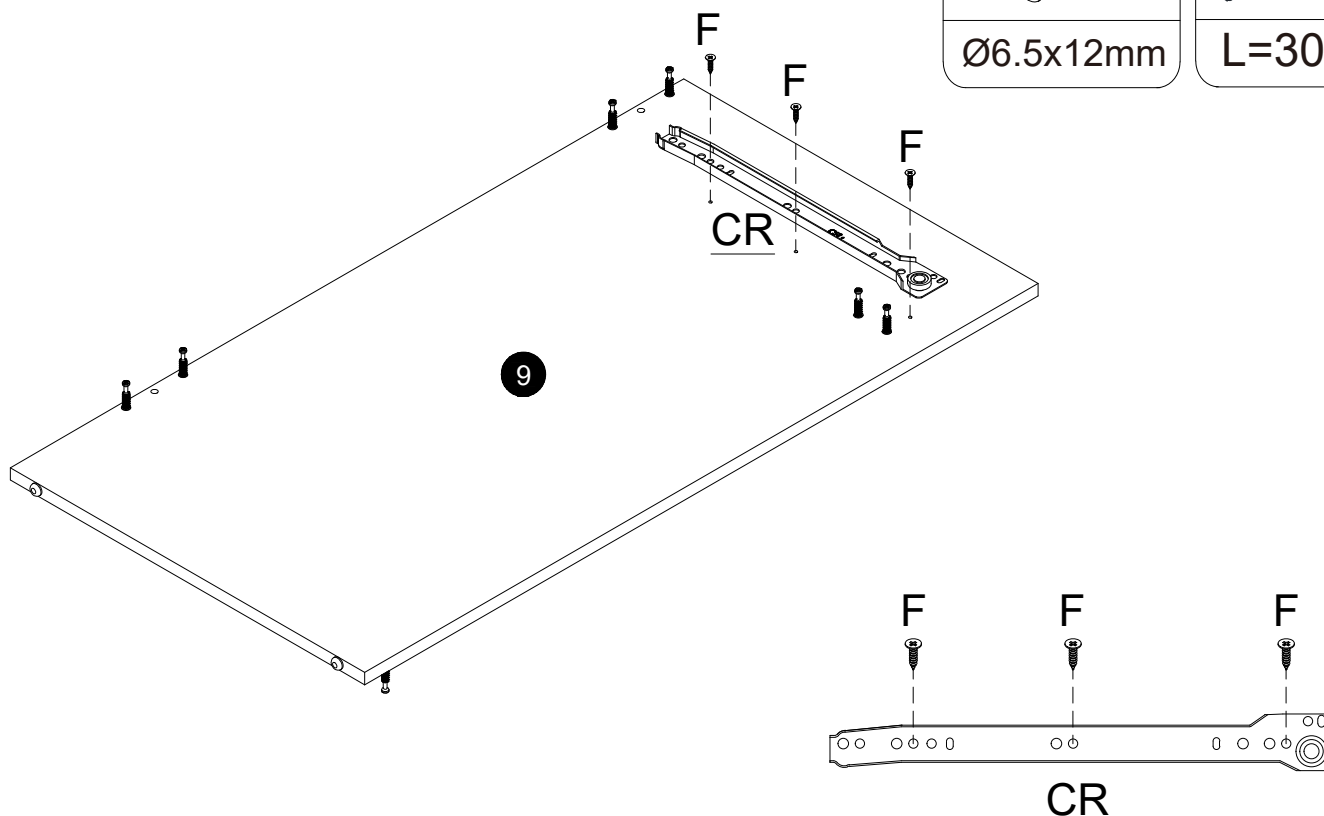


STEP 18

A	X2
	
Ø6x34mm	

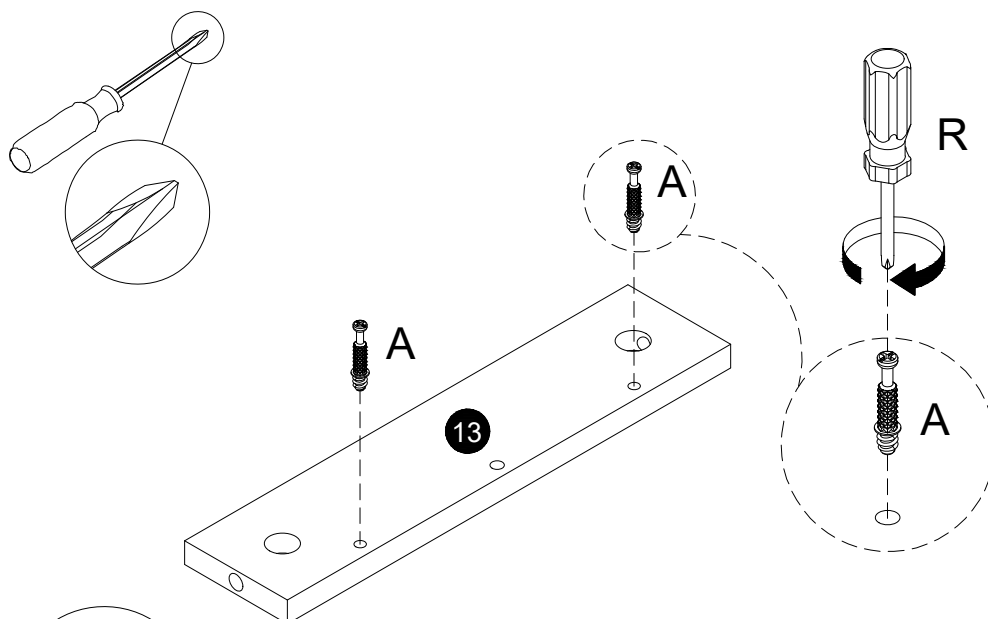


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

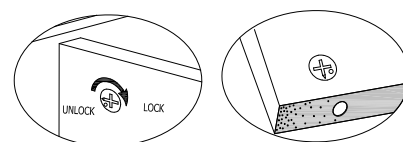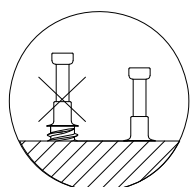


Proper orientation of CAM LOCK

STEP 19


B	X2
	
Ø15*9.5mm	


C	X1
	
Ø6*30mm	

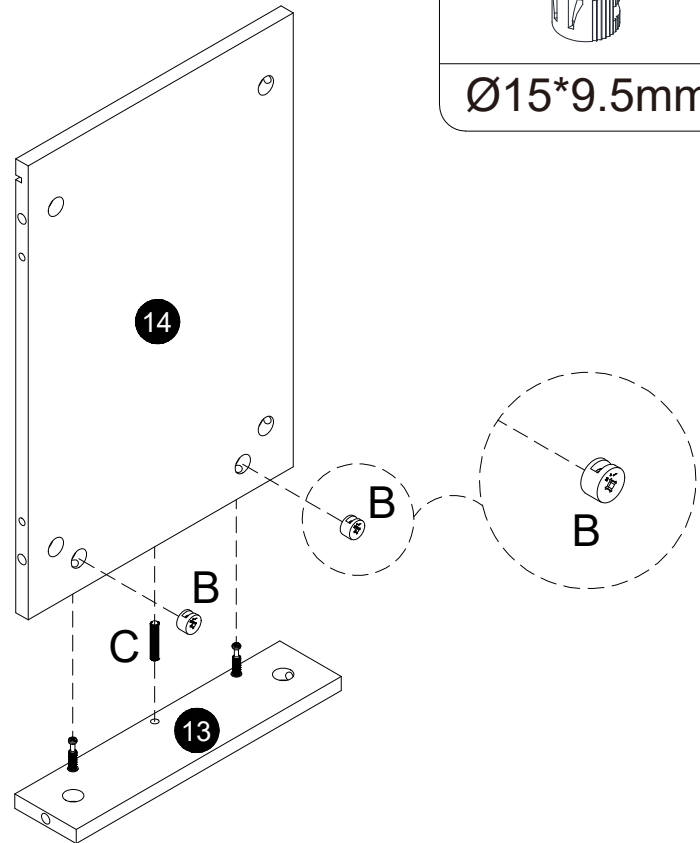


STEP 20

B	X5
	
Ø15*9.5mm	

C	X2
	
Ø6*30mm	

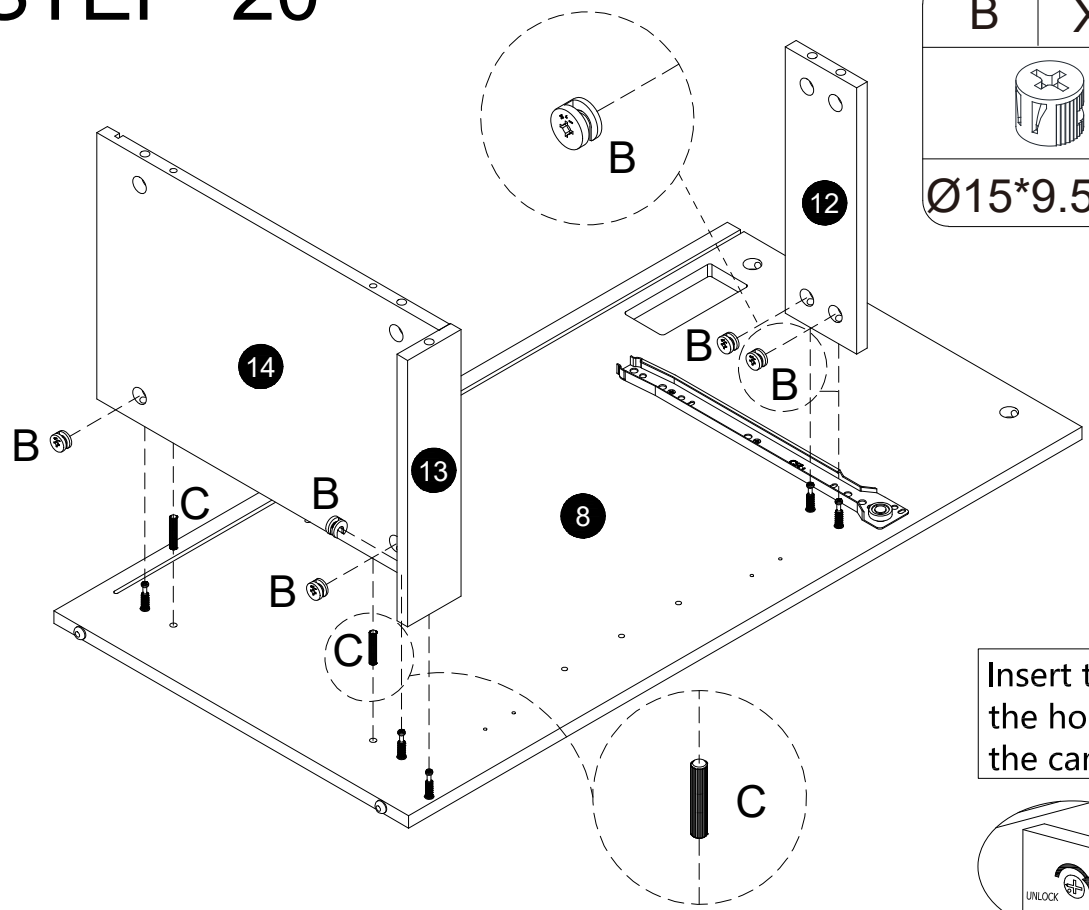



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

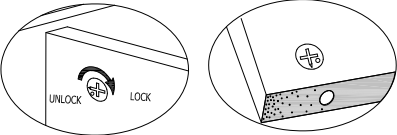


Proper orientation of CAM LOCK

STEP 21

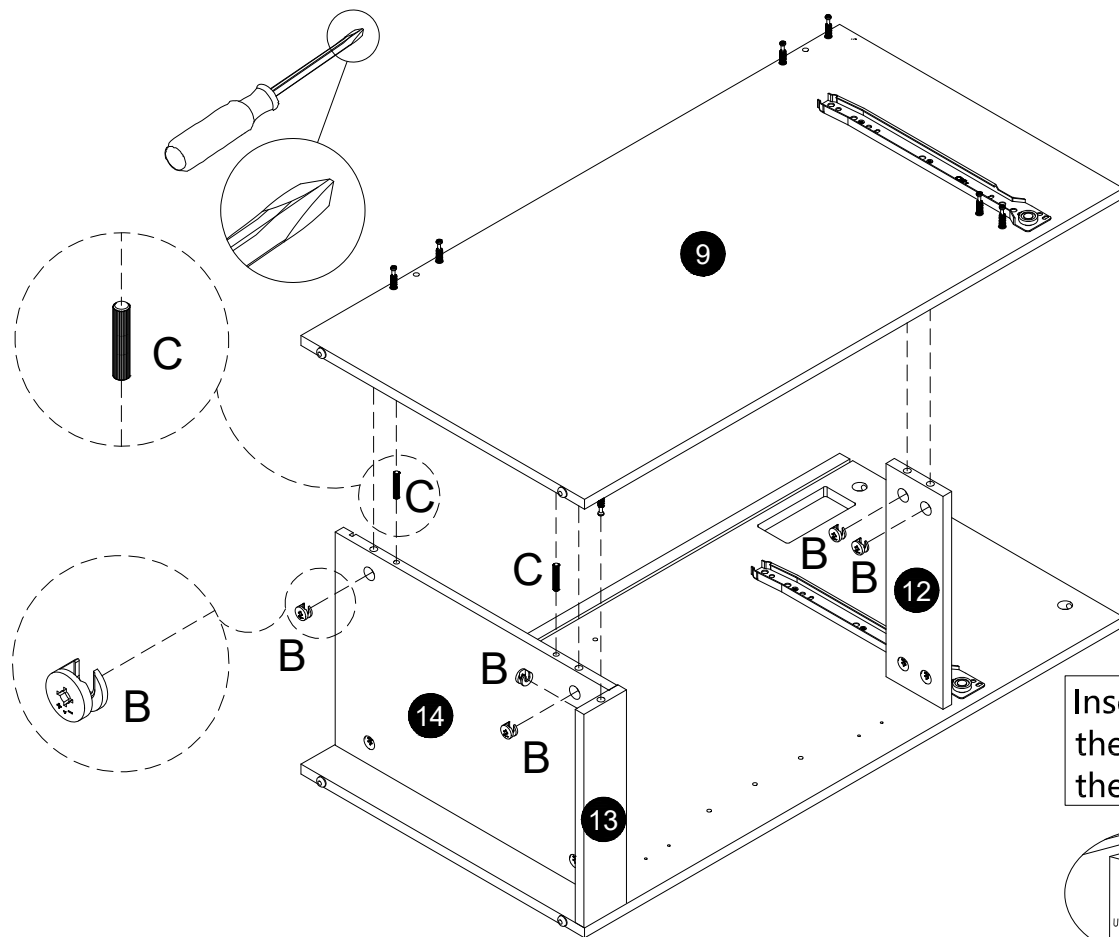


B	X5
	
Ø15*9.5mm	
C	X2
	
Ø6*30mm	

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

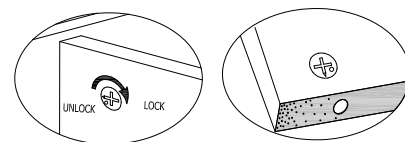

Proper orientation of CAM LOCK


STEP 22

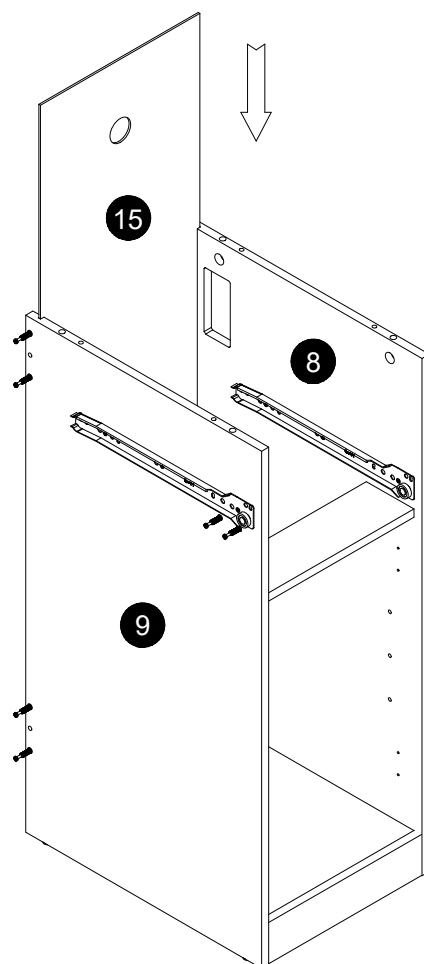


16


STEP 23

B	X6
	
Ø15*9.5mm	

C	X2
	
Ø6*30mm	

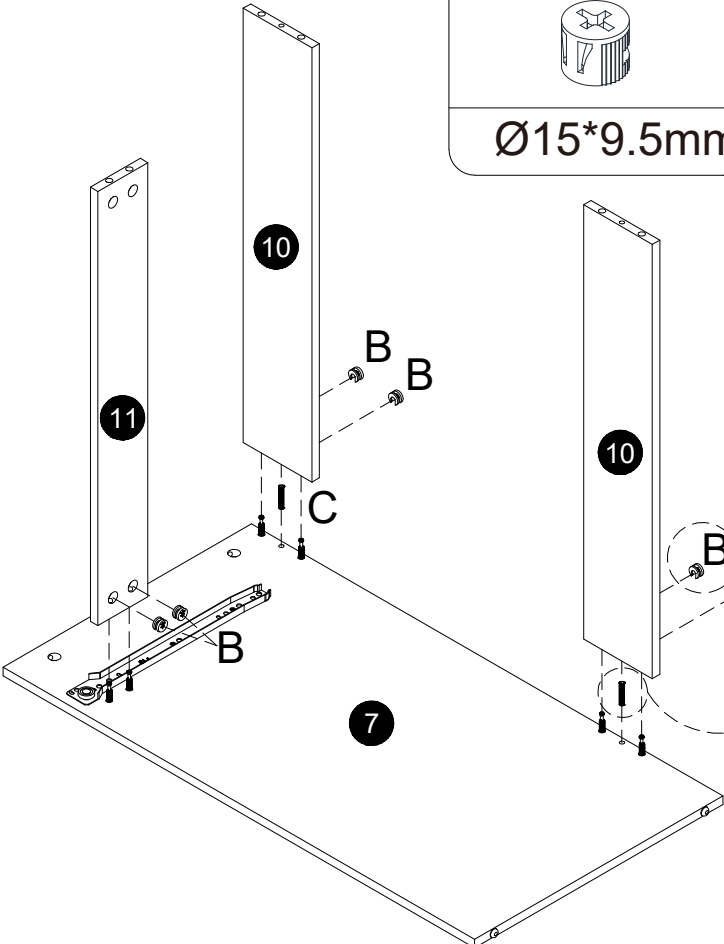

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

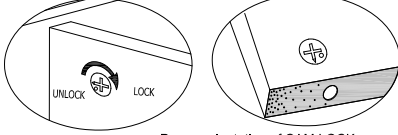


UNLOCK LOCK

Proper orientation of CAM LOCK


STEP 24

B	X6
	
Ø15*9.5mm	

C	X2
	
Ø6*30mm	

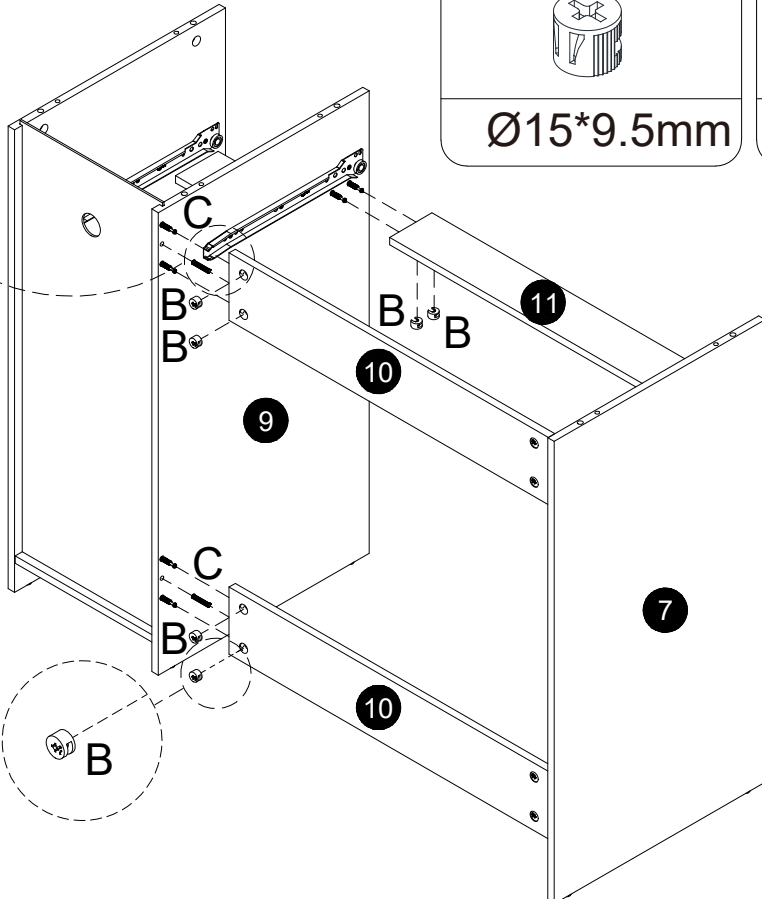


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

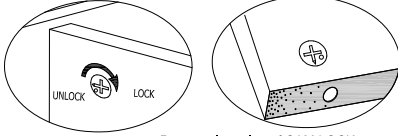


UNLOCK LOCK


Proper orientation of CAM LOCK

STEP 25



B	X6	C	X6
			
Ø15*9.5mm		Ø6*30mm	


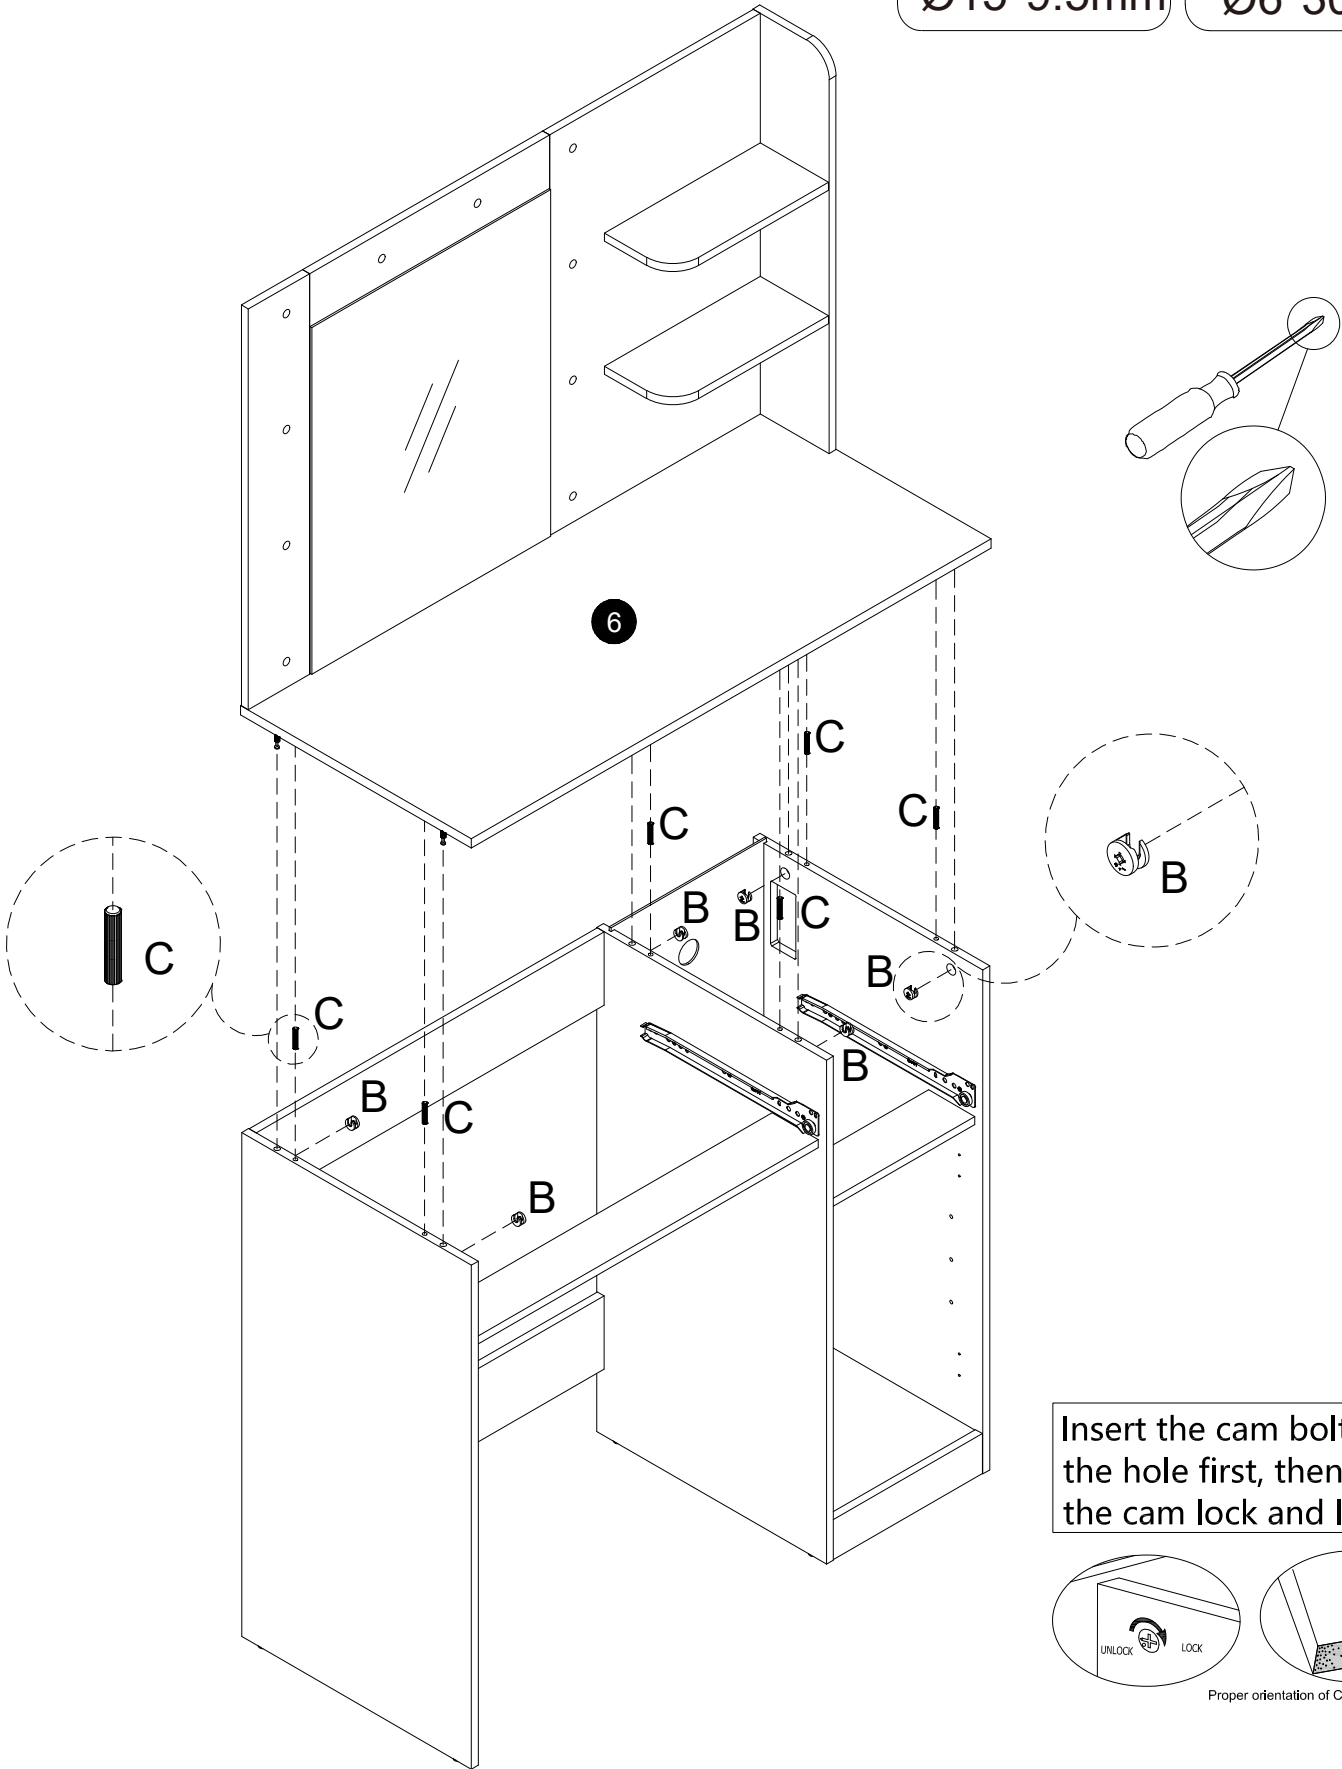


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


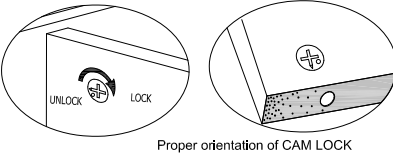




STEP 26

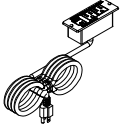F	X2	O	X1
			
Ø6.5x12mm			

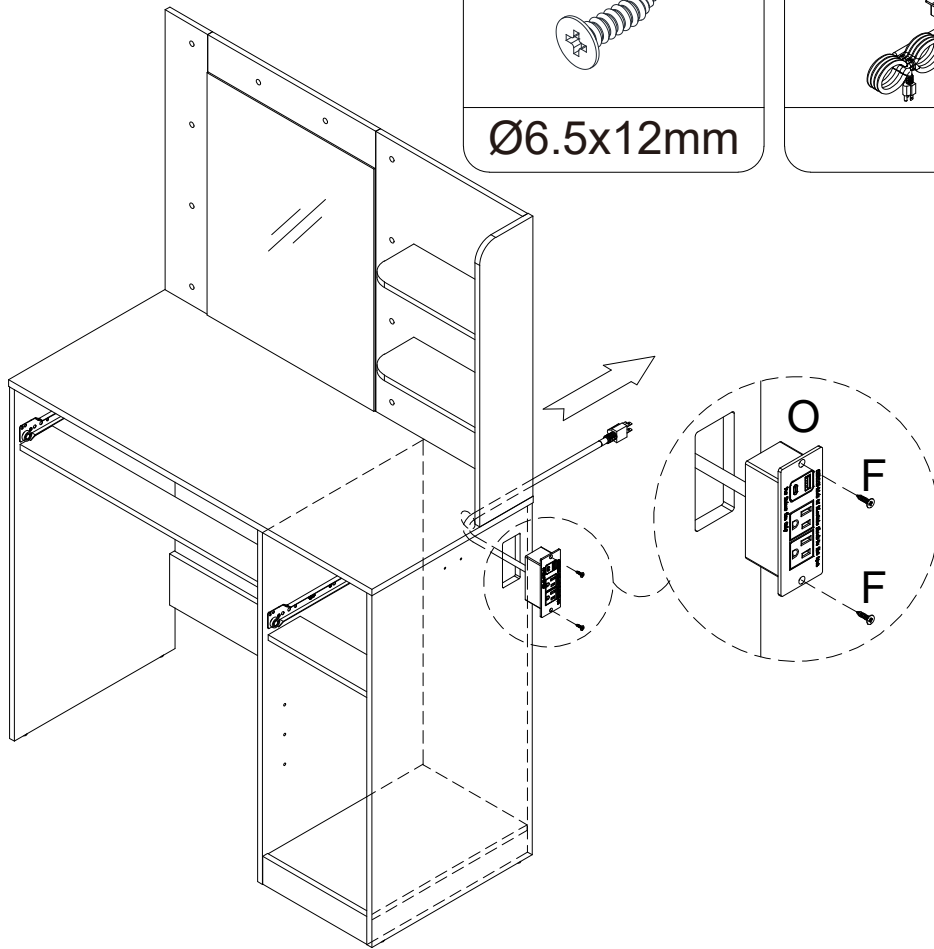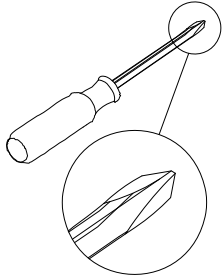


STEP 27

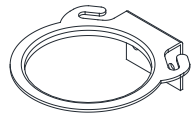F	X2	U	X1
			
Ø6.5x12mm			

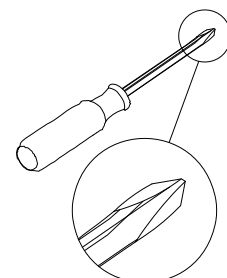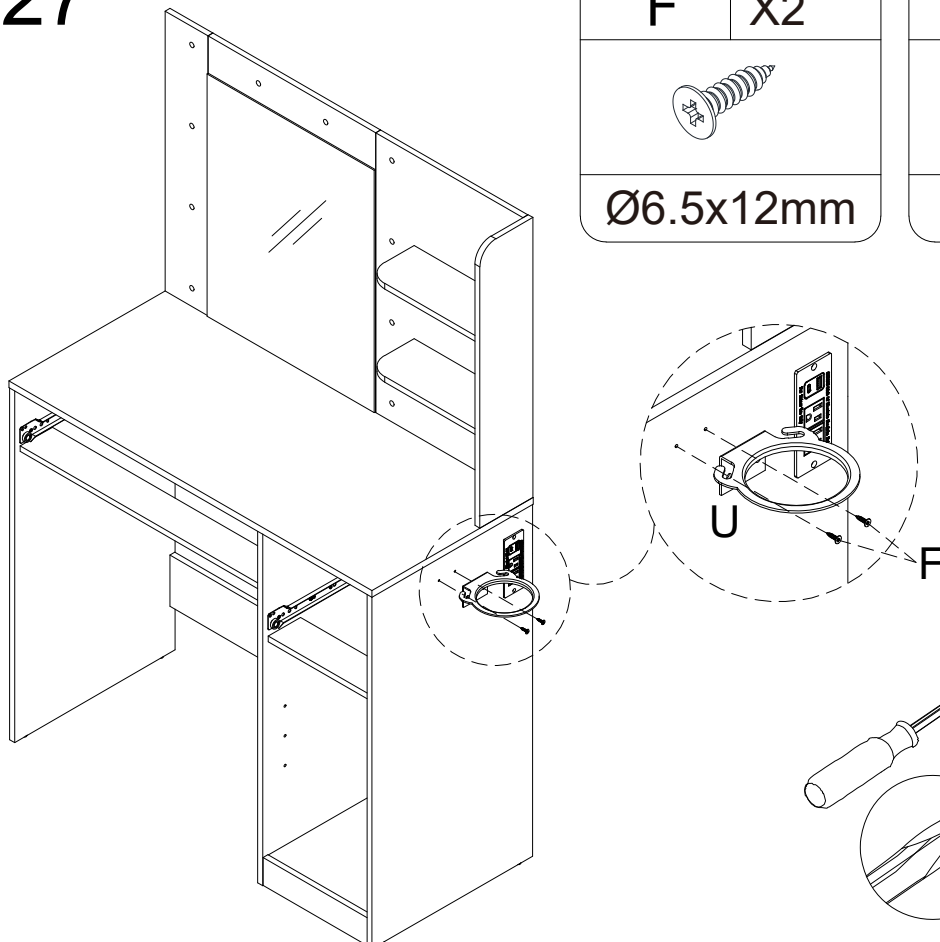


A line drawing of a screwdriver. A circular callout is positioned at the tip of the shaft, with two lines connecting it to a larger circular inset below. This inset provides a magnified view of the screwdriver's tip, showing the sharp edges of the blade.

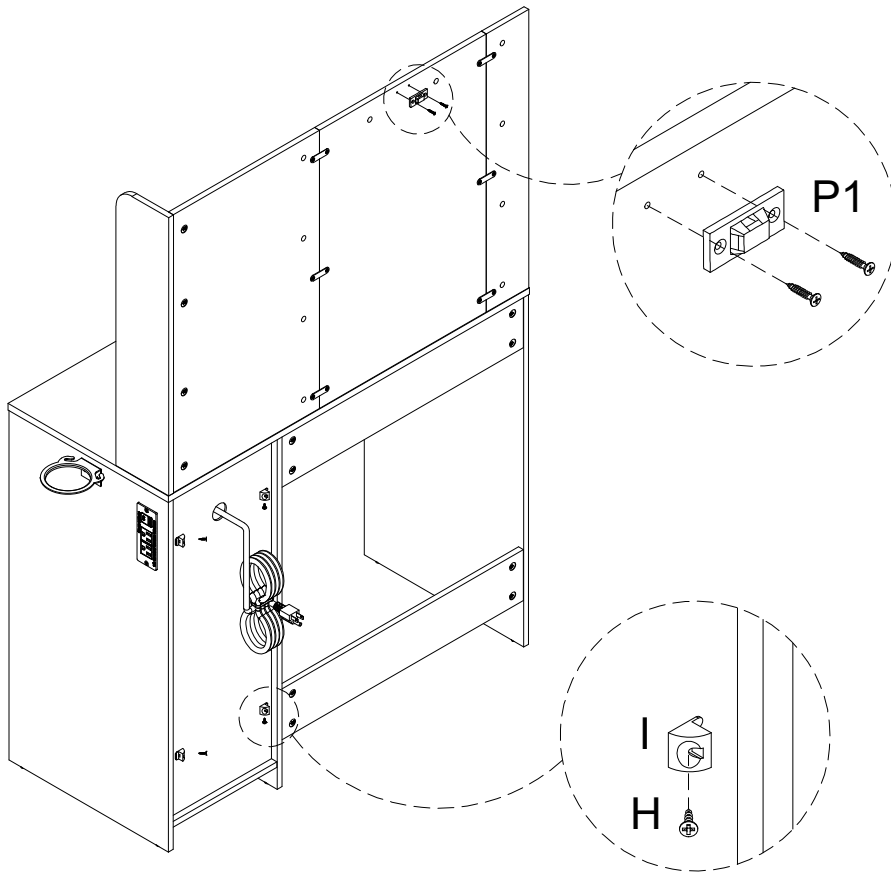

H	X4
	
Ø3x15mm	


I	X4
	

P1	X1
	

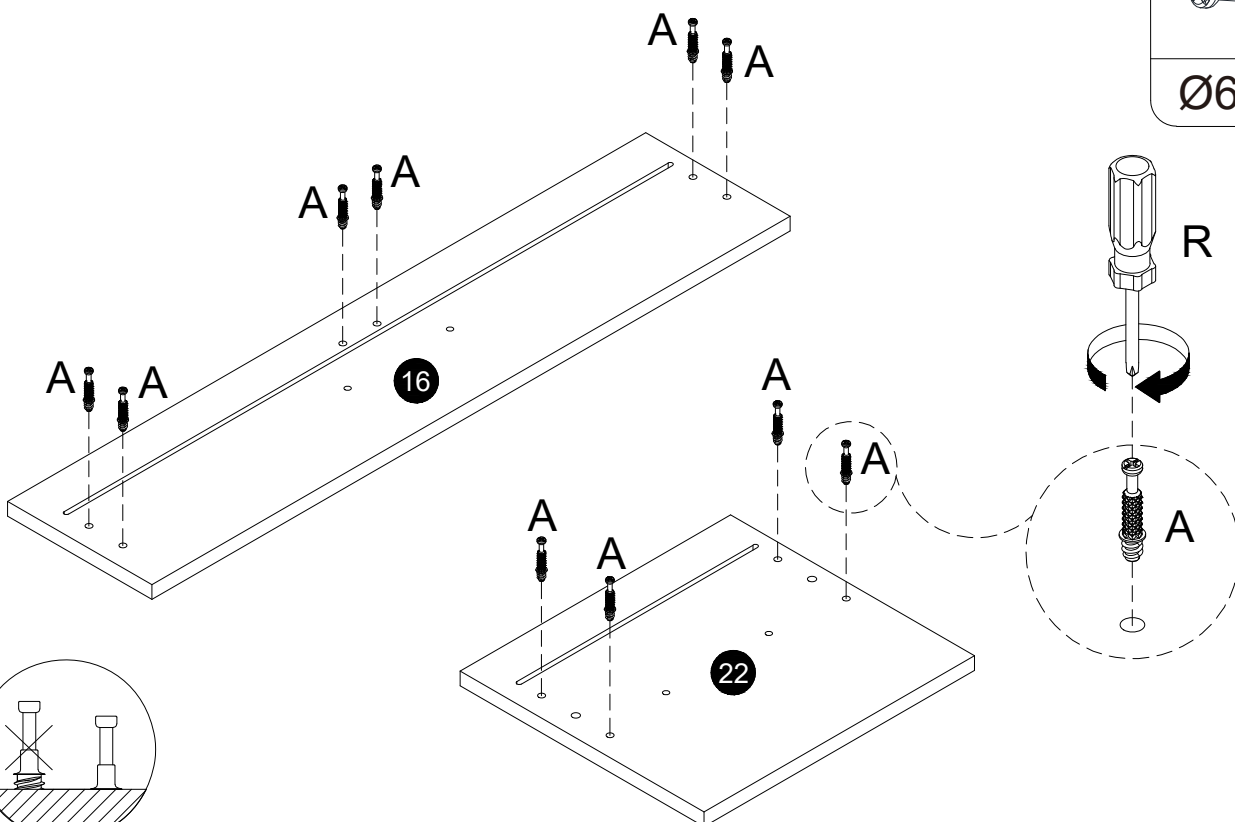


A	X10
	
Ø6x34mm	


STEP 30

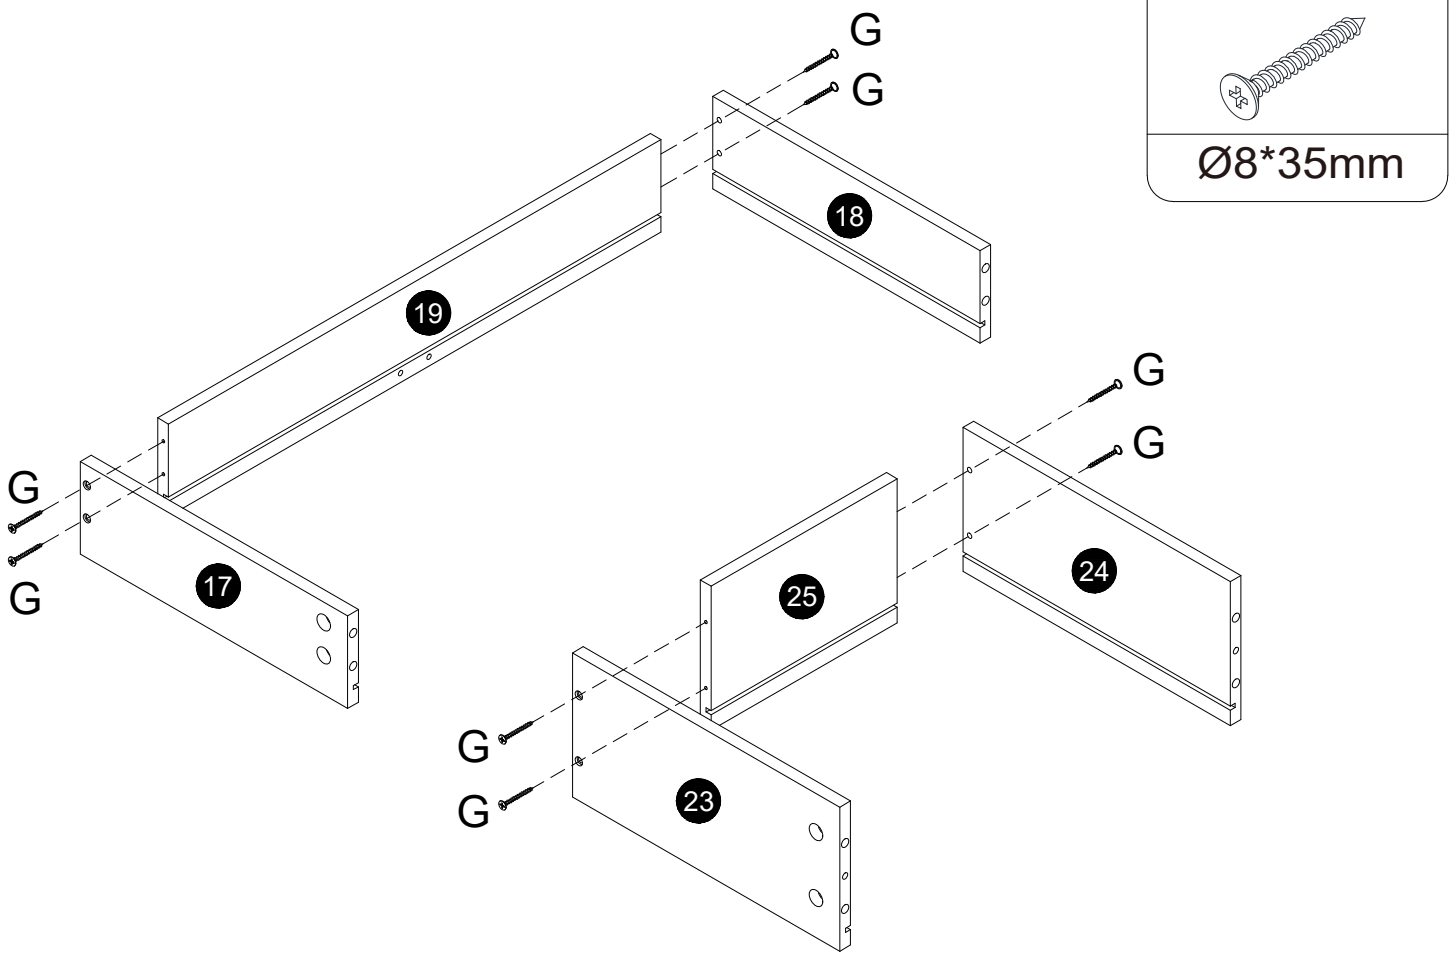


STEP 31

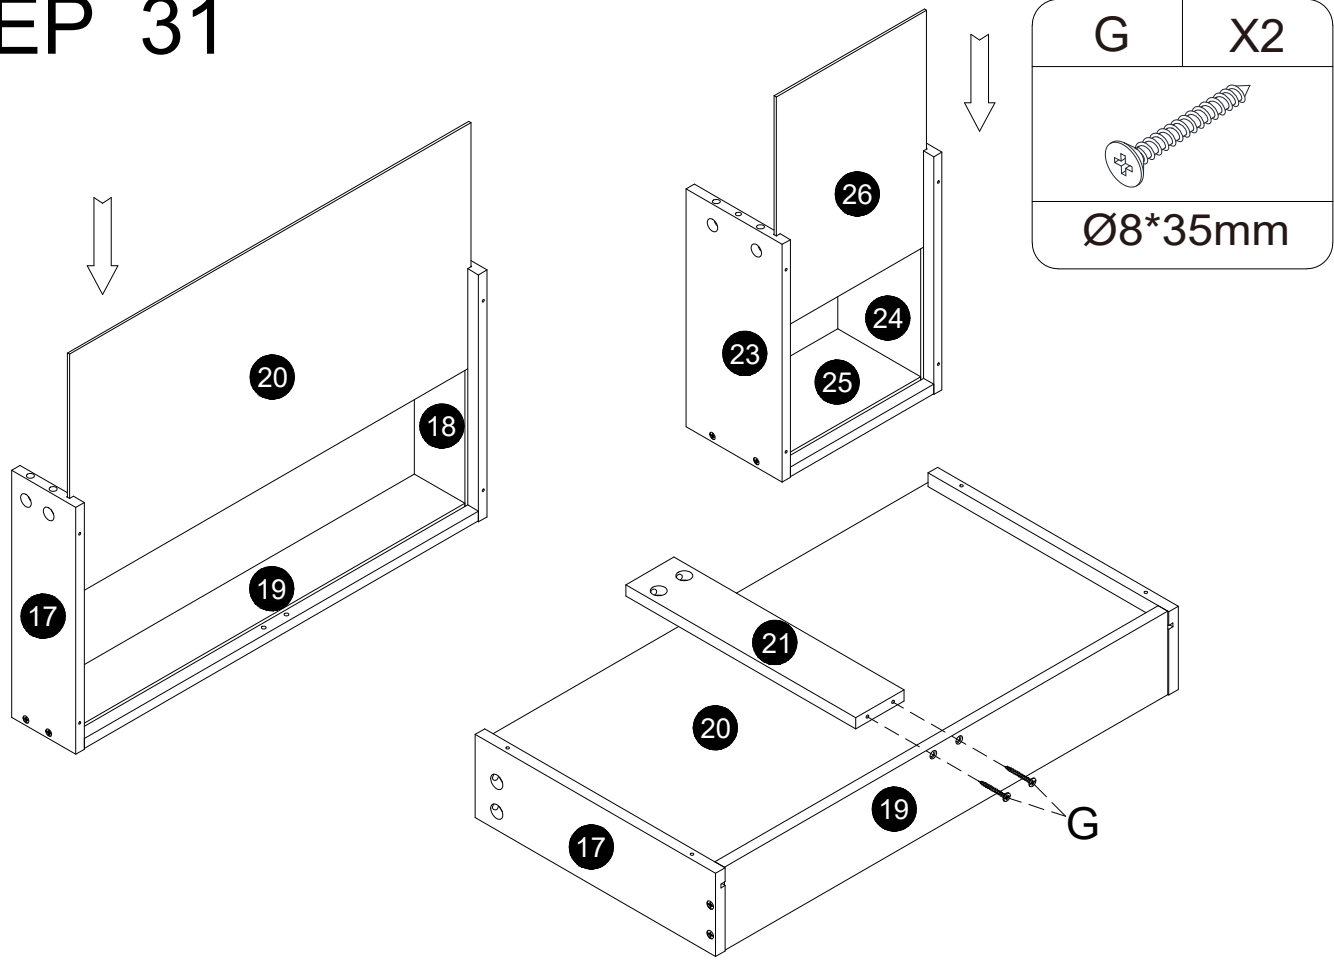





STEP 32

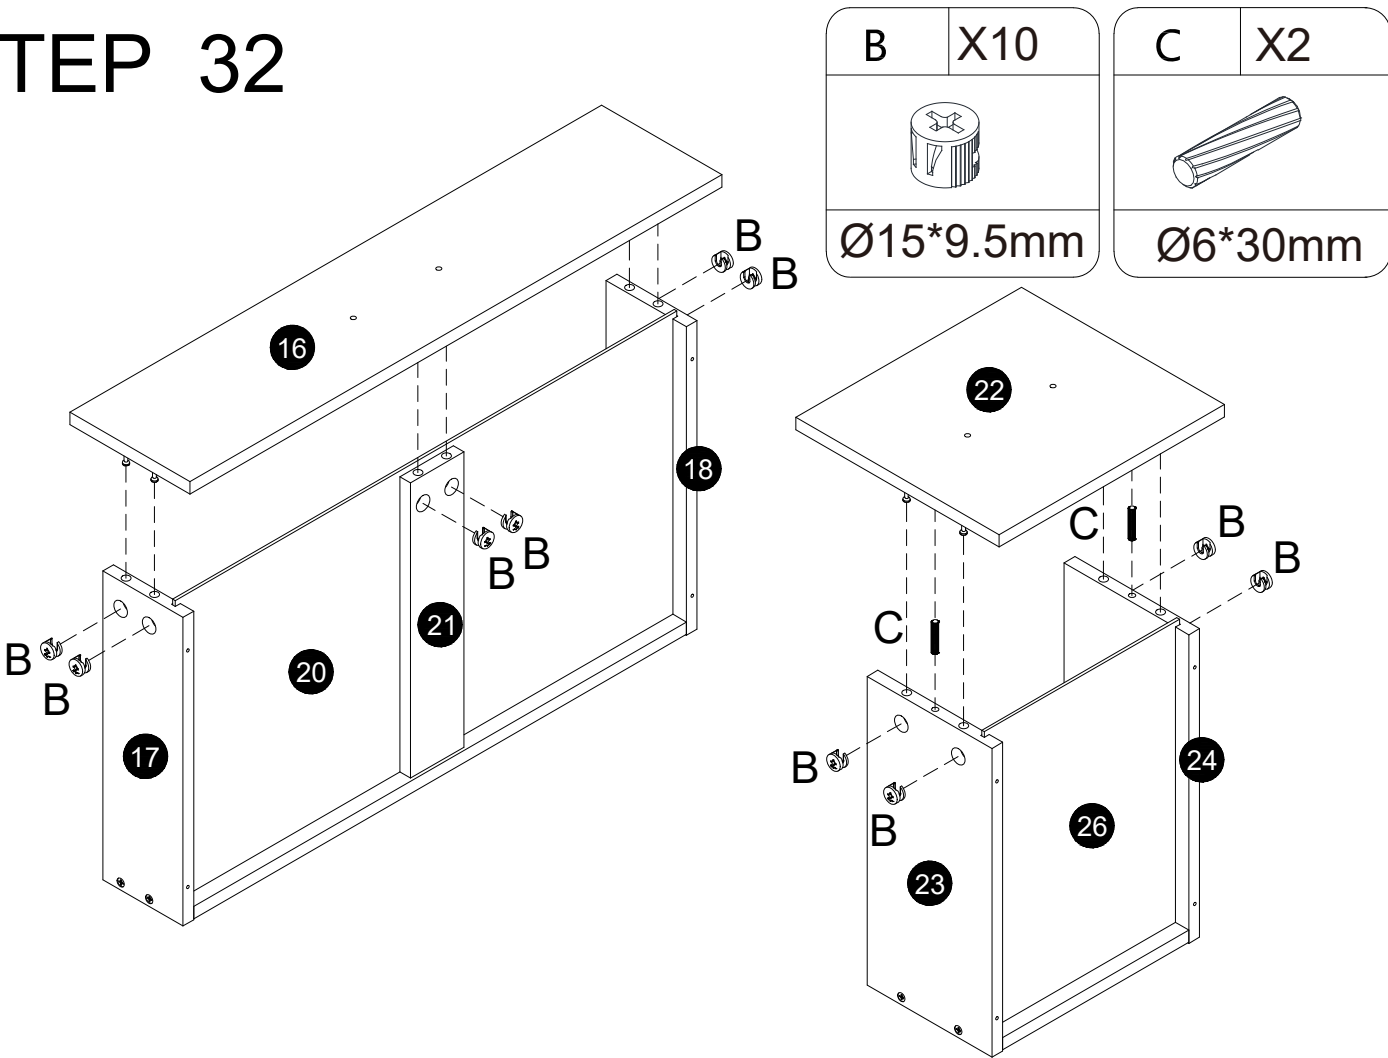




STEP 33

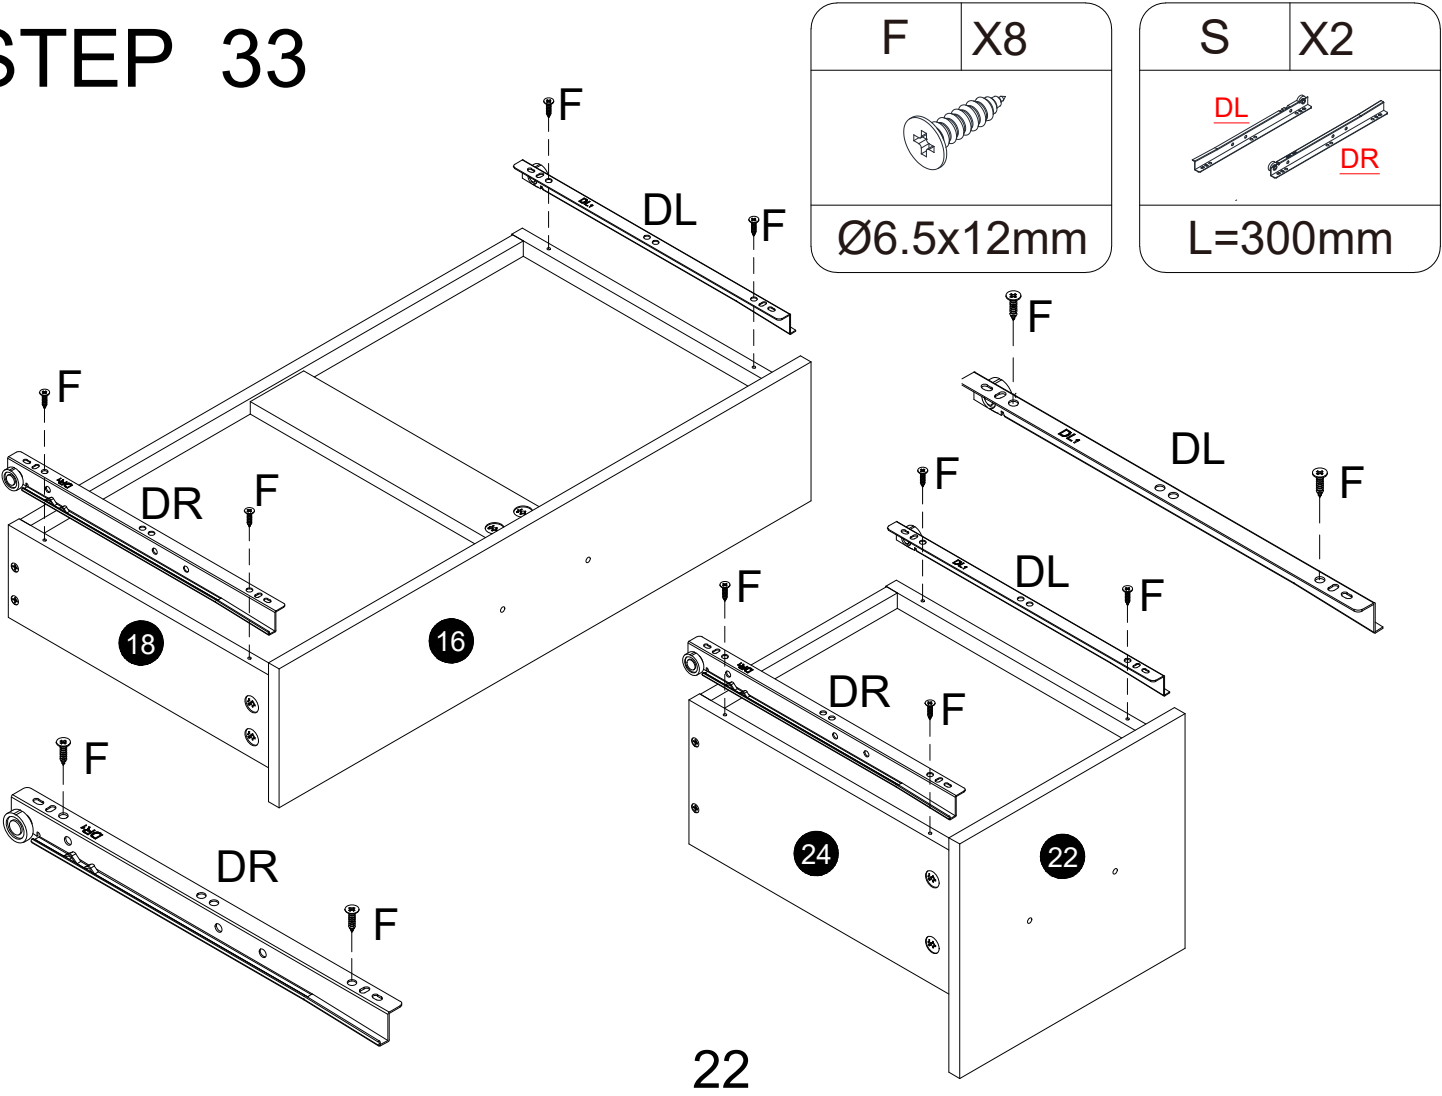

STEP 34

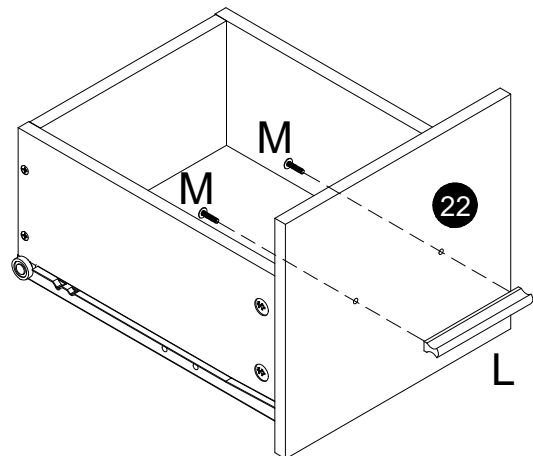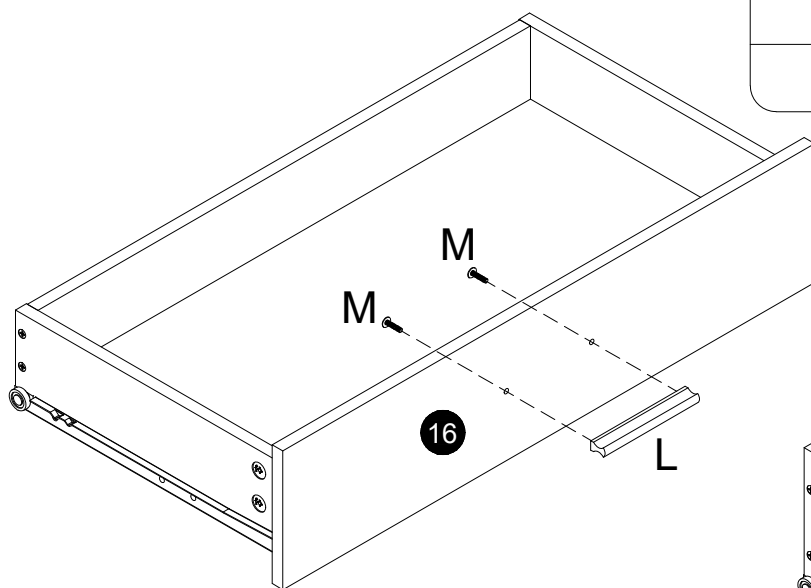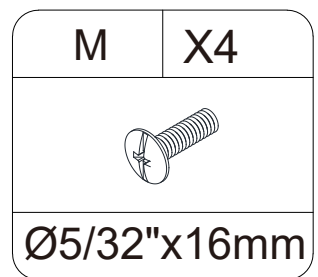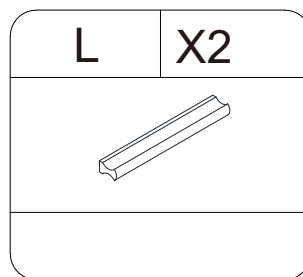


STEP 35

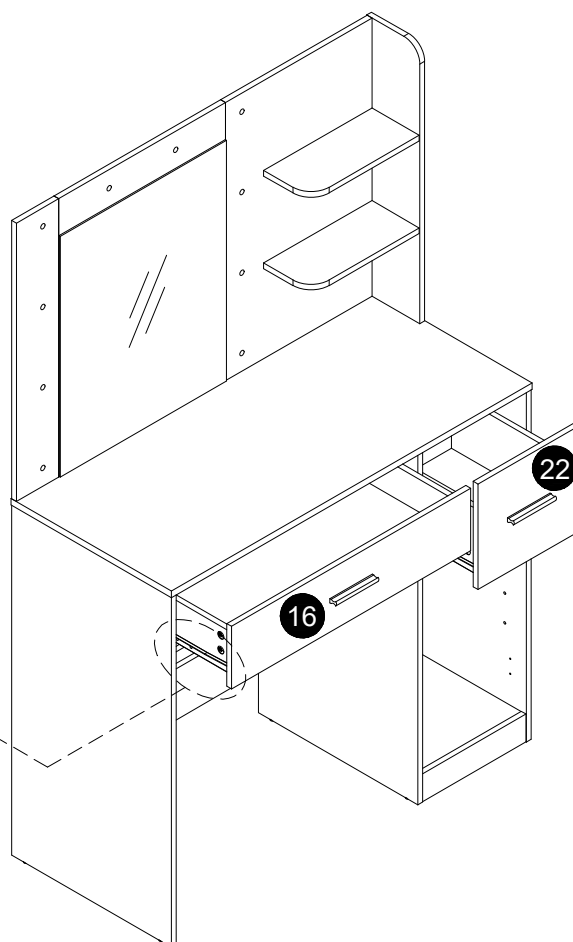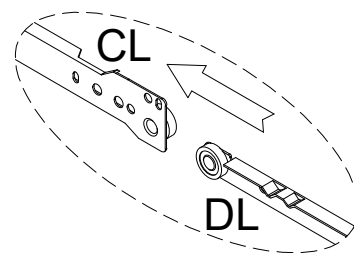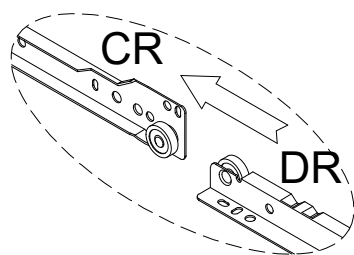


23


STEP 36

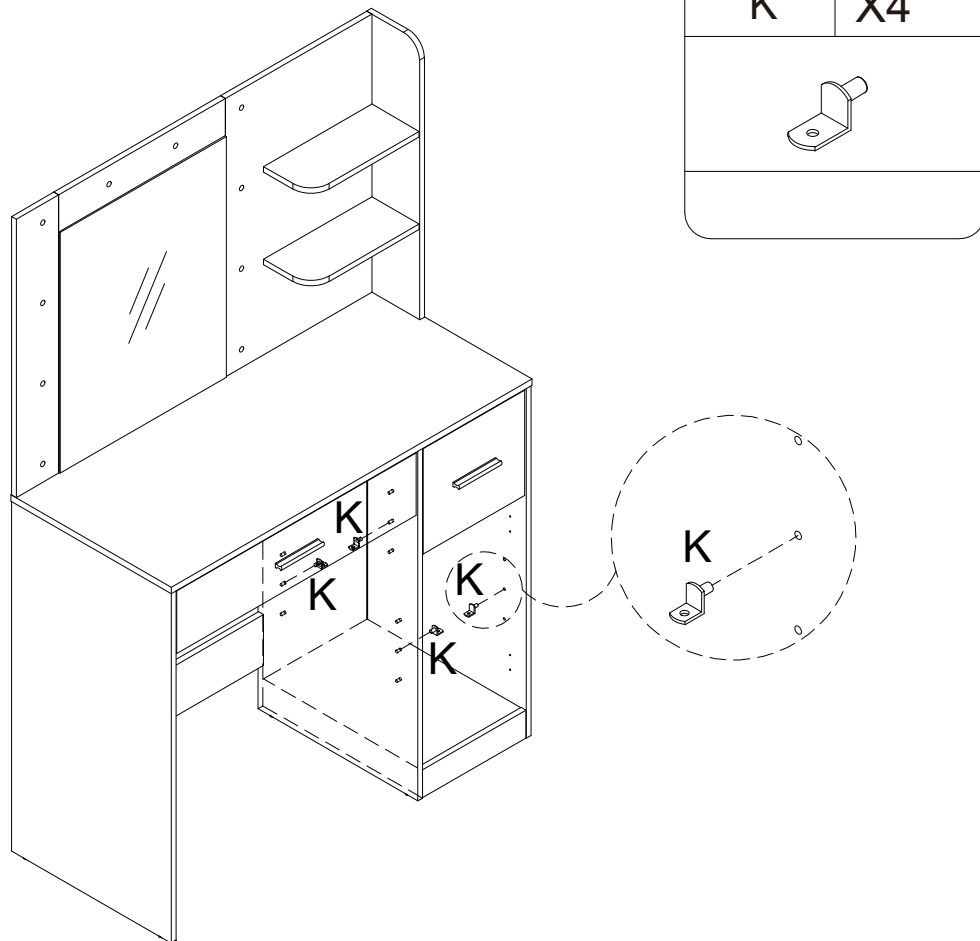



STEP 37

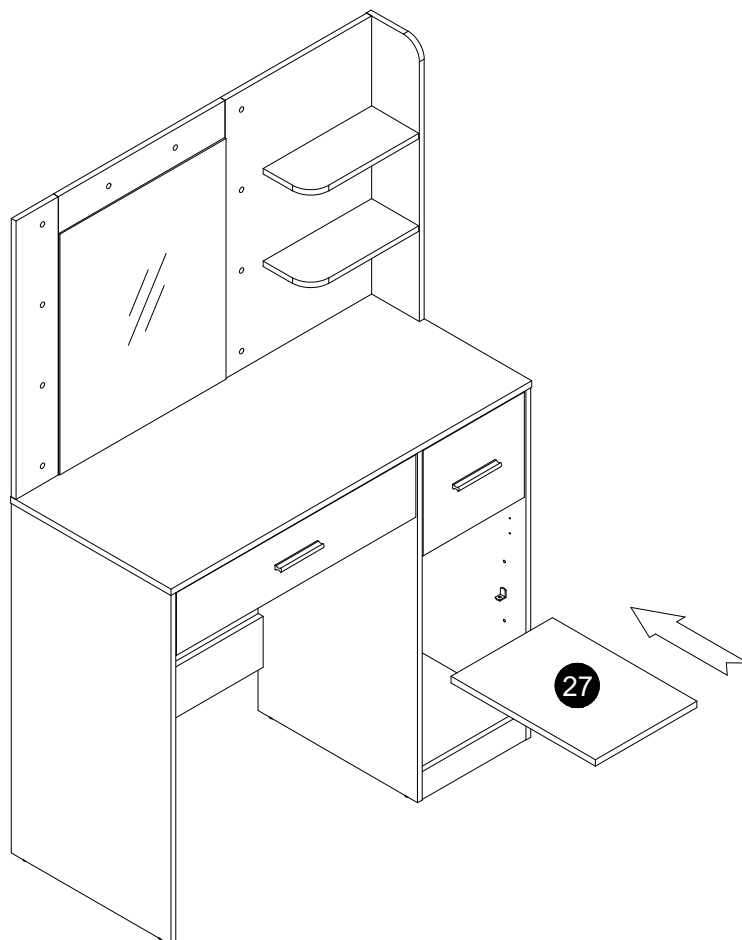


STEP 38

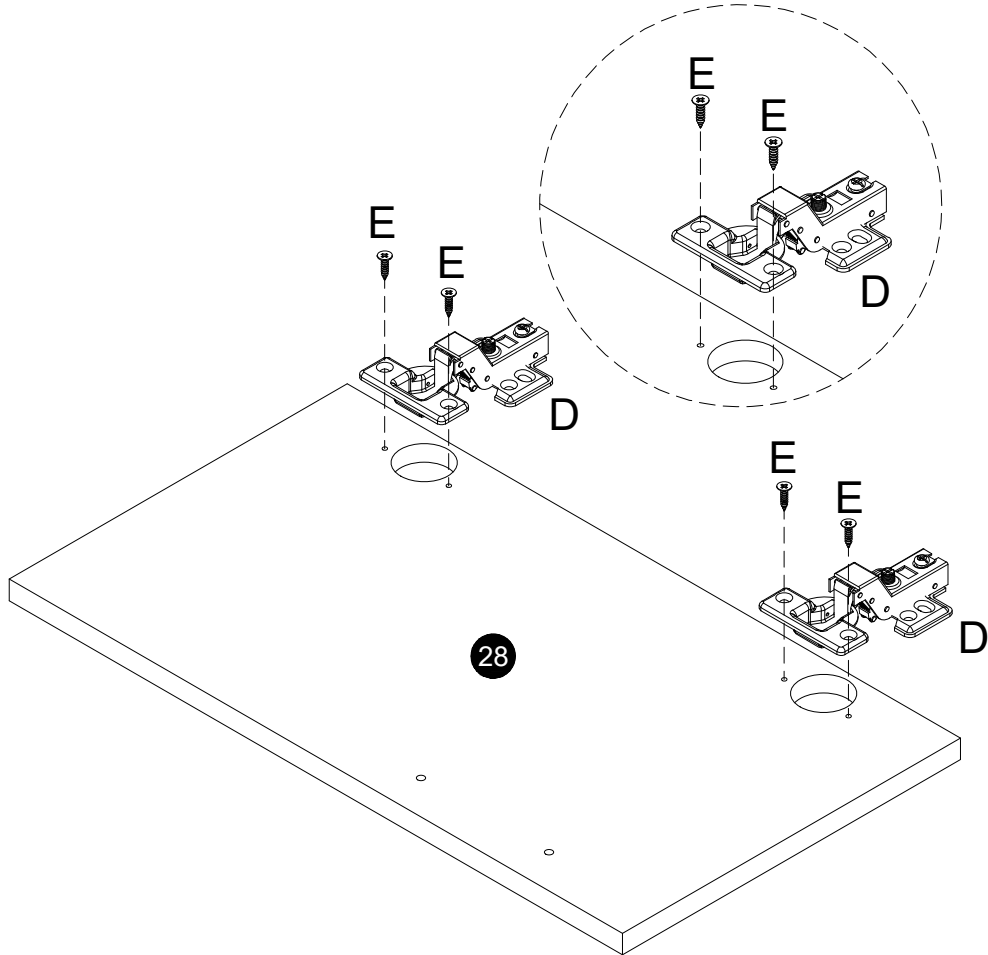



D	X2
	
Ø35mm	


E	X4
	
Ø8*12mm	


STEP 39

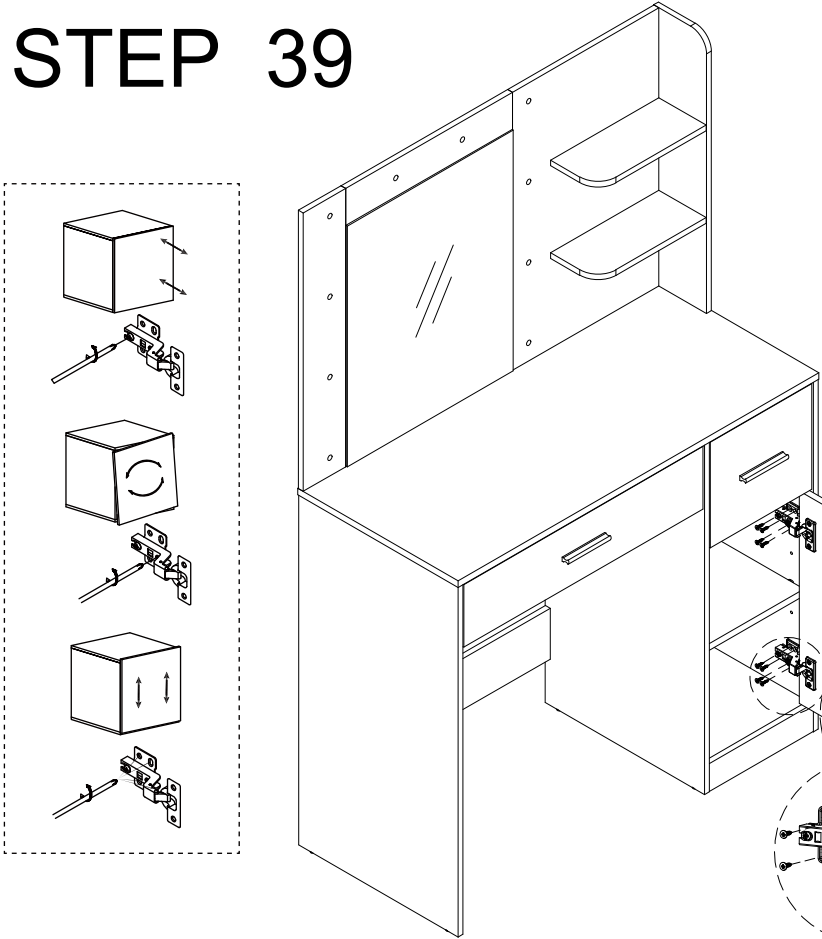

E	X8
	
Ø8*12mm	

L	X1
	


N	X2
	
Ø5/32*18mm	

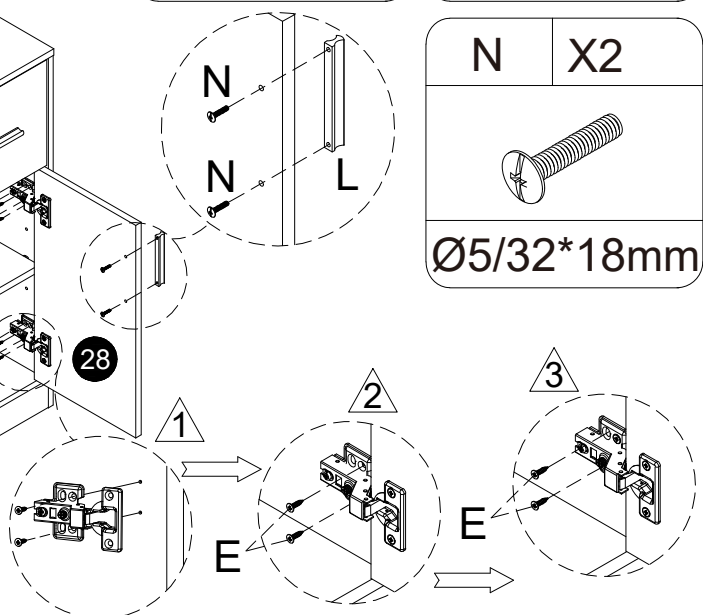

NOTE: After assembling the door, if there are any gaps or misalignment, adjust the hinges as shown right.

STEP 40

Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate.

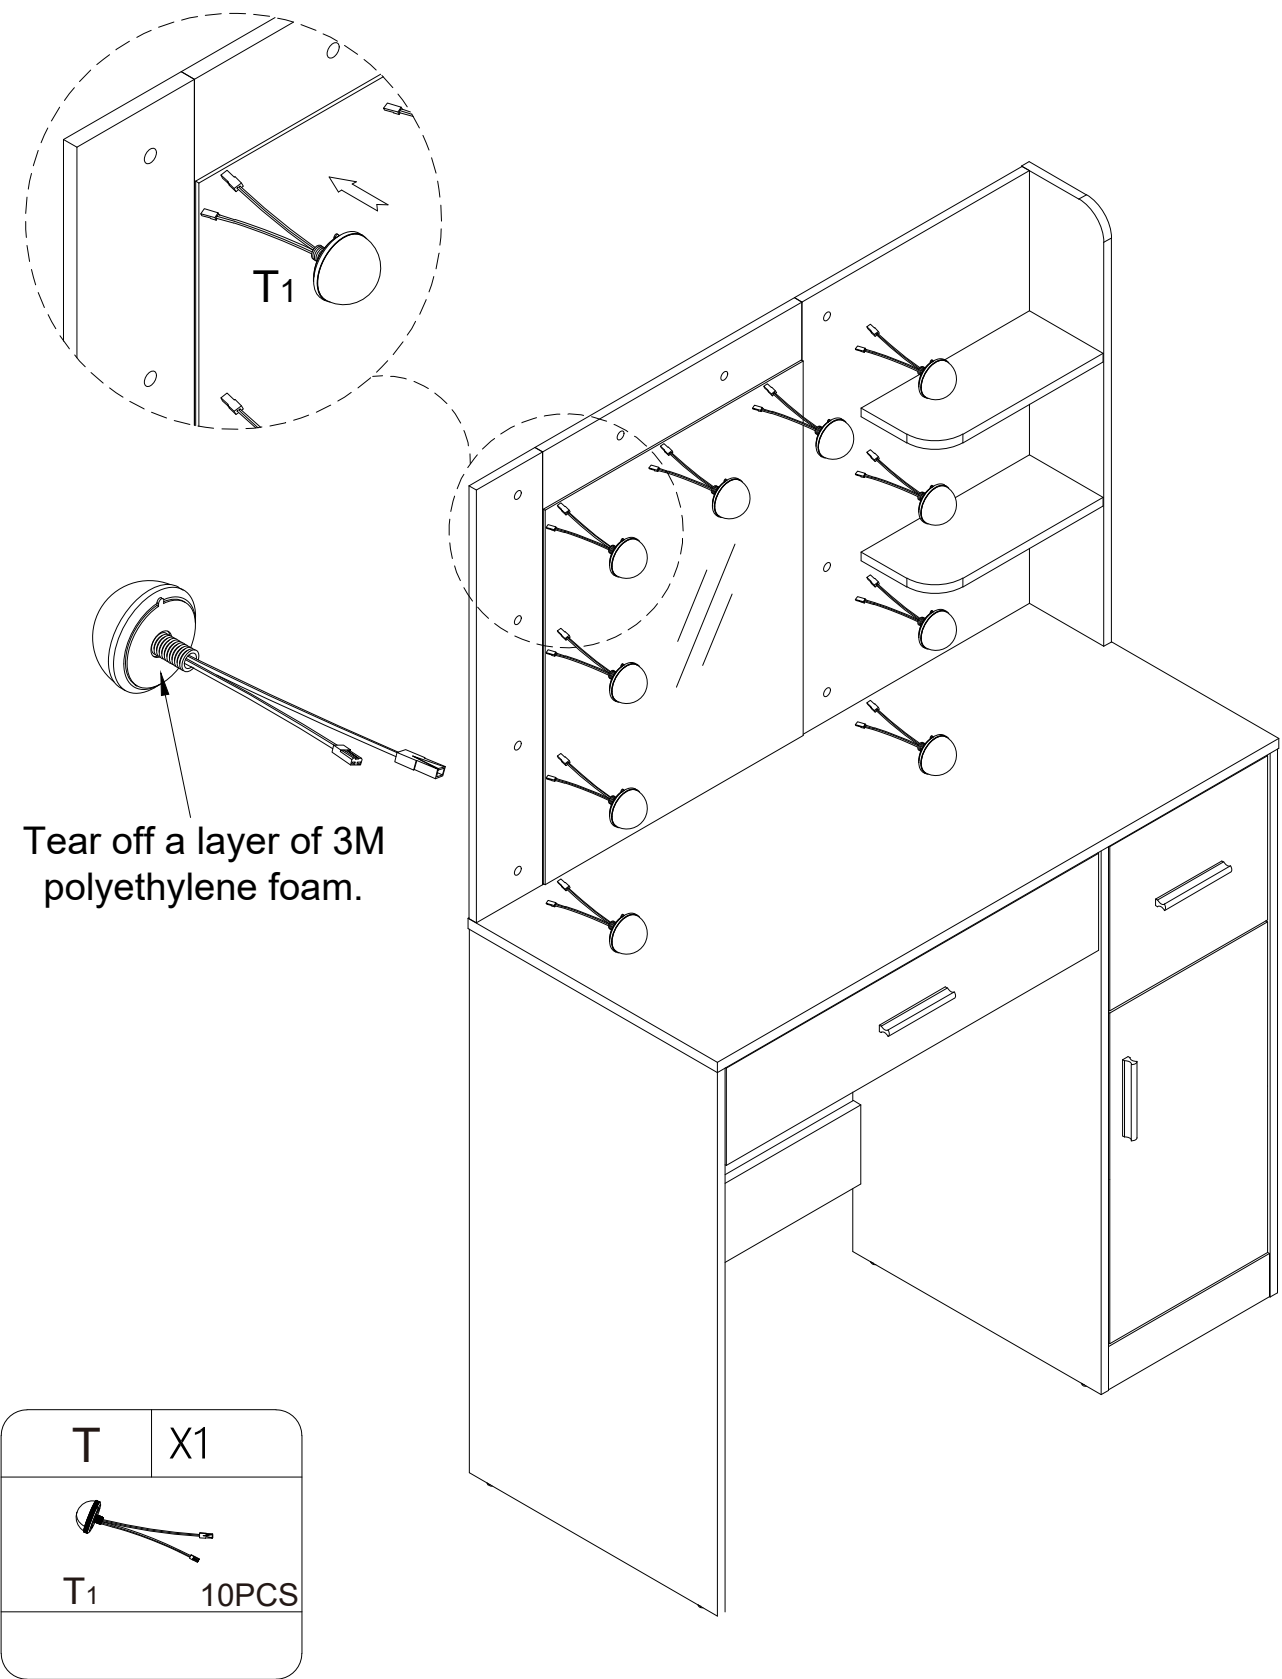


STEP 41

Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate, and then connect the adjacent bulbs successively through the wire head slot on the opposite (corresponding to the line of the same color)


When connecting the interface, please note that the colors of the wires at both ends correspond one by one.

Same color correspond

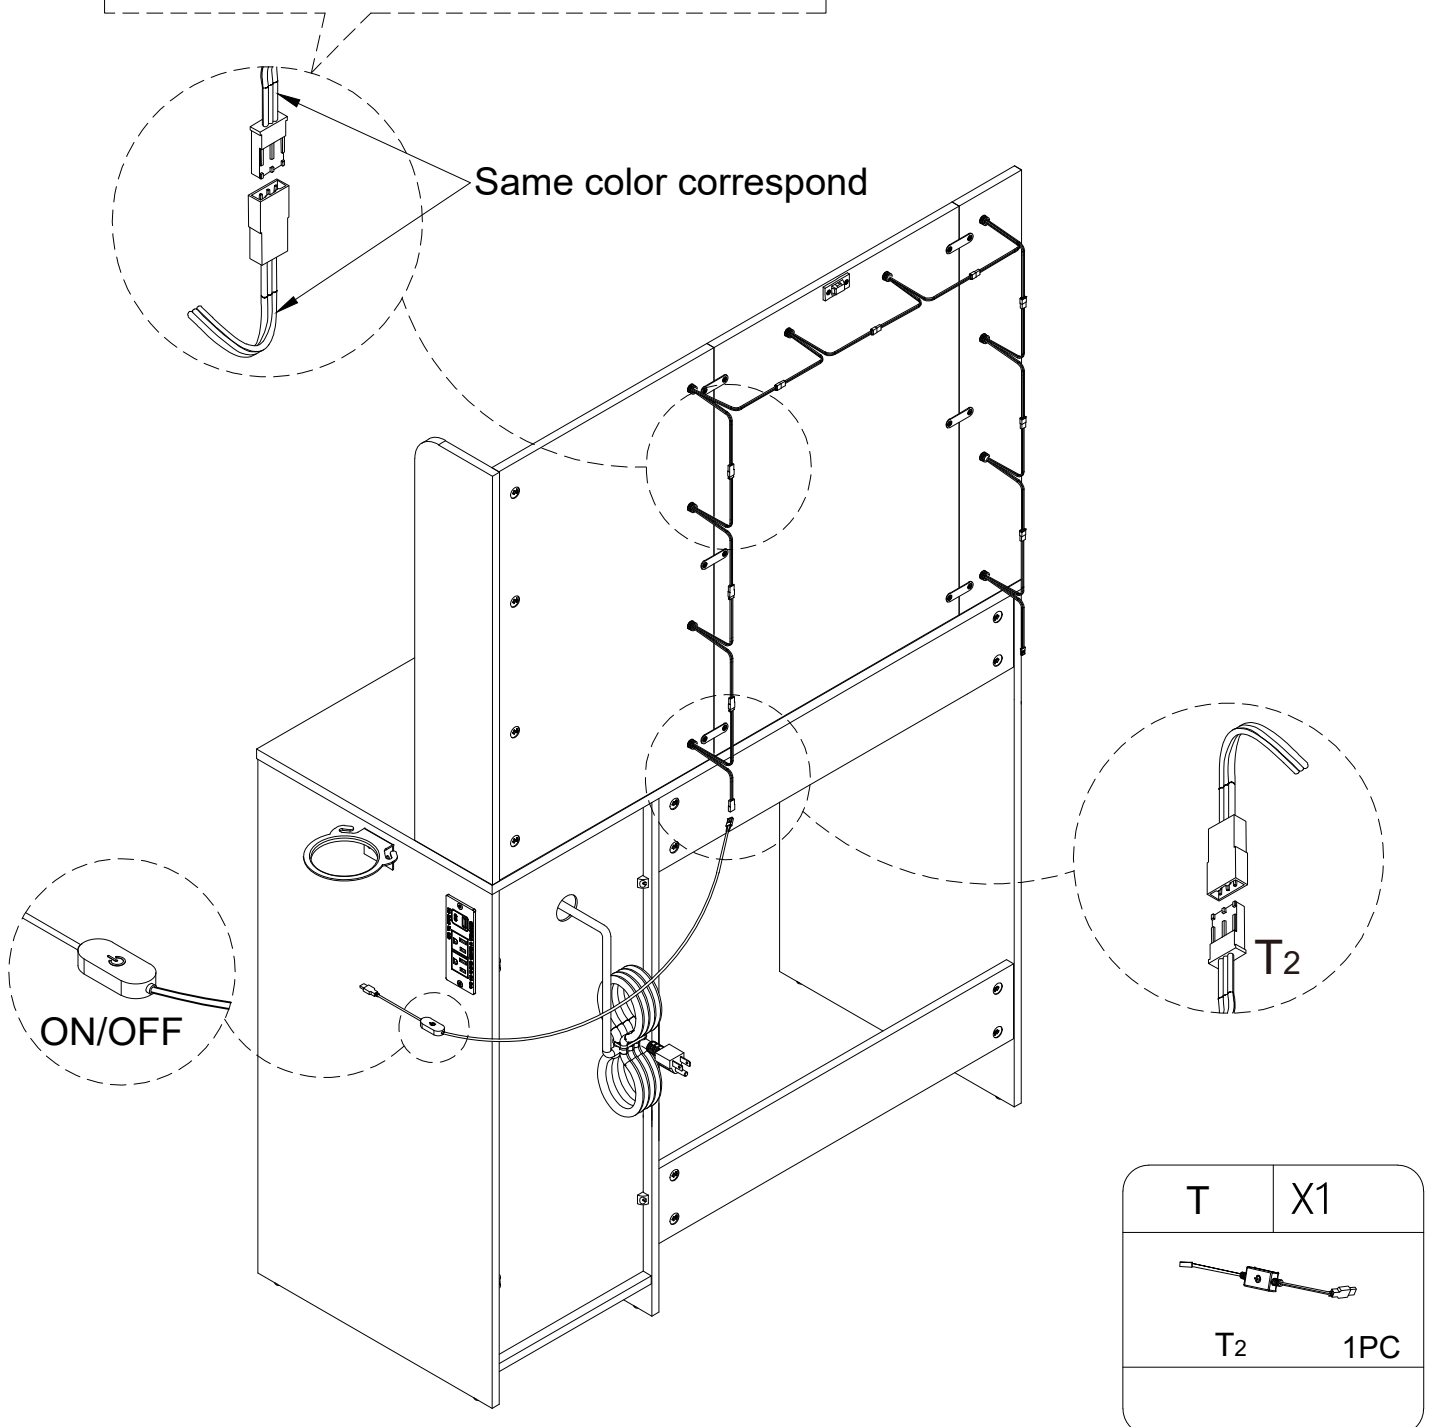


STEP 42


Install the tipping
restraint hardware

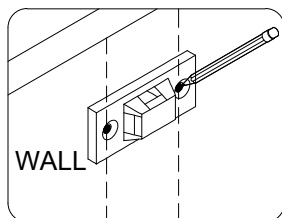


1. make mark on
the wall

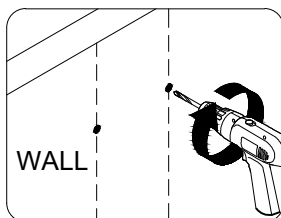


2. drill two Ø6
holes on the wall

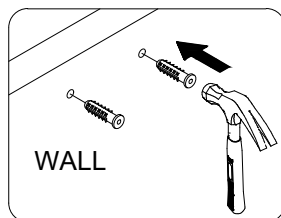

3. put two anchors
in the holes

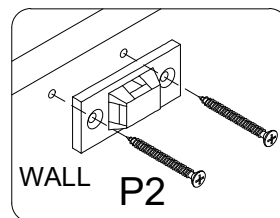

4. fix the device on the
wall by the long screws

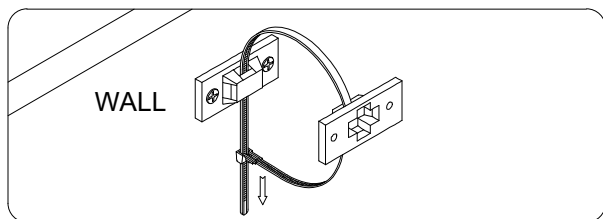

5. Push the cabinet close to the wall so that the
two bases are close to each other, and then put
on nylon tie to tighten it

