










ASSEMBLY INSTRUCTIONS


5 TIER 5 BASKETS STORAGE TOWER

PRODUCT #: 6252

PART LIST				HARDWARE LIST			
NO		DESCRIPTION	QTY	NO		DESCRIPTION	QTY
1	SIDE FRAME PANEL		2	A	BOLT D6x32MM		18
2	TOP		1	B	WOOD DOWEL D8x30MM		28
3	BOTTOM BASE		1	C	ALLEN KEY D4MM		1
4	SHELF FRAME		5				
5	BASKET FRAME		5				
6	BASKET BOTTOM		5				


STEP 1:

- A. PLACE SIDE FRAME PANELS (1) & SHELF FRAMES (4) ON A FLAT, PROTECTED SURFACE.
 B. INSERT WOOD DOWELS (B) INTO THE DOWEL HOLES ON SIDE FRAME PANELS (1) & SHELF FRAMES (4) AS SHOWN.

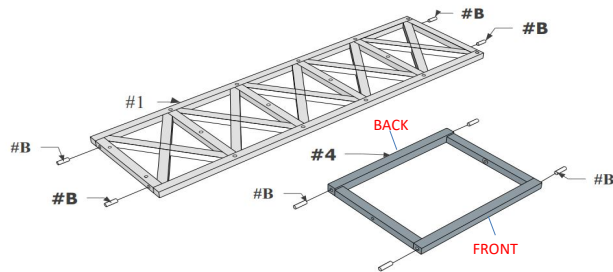


STEP 2:

- A. PLACE SIDE FRAME PANELS (1) WITH DOWELS(B) ON A FLAT, PROTECTED SURFACE.
 B. ALIGN DOWELS (B) ON SHELF FRAMES (4) TO THE SIDE PANELS (1) PER DRAWING SHOWN. PLS BE SURE TO CORRECTLY PLACE SHELF FRAMES FRONT AND BACK INSERT BOLTS (A) AND LOOSELY TIGHTEN WITH ALLEN KEY (C)
 C. REPEAT STEP 2 B FOR THE OTHER SIDE FRAME PANEL (1)
 D. LOOSELY TIGHTEN ALL BOLTS BY USING ALLEN KEY (C).

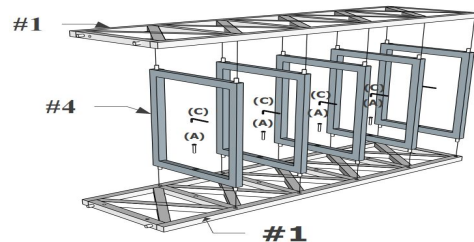


STEP 3:

- A. ATTACH BOTTOM BASE (3) TO THE ASSEMBLED UNIT FROM STEP 2 WITH BOLT (A).
 AND LOOSELY TIGHTEN USING ALLEN KEY (C).

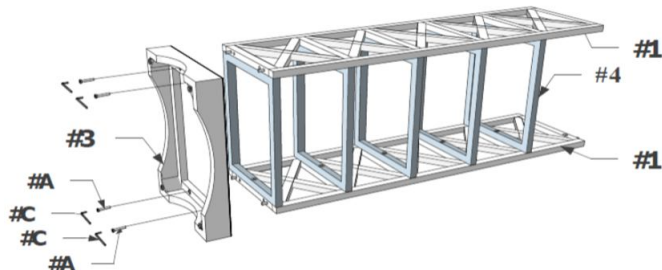


STEP 4:

- A. ROTATE THE 5 TIER TOWER UPRIGHT, THEN ATTACH TOP (2) ONTO THE ASSEMBLED UNIT FROM STEP 3. INSERT BOLTS (A) PER DRAWING SHOWN AND LOOSELY TIGHTEN WITH ALLEN KEY (C).
 B. FULLY TIGHTEN ALL BOLTS (A) WITH ALLEN KEY (C).

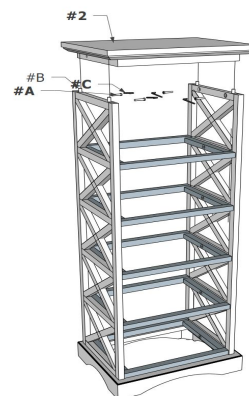


STEP 5:

- A. INSERT BASKET BOTTOM (5) INTO BASKET FRAME (6). REPEAT FOR REMAINING BASKETS.
B. PLACE THE BASKETS INTO TOWER AS SHOWN.

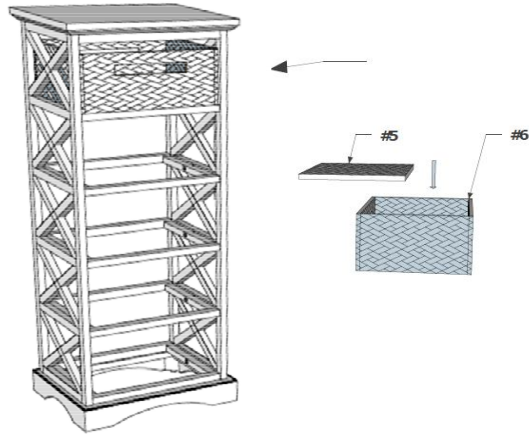

STEP 6:

- A. ASSEMBLY IS COMPLETE.
B. ADJUST FLOOR GLIDERS FOR LEVELING.

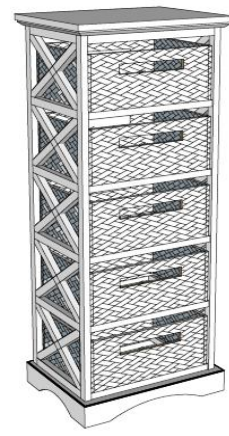

IMPORTANT NOTE:

PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE TO AVOID SCRATCHING.

KINDLY FOLLOW THE ASSEMBLY INSTRUCTION STEP BY STEP.

WE RECOMMEND THAT YOU PERIODICALLY TIGHTEN ALL BOLTS/SCREWS. PLEASE MAKE SURE ALL BOLTS/ SCREWS

ARE PLACED IN THEIR PROPER POSITION AND ARE TIGHTENED SECURELY TO ENSURE YOUR SAFETY.

WEIGHT RESTRICTION: 20 LBS FOR BASKET AND 40 LBS FOR TOP.

DO NOT STAND OR CLIMB ON THE TOWER.

NOT FOR COMMERCIAL USE.

IN CASE YOU NEED ANY EXTRA PARTS, PLEASE FEEL FREE TO CONTACT US DIRECTLY INSTEAD OF RETURNING YOUR ORDER. PLEASE FEEL FREE TO EMAIL Service@ehemco.com

OR CALL 847-2899955 AND WE WILL BE MORE THAN HAPPY TO HELP YOU WITHIN A BUSINESS DAY.

VERSION: JULY 04, 2022

SAVE THESE INSTRUCTIONS

ANTI-TIP HARDWARE MOUNTING INSTRUCTIONS FOR DRYWALL






PRODUCT #: 6252



PHILIPS HEAD SCREW DRIVER, DRILL, 7/32" DRILL BIT NEEDED FOR ASSEMBLY; NOT INCLUDED.

FOR SAFETY REASONS, WE RECOMMEND THAT YOU INSTALL THE INCLUDED ANTI-TIP HARDWARE TO HELP PREVENT THE BOOKCASE FROM UNEXPECTEDLY TIPPING OR SHIFTING.

THE INCLUDED MATERIALS ARE DESIGNED TO MOUNT THE ANTI-TIP HARDWARE TO DRYWALL.



PLEASE CONSULT A REPRESENTATIVE AT A HARDWARE/HOME IMPROVEMENT STORE TO DISCUSS ADDITIONAL MOUNTING OPTIONS FOR OTHER TYPES OF WALLS.

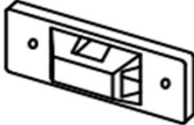PART LIST	FIGURE	QUANTITY	DESCRIPTION
H		2	LONG SCREW
I		2	SHORT SCREW
J		2	MOUNTING BRACKET
K		2	PLASTIC ANCHOR
L		1	ZIP TIE

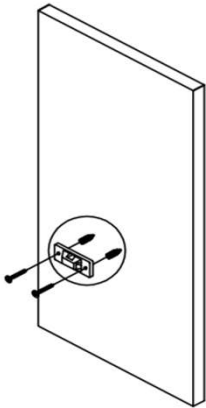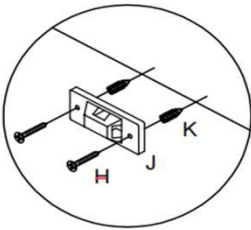



- STEP 1
- A. DETERMINE WHERE THE 5 TIER TOWER IS PLACED, THEN MARK THE POSITION OF MOUNTING BRACKET ON THE WALL
- B. DRILL HOLES IN THE WALL. PRESS THE PLASTIC ANCHOR (K) INTO THE HOLES.
- C. POSITION ONE END OF MOUNTING BRACKET (J) OVER THE PLASTIC ANCHOR (K) AND USE LONG SCREWS (H) TO ATTACH THE MOUNTING BRACKET (J) TO THE WALL. TIGHTEN LONG SCREWS (H) BY USING PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED).

SAVE THESE INSTRUCTIONS
ANTI-TIP HARDWARE MOUNTING INSTRUCTIONS FOR DRYWALL
PRODUCT #: 6252

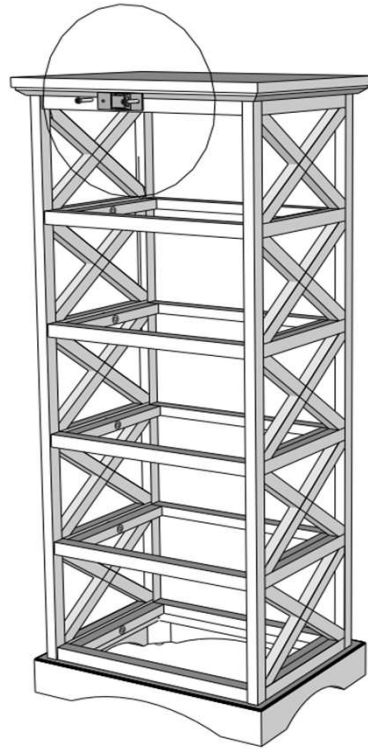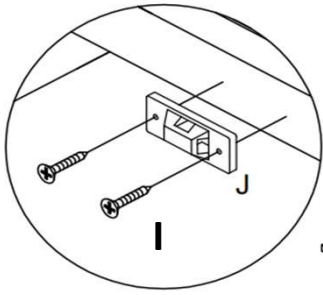

STEP 2

- A. USE SHORT SCREWS (I) TO ATTACH THE OTHER END OF MOUNTING BRACKET (J) TO THE CENTER OF SHELF FRAME OF THE FIRST TIER OF THE 5 TIER TOWER.
- B. TIGHTEN SHORT SCREWS (I) BY USING PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED).

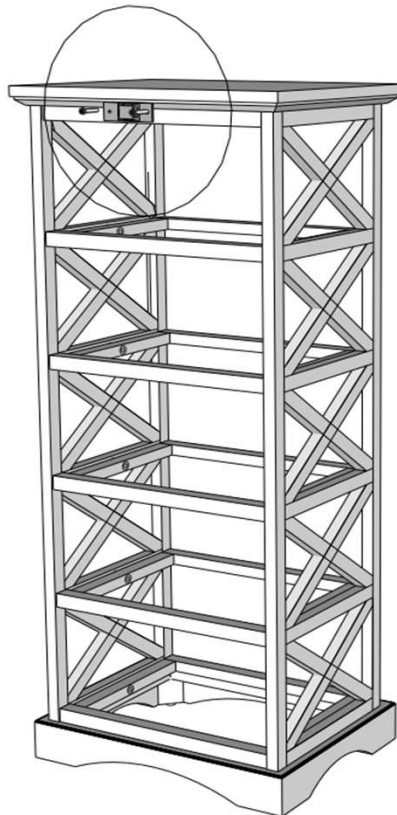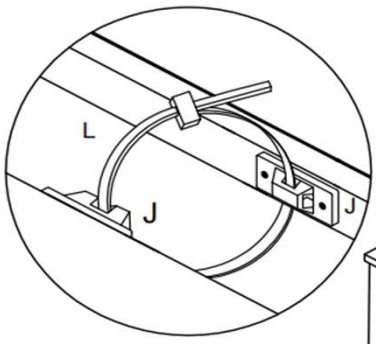

STEP 3

- A. PLACE THE 5 TIER TOWER SO THAT THE MOUNTING BRACKET (J) ON THE BACK OF BOOKCASE IS IN LINE WITH MOUNTING BRACKET (J) ON THE WALL.
- B. FEED THE ZIP TIE (L) THROUGH EACH MOUNTING BRACKET (J) AND SECURE IT.
- C. CHECK TO MAKE SURE THE ZIP TIE (L) IS SECURELY TIGHTENED AND LOCKED TO MOUNTING BRACKETS (J).