

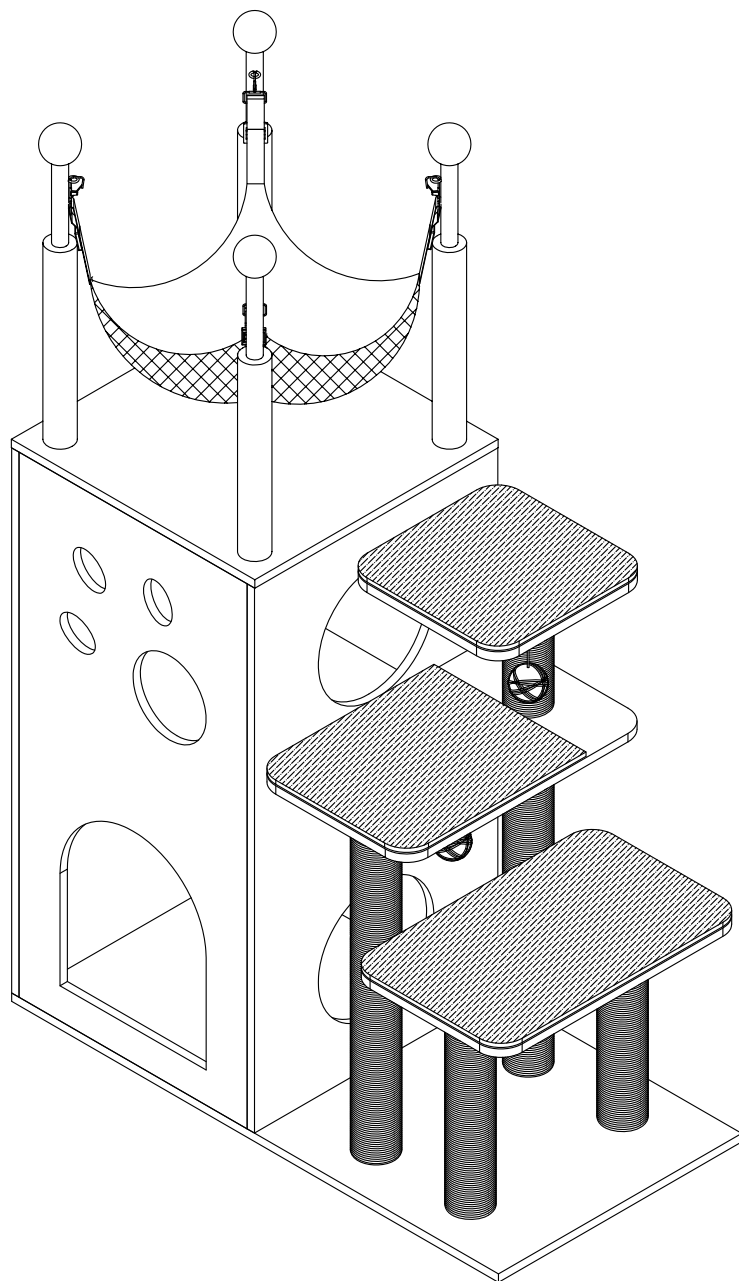
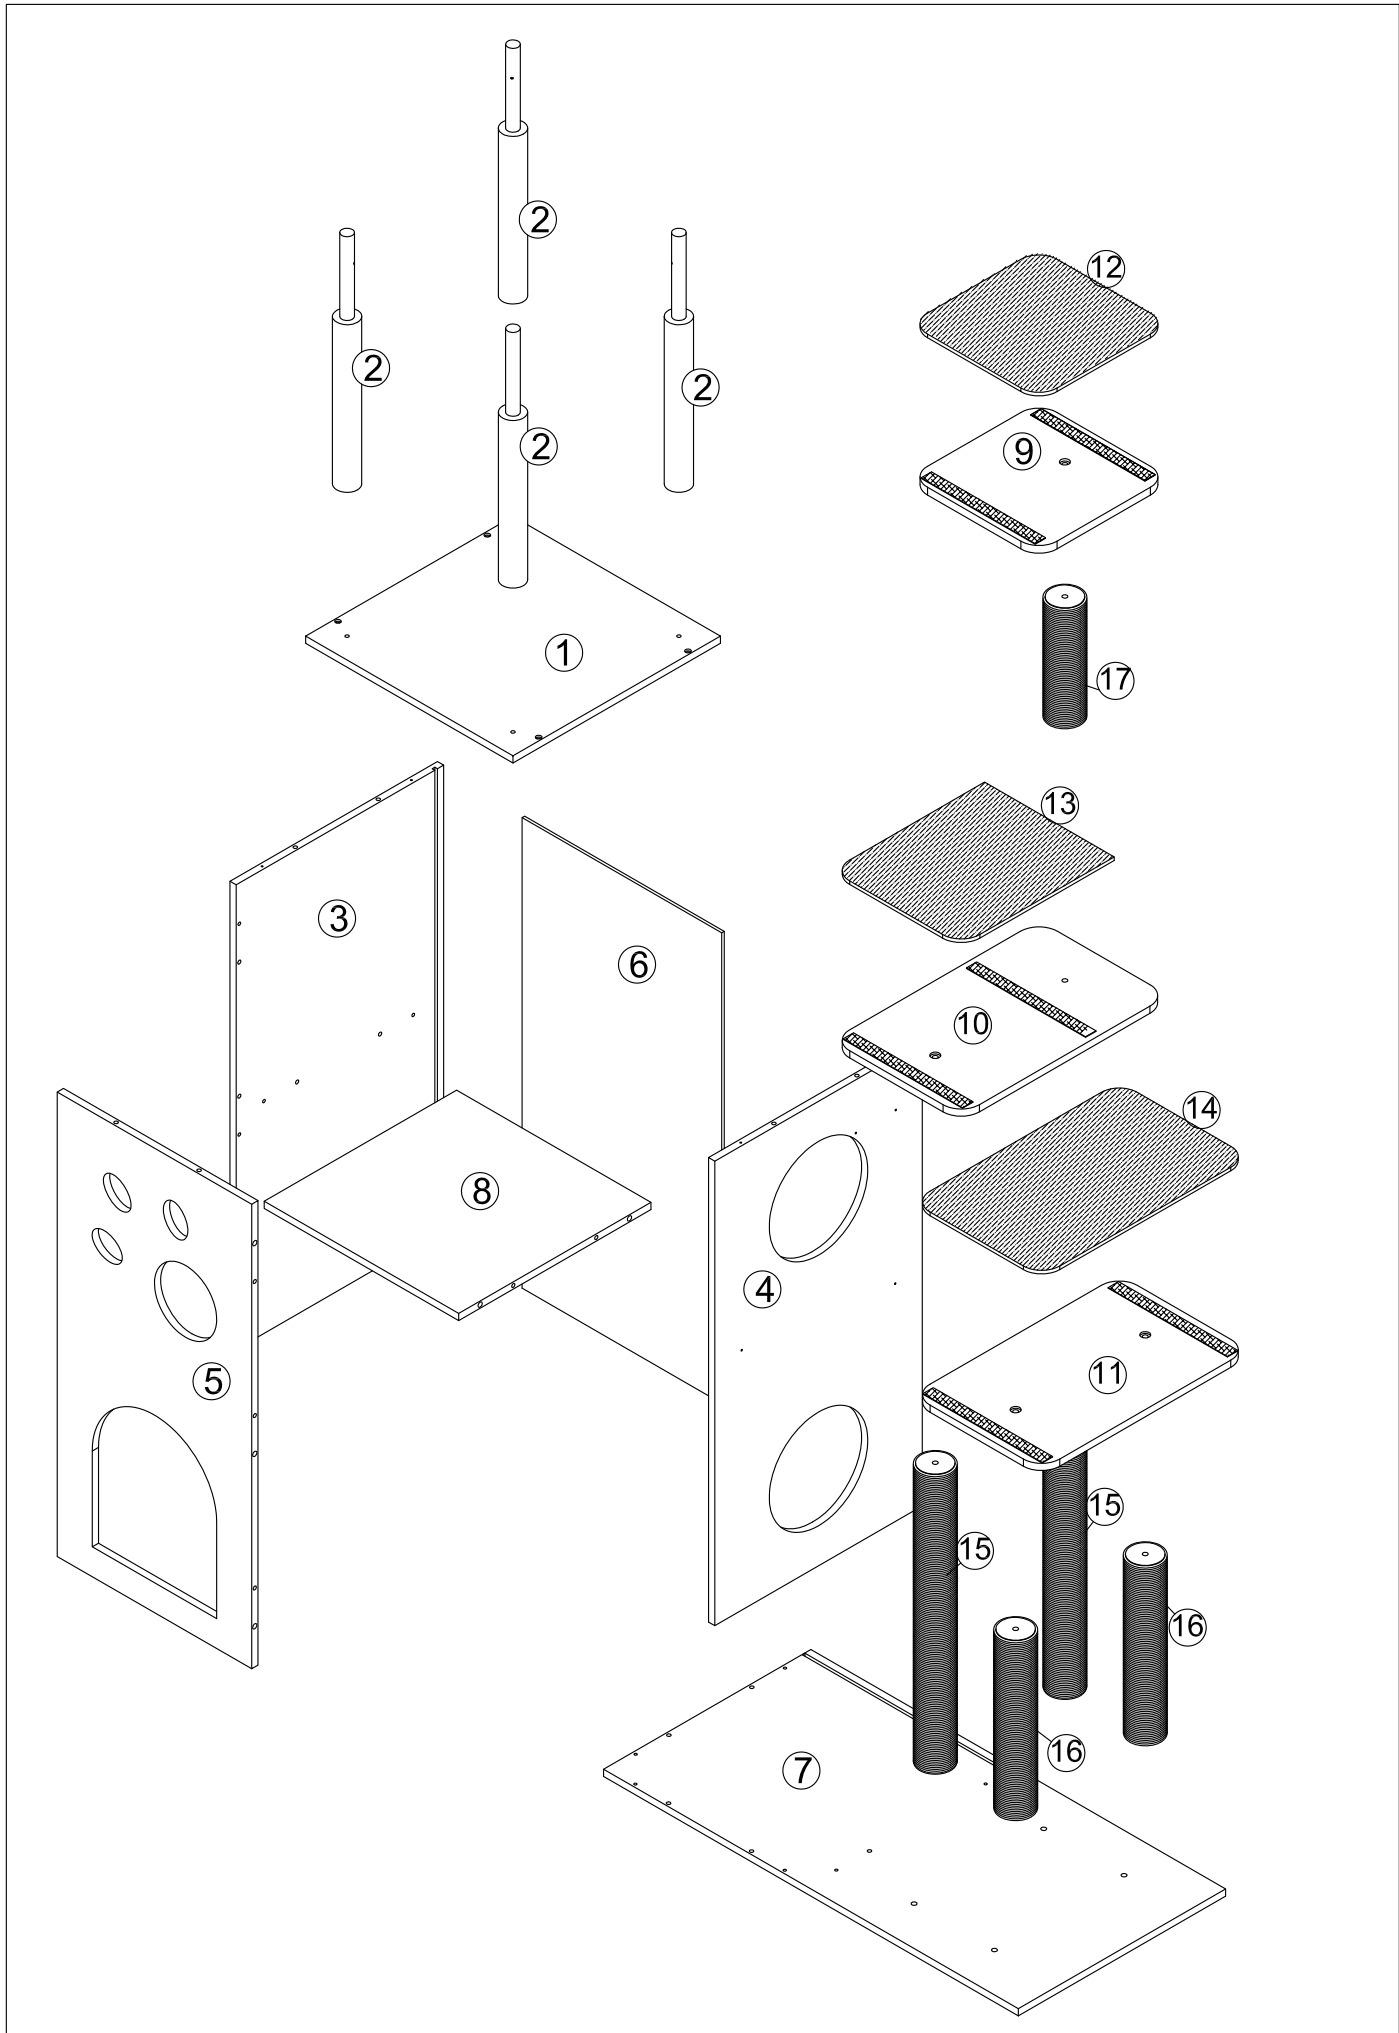
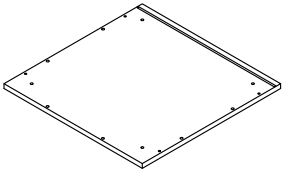
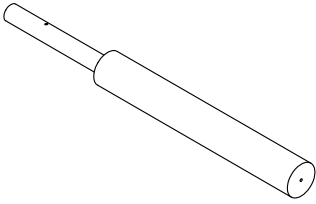
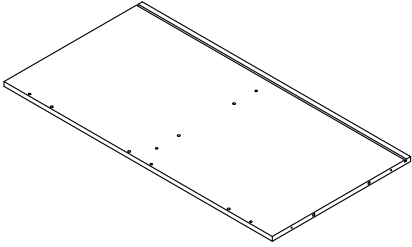
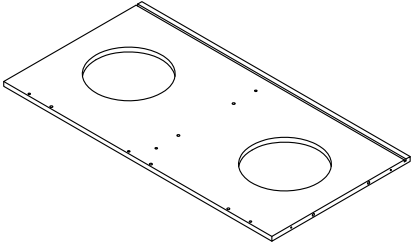
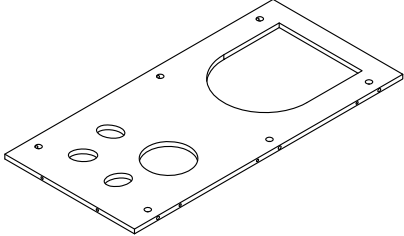
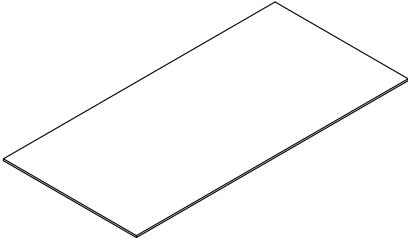
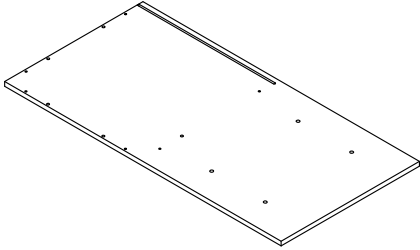
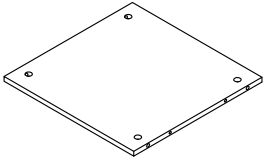
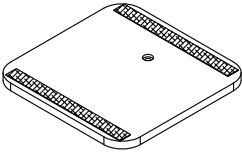
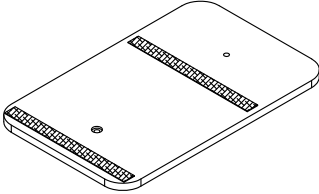
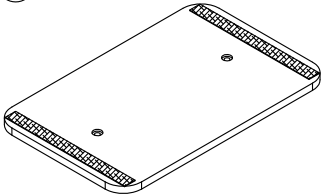
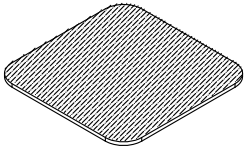
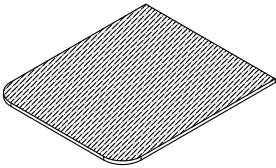
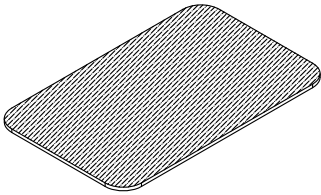


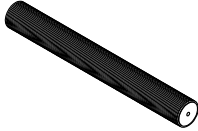


PTA002NL



①x1 	②x4 	③x1 	
④x1 	⑤x1 		
⑥x1 	⑦x1 		
⑧x1 	⑨x1 	⑩x1 	⑪x1 
⑫x1 	⑬x1 	⑭x1 	⑮x2  L500mm
⑯x2  L300mm	⑰x1  L200mm		

A X10(+1)



Ø6x35mm

B X10(+1)




Ø15x10mm

C X22(+2)



Ø6x30mm

D X12(+1)



Ø4x35mm

E X4




F X4



Ø5x40mm

G X1



M4mm

H X6(+1)




I X6(+1)




Ø3x16mm

J X8



Ø8x40mm


K X6



L X4



M X1




Ø8x70mm

N X6(+1)



O X4




P X8(+1)



Ø3x12mm

Q X2

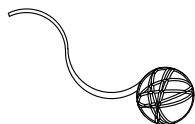


R X2



Ø6x30mm

S X1

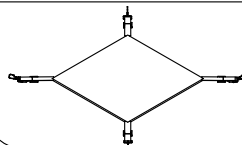


T X2






Ø4x14mm

U X2





V X4



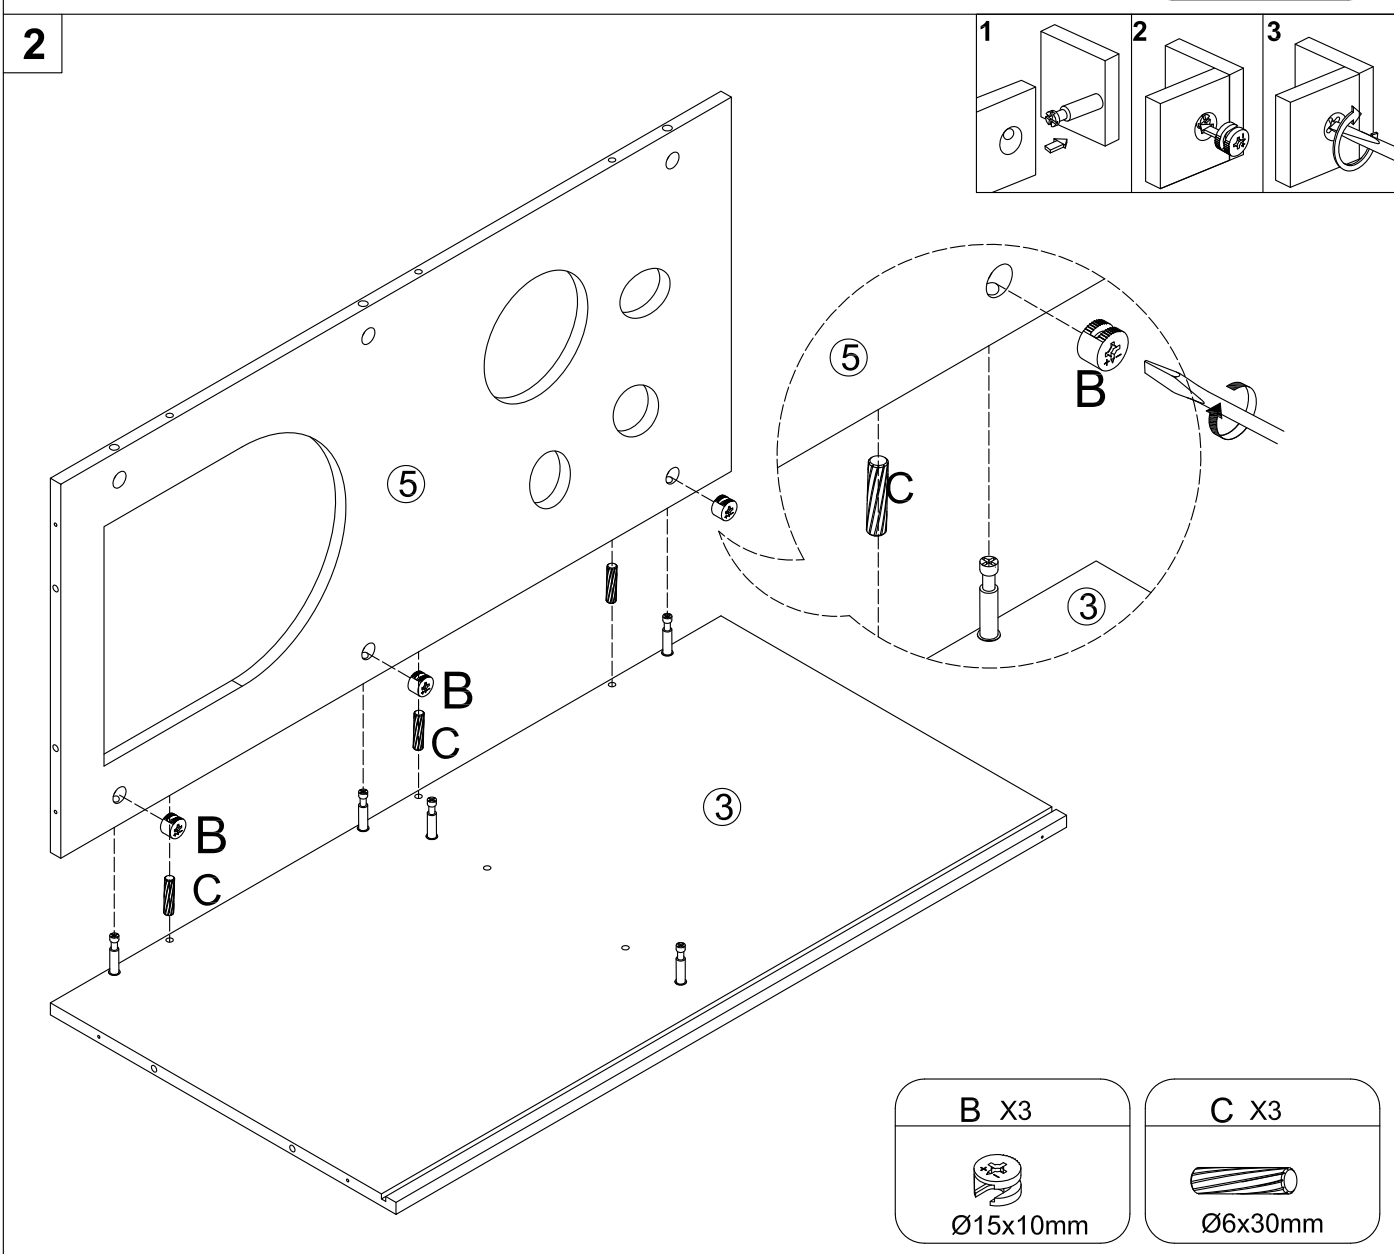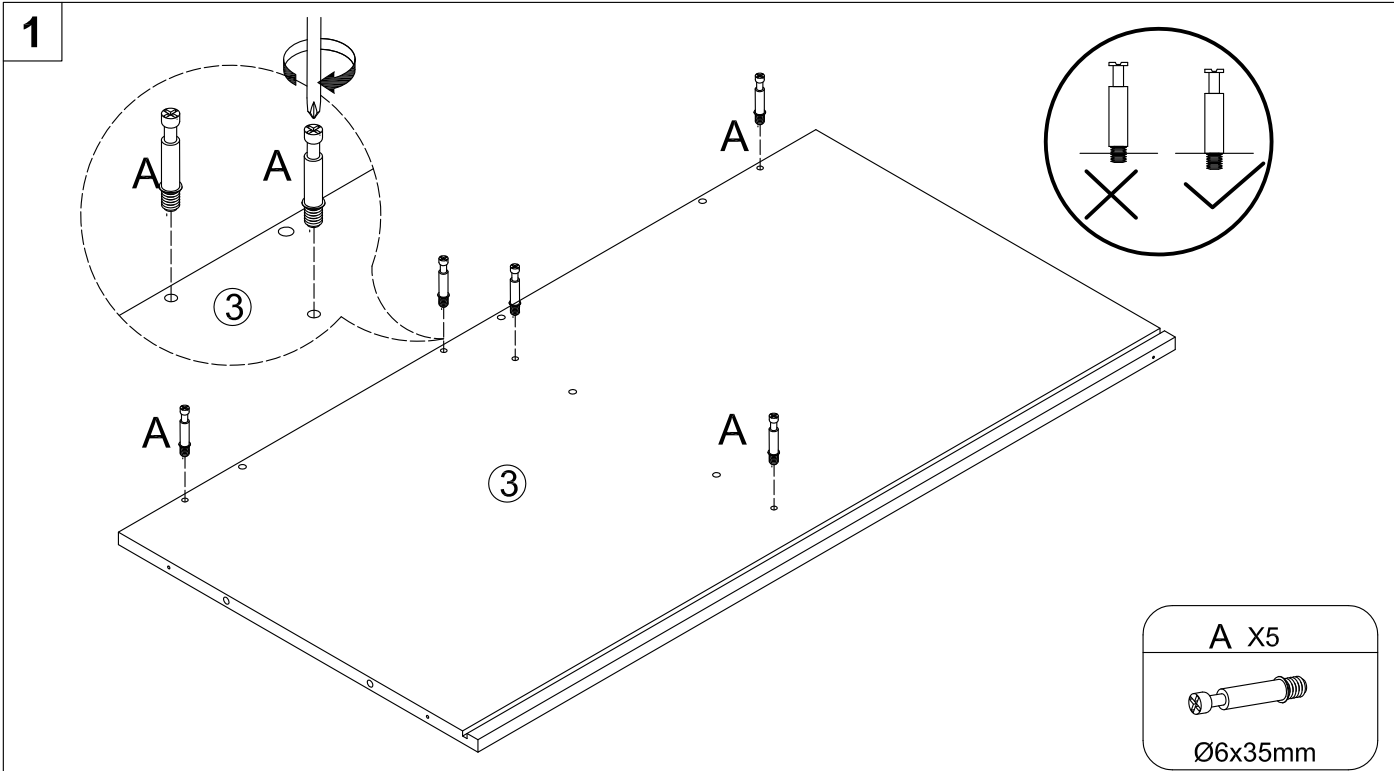

3

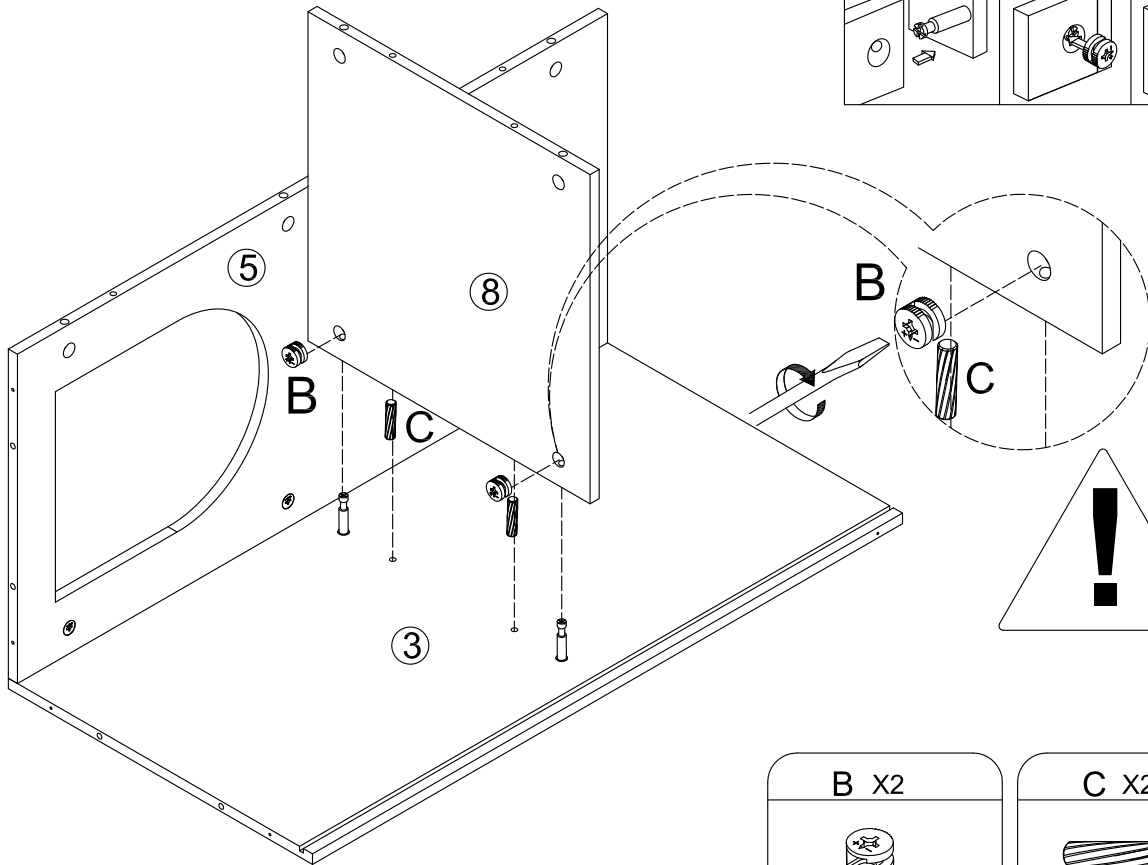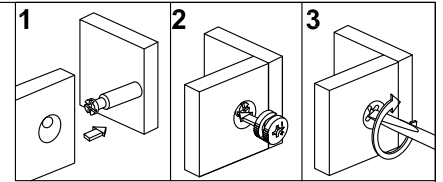

B X2




C X2



Ø6x30mm



4

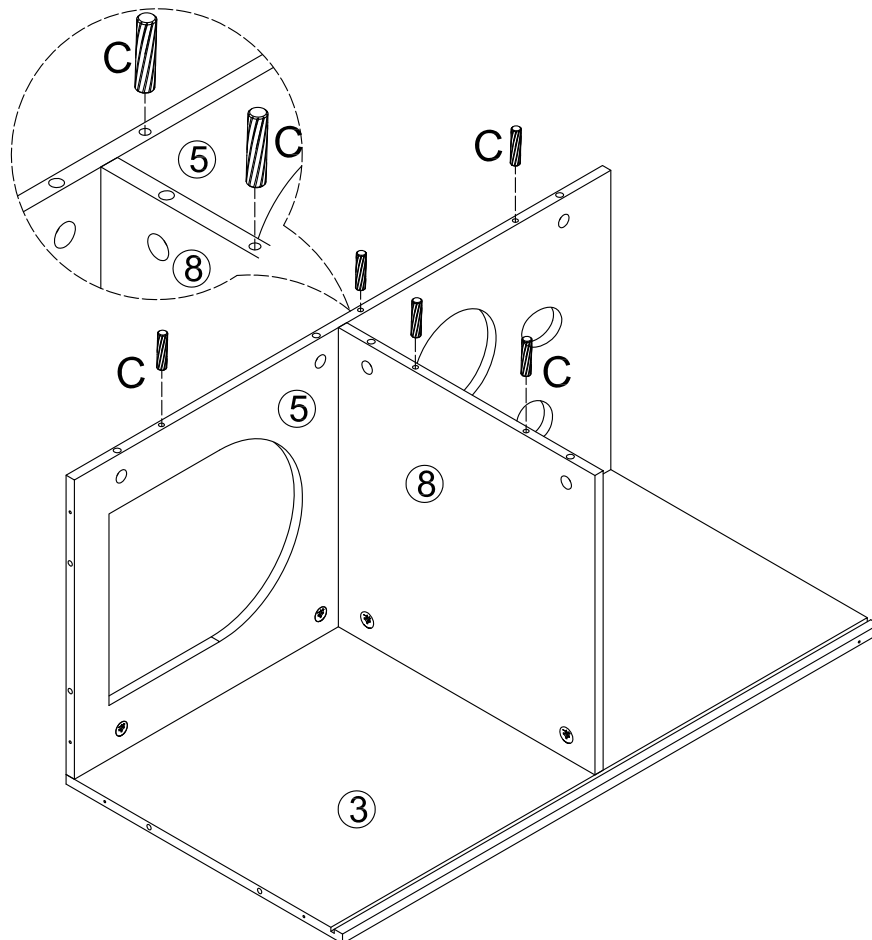



C X5



Ø6x30mm

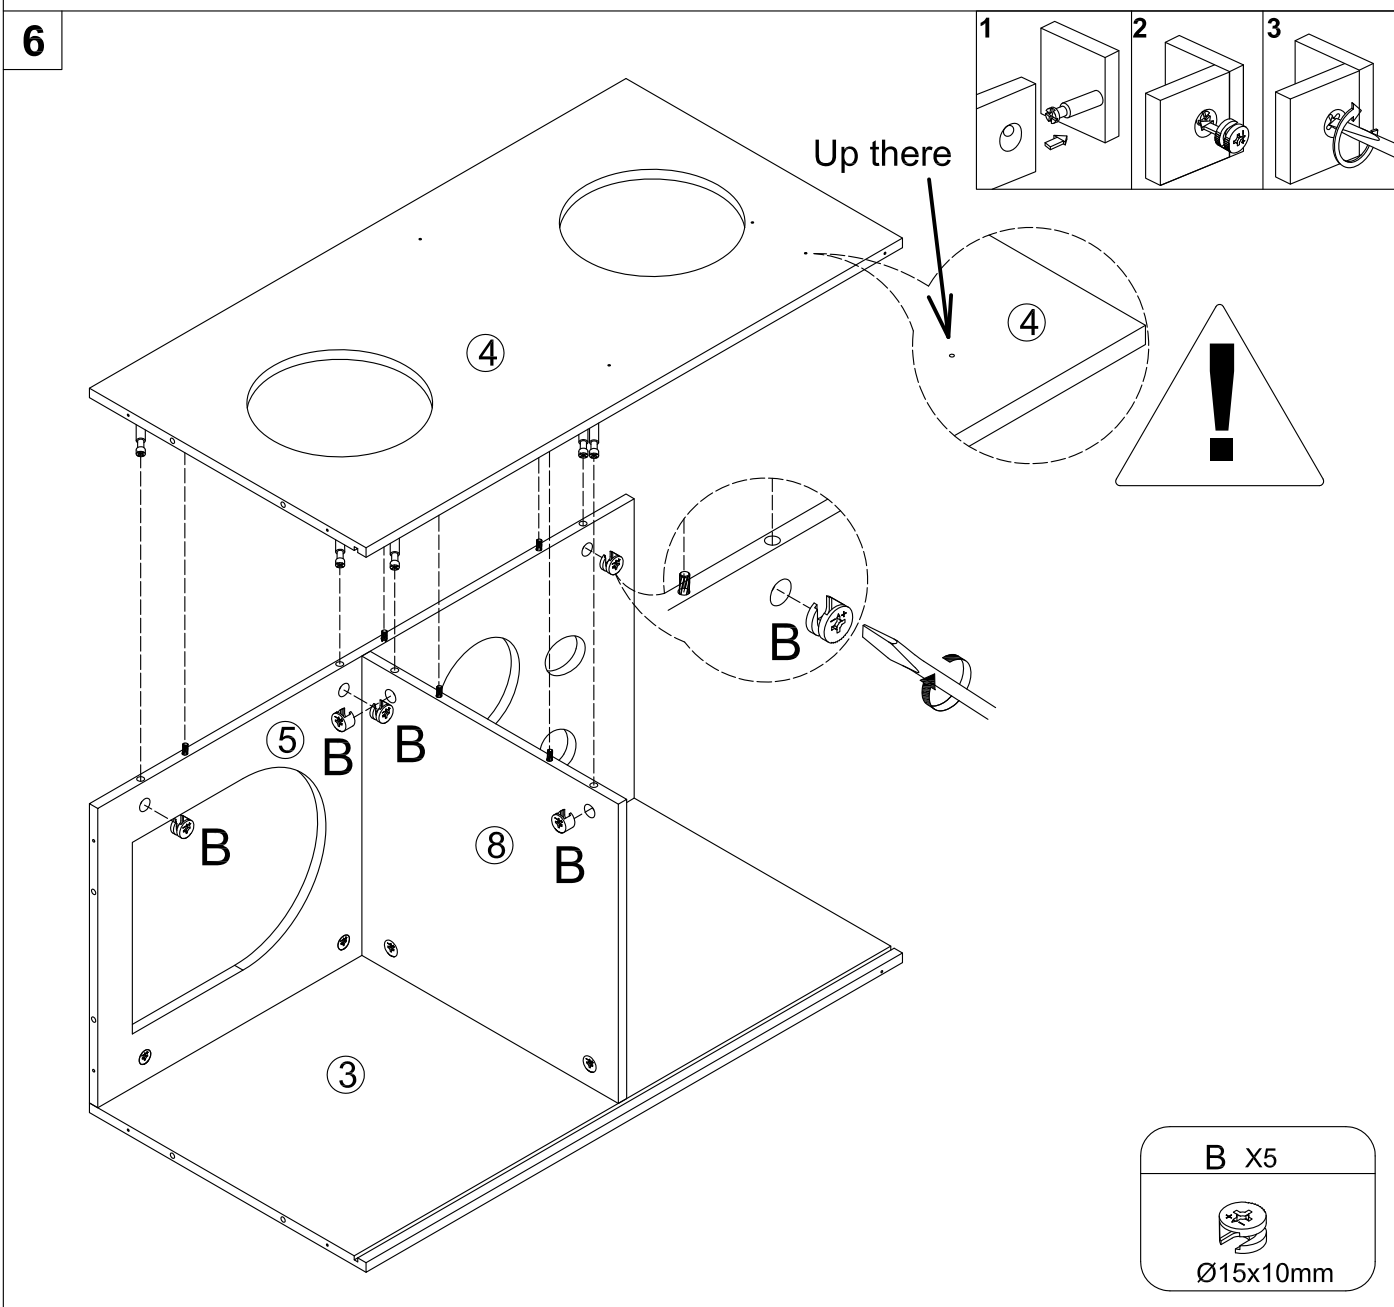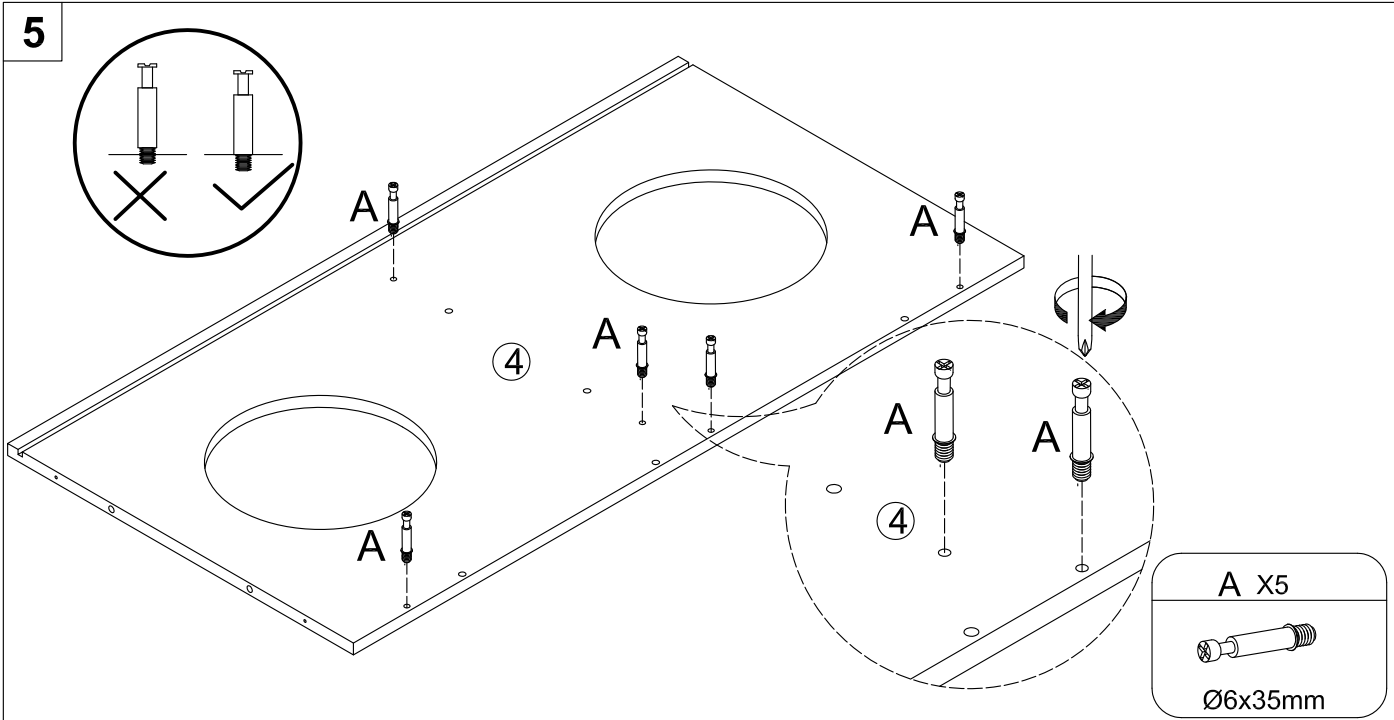

7

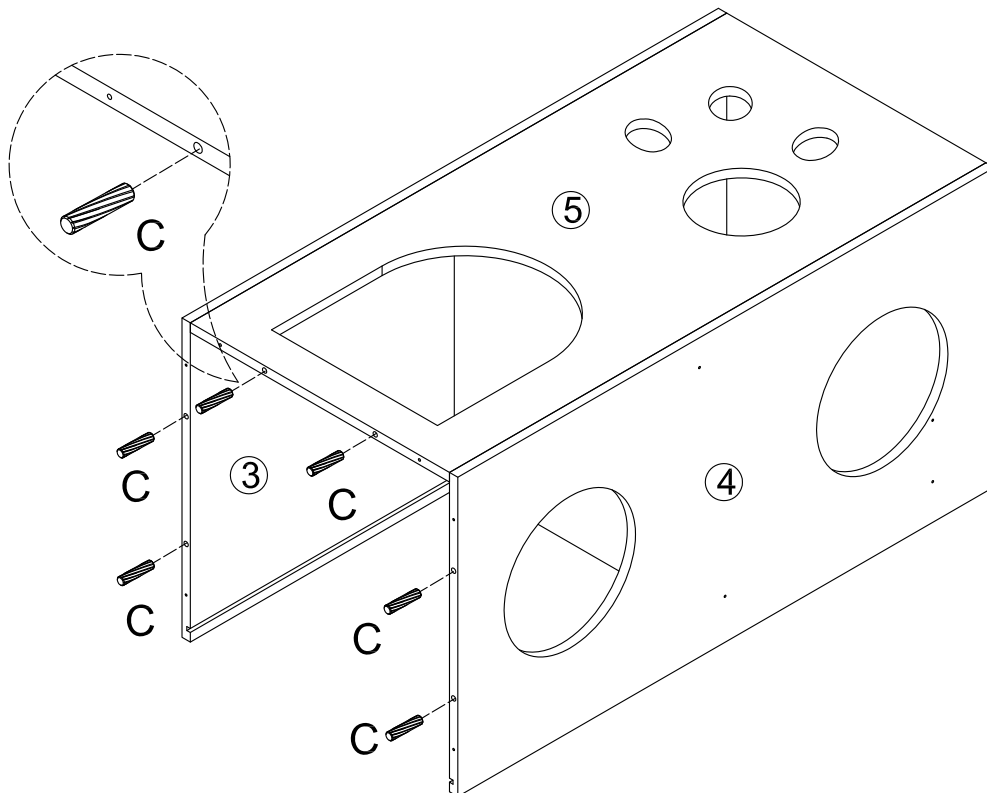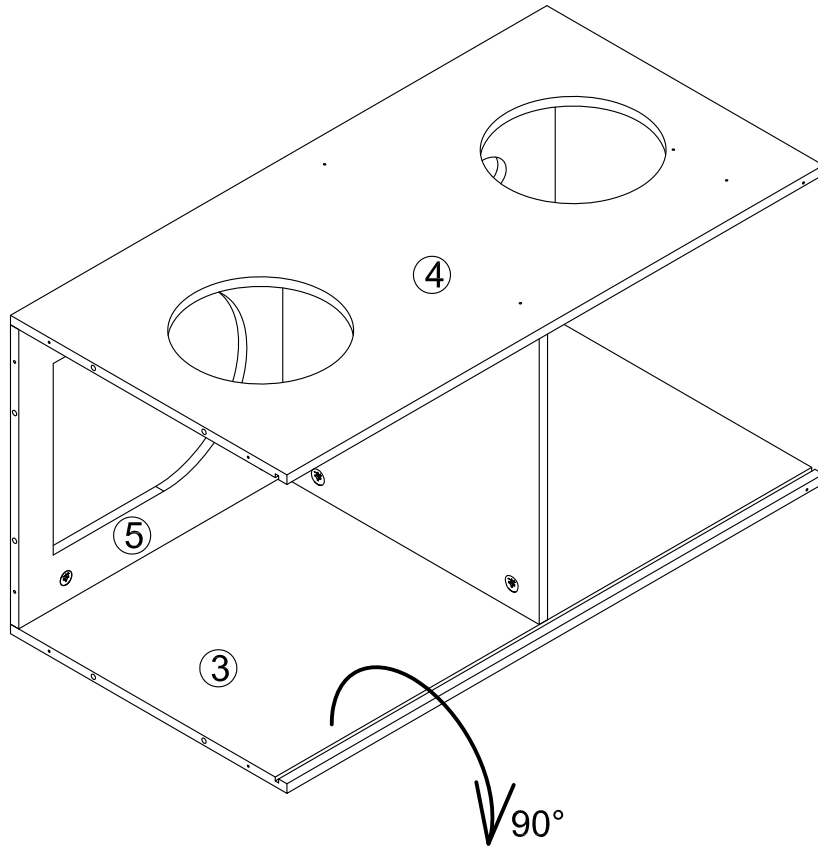


C X6




Ø6x30mm

8



8

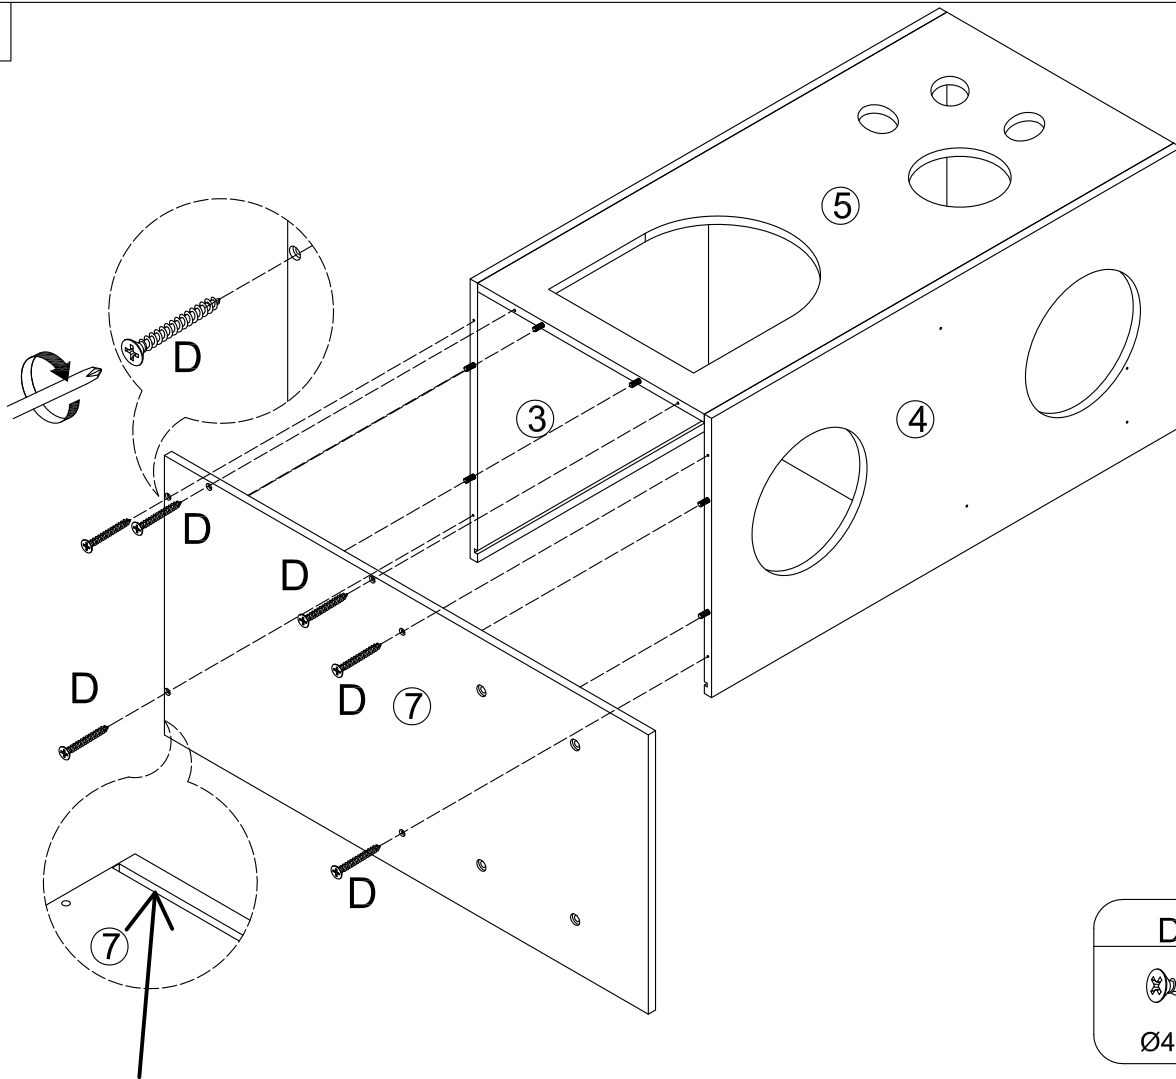


9



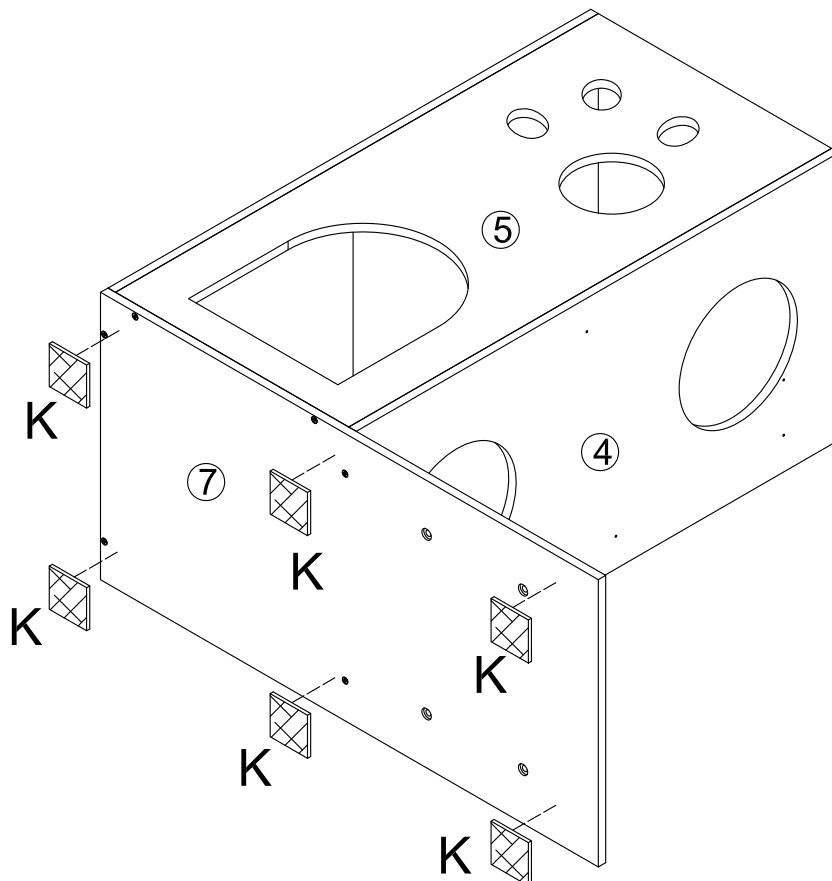





10

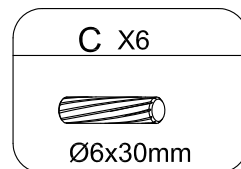
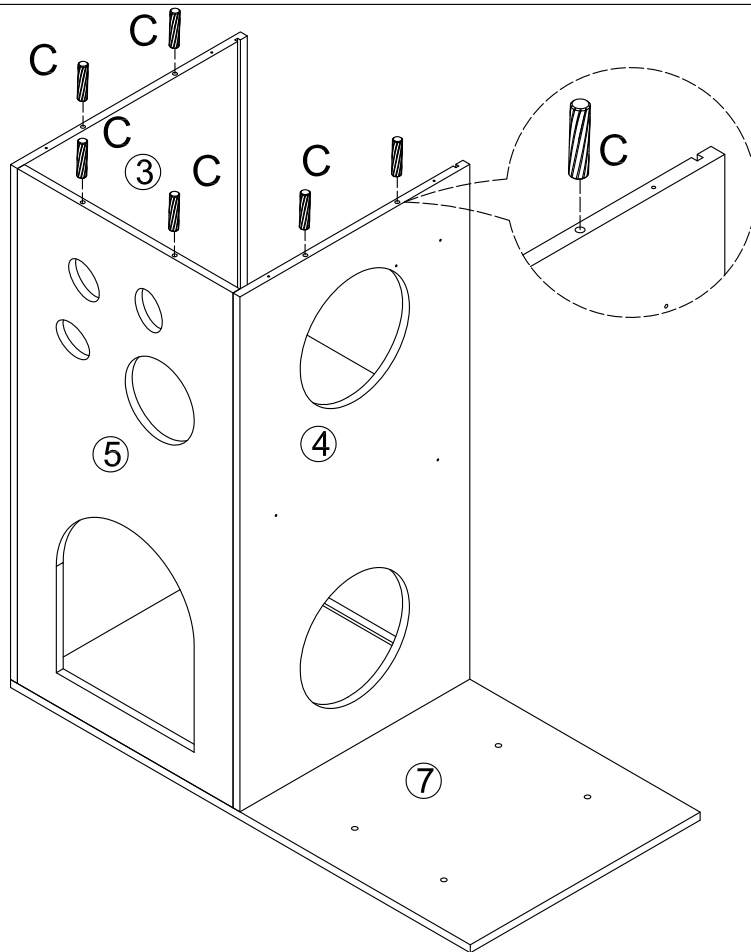






11

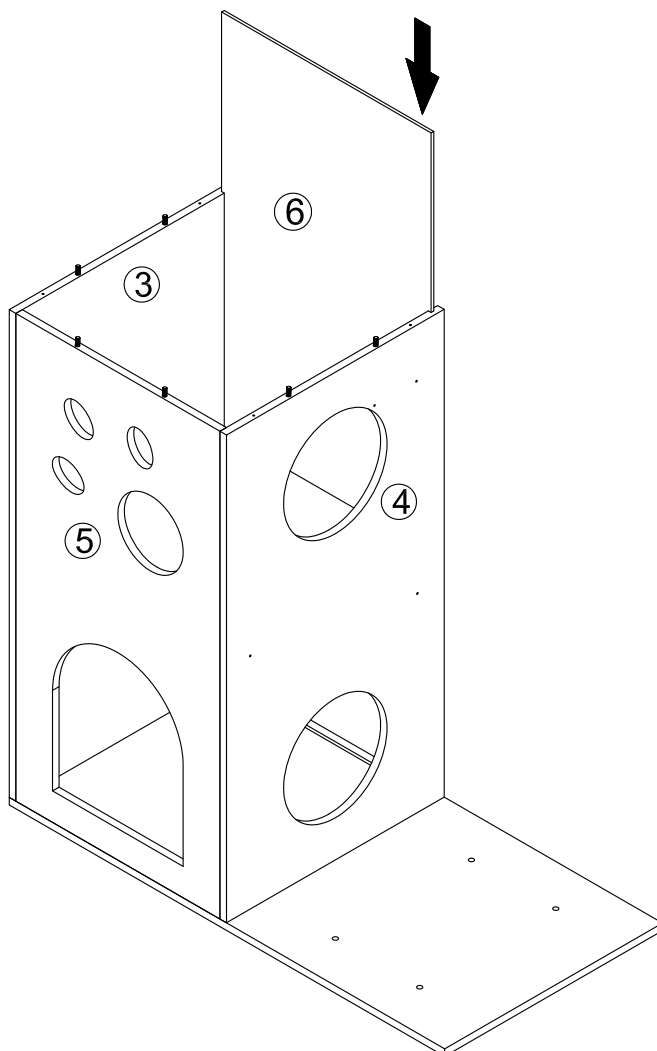

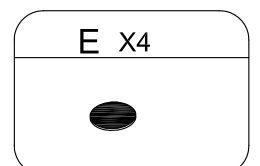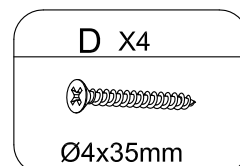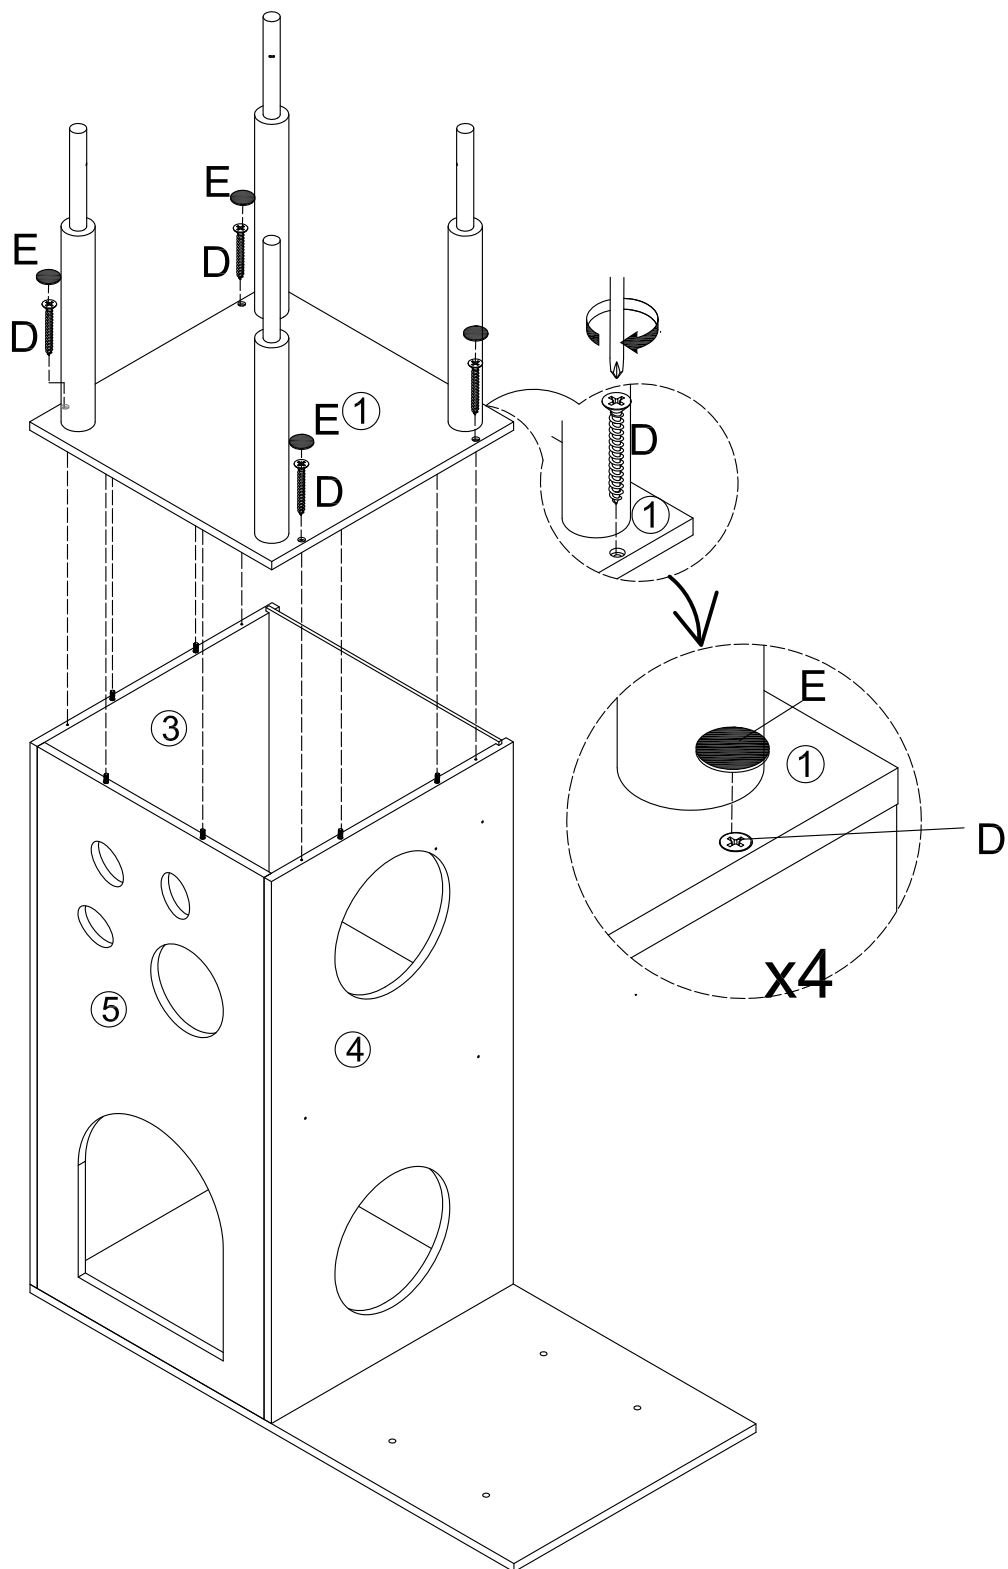


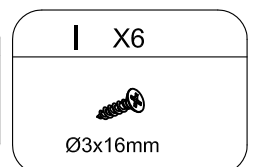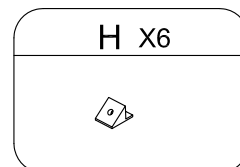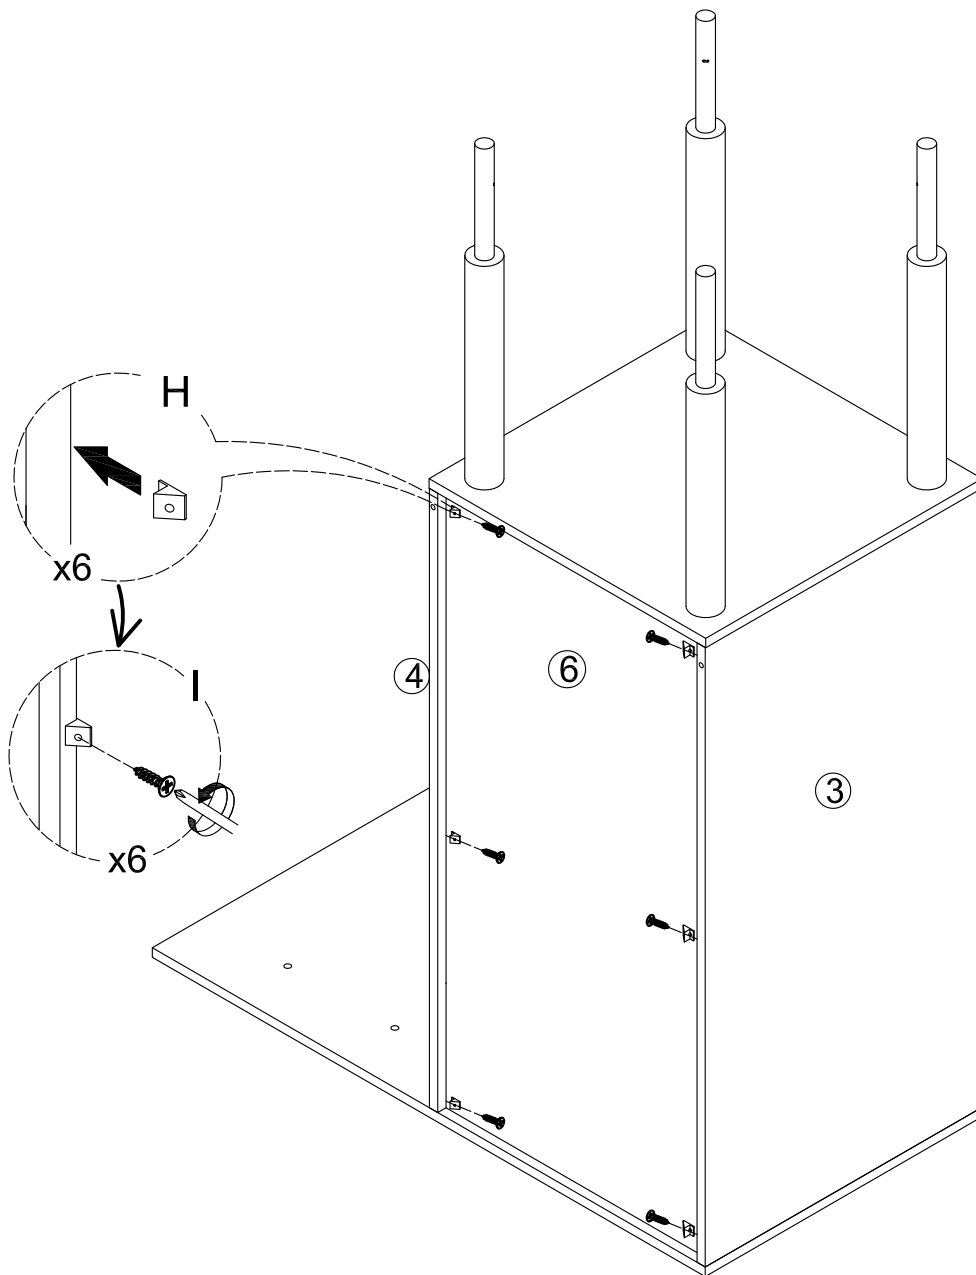

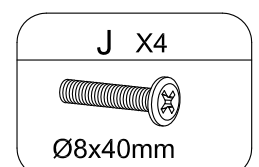
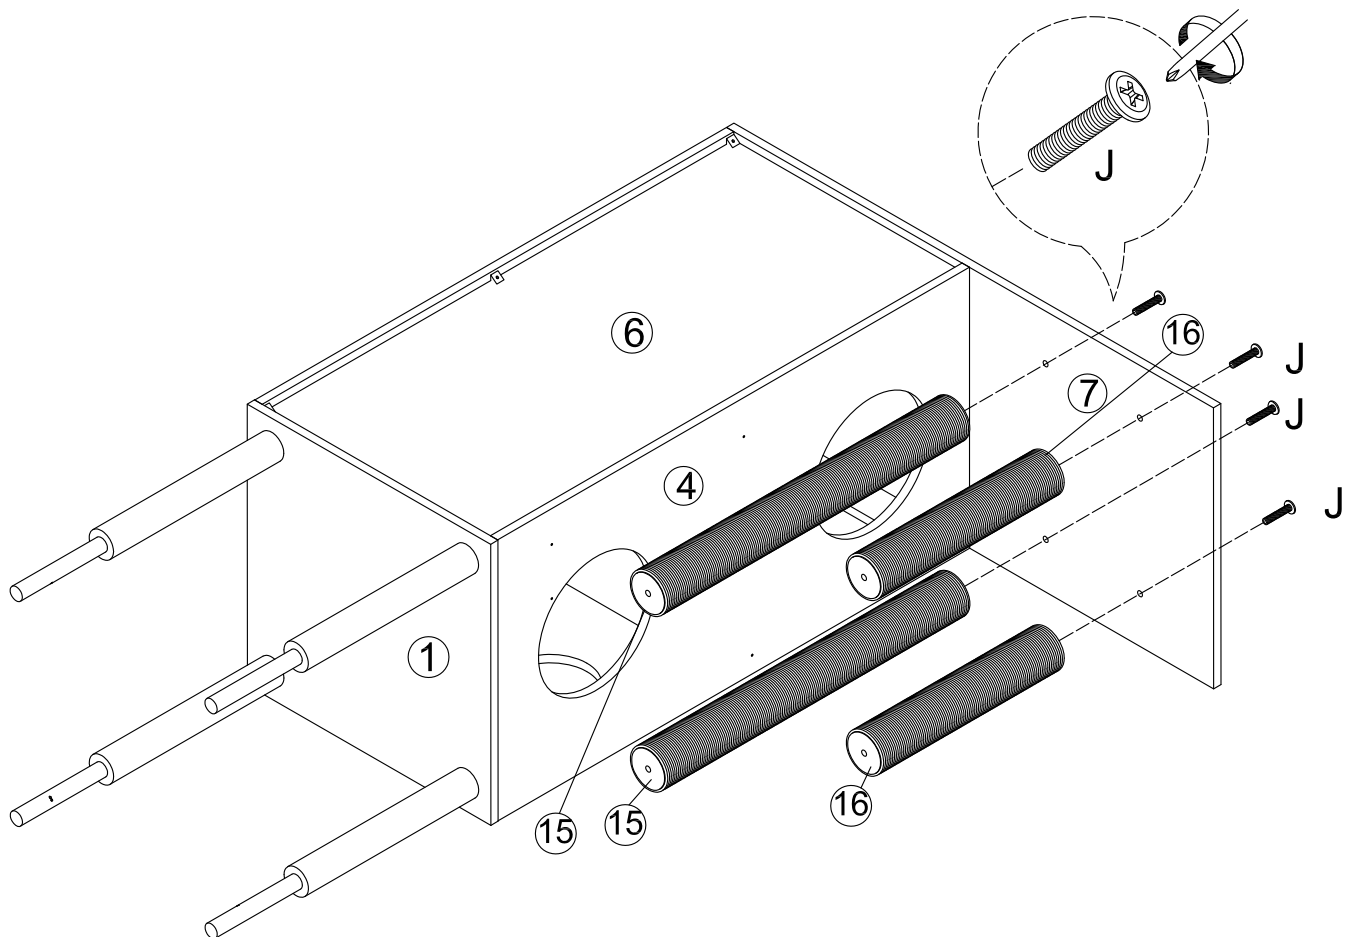


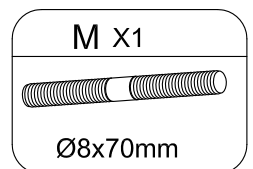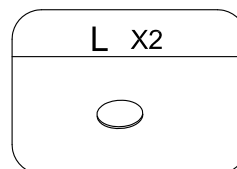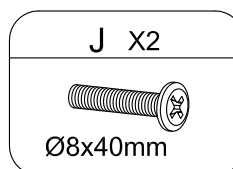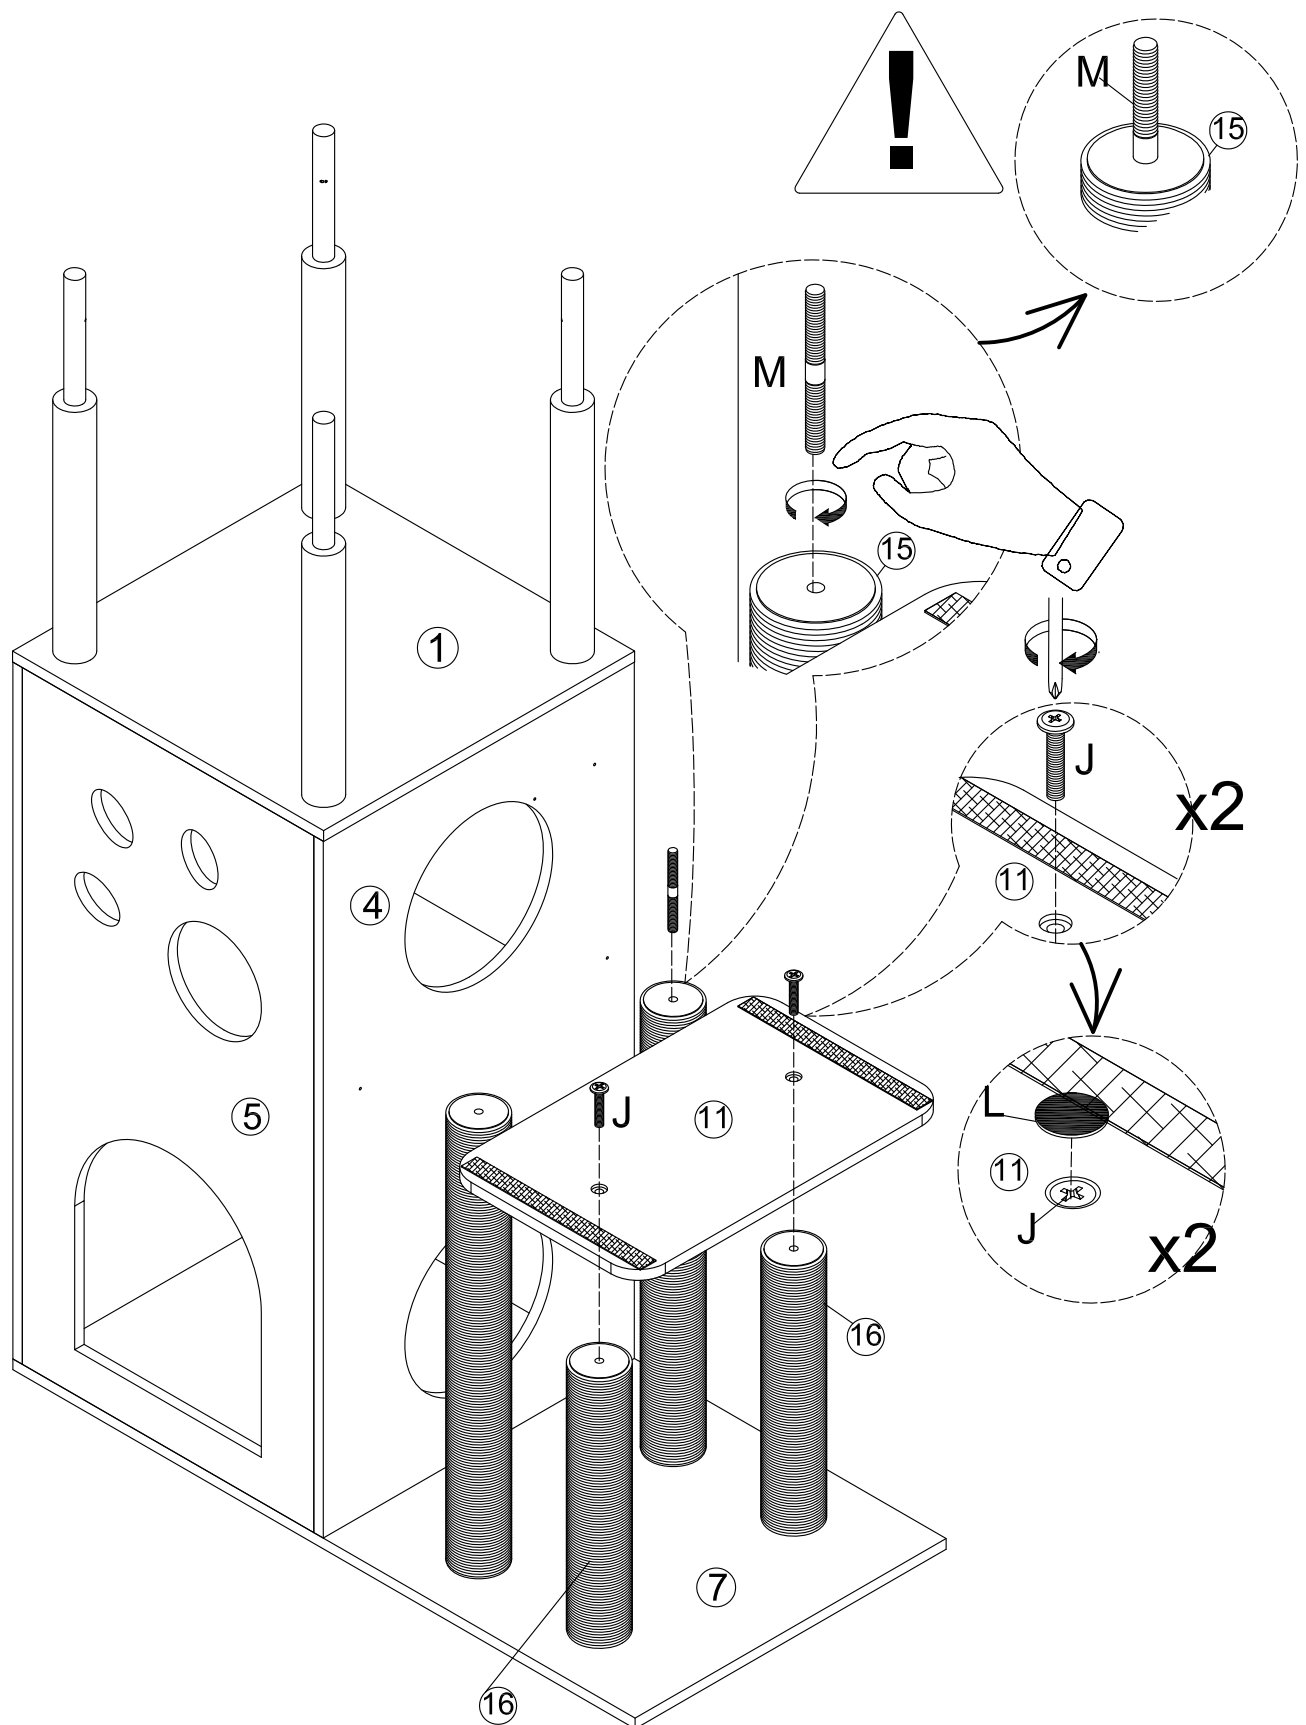

(1) Rope Q passes through hook N

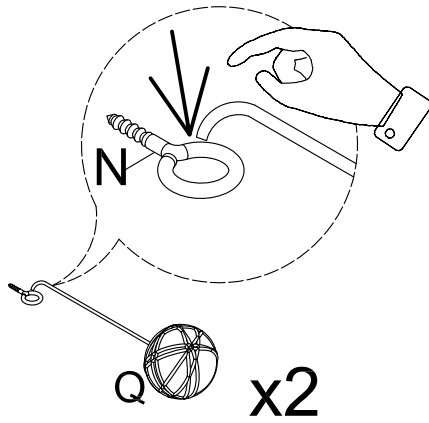

(2) The rope is knotted according to the actual needs

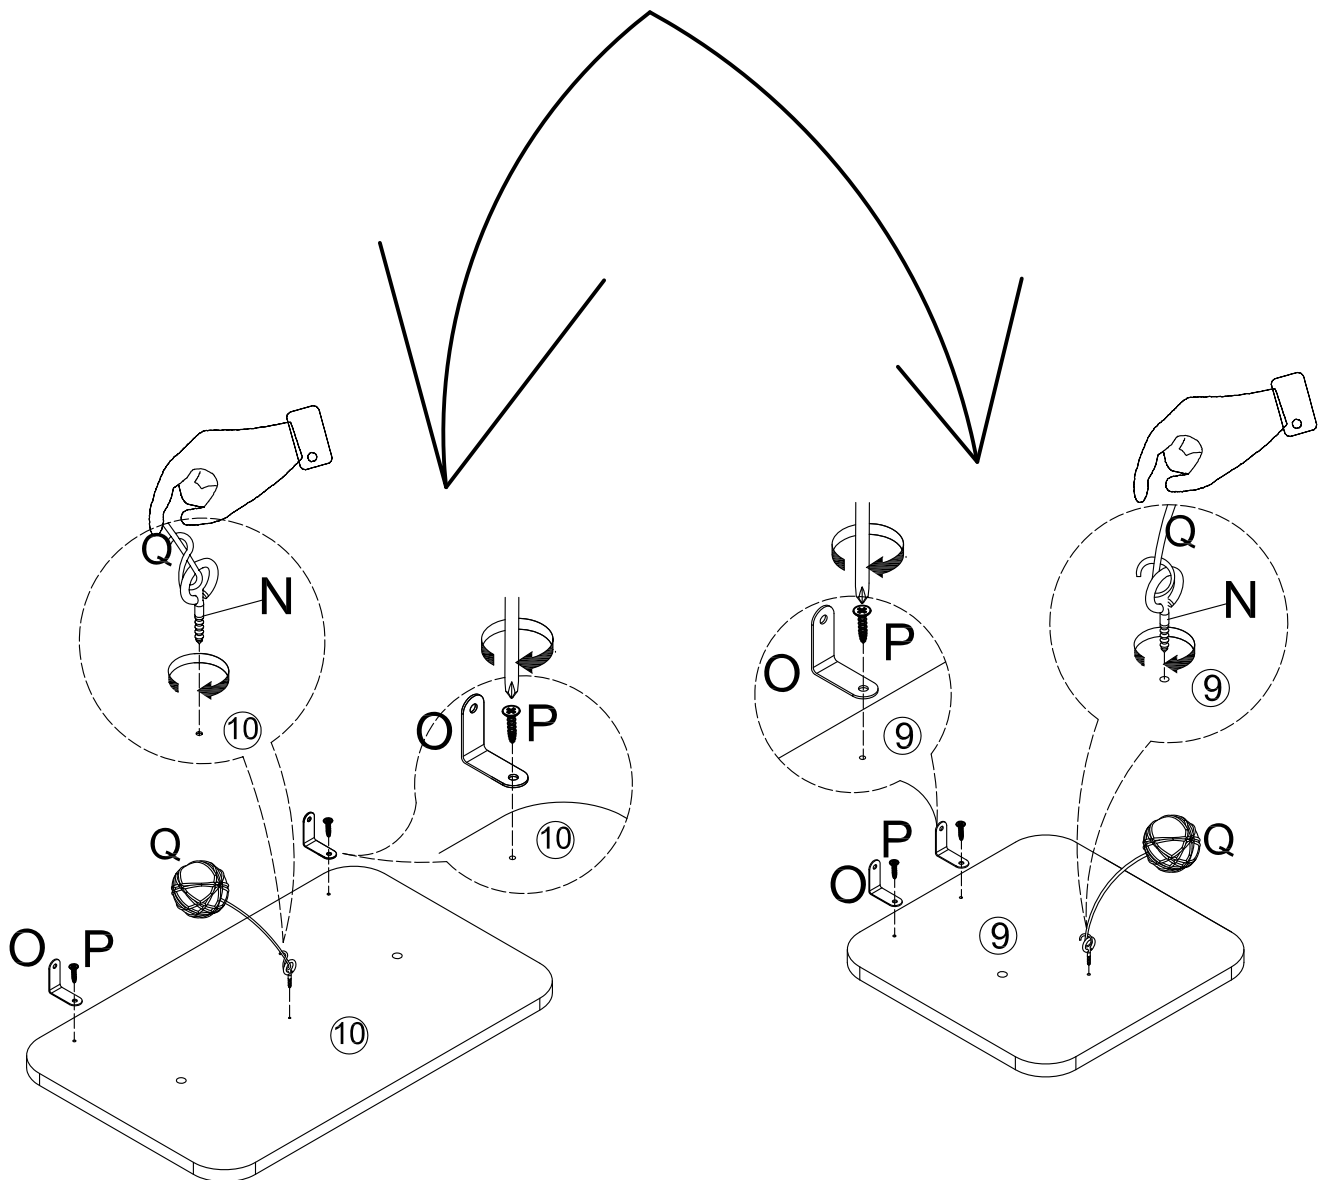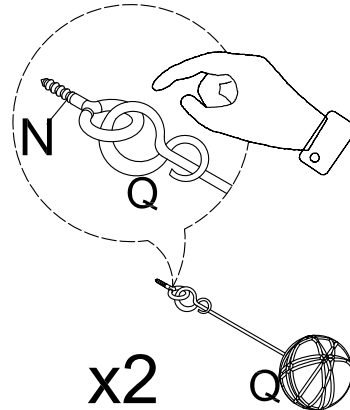

N x2



O x4







P x4




Ø3x12mm

Q x2



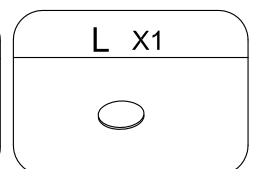
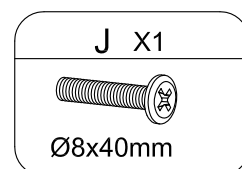
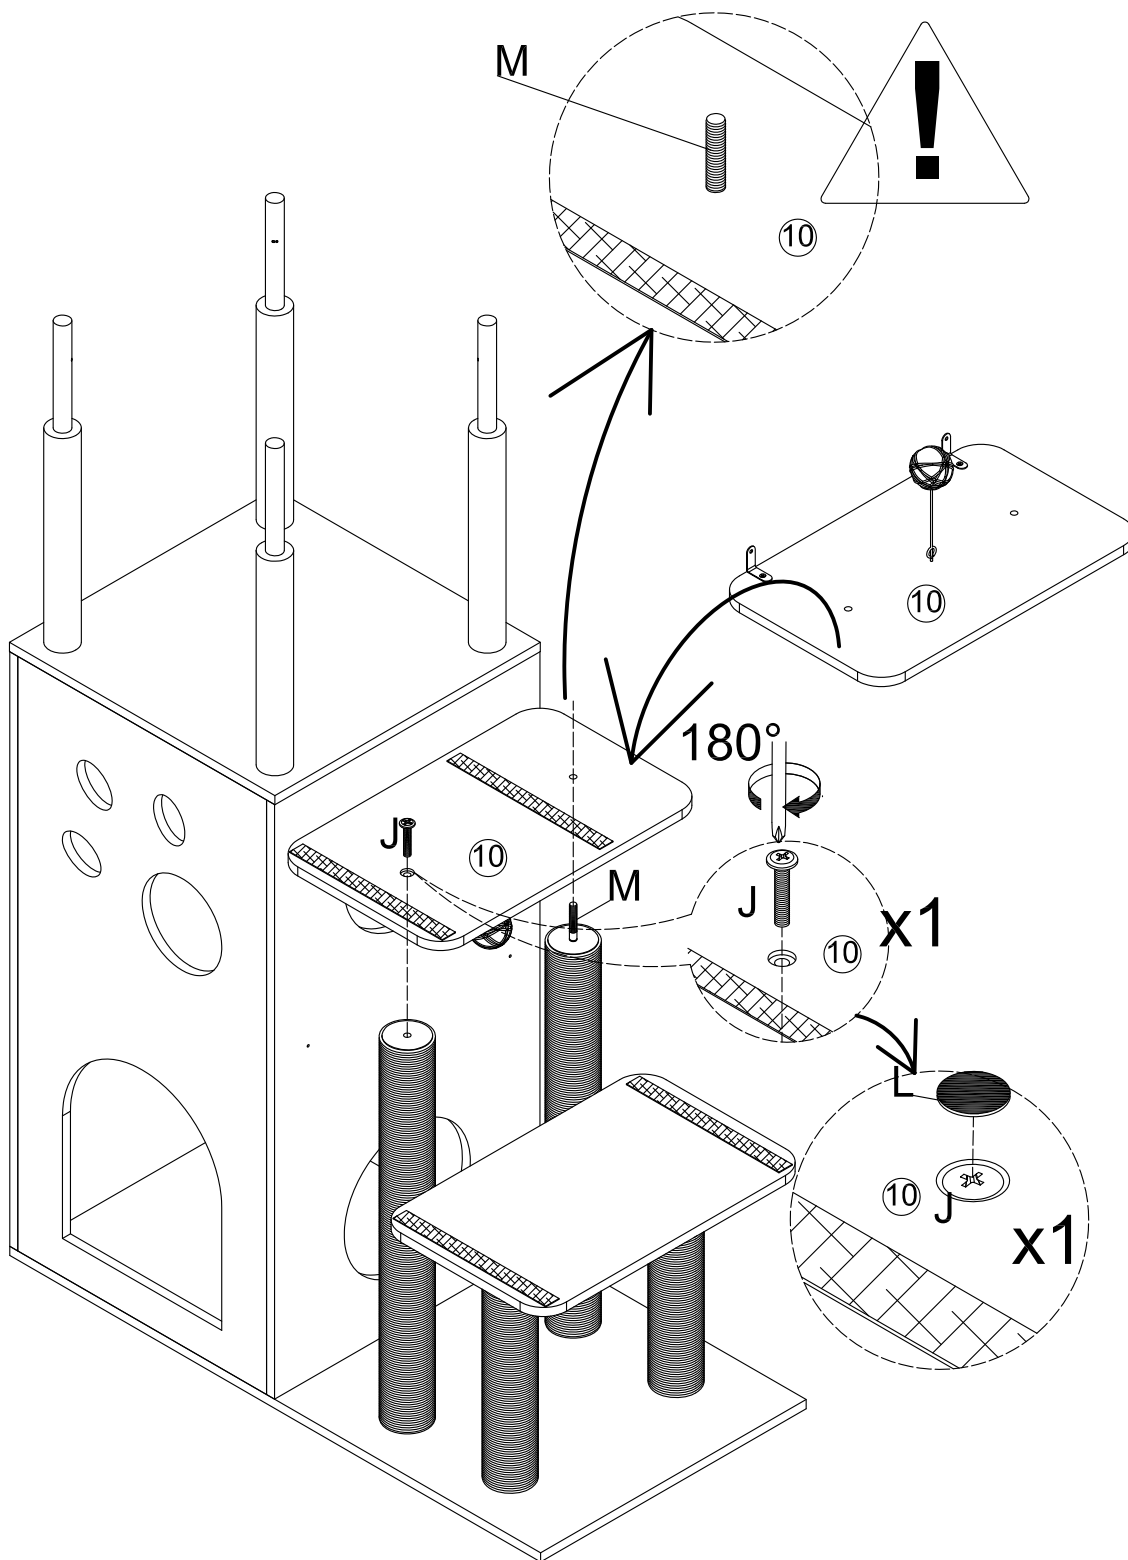




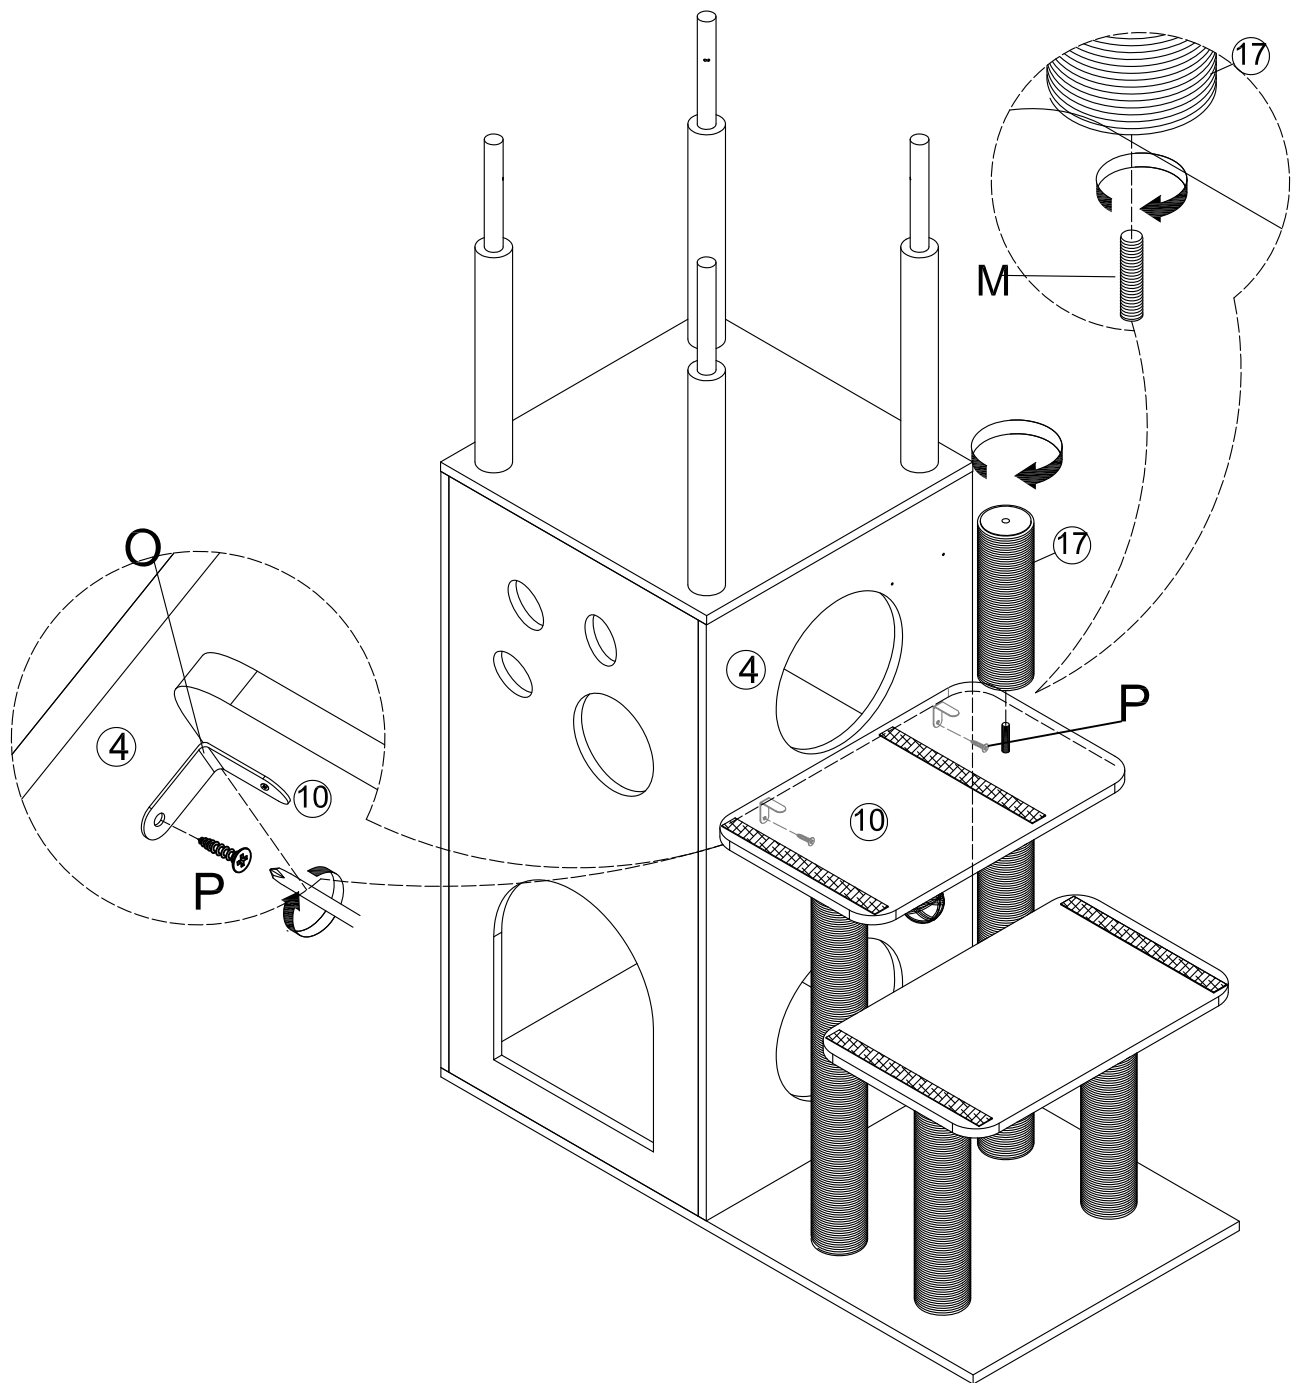



P X2



Ø3x12mm

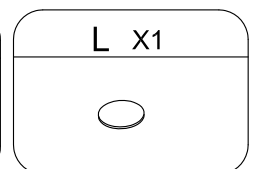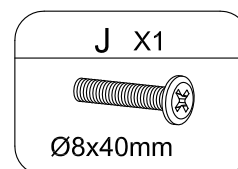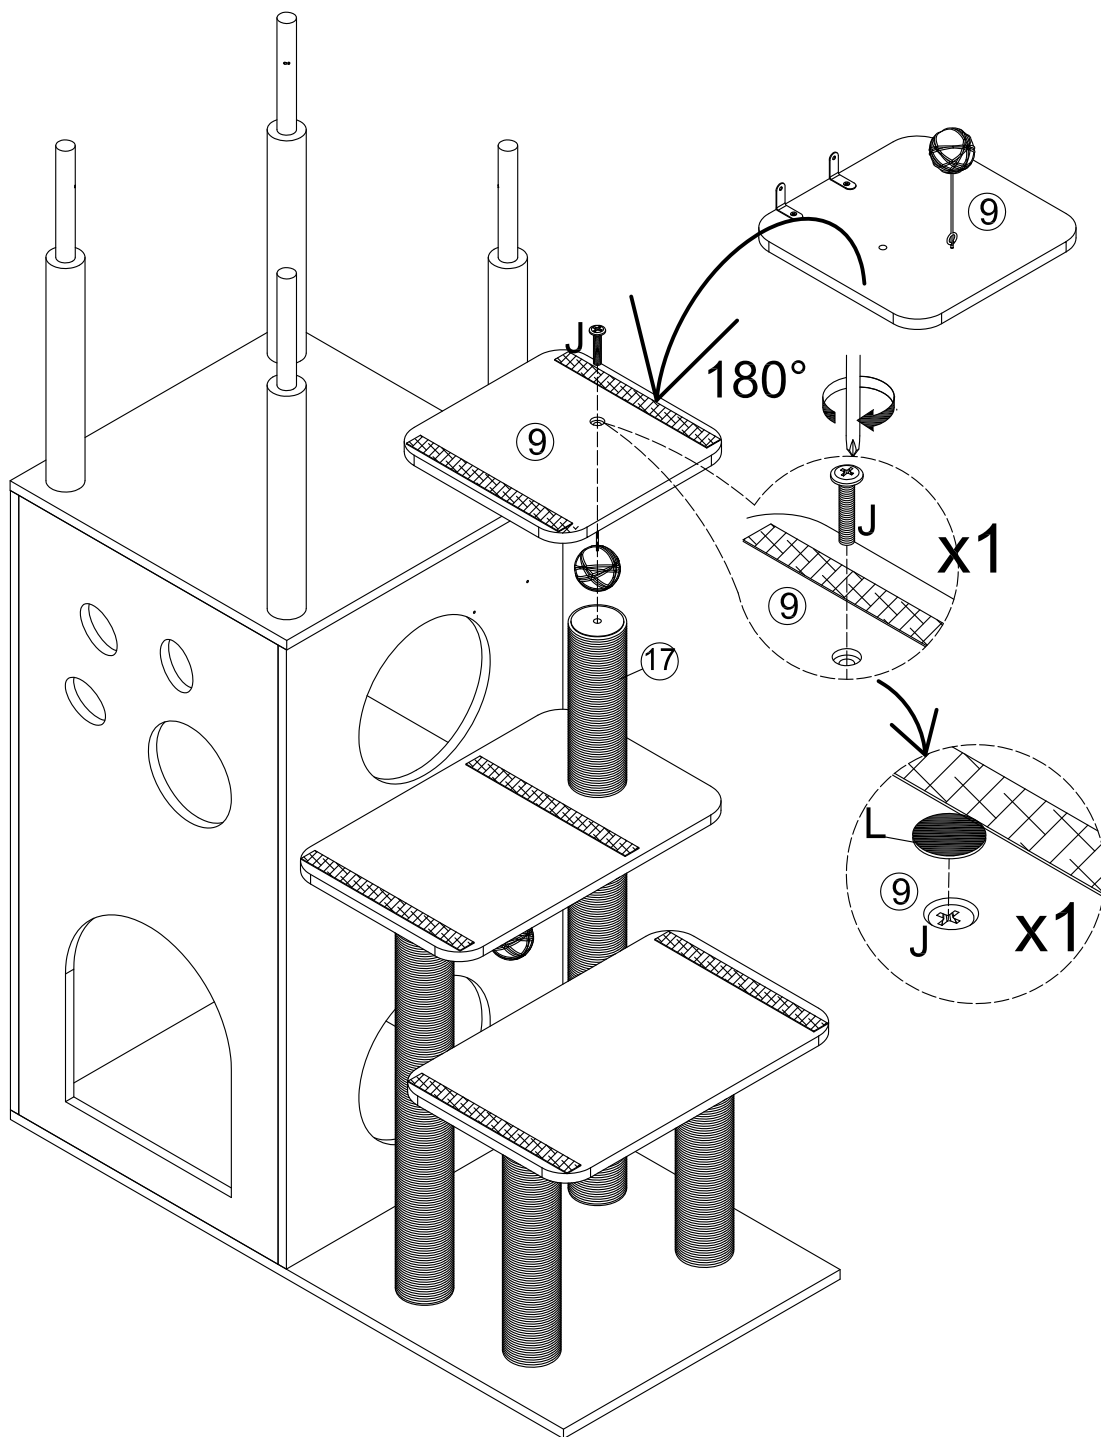

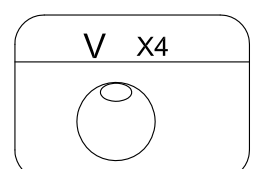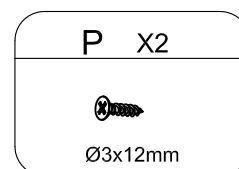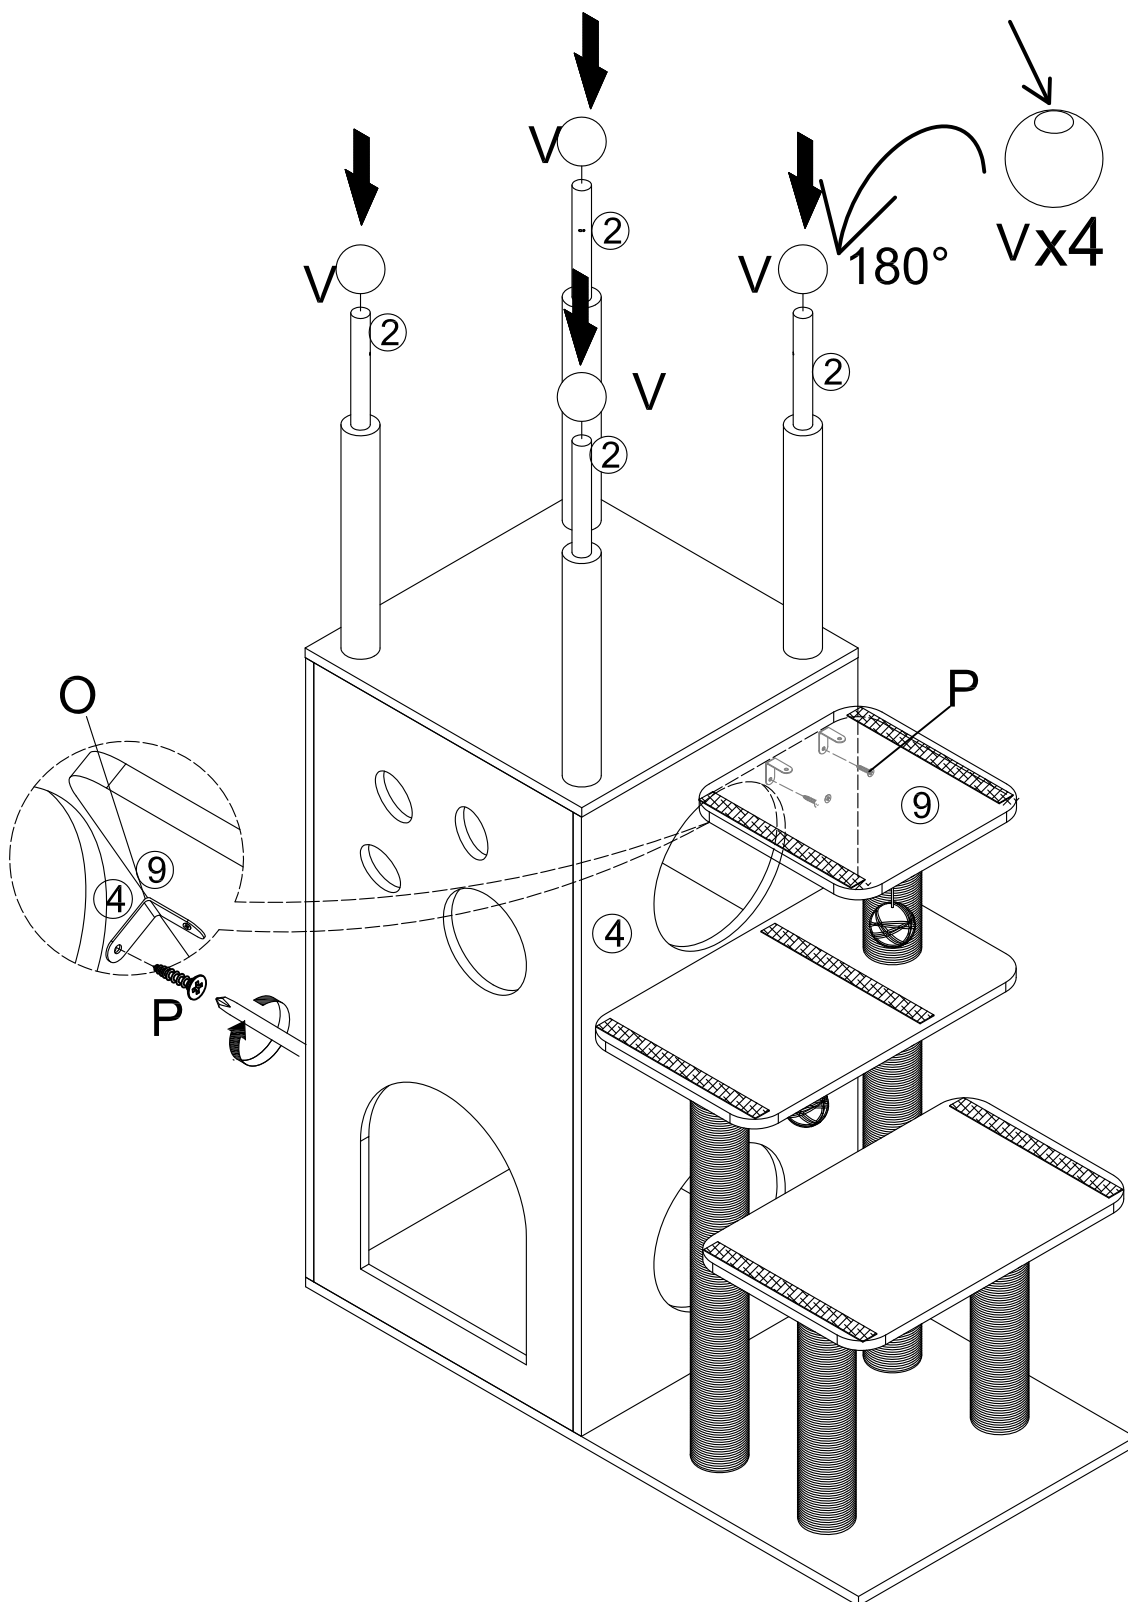

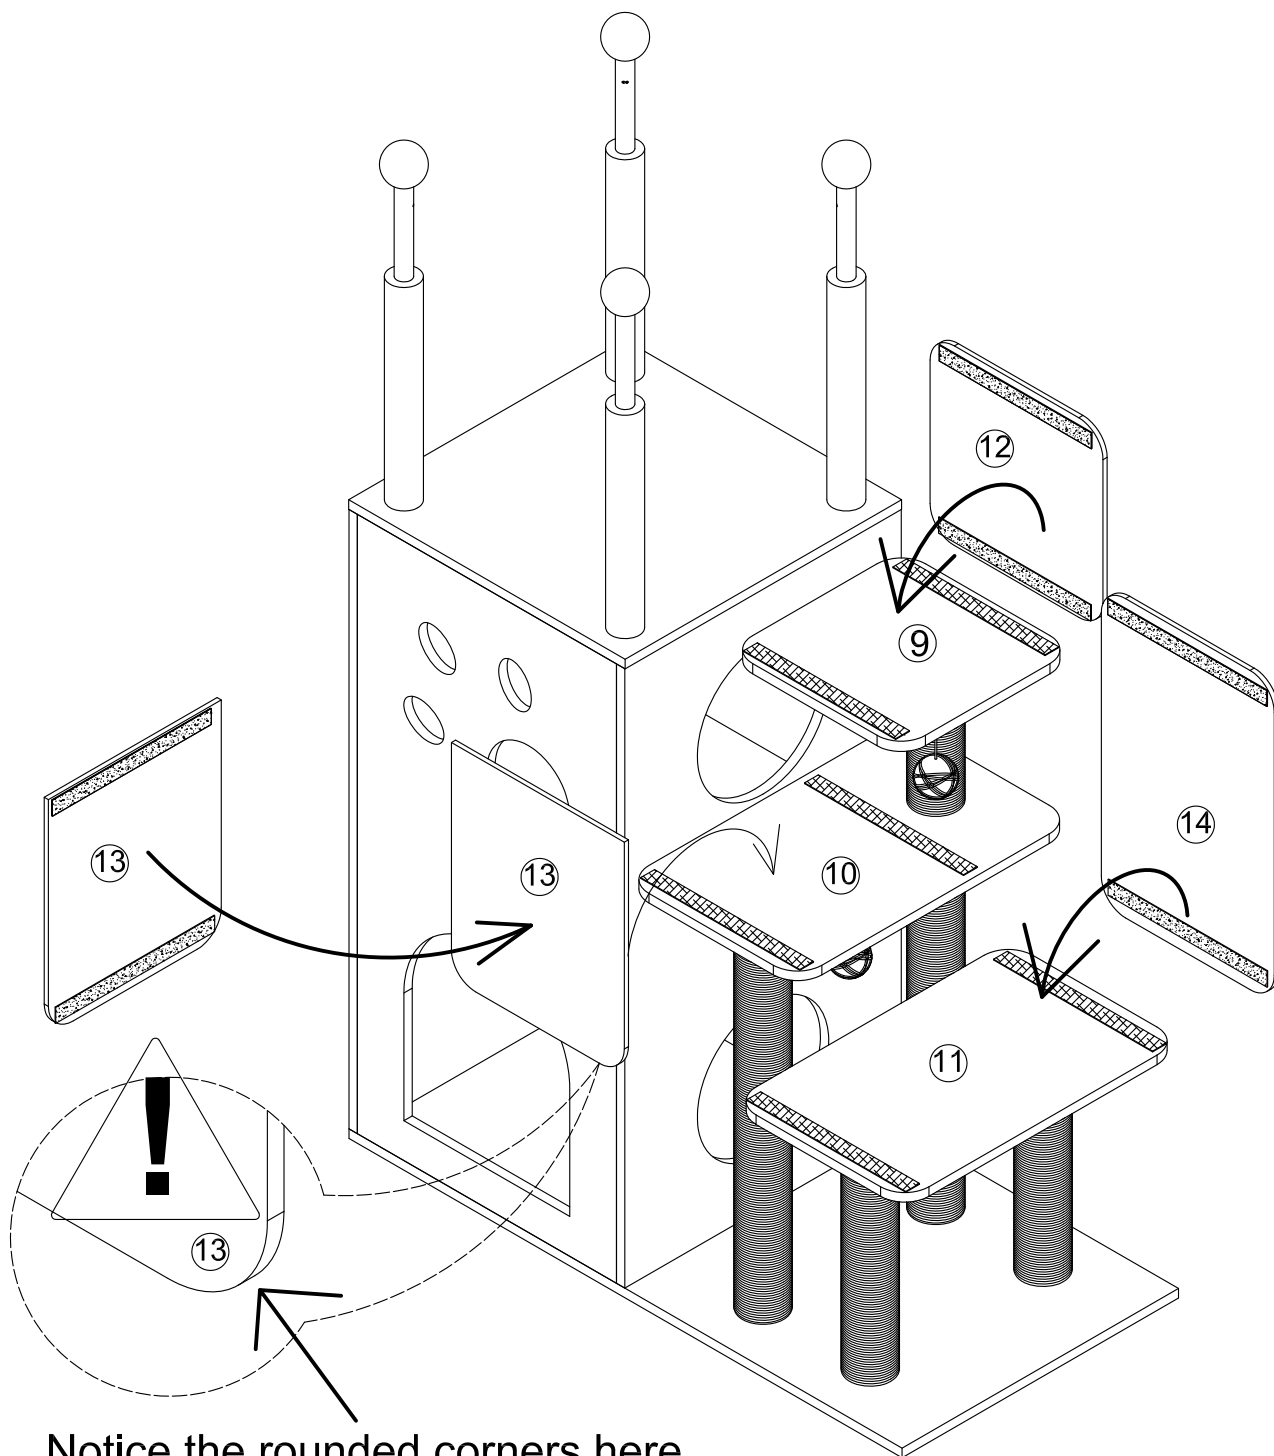

Notice the rounded corners here

