


# Installation Steps

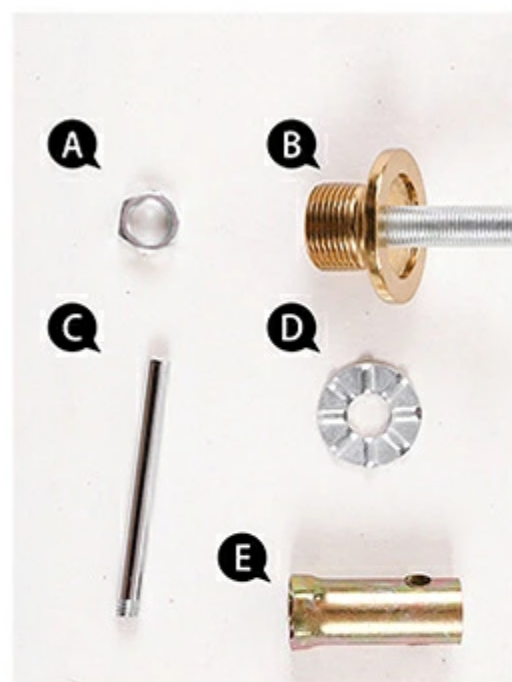

Take out the base from the box and confirm that all components have been unpacked.



Install component B on the upper part of the base and assemble it.



Flip the base and install component D under component B.



Insert component A into the lower part of component B.



Combine component C with component E and secure them by rotating the base mesh structure to create an auxiliary support.



Align the post with the slot on the base, gently twist the slot to quickly stand the post upright and complete the adjustment.



Attach it in order. If the cord is too long during rotation, pull it out to an appropriate length and rotate it.



the mohga attached to the pillar Take it off.



Insert the shade and turn on the mo. Secure it with a gal.



Install the light bulb socket on the upper part of the pillar. Install it.