#### **ASSEMBLY INSTRUCTIONS**



#### Let's get started!



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

**Back Board** 

**Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


#### Furniture components:


| 1  | Top Board            | x1 | 11 |
|----|----------------------|----|----|
| 2  | Bottom Board         | x1 |    |
| 3  | Side Board Left      | x1 |    |
| 4  | Side Board Right     | x1 |    |
| 5  | Leg                  | x4 |    |
| 6  | Front Drawer         | x1 |    |
| 7  | Side Drawer Left     | x1 |    |
| 8  | Side Drawer Right    | x1 |    |
| 9  | Back Drawer          | x1 |    |
| 10 | <b>Bottom Drawer</b> | x1 |    |

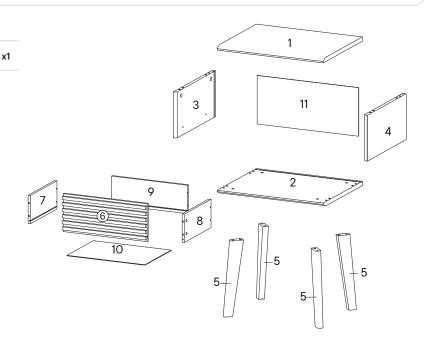


#### Provided hardware:




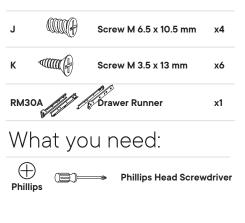


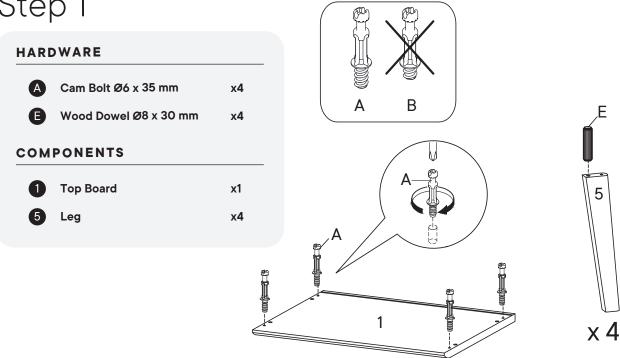


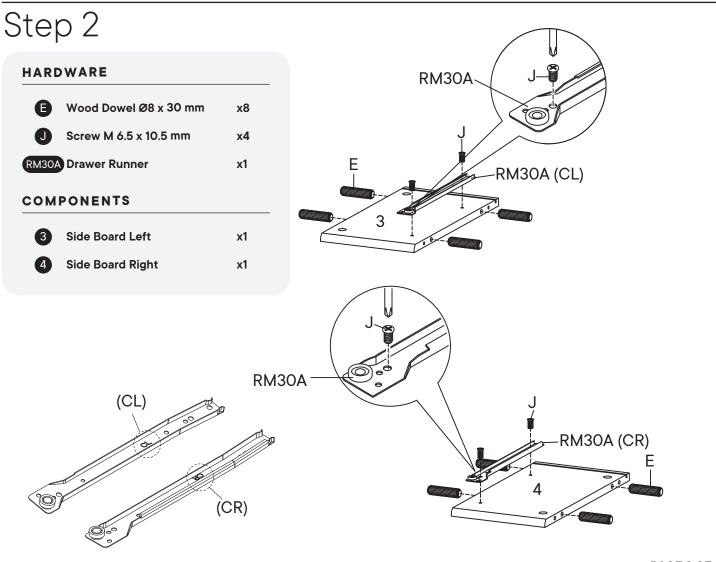


| 0   | Cam Lock Ø15 mm | x4 |
|-----|-----------------|----|
| сом | PONENTS         |    |
| 0   | Top Board       | x1 |
| 3   | Side Board Left | x1 |
| _   |                 |    |

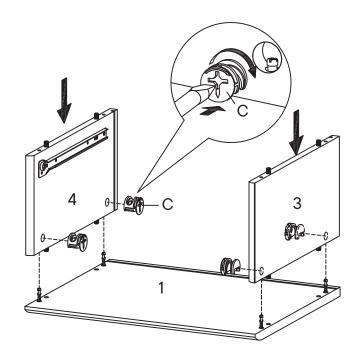

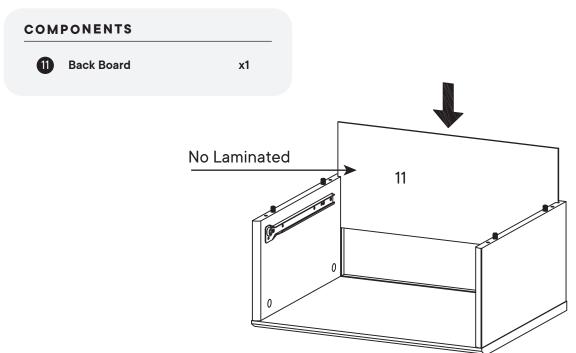


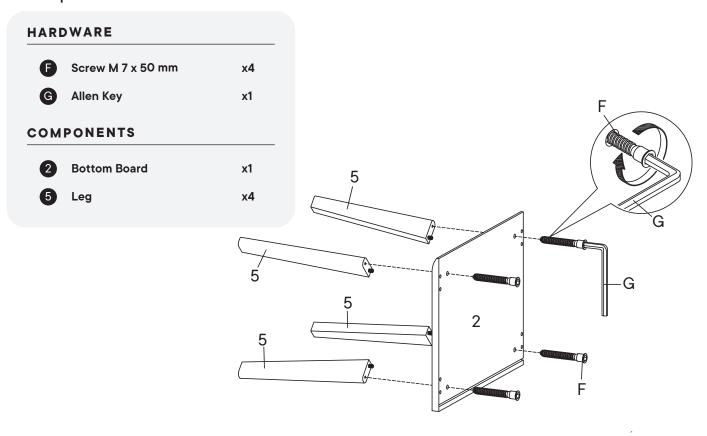


| HARD | OWARE             |    |
|------|-------------------|----|
| •    | Screw M 7 x 50 mm | x4 |
| 0    | Floor Protector   | x4 |
| G    | Allen Key         | x1 |
| ОМ   | PONENTS           |    |
| 2    | Bottom Board      | x1 |
|      |                   |    |

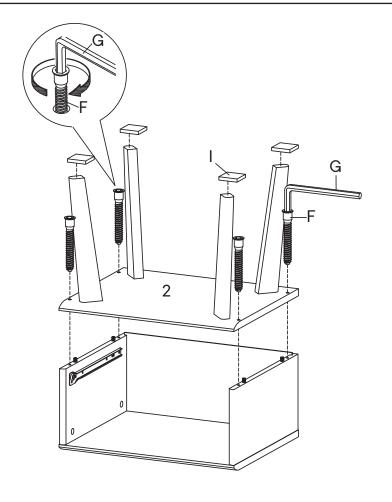



# B Cam Bolt Ø6 x 32 mm x4 COMPONENTS 6 Front Drawer x1

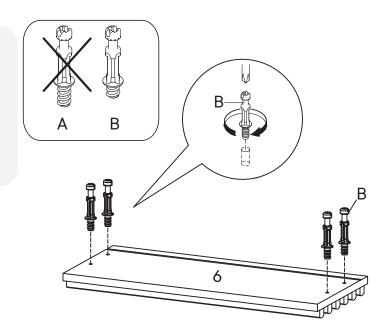


| D          | Cam Lock Ø12 mm                    | x4         |
|------------|------------------------------------|------------|
| •          | Screw M 8 x 39 mm                  | x4         |
| ЮМ         | PONENTS                            |            |
| 6          | Front Drawer                       | <b>x</b> 1 |
|            | 0: d - D 1 - #                     |            |
| 7          | Side Drawer Left                   | x1         |
| <b>7</b> 8 | Side Drawer Left Side Drawer Right | x1<br>x1   |
|            |                                    |            |

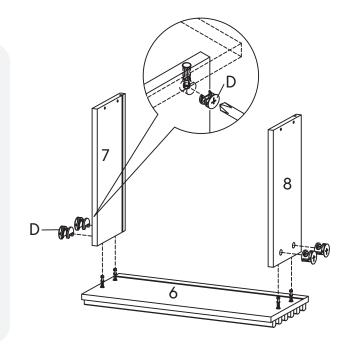

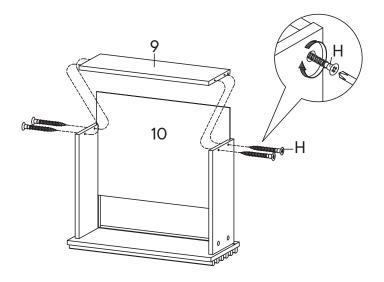

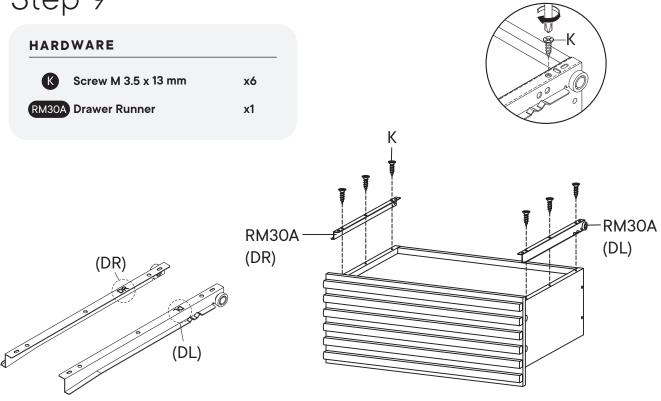

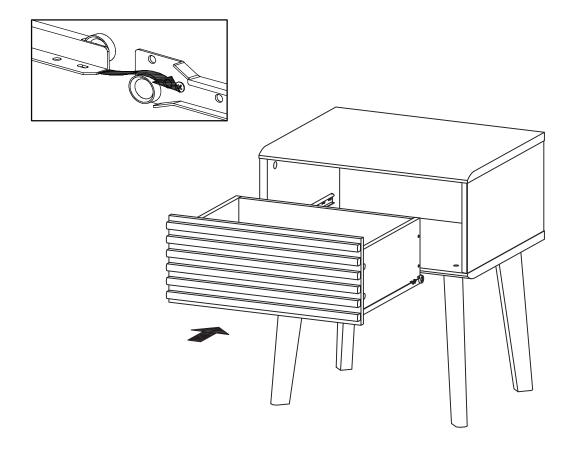

## Great job!

Side Table assembly is complete.



#### CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

