


US165

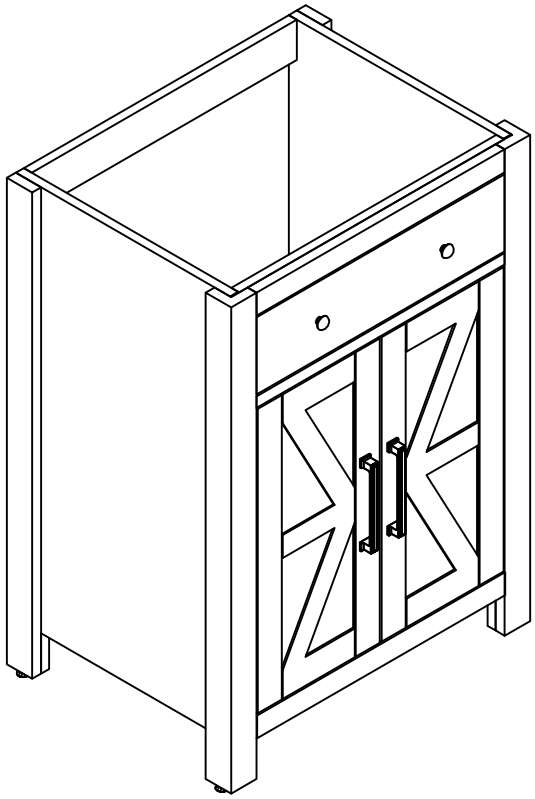

YOU MAY NEED (NOT SUPPLY)

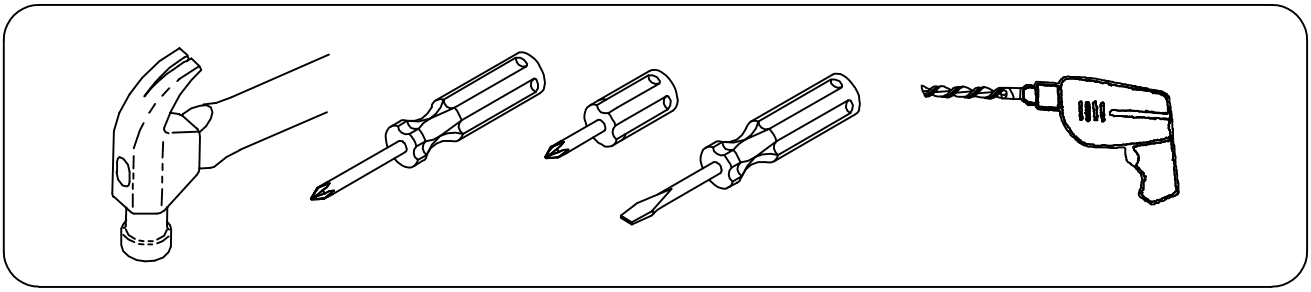

ASSENBLY DIAGRAM

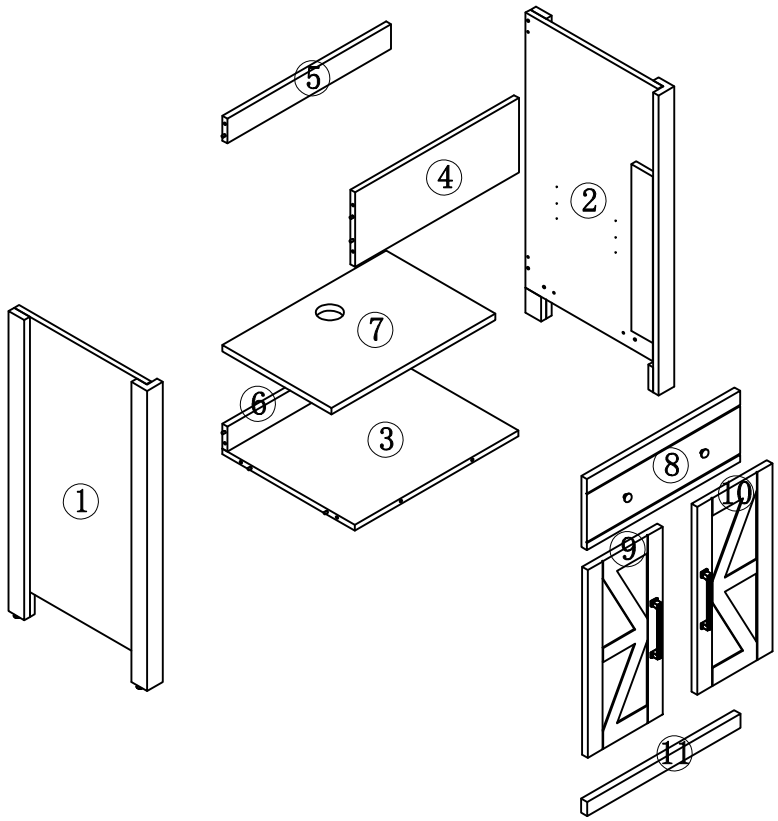

PARTS LIST

PARTS LIST

NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
①	Left side panel	1	⑦	Movable Shelf	1
②	Right side panel	1	⑧	Top Decorative Panel	1
③	Bottom panel	1	⑨	Left door panel	1
④	Front fixed panel	1	⑩	Right door panel	1
⑤	Back fixed panel	1	⑪	Bottom Decorative Panel	1
⑥	Back fixed panel	1			


PARTS LIST

HARDWARE LIST


NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
A	Three-in-one eccentric wheel	14	H	4*30mm screw	2
B	Three-in-one connecting rod	14	I	4*23mm screw	6
C	Three-in-one sticker	14	J	Door handle	2
D	8*40mm wood dowel pins	12	K	Door handle	2
E	Two-in-one lock handle	4	L	Small adjustable foot	4
F	Two-in-one screws	4	M	Door hinges	4
G	4*16mm screw	24	N	Pipe Plug	1

CAUTION:
Please confirm the parts list before installation


STEP 1

HARDWARE LIST			
Three-in-one connecting rod B 14PCS	Small adjustable foot L 4PCS	Two-in-one screws F 4PCS	

1.Put the three-in-one connecting rod in the 10mm hole of the following panels and tighten them with a cross screwdriver or an electric tool.

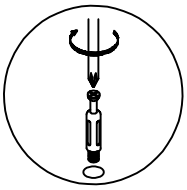


2.Fix the small adjustable feet on the bottom of the left and right side panels

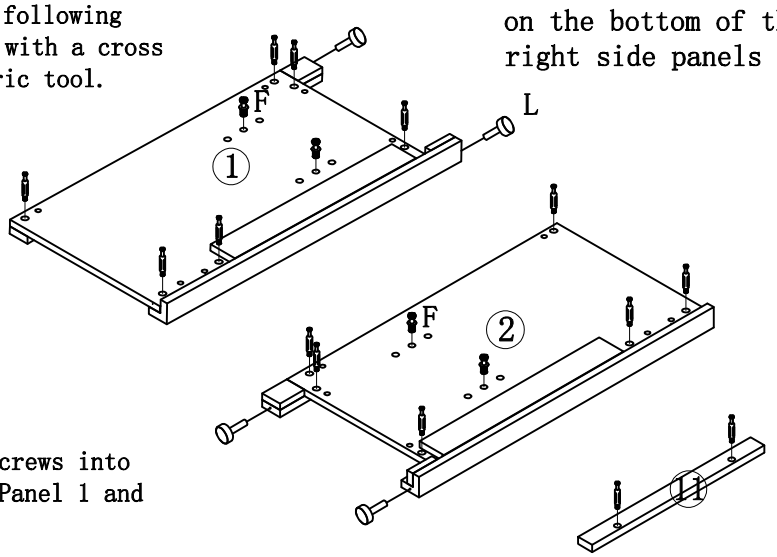

3:Insert the two-in-one screws into the pre-drilled holes of Panel 1 and Panel 2.


STEP 2

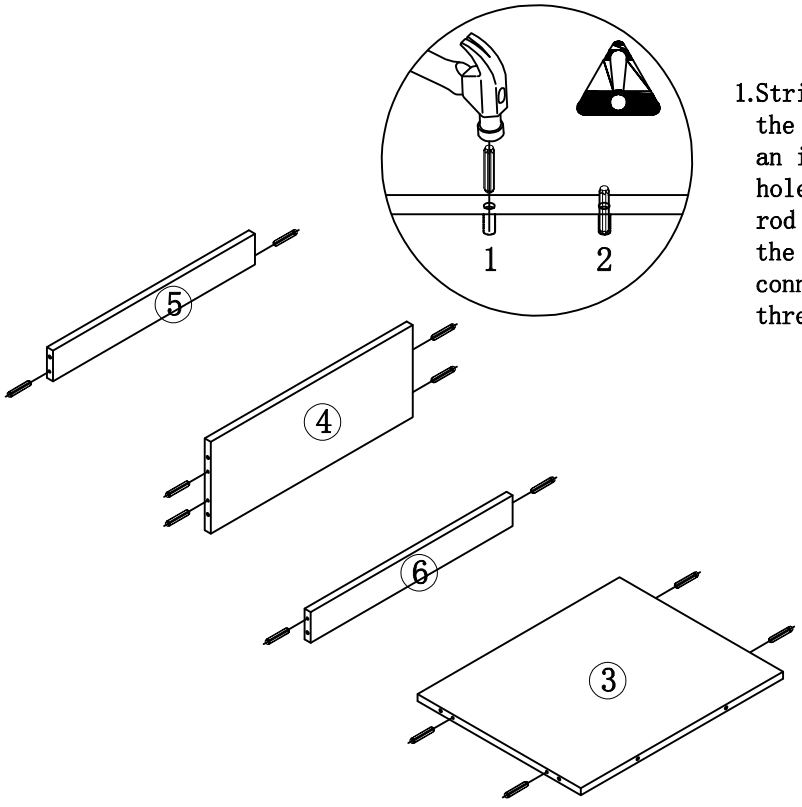


1.Strike the 08*40mm wood dowel pin into the 8mm hole of the above panels with an iron hammer. Please note that the hole of the three-in-one connecting rod should also be 8mm. The hole of the three-in-one connecting rod connects to the hole of 15mm three-in-one eccentric wheel.


HARDWARE LIST	
8*40mm wood dowel pins D 12PCS	

STEP 3

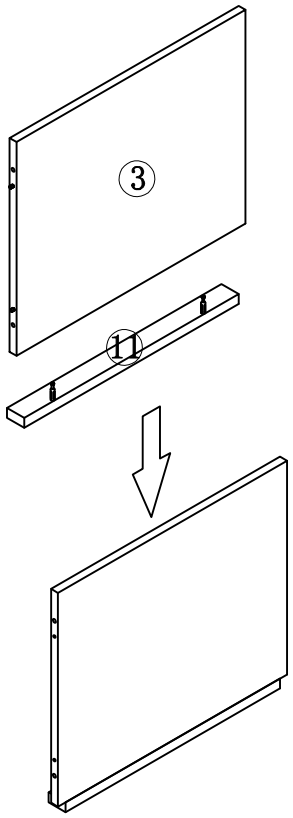

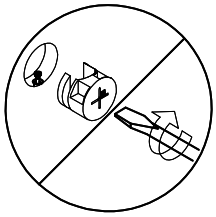


1.Connect No. 3 panel to No.11 panel tightly with the three-in-one eccentric wheel.

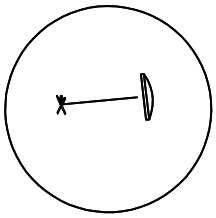


2.Cover the mounting hole of the eccentric wheel with a three-in-one sticker.


HARDWARE LIST		
Three-in-one eccentric wheel A 2PCS	Three-in-one sticker C 2PCS	

STEP 4

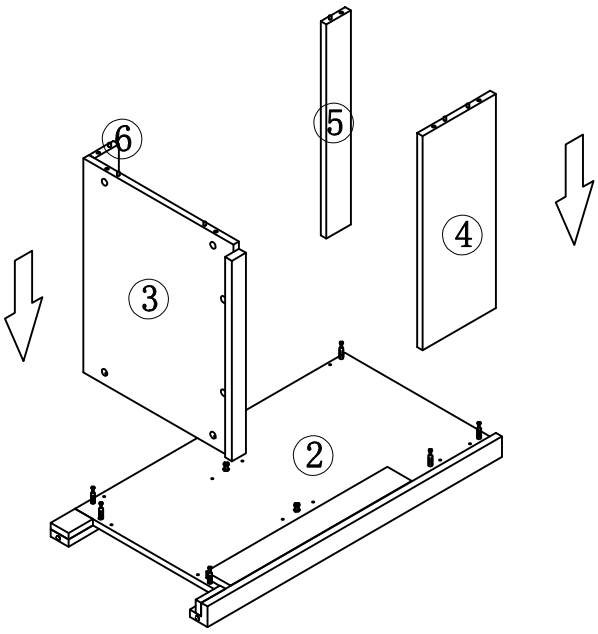


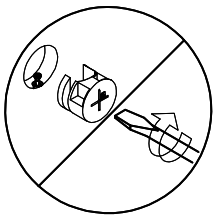


1.Connect No. 3-4-5-6 panel to No.2 panel tightly with the three-in-one eccentric wheel.

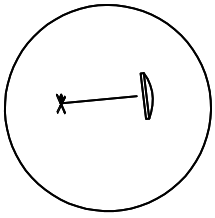


2.Cover the mounting hole of the eccentric wheel with a three-in-one sticker.


HARDWARE LIST		
Three-in-one eccentric wheel A 6PCS	Three-in-one sticker C 6PCS	

STEP 5

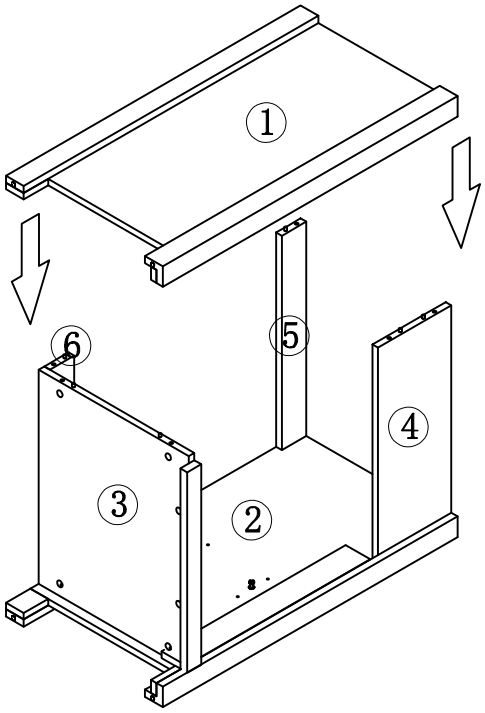

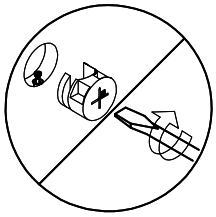


1.Connect No. 1 panel to No.3-4-5-6 panel tightly with the three-in-one eccentric wheel.

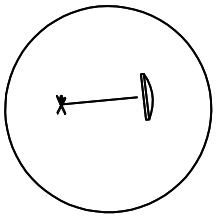


2.Cover the mounting hole of the eccentric wheel with a three-in-one sticker.

HARDWARE LIST		
Three-in-one eccentric wheel A 6PCS	Three-in-one sticker C 6PCS	

STEP 6

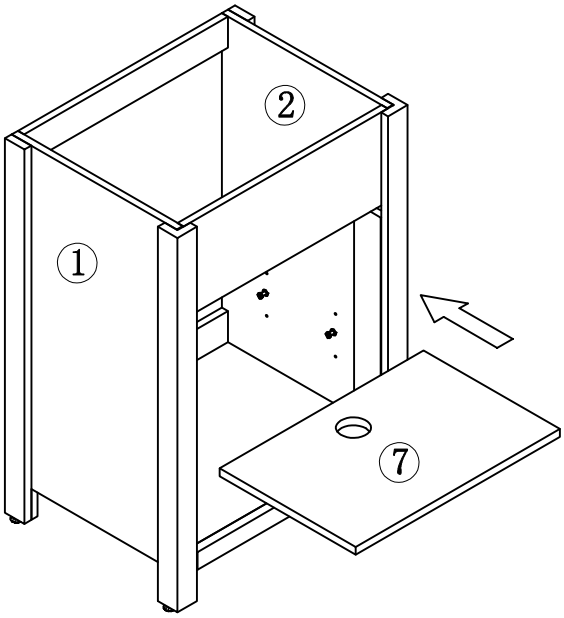


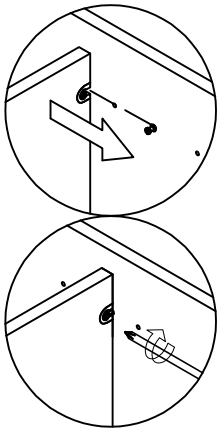


Fix the two-in-one lock handle on No.7 plate and put it in the cabinet.Put the pipe plug on No.7 plate

HARDWARE LIST		
Two-in-one lock handle E 4PCS	Pipe Plug N 1PCS	

STEP 7

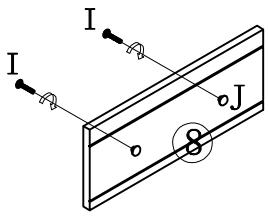


1:Secure the handle (J) to the 8# false drawer front with 4×23mm screws.

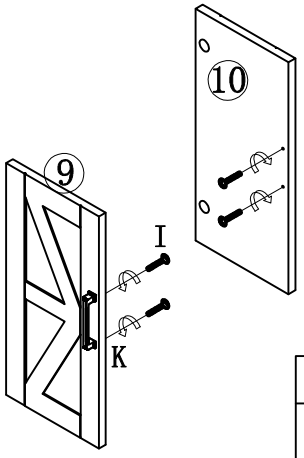

2:Fix the handles(K) on Panel 9 and Panel 10 with 4×23 screws.

HARDWARE LIST			
Door handle	Door handle	4*23mm screw	
J 2PCS	K 2PCS	I 6PCS	


STEP 8

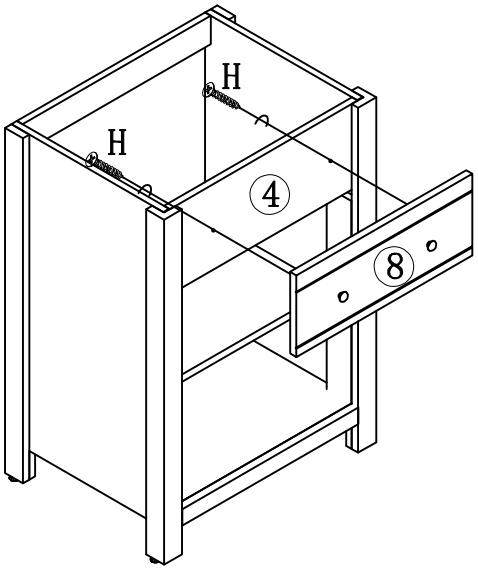


Fasten Panel 8 and Panel 4 with 4*30mm screws.


HARDWARE LIST	
4*30mm screw	
H 2PCS	

STEP 9

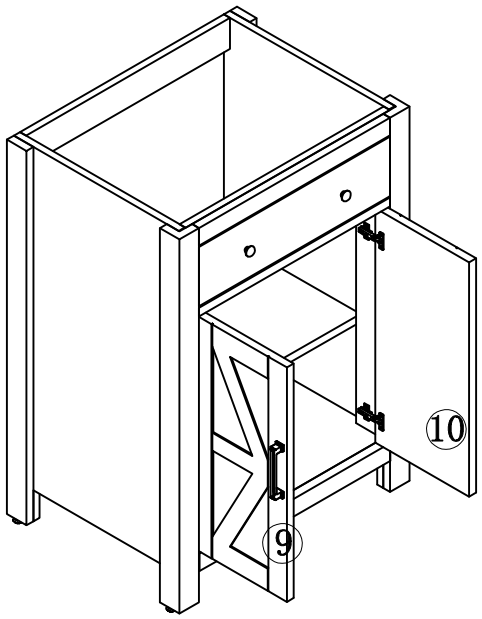


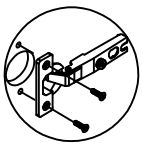


1.Install the hinge cup to the door panel with 4*16mm screws.

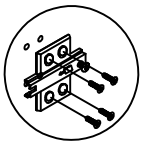

2.Install the hinge to the side panel with 4*16mm screws.

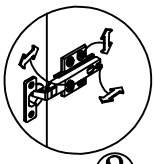

4.Adjust the door panel clearance.

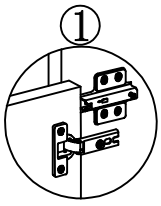


3. Install the hinge cup on the door panel to the hinge of the side panel.

HARDWARE LIST		
4*16mm screw	Door hinge	
G 24PCS	M 4PCS	

Hinge/Door Adjustment and Realignment

If adjustment or realignment is needed, follow the instructions provided in the following chart.

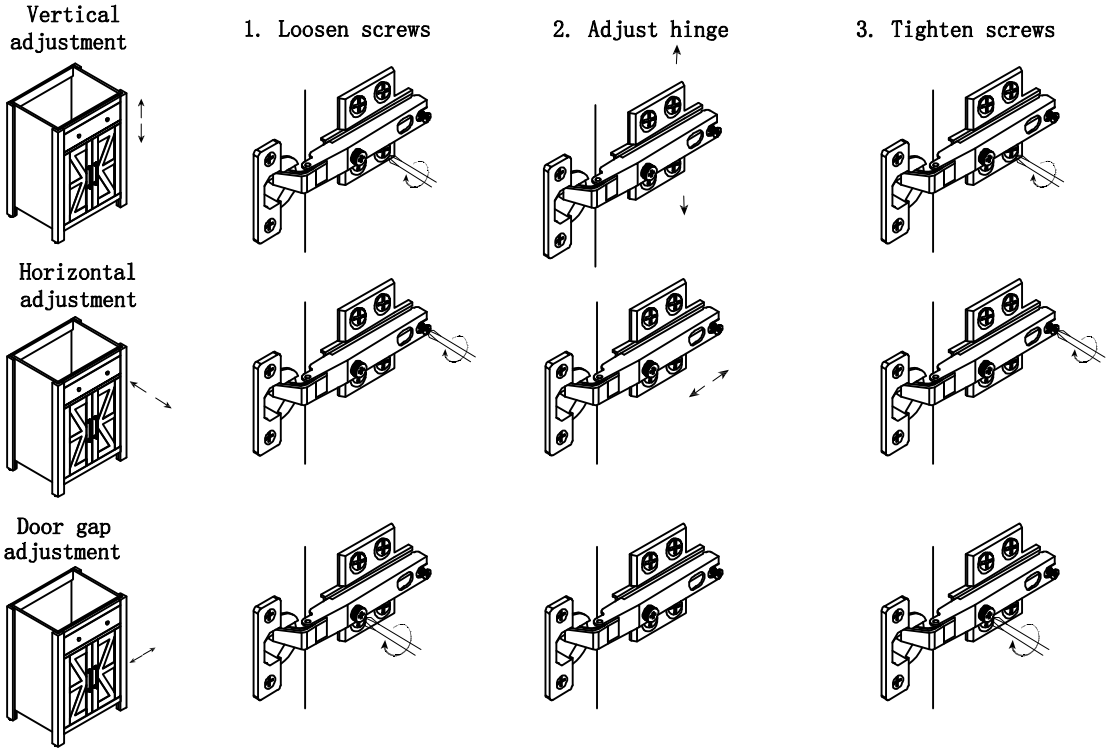



Choking hazard-Small Parts： This unit contains small parts，not for children under 3 years.

Tip-over hazard： Secure finished unit to wall stud using L-Bracket and wall screw（#10*1.5"W/out provided). If a wall stud is not neccessible , Consault your local hardware store for appropriate mounting hardware . Failure to properly install will result in product collapse or tip-over. Serious injury can occur .