






INSTRUCTIONS

SZYD-CSB1101


Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand.

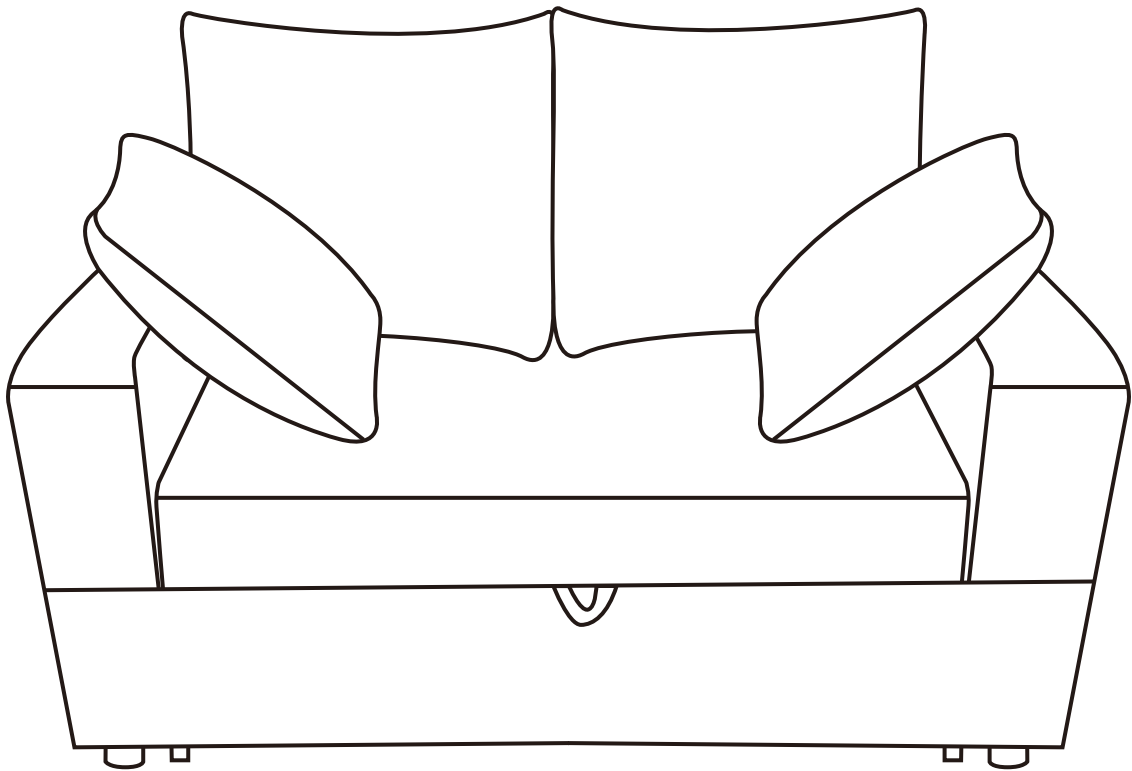

Part List

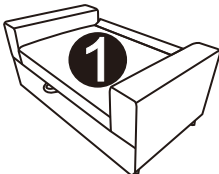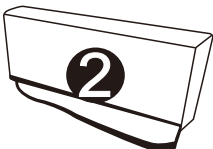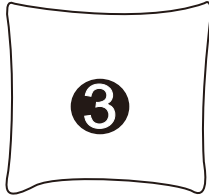
 Sofa Body*1	 Backrest*1	 Back Cushion*2
 Throw pillow*2	 Leg *4	 wheel *4
 Bolt*16	 Allen key*1	

Assembly Steps 1

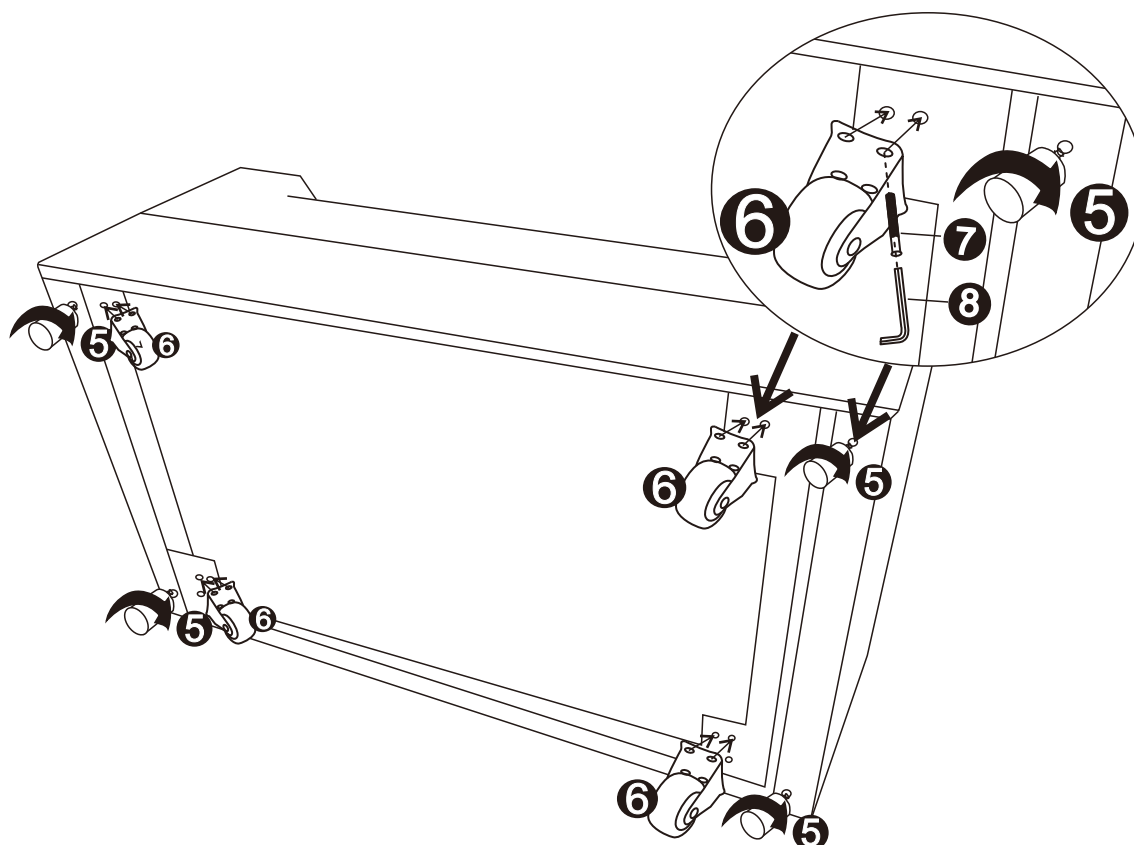


Assembly Steps 2

Unfasten the Velcro and stick it on the Backrest Frame.

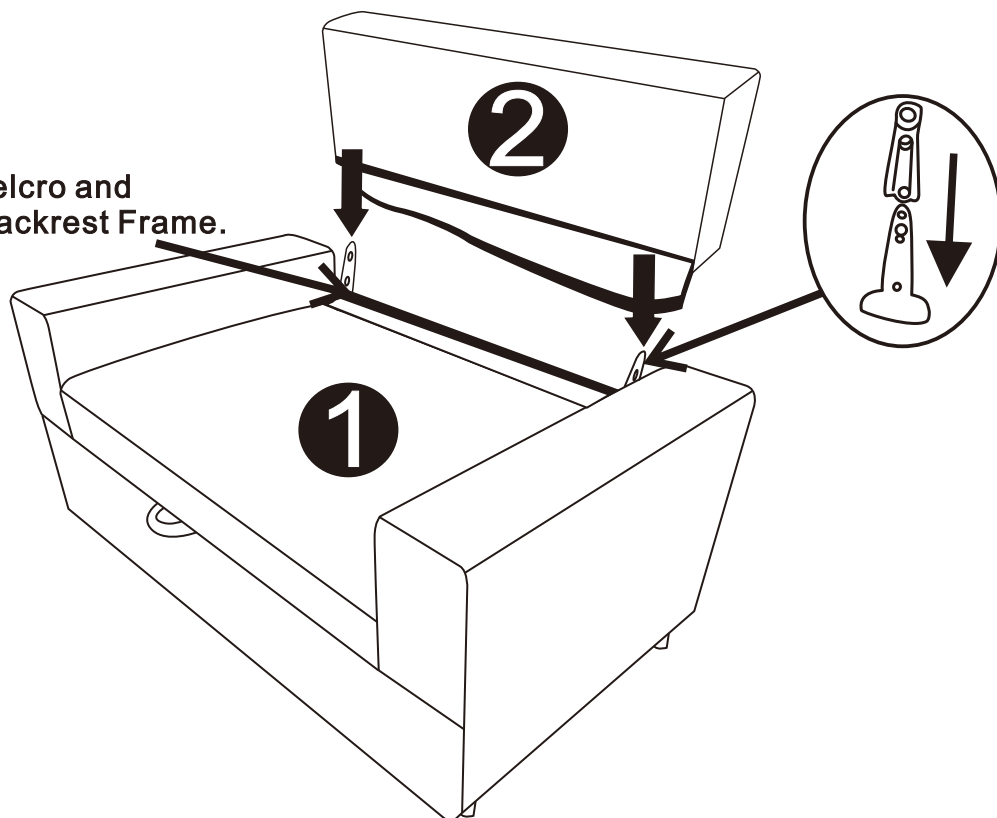


Assembly Steps 3

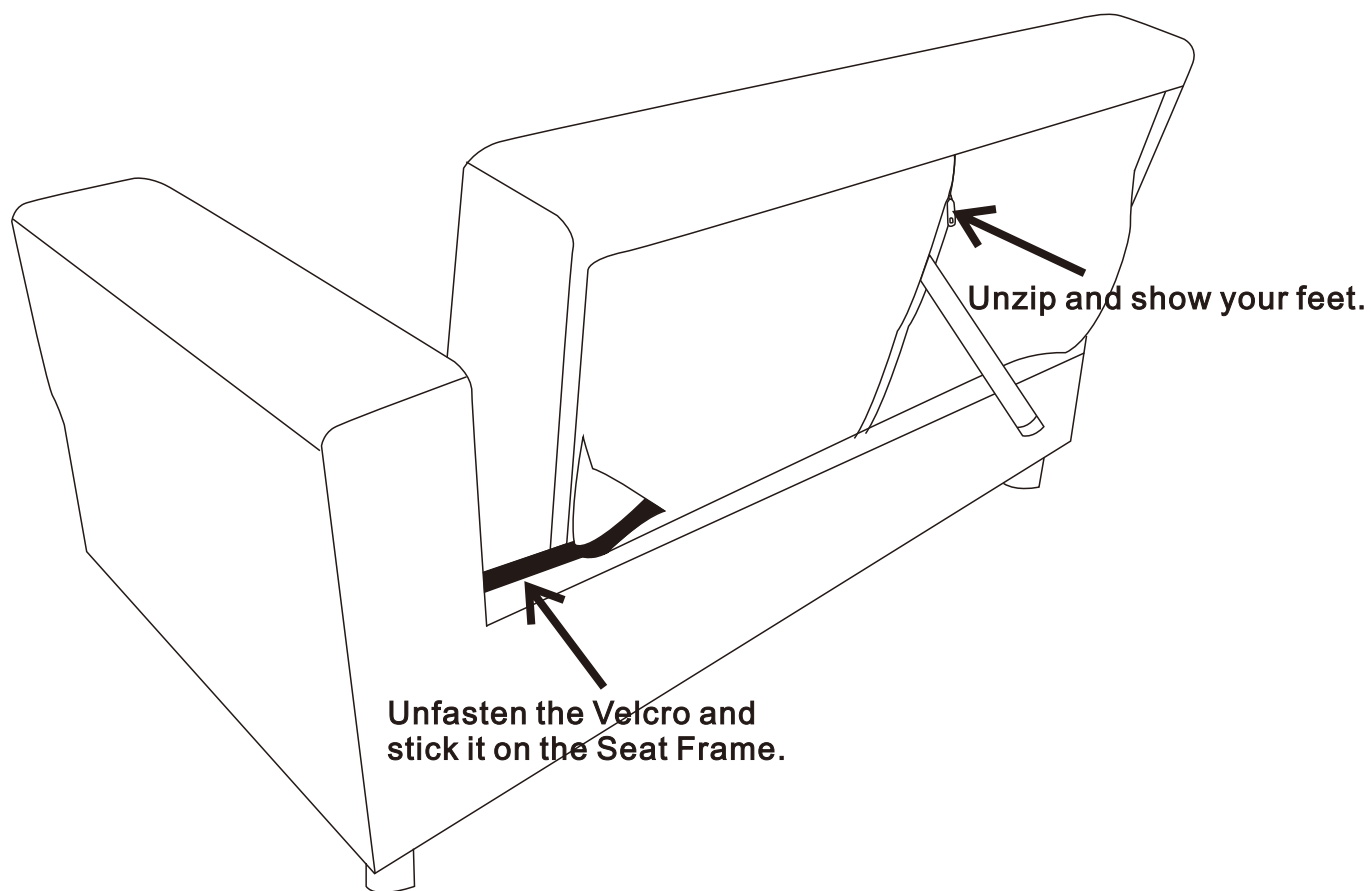


Assembly Steps 4


Pull the rope to draw out the cushion.

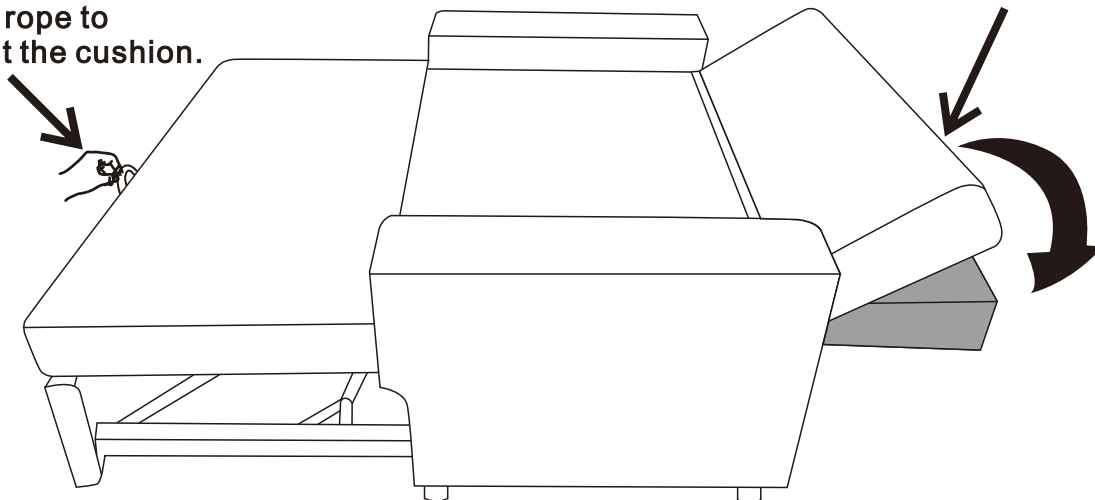

Assembly Steps 5

Use scissors to open the vacuum back cushions. It may take 48-72hrs to fully expand back to its original shape. If there are any wrinkles, please use iron to gently smooth them out.

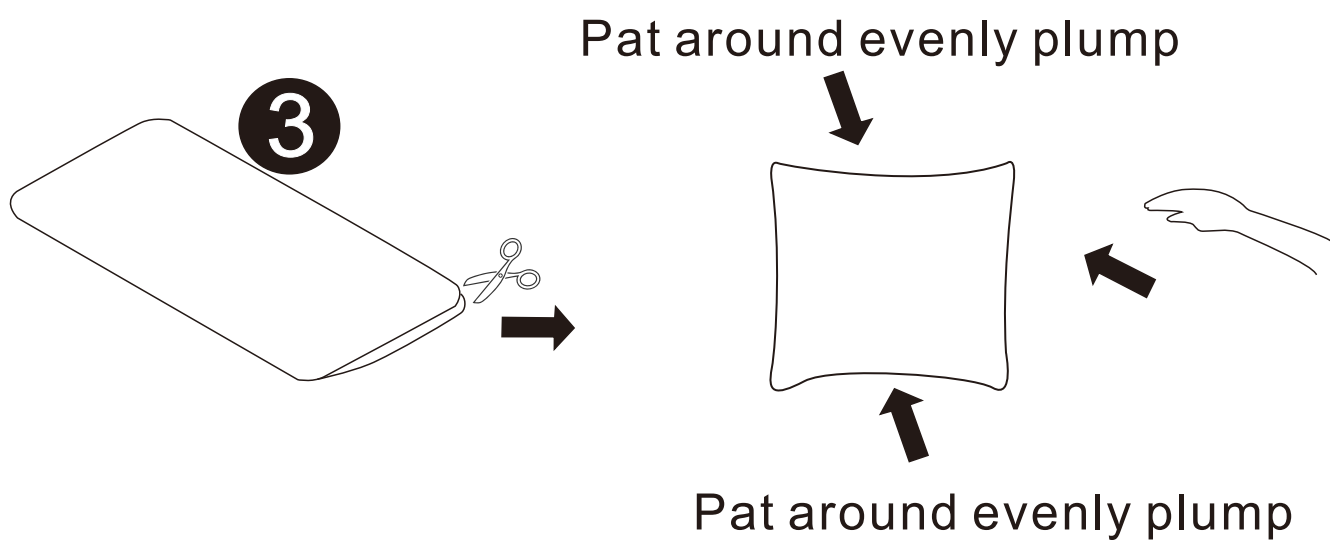

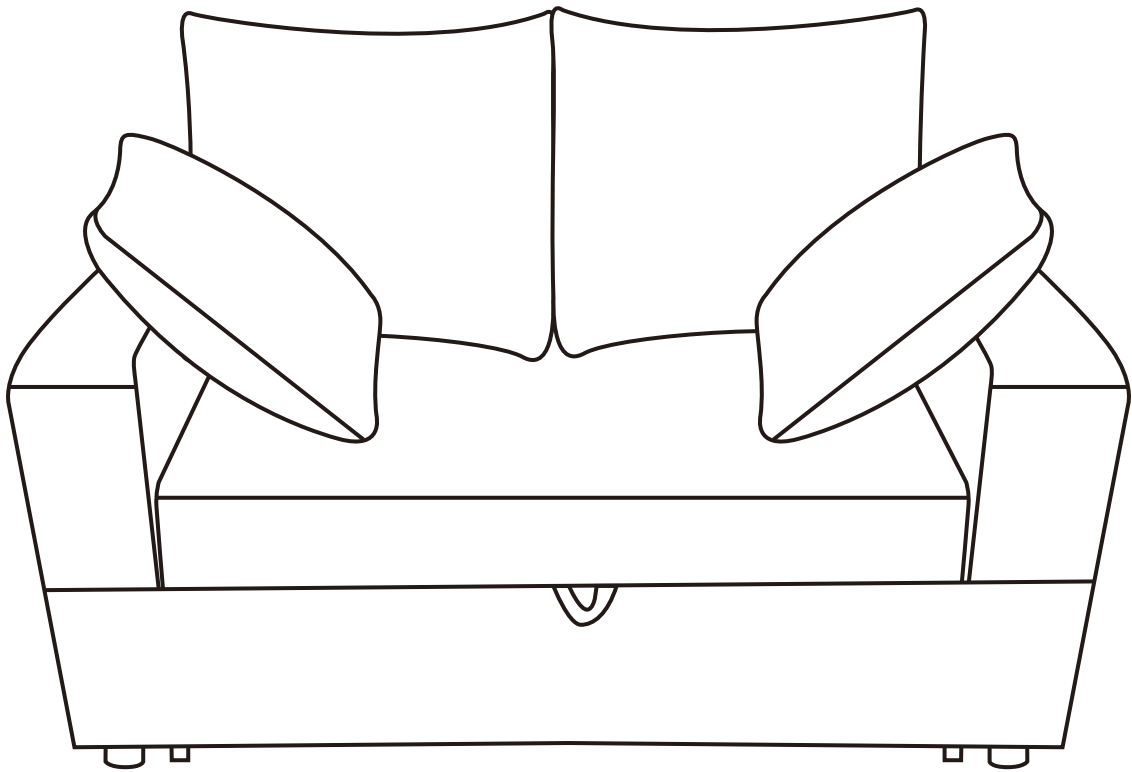

Completed