

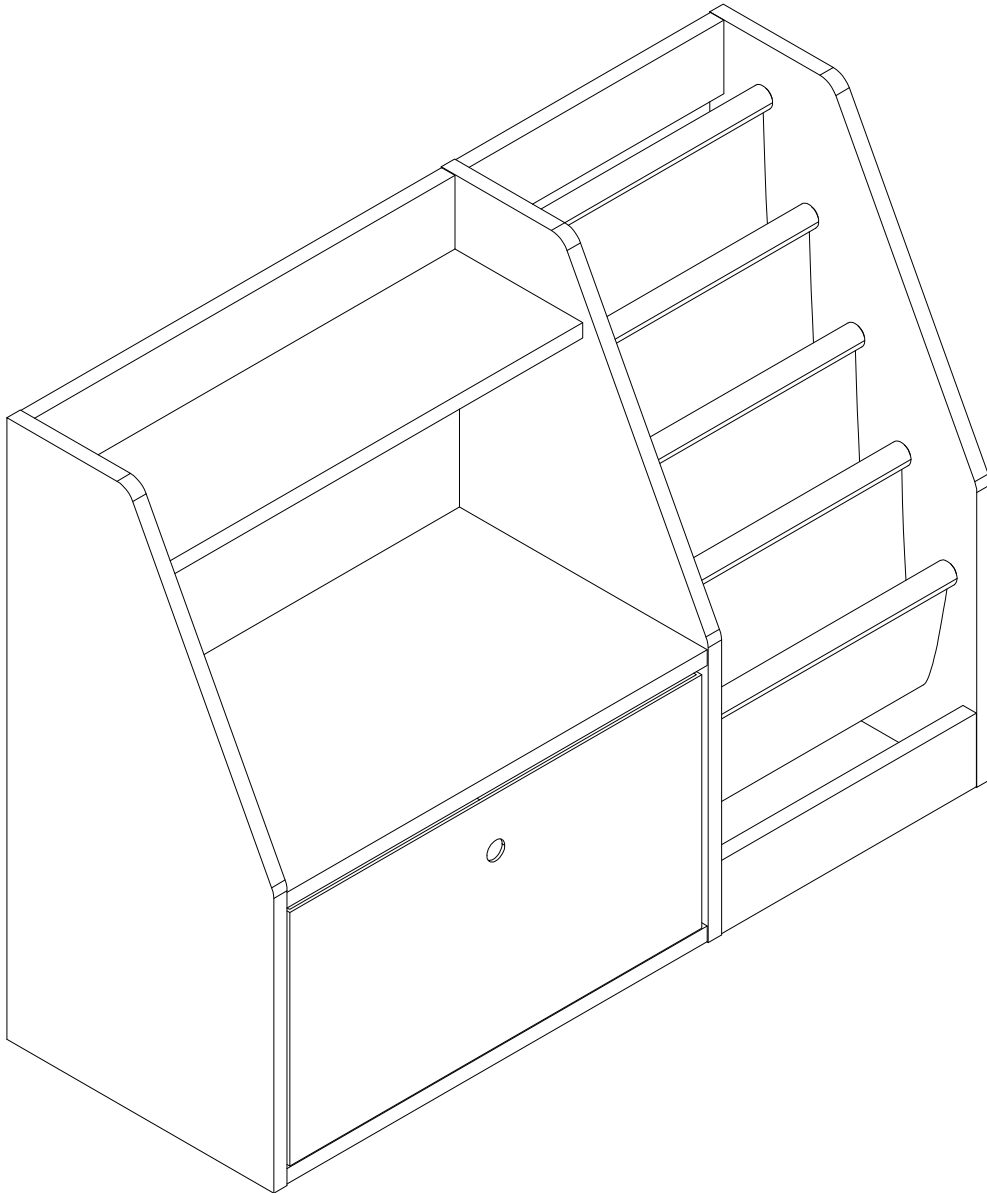
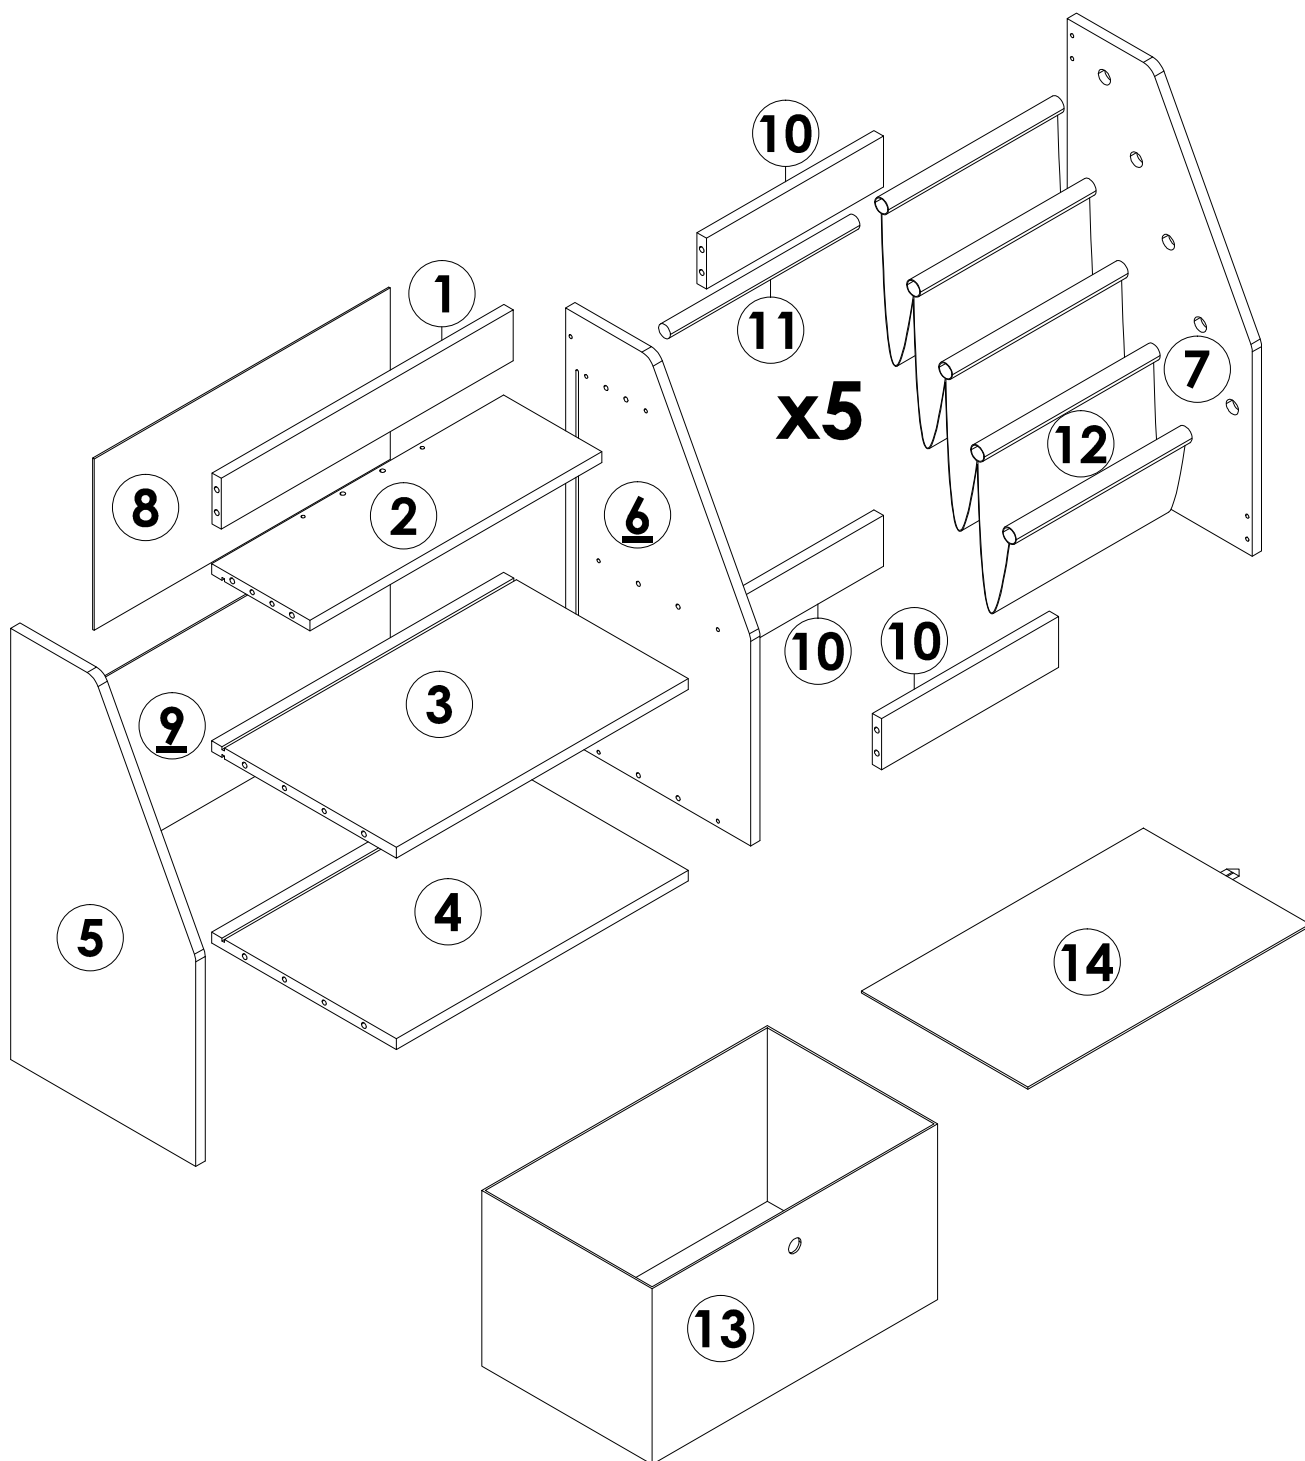










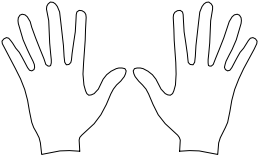


Installation Manual

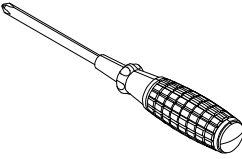




A  M6x35mm 20+2PCS	B  Ø15x9mm 20+2PCS	C  M4x40mm 11+1PCS	D  Ø6x30mm 14+1PCS	E  6PCS
F  Ø12mm 7PCS	G  4PCS	H  M3x14mm 10+1PCS	I  8+1PCS	J  Ø6x30mm 2PCS
K  2PCS	 1PC	 1PC	Tools required  Hammer (Not provided)	


STEP 1

Insert D into the hole shown
crossbar ①② platform panel ③④.

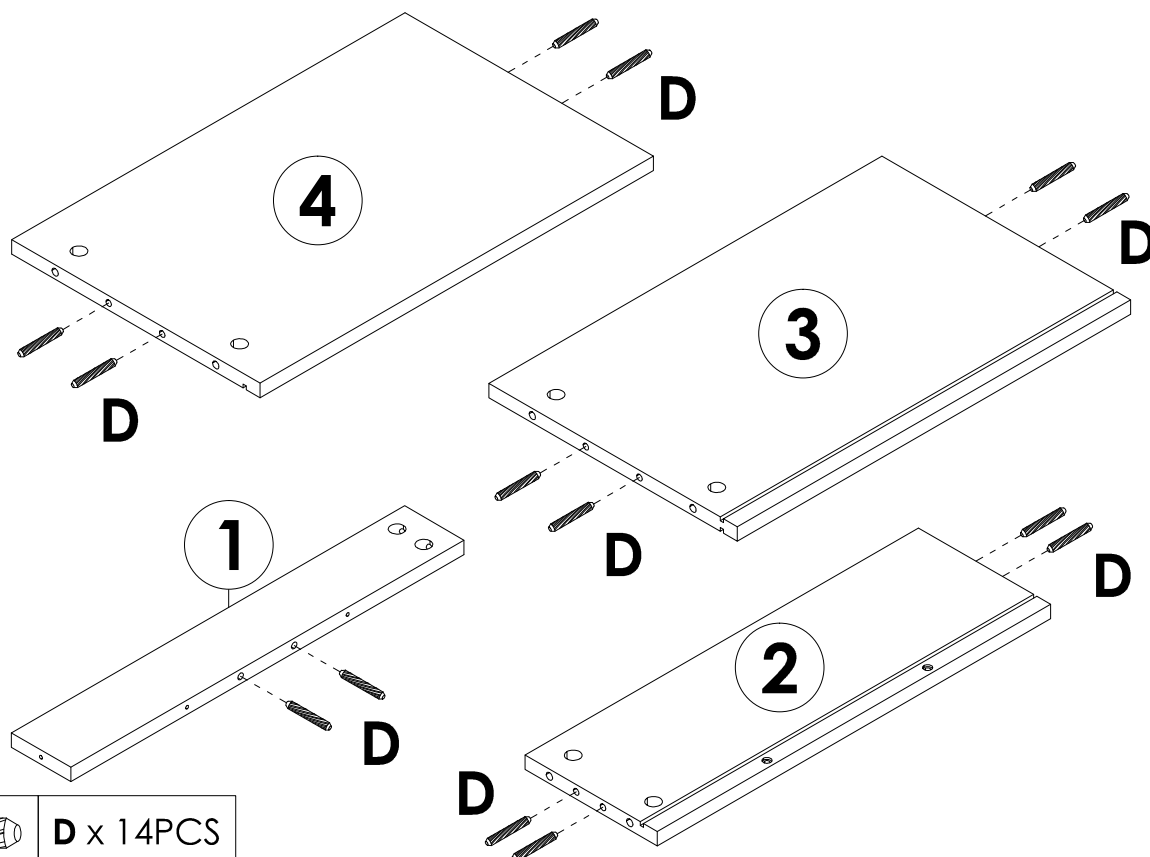



STEP 2

Install crossbar ①② with screws C.

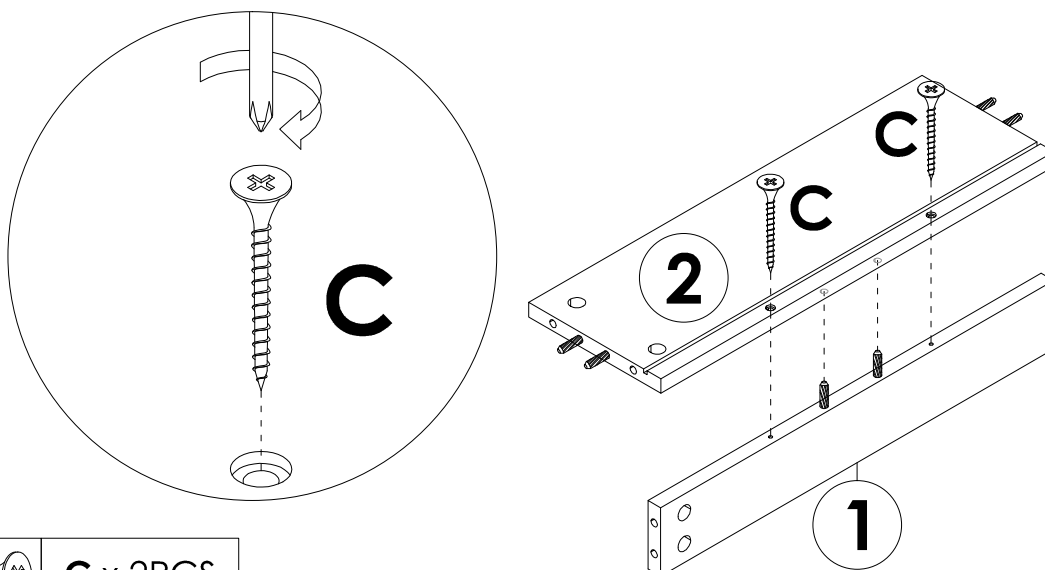

STEP 3


Insert A into the hole shown side panel ⑤.

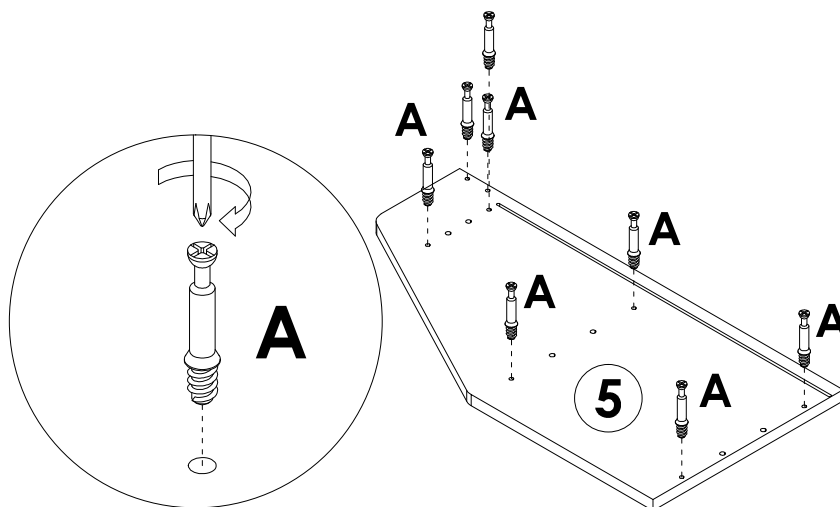


A x 8PCS

STEP 4

1. Place B into the hole of ① ② ③ ④
2. Install ① ② ③ ④ to side panel ⑤

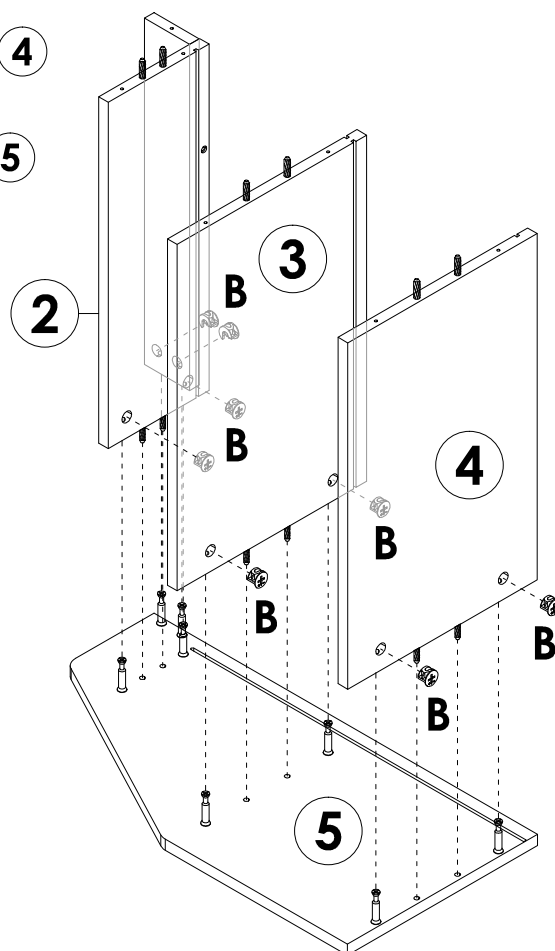


B x 8PCS

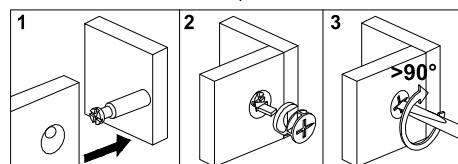


STEP 5


Insert back panel ⑧ and ⑨ into the slots

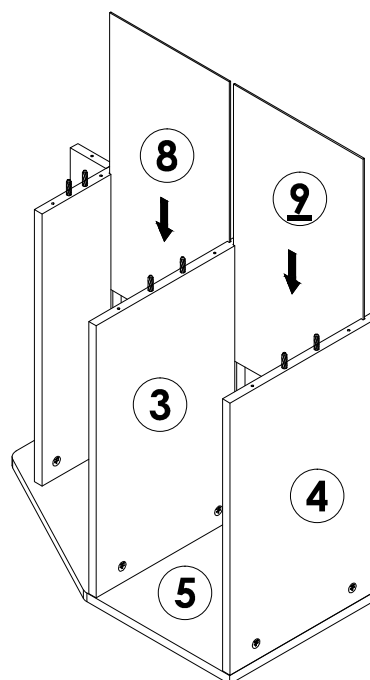

STEP 6




Install side panel ⑥ to ① ② ③ ④ with screws C

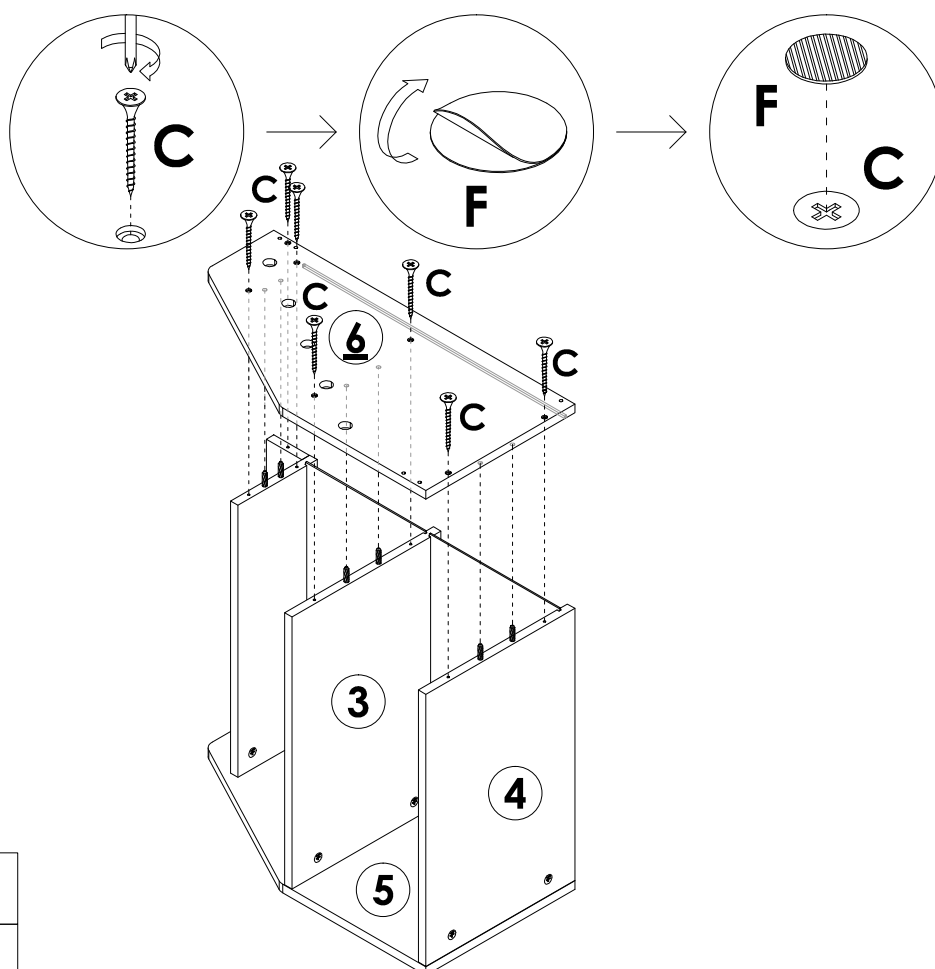

	C x 7PCS
	F x 7PCS

STEP 7

Insert A into the hole shown
side panel **6**

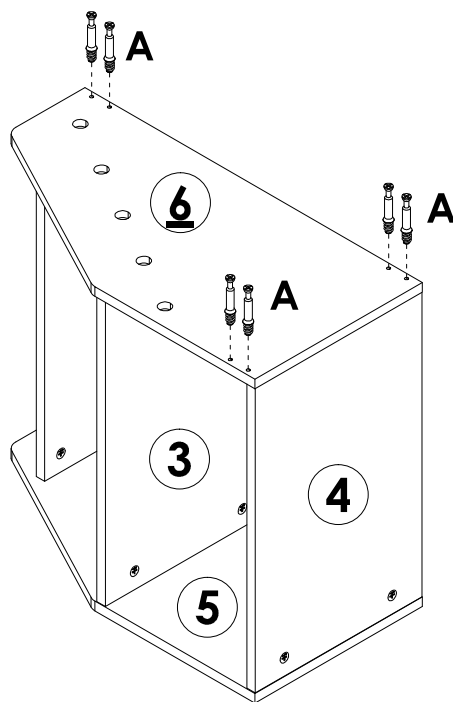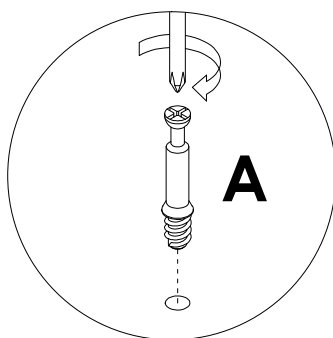


A x 6PCS


STEP 8

1. Place B into the hole of crossbar **10**

2. Install crossbar **10** to side panel **6**

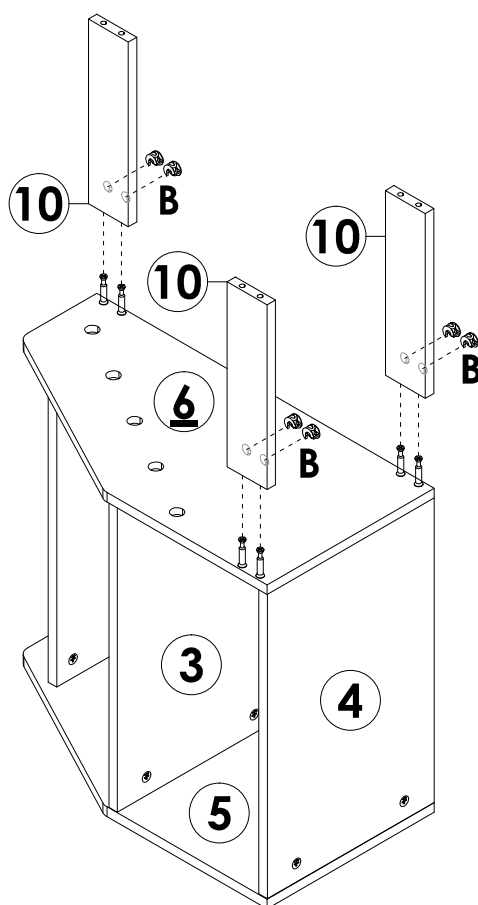


B x 6PCS

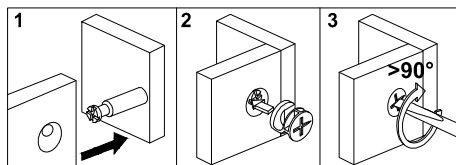


STEP 9

Install net bag ⑫ to wooden stick ⑪

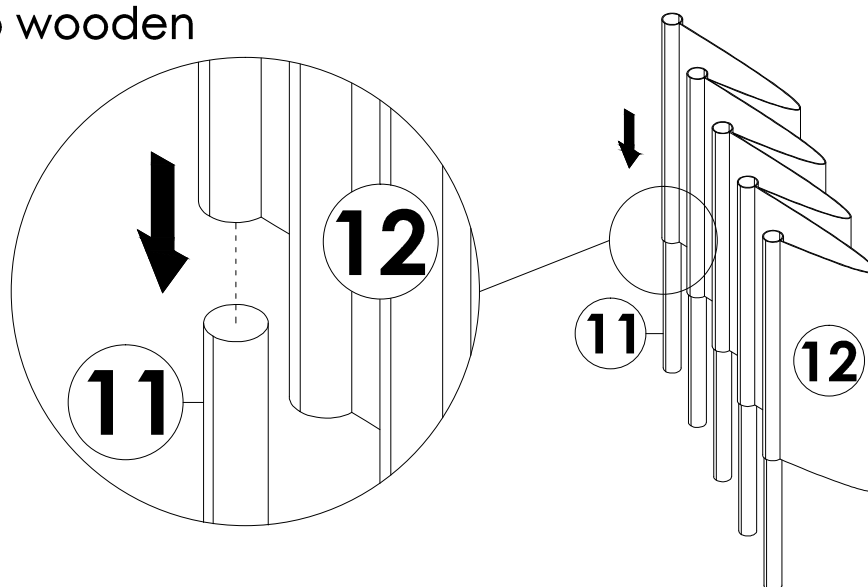



STEP 10

Install net bag ⑫ to side panel ⑥

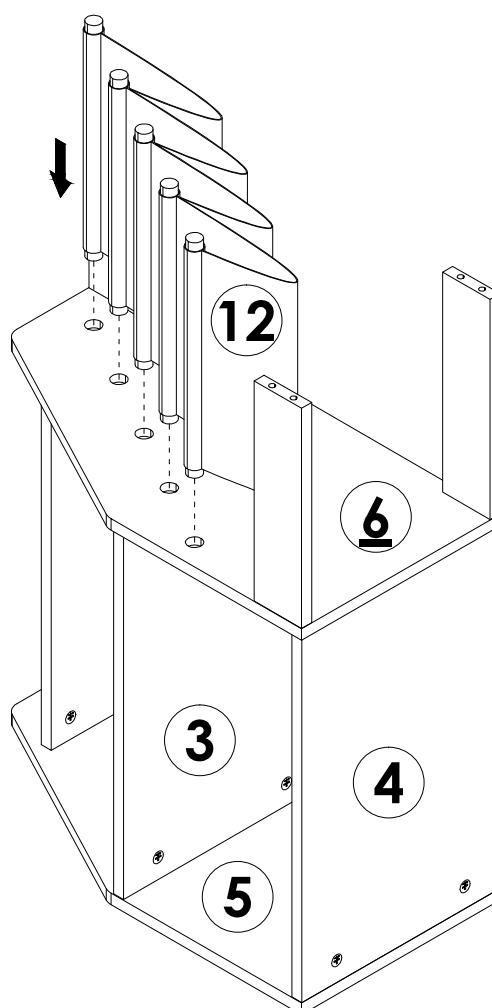

STEP 11


Insert A into the hole shown
side panel ⑦

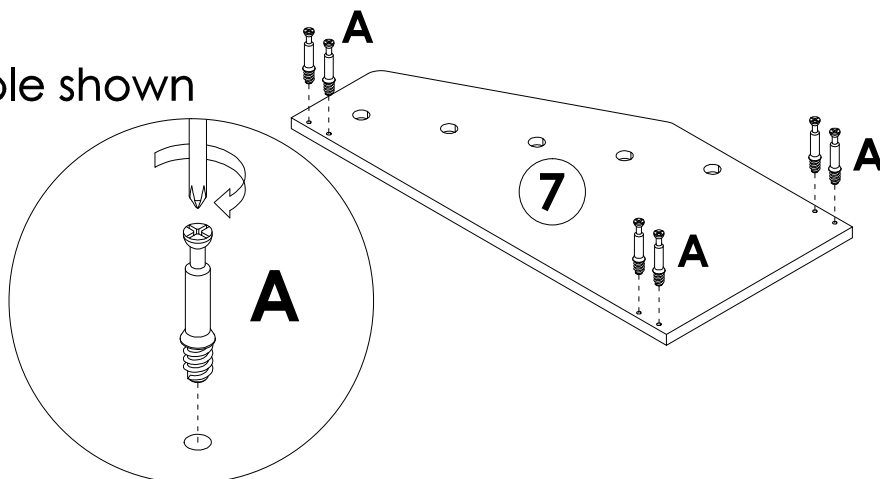


A x 6PCS

STEP 12

1. Place B into the hole of
crossbar ⑩
2. Install side panel ⑦ to
crossbar ⑩


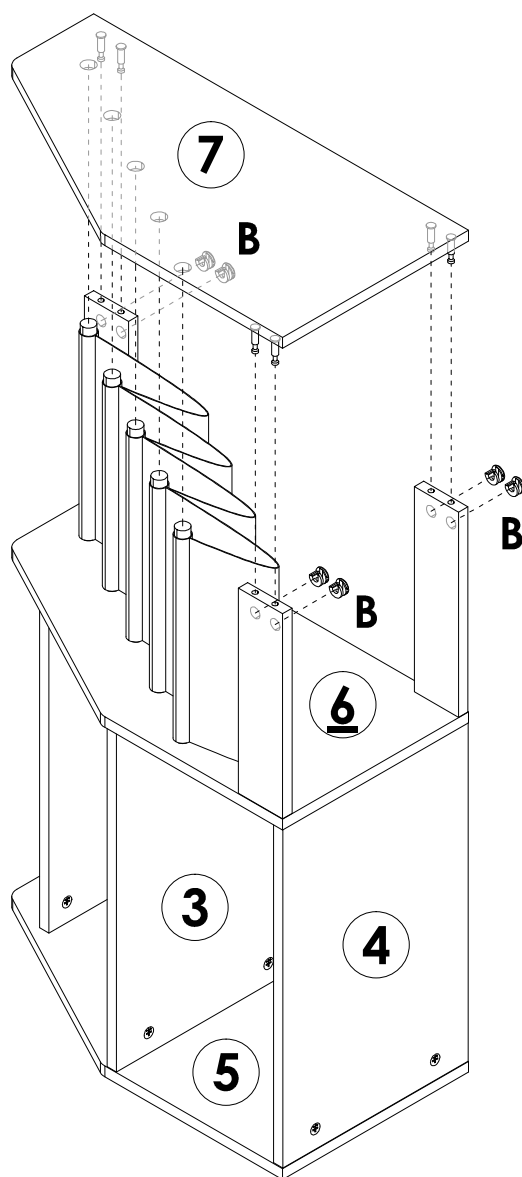


B x 6PCS

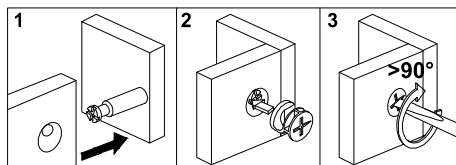


STEP 13

Use a small hammer to install E into the indicated

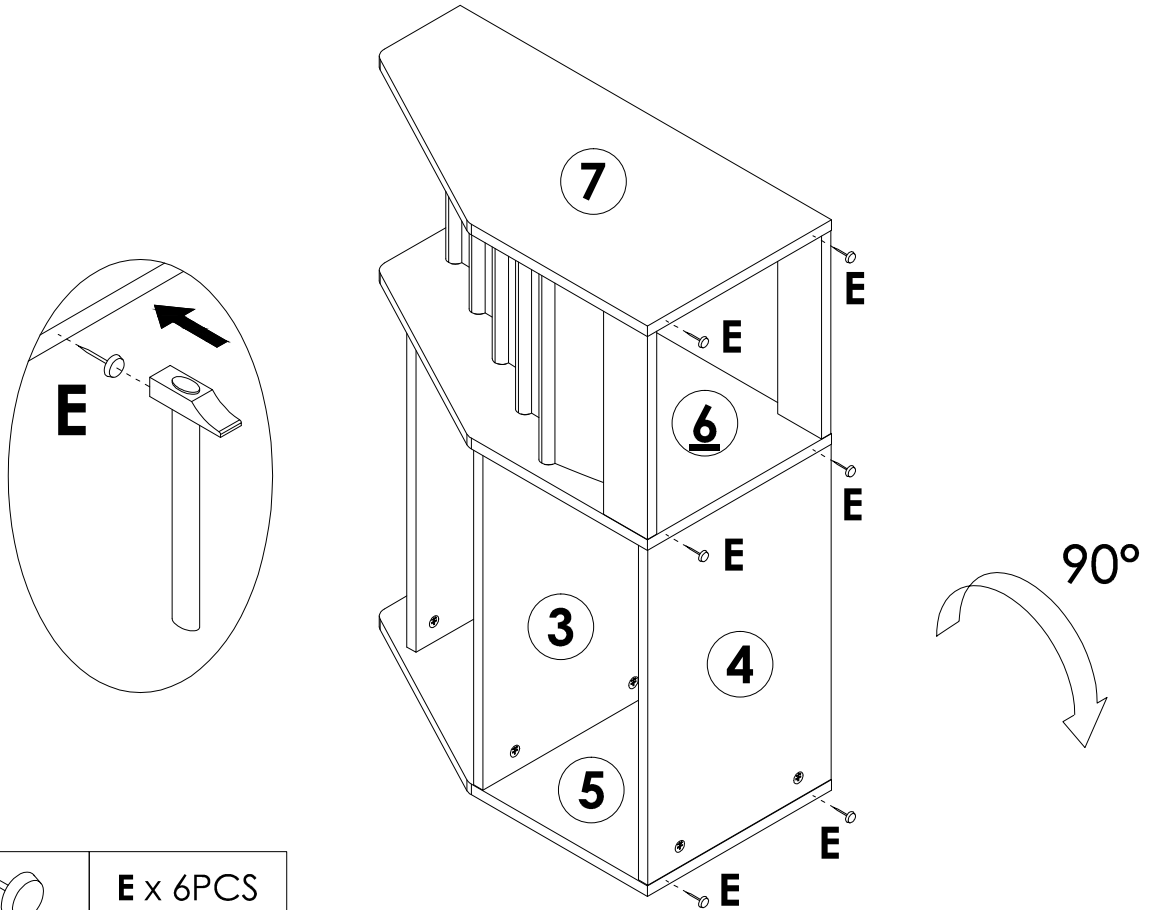


E x 6PCS

STEP 14

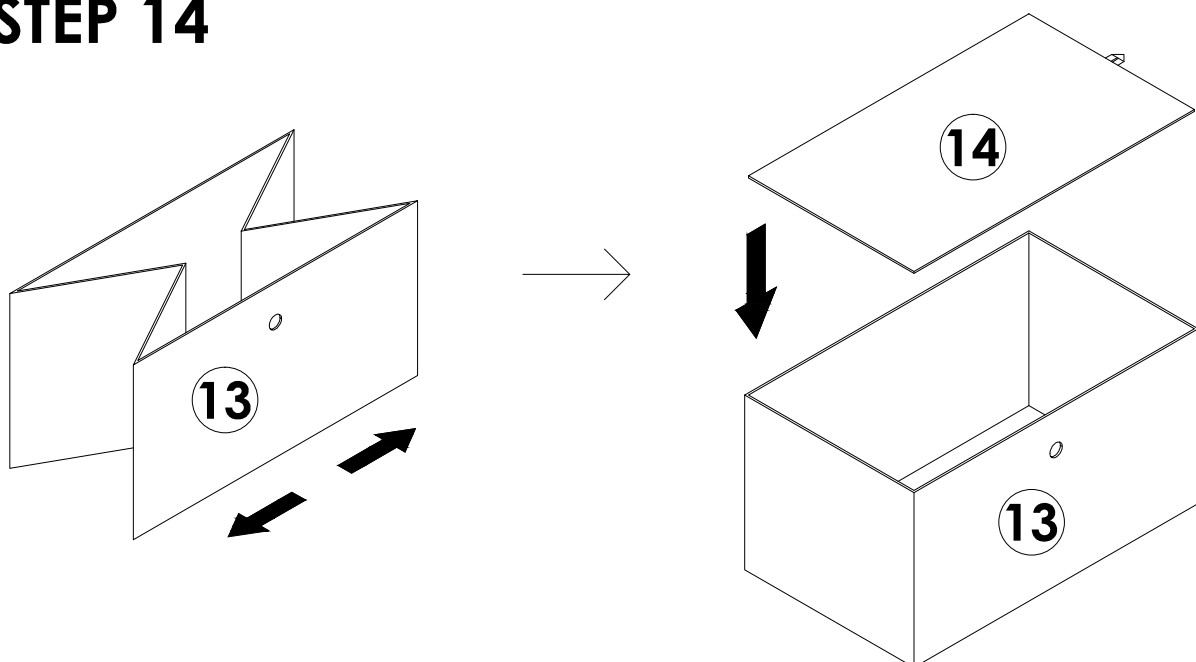

STEP 15

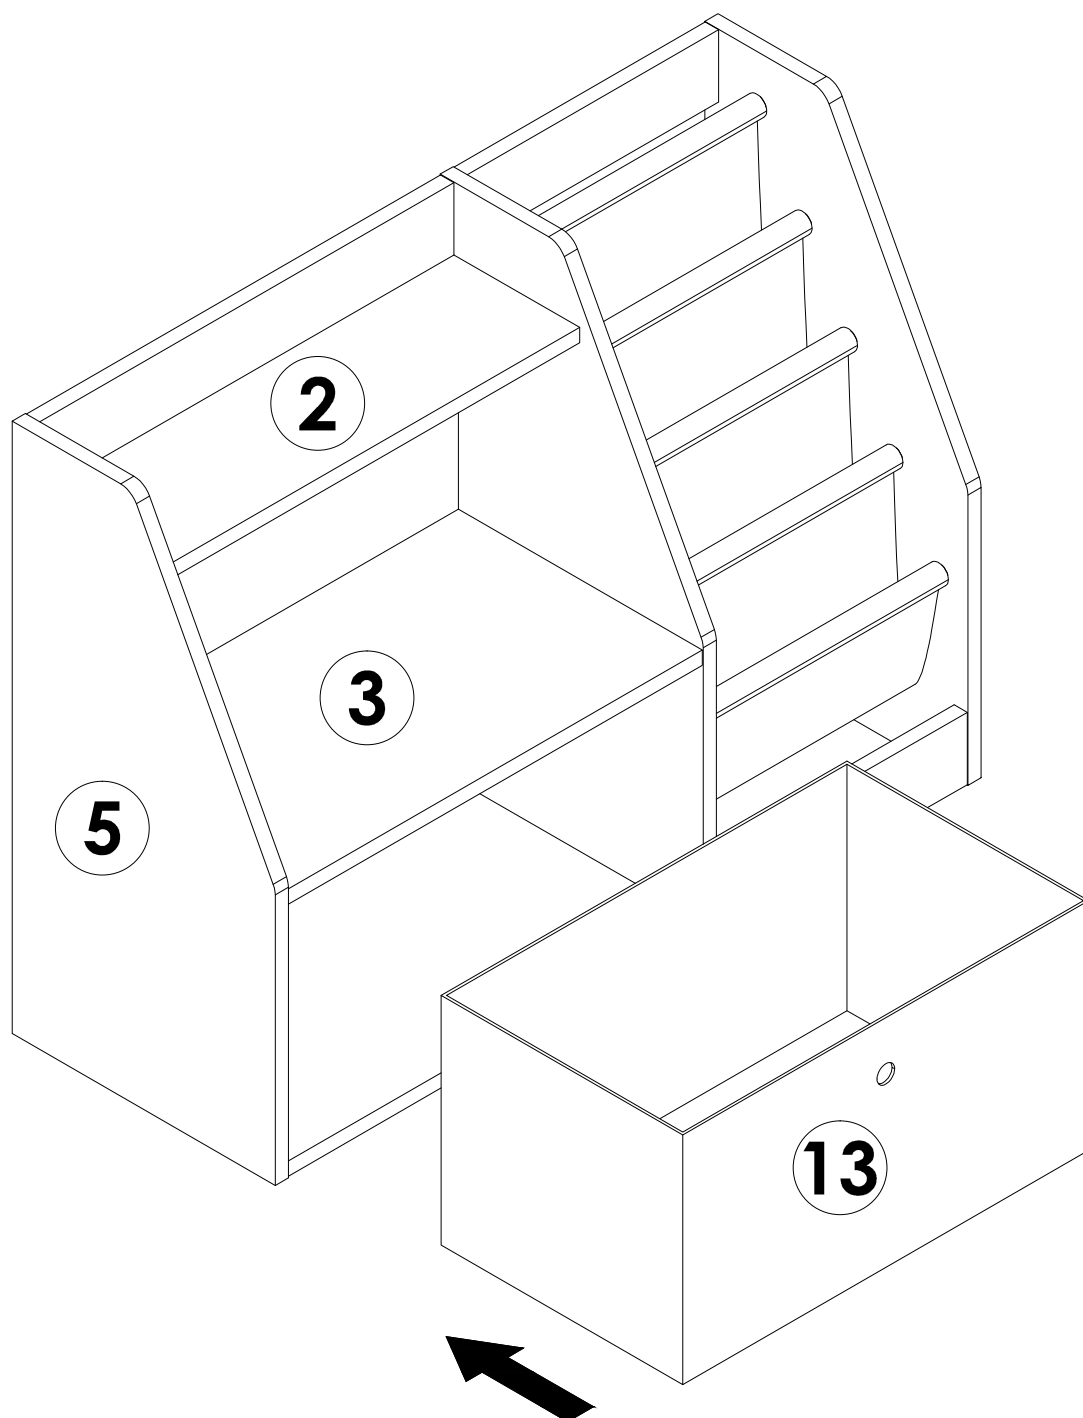


STEP 16

1. Install G to side panel ⑦ with screws H

2. Install I to back panel ⑧ ⑨ with screws H


(This step requires drilling holes with self-tapping screws H)

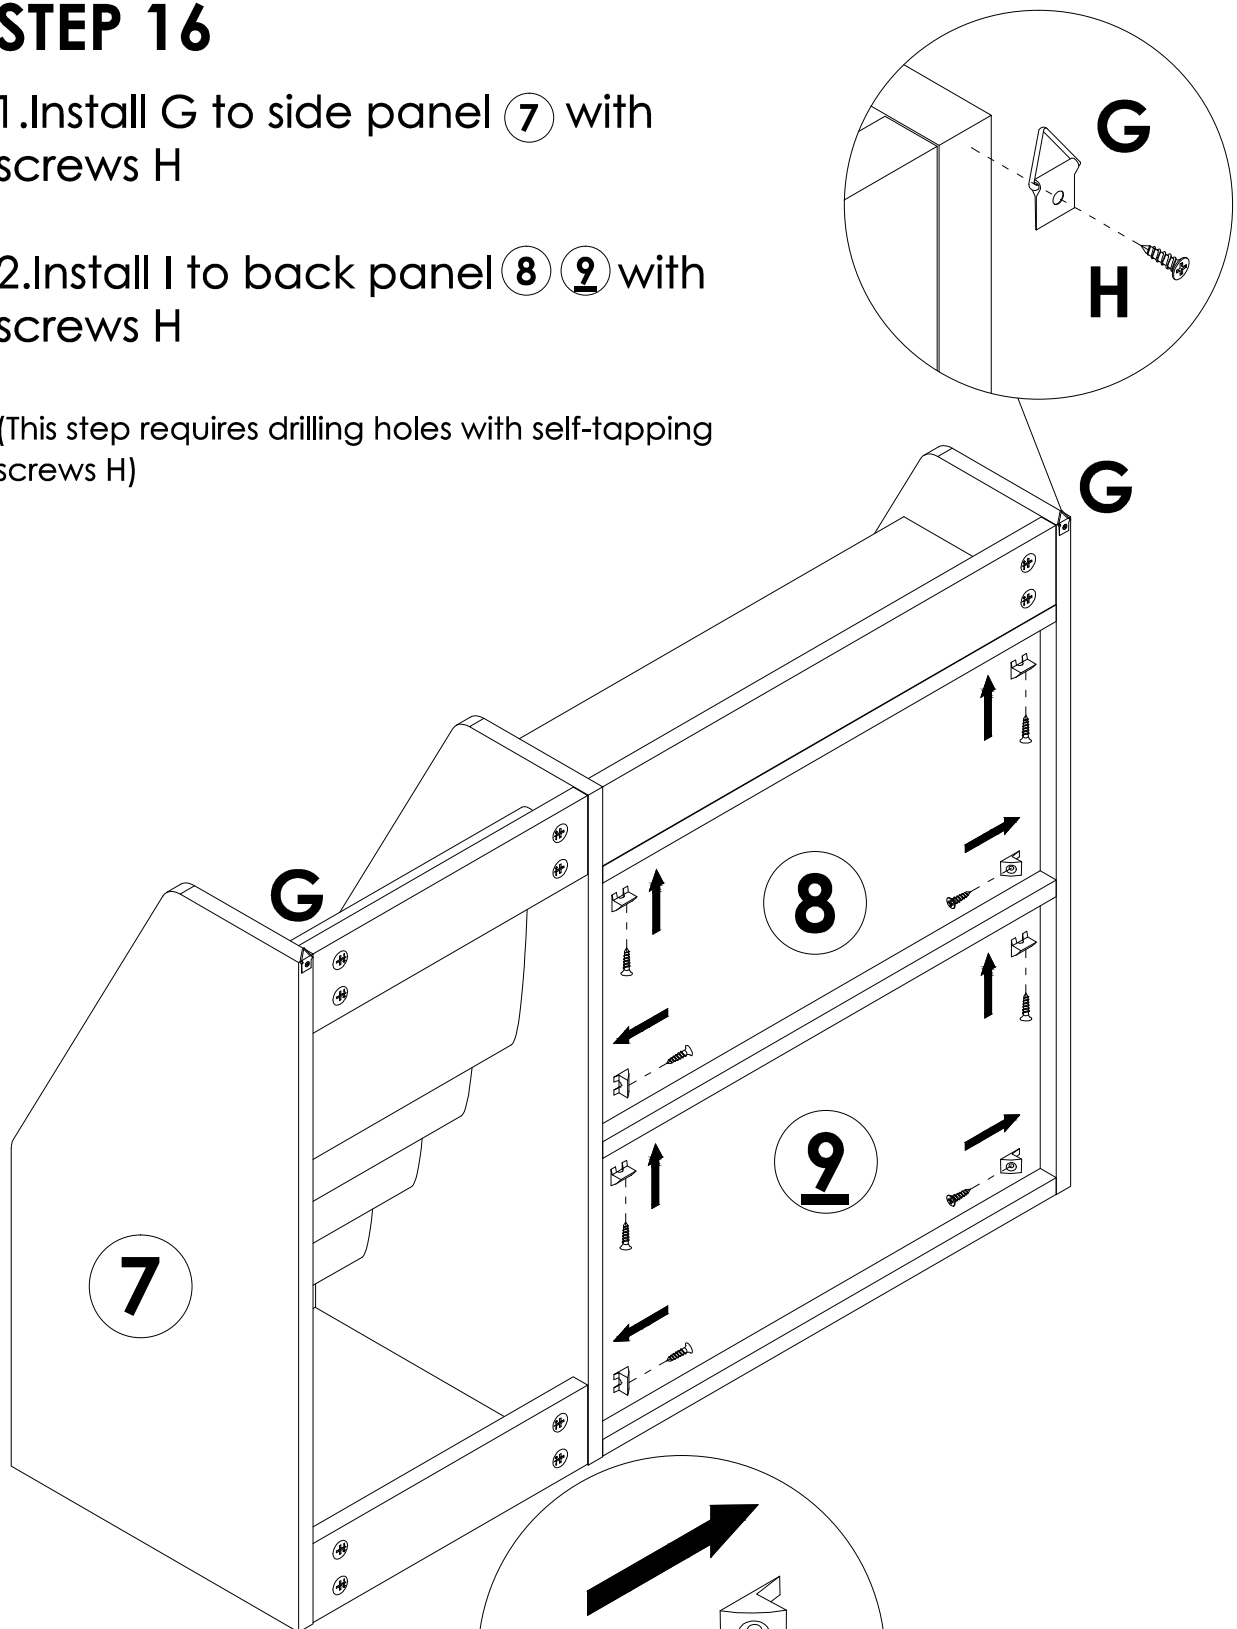

	G x 2PCS
	H x 10PCS
	I x 8PCS





STEP 17

1. Drill holes in the wall
2. Install part J/G/C to wall holes

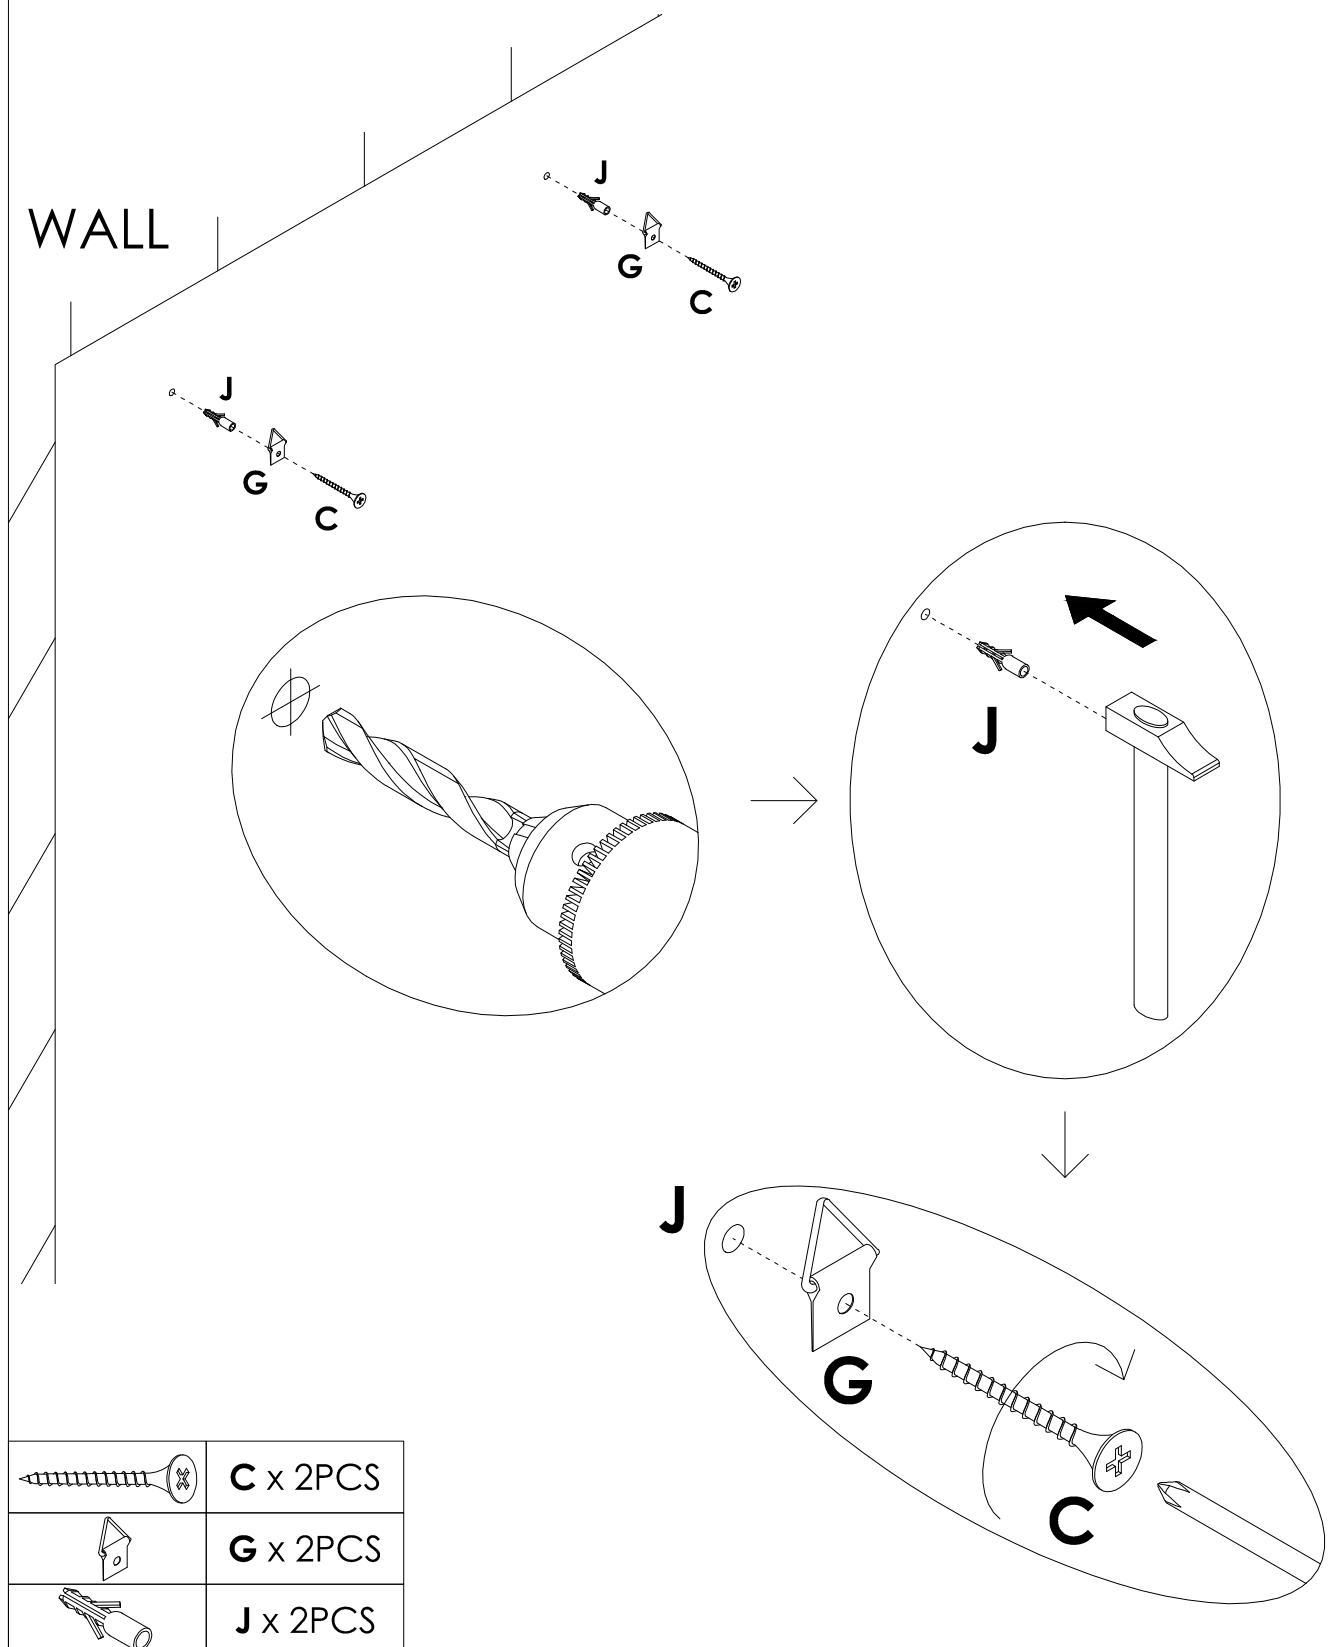

STEP 18

Install product to wall with K

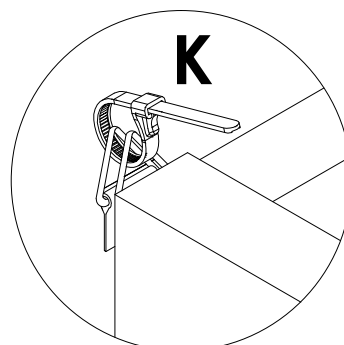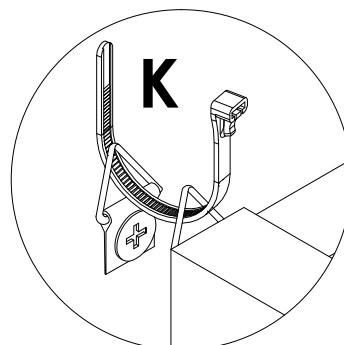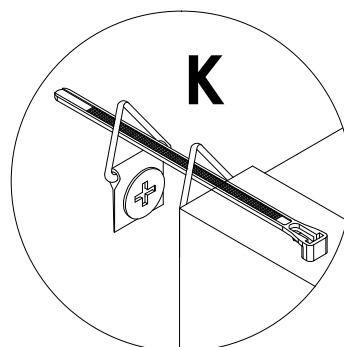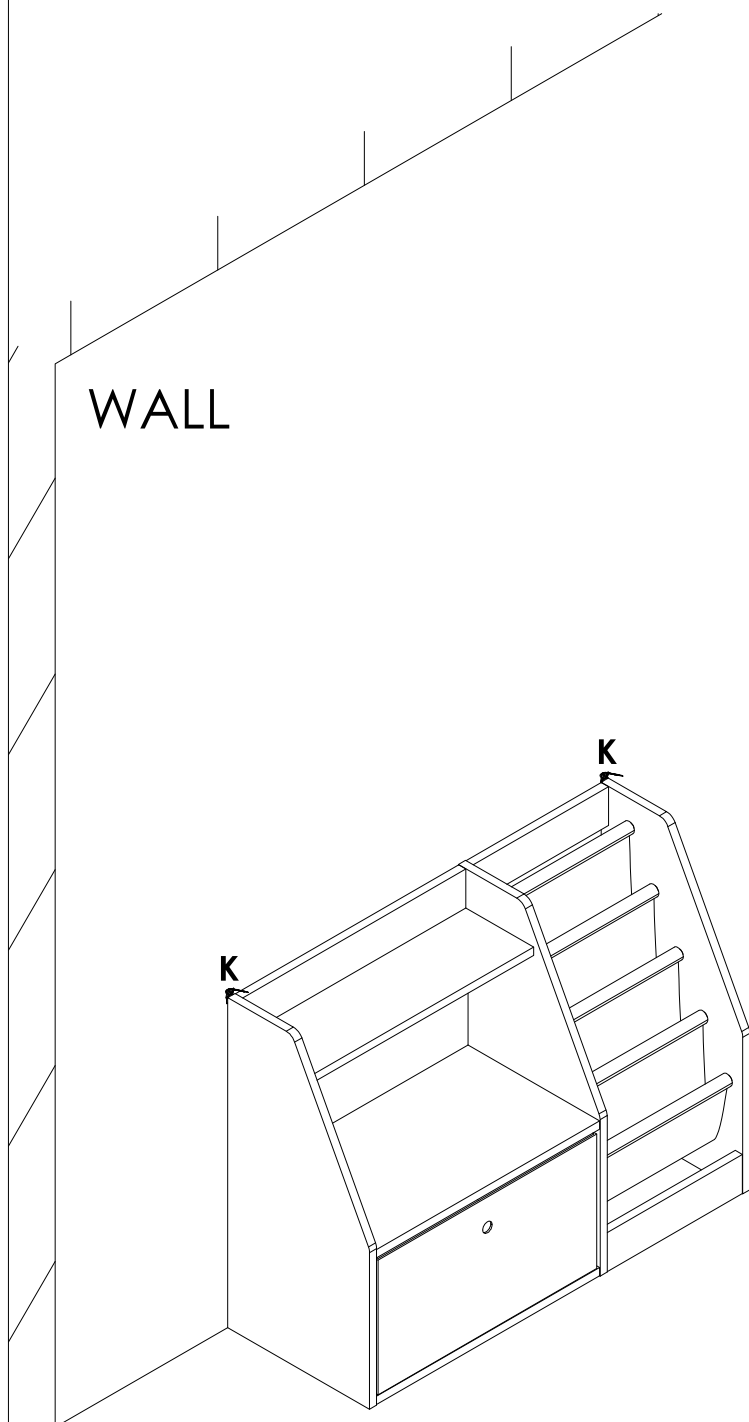

K x 2PCS