


ASSEMBLY INSTRUCTION

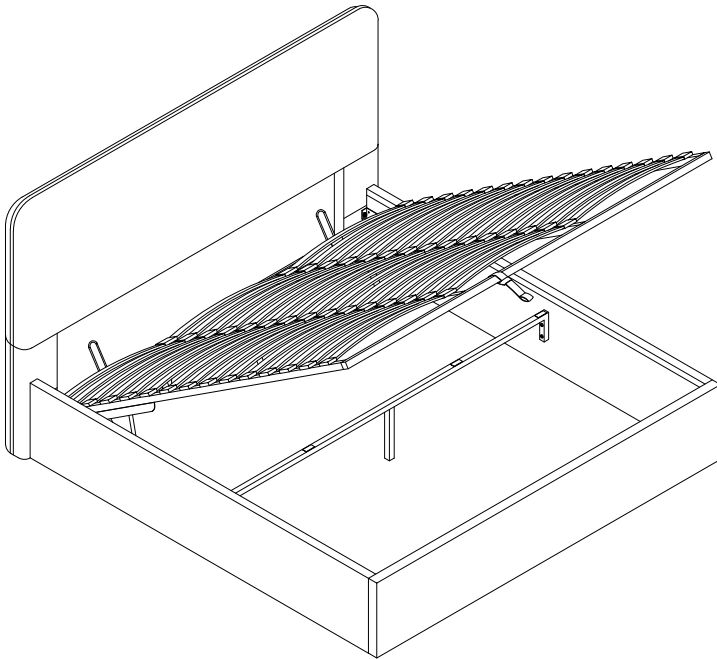

Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER: QD188

IMPORTANT NOTE


- 1. The product is shipped in two packages. Please check the number of packages received before assembly. If you are missing one package, receive a duplicate package, or have any assembly or after-sales issues, please contact happycustomerscn@hotmail.com**
2. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
3. Keep fittings out of children's reach and keep children well away from construction area.
4. When moving your assembled bed. it is best to lift the bed and never to drag it.
5. Do not use this product if parts are missing, damaged or worn.
6. This product should only be used on firm, level ground.
7. Please periodically check all fittings and re-tighten as necessary.
8. Do not use the bed unless all bolts and screws are firmly secured.
9. For further assistance, please provide a screenshot of your order and contact us via email at happycustomerscn@hotmail.com










Minimum two
person assembly

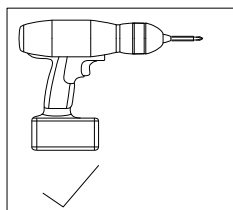

















PART LIST

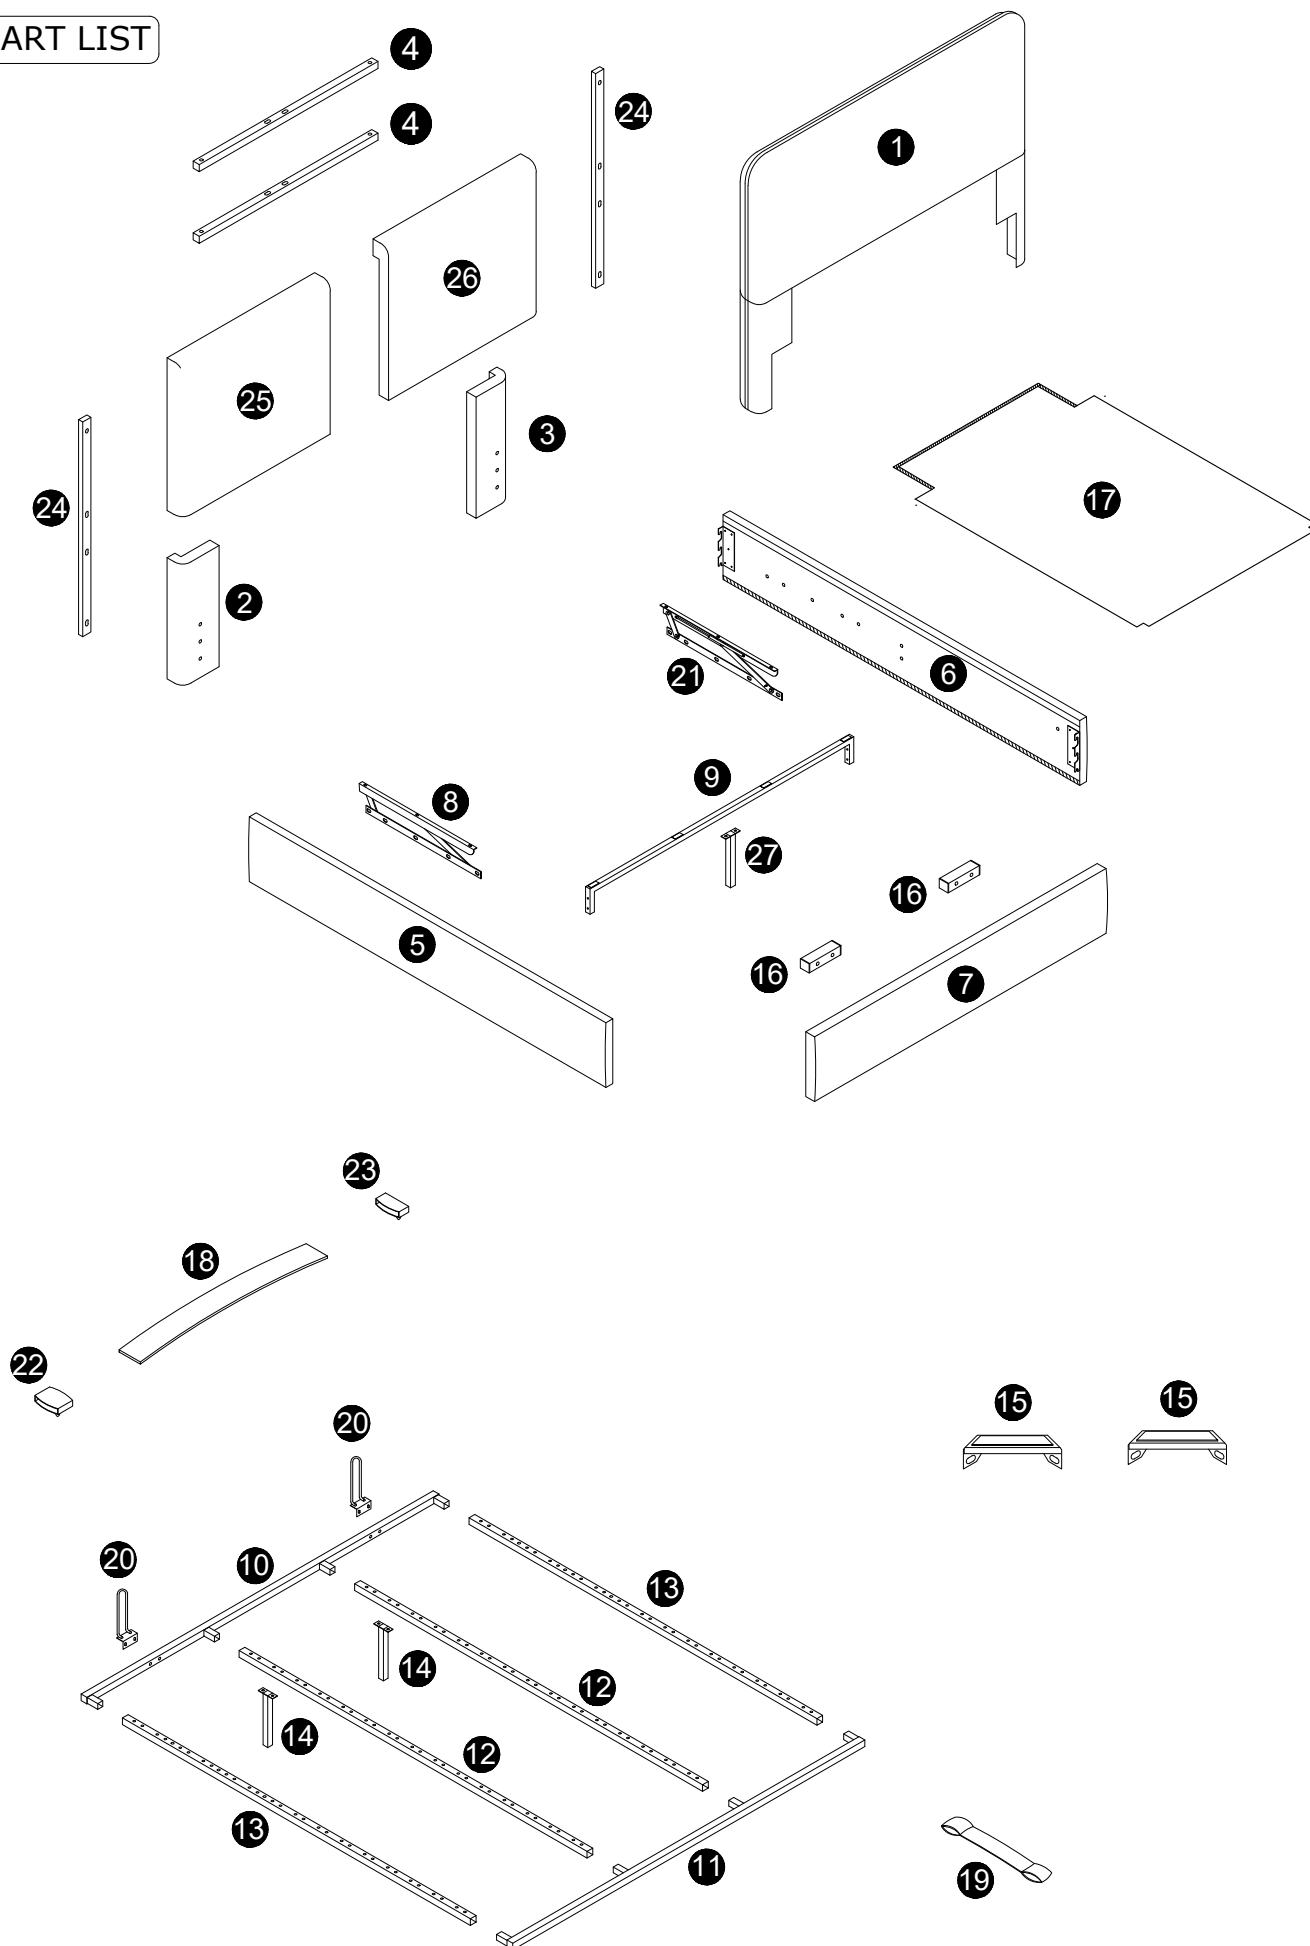

Components of Carton A

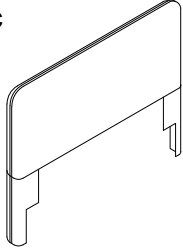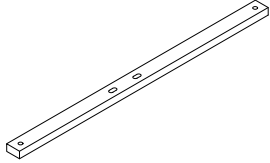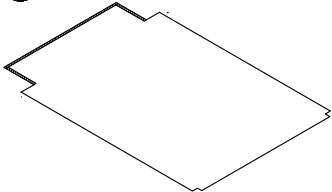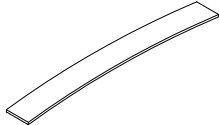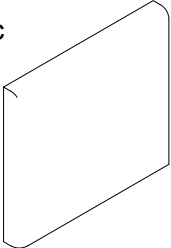
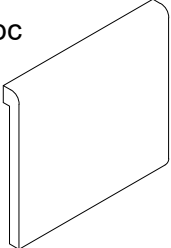
1 x 1pc 	2 x 1pc 	3 x 1pc 	4 x 2pcs (15x30x880mm) 
17 x 1pc 	18 x 45pcs 	25 x 1pc 	26 x 1pc 

Components of Carton B

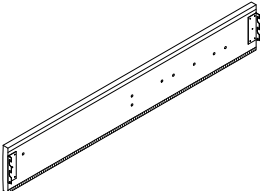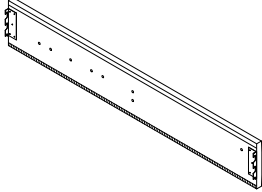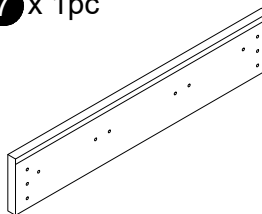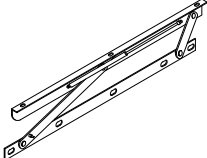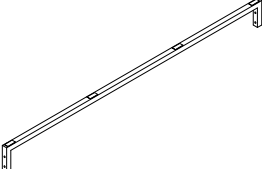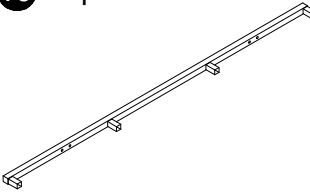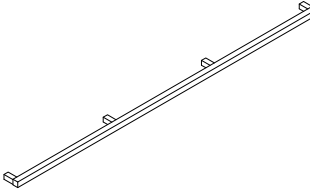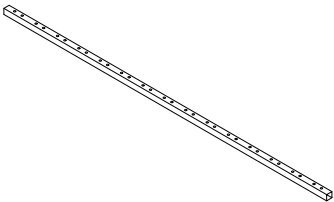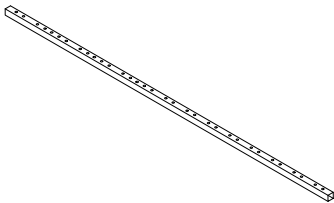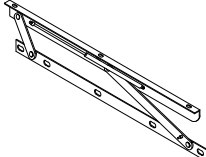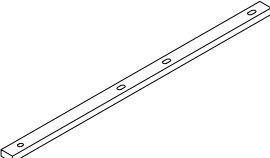
5 x 1pc 	6 x 1pc 	7 x 1pc 	8 x 1pc 
9 x 1pc 	10 x 1pc 	11 x 1pc 	12 x 2pcs 
13 x 2pcs 	14 x 2pcs (205 × 25mm) 	15 x 2pcs 	16 x 2pcs 
19 x 1pc 	20 x 2pcs 	21 x 1pc 	22 x 30pcs 
23 x 30pcs 	24 x 2pcs (20x40x810mm) 	27 x 1pc (180 × 25mm) 	


Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.

HARDWARE LIST


			
H1 M5 x 1pc	H2 M8x25mm x 52pcs	H3 M8x40mm x 16pcs	H5 M8 x 22pcs
			
H6 M8x22mm x 22pcs	H7 M8 x 6pcs	H8 M14 x 1pc	H9 M8x50mm x 14pcs

1

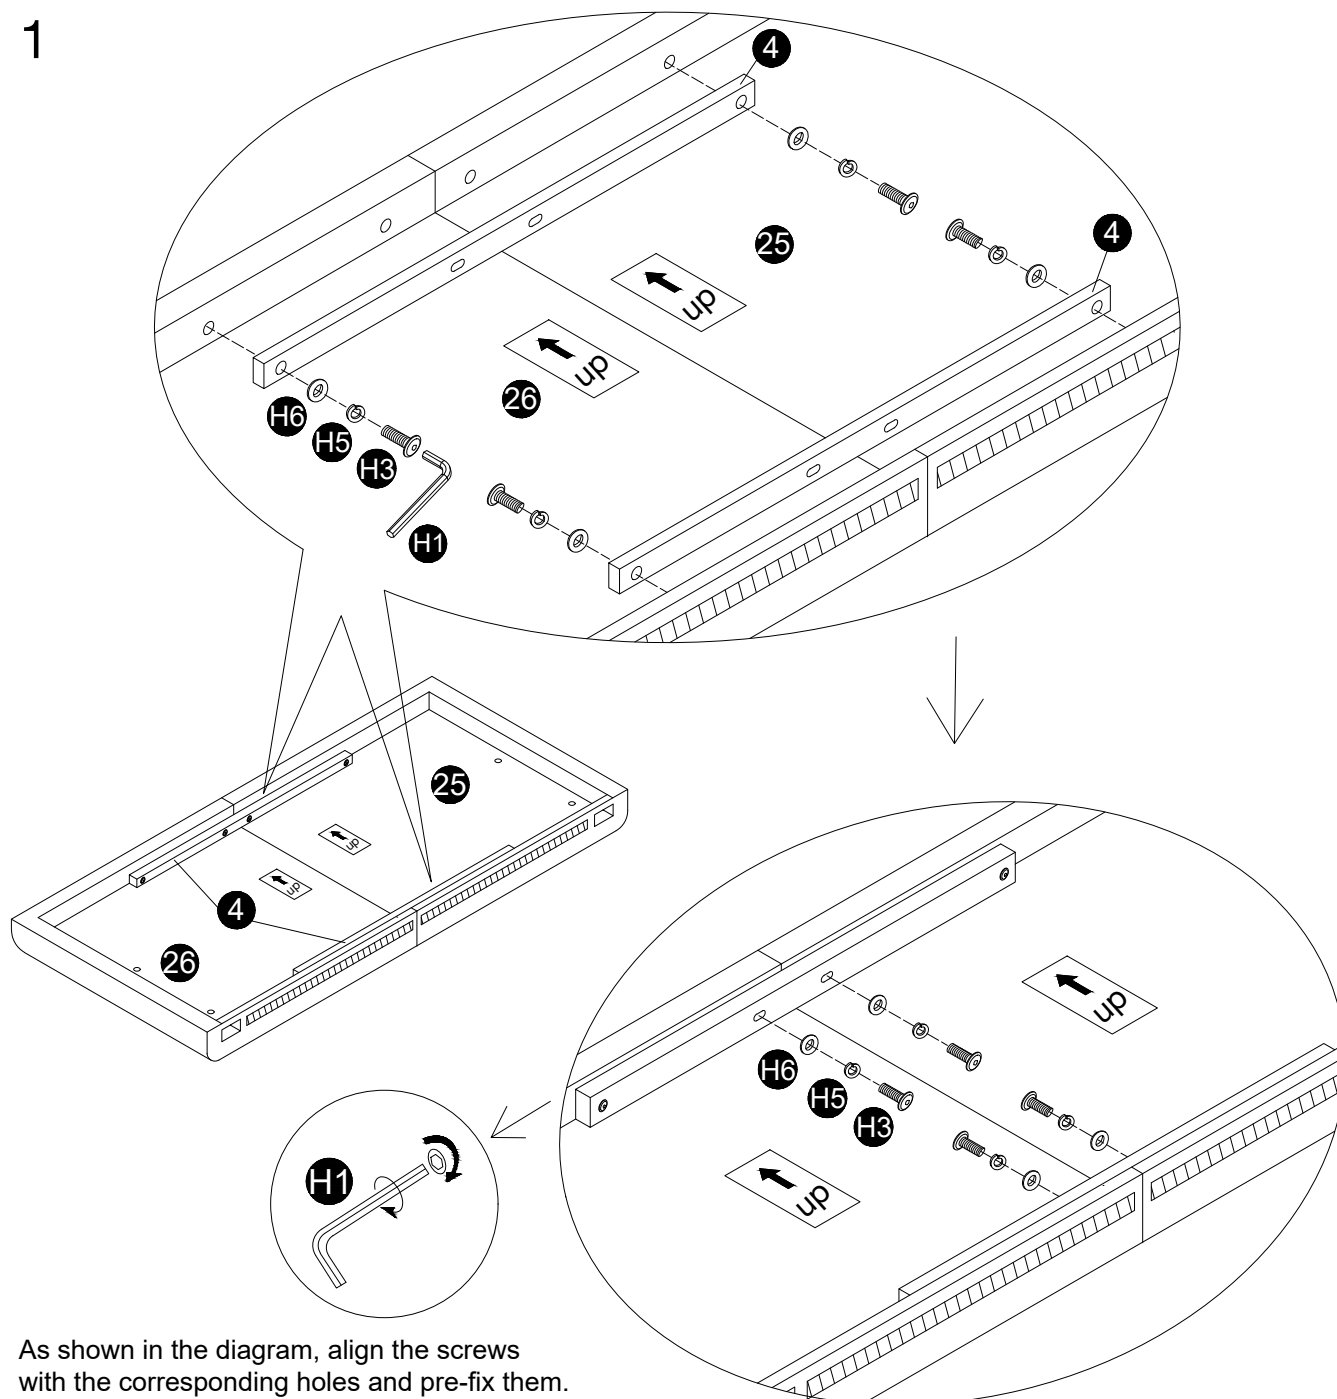

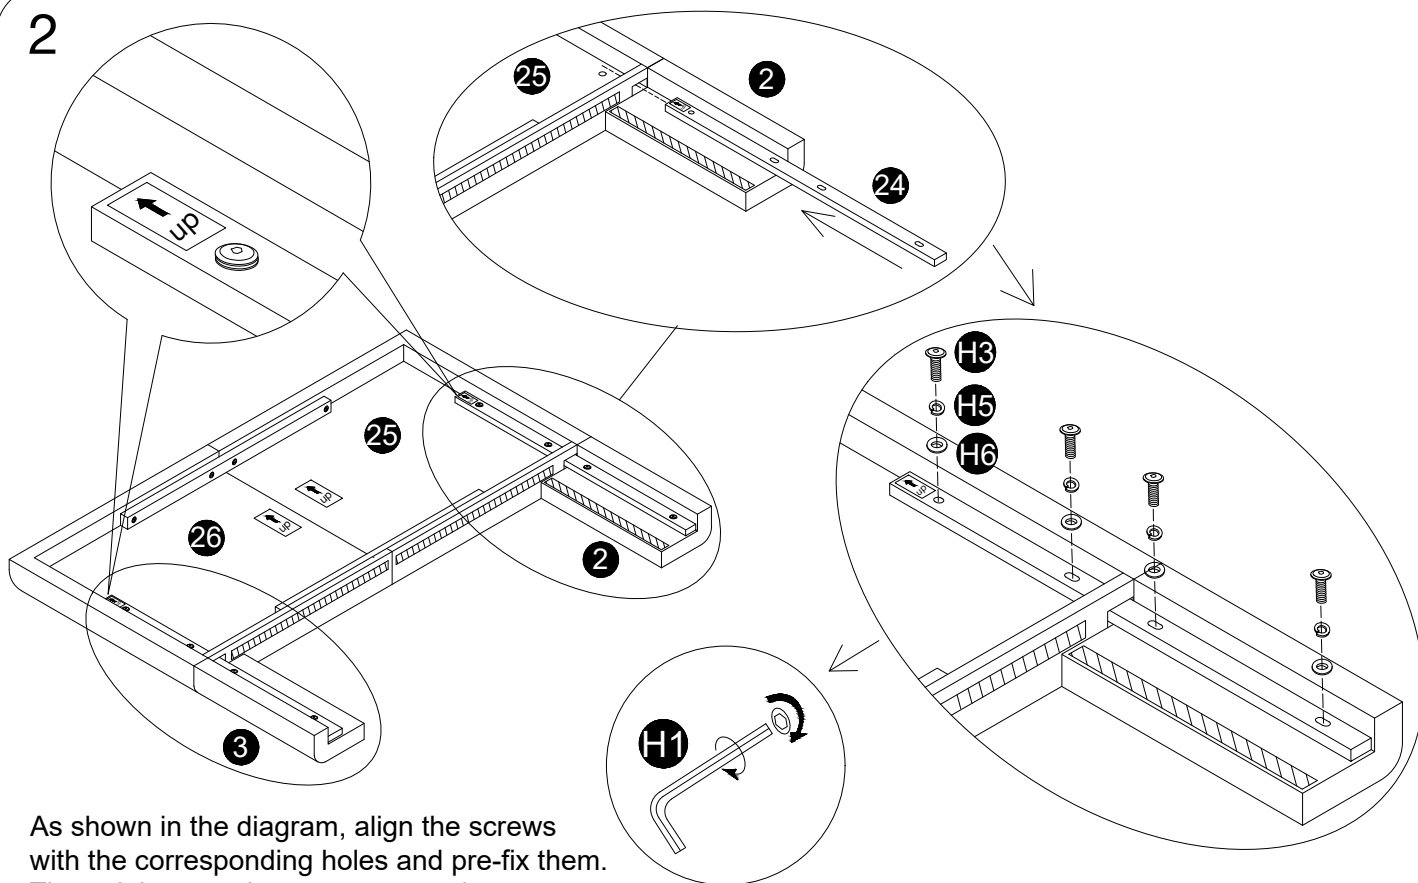


3 Slide the fabric cover (Part 1) over the headboard until it reaches the bottom, ensuring a full and secure fit.

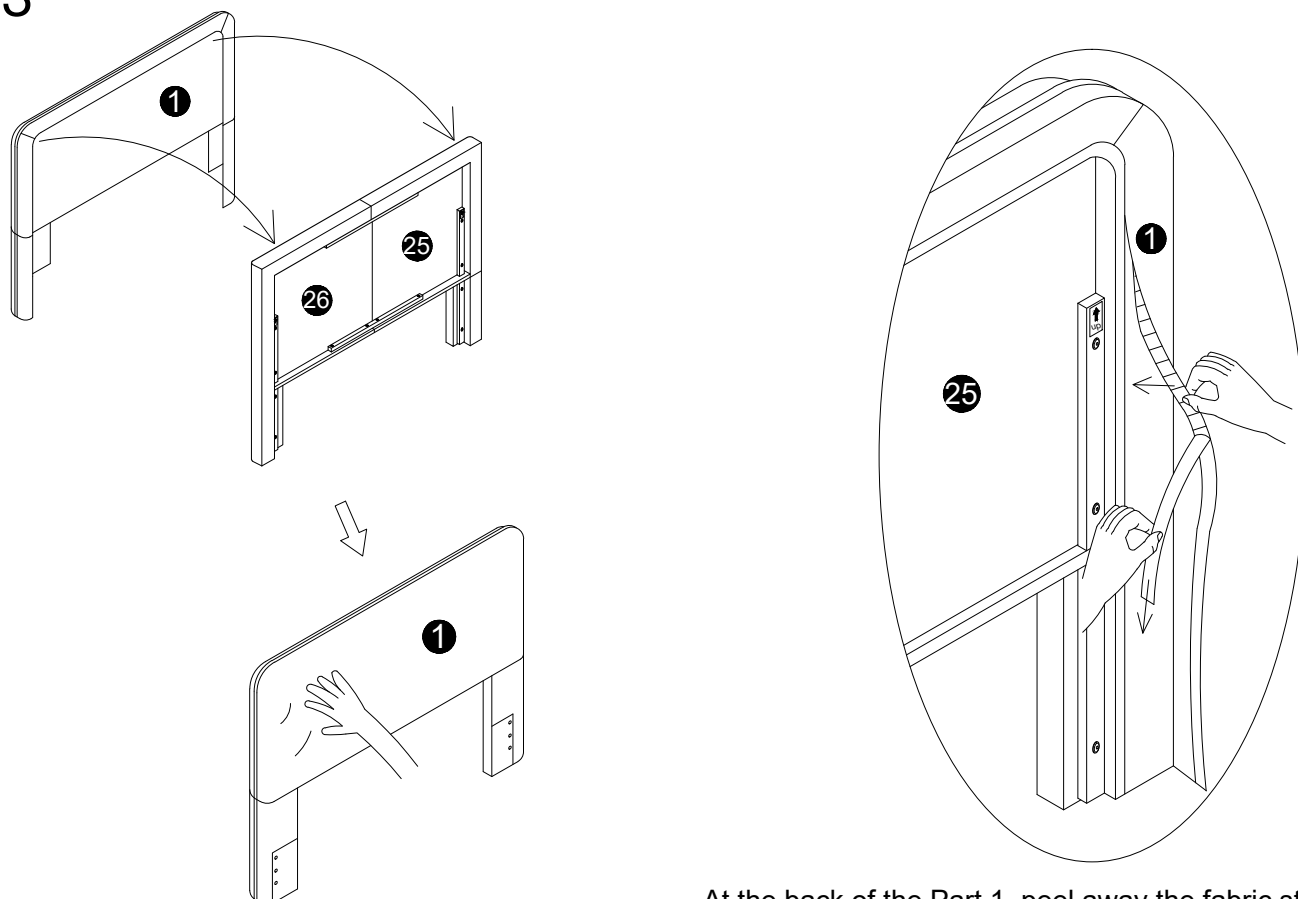


Smooth out any uneven areas or wrinkles by hand for a neat appearance.

At the back of the Part 1, peel away the fabric strip covering the Velcro while pressing the Velcro firmly onto the headboard.


4

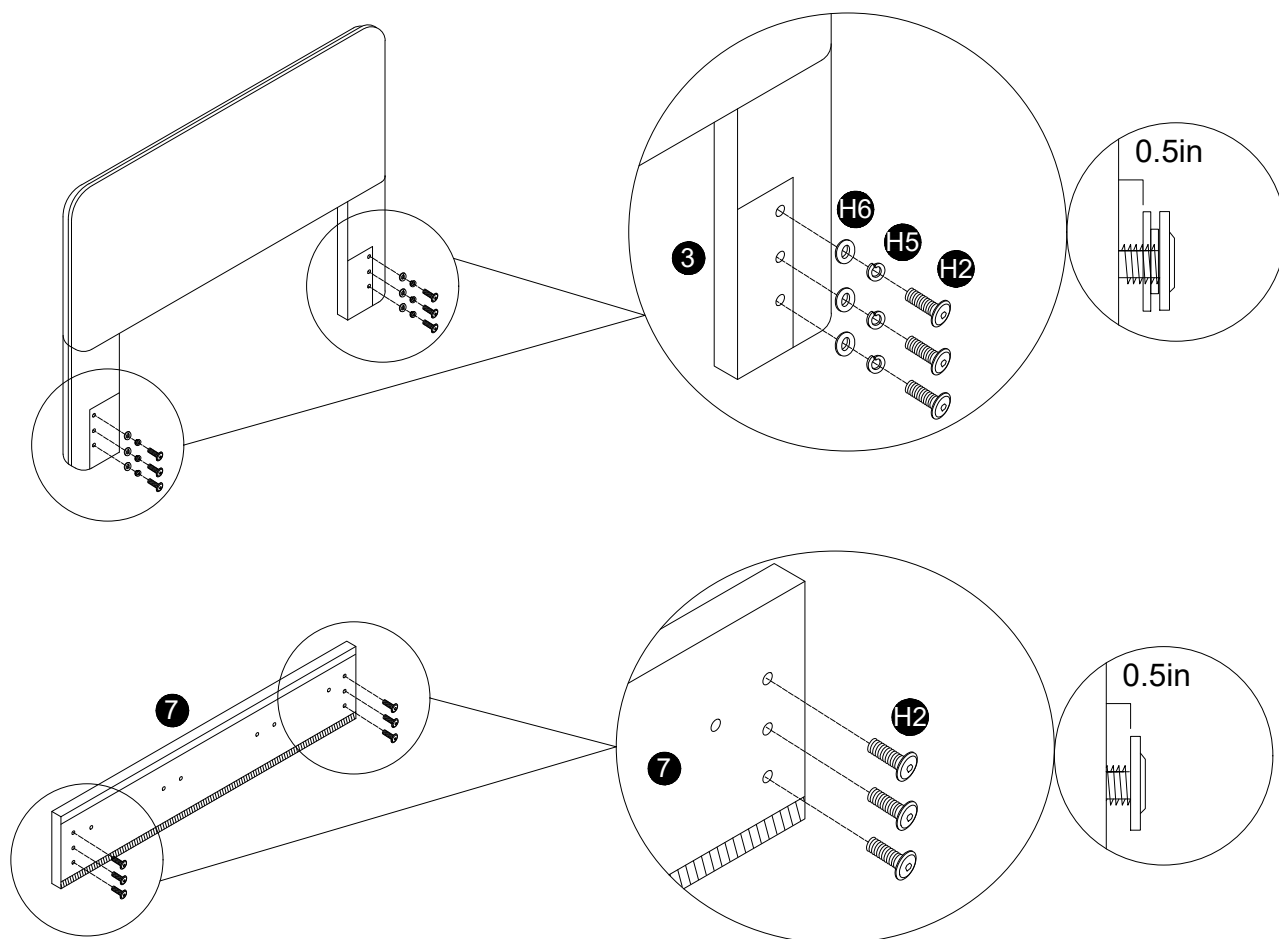


5

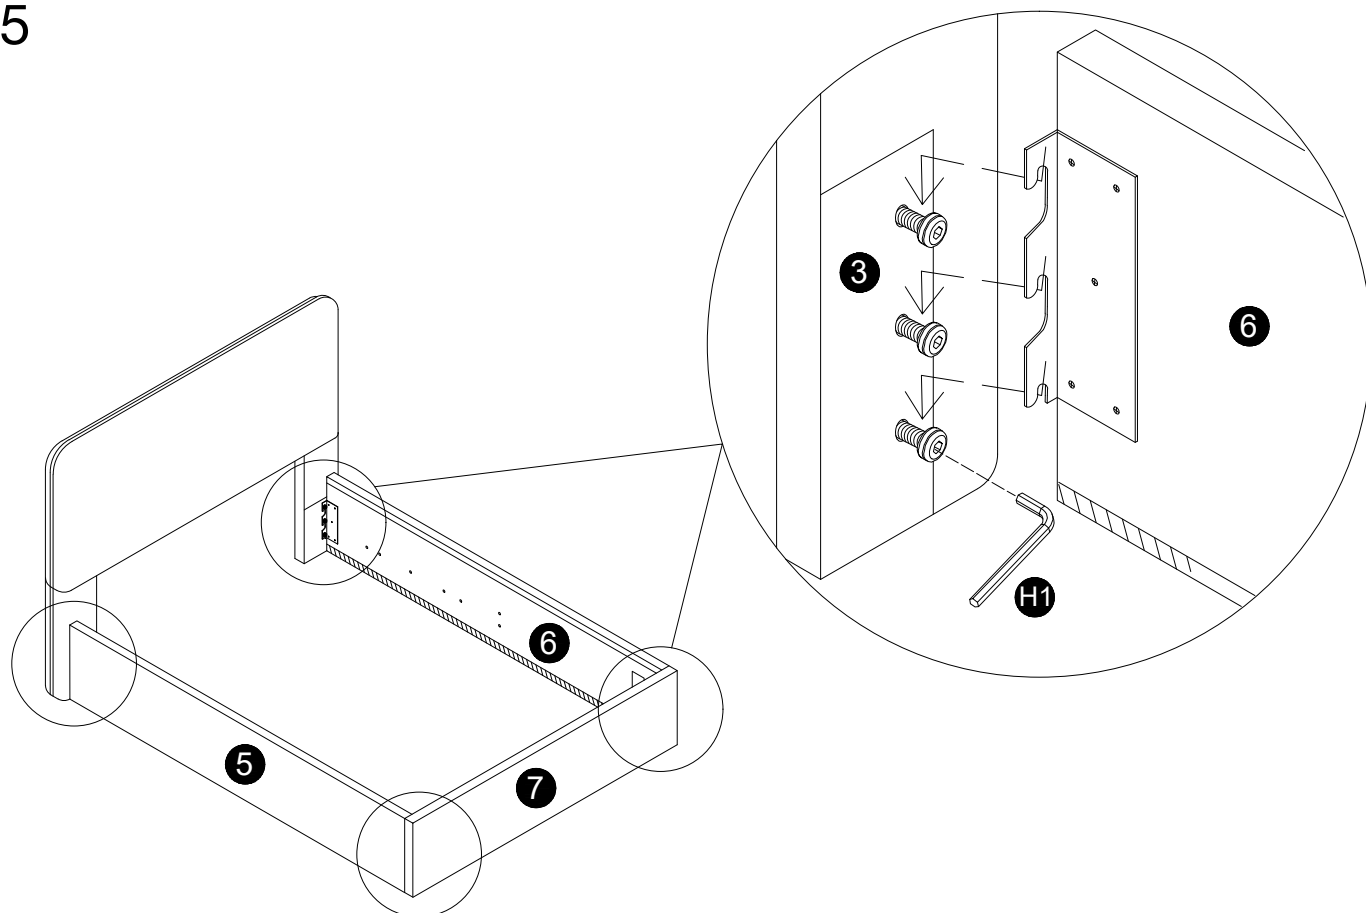


6

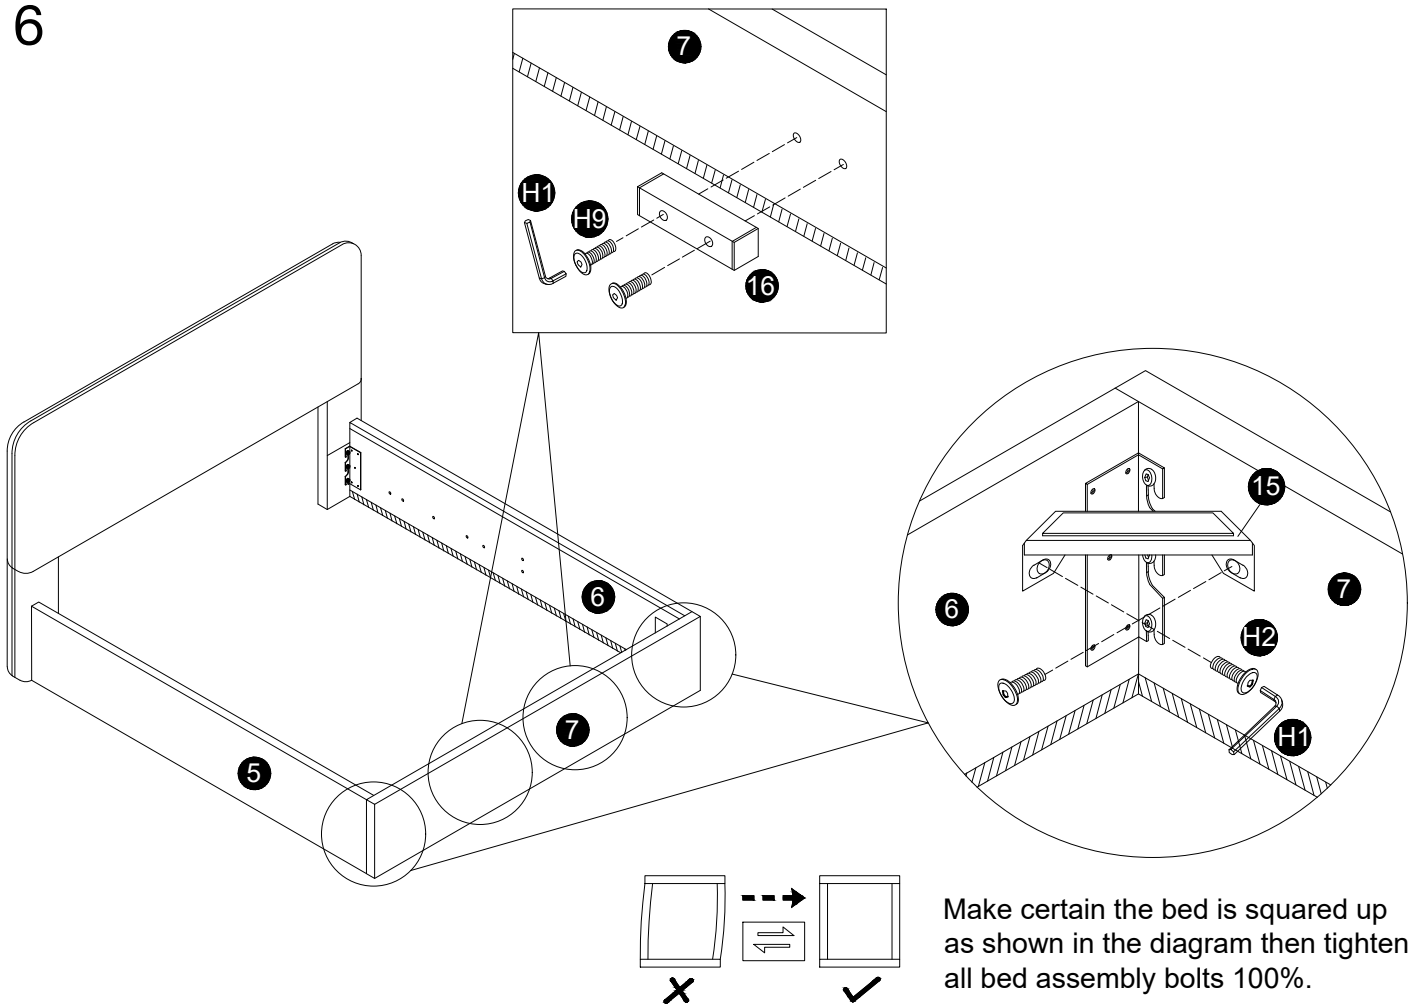


7

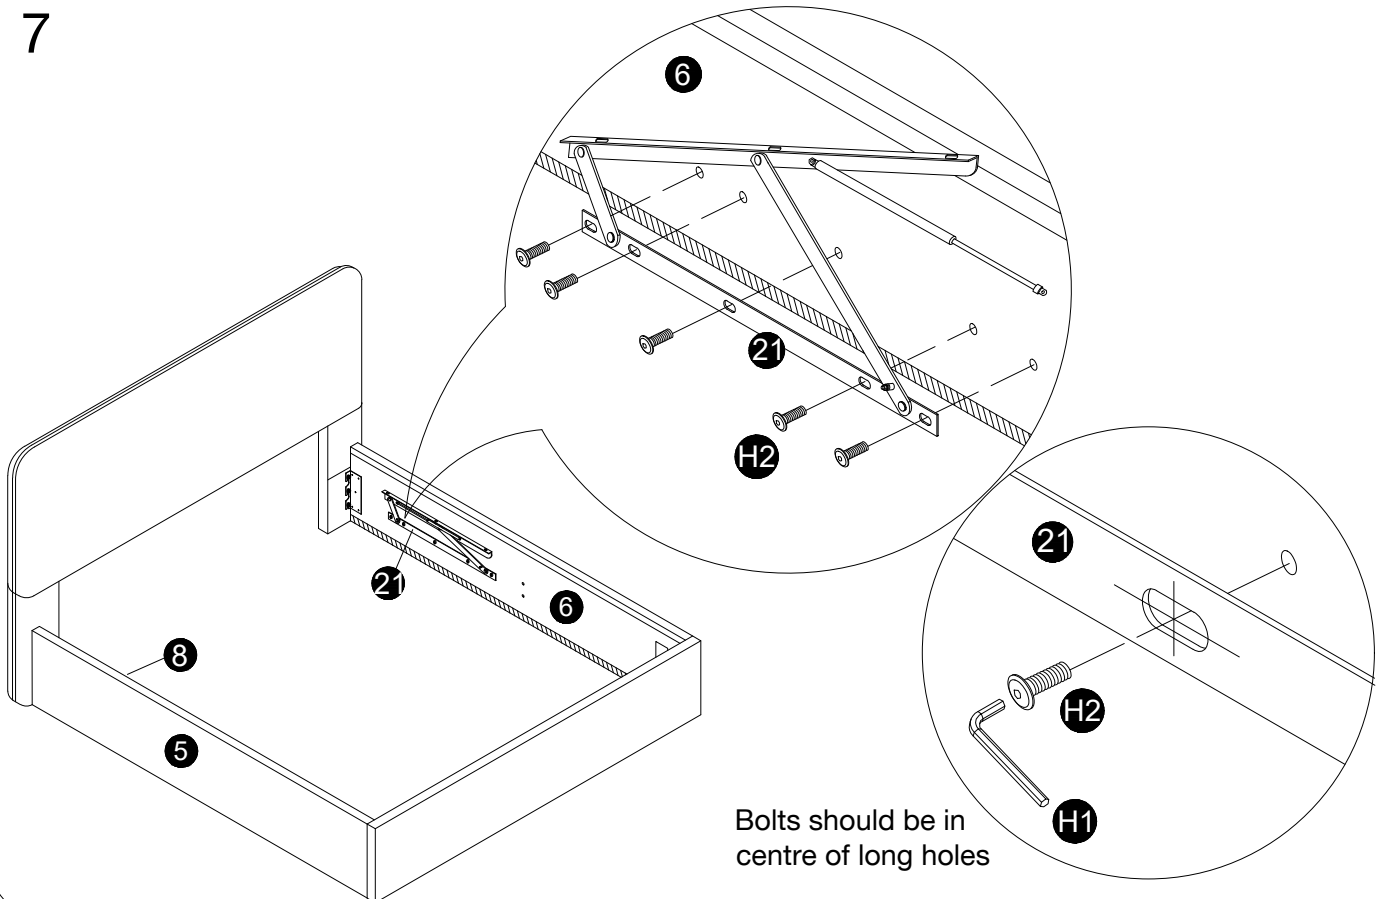


8

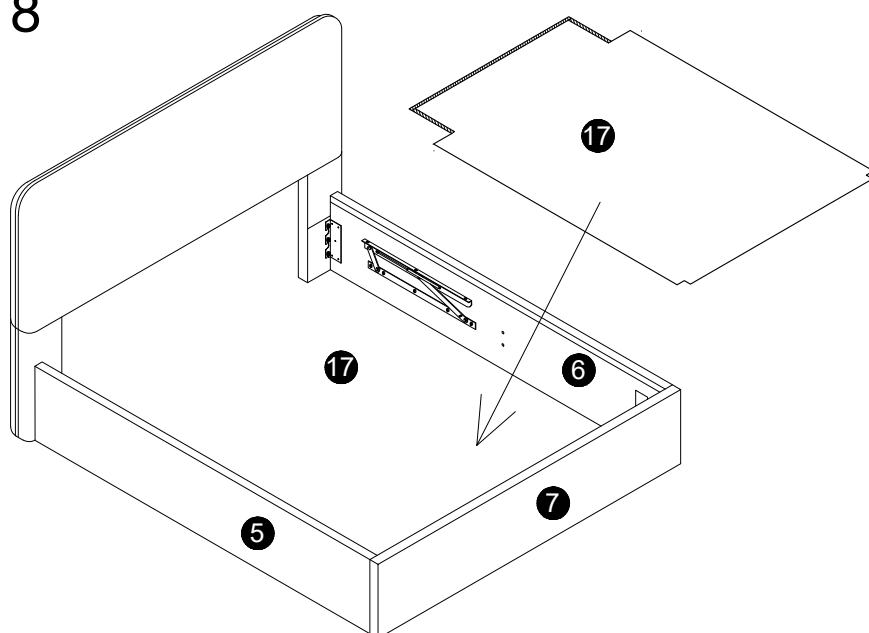


9

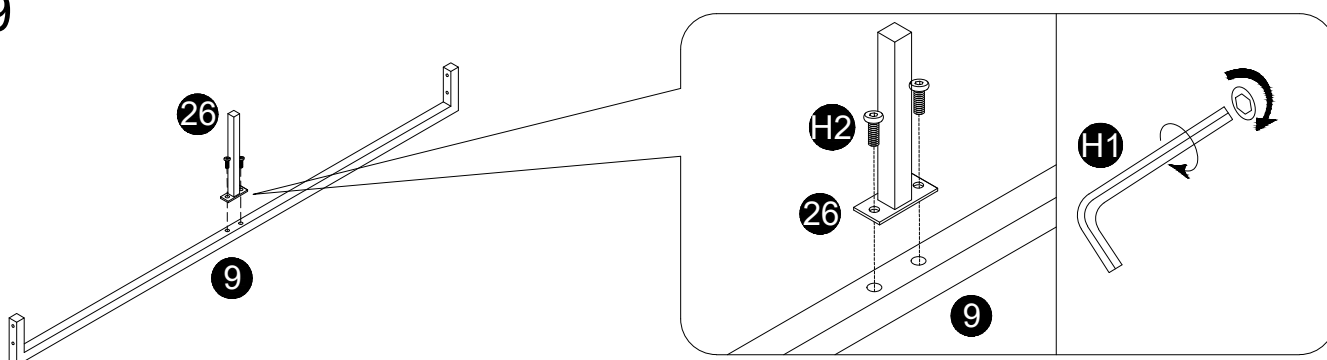


10

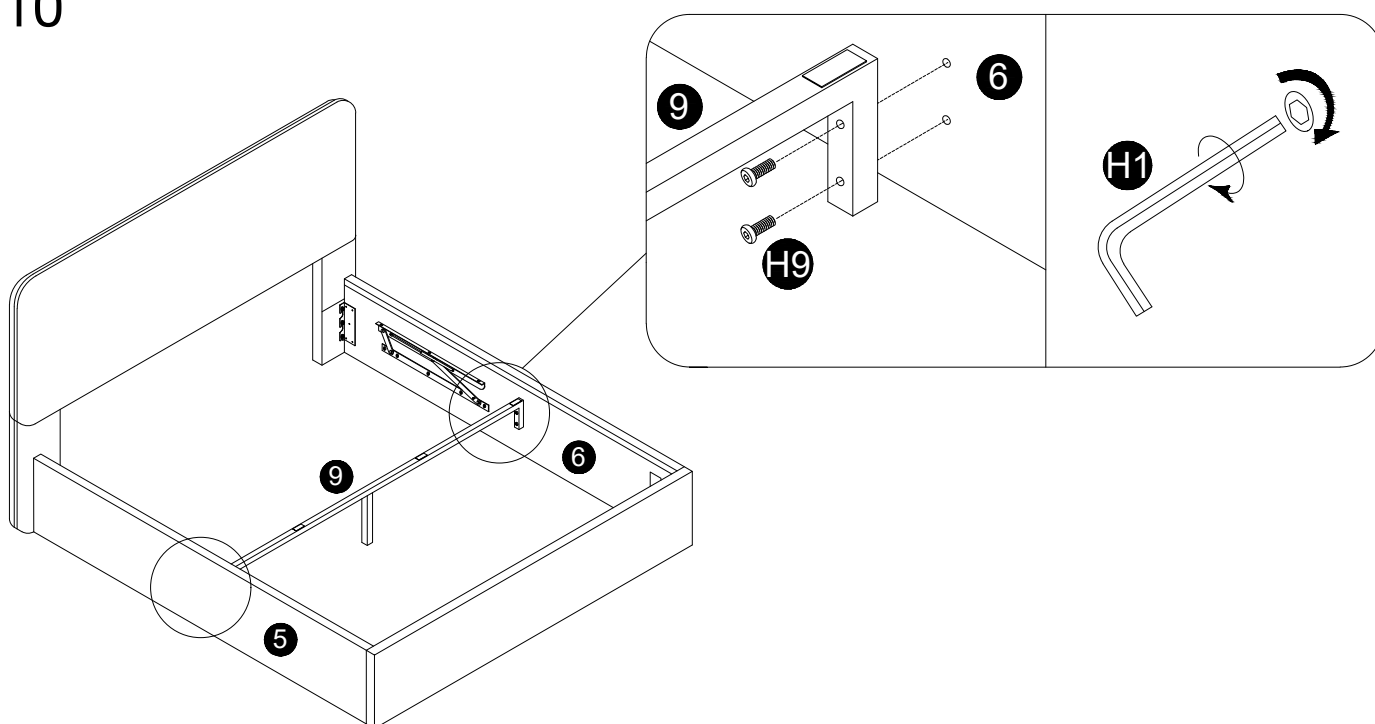


11

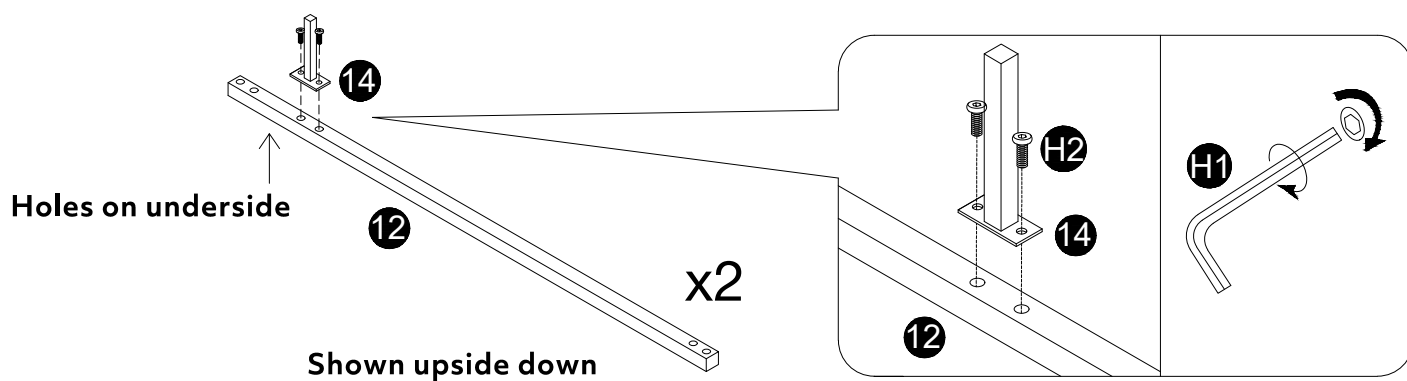


12

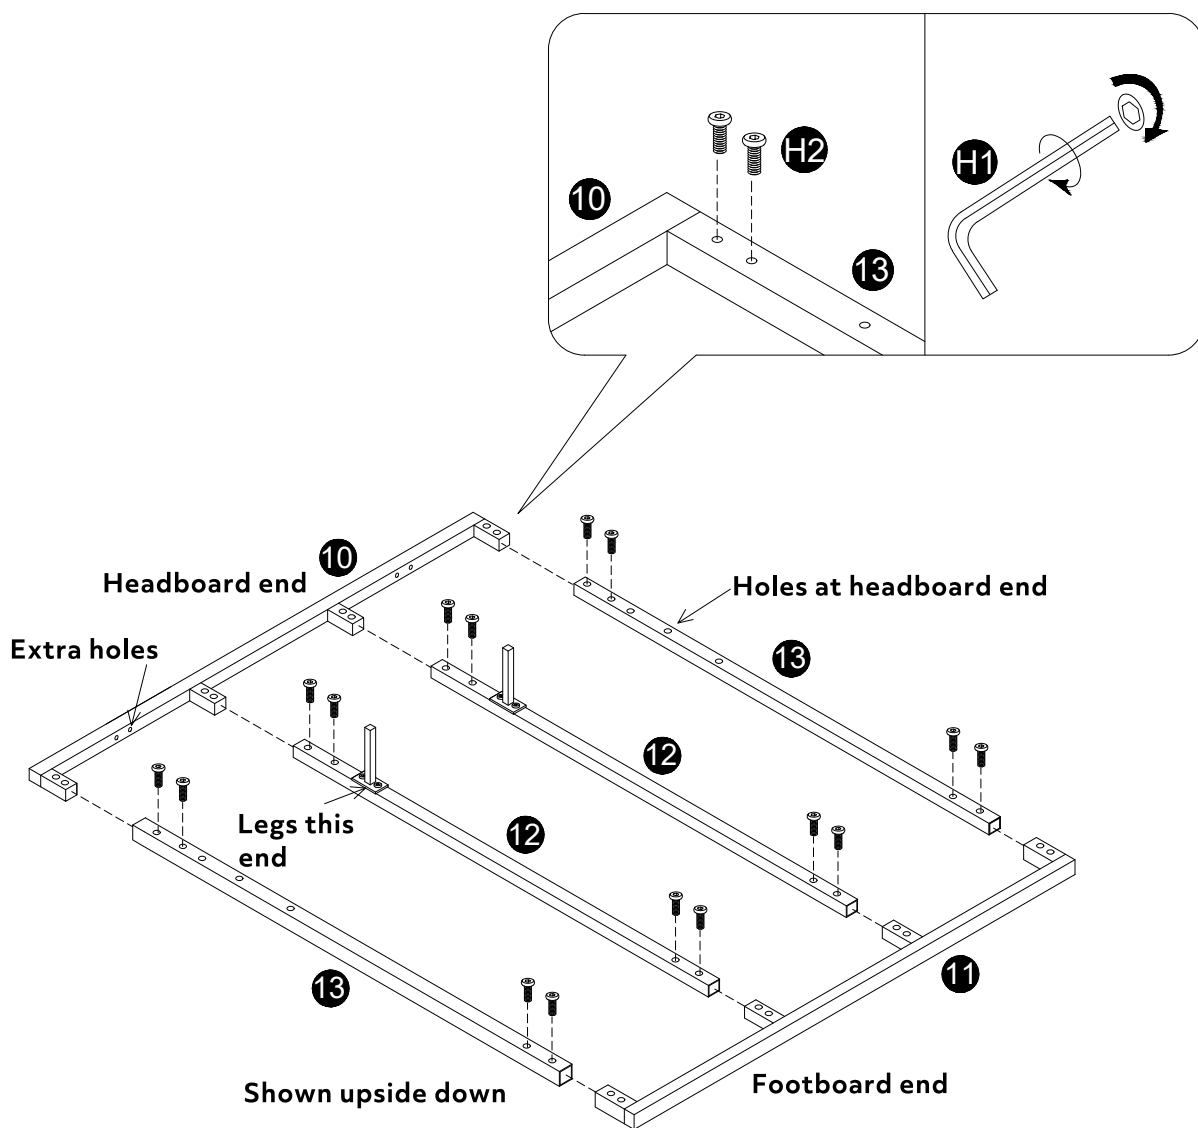






13

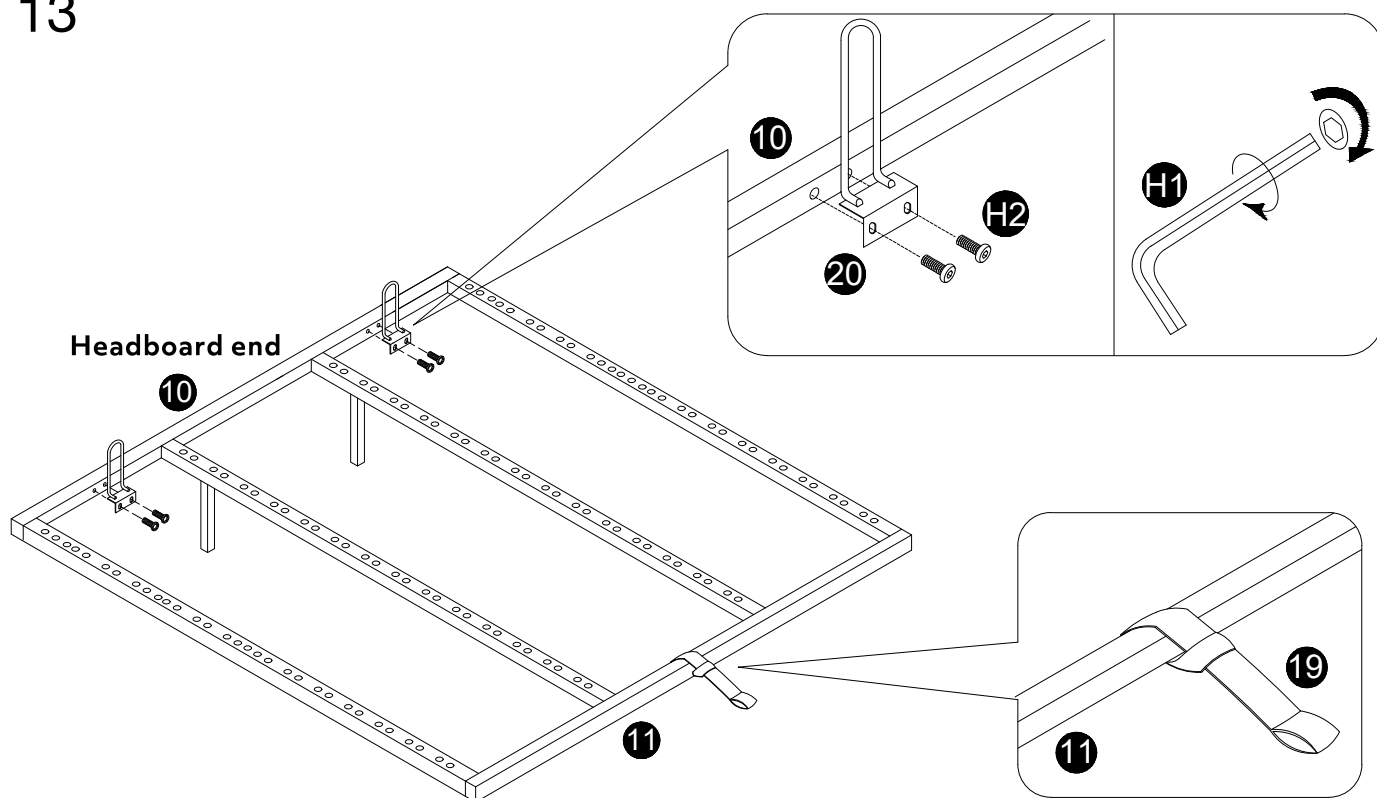

14

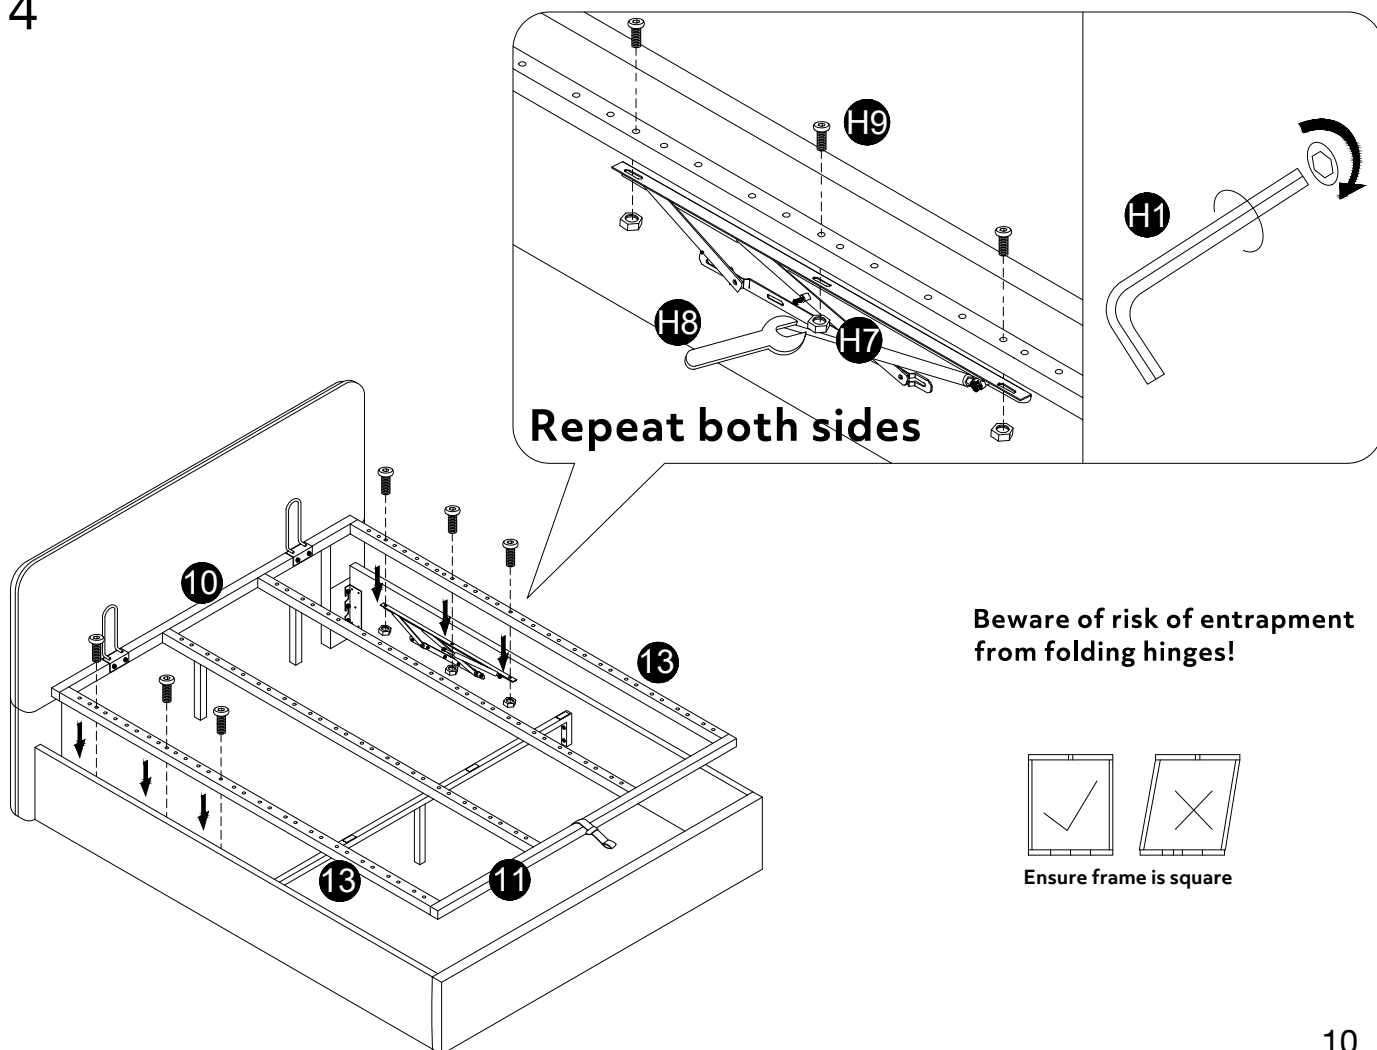



15

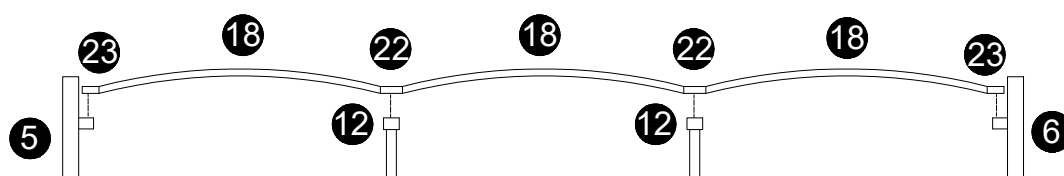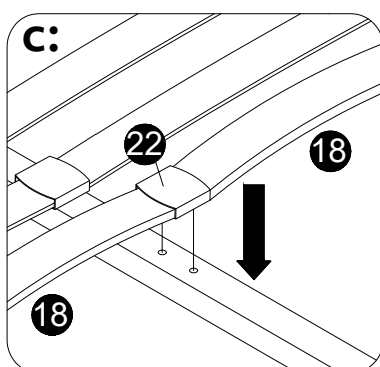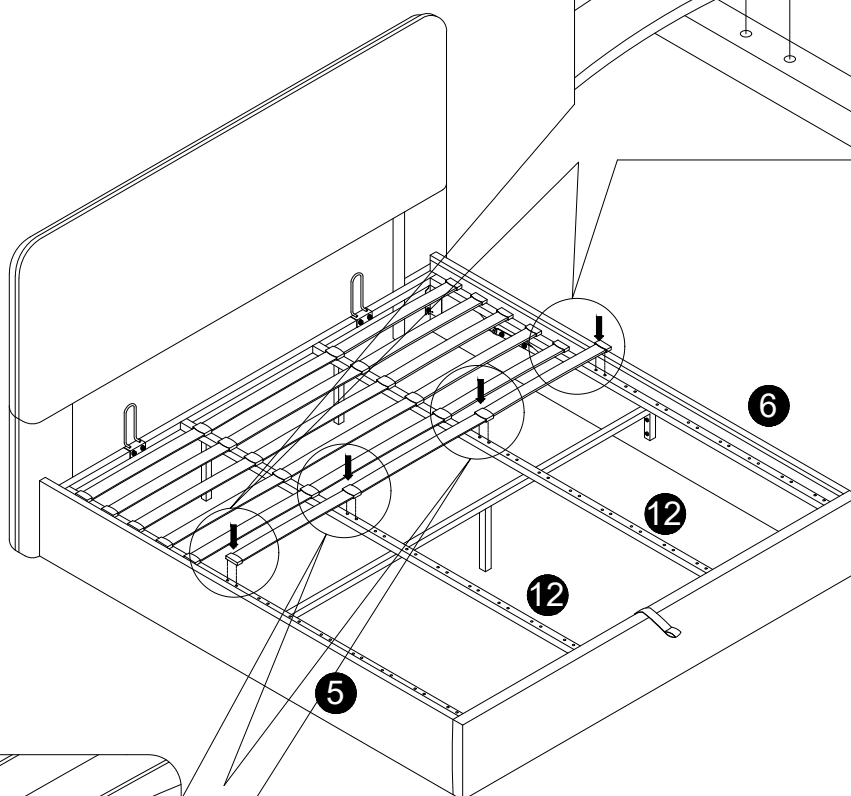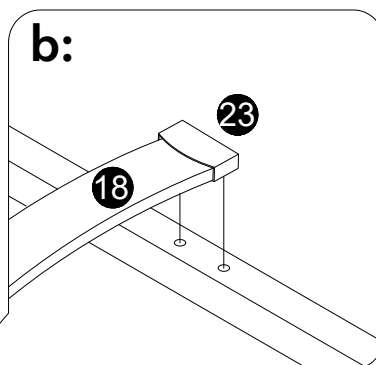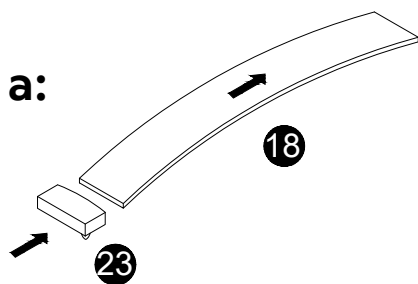

Slats to arch upwards

16

Warning: Two people required. Frame to be fully supported at all times!

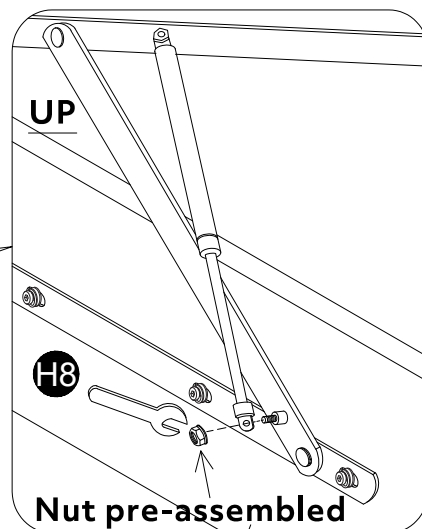
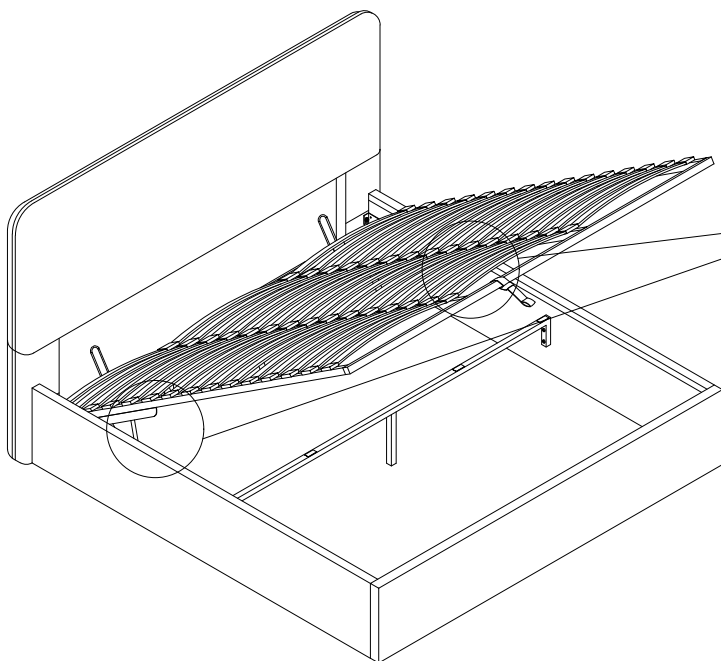


Repeat both sides

Important: Before proceeding, check and ensure all screws and fixings are fully tightened.

17

After placing the mattress on frame, push down the frame with 30lbs force.

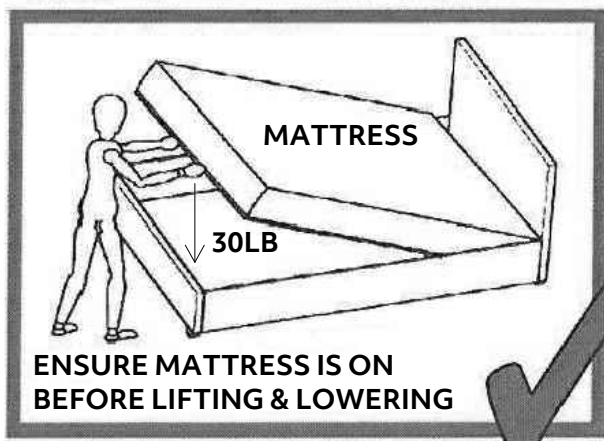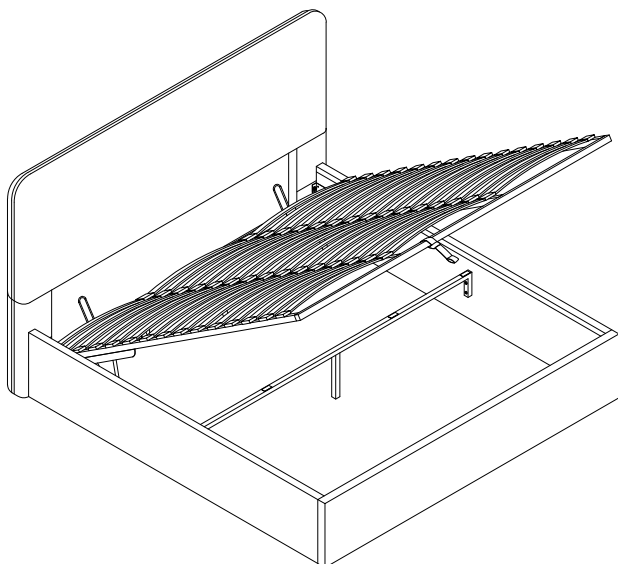

⚠ Only lift when the mattress is in place. Place mattress & Carefully lower frame down. Keep objects/body part & children away from moving parts.

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.