



78.74" Sofa Table Installation Instruction

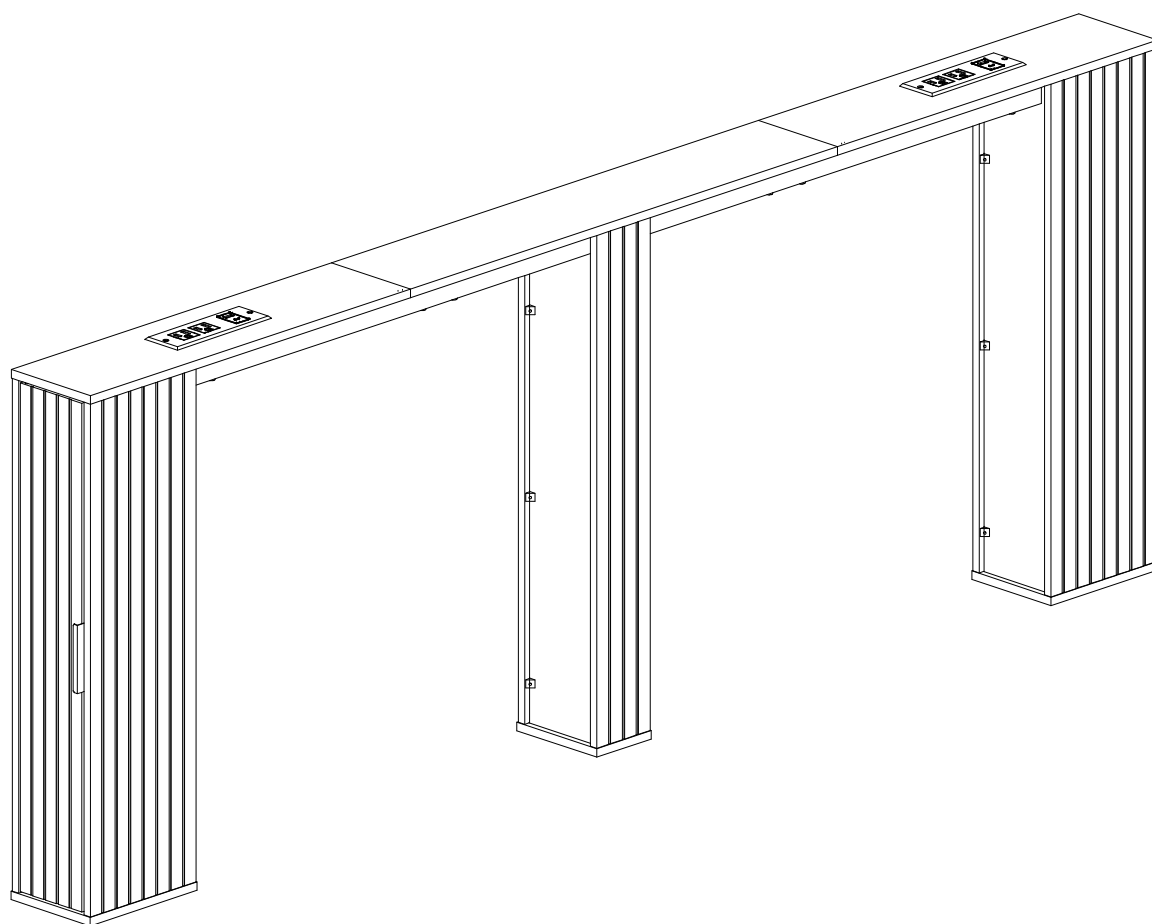

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

|

35

lbs per

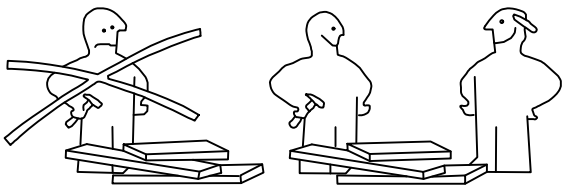


What' included

Code Description		Qty
A	Hex Wrench (4mm)	1
B	Flat Screw (ST3x12mm)	36
C	Pivot Bracket	4
D	Cam Bolt (M6x35mm)	26
E	Cam Lock (15x10mm)	26
F	Wood Dowel (8mm)	22
G	Hex Socket Screw (M6x12mm)	4
H	Hex Socket Screw (M6x38mm)	16
I	Flat Screw (ST4x40)	13
J	Metal Striker Plate	2
K	Magnetic door stop	2
L	EVA cushion	12
M	Back Panel Retainer	24
N	Self-Adhesive Bumper	12
O	Plastic Anchor (M6x40mm)	3
P	Anti-Tip Strap	3
Q	Concealed Handle	2
R	Power Socket	2
S	Truss Screw (ST4x10mm)	3
T	Flat Screw (ST3x14mm)	4

The Hardware

(A)



(B)



(C)



(D)



(E)



(F)



(G)



(H)



(I)




(J)




(K)



(L)



(M)



(N)



(O)




(P)



(Q)



(R)



(S)



(T)




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. You can use a screwdriver. Power tools can also be used. (Be careful with power tools)


Included Accessories


Code	Description	Qty
1	Left Side Panel	2
2	Right Side Panel	2
3	Back Panel	2
4	Door Panel	2
5	Bottom Panel	1
6	Shelf Panel	2
7	Side Panel (Middle)	2
8	Back Panel (Middle)	2
9	Bottom Panel (Middle)	1
10	Shelf Panel (Middle)	1
11	Bottom Panel	1
12	Top Panel 1	1
13	Connecting iron pipe 1	1
14	Connecting iron pipe 2	1
15	Top Panel 2	1
16	Top Panel 3	1

The Accessoriess

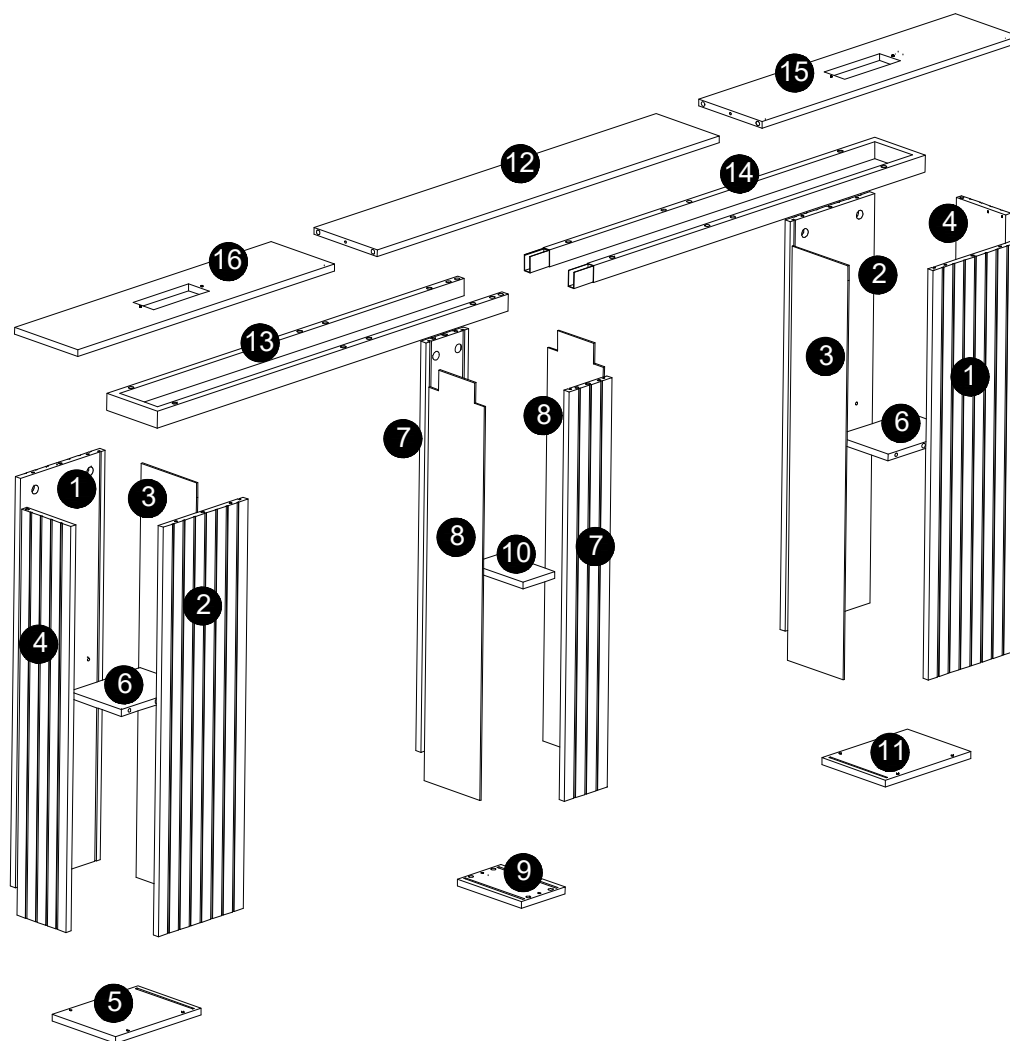



Step 1

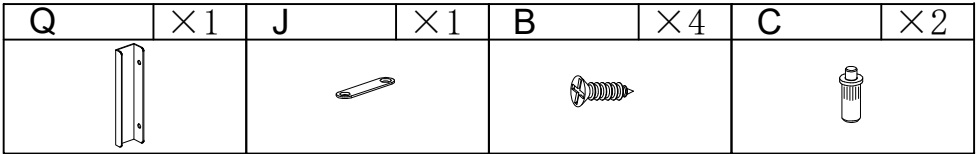Q	×1	J	×1	B	×4	C	×2
							

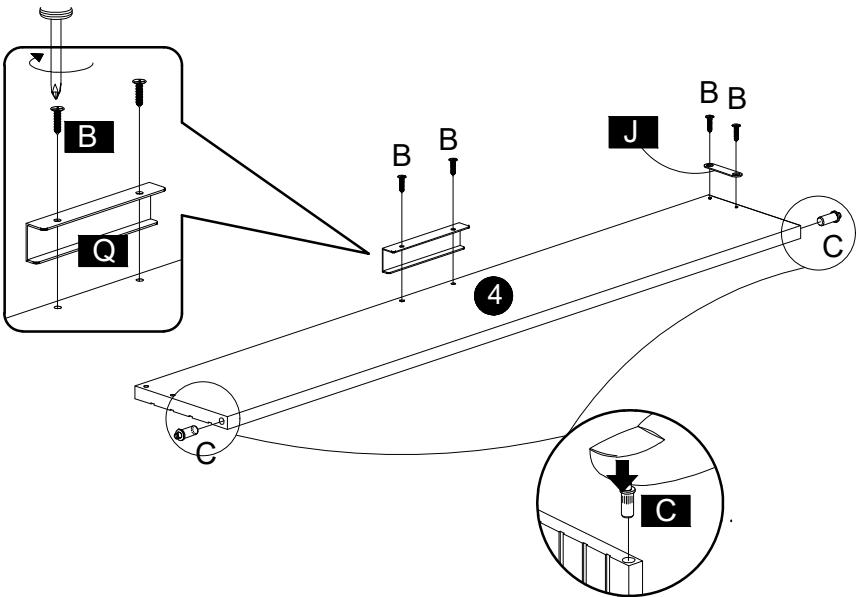


Step 2

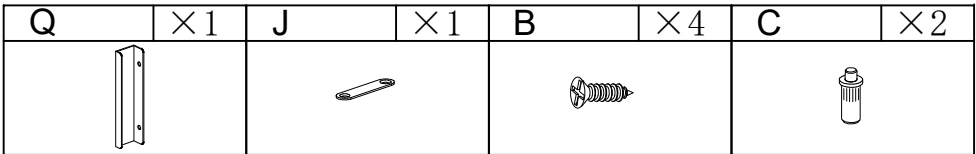Q	×1	J	×1	B	×4	C	×2
							

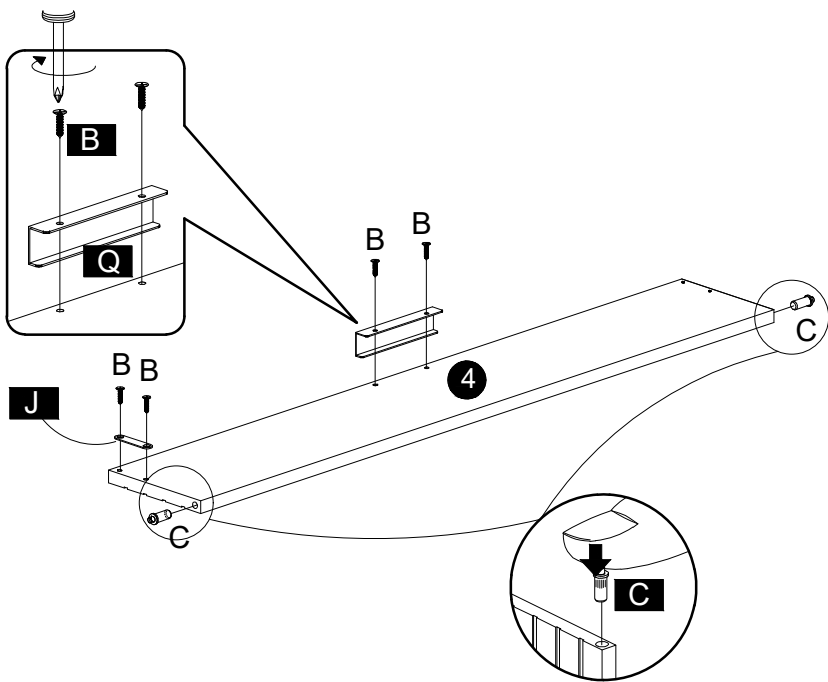


Step 3

D	×4	F	×2
			

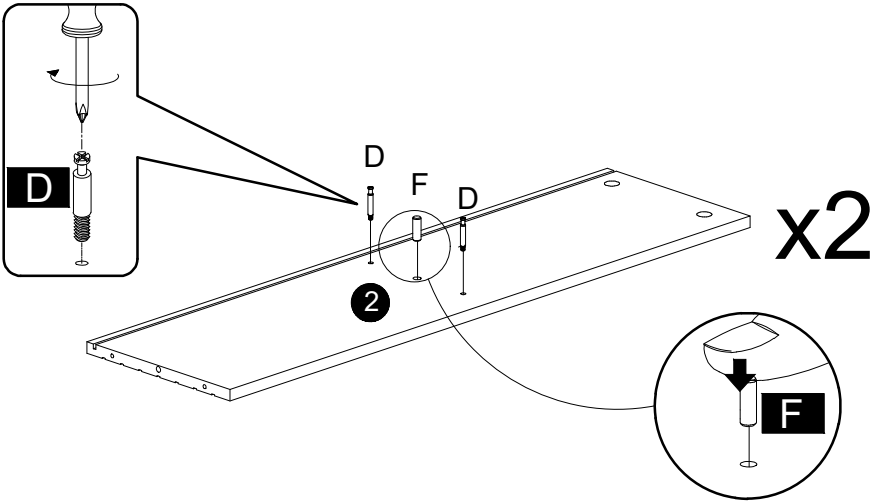


Step 4

F	×2	D	×4
			

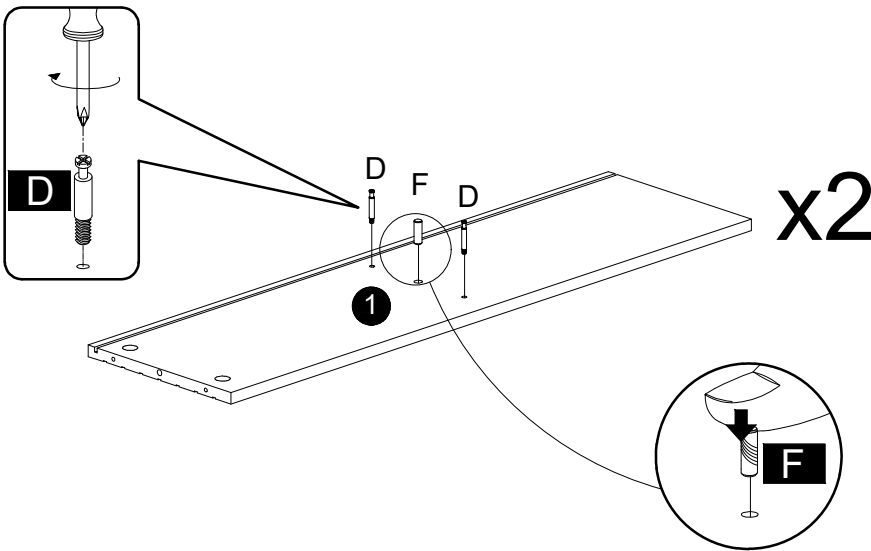


Step 5

D	×4
	

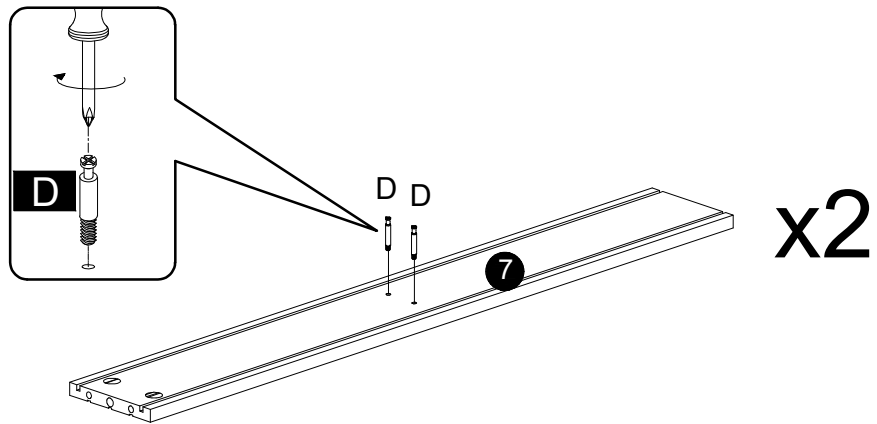


Step 6

E	×8
	

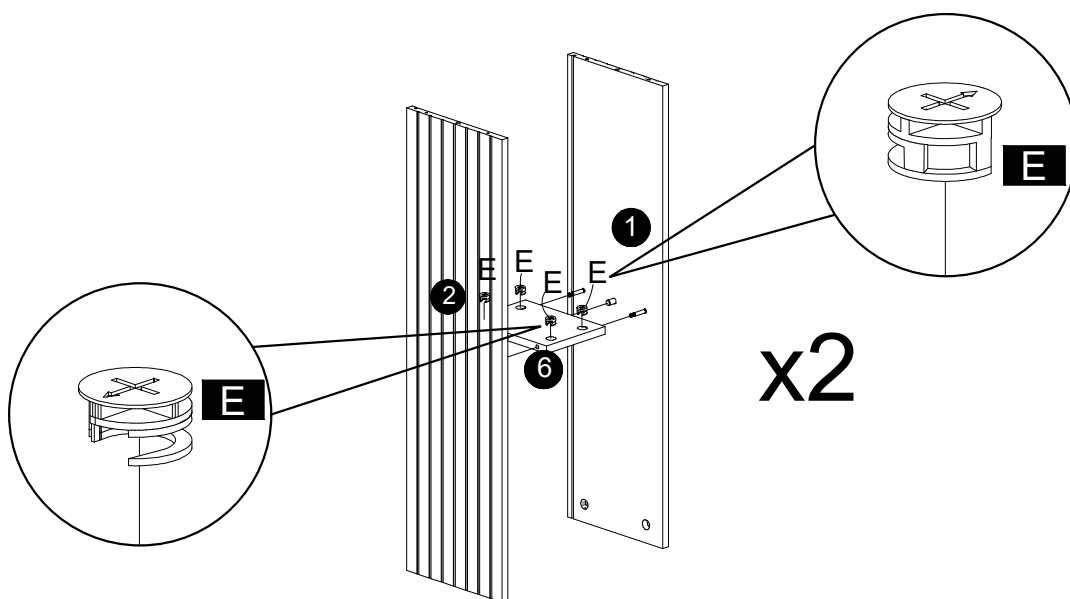


Step 7

E	×4
	

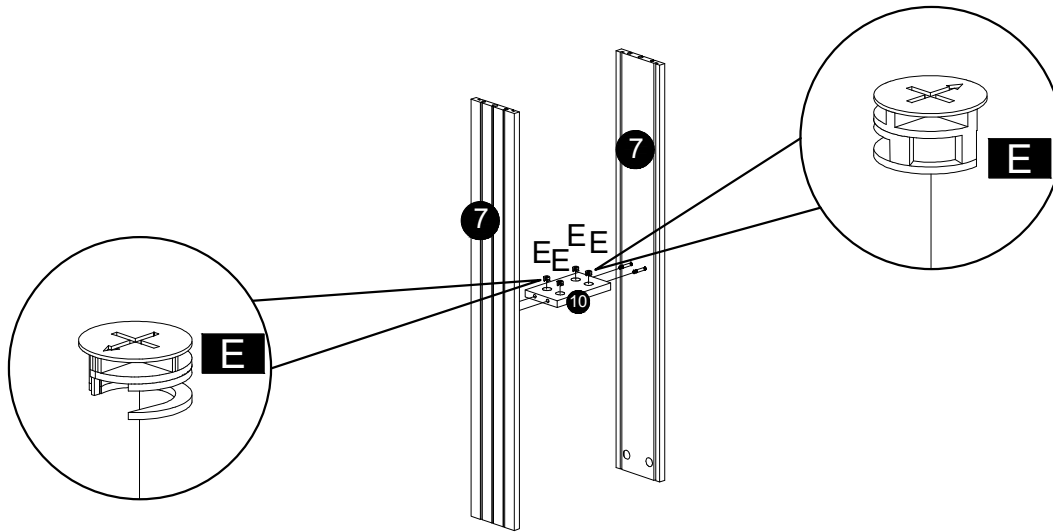


Step 8

D	×1
	

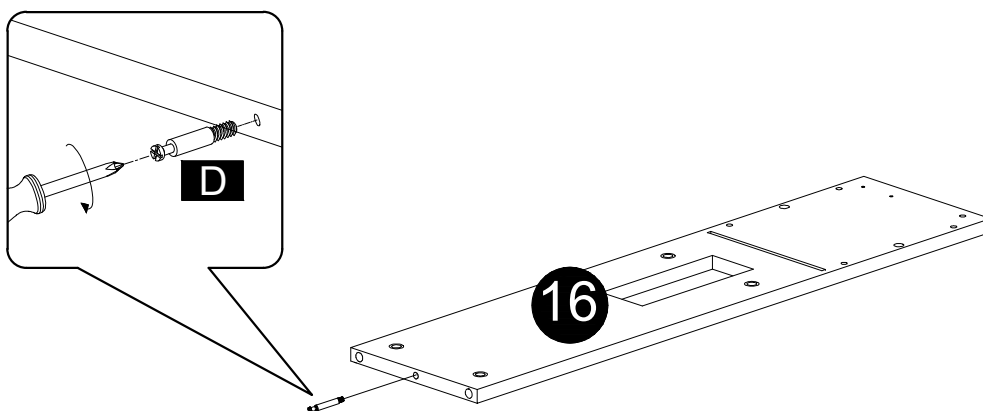


Step 9

D	×1
	

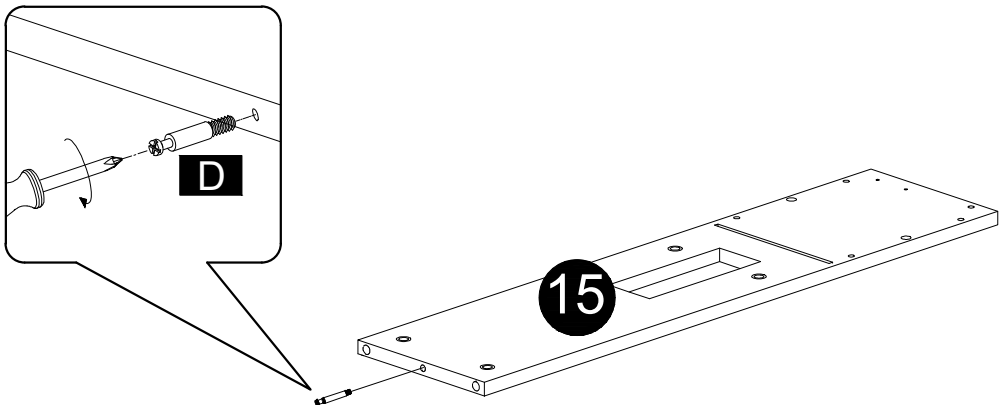


Step 10

T	×4	K	×2	E	×2	F	×4
							

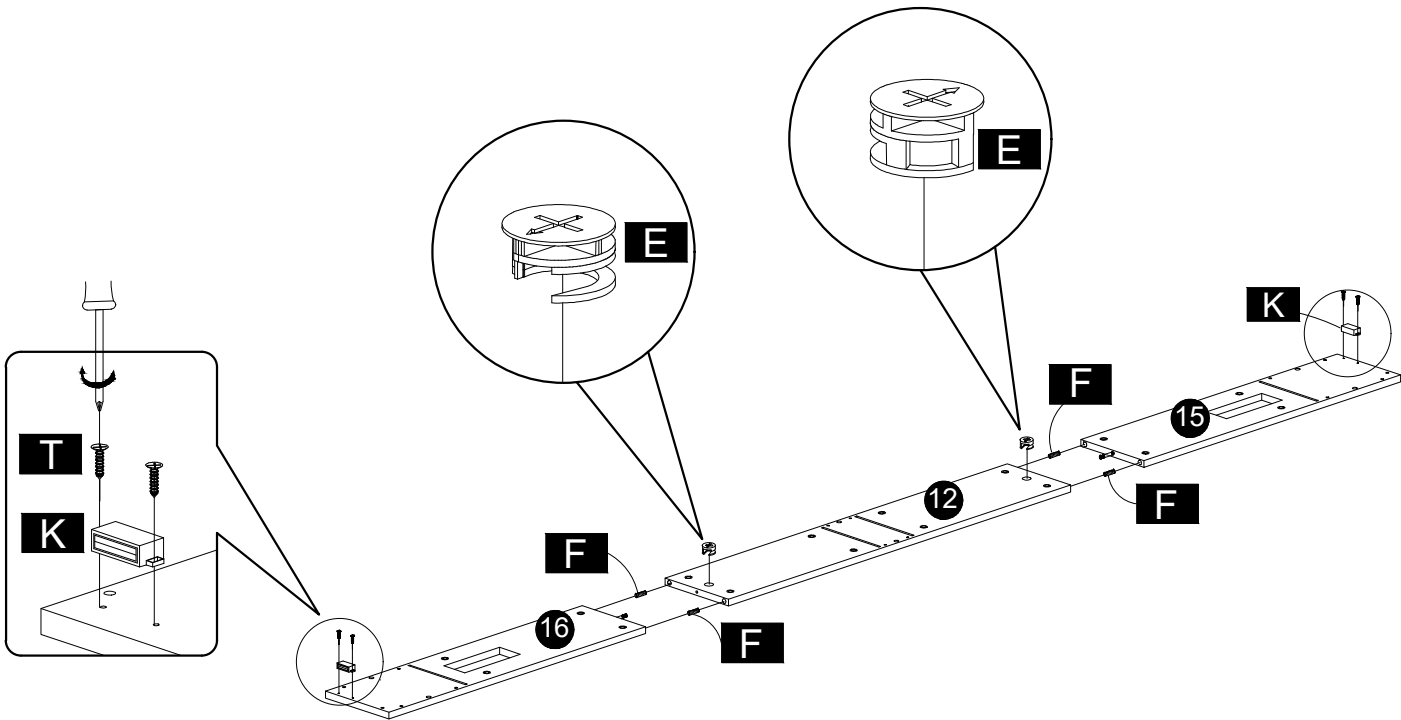


Step 11

D	×12	F	×6
			

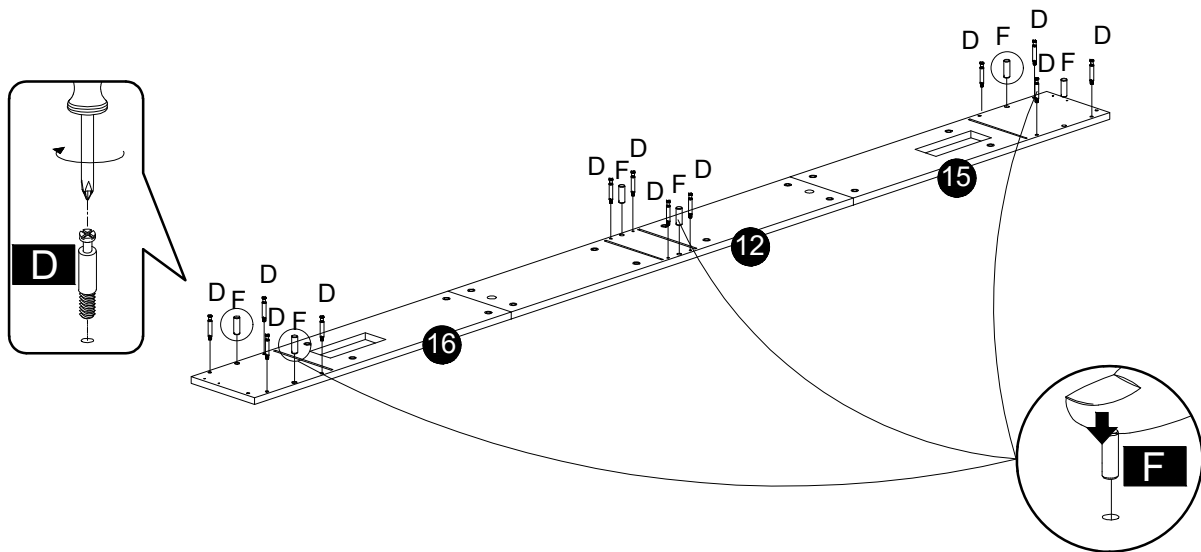


Step 12

E	×4
	

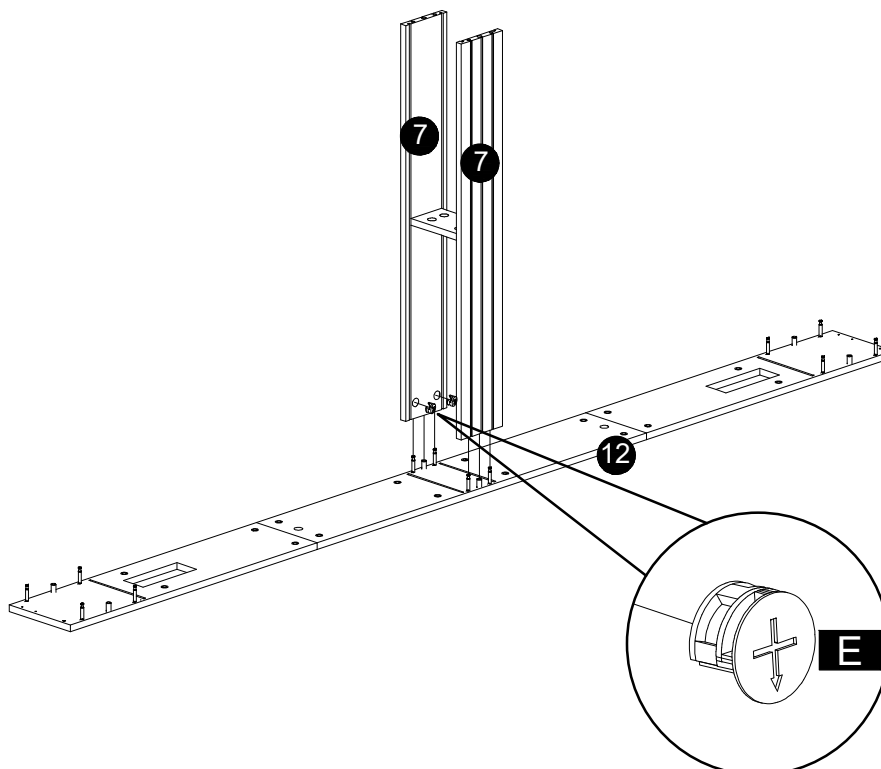


Step 13


G	×4
	
M6*12	

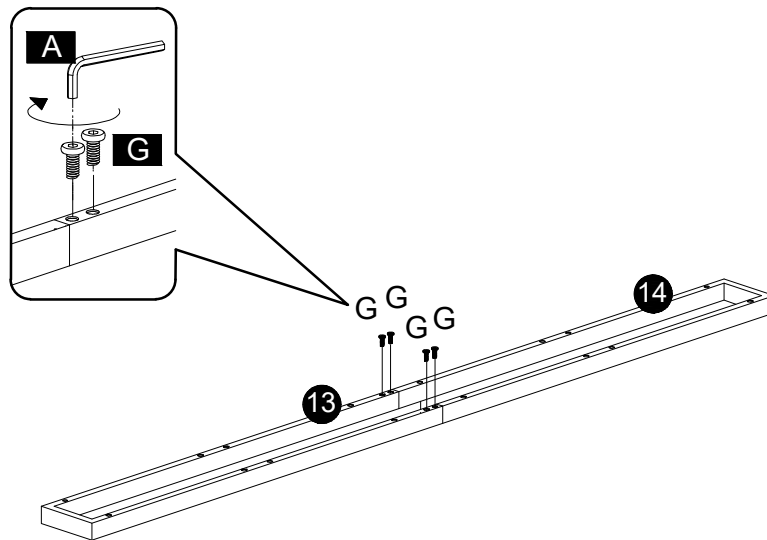


Step 14

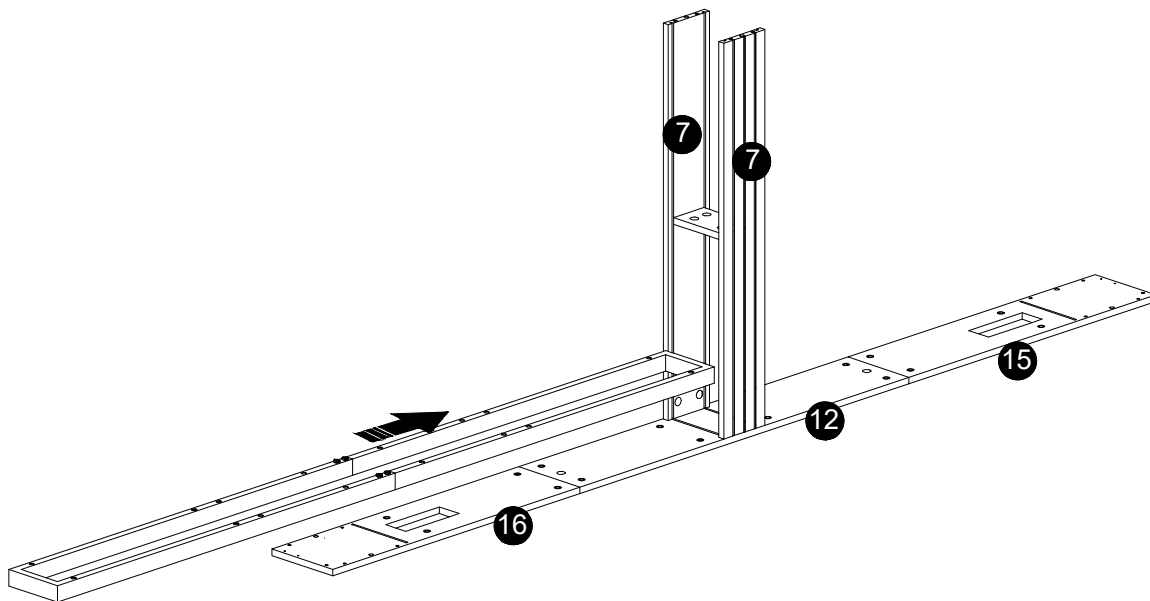


Step 15

H	×16
	
M6*38	

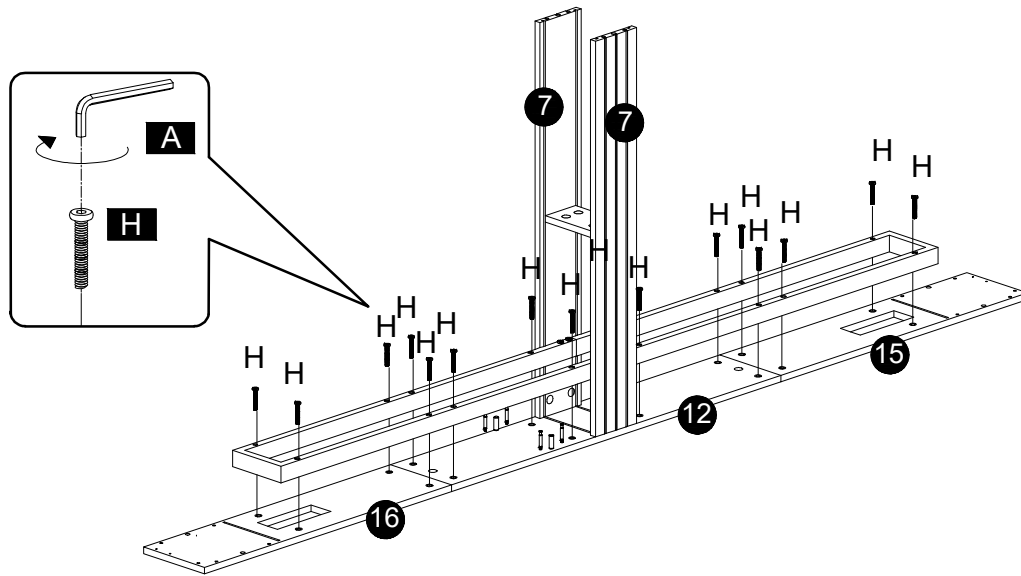


Step 16


E	×8
	

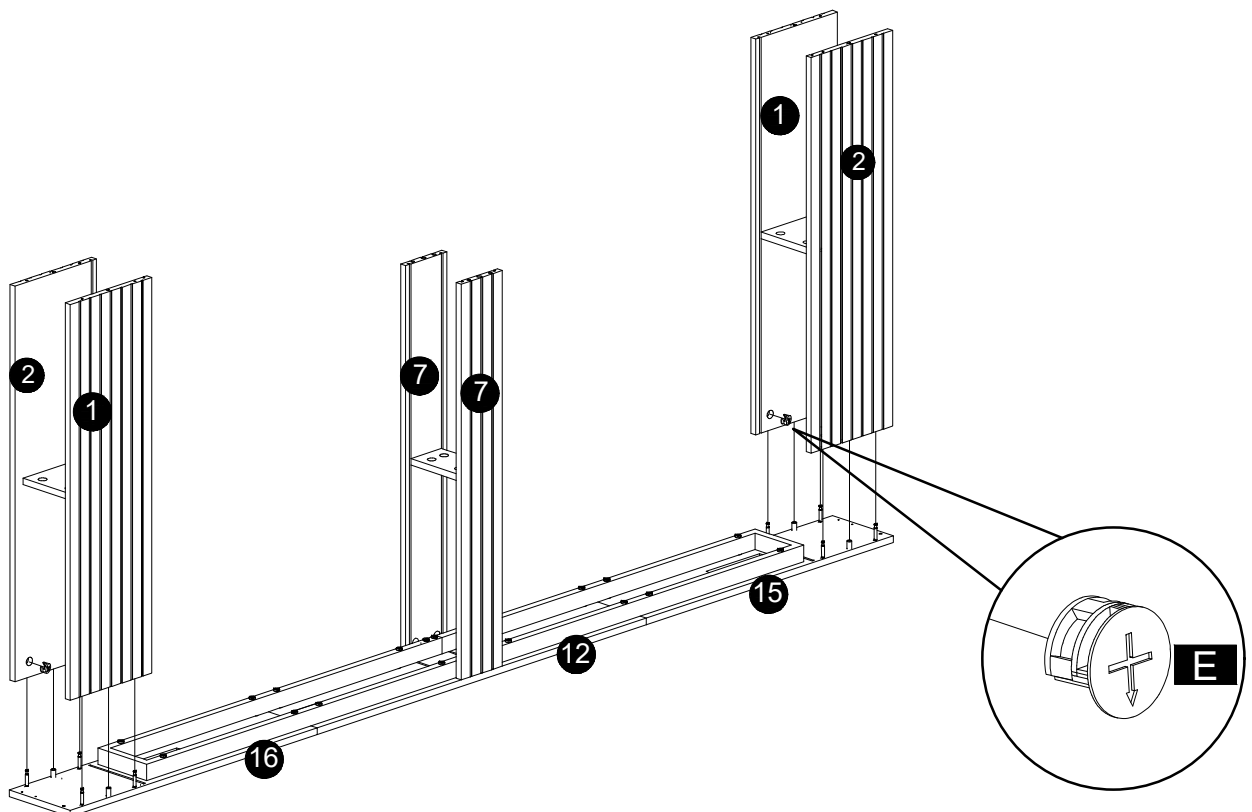



Step 17




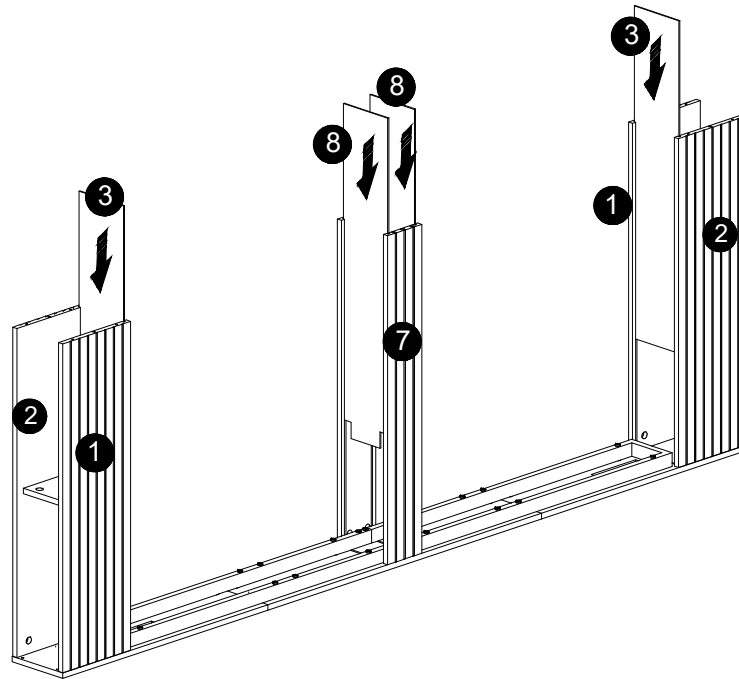


Step 18

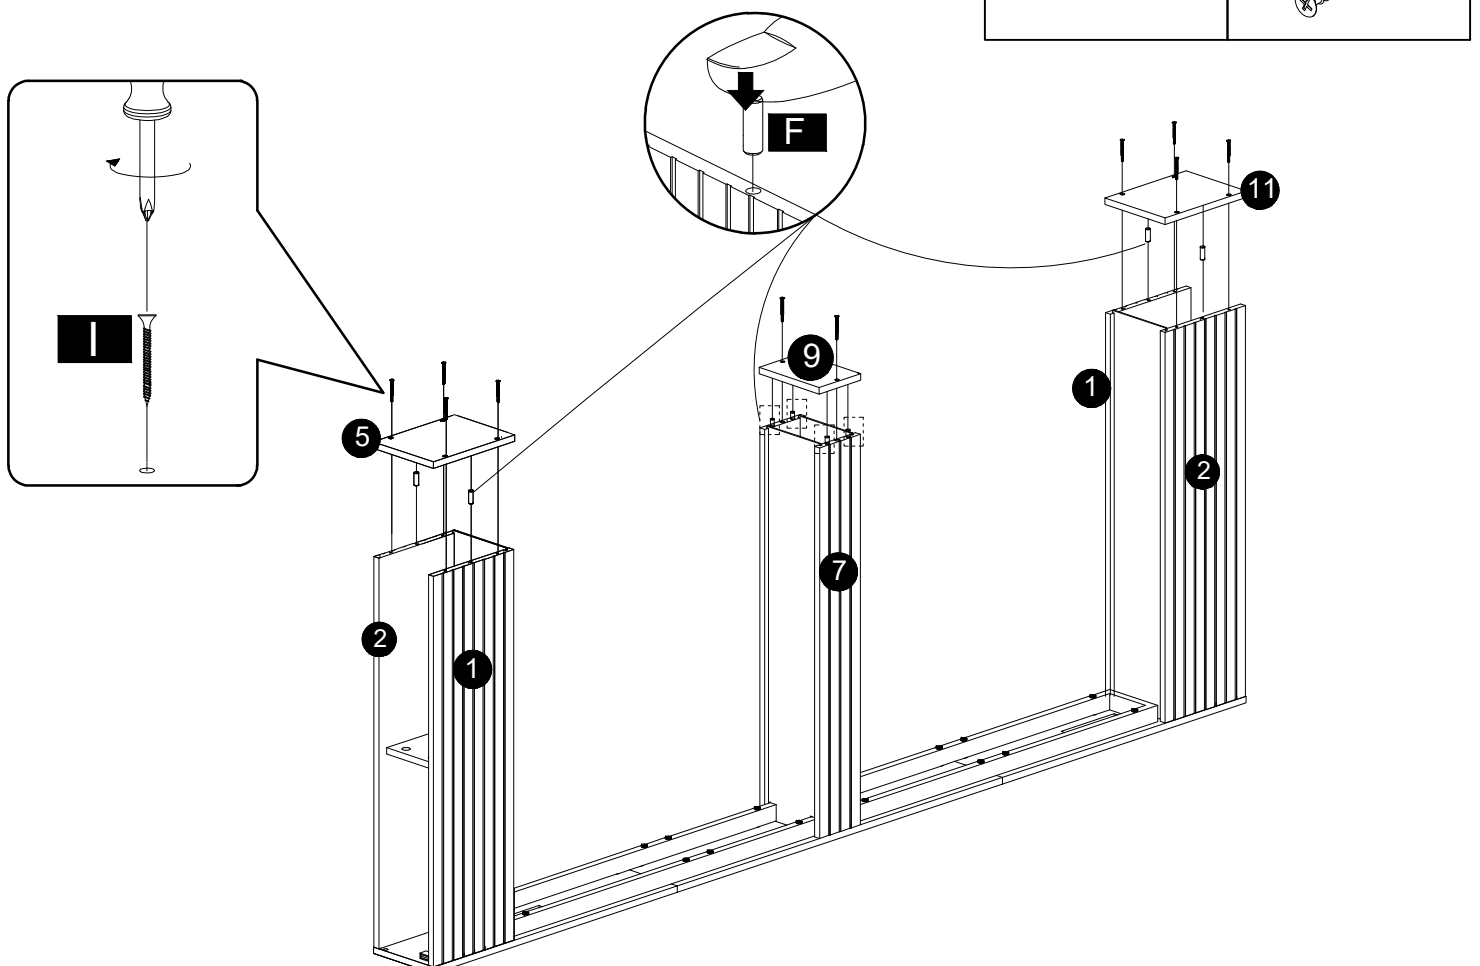








Step 19

B	×24	M	×24	L	×12
					

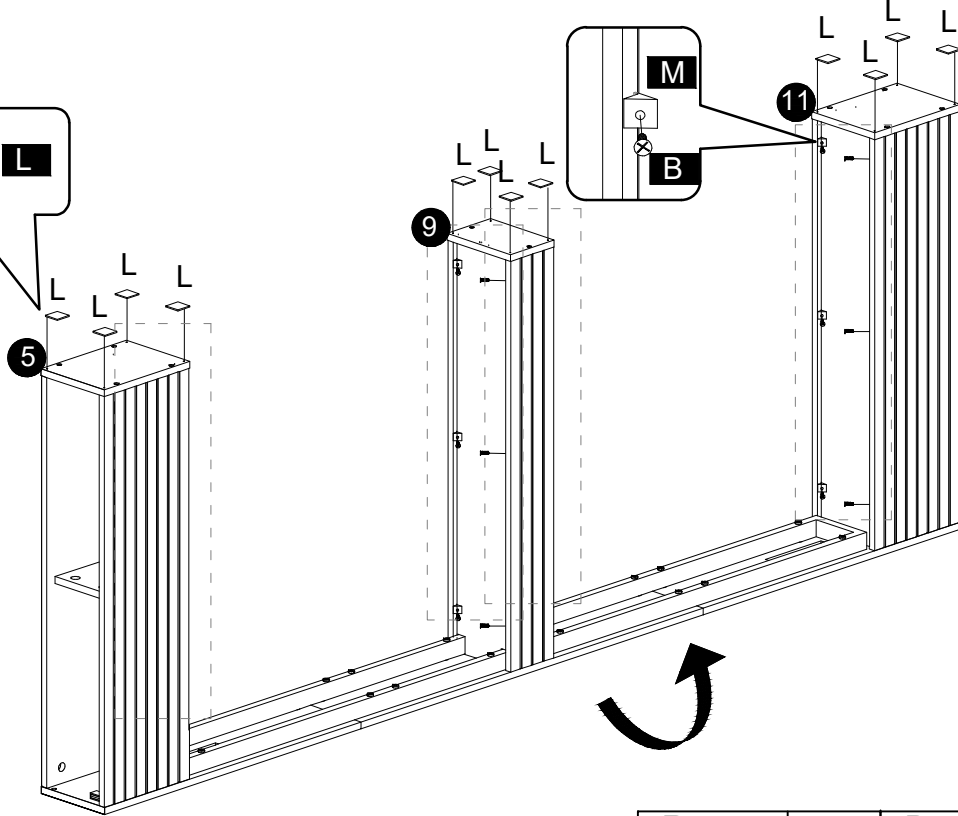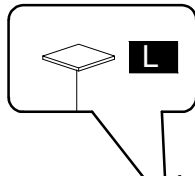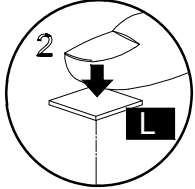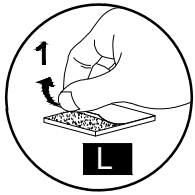




Step 20

R	×2	B	×4
			

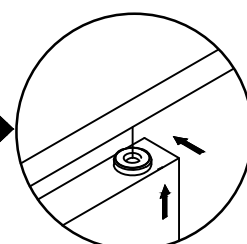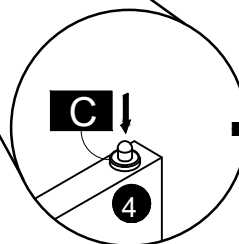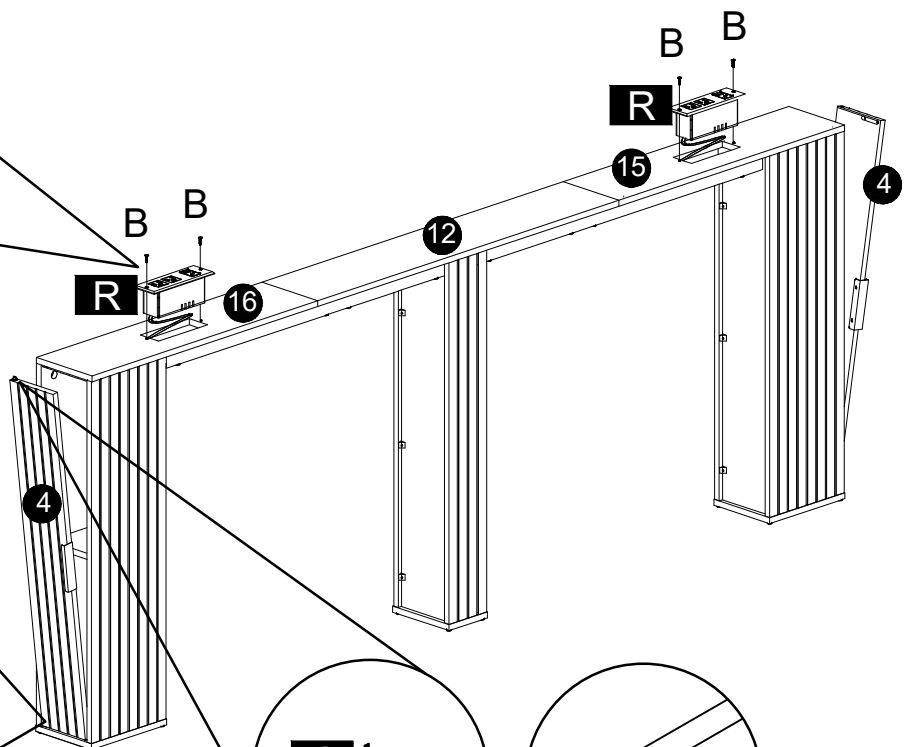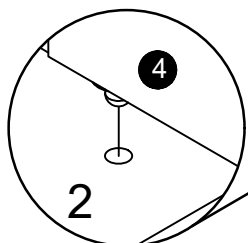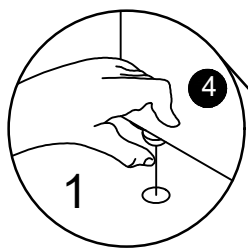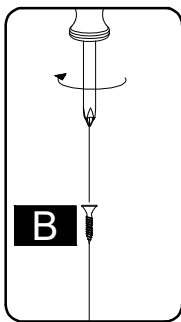


Step 21

N	×12	S	×3	P	×3
					

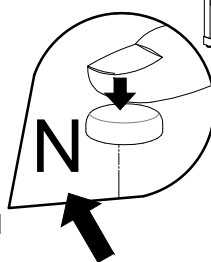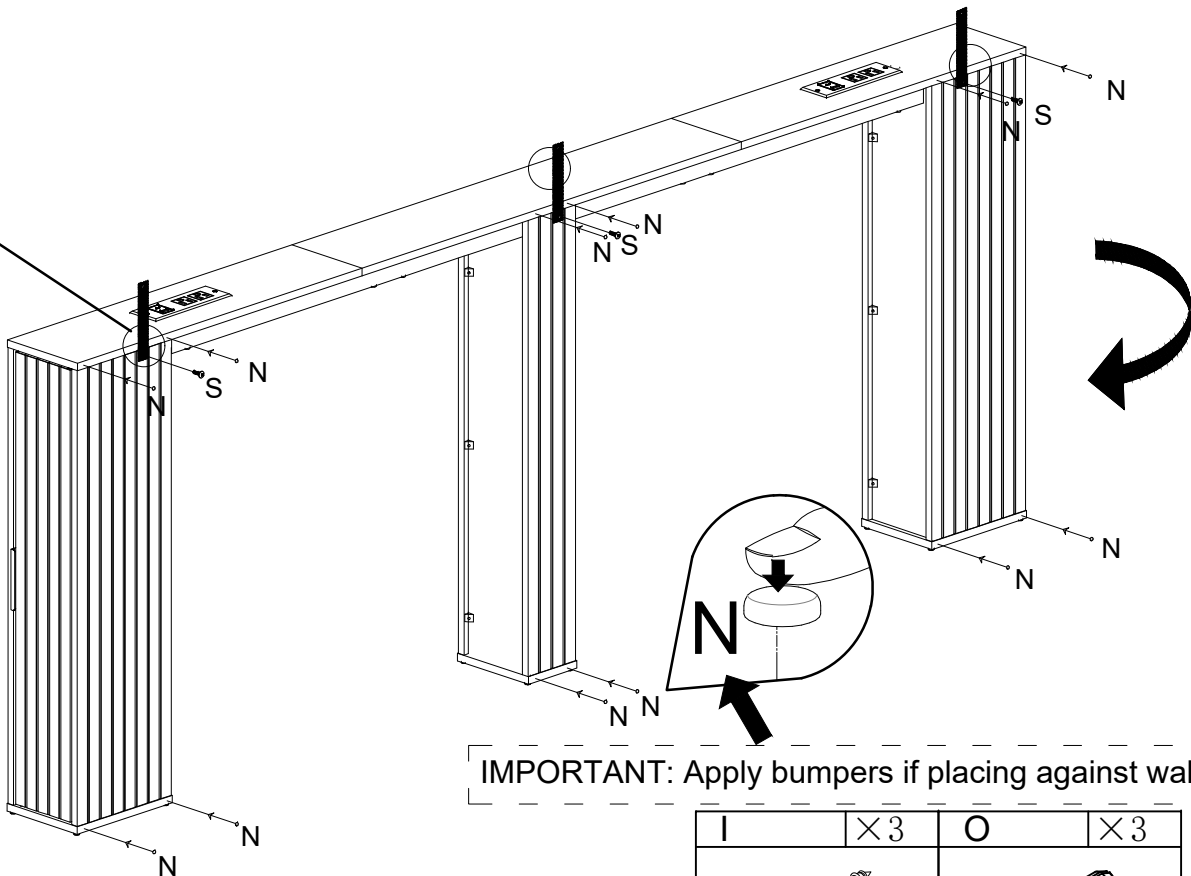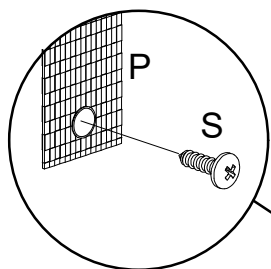

IMPORTANT: Apply bumpers if placing against wall.

I	×3	O	×3
			

Step 22

