

12 x 16FT

WQOT210MS

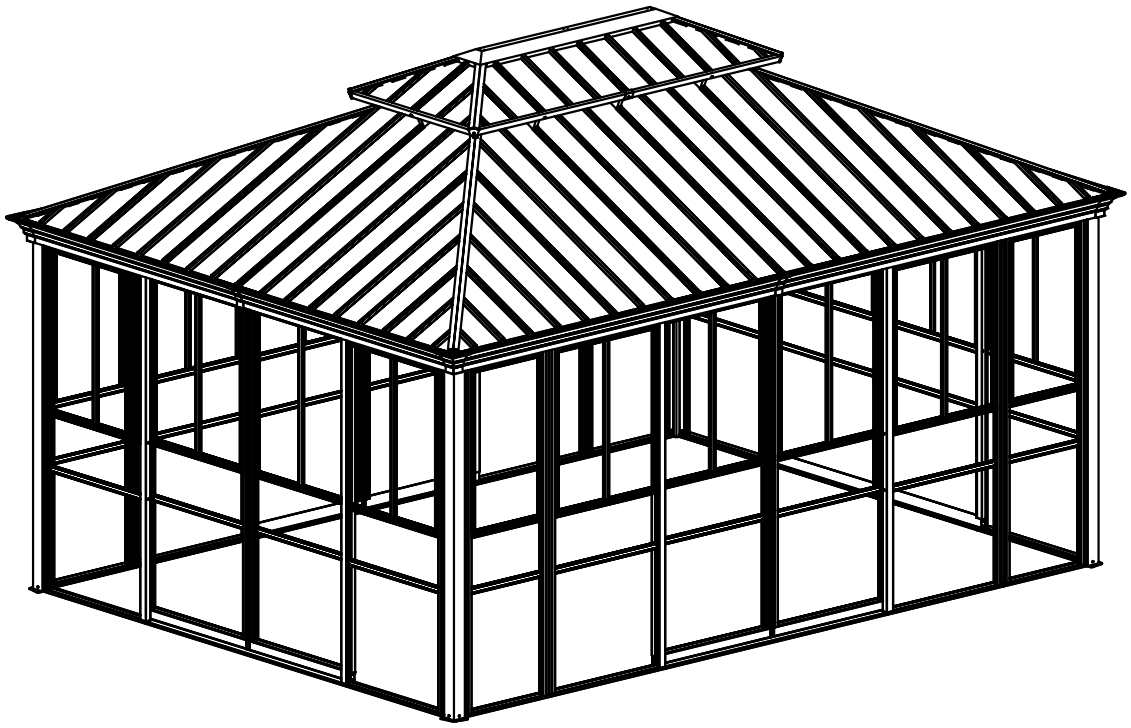

Note: The sunroom needs to be installed in cooperation with five people.


Assembly of this product requires the following tools, these tools are not included, please bring your own, if you have questions, please contact us.

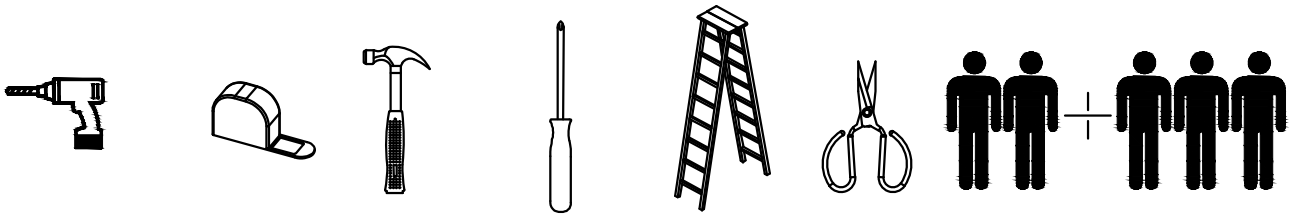



Pistol Drill Tape Measure Hammer Screwdriver Ladder scissor 5 people


ATTENTION:


1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us. We will check and offer you the best solution soon.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at **customer01service@hotmail.com.**

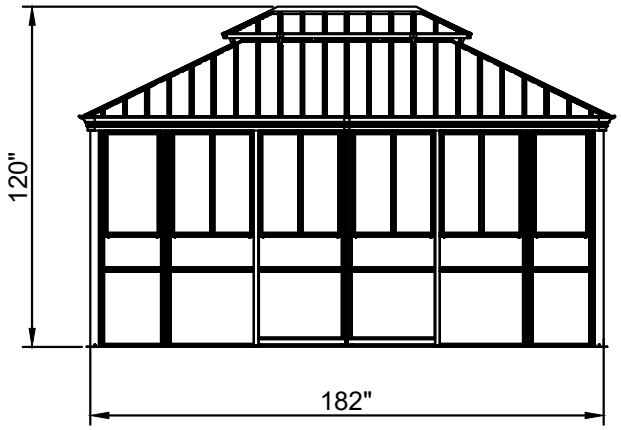
120"
182"

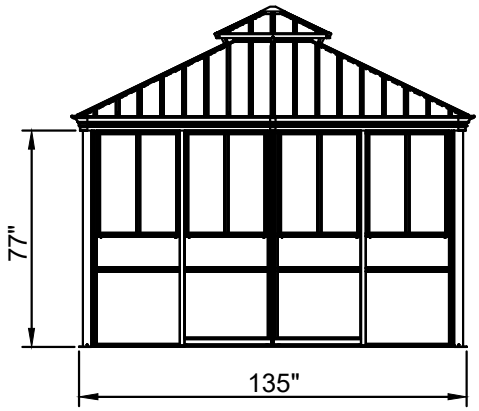
77"
135"

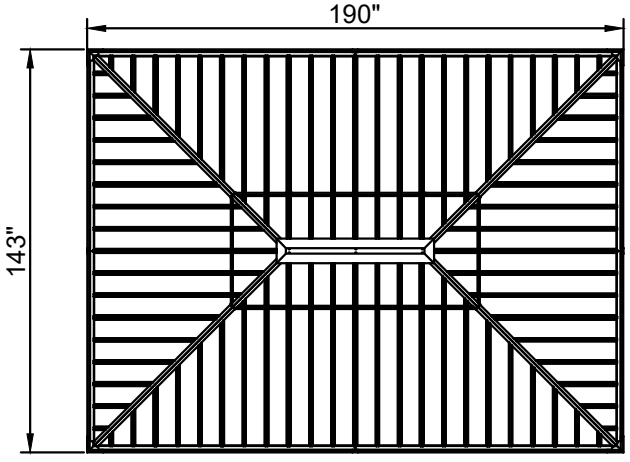
190"
143"

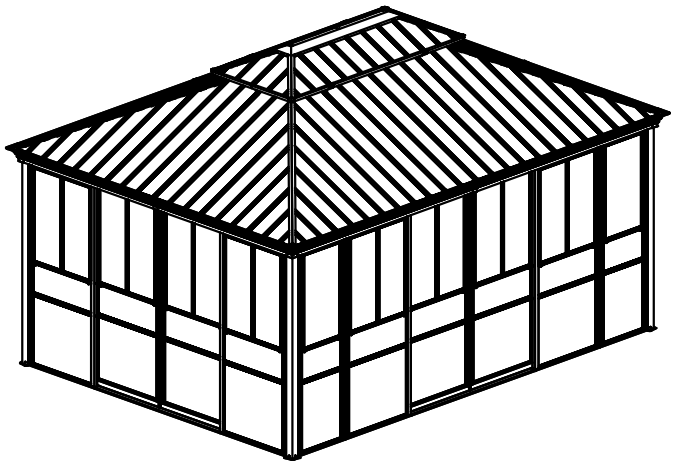



JA1 4x



AB1 2x



AB2 2x




AB7 2x




AB8 2x




E 4x

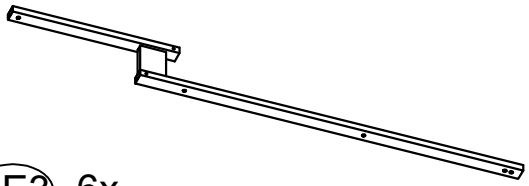


JE3 6x




D1 2x

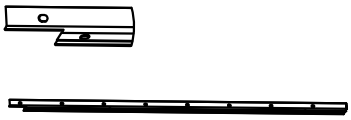

D2 2x

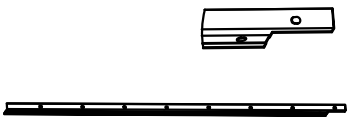

D3 2x



D4 2x



D15 2x



E5 4x



F1 8x

F3 2x



G1 2x




G10 2x




G13 2x



G14 2x




I1 2x

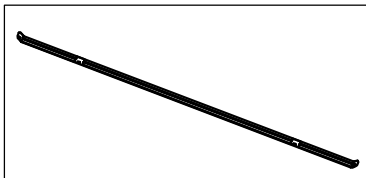


I10 2x




F5 2x




V1 2x




M3 1x



L3C 1x




V7a 2x



V7b 2x




M2A 4x

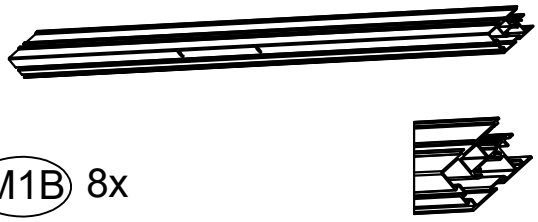


M1B 8x




M1A 4x

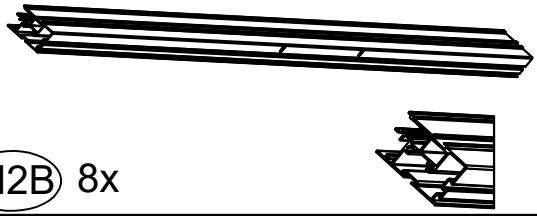


M2B 8x

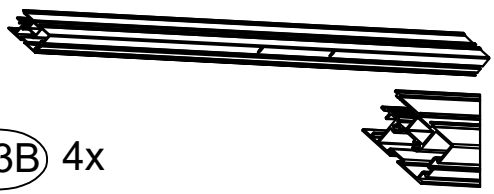


M3B 4x

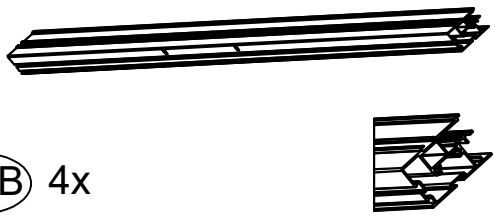


M4B 4x

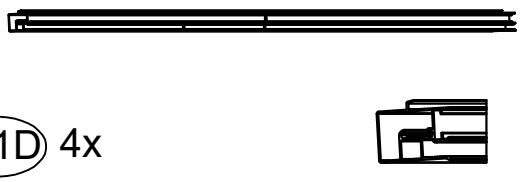

M1D 4x

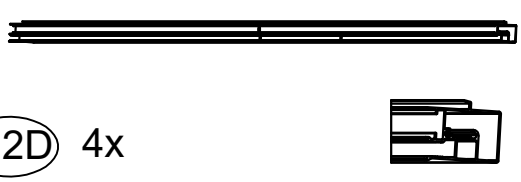


M2D 4x

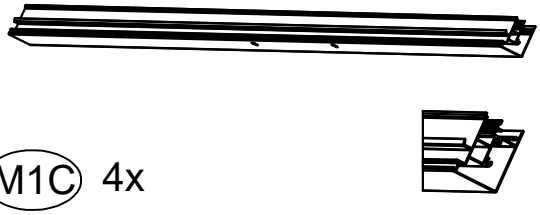

M1C 4x



M2C 4x

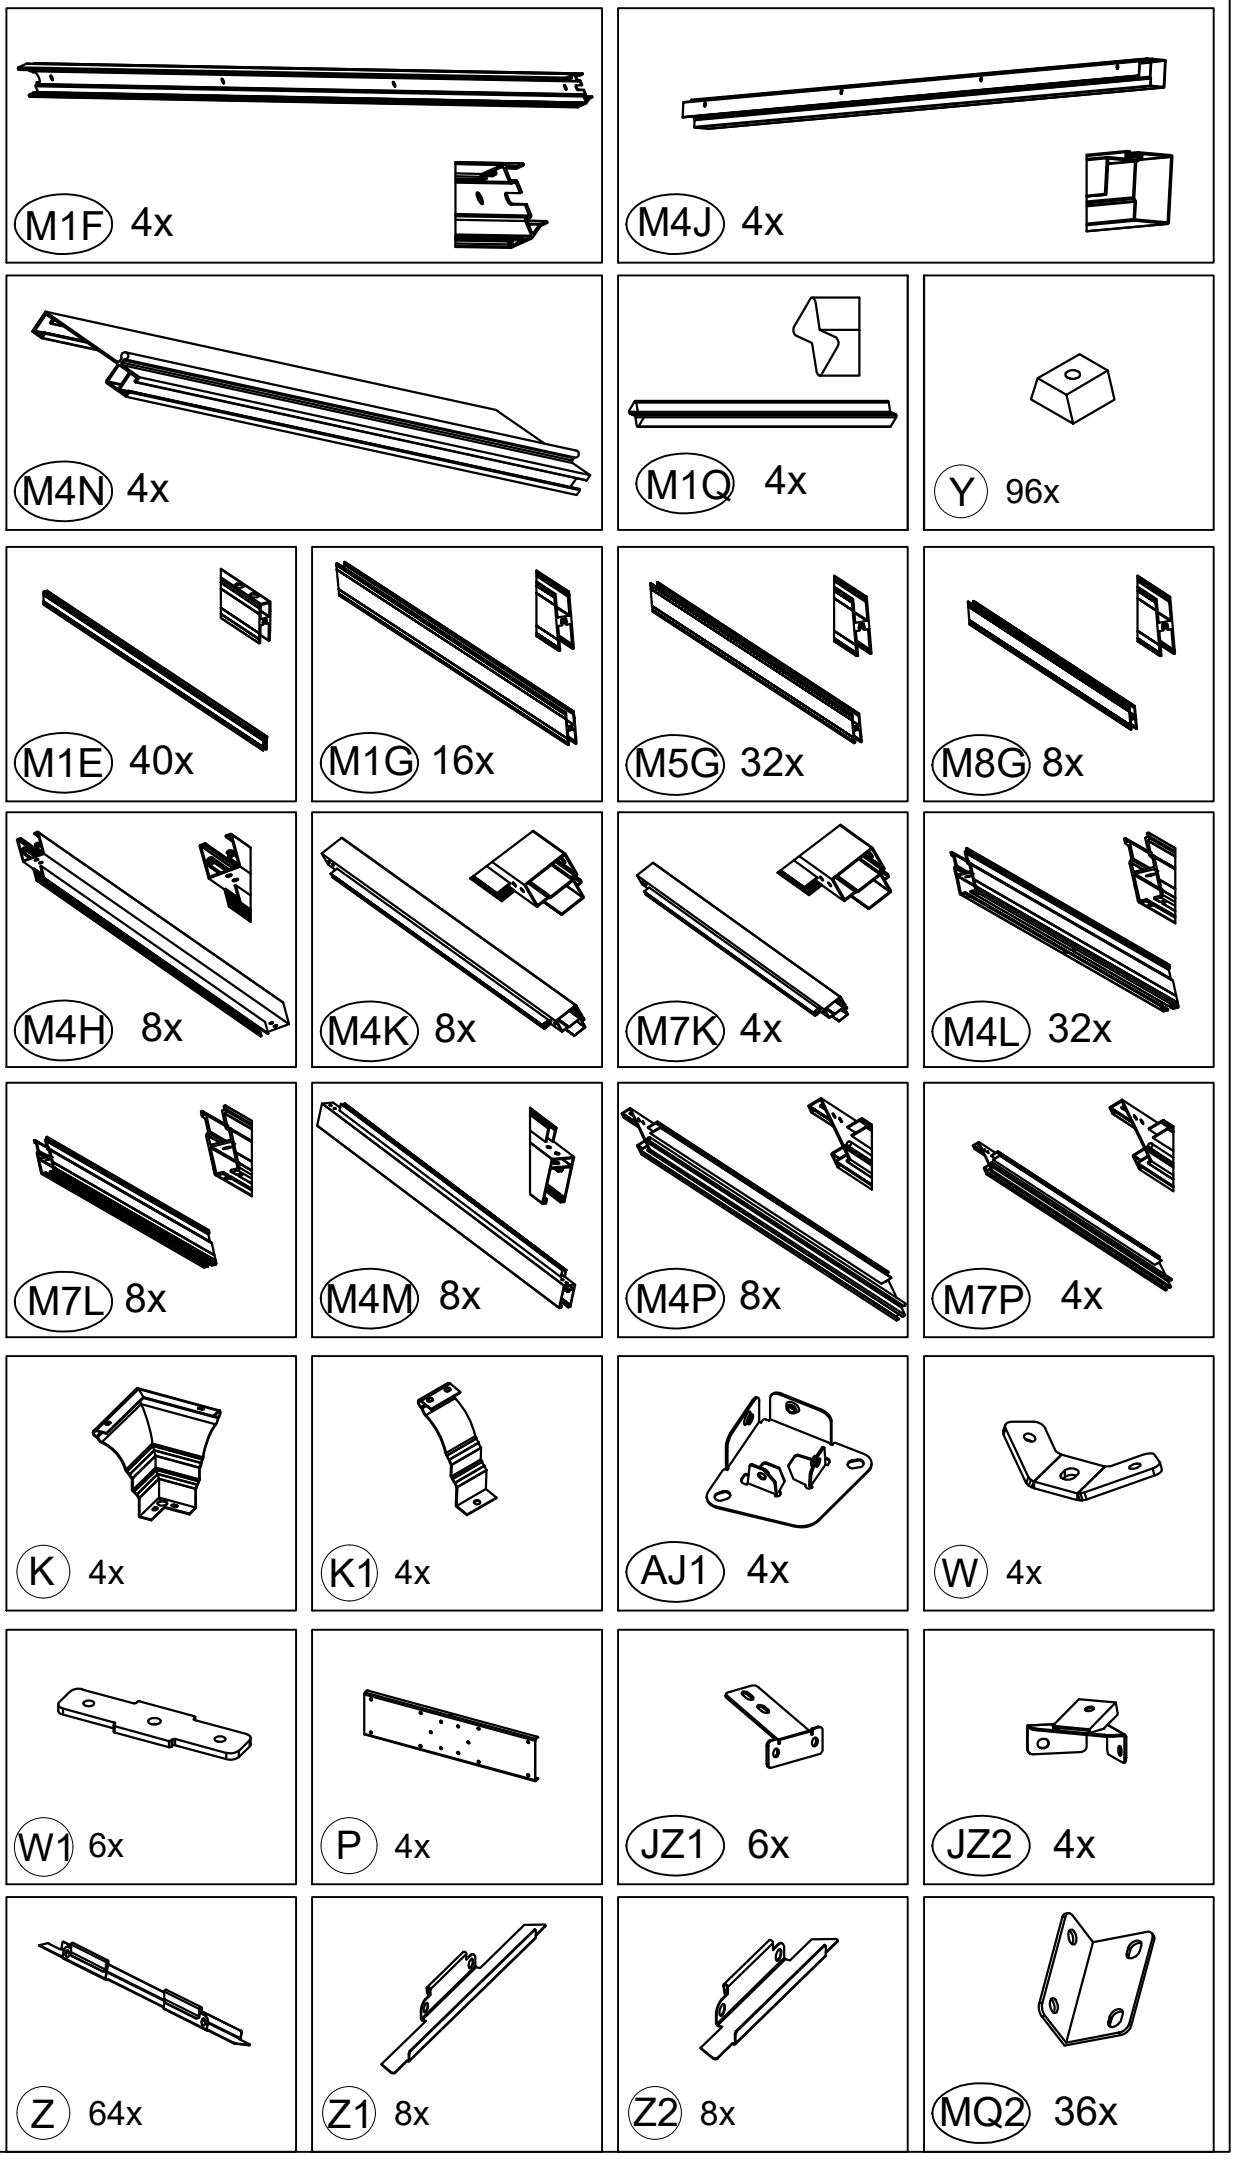
M1F 4x
M4J 4x
M4N 4x
M1Q 4x
Y 96x
M1E 40x
M1G 16x
M5G 32x
M8G 8x
M4H 8x
M4K 8x
M7K 4x
M4L 32x
M7L 8x
M4M 8x
M4P 8x
M7P 4x
K 4x
K1 4x
AJ1 4x
W 4x
W1 6x
P 4x
JZ1 6x
JZ2 4x
Z 64x
Z1 8x
Z2 8x
MQ2 36x




N 8x




N1 4x




5-1 2x



MD1 80x




MD3 40x



MD4 16x




MD5 16x




6.2*11*15


3-1 16x

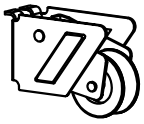


4-1 16x

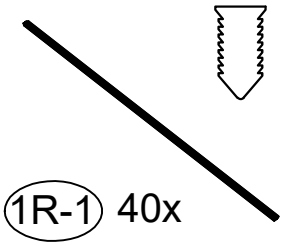


1R-1 40x

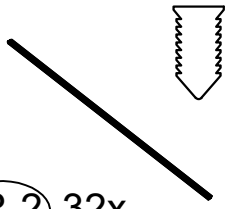


1R-2 32x

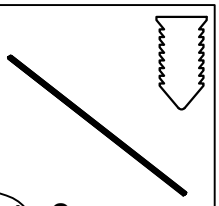


1R-4 8x

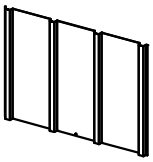


S3 4x




R1 4x




R2 4x




S1 4x



S2 4x




R3 4x




R4 4x



R5 4x




R6 4x




R8 2x




R9 2x

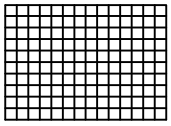


M4S 4x




MS1 32x




MS2 16x

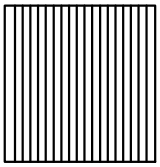


MS3 8x

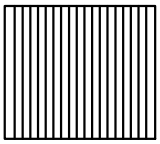


MS4 8x




MS13 4x



MS14 4x

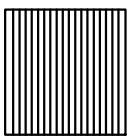

MS15 4x

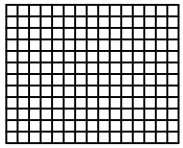

M1S 16x



MD2 160x



M6x15

1 335x



M6x25

2 86x



ST 4.8x12

3 40x



4 **2x**



M6x50

5 10x



6 8x




M6x10

7 10x



8 8x




9 1x




M6

10 94x




M6

11 16x




M4x20

12 192x




M4x35

13 128x



M4x50

14 80x



15 36x




M5x6

16 144x




M5

17 56x



M5x12

18 56x



M6

19 96x




4mm

20 2x




2.5mm

21 2x

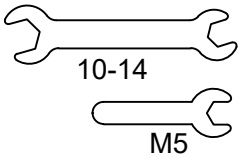


22 1x




Rubber Gasket

23 96x

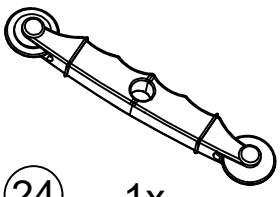


24 1x

12x16							
AB	AB	AB	AB	AF	AF	AF	AF
BA	BA	BA	BA	AF	AF	AF	AG
AD	AD	AD	AD	AF	AF	AF	AG
DA	DA	DA	DA	AF	AF	AF	AG
AE	AE	AE	AE	AF	AF	AF	AG




M5x15

25 16x



M4x12


26 4x




U1 4x



U2 4x




U3 4x



U4 4x



JA1 4x

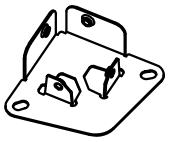


AJ1 4x




M6x15


1 8x

<1>

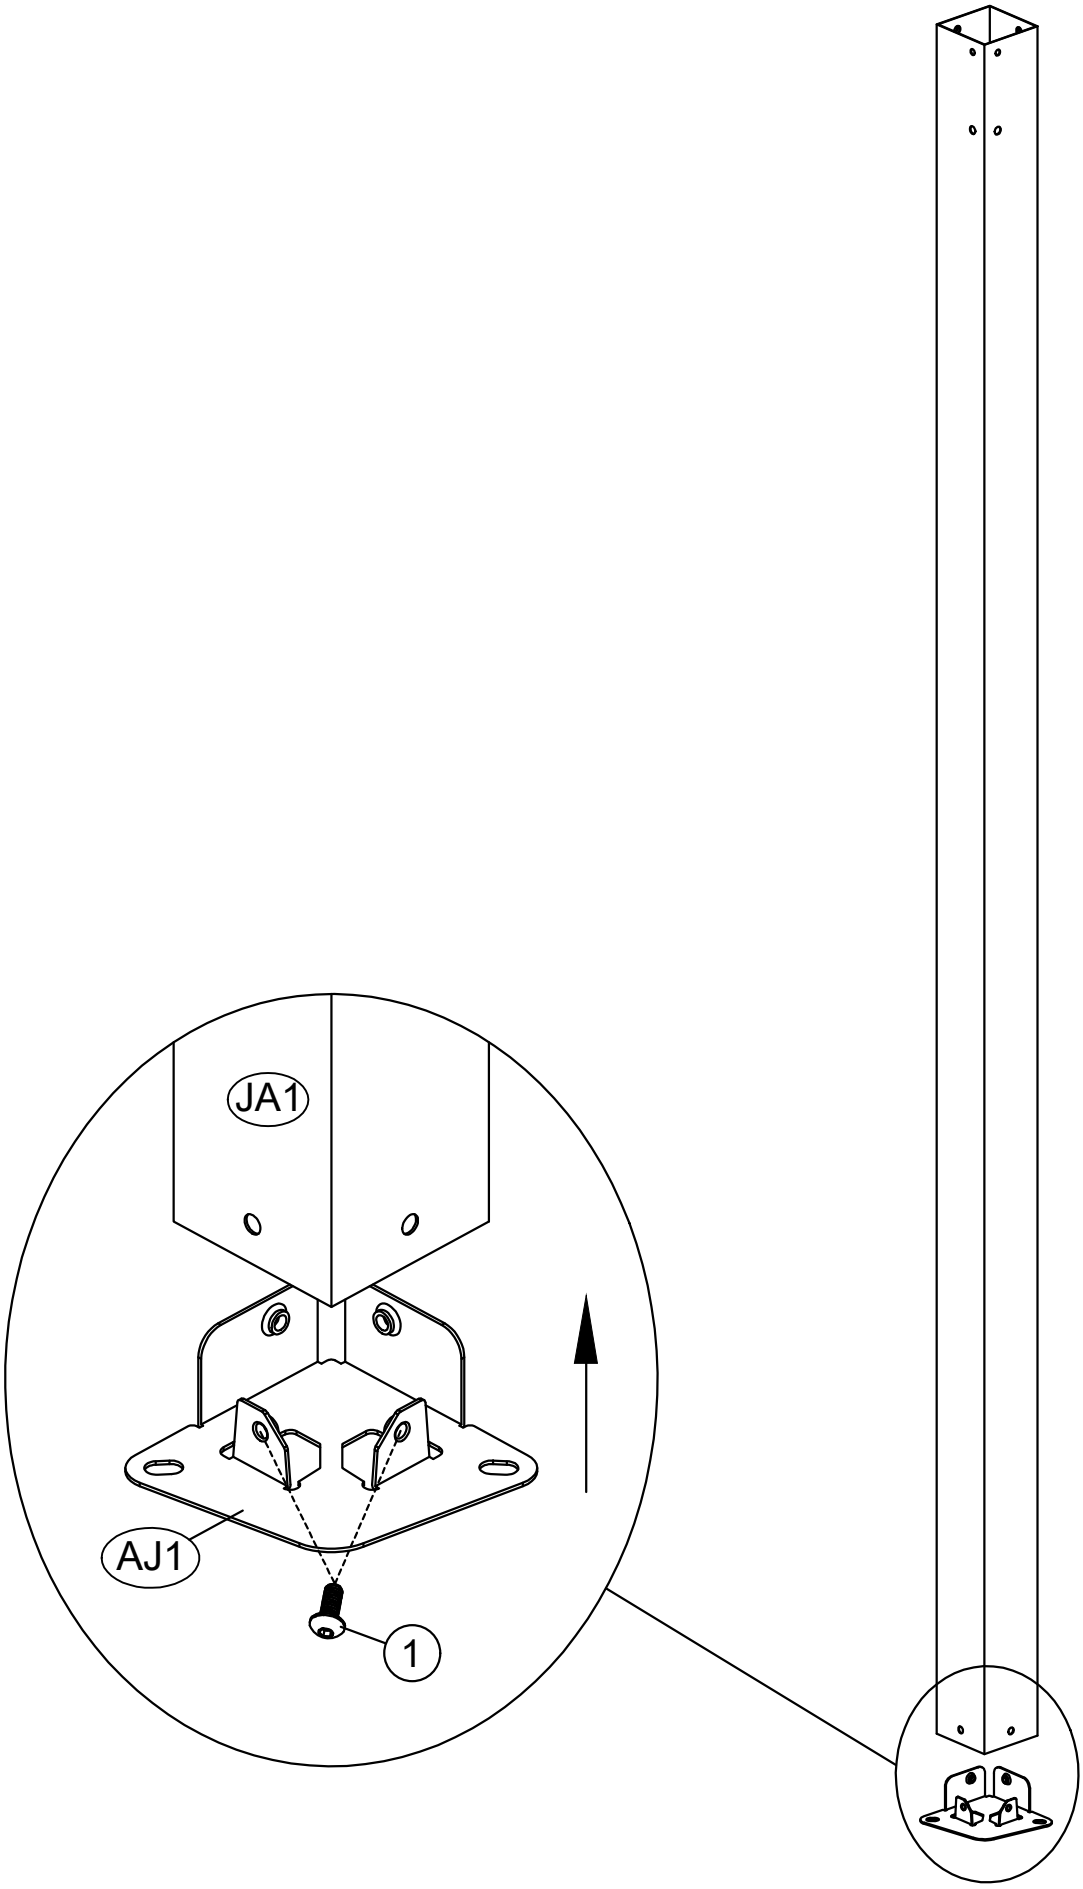


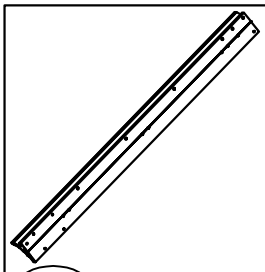


AB1 2x

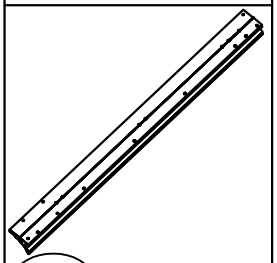


AB2 2x

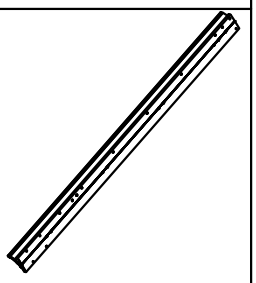

AB7 2x

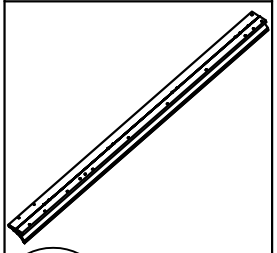

AB8 2x



P 4x



M6x15


1 72x




D1 2x

11

<2>

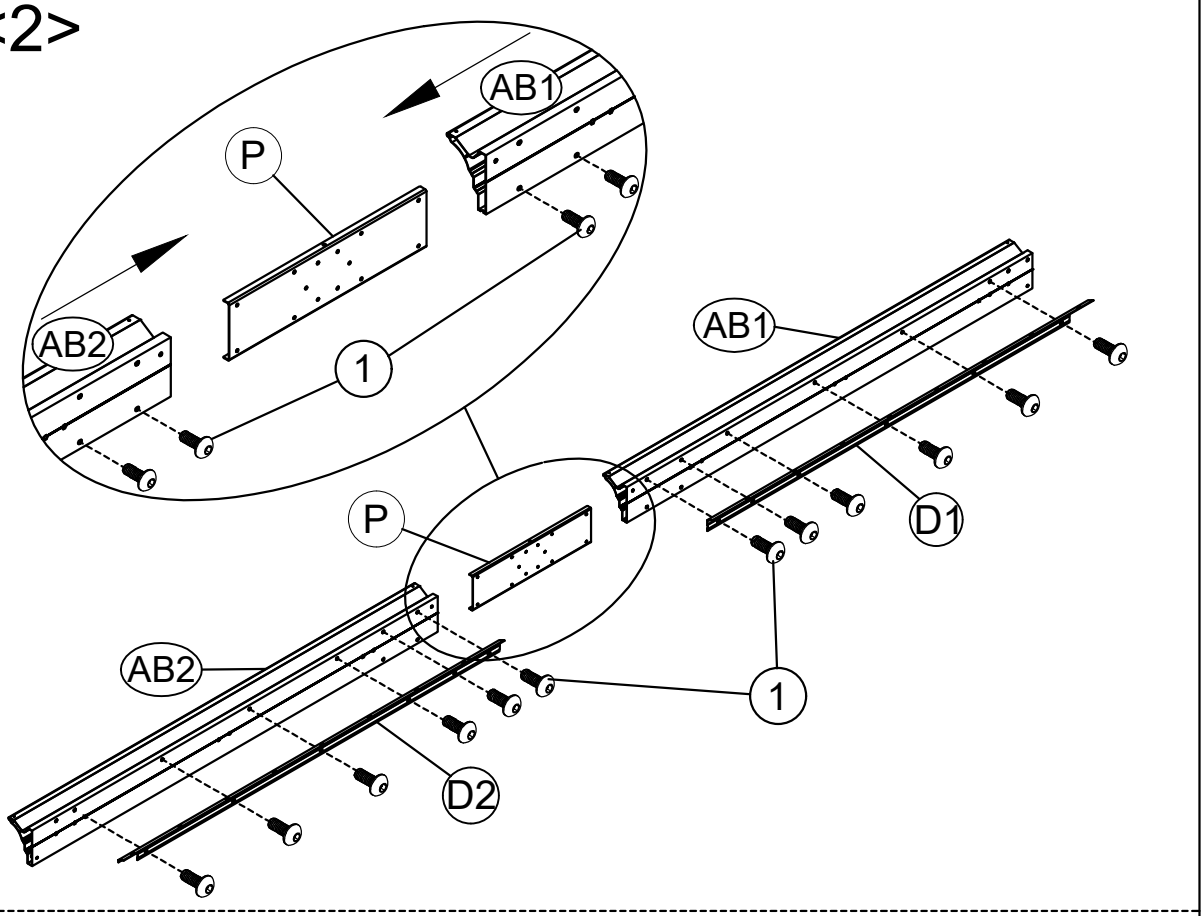

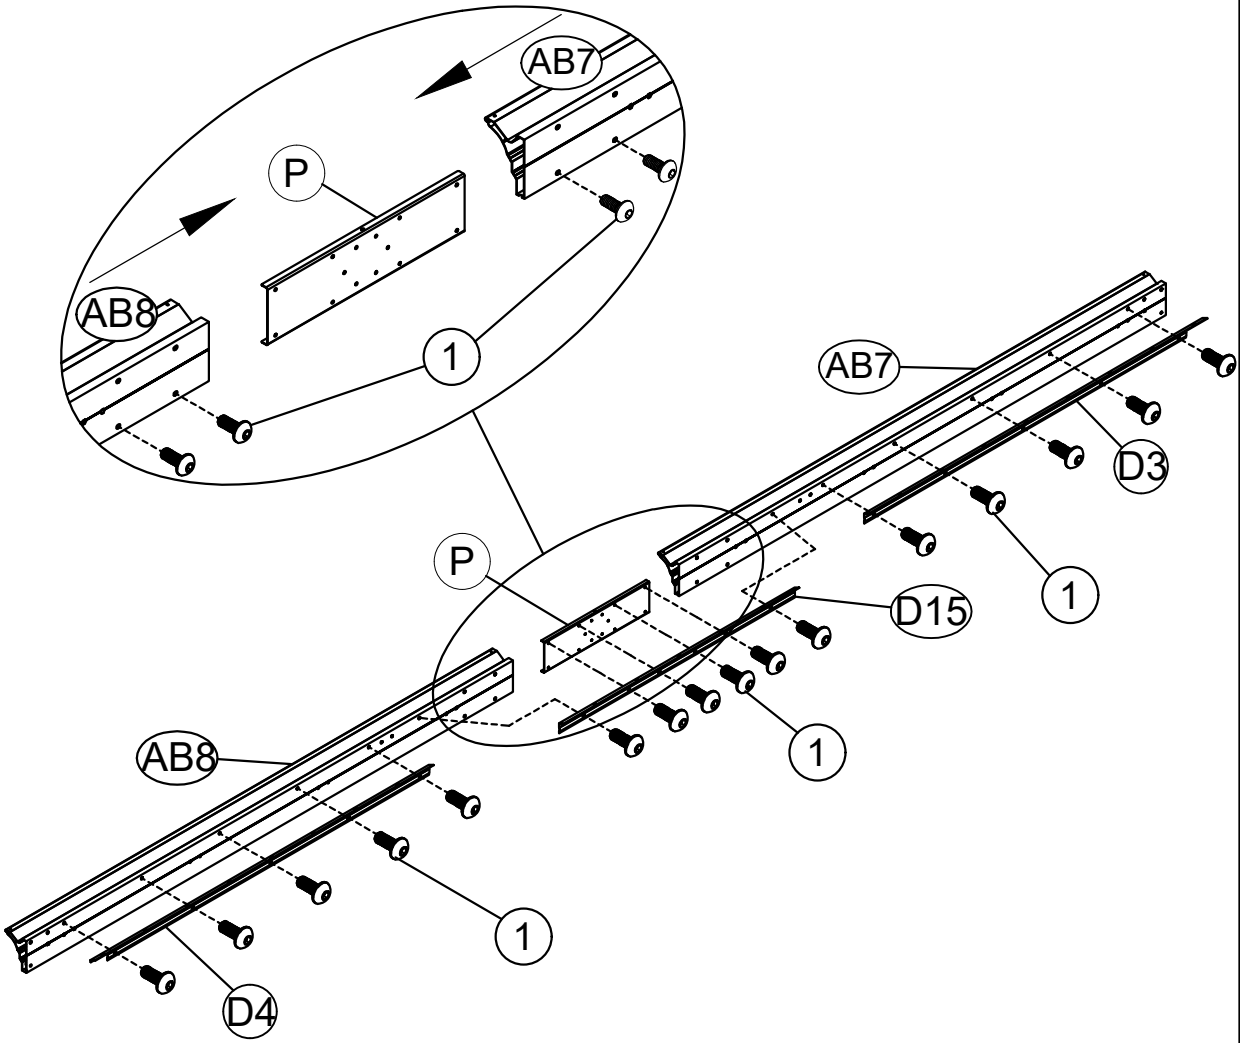




D2 2x

D3 2x

D4 2x


D15 2x

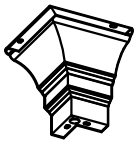

K 4x



K1 4x

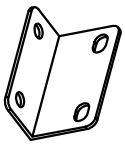

MQ2 8x



M6x15


1 36x




6 8x




3 24x

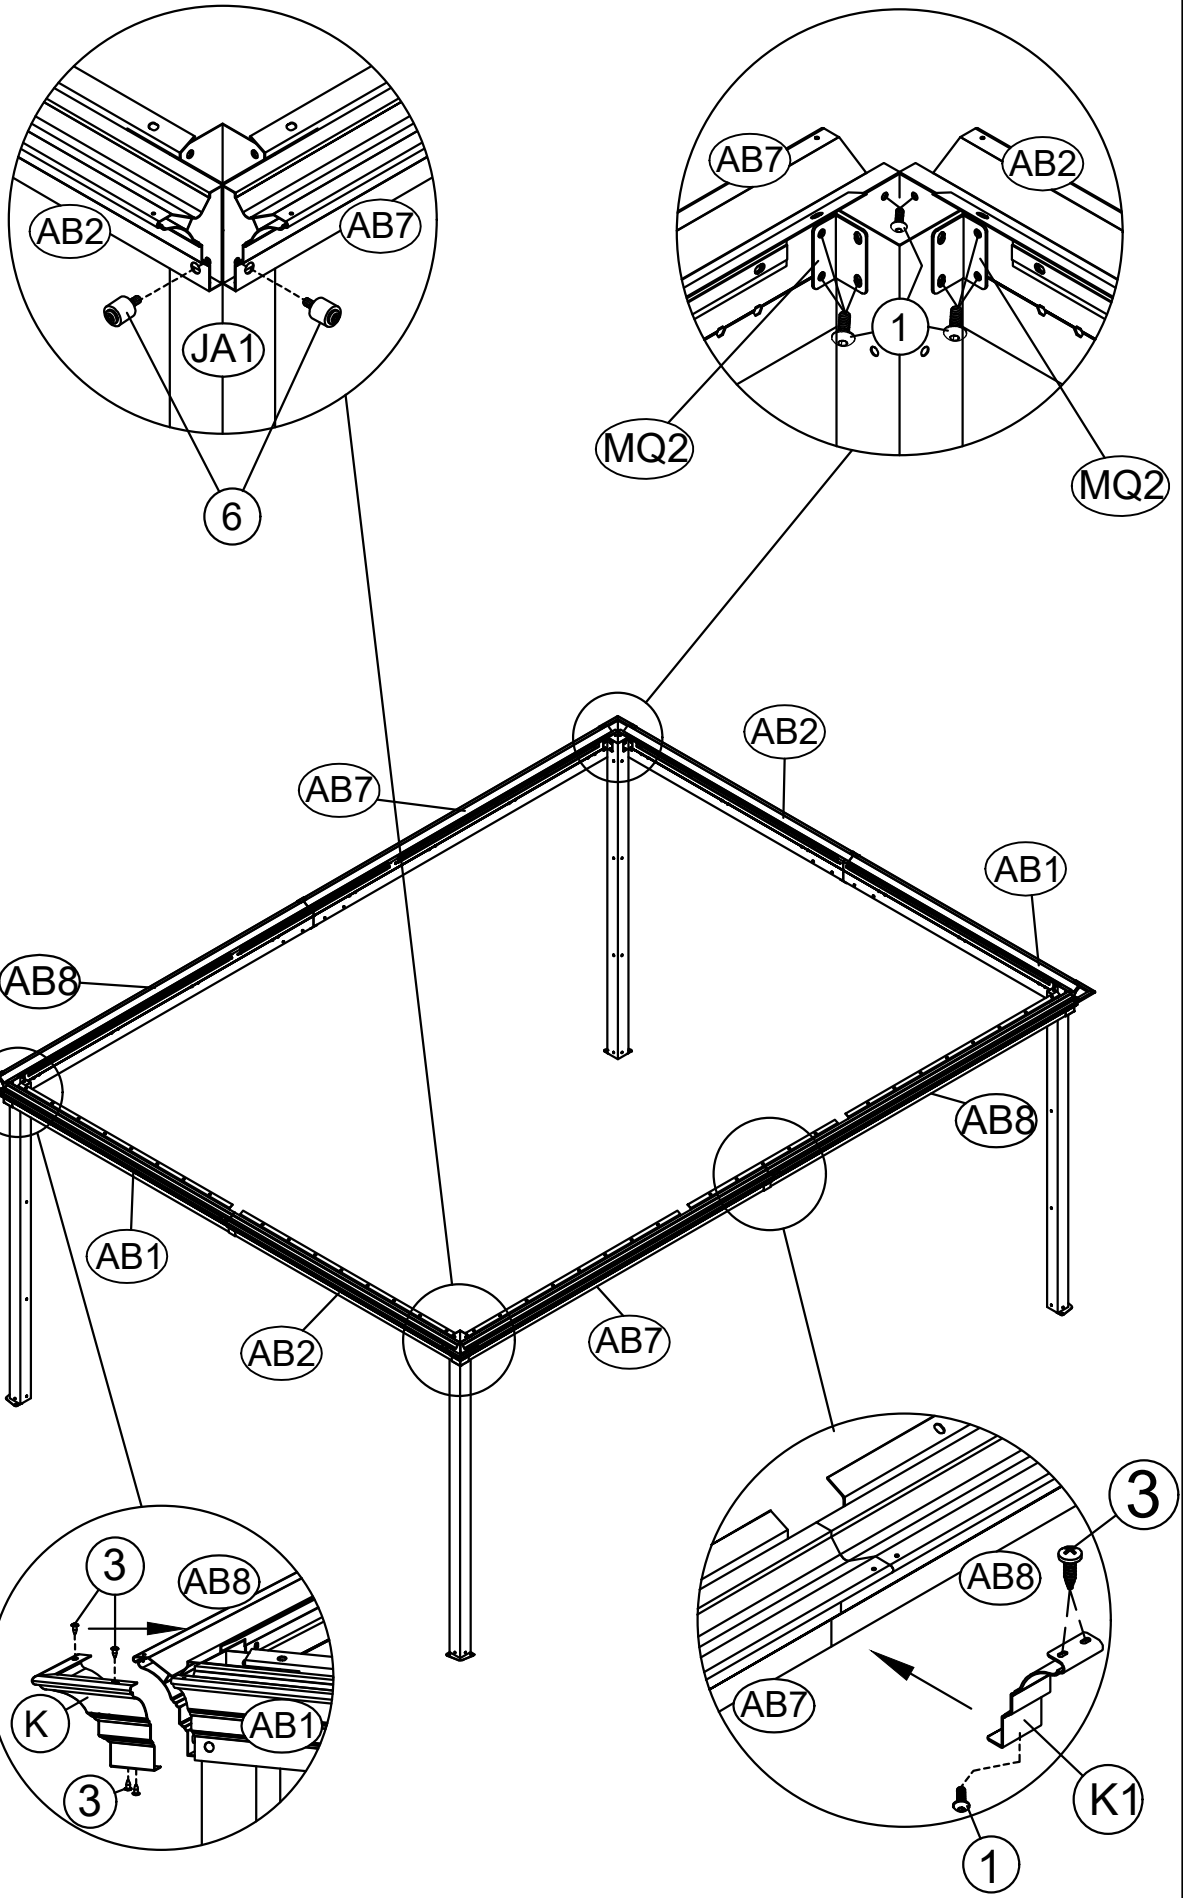

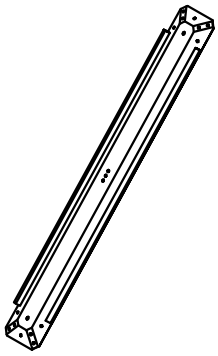


L3C 1x

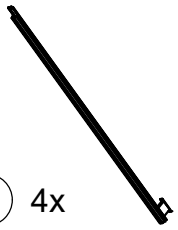

E 4x




E5 4x



JZ2 4x


M6x15


1 20x



9 1x

13

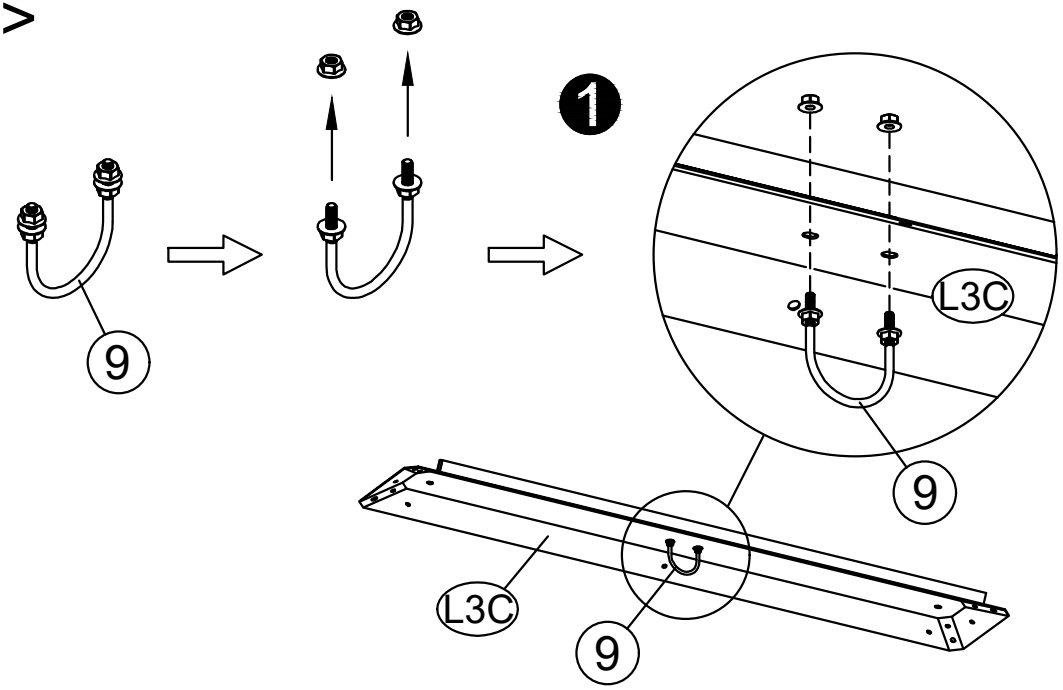


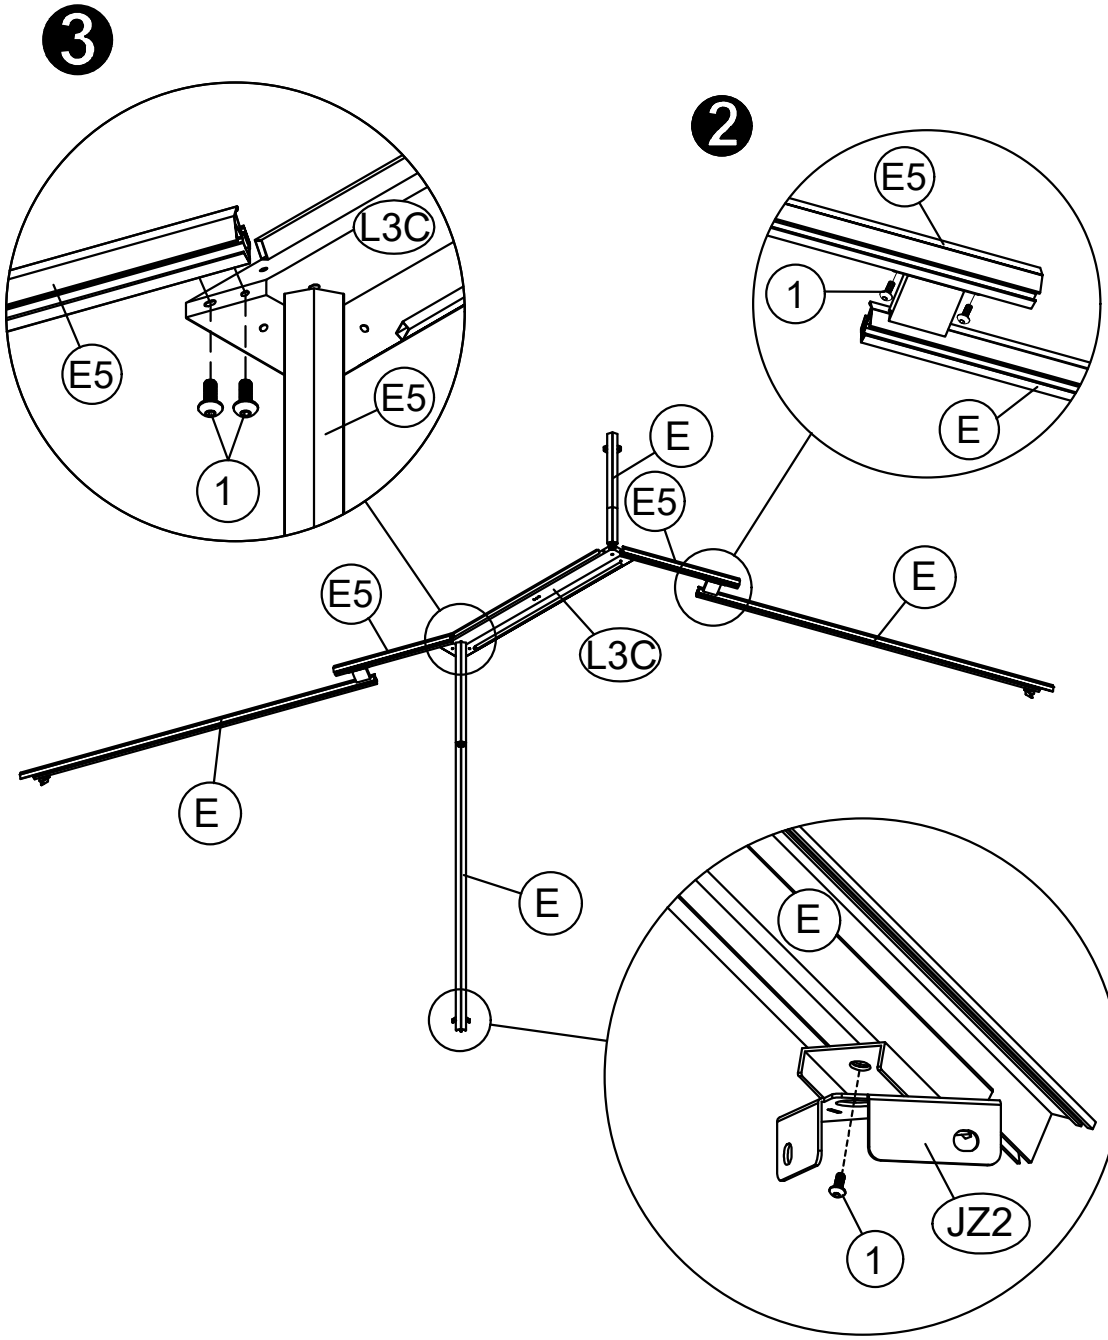


M6x15

1 8x


<5>

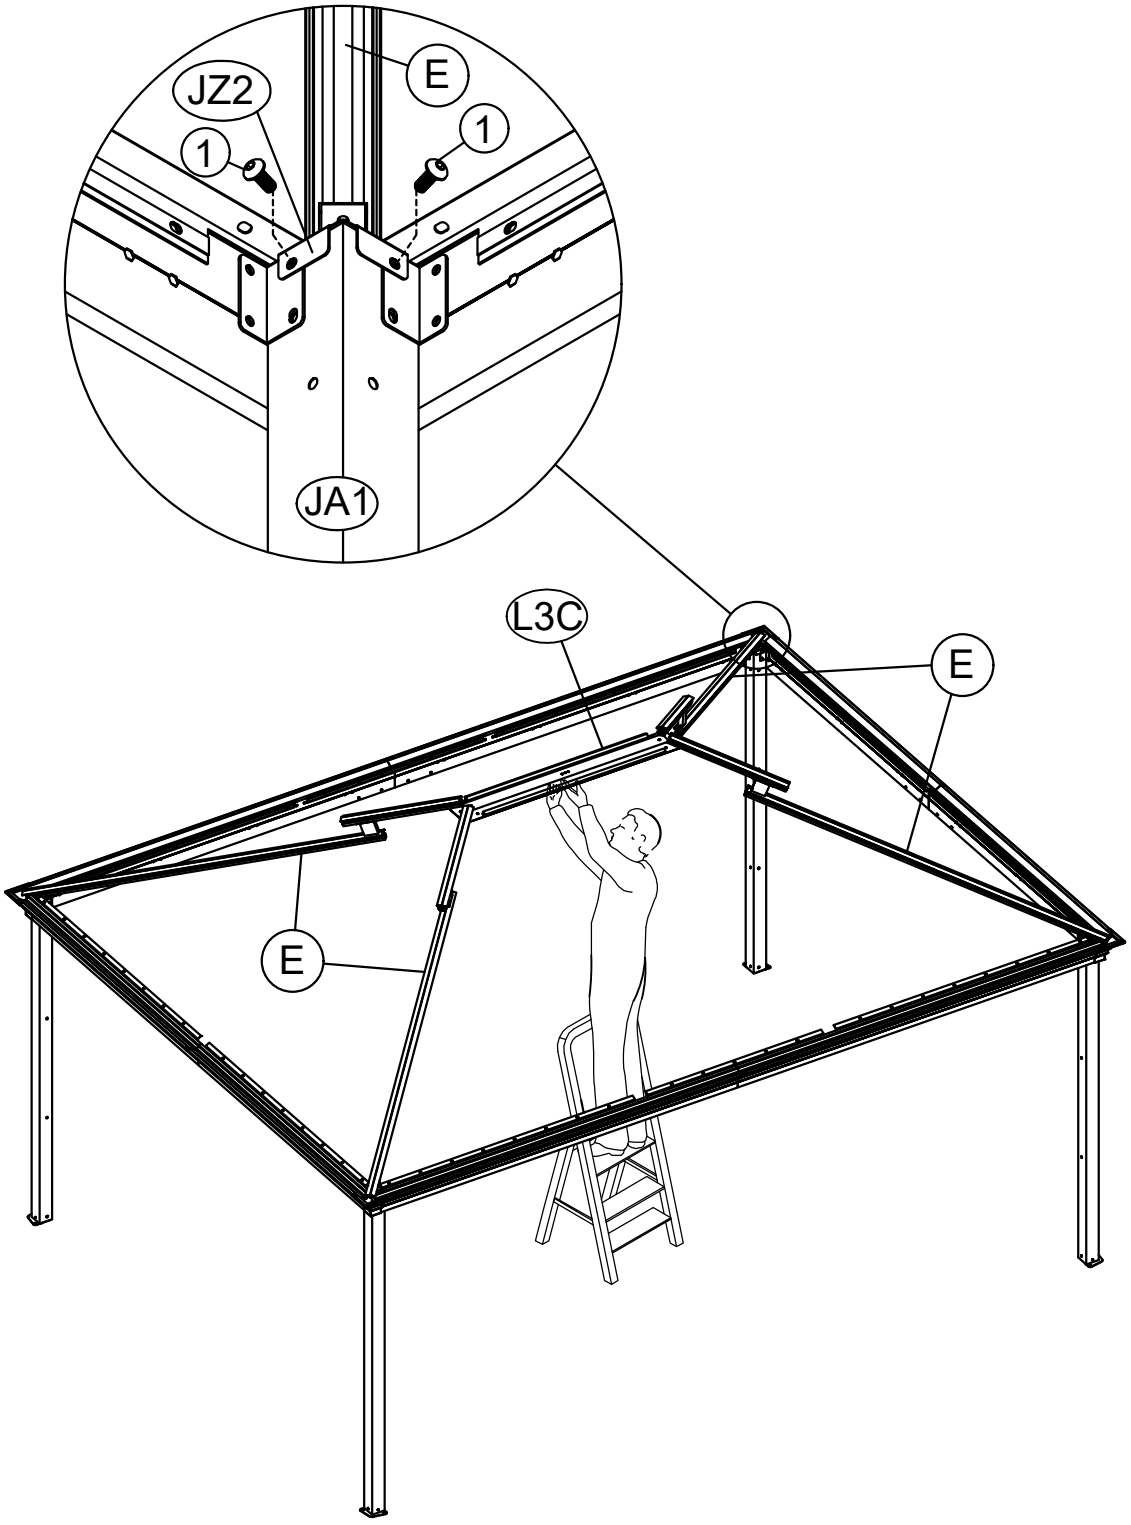


Note:
1. Let one person stand on the ladder to lift "L3C" and hold and let others fasten the screws connecting both ends of" JZ2.
2. Please do not let go of holding "L3C" until all the" JZ2 " screws are installed.

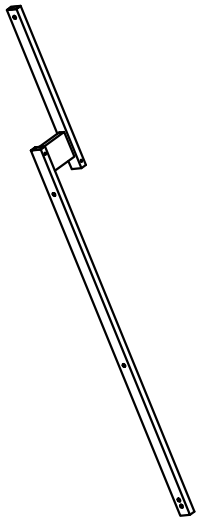

JE3 6x

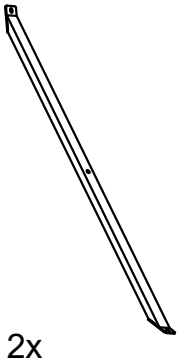

F5 2x



JZ1 6x




M6x15

1 34x




4 **2x**

15

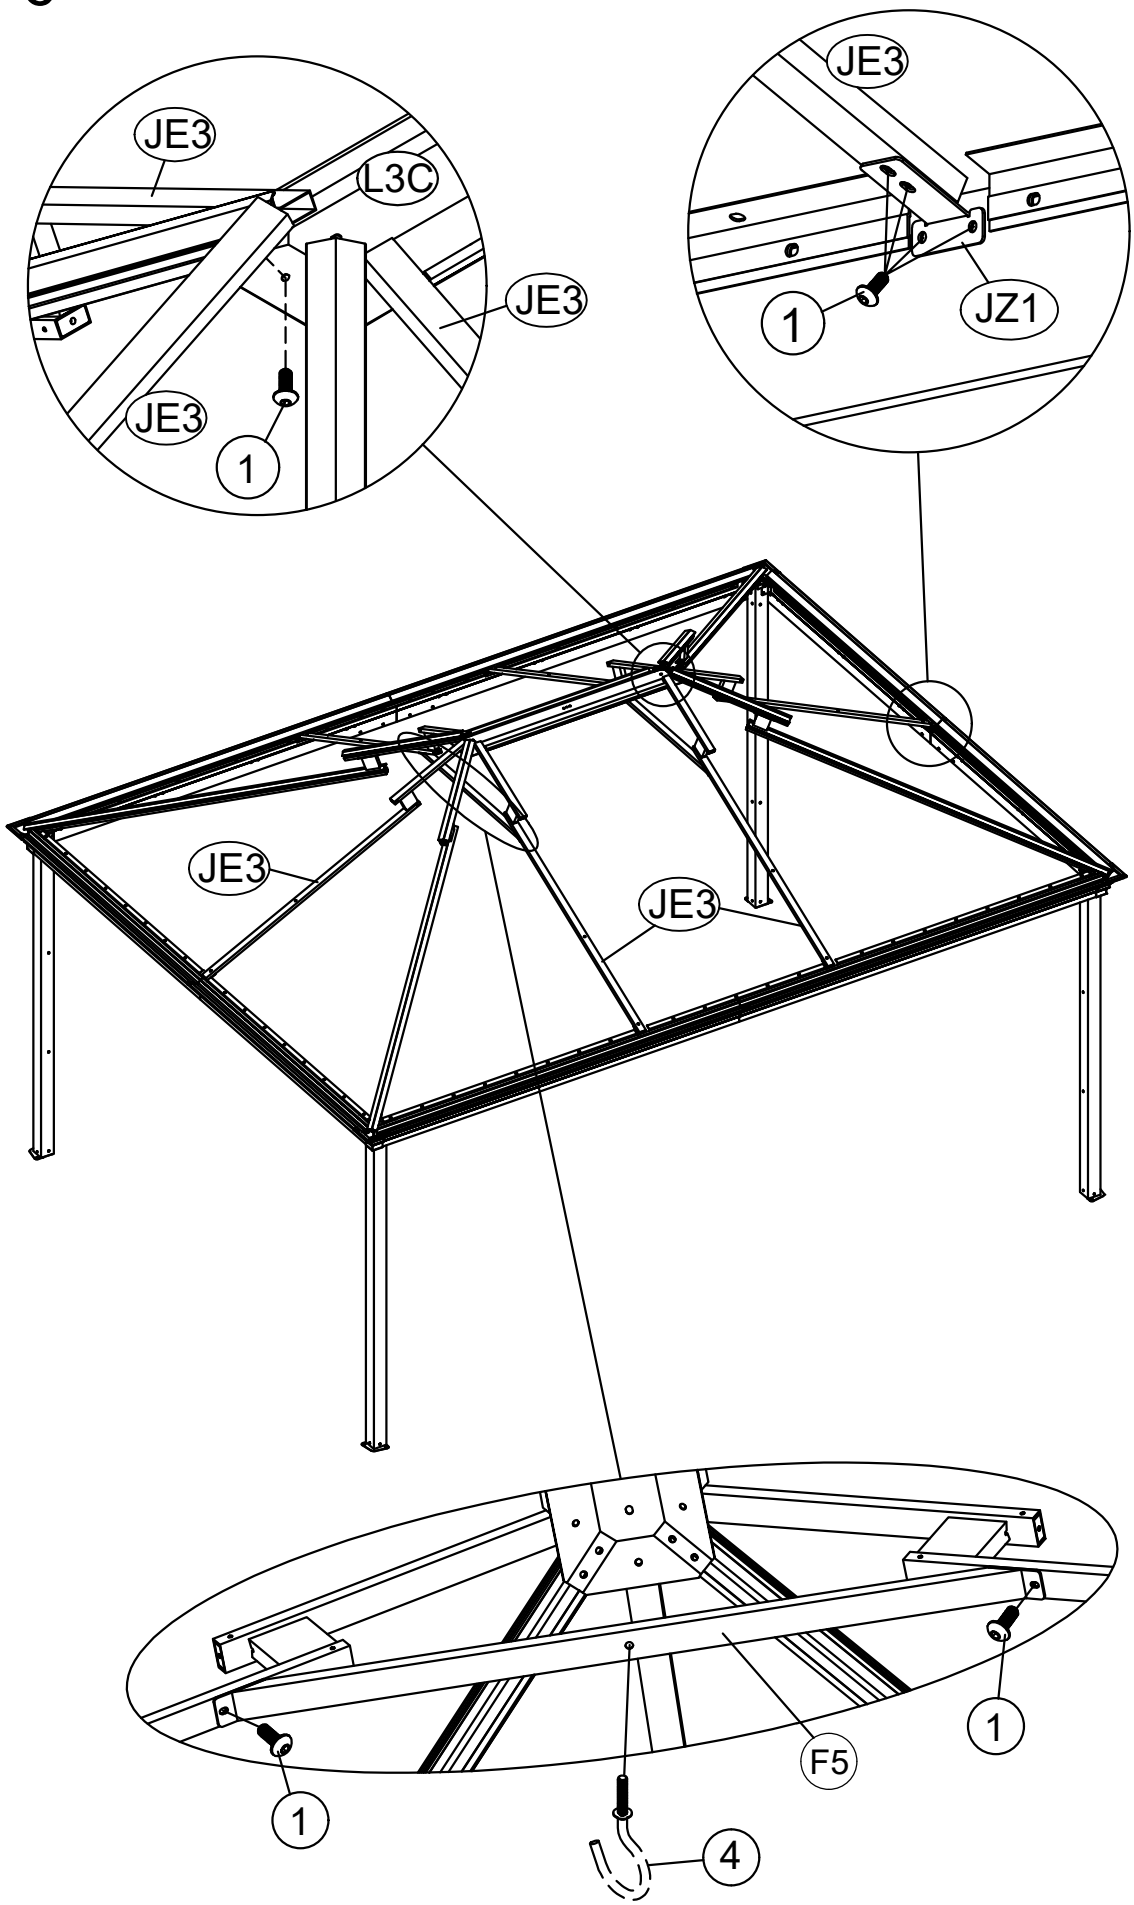





G1 2x

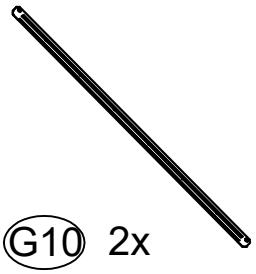

G10 2x

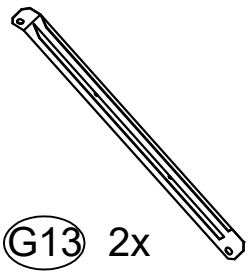

G13 2x

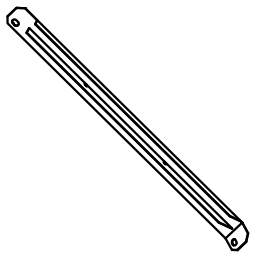

G14 2x



N 4x



N1 4x





M6x15


1 10x

16

<7>

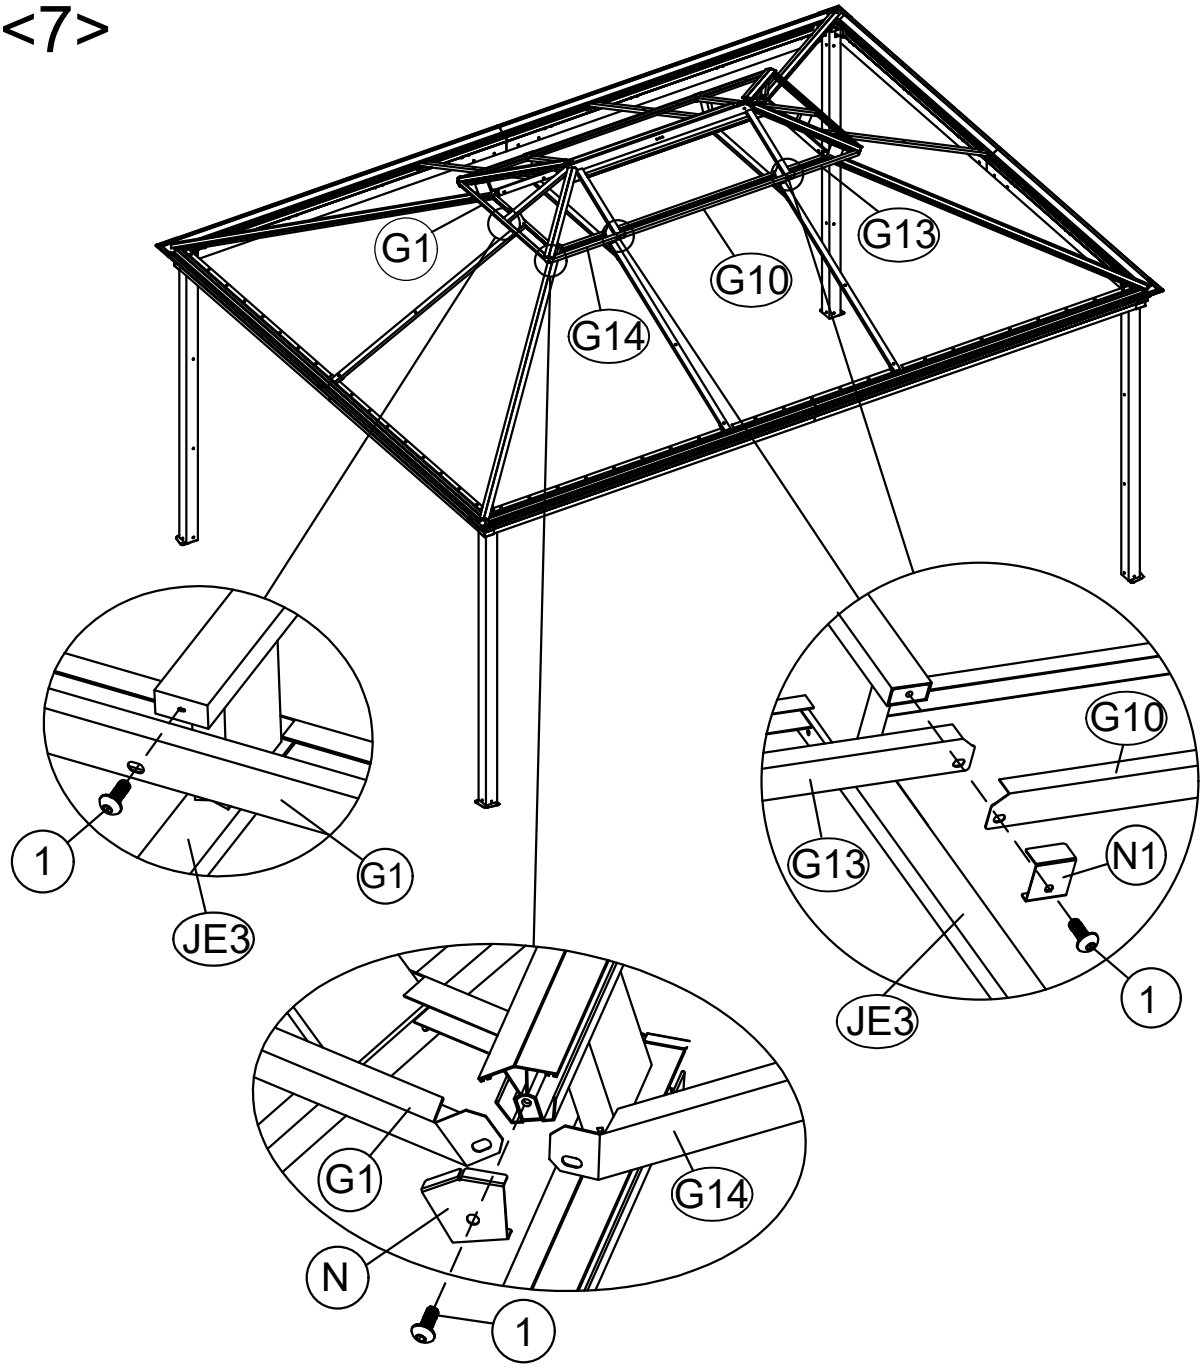

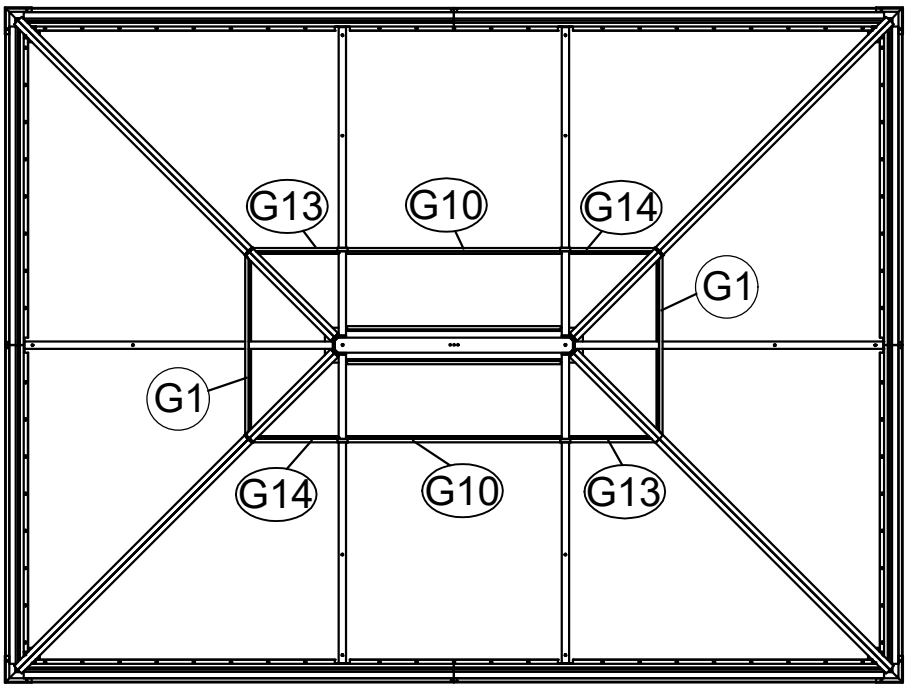

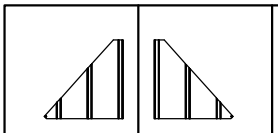

S1 2x


S2 2x




R1 2x



R2 2x



R3 2x




R4 2x




R5 2x




R6 2x



Z 32x

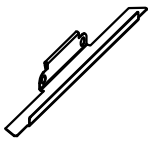



Z1 4x

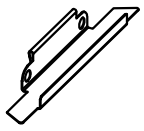


Z2 4x


<8>

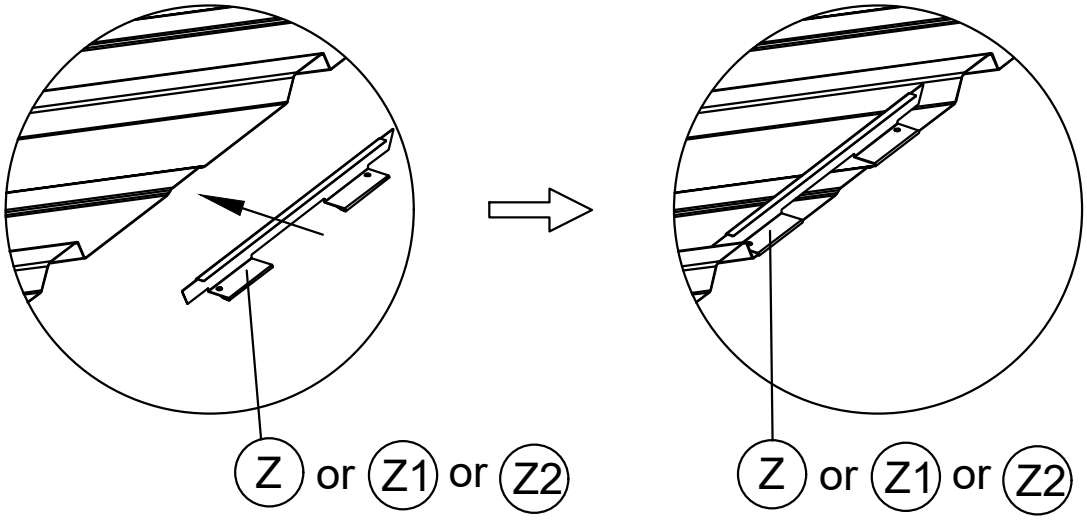


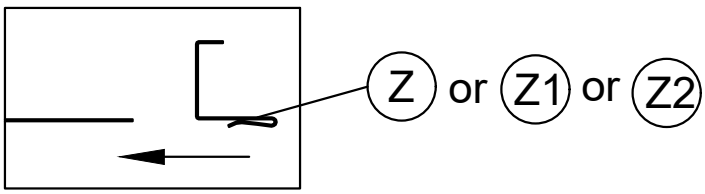


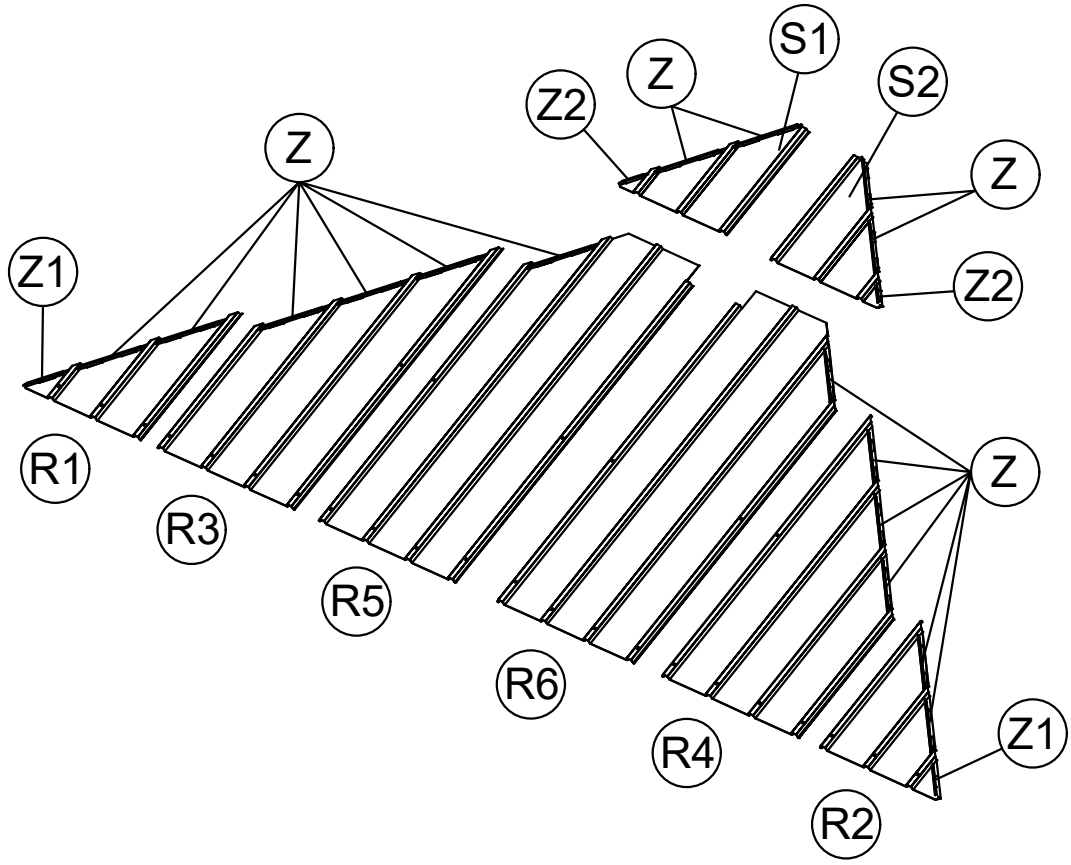

<9>

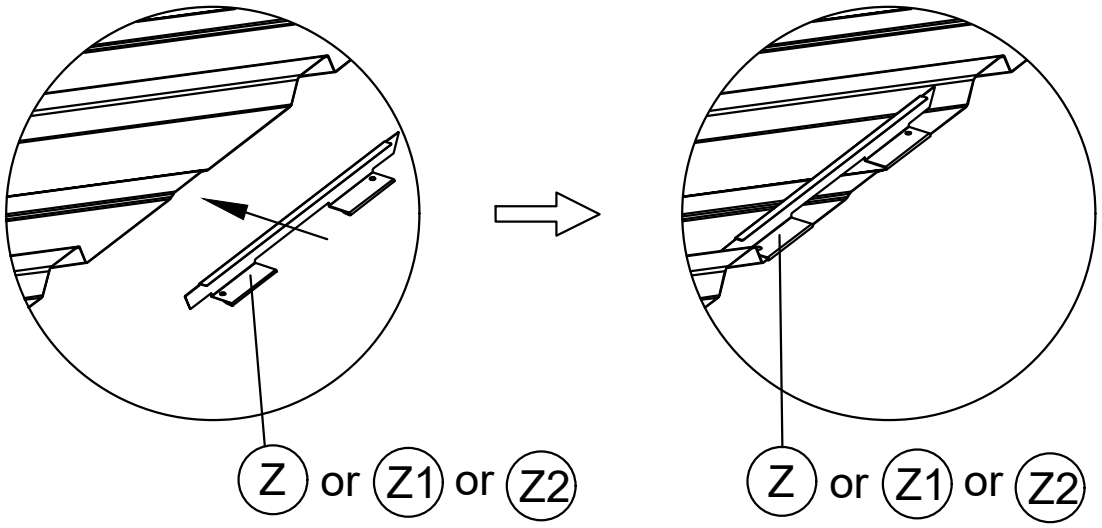

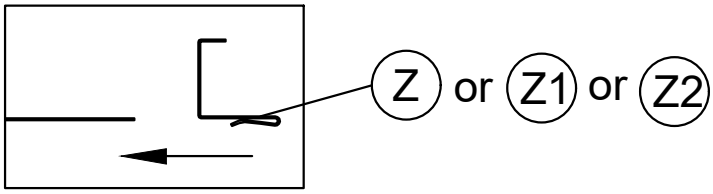

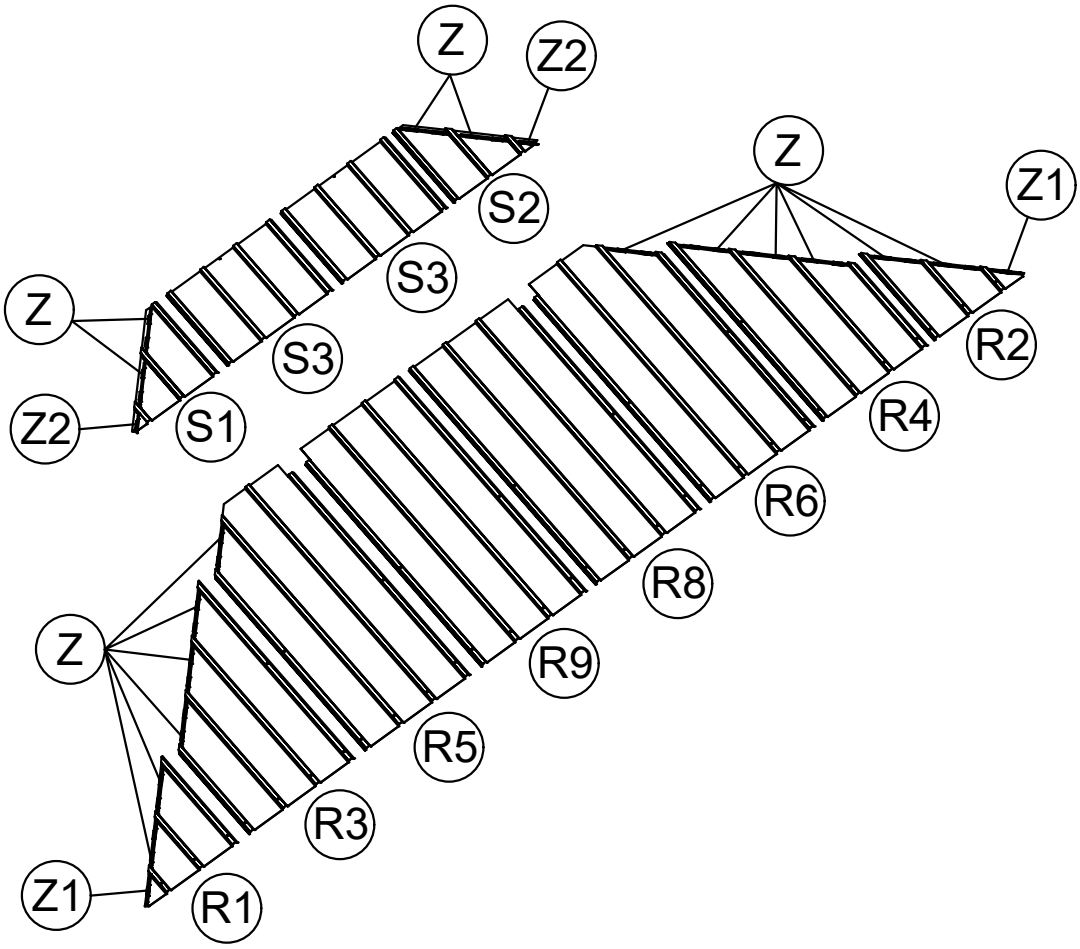

S1 2x S2 2x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x

S3 4x


R8 2x R9 2x

Z 32x


Z1 4x


Z2 4x


<10>

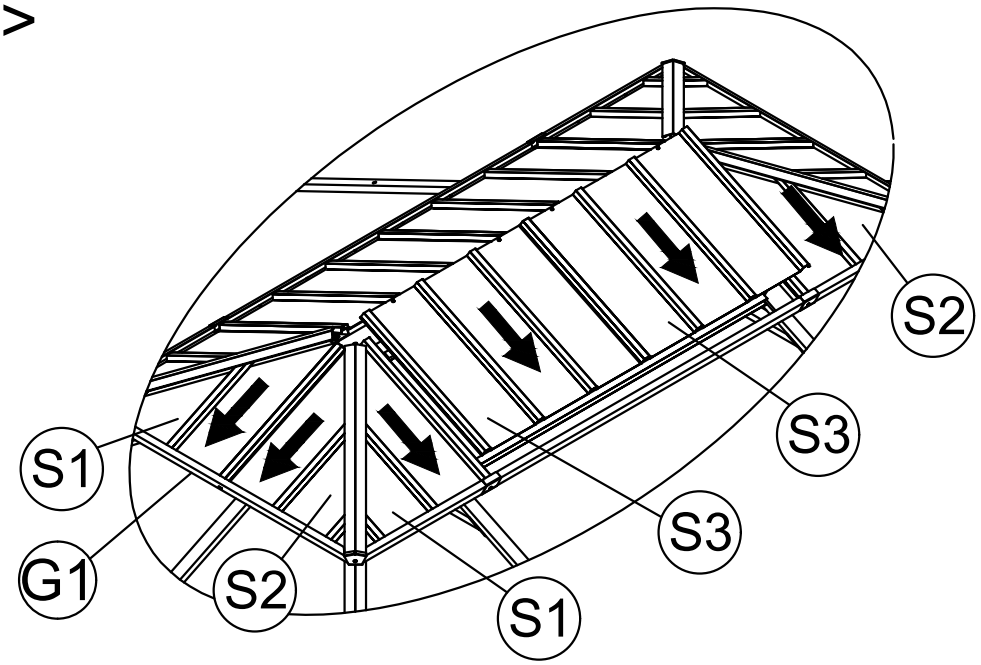

When installing the Roof plates (S2) onto the short side, pls detach the right end of the Roof Rib(G1) first. And then install the right end of Roof Rib (G1) again after S2 is installed.

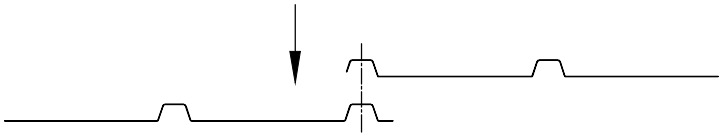

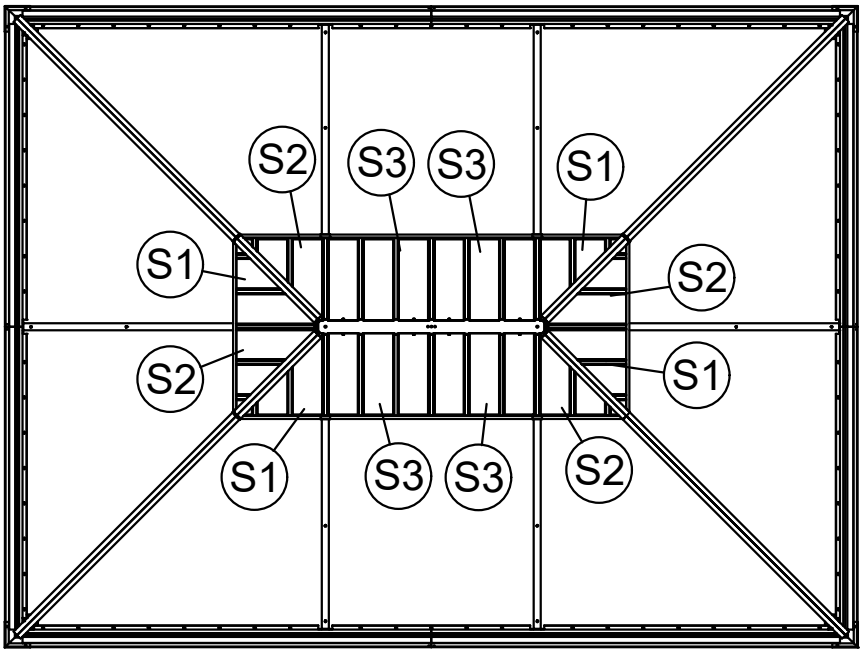

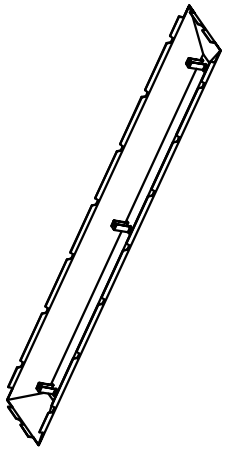



M3 1x

M6x15


1 3x

<11>

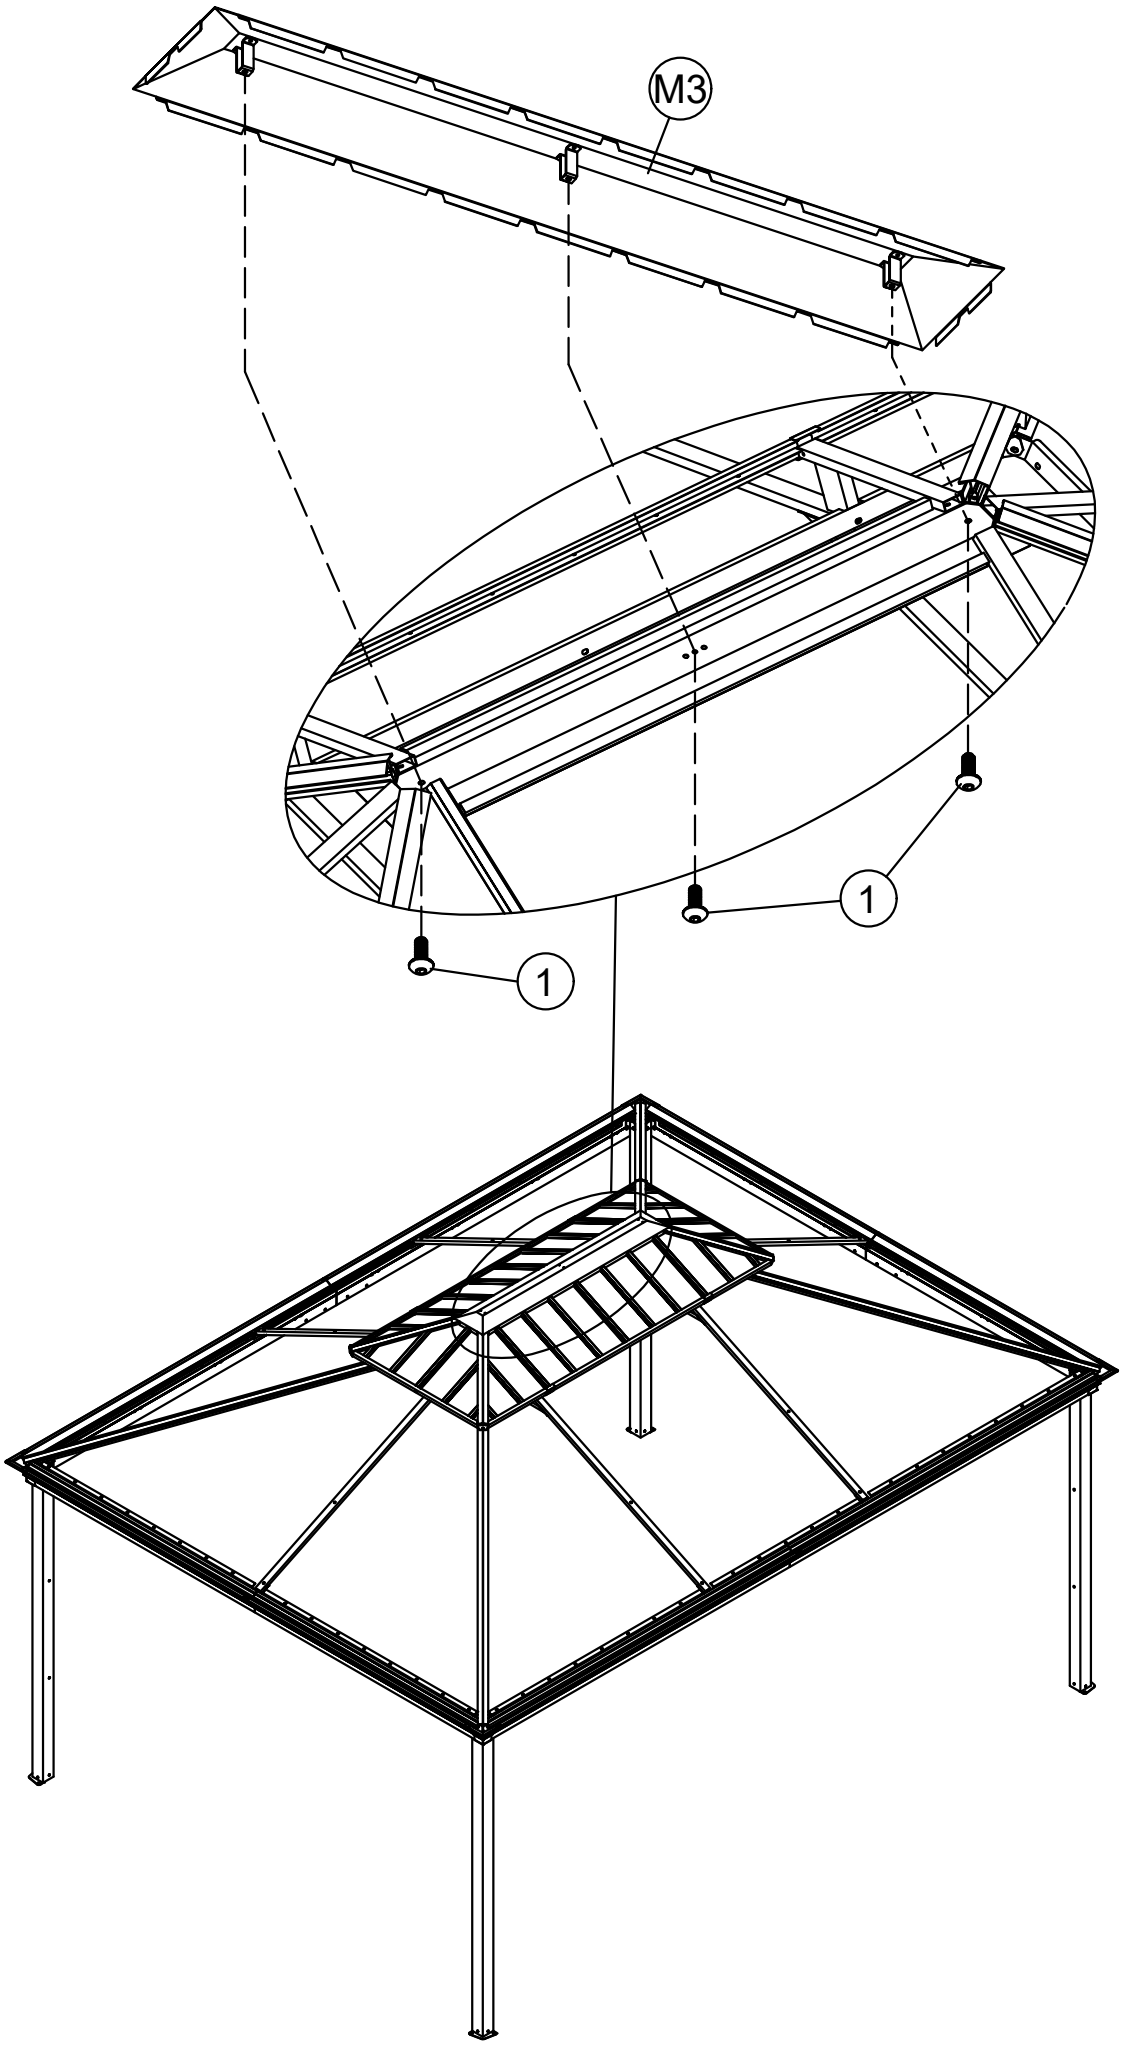

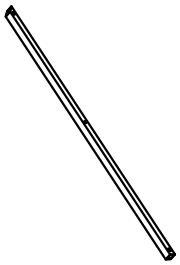


F1 8x

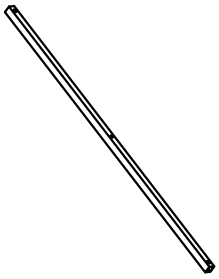

F3 2x



W 4x




W1 6x





M6x15


1 30x

21

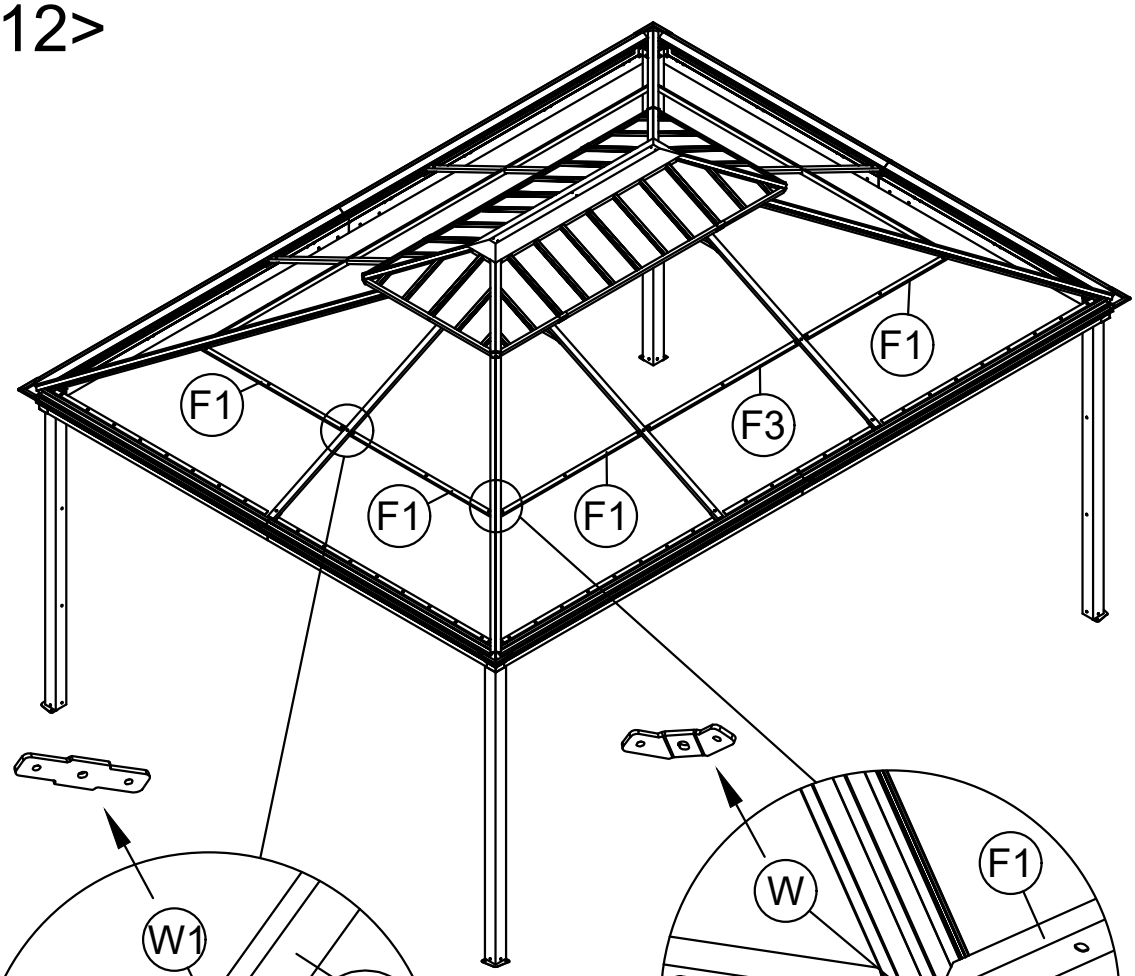


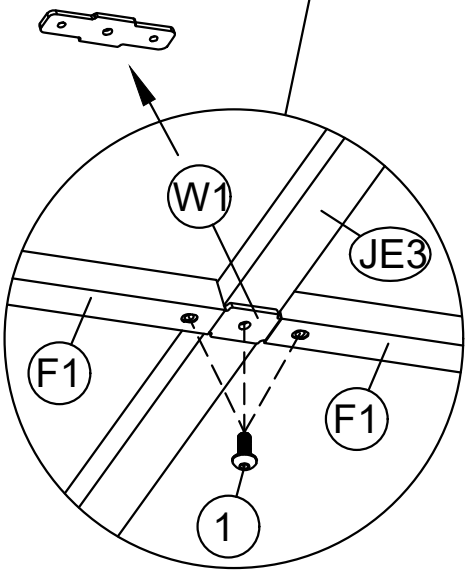


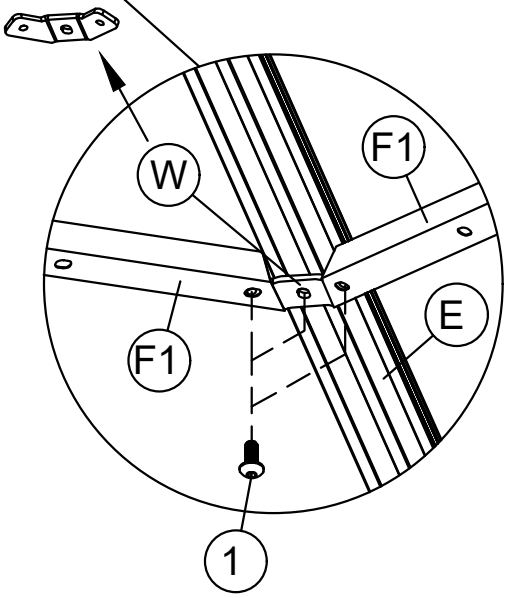

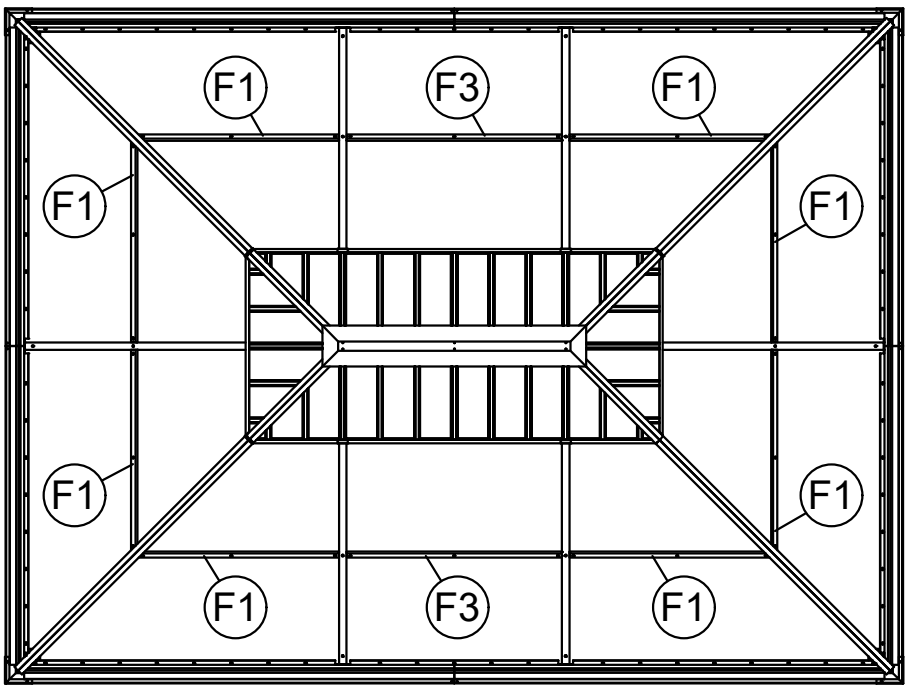



<13>

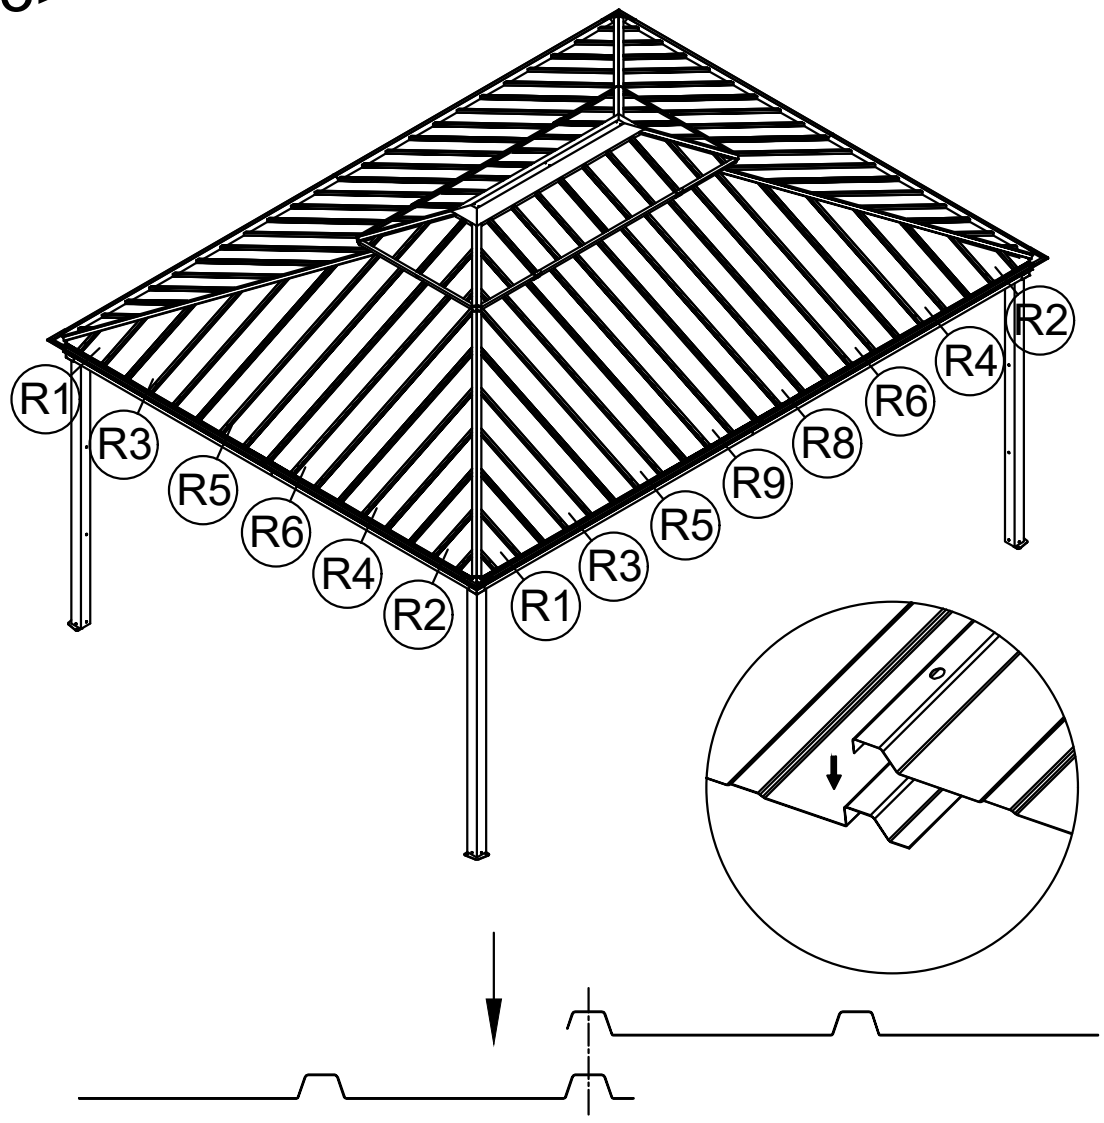
R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R6
R4
R2

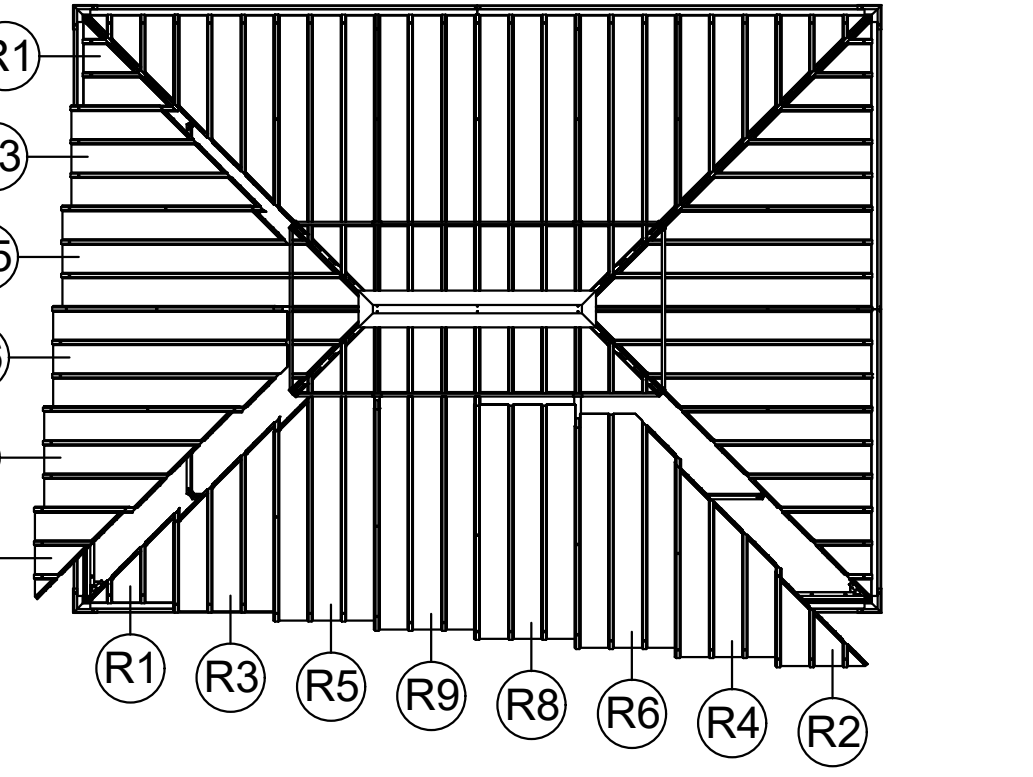

R1
R3
R5
R6
R4
R2
R1
R3
R5
R9
R8
R6
R4
R2

<14>

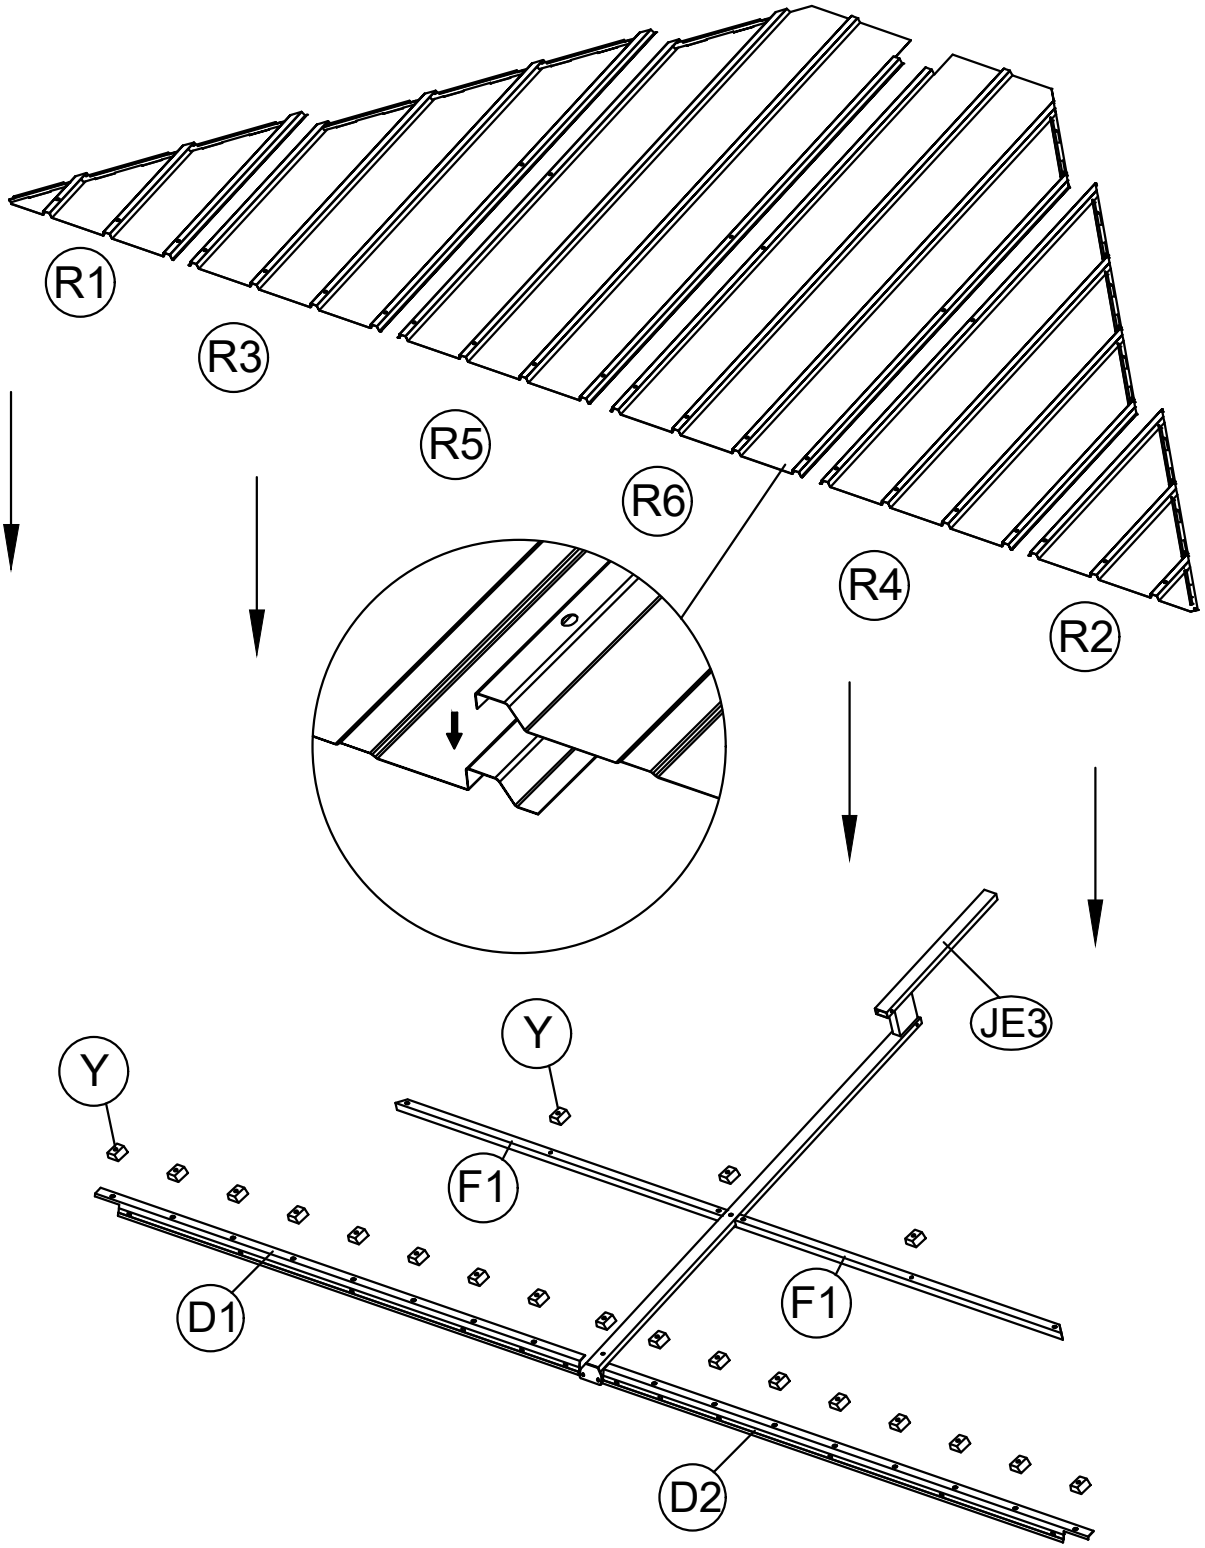

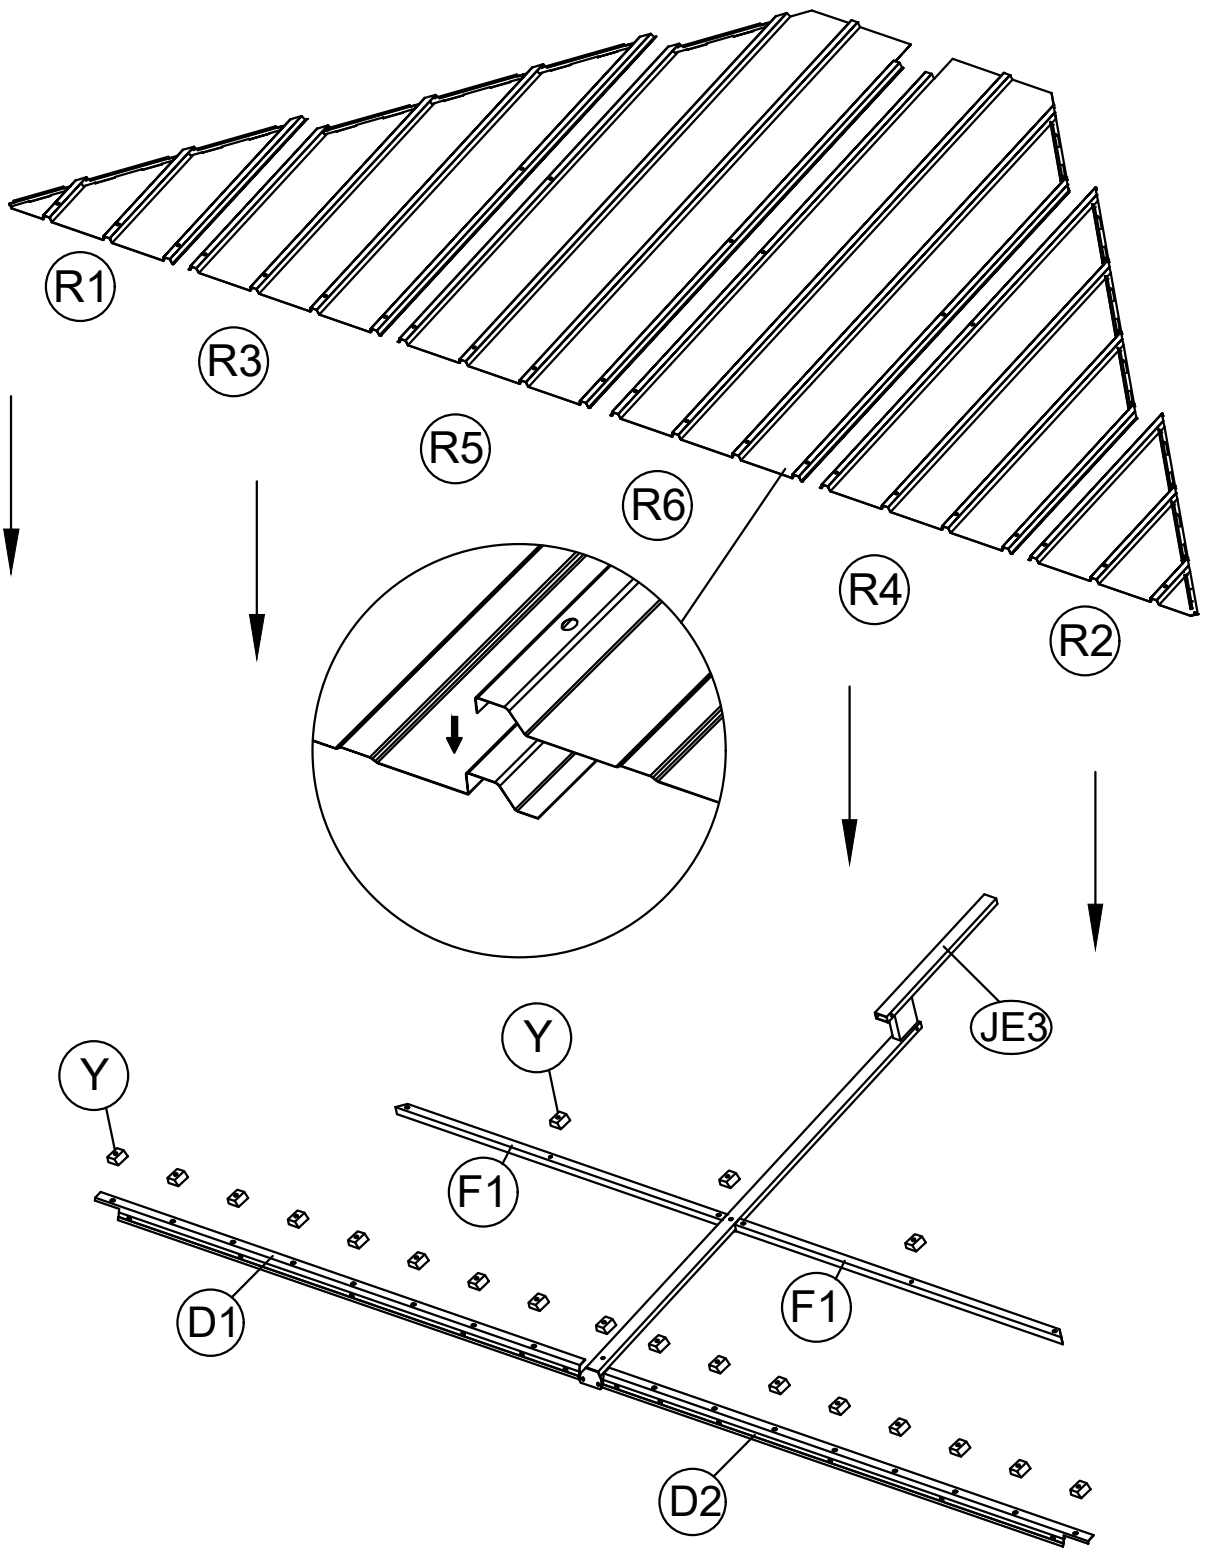
R1
R3
R5
R6
R4
R2
Y
Y
JE3
F1
F1
D1
D2

<15>

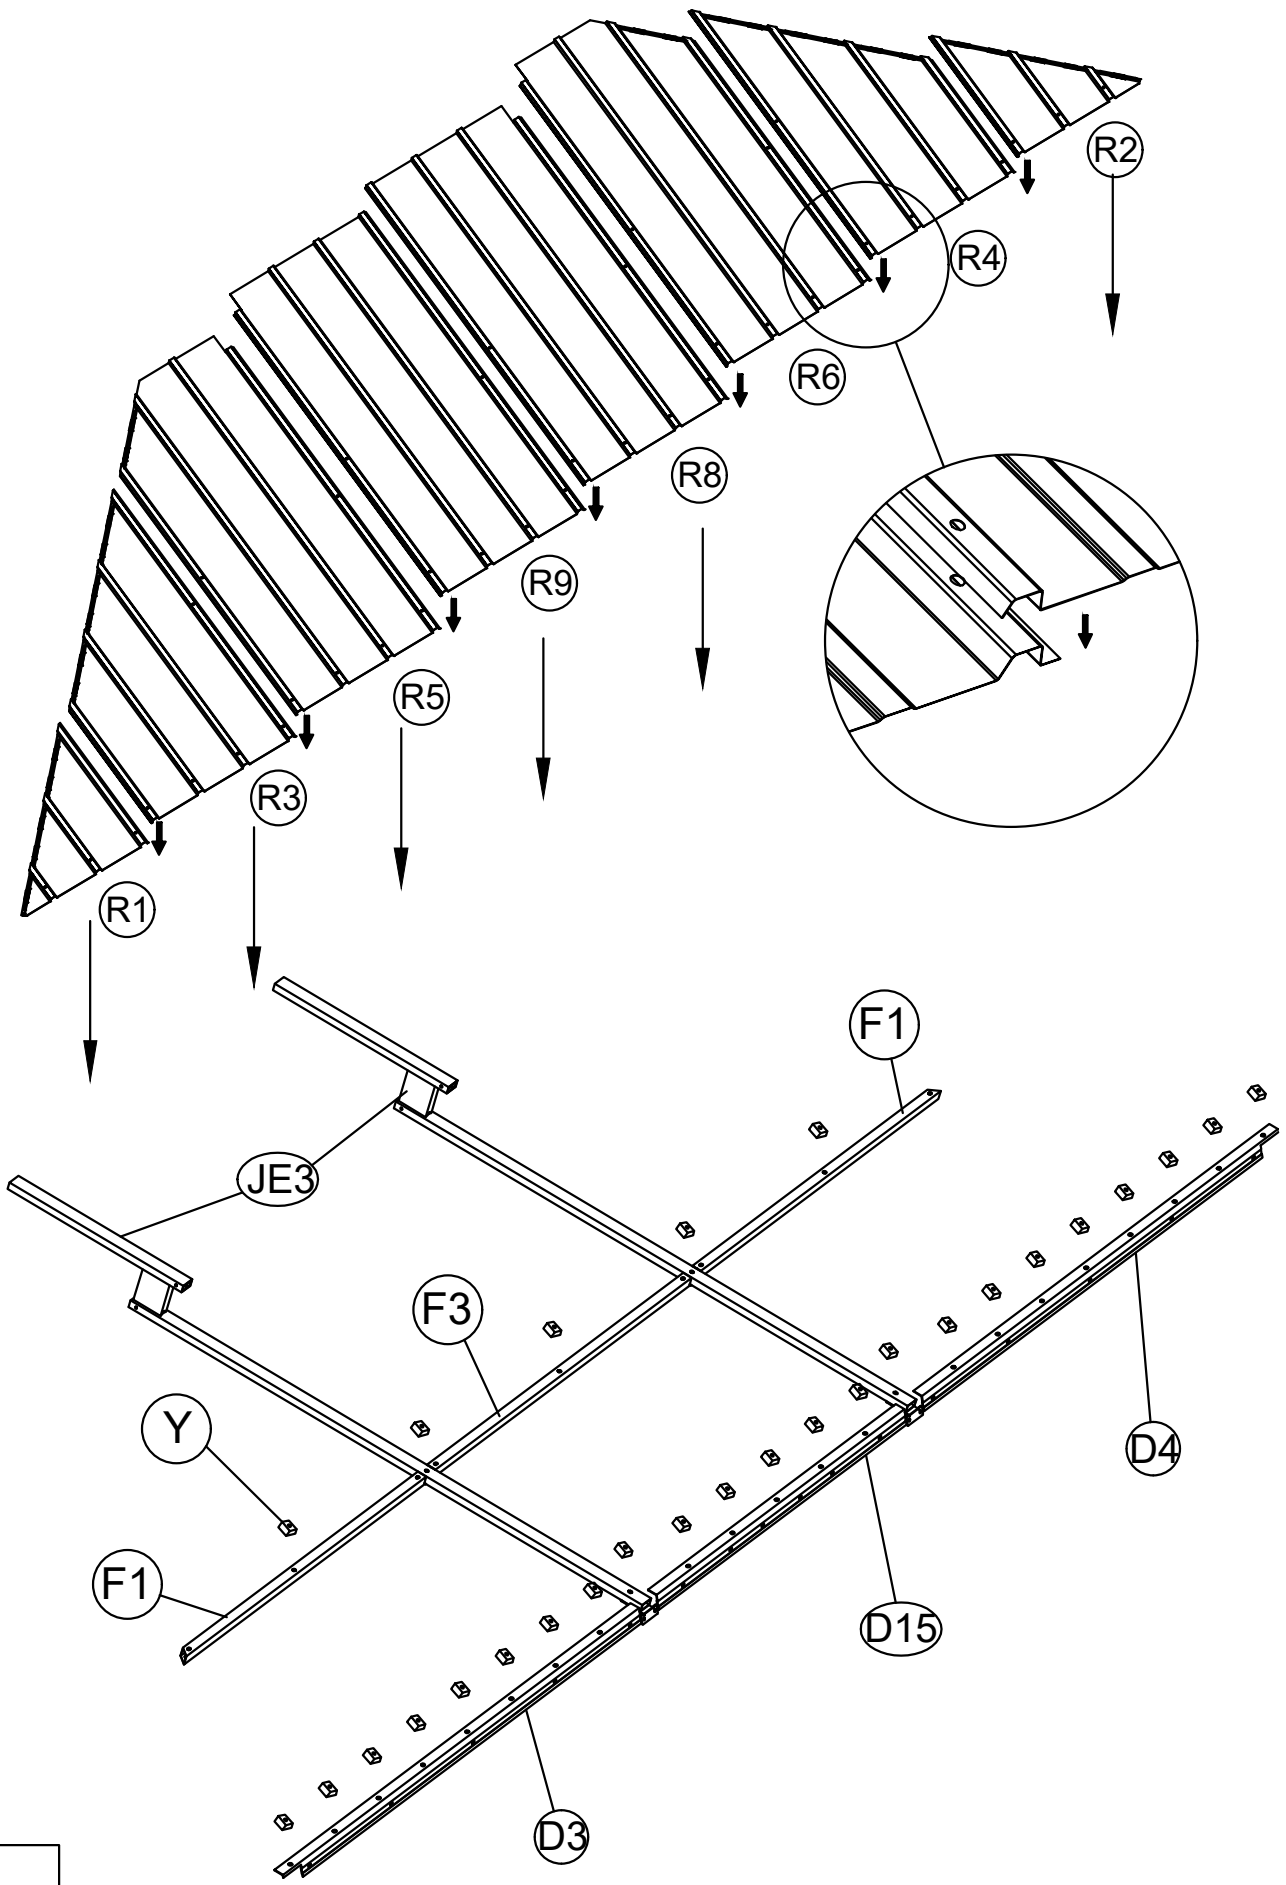

M6x25

2 86x

M6x50

5 10x

M6

10 84x


M6

19 96x


Rubber Gasket

23 96x


Y 96x

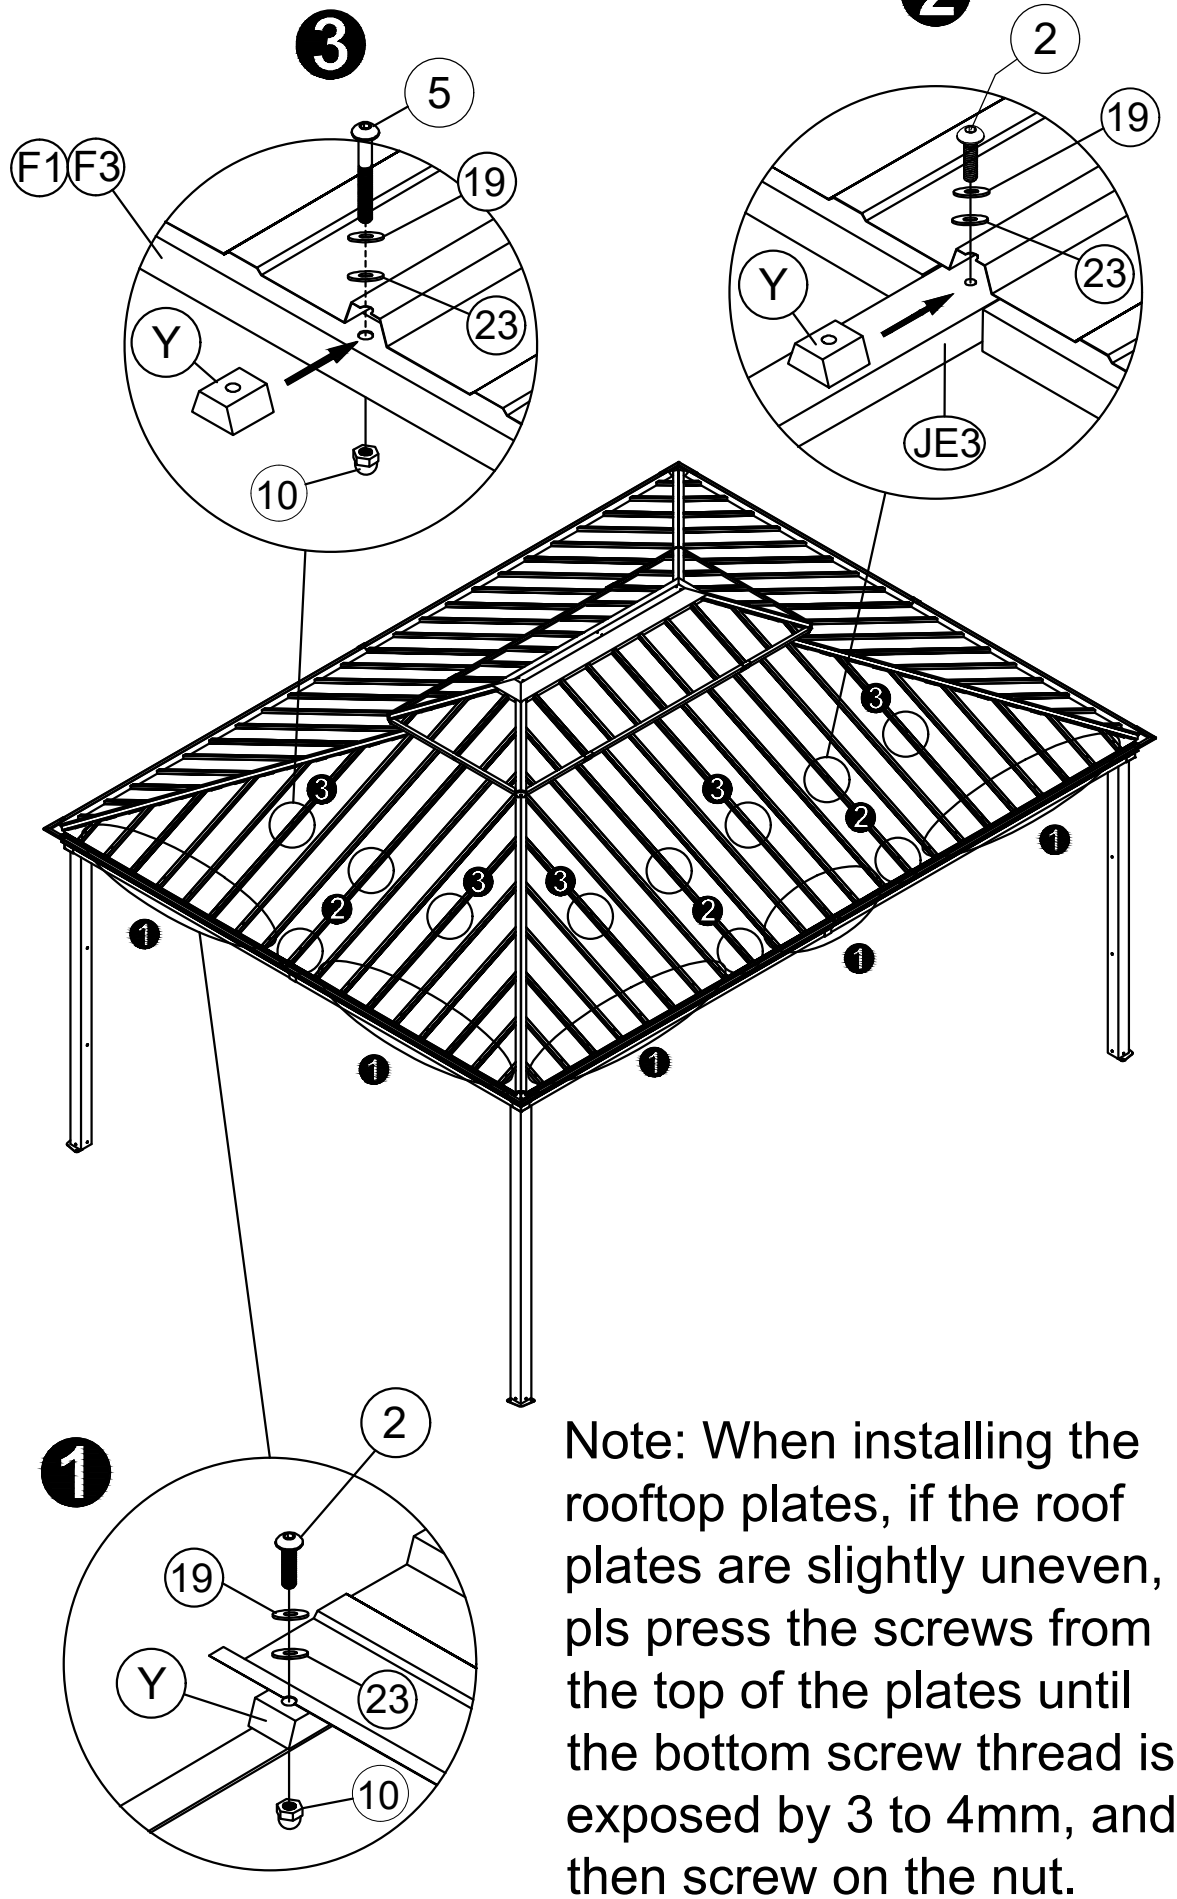

Note: When installing the rooftop plates, if the roof plates are slightly uneven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

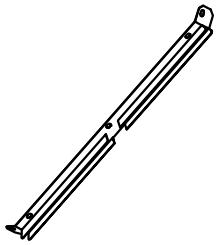


I1 2x

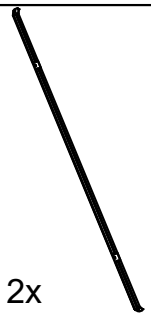


I10 2x




N 4x



V1 2x

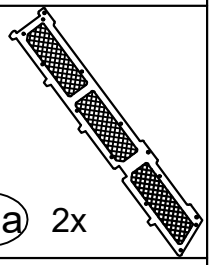

V7a 2x

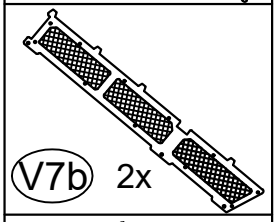

V7b 2x



M6x15

1 10x




M6x10


7 10x





M6

10 10x

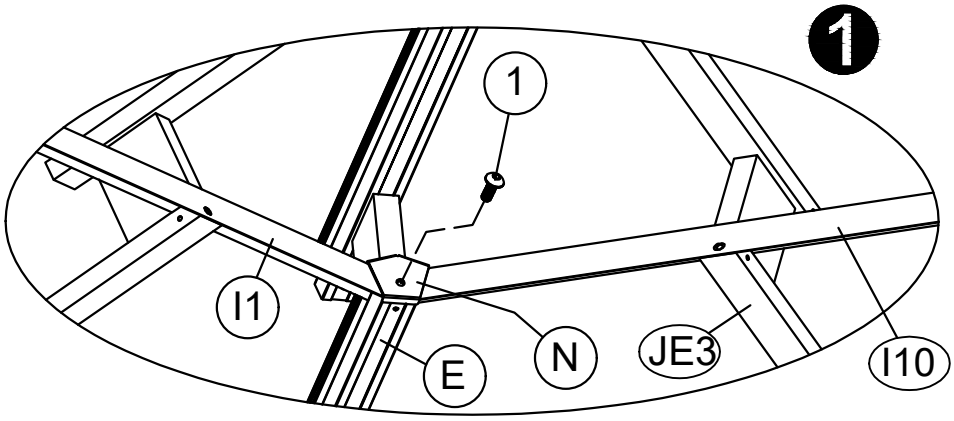


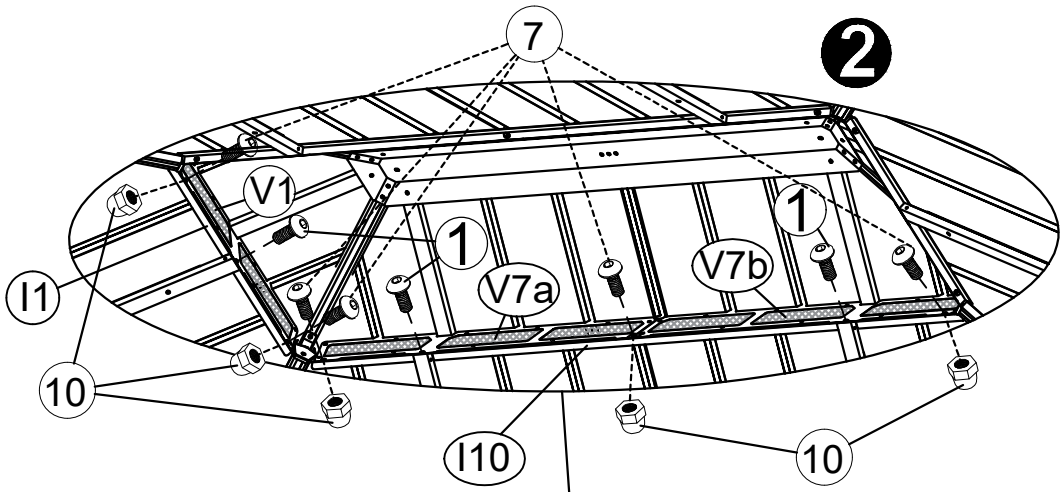

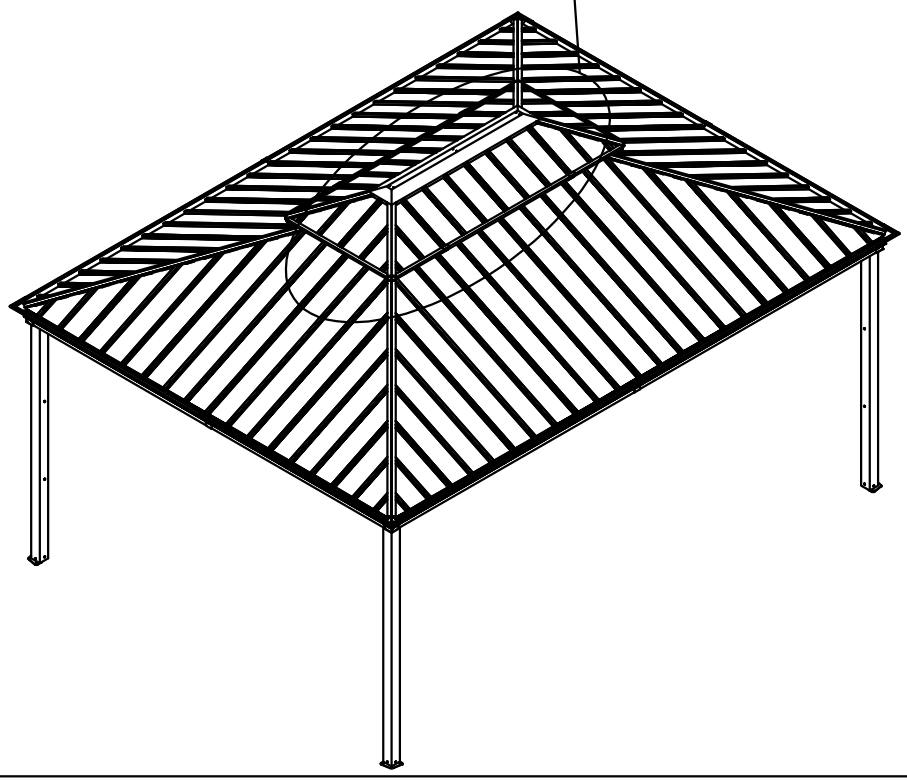


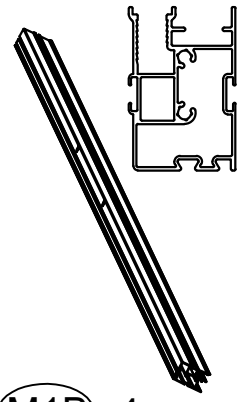


M1B 4x

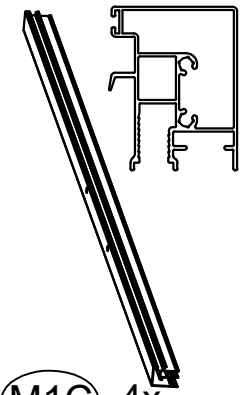


M1C 4x

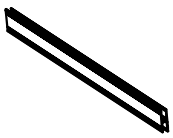

M5G 8x



MS2 4x

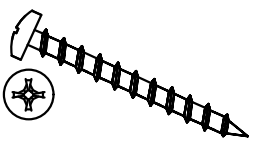


M4x50


14 16x


27

AB 4x


For component AB, repeat four times.

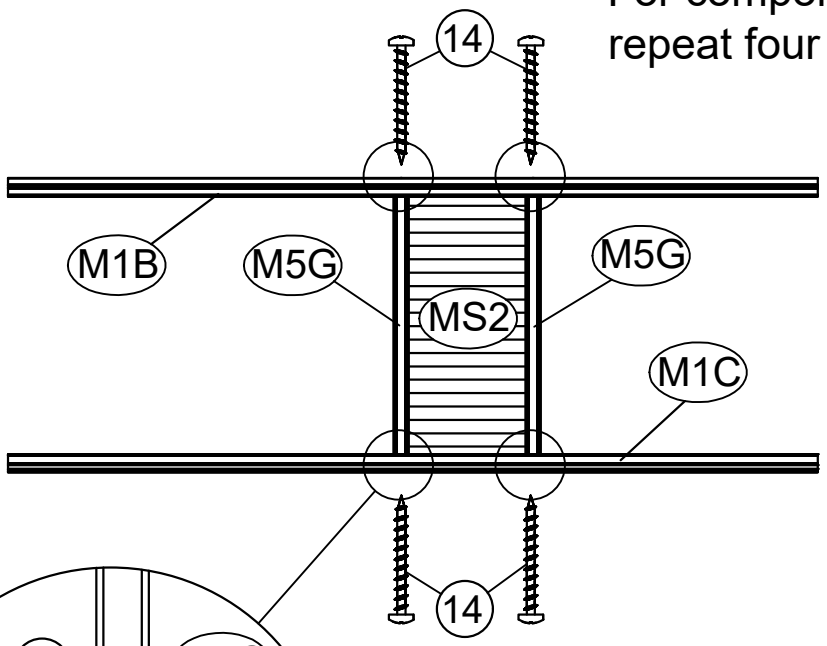

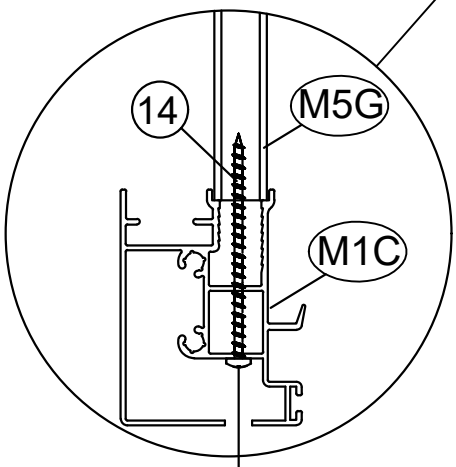

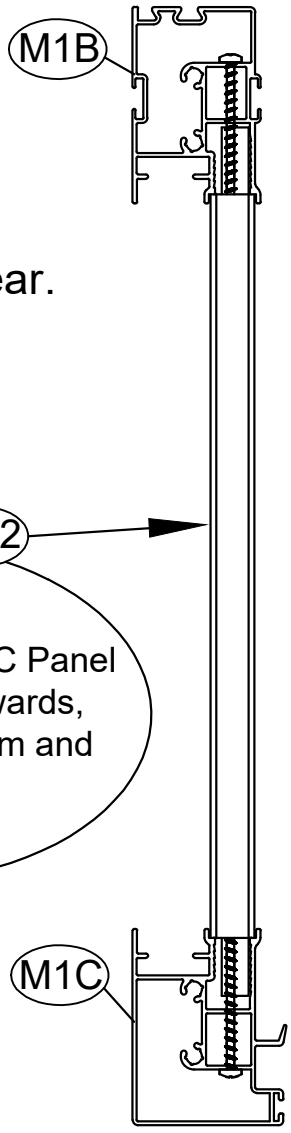


Select the low gear.

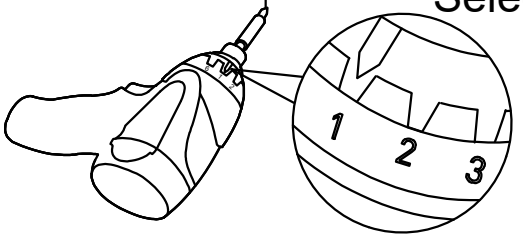


With the side of the PC Panel with text facing outwards, tear the protective film and installing.


The door frame installation template on pages 27 to 32 is displayed. All subsequent door frames follow this template.

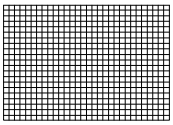

M1S 4x

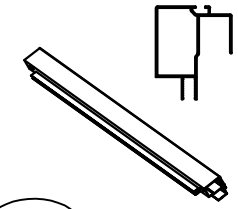

M4K 4x




M4x20


12 16x

<19>

For component AB, repeat four times.


AB 4x

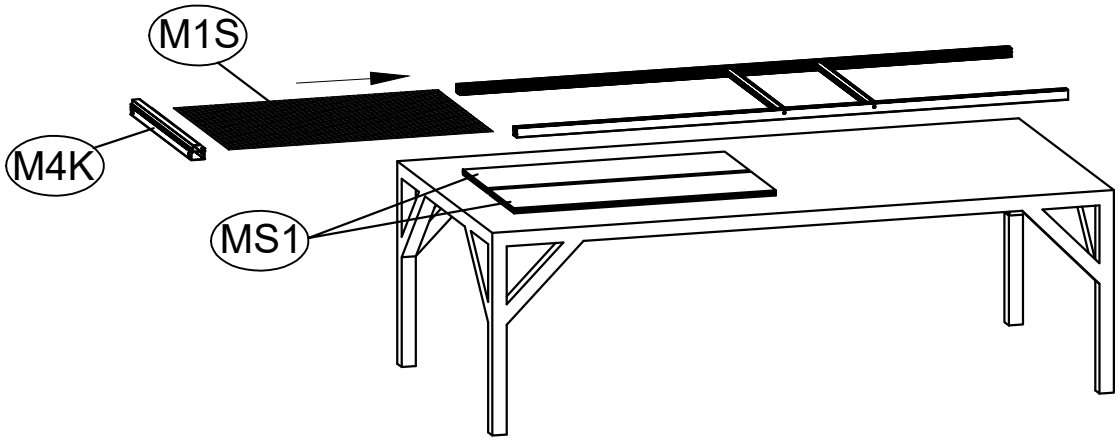

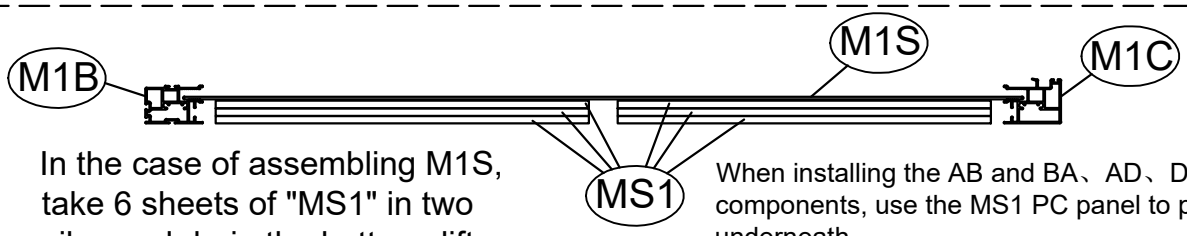

In the case of assembling M1S, take 6 sheets of "MS1" in two piles and drain the bottom, lift the "M1S".

When installing the AB and BA、AD、DA components, use the MS1 PC panel to pad underneath.
When installing the "EA" components, use the MS13 PC panel to pad underneath.

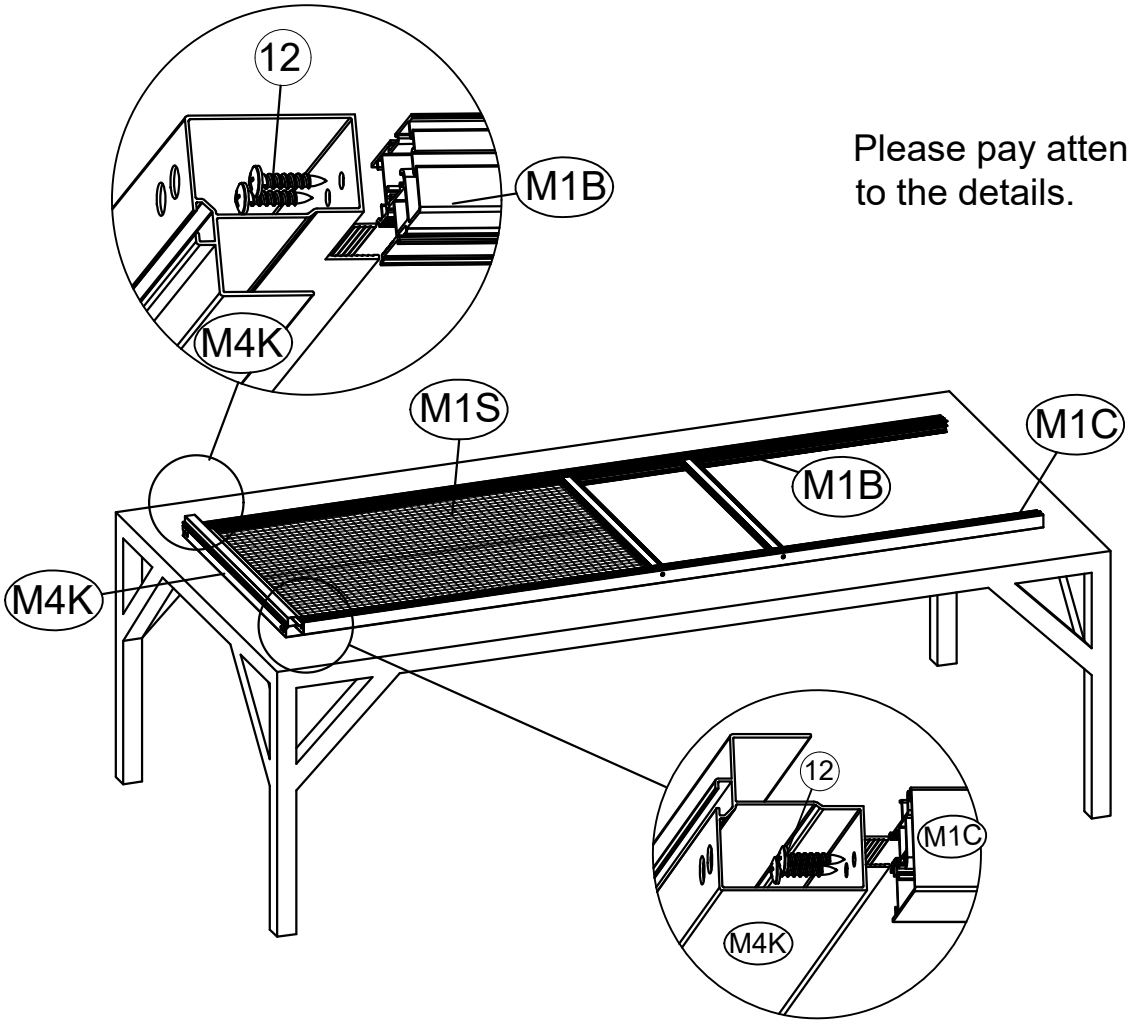


Please pay attention to the details.

<20>


AB 4x

For component AB, repeat four times.

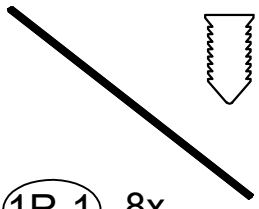



1R-1 8x


Before installing the parts (1R-1 and 1R-2)，move the gauze by hand to ensure makes enough space around the gauze.

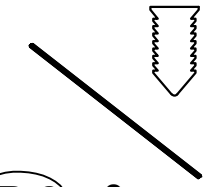


1R-2 8x

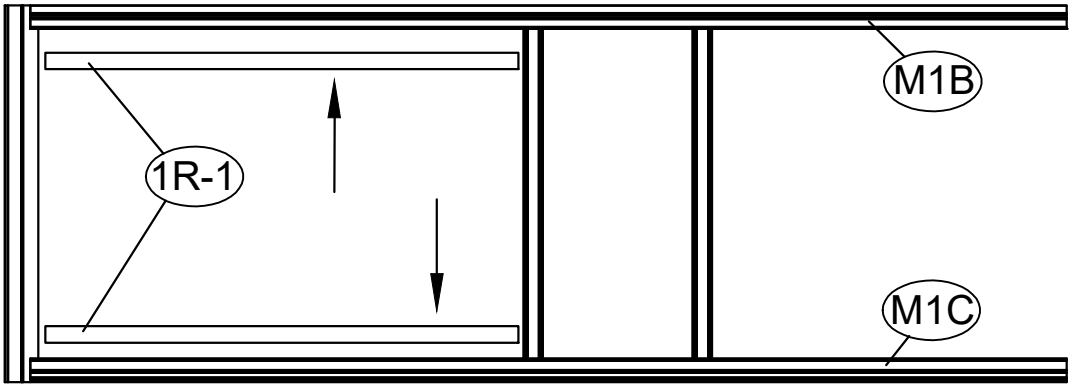

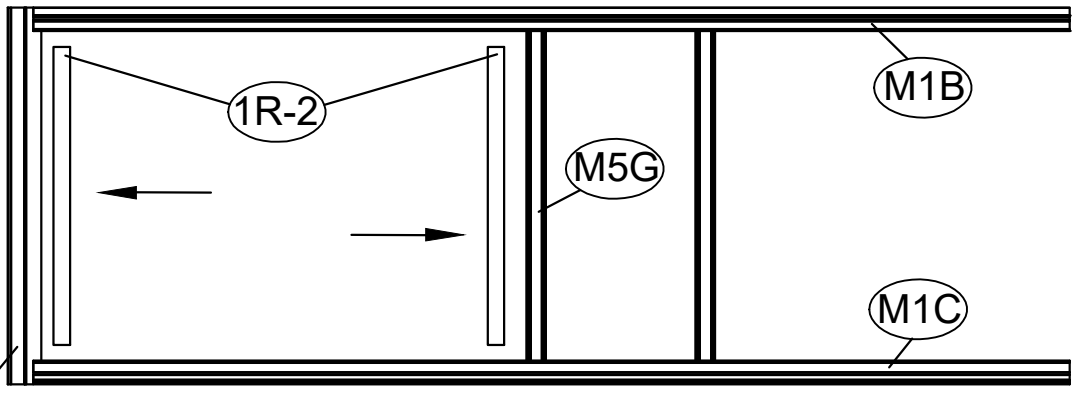


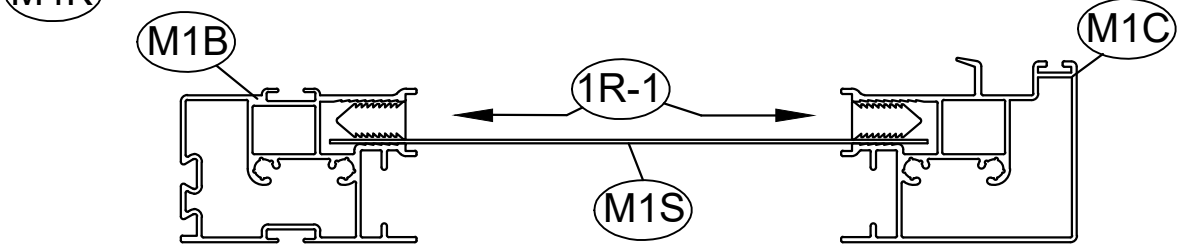

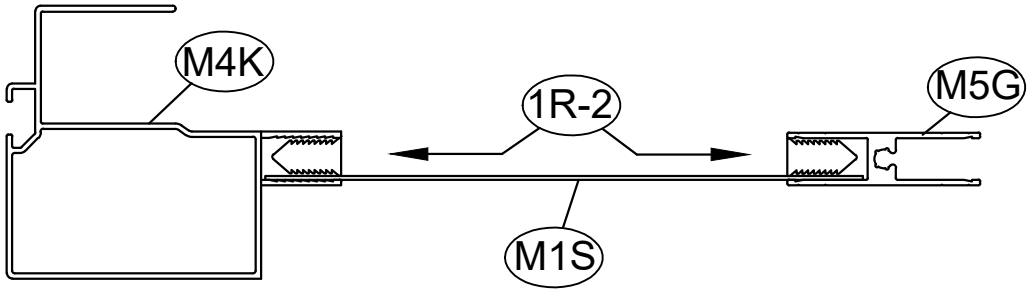


<21>

This picture is for subsequent reference

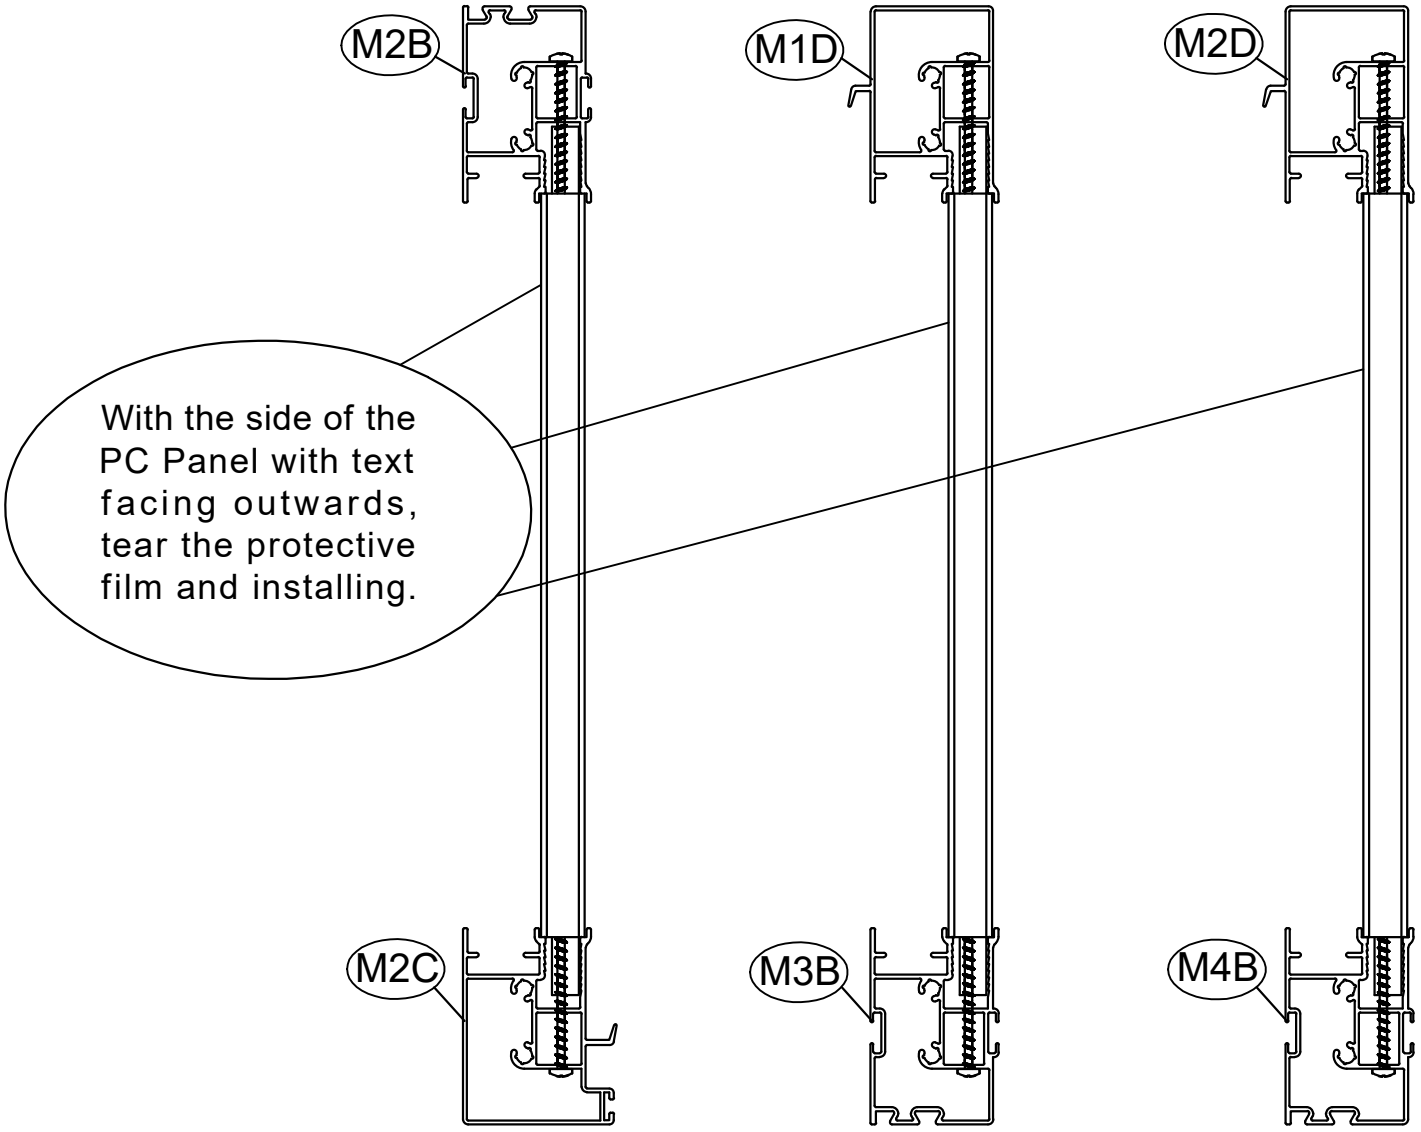


<22>

This picture is for subsequent reference.

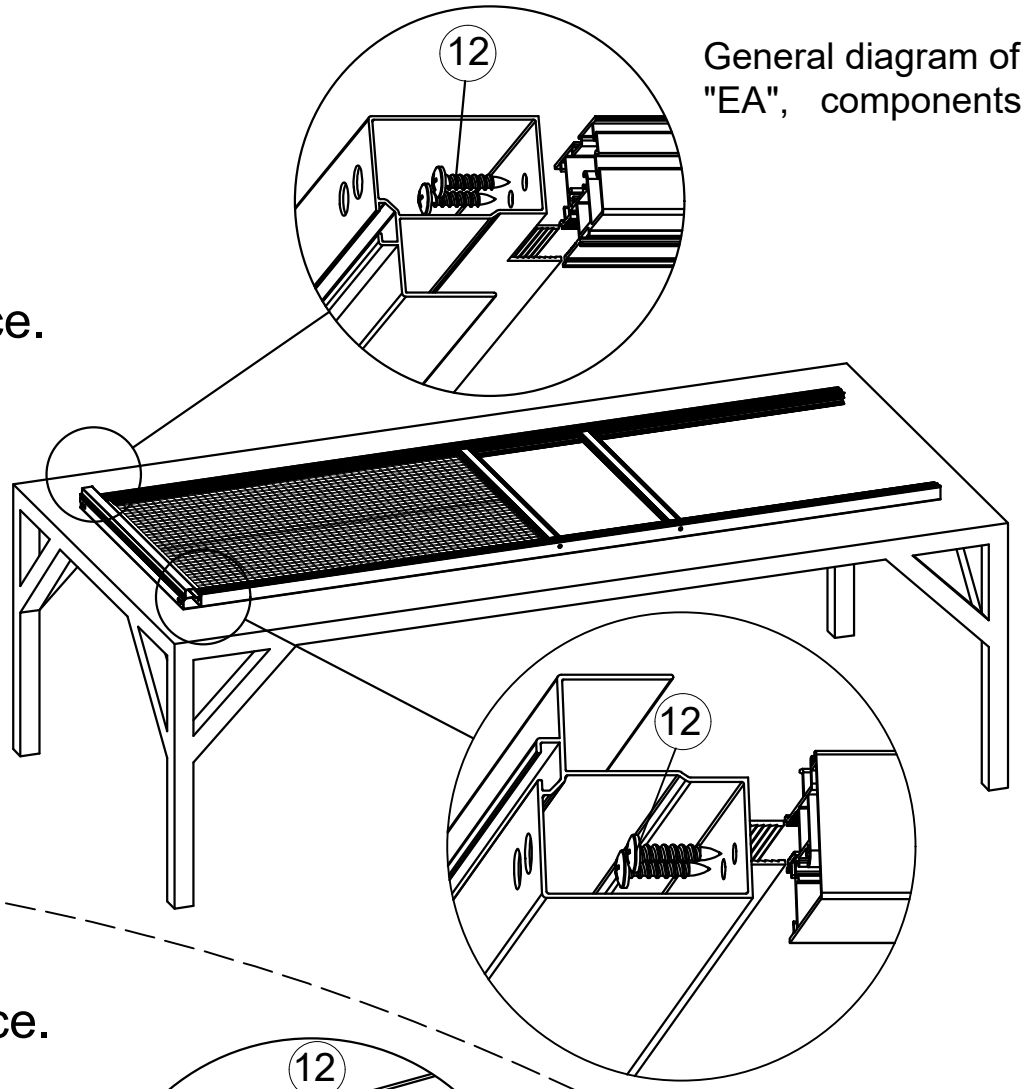

General diagram of "EA", components.

This picture is for subsequent reference.

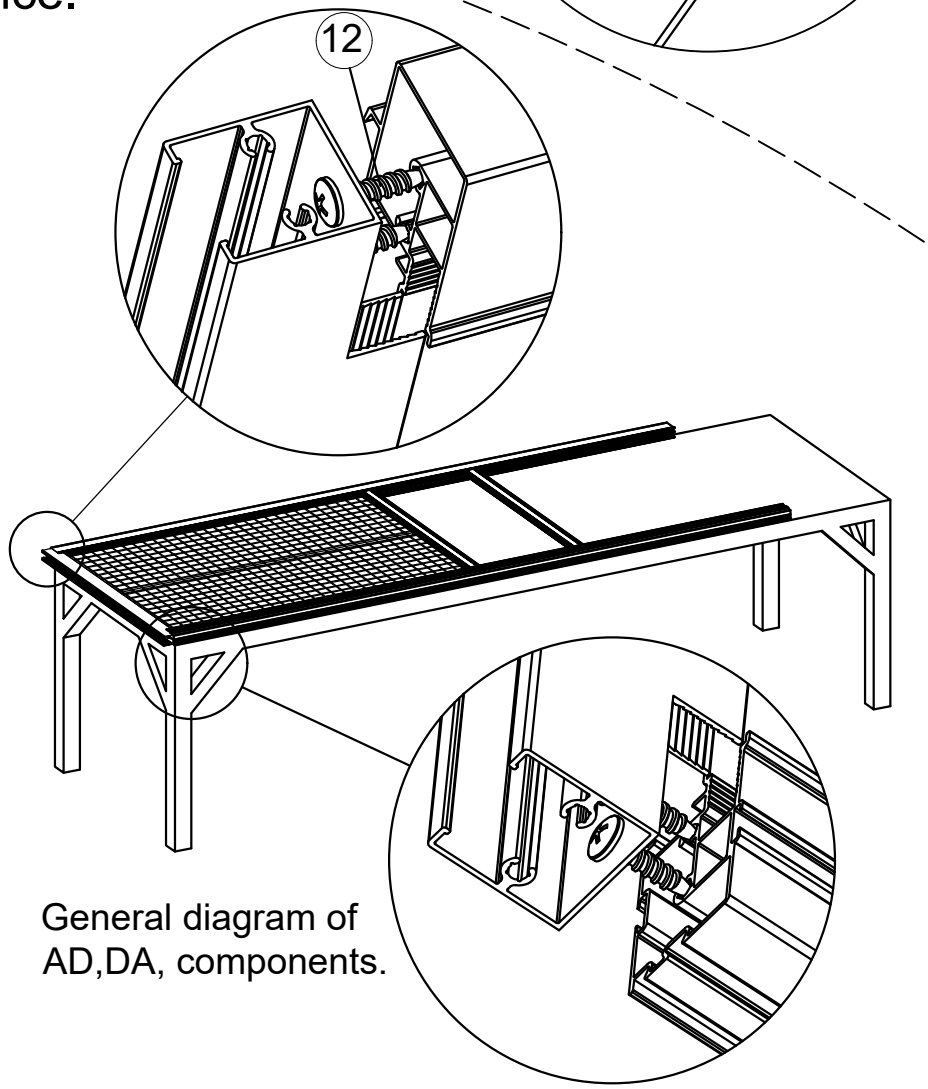


General diagram of AD,DA, components.

<23>

M4K	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M2B	4x
M2C	4x
14	16x
12	16x

BA 4x


For component BA, repeat four times.

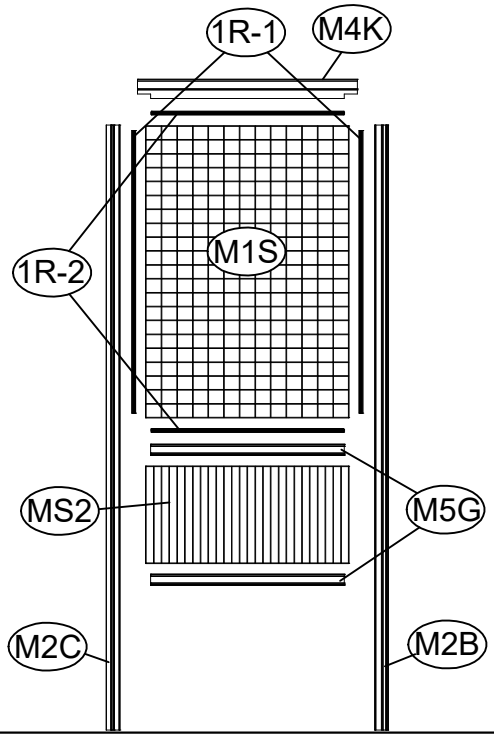

M4H	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M3B	4x
M1D	4x
14	16x
12	16x

AD 4x


For component AD, repeat four times.

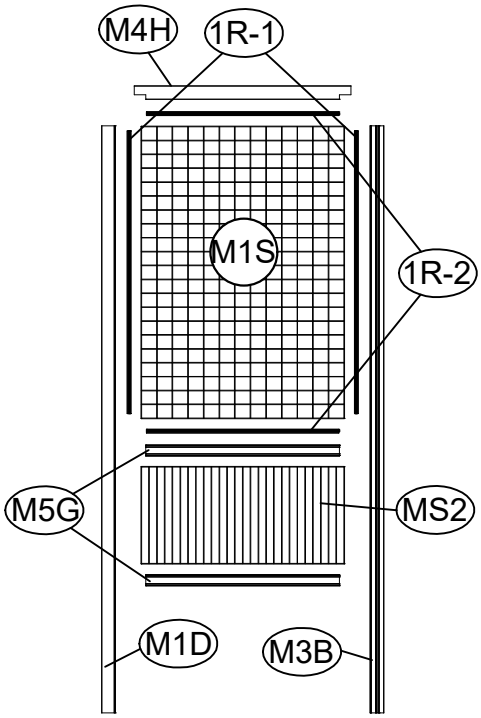

M4H	4x
1R-1	8x
1R-2	8x
M5G	8x
M1S	4x
MS2	4x
M4B	4x
M2D	4x
14	16x
12	16x

DA 4x


For component DA, repeat four times.

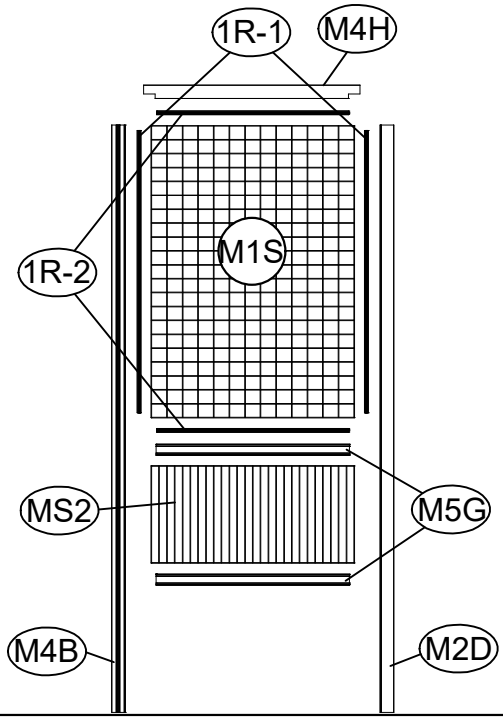

M7K	4x
1R-1	8x
1R-4	8x
M8G	8x
M4S	4x
MS14	4x
M2B	4x
M1B	4x
14	16x
12	16x


AE 4x

For component AE, repeat four times.

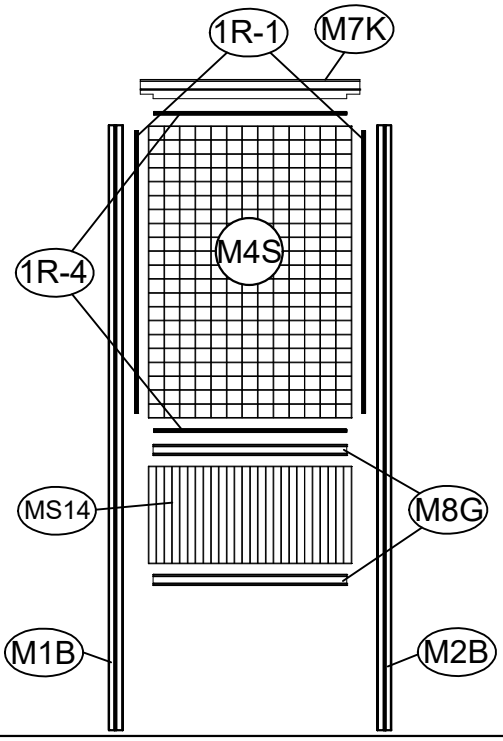


Component AB is symmetric BA, and AD is symmetric DA.


Door frame BA, AD, DA, and AE installation follow pages 27 to 32

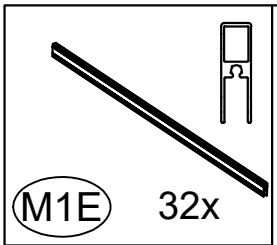


M1E 32x

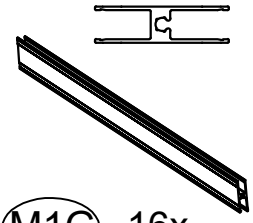


M1G 16x

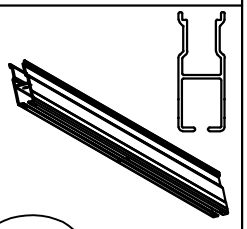

M4L 32x



MS1 32x




M4x35


13 96x

For component AF, repeat sixteen times.

AF 16x

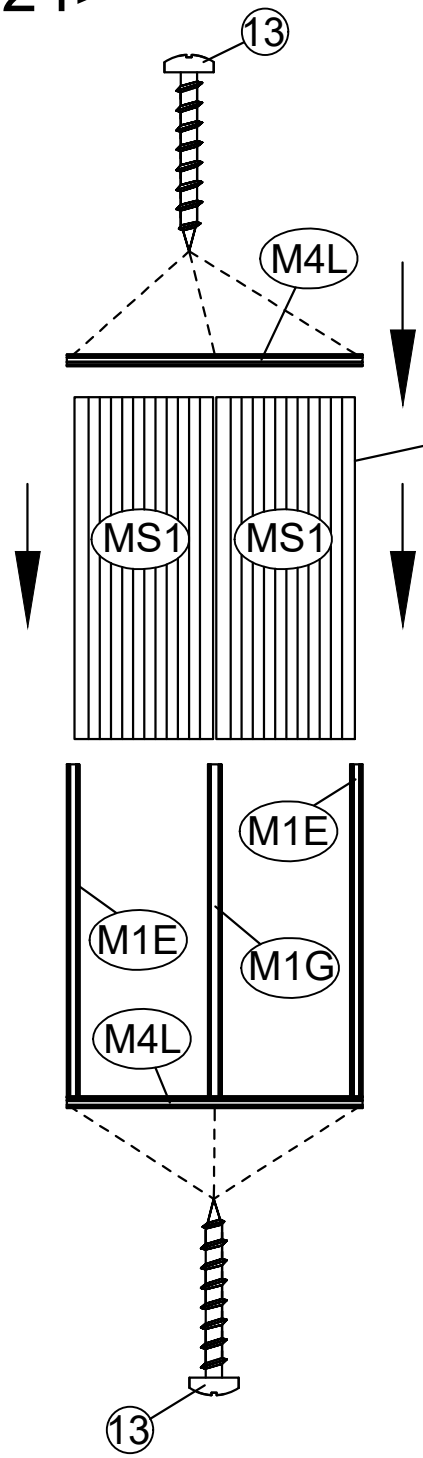


With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

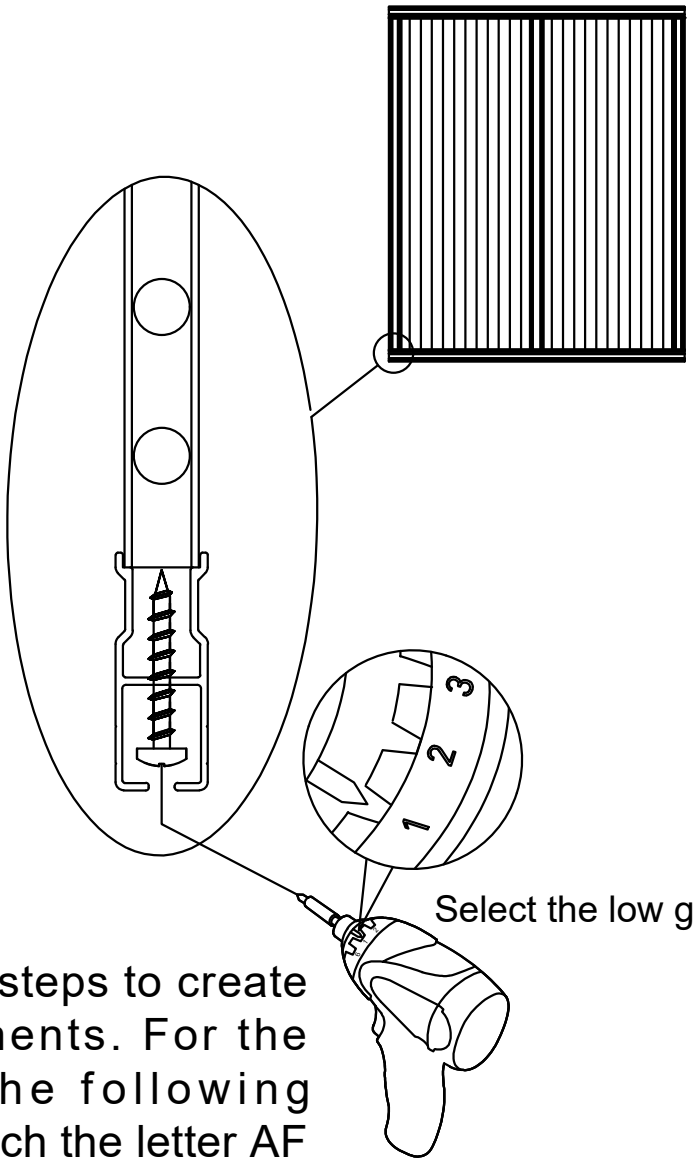


Select the low gear.


Repeat the previous steps to create sixteen AF components. For the convenience of the following assembly, please attach the letter AF in a prominent position on the front.

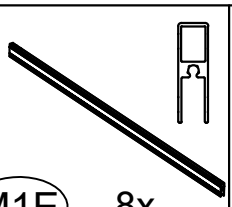


M1E 8x

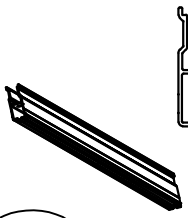

M7L 8x




MS13 4x




M4x35


13 16x


For component AG, repeat four times. AG 4x

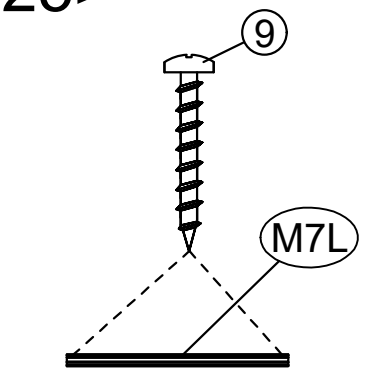

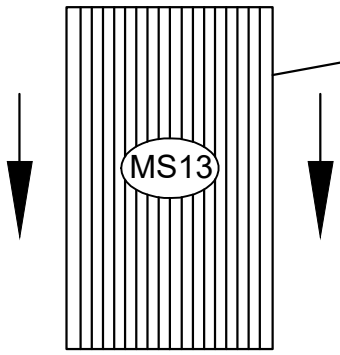


With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

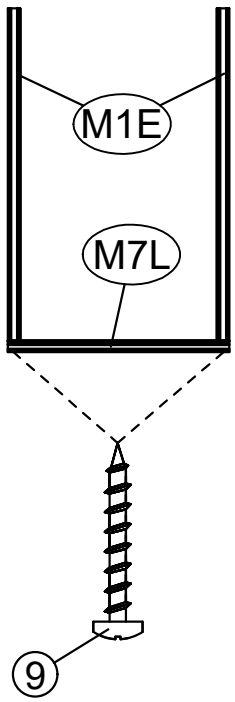

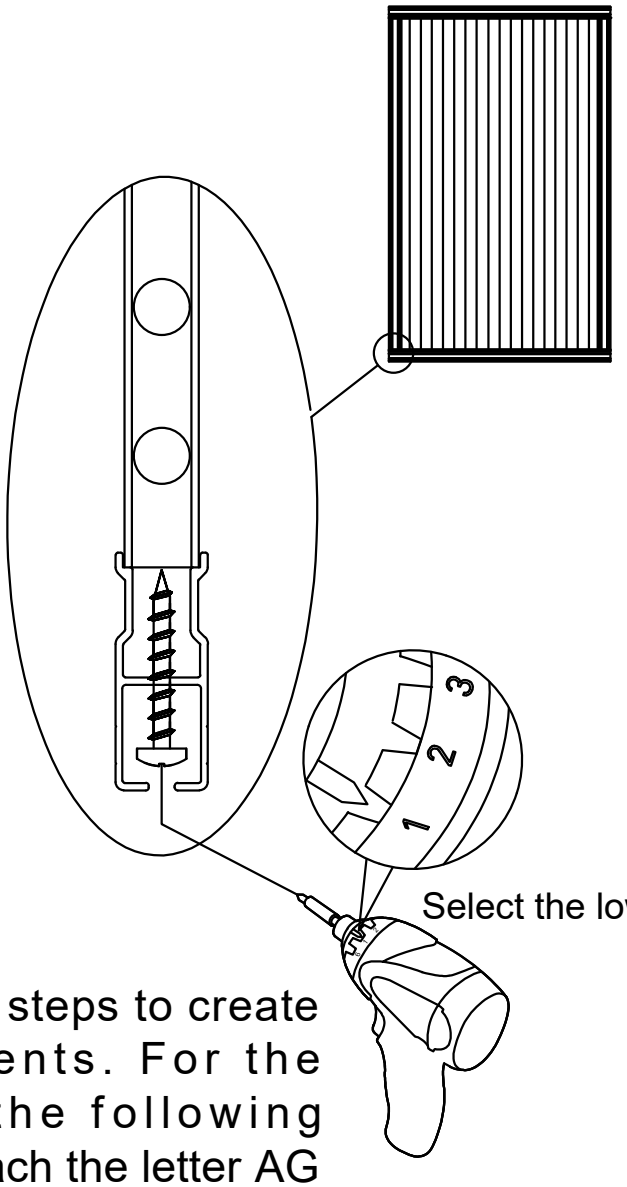

Select the low gear.


Repeat the previous steps to create four AG components. For the convenience of the following assembly, please attach the letter AG in a prominent position on the front.



MD1 80x




MD2 160x




MD3 40x

<26>

AF 16x AG 4x

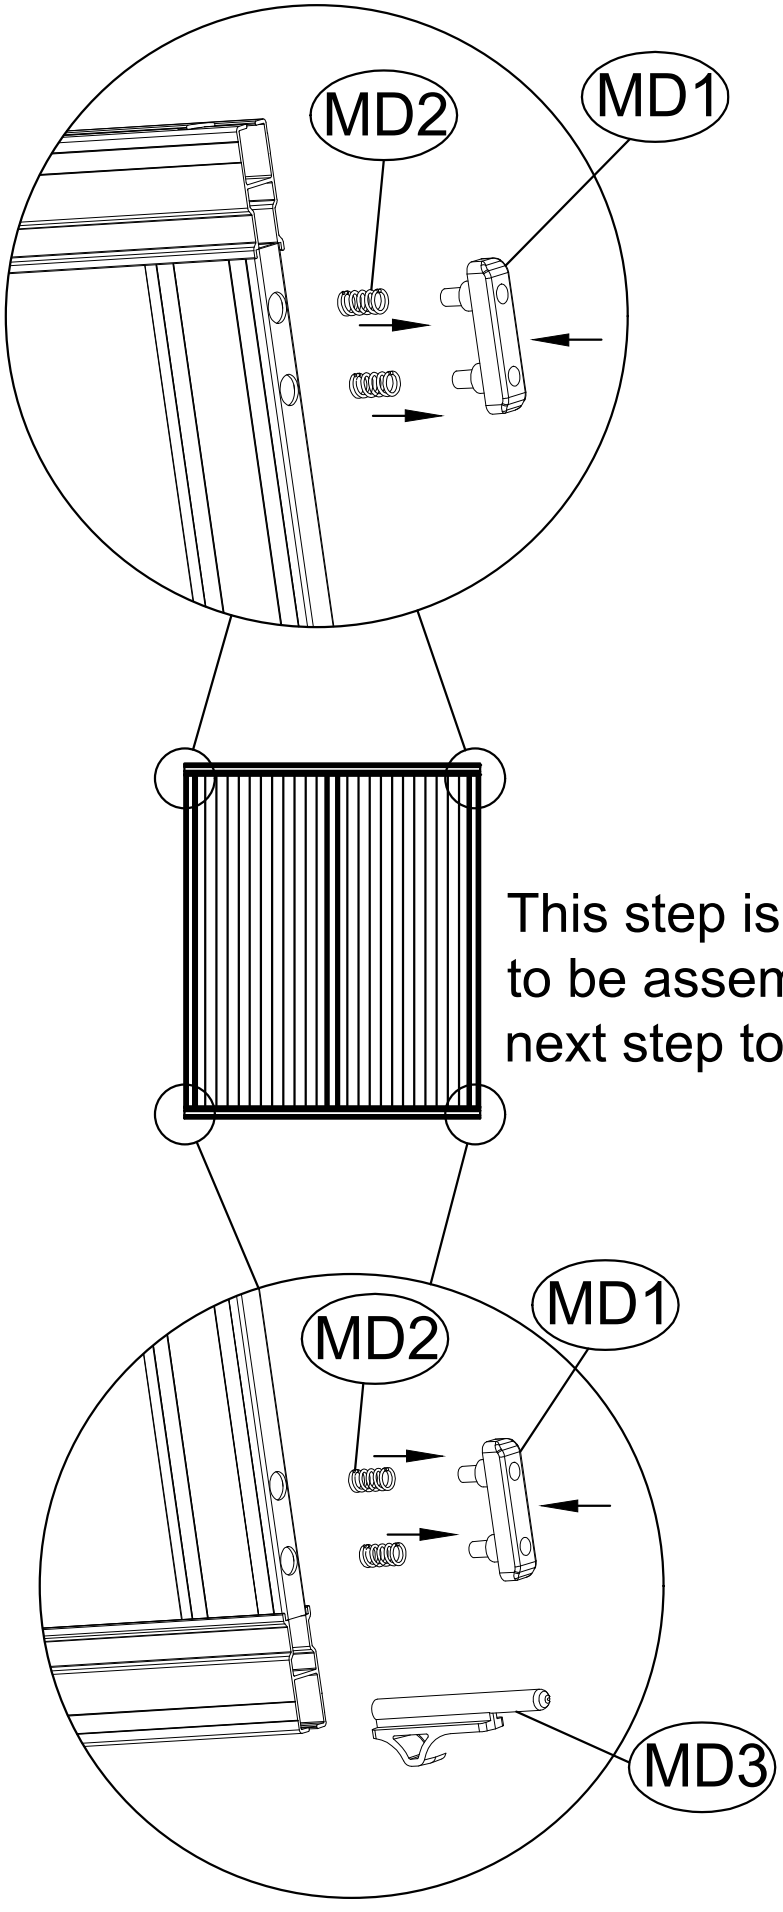


This step is recommended to be assembled with the next step together.

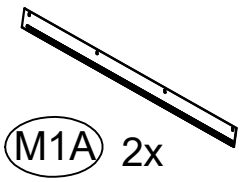


M1A 2x




M2A 2x

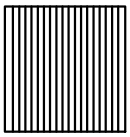

MS3 4x

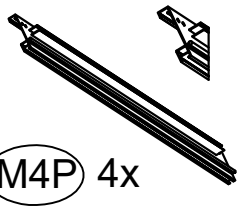

M4P 4x




M4x20


12 16x

<27>


AB 2x BA 2X

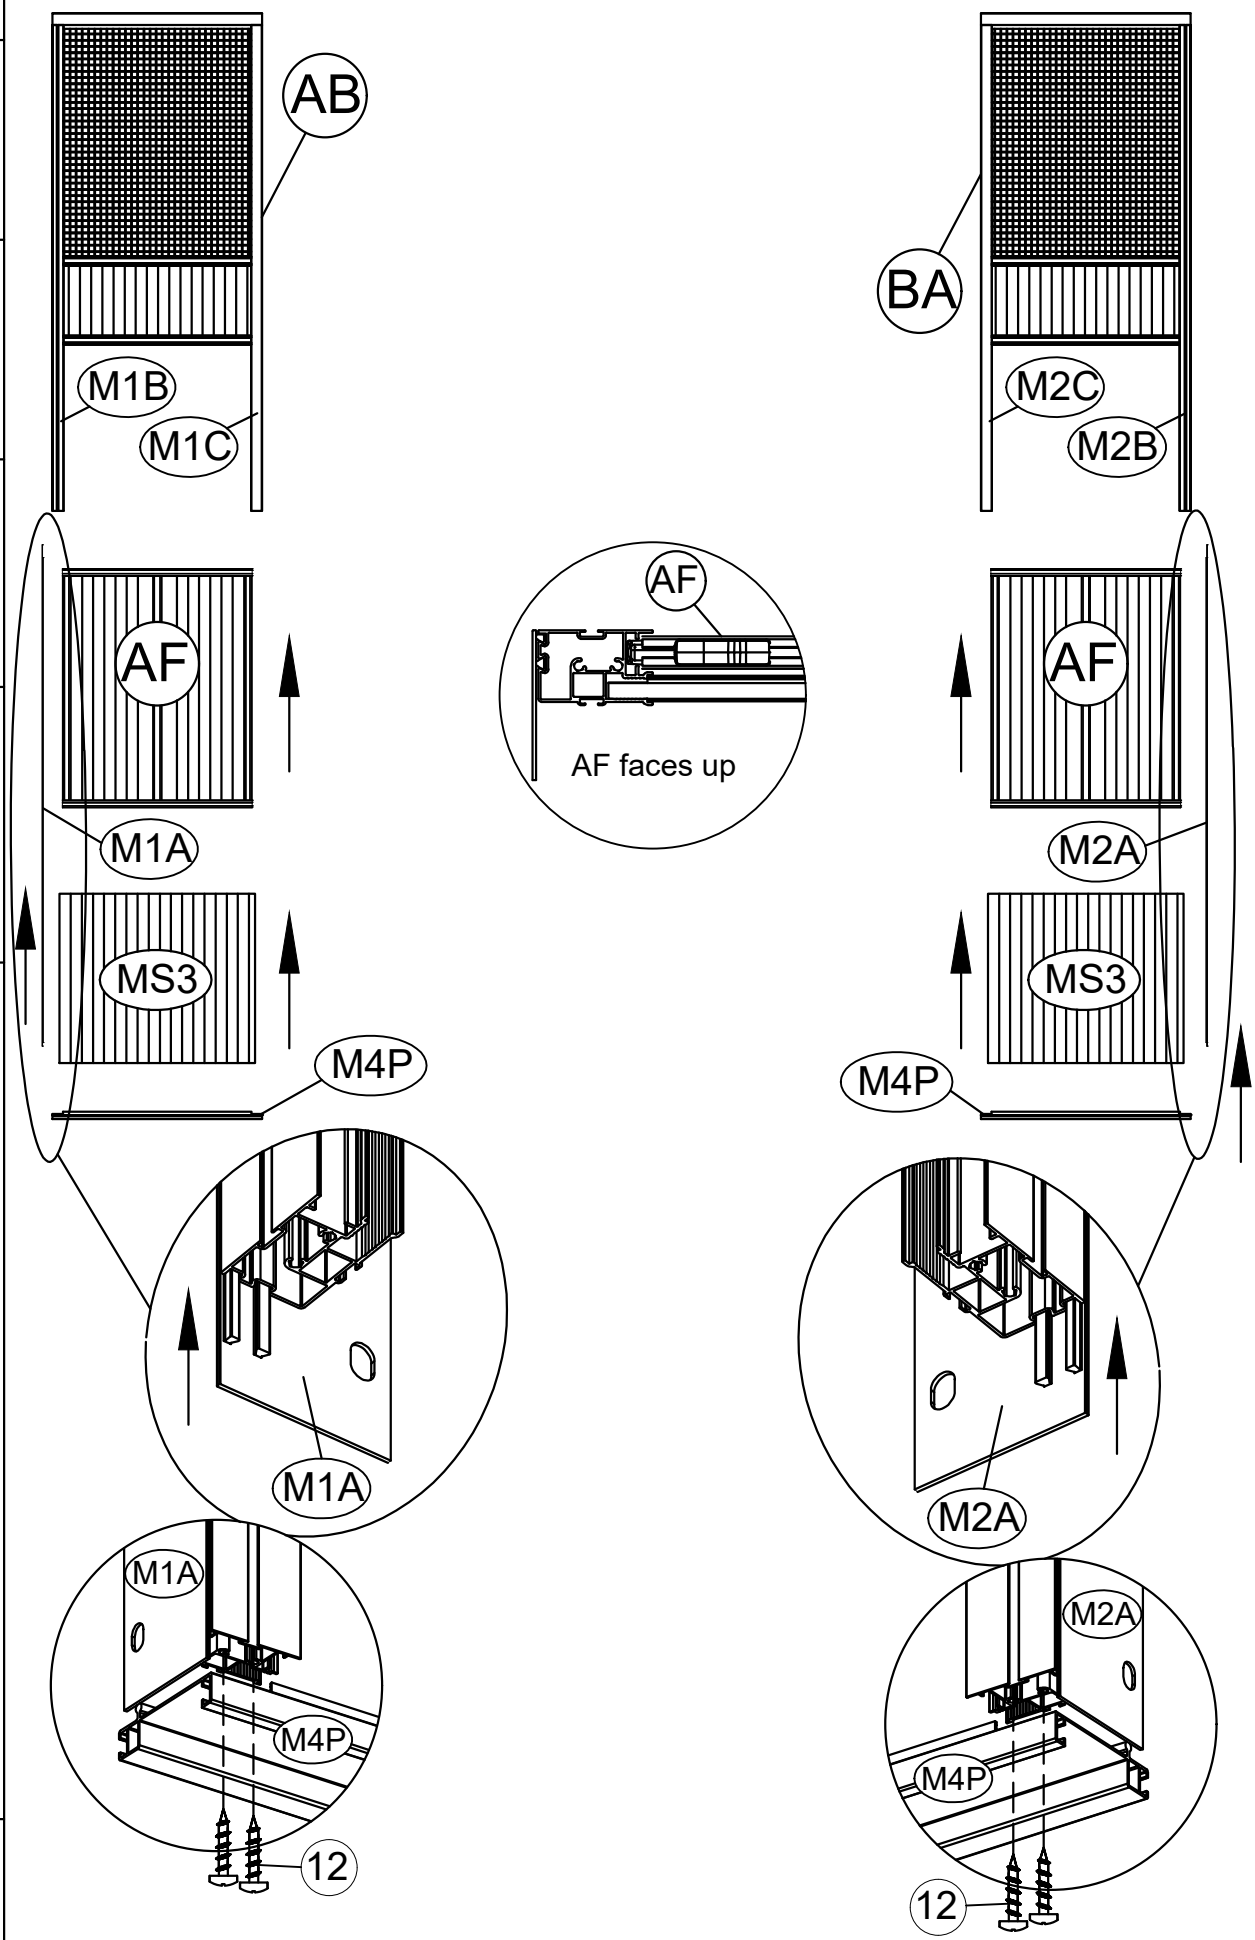


<28> 2x

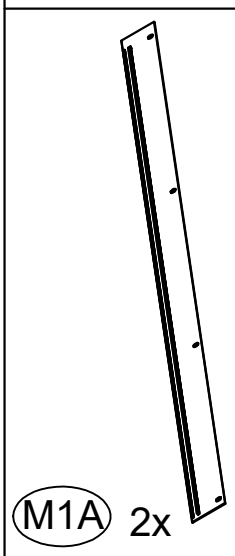


M1A 2x

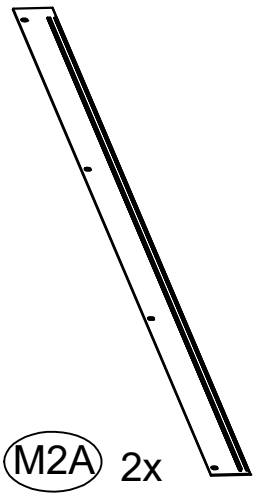

M2A 2x

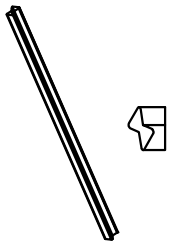

M1Q 4x




15 4x




M5x6

16 16x

37

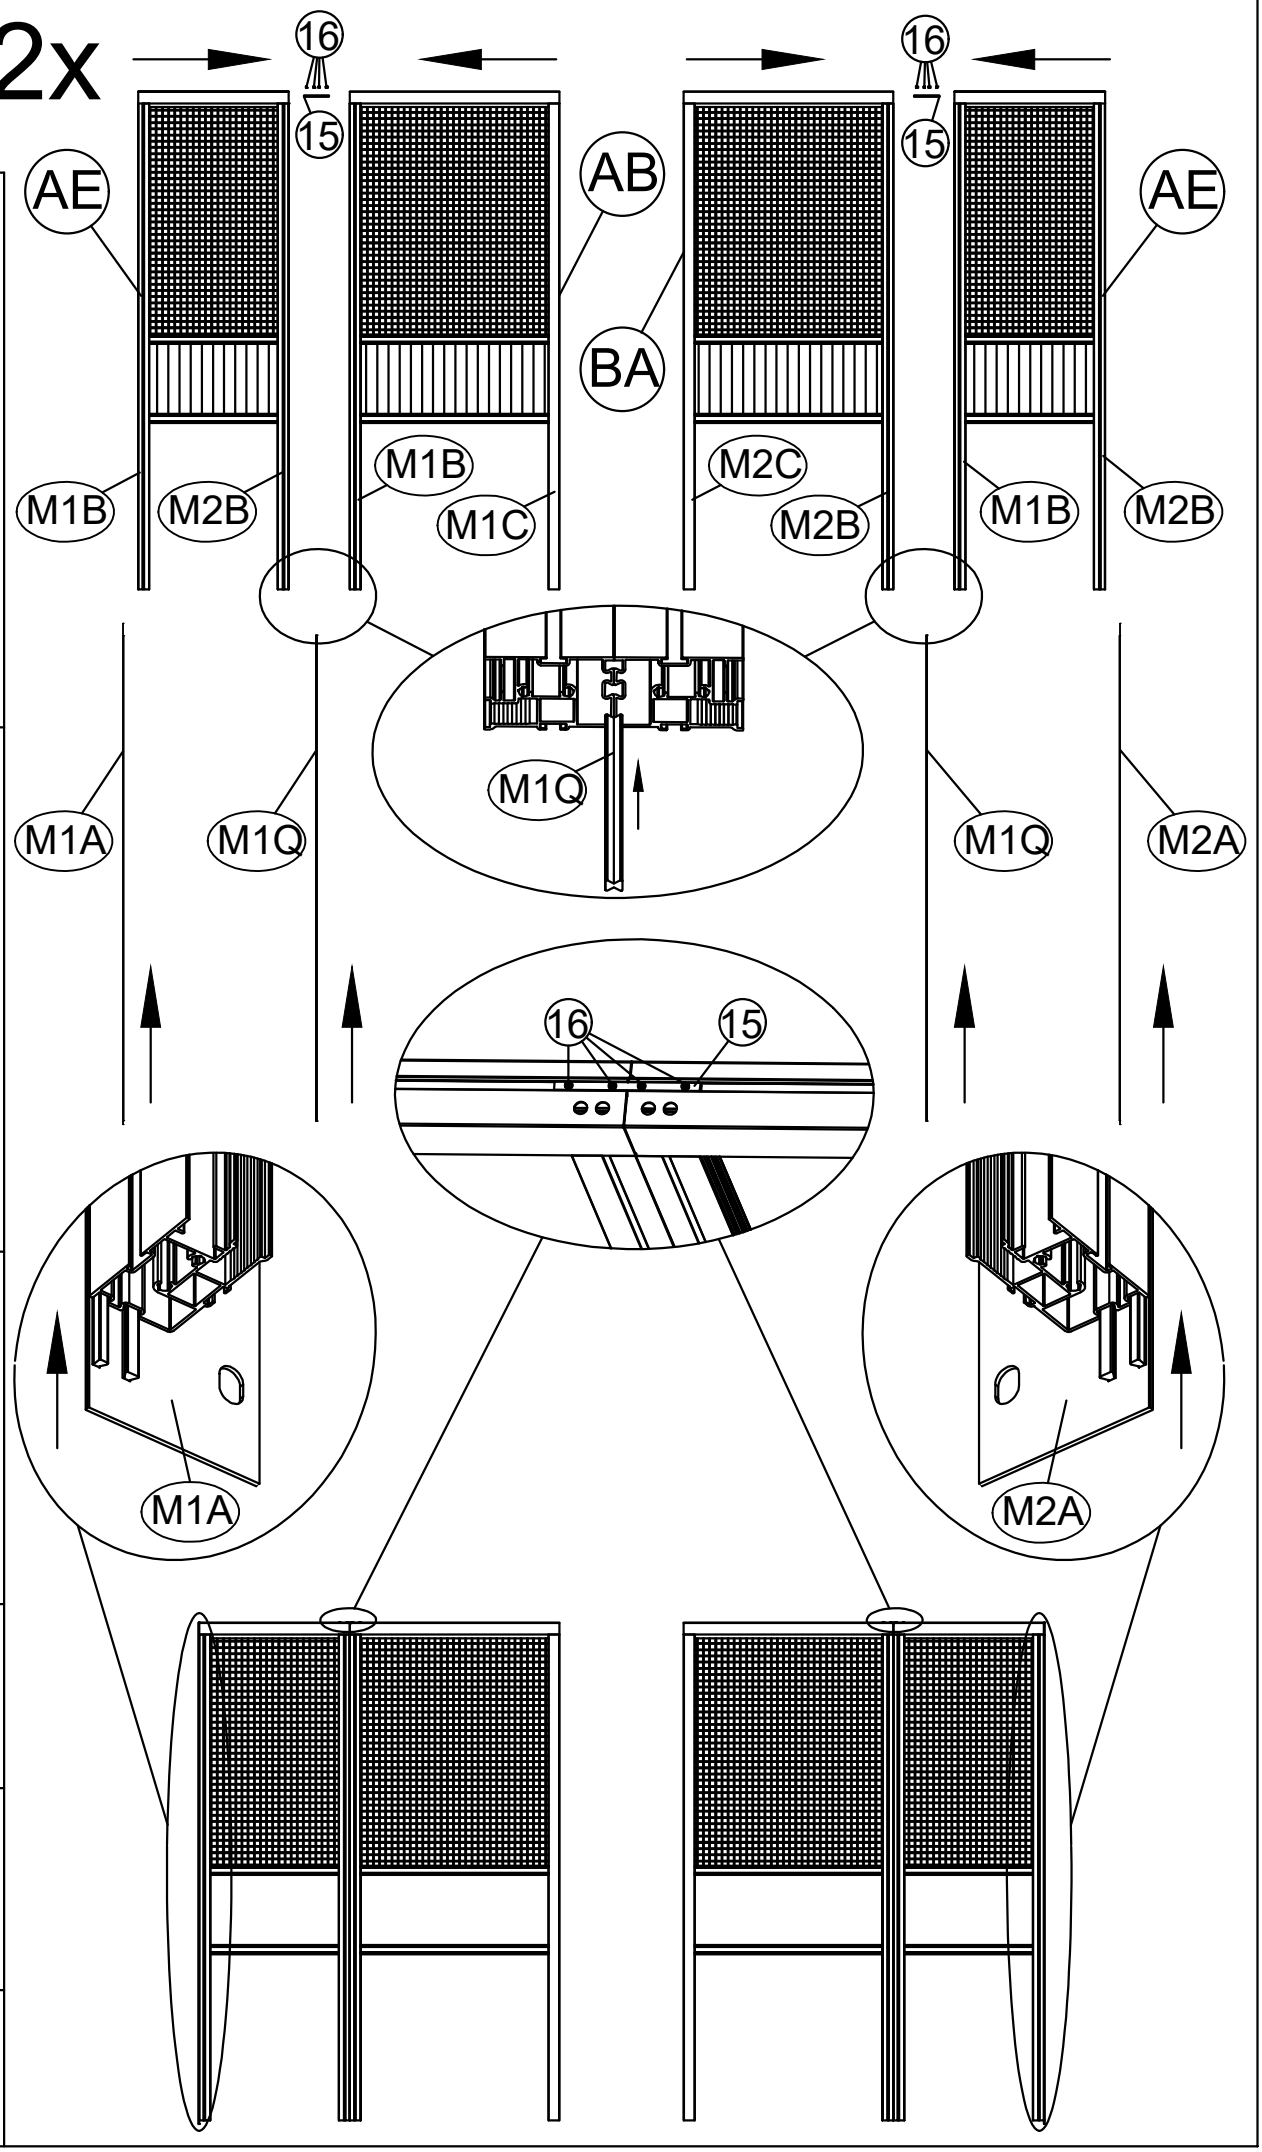




15 8x




M5x6


16 32x




MS15 4x

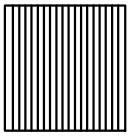


MS3 4x

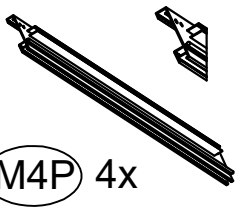

M4P 4x

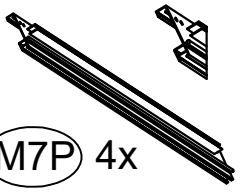


M7P 4x




M4x20


12 32x

38

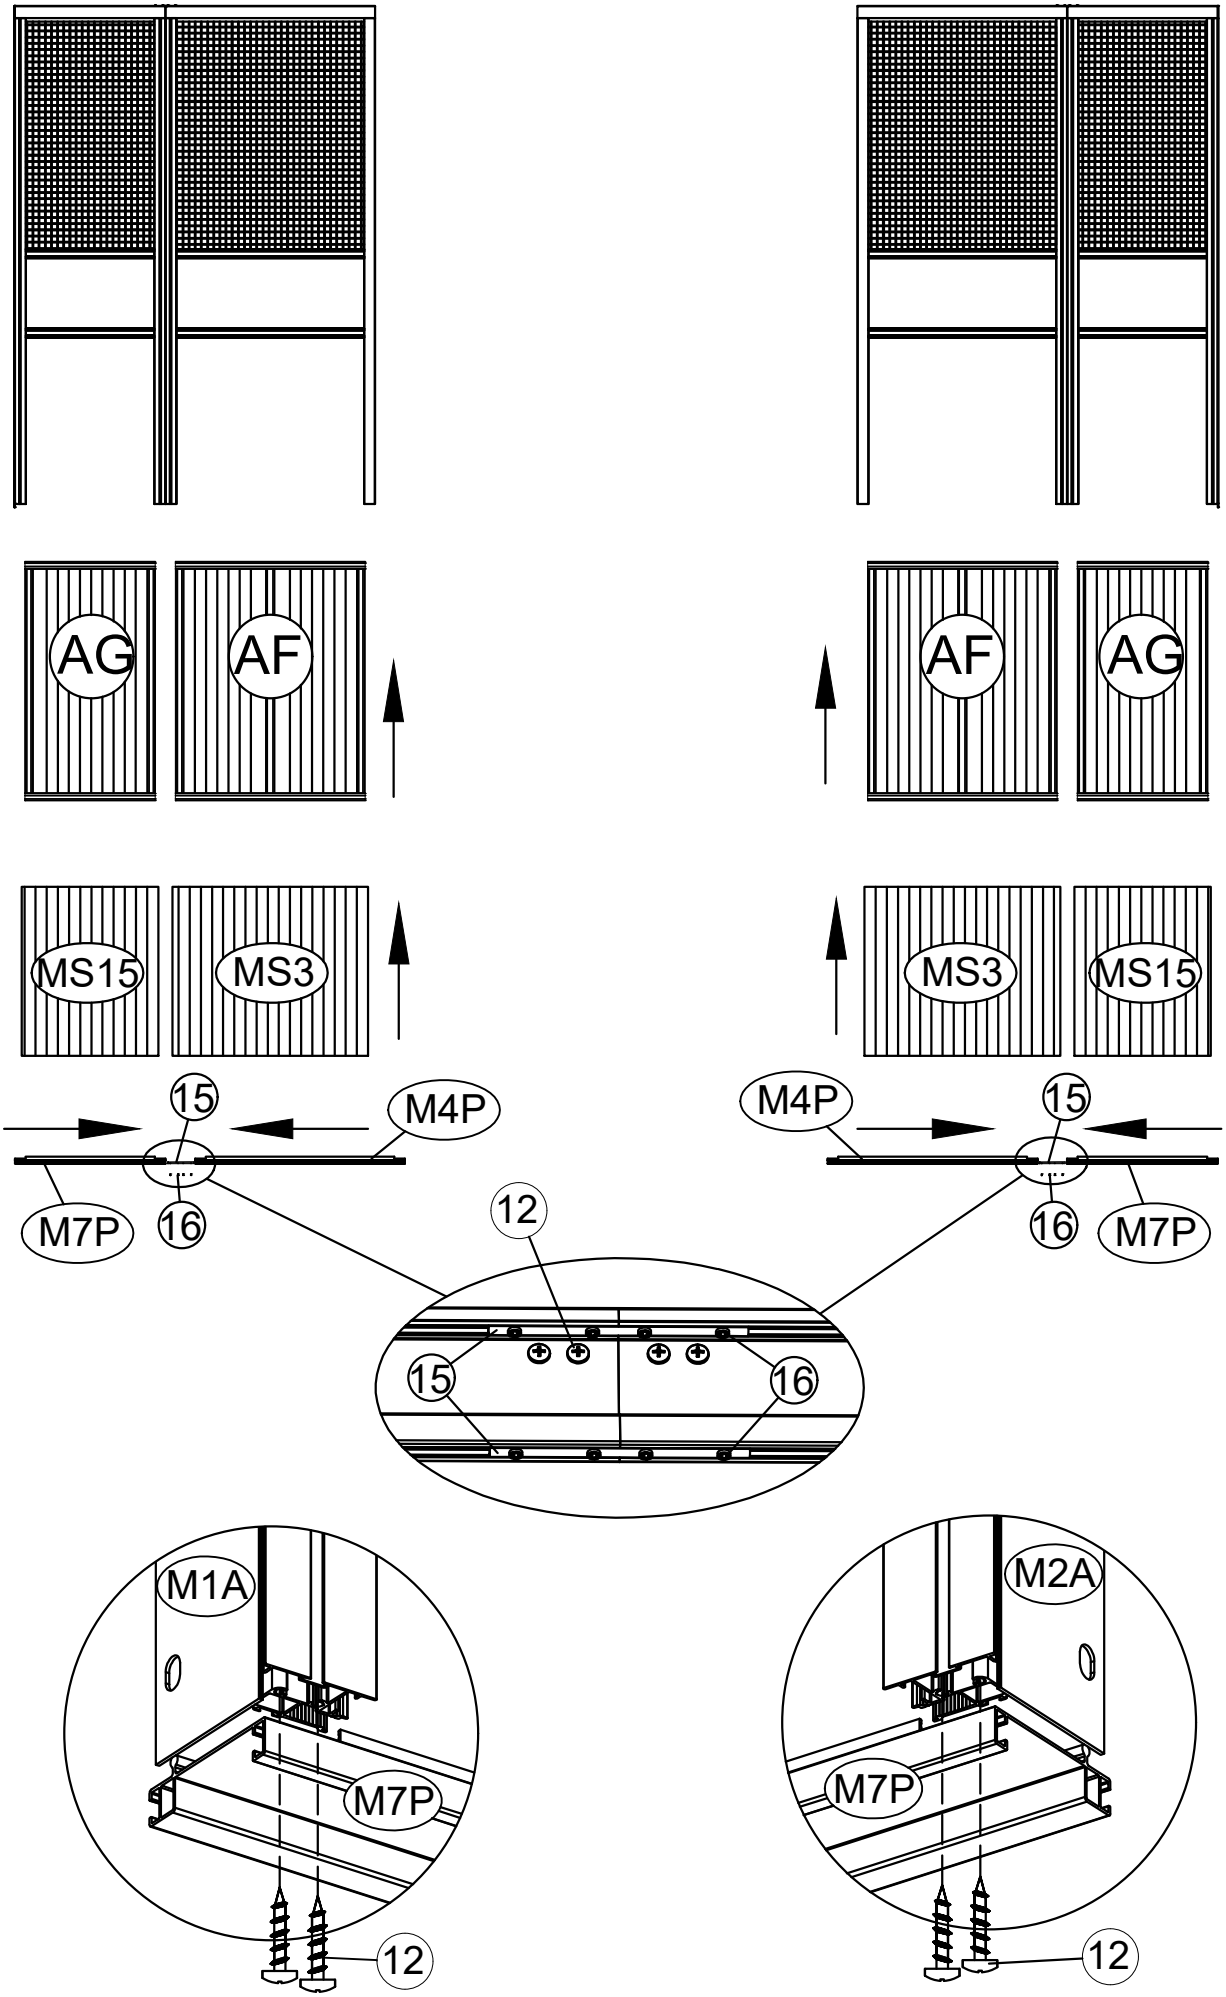


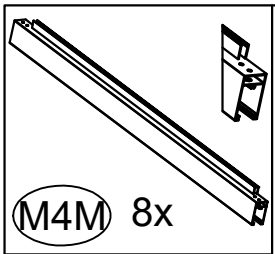

M4M 8x

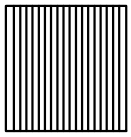

MS4 8x





M4x20


12 32x


<30>


AD 4X DA 4X

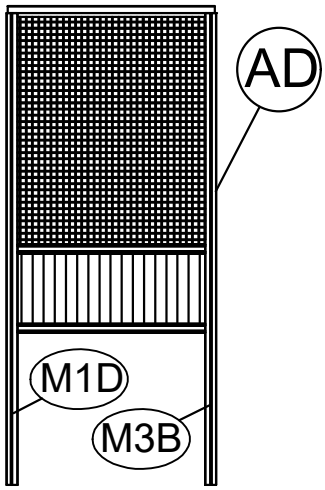


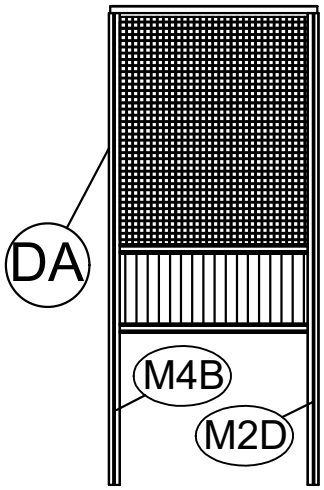


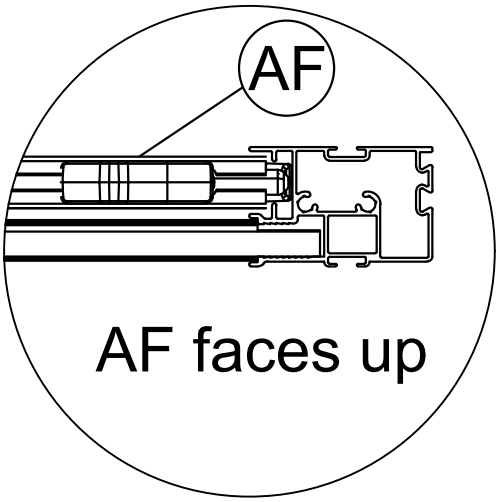


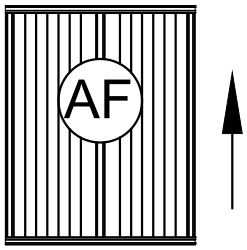

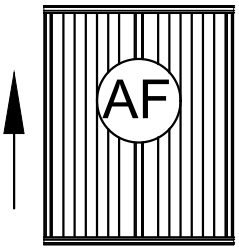

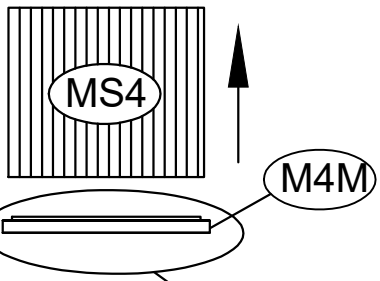


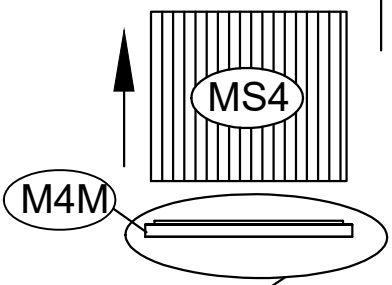

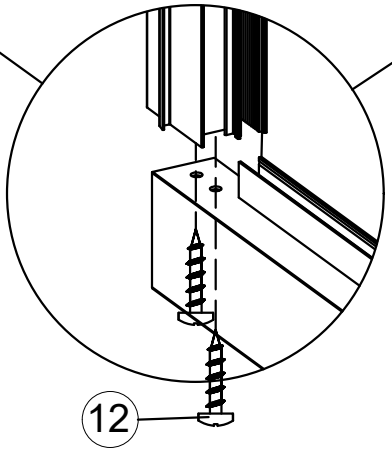




MD5 16x



MD4 16x

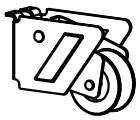


4-1 16x



M4x20


12 32x





M4x35


13 16x

AD 4X DA 4X

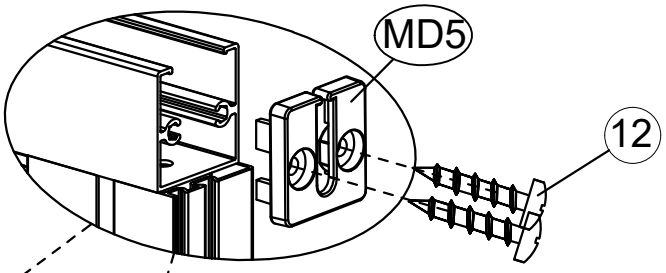

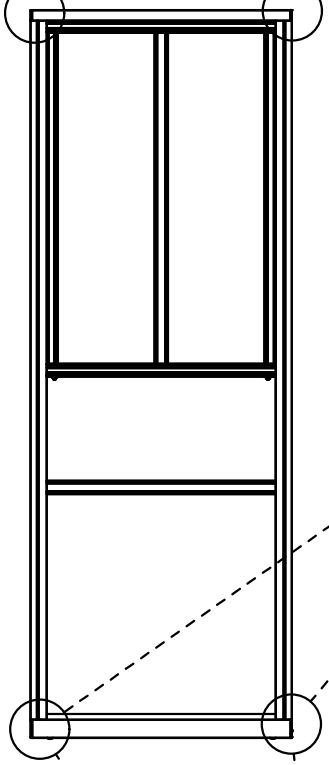

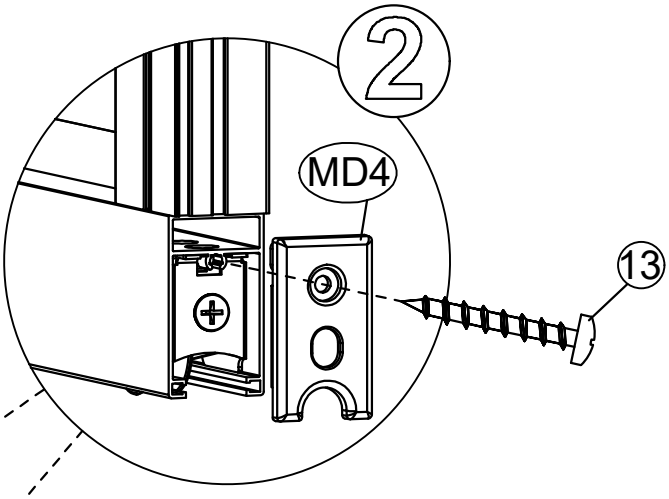


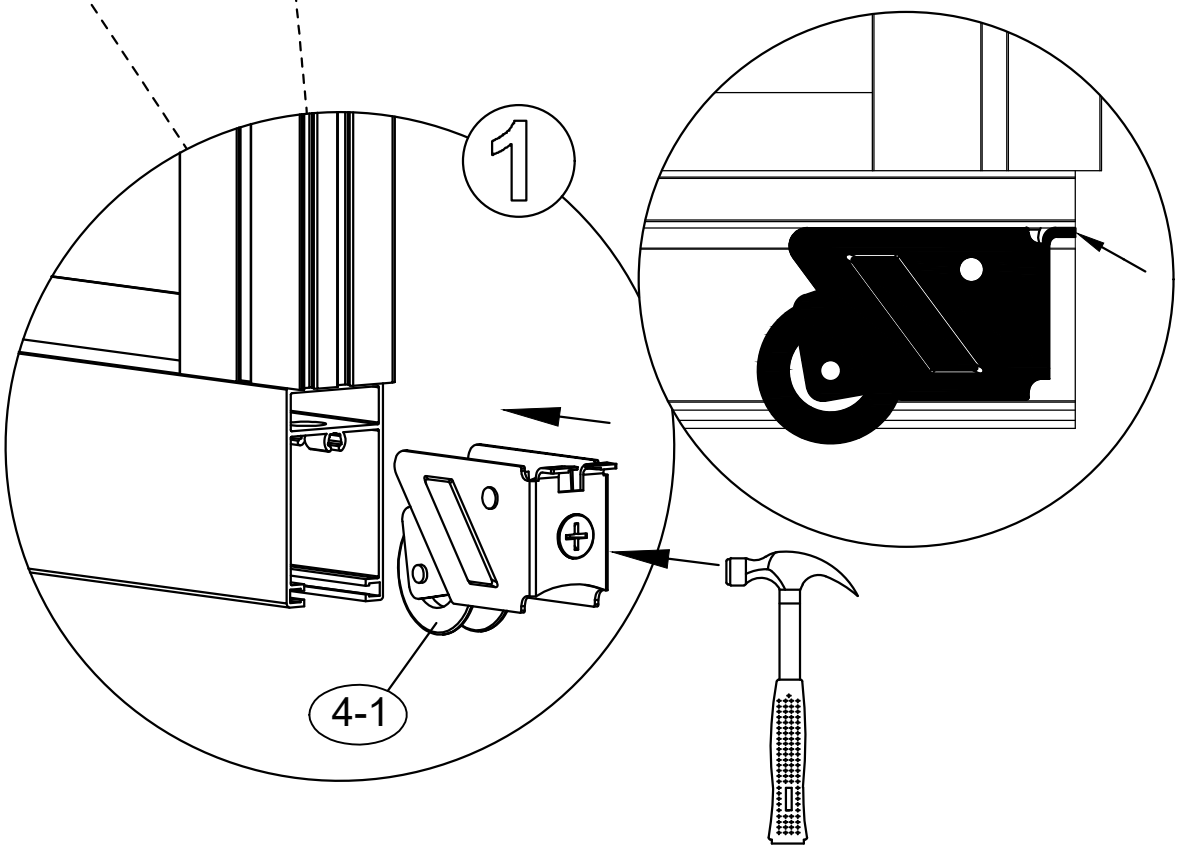

Tap gently so that the pulley is flush with the profile.




5-1 2x

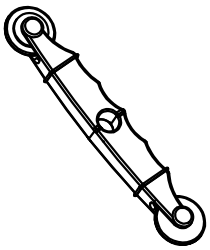


24 1x

<32>


Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

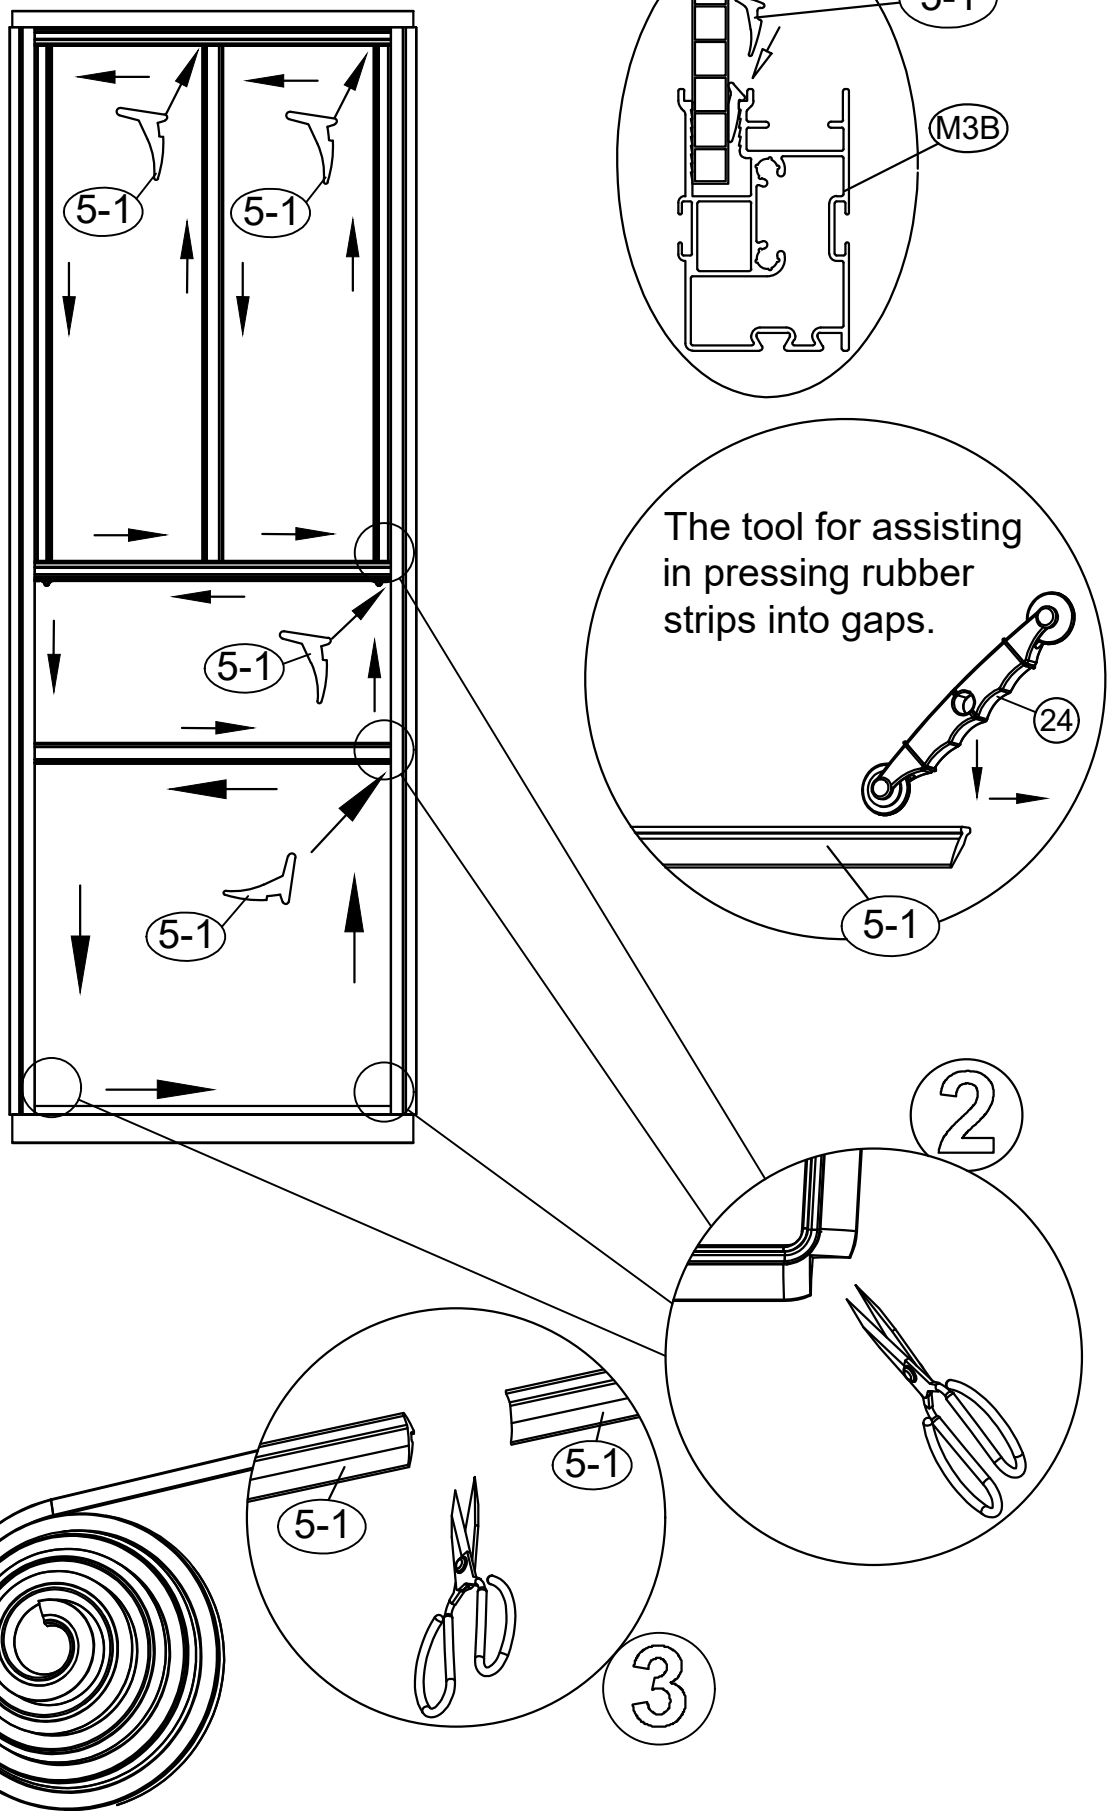

All door frames, AB, BA, AD, DA, AE, follow this method.

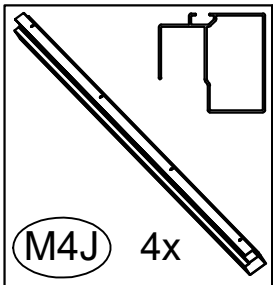


M4J 4x



6.2*11*15

3-1 16x




11 16x M6




M6x15

1 16x

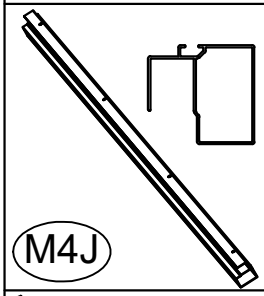

M4J

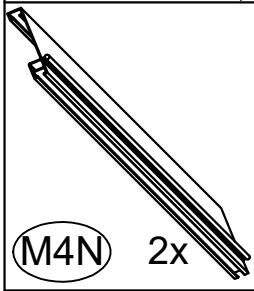

M4N 2x




15 12x




M5*6


16 48x

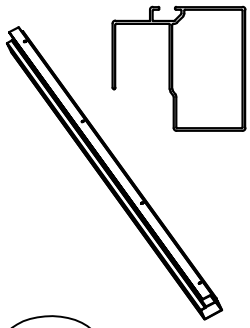

M4J

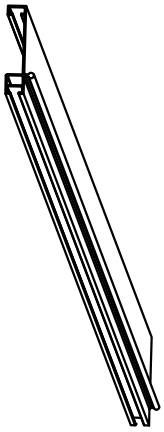

M4N 2x




15 12x




M5*6

16 48x

x2

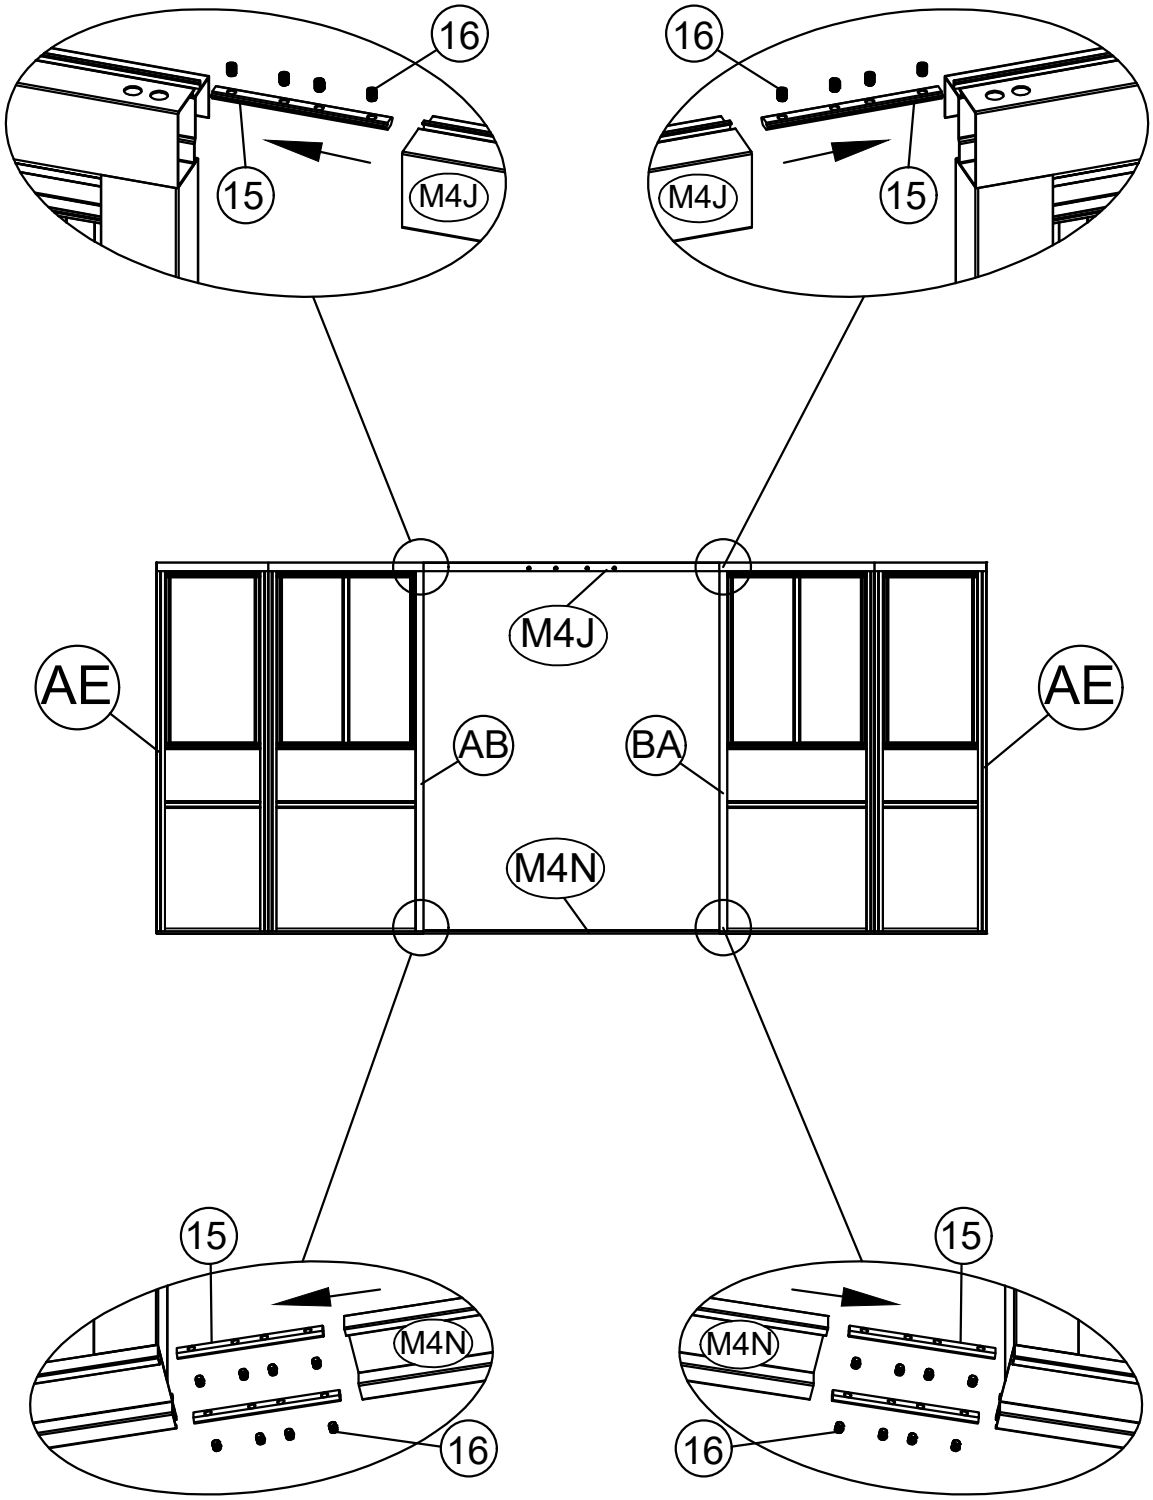

<35>

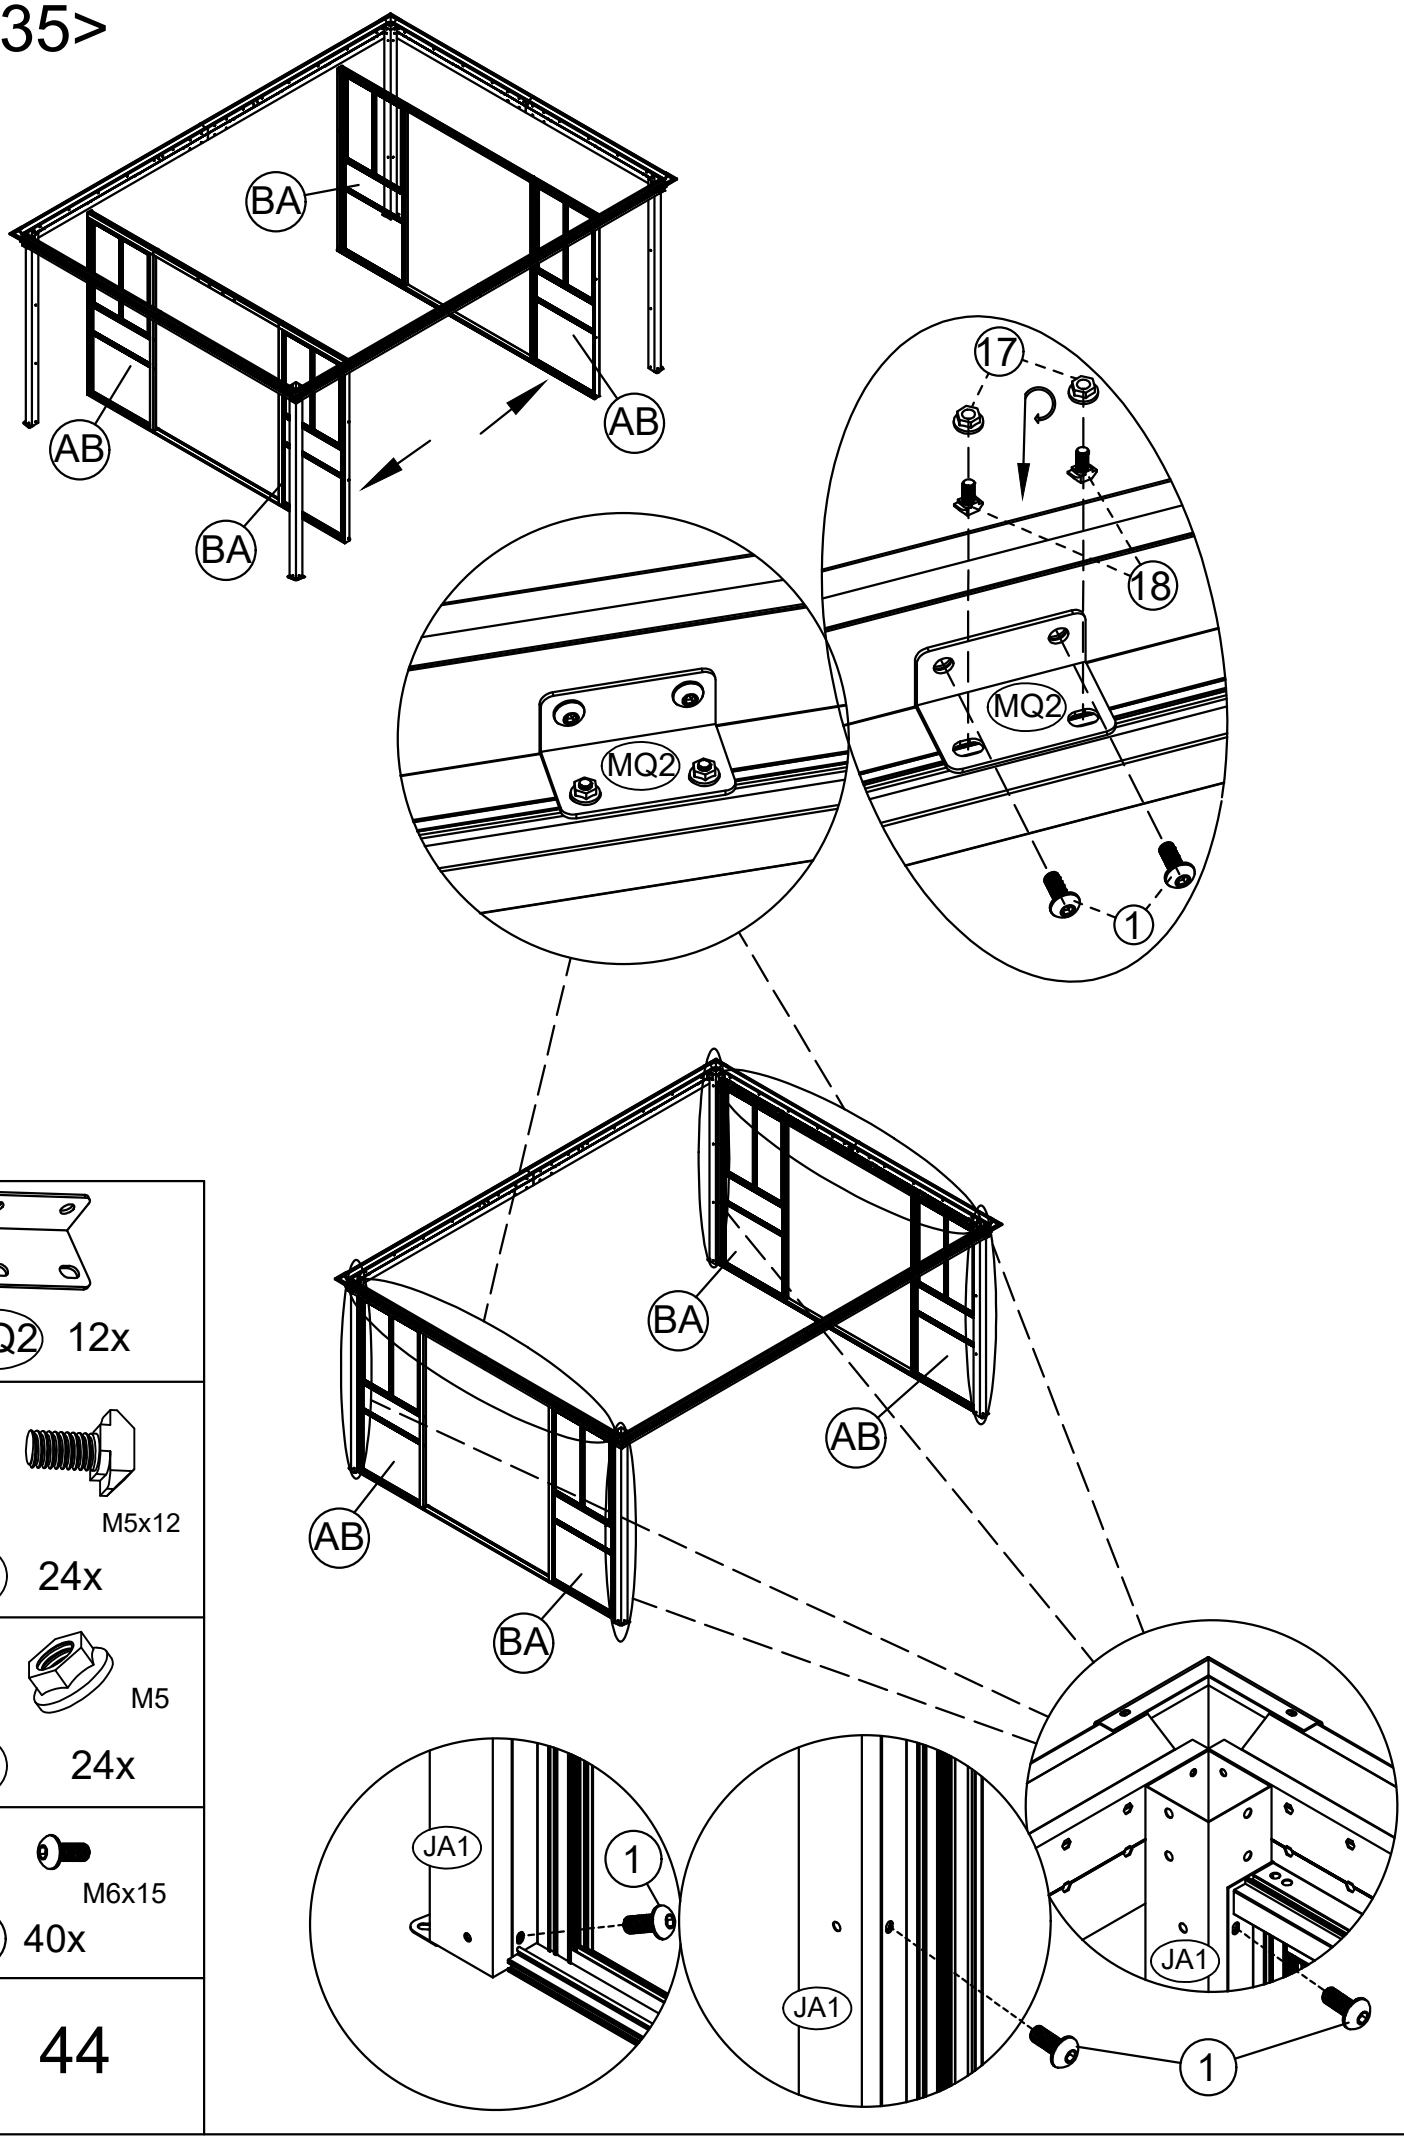

MQ2 12x

M5x12

18 24x


M5


17 24x


M6x15


1 40x


<36>

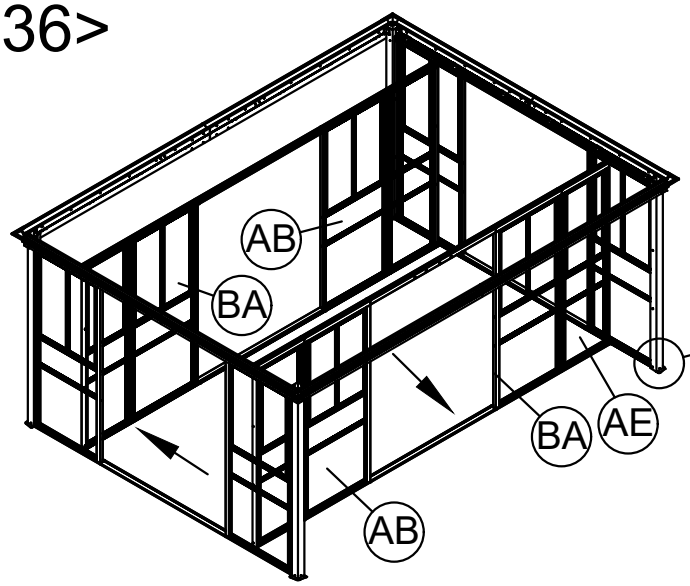


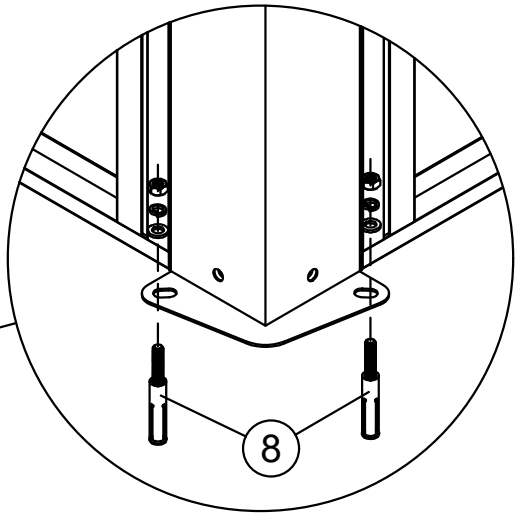


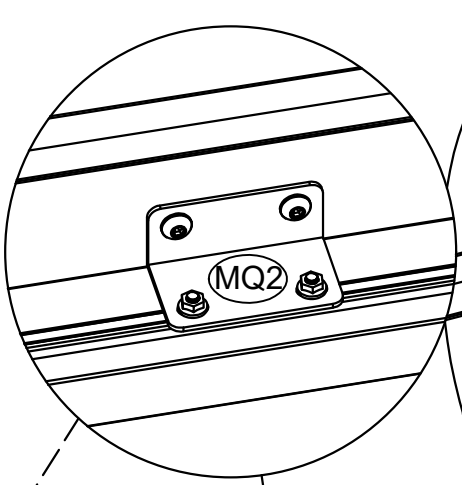

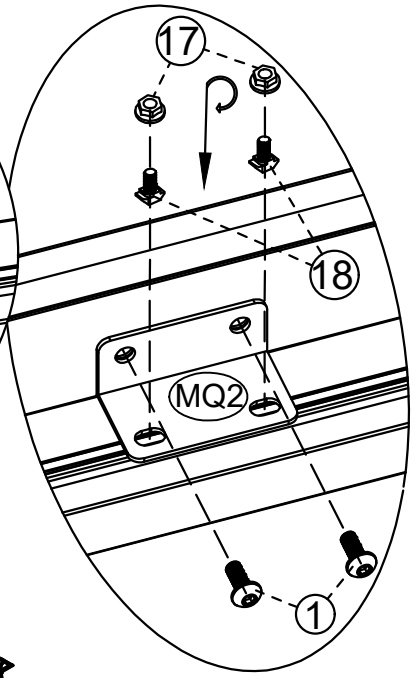


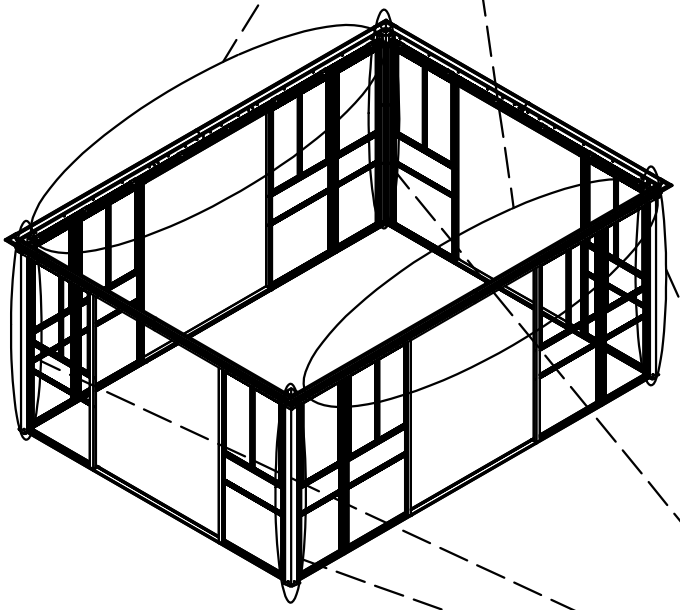

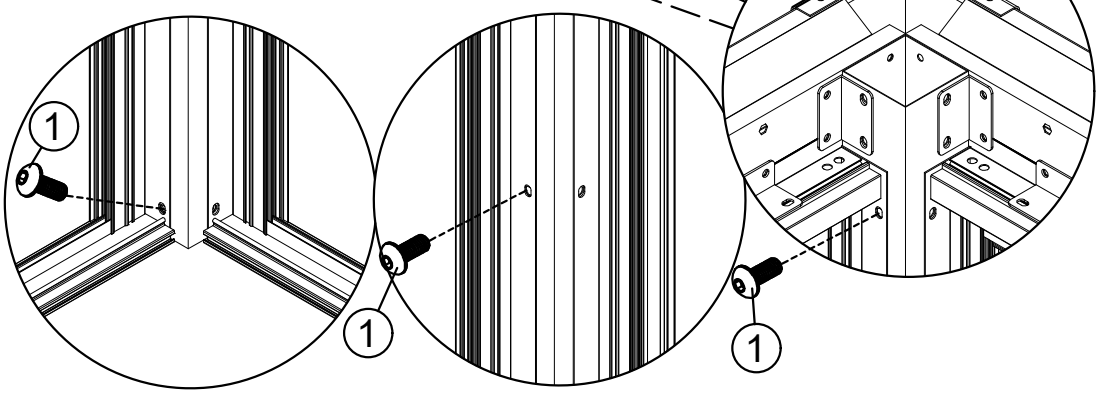


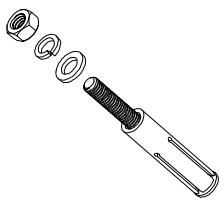

8 8x



MQ2 16x



M5x12

18 32x




M5

17 32x



M6x15

1 48x

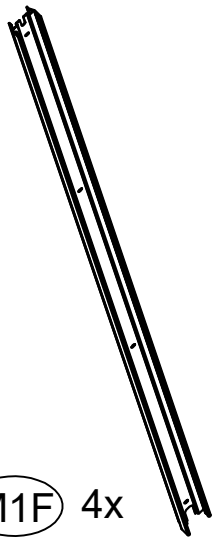

M1F 4x





ST 4.8x12

③ 16x

DA 4x

Pay attention to the installation direction of the left and right sides of the door.

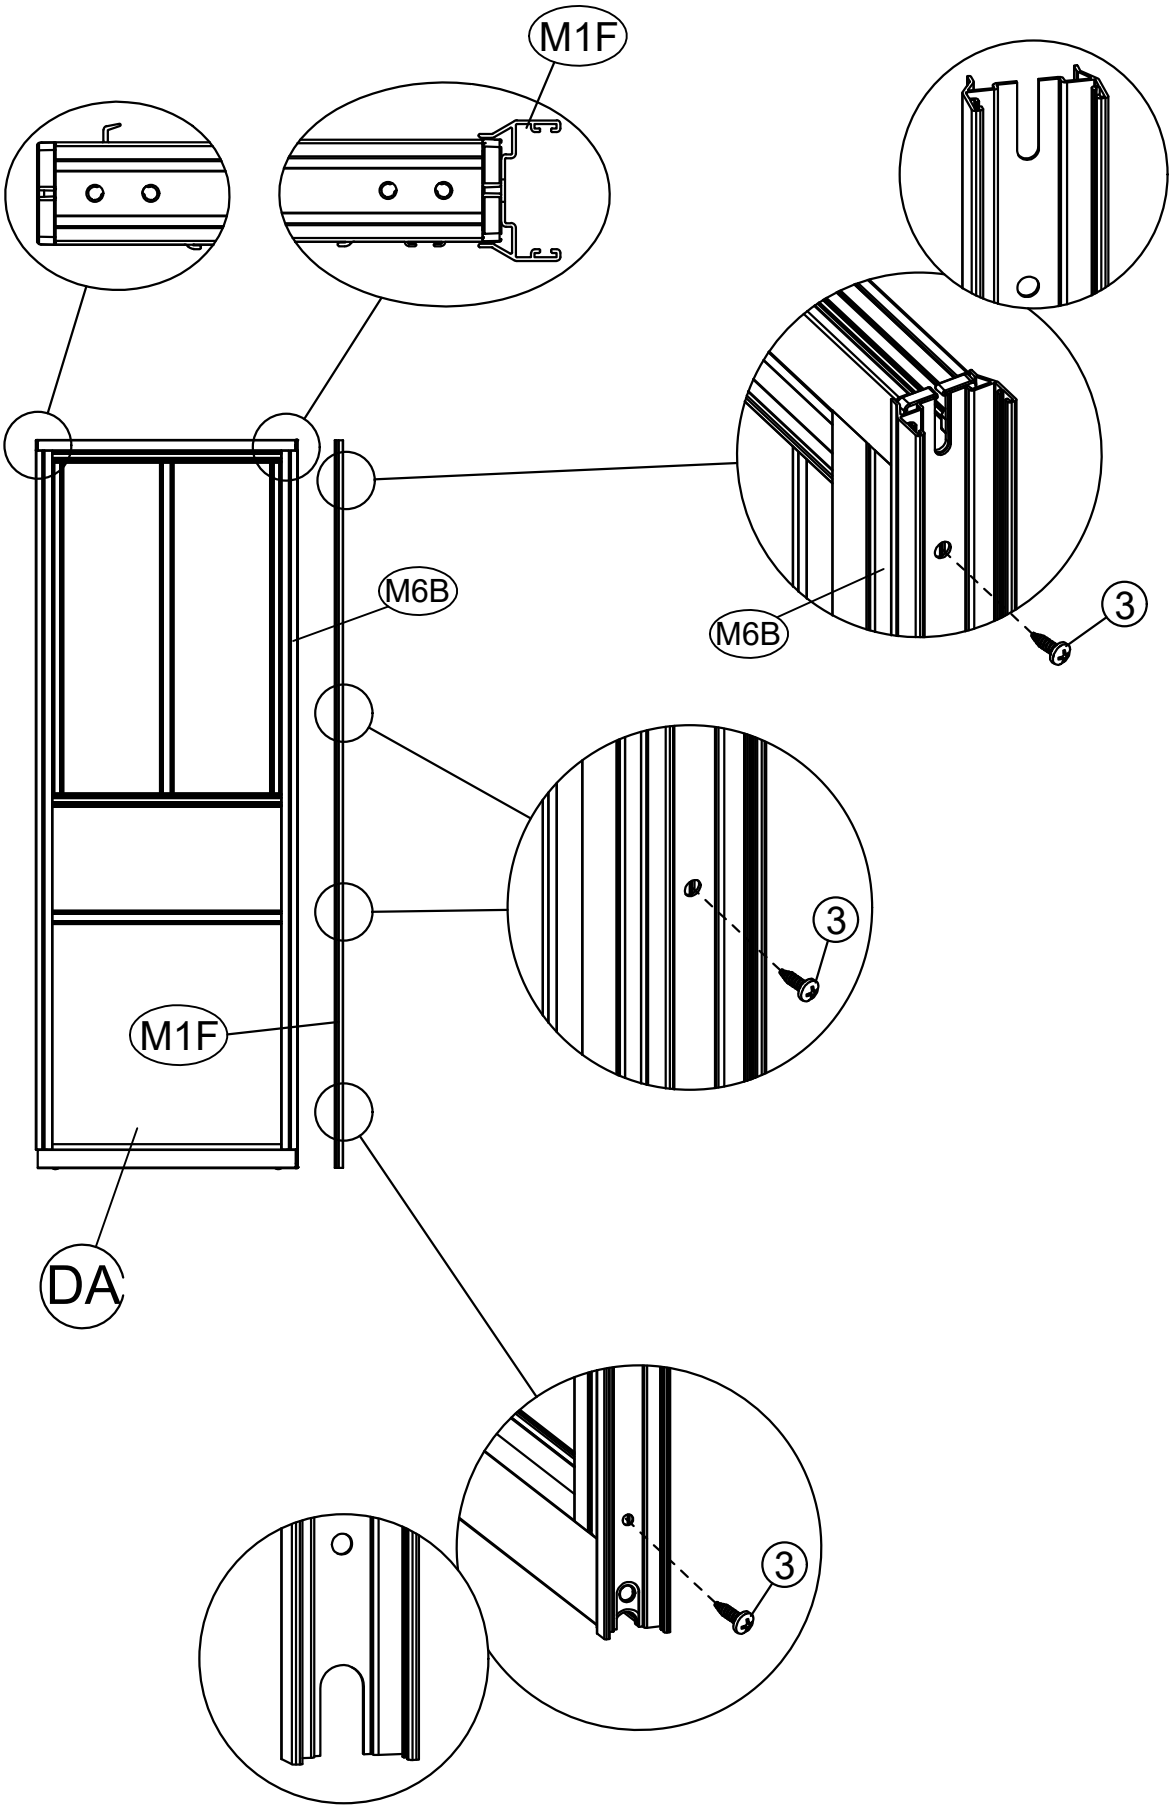




U1 4x



U2 4x




U3 4x



M4x12

26 4x



U4 4x




M5x15


25 16x

47


DA 4x

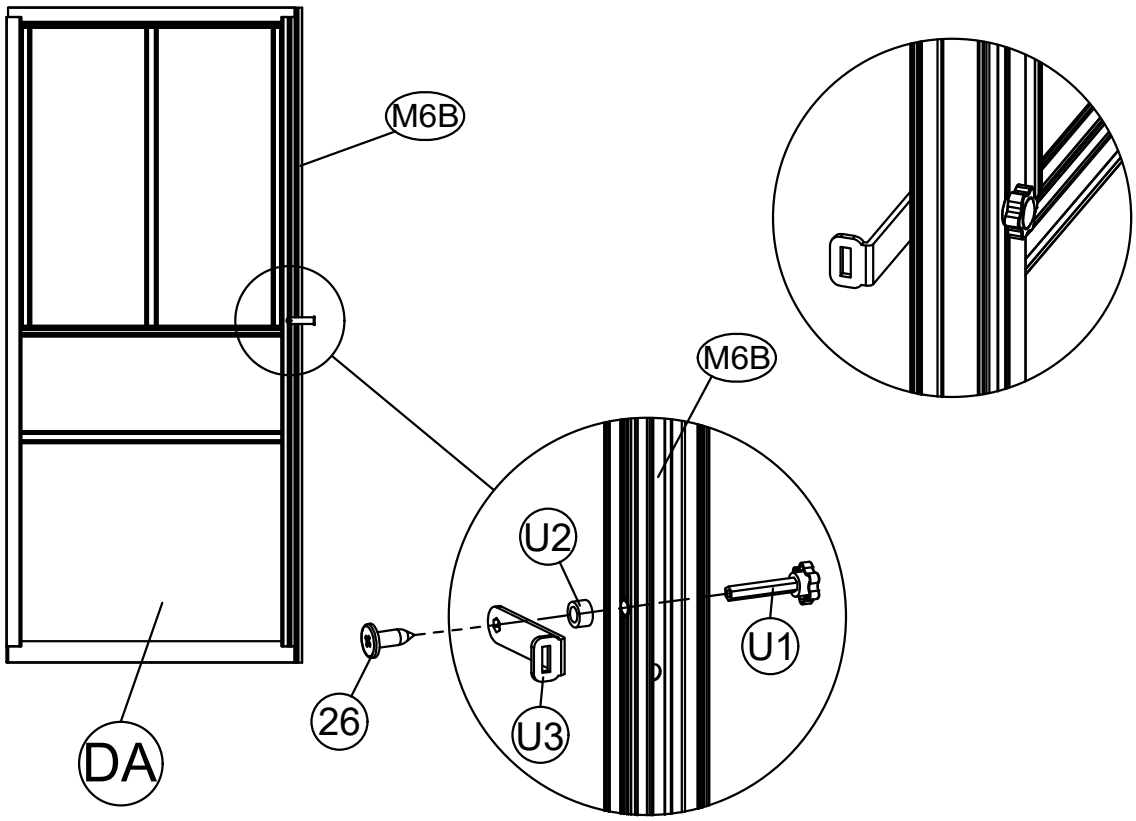


AD 4x

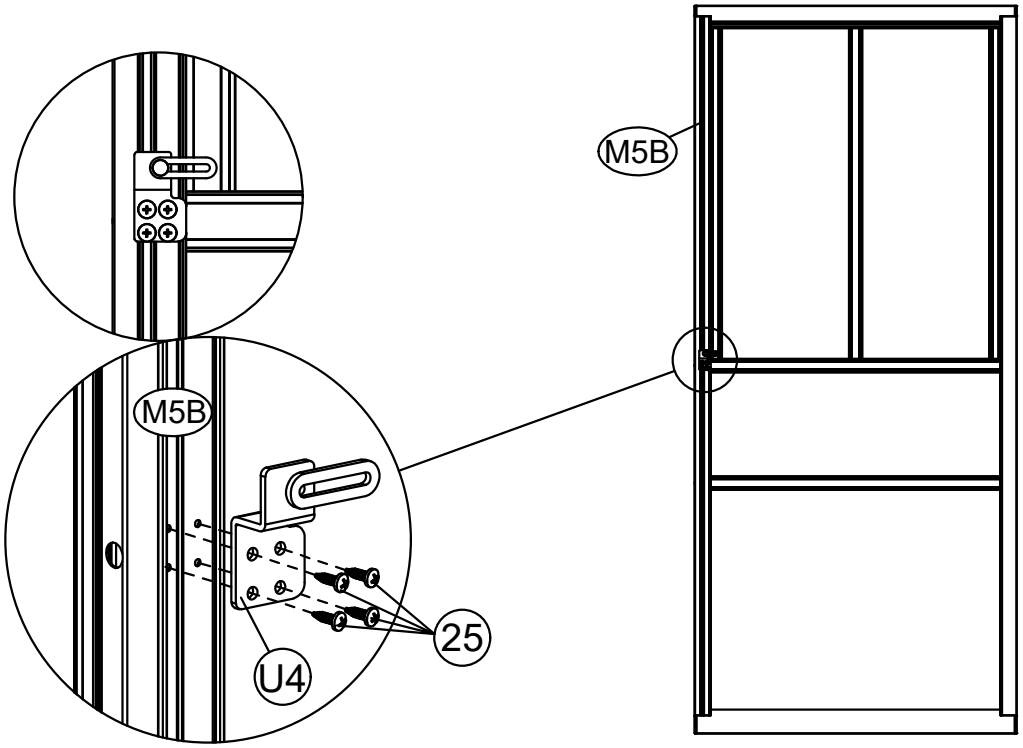

<39>

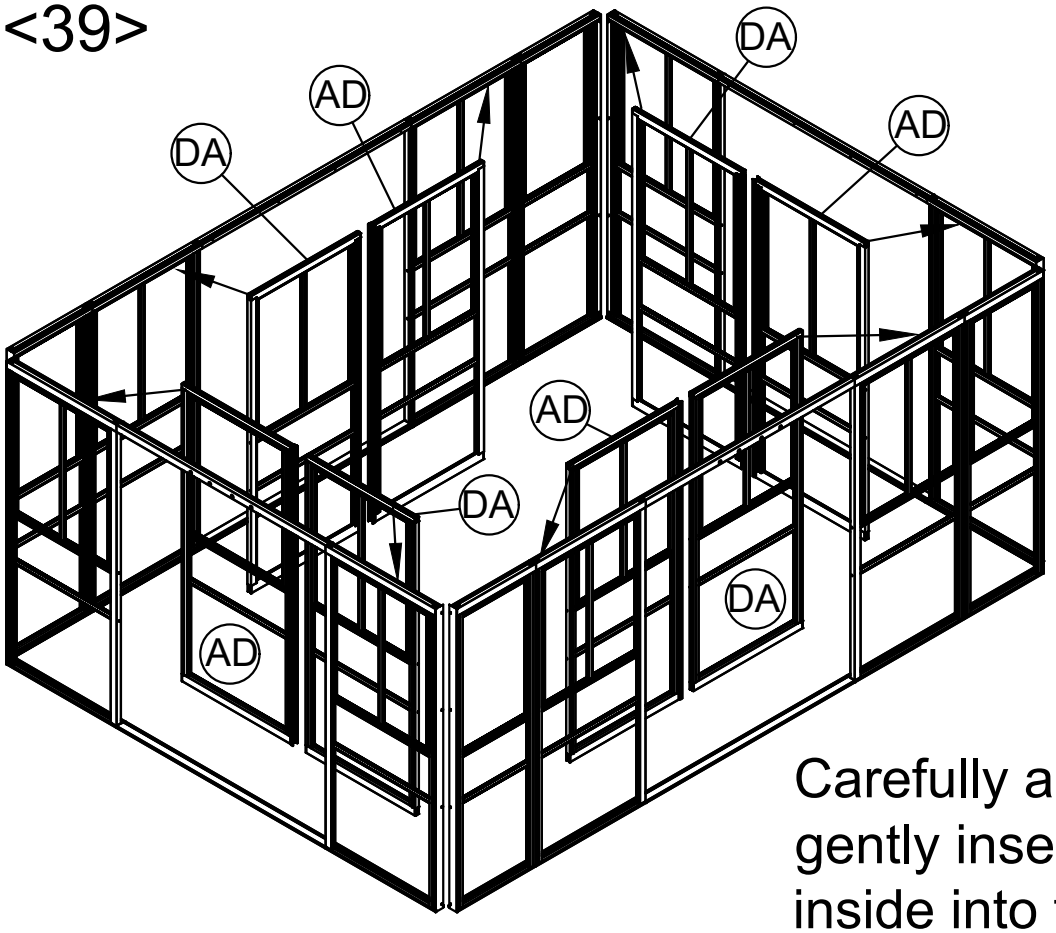



Carefully align the door and gently insert it from the inside into the upper slot.

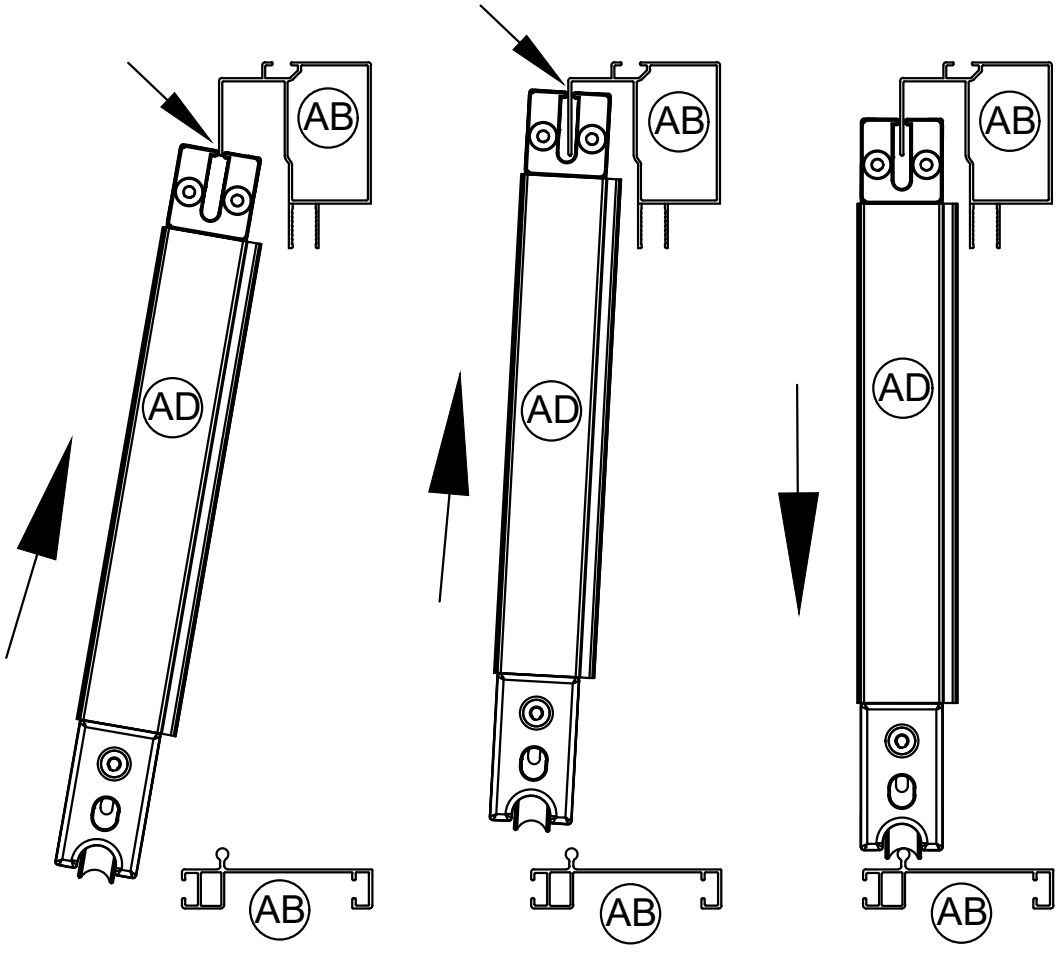

Repeat the previous steps for other components.

<40>

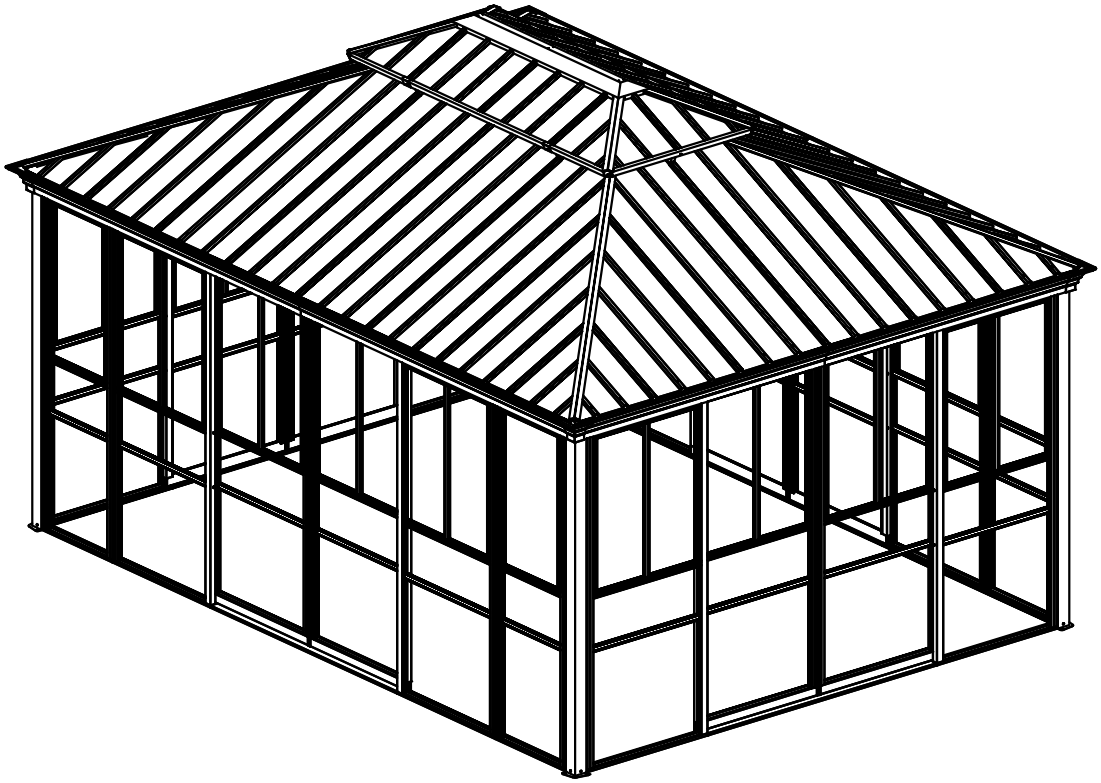

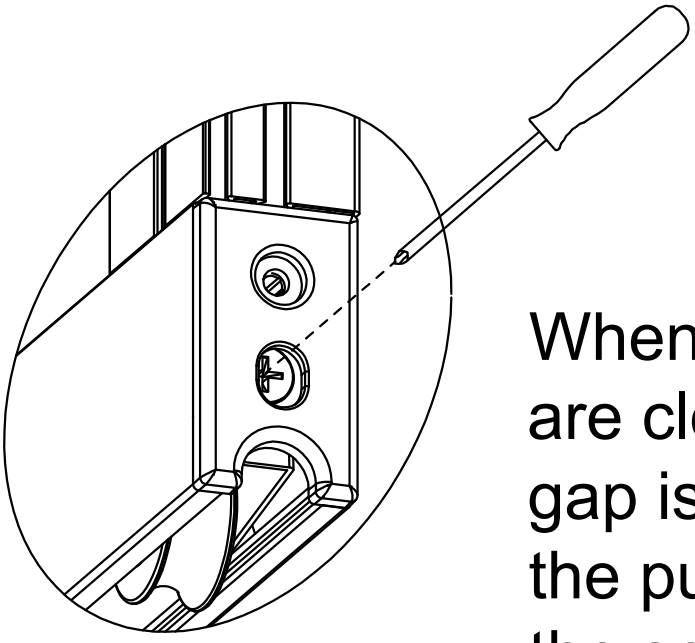

When the two sliding doors are closed and an obvious gap is found, the height of the pulley can be adjusted by the screw on the pulley.

<41>

