



170.0

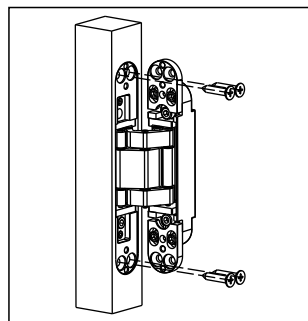

Conduct the routing,
cutter 24 mmØ ,
collar ring 30 mm Ø ,
screw hinge door part (marked as
door)using 5 mm Ø wood screws.

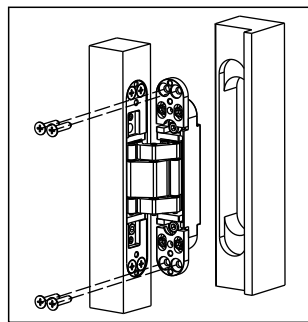


Fasten hinge frame part depending on the frame type.

If required, please loose slightly the upper clamping screws for the height adjustment.

Block frame: Screw with 5 mm Ø wood screws

For further frame types, see page 2

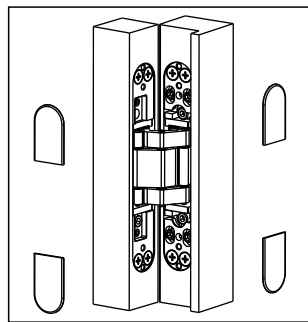


Screw the small cover plates using the enclosed tapping screws onto frame and door part.


Double-check the fastening of all clamping and fixing screws after installation.

120.0

Adjustment screws

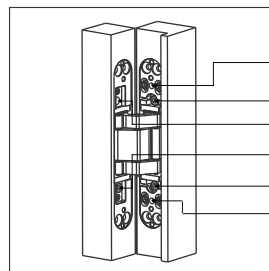


- Height adjustment
- Depth adjustment
- Side adjustment
- Side adjustment
- Depth adjustment
- Height adjustment

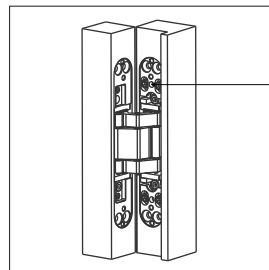


— **Height adjustment**

- Slightly loosen the clamping screws
- Adjust the vertical position of the door by turning the lower height adjustment screw (turn the upper height adjustment screw in the opposite direction if necessary)
- Retighten the clamping screws

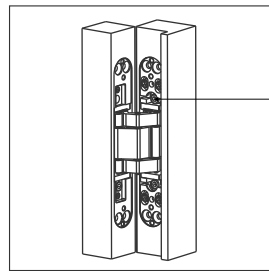

- **Depth adjustment**

- Slightly loosen the fixing screws
- Put the door to the correct compression
- Retighten the clamping screws

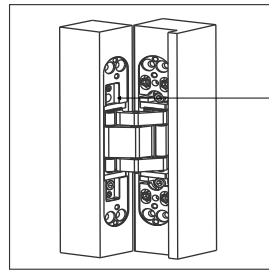

- **Side adjustment**

- Adjust the adjusting spindles using a 4 mm Allen key
- Twist left - towards hinge (max. 3 mm)
- Twist right - towards lock (max. 3 mm)

120.0

