

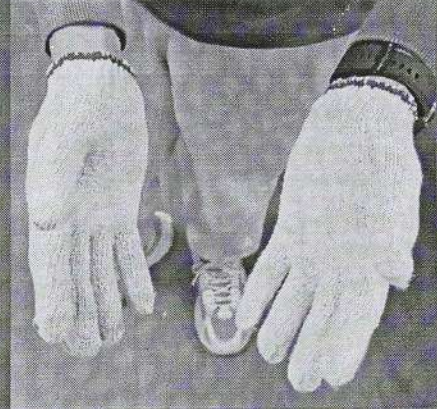


16 SLOT FILE CABINET [WITH PARTITION STRIP]


INSTALLATION INSTRUCTIONS AND PROCEDURES

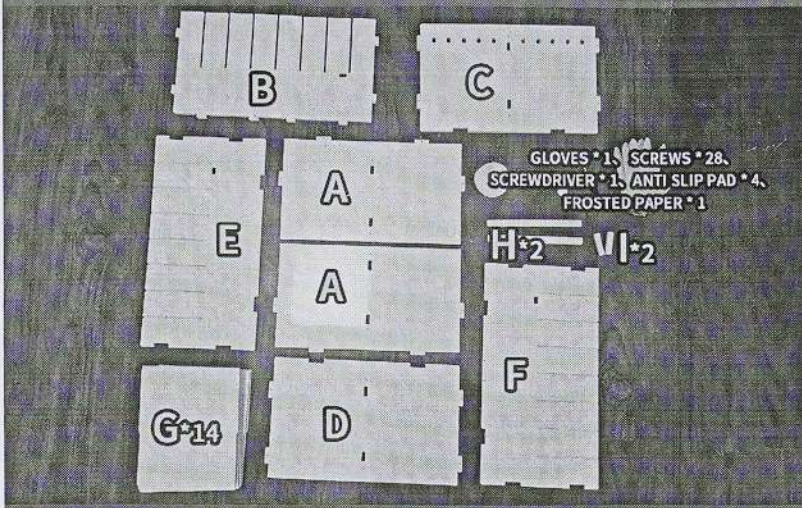


PLEASE WEAR PROTECTIVE GLOVES BEFORE ASSEMBLING

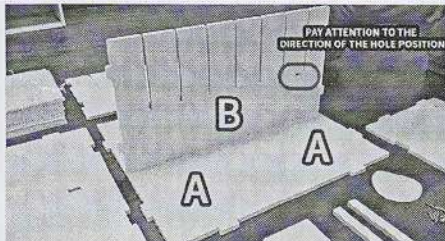


1. COMBINE TWO A BOARDS TOGETHER; AND ASSEMBLE THE B-BOARD

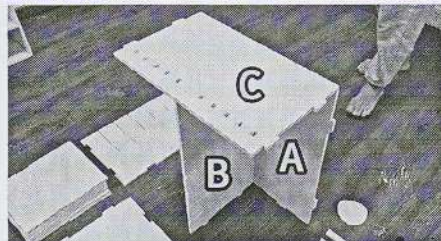


2. ASSEMBLE THE C BOARD ON THE SIDE OF THE B BOARD WITH HOLES

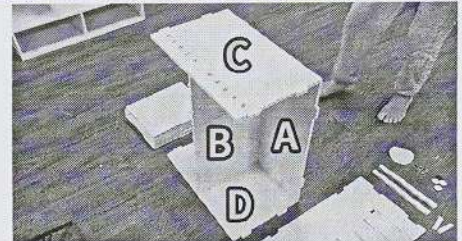


3. ASSEMBLE THE D-PLATE

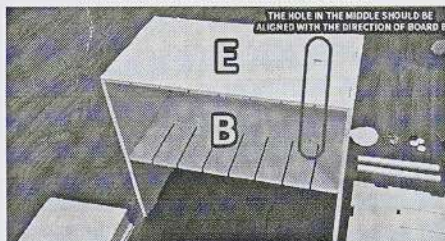


4. ASSEMBLE THE E-PLATE WITH THE CARD SLOT FACING INWARD

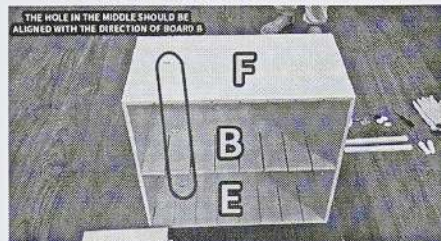


5. ASSEMBLE THE F-PLATE WITH THE CARD SLOT FACING INWARD

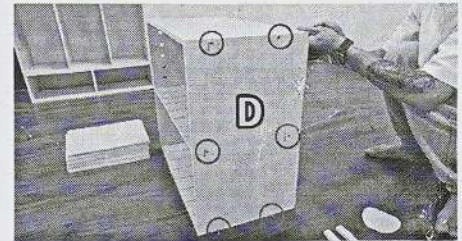


6. FIXED SCREWS * 6

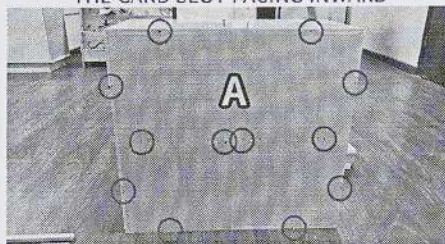


7. FIXED SCREWS * 12

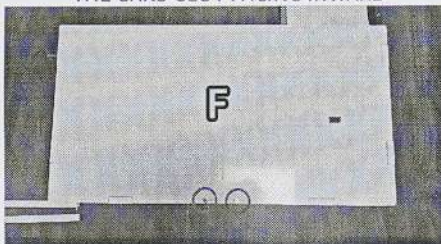


8. FIXED SCREWS * 2

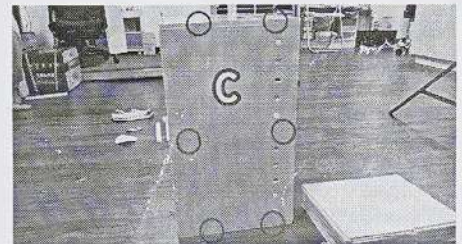


9. FIXED SCREWS * 6

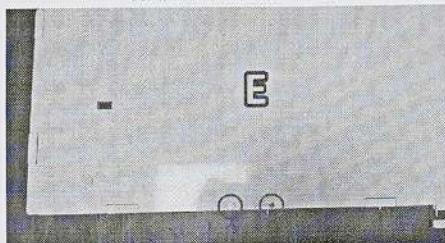


10. FIXED SCREWS * 2

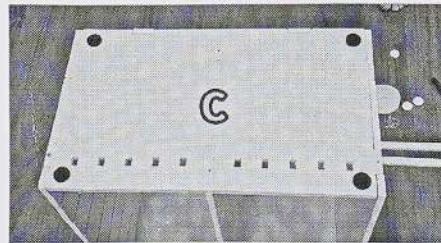


11. FIXED ANTI SLIP PAD * 4

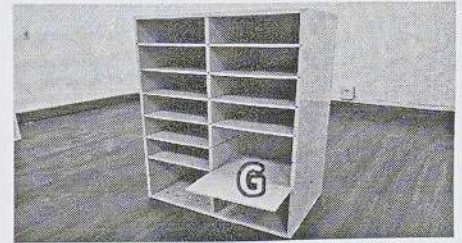

12. ASSEMBLE 12 PIECES OF G-BOARD

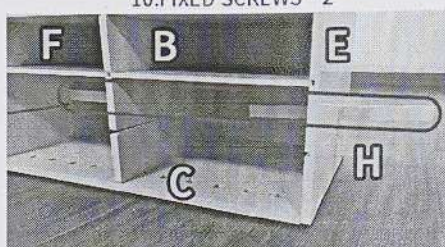

13. INSERT TWO H-PLATES INTO THE HOLES OF PLATES E, B, AND F

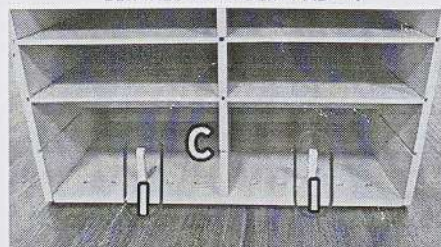

14. ASSEMBLE THE I BOARD ACCORDING TO YOUR OWN NEEDS IN THE C BOARD

INFORM:

1. THE REMAINING TWO G-PLATES CAN BE ASSEMBLED ACCORDING TO THEIR OWN NEEDS, AND THE H-I-PLATES NEED TO BE REMOVED DURING ASSEMBLY
2. THE EDGES OF THE BOARD HAVE BEEN POLISHED, AND WE HAVE ADDED SANDPAPER TO THE PACKAGING ACCORDING TO THE CUSTOMER'S REQUIREMENTS. IF POLISHING IS STILL NEEDED, IT CAN BE USED, BUT IF NOT, IT CAN BE IGNORED.