

APPLIQUES & ONLAYS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ construction adhesive
- ☐ caulk
- ☐ caulking gun
- ☐ nail gun
- ☐ finishing nails
- ☐ extra fine sandpaper
- ☐ paint


SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint/finish our appliques with 100% acrylic latex paint before you install them. Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface and back of appliques of all dirt and dust with a clean cloth or sponge.
- Make sure that the surface and the back of the applique are completely dry before attempting installation.

STEP BY STEP INSTRUCTIONS

1. Lay the applique face down on a soft surface that will not scratch/dent the applique detail.
2. Apply a 1/2" bead of adhesive caulk all the way around the back edge of the applique.
3. When pressing the applique up against the surface, some adhesive caulk will seep out. Smooth excess caulk around the applique with a finger or the putty knife and apply extra caulk that is needed to fill in any gaps.
4. Wipe off any excess caulk with a sponge or damp rag.
5. Larger appliques will need to be installed with nails in addition to the adhesive.

EXAMPLE INSTALLATION DIAGRAMS

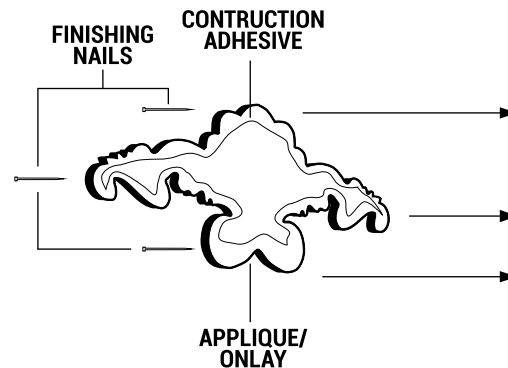

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com