



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

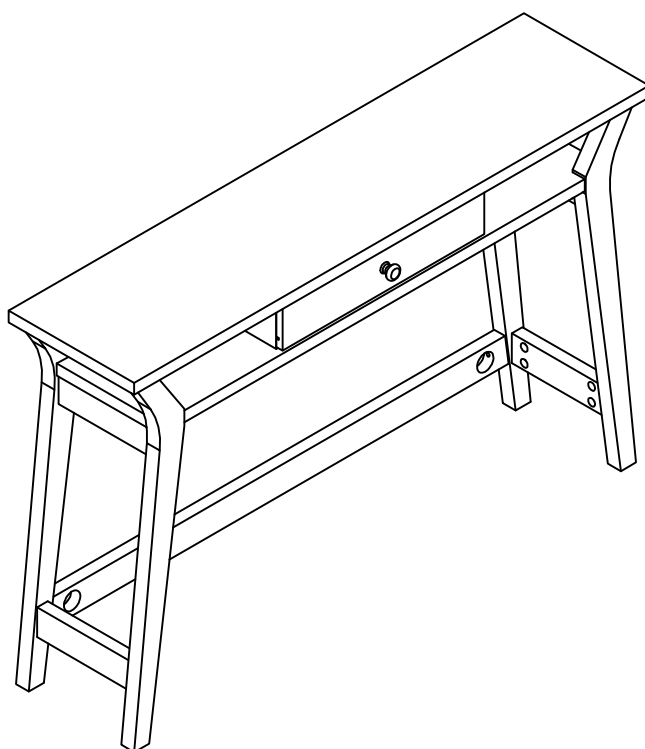

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE









ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

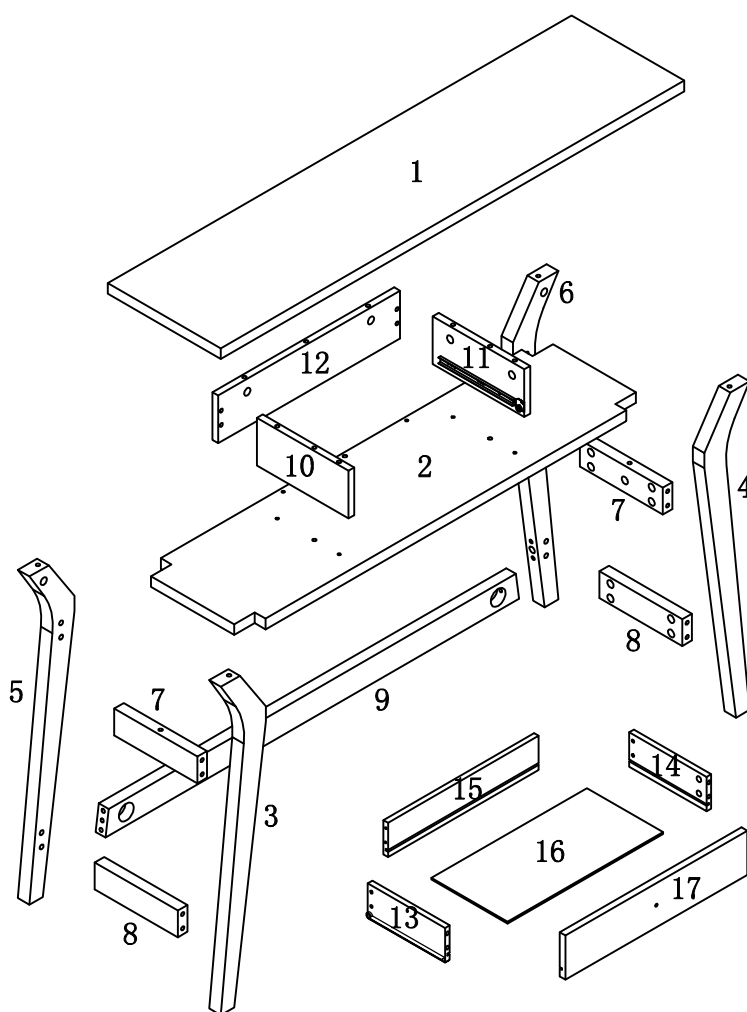


(1)	1pc	(7)	2pcs	(13)	1pc
(2)	1pc	(8)	2pcs	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	1pc	(17)	1pc
(6)	1pc	(12)	1pc		

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266


A		L29	28pcs
B		ø15	28pcs
C		L20	4pcs
D		ø12	4pcs
E		ø8x25	14pcs
F		ø4x30	4pcs
G		ø4x45	6pcs
H			1pc
I		M4x22	1pc
J		ø8x75	2pcs
K		ø35	2pcs
L		ø8	2pcs
M		M13	1pc
N		ø20	22pcs
O		ø45	2pcs
P		ø16	4pcs
Q		197×5×1	1pc
R		ø4x25	1pc
S		ø5x40	1pc
T		ø8 x 40	1pc
U		12×12×1	2pcs
V		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

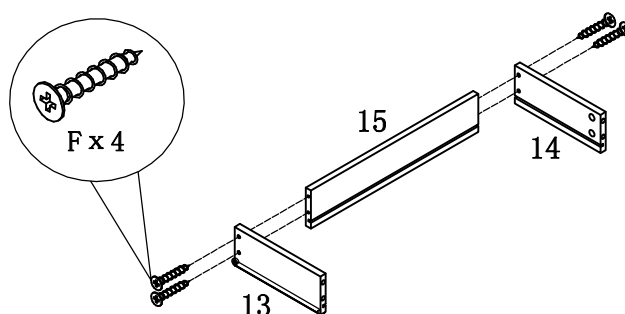


STEP 1 / ETAPE 1

STEP 2 / ETAPE 2

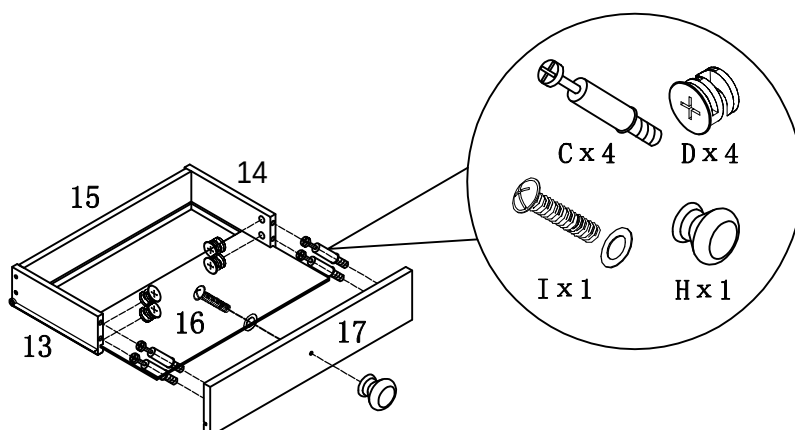


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

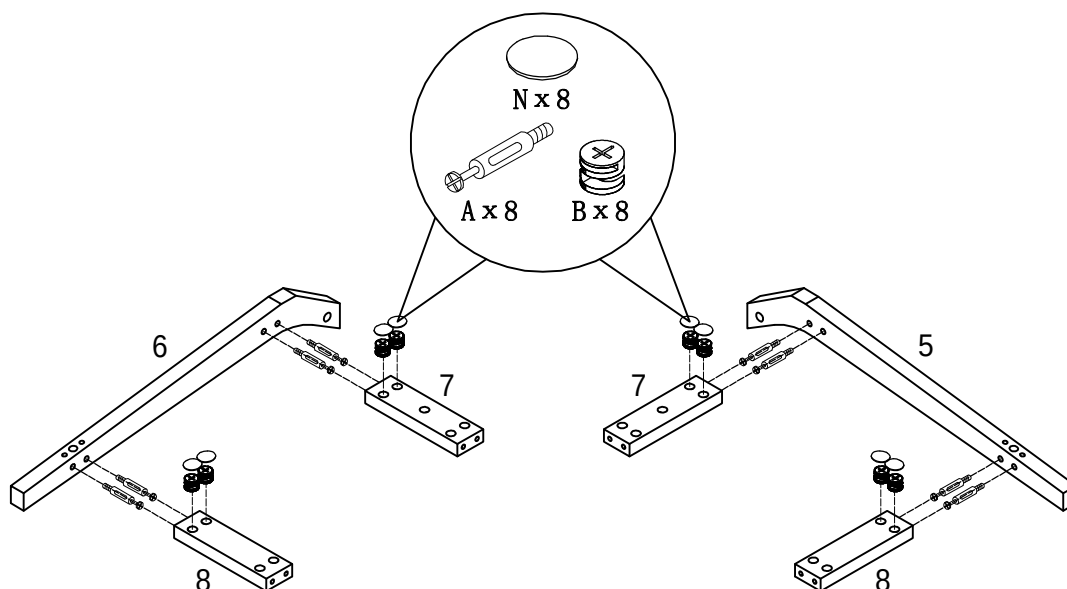


STEP 3 / ETAPE 3

STEP 4 / ETAPE 4

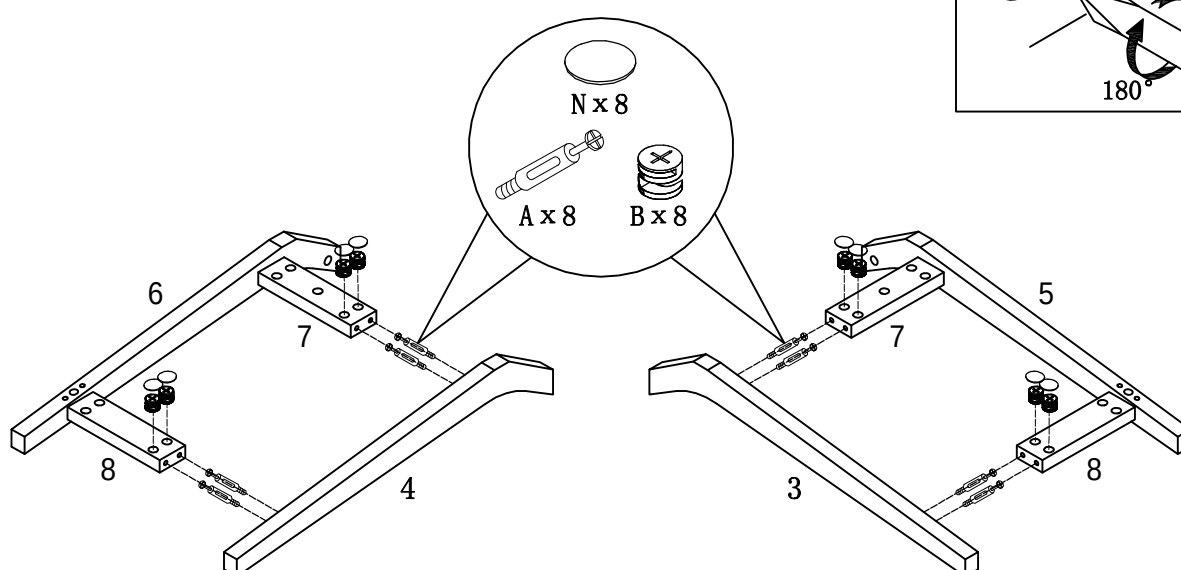


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

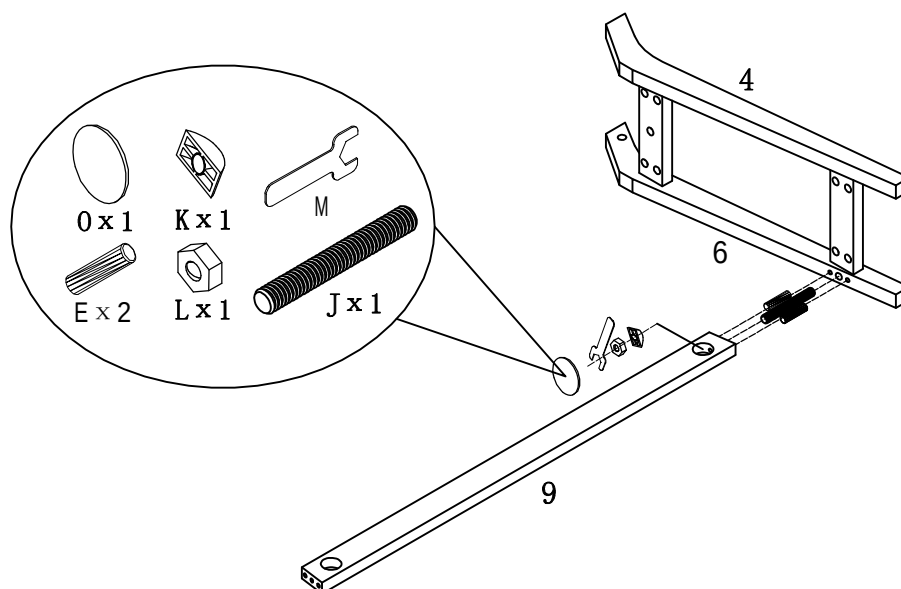


STEP 5 / ETAPE 5

STEP 6 / ETAPE 6

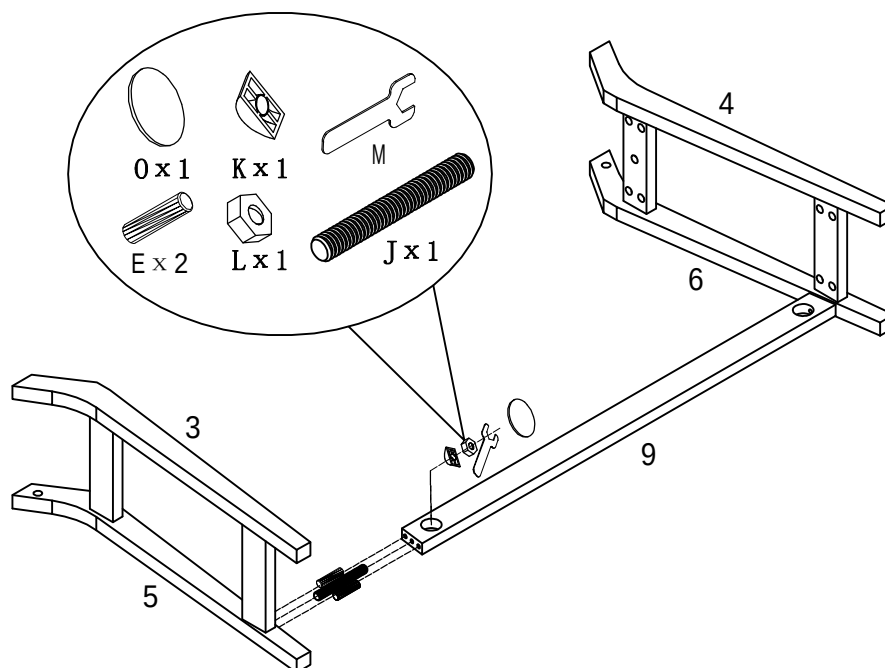


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

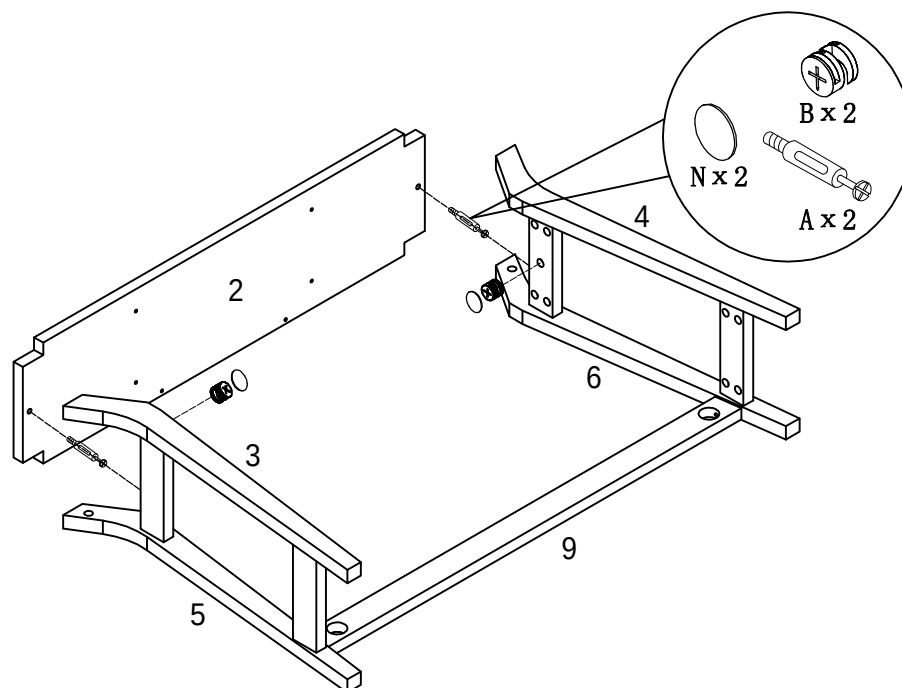


STEP 7 / ETAPE 7

STEP 8 / ETAPE 8

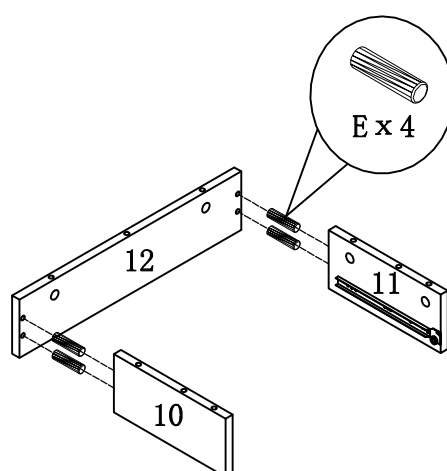


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

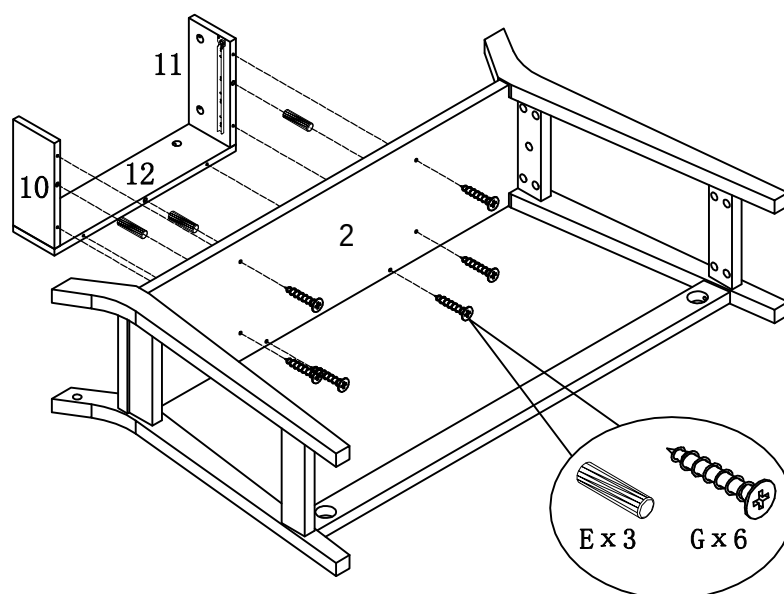


STEP 9 / ETAPE 9

STEP 10 / ETAPE 10


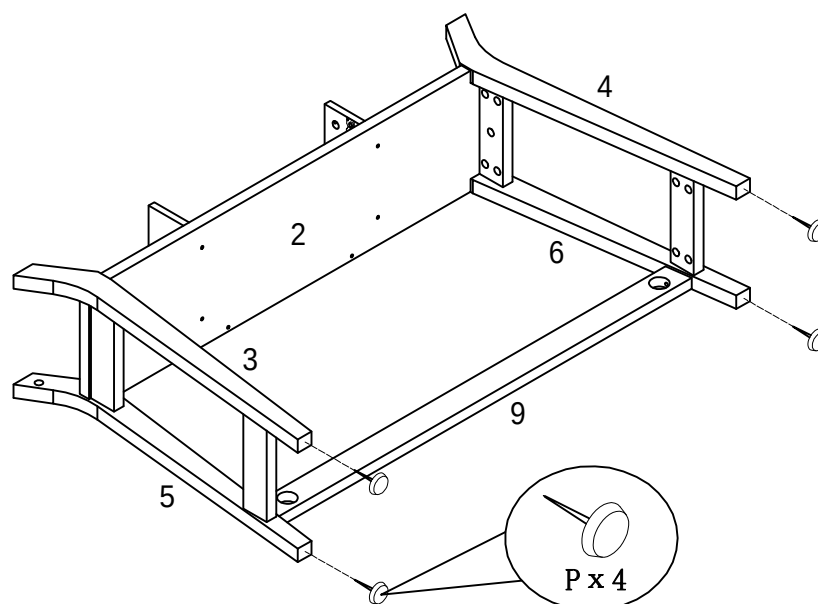


ITEM NO/NO ARTICLE: CONSOLE/TABLE
182263 171973 182266

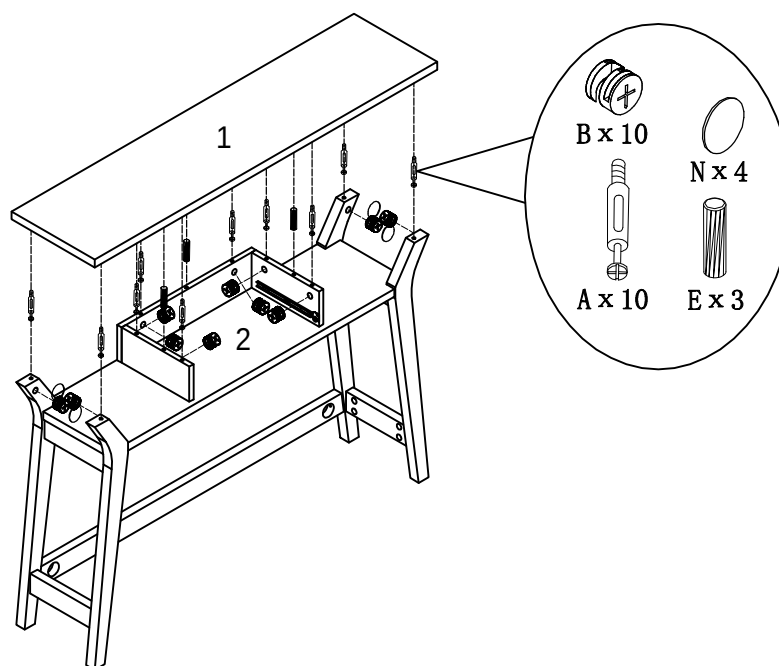

STEP 11 / ETAPE 11

STEP 12 / ETAPE 12

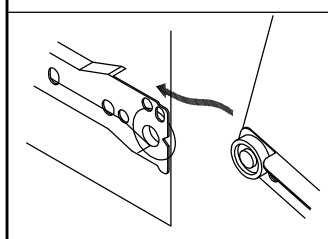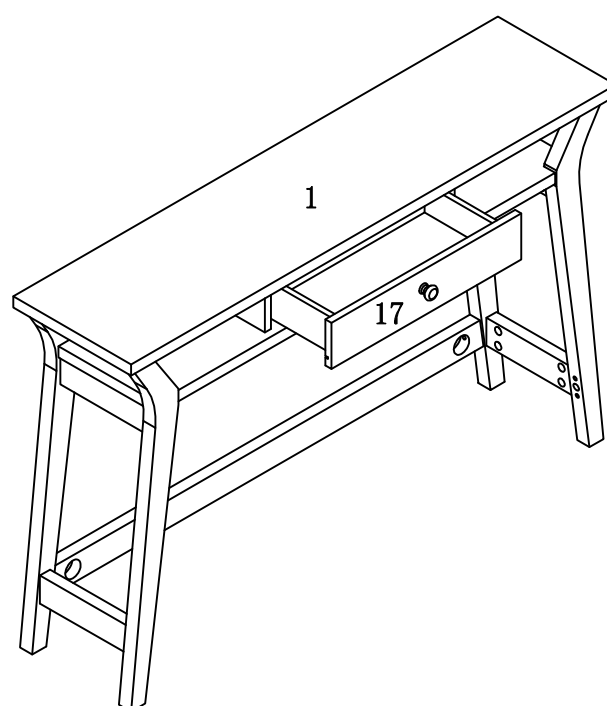


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1 / ETAPE 1

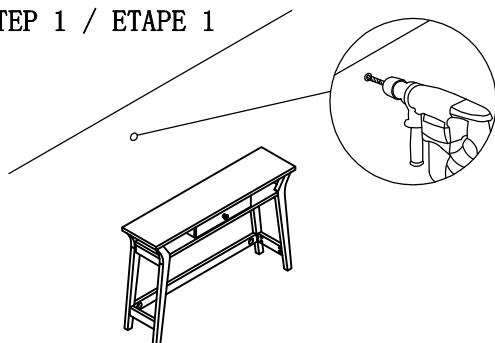


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2 / ETAPE 2

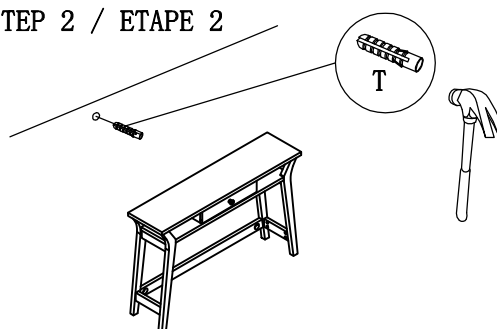


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3 / ETAPE 3

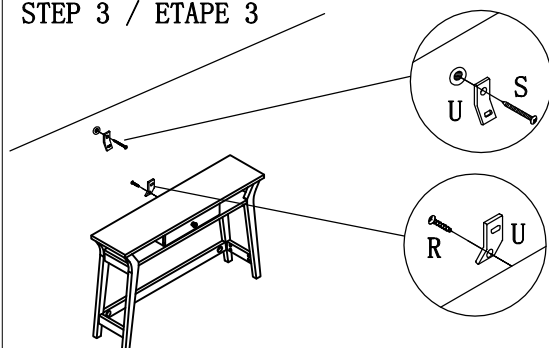

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4 / ETAPE 4

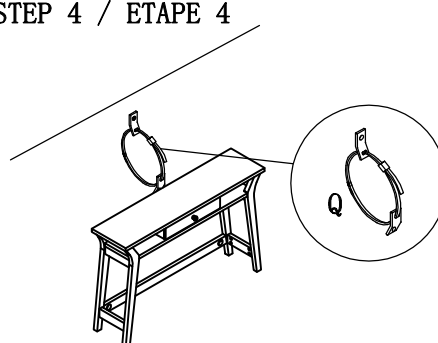

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.