



ASSEMBLY INSTRUCTION

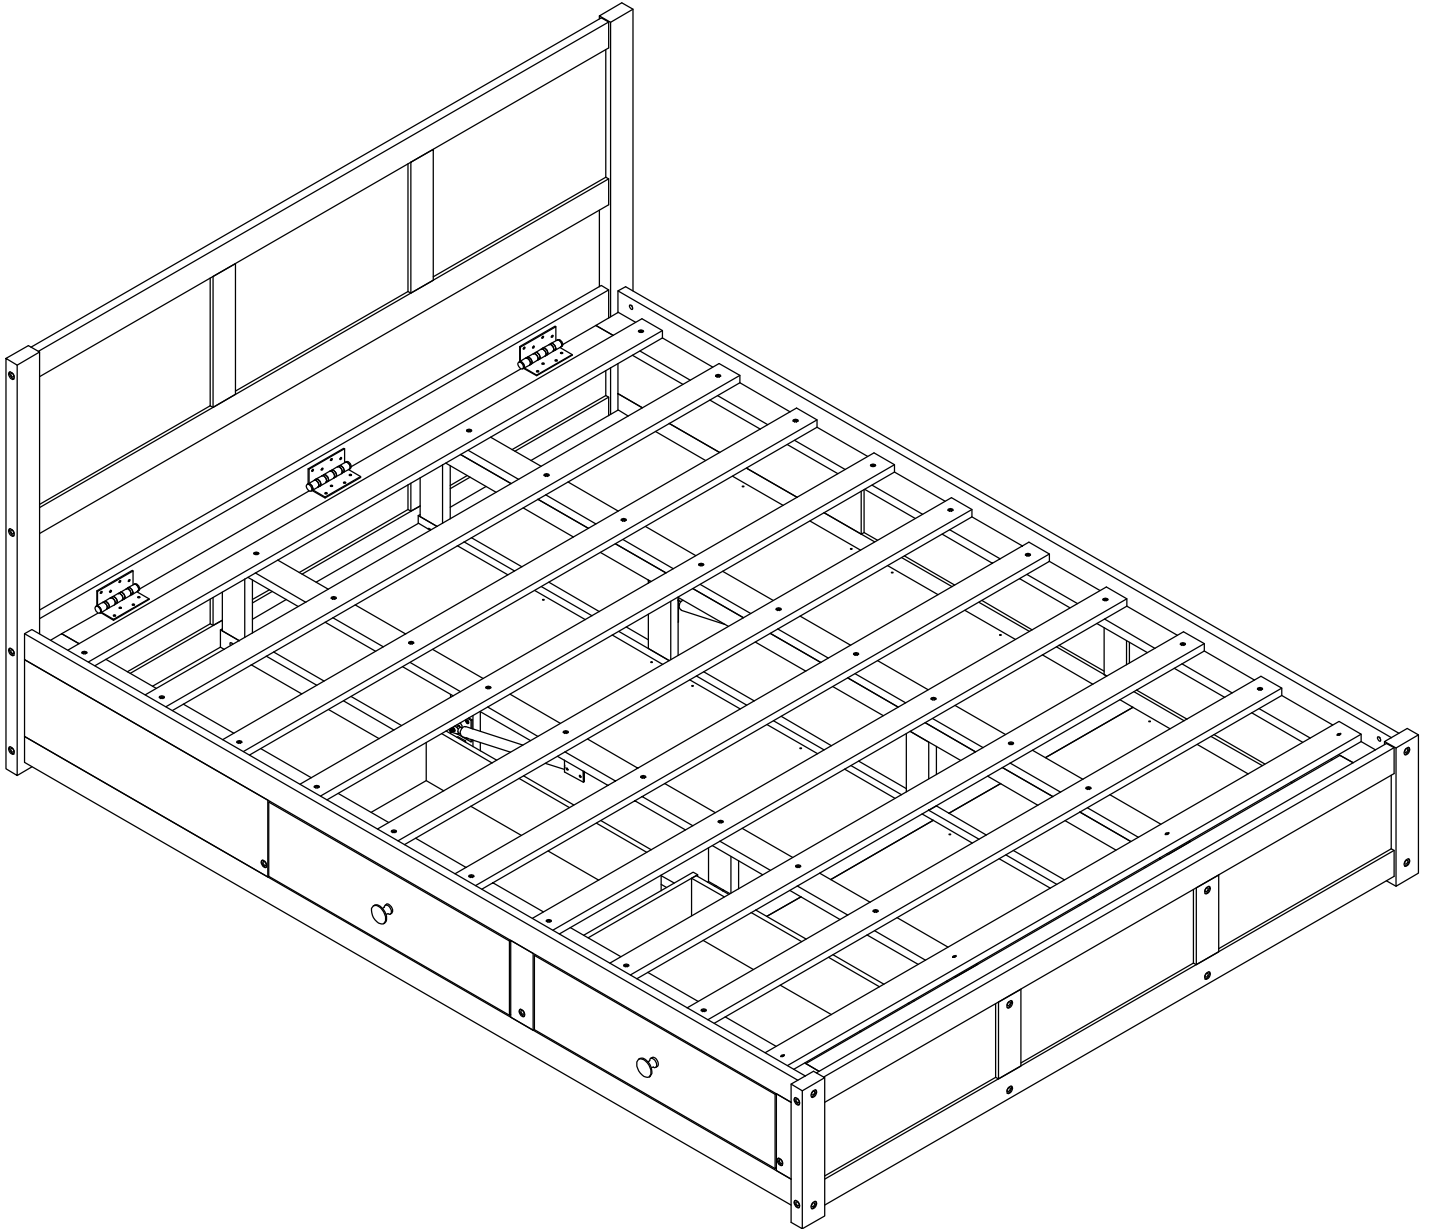


ASSEMBLY INSTRUCTION

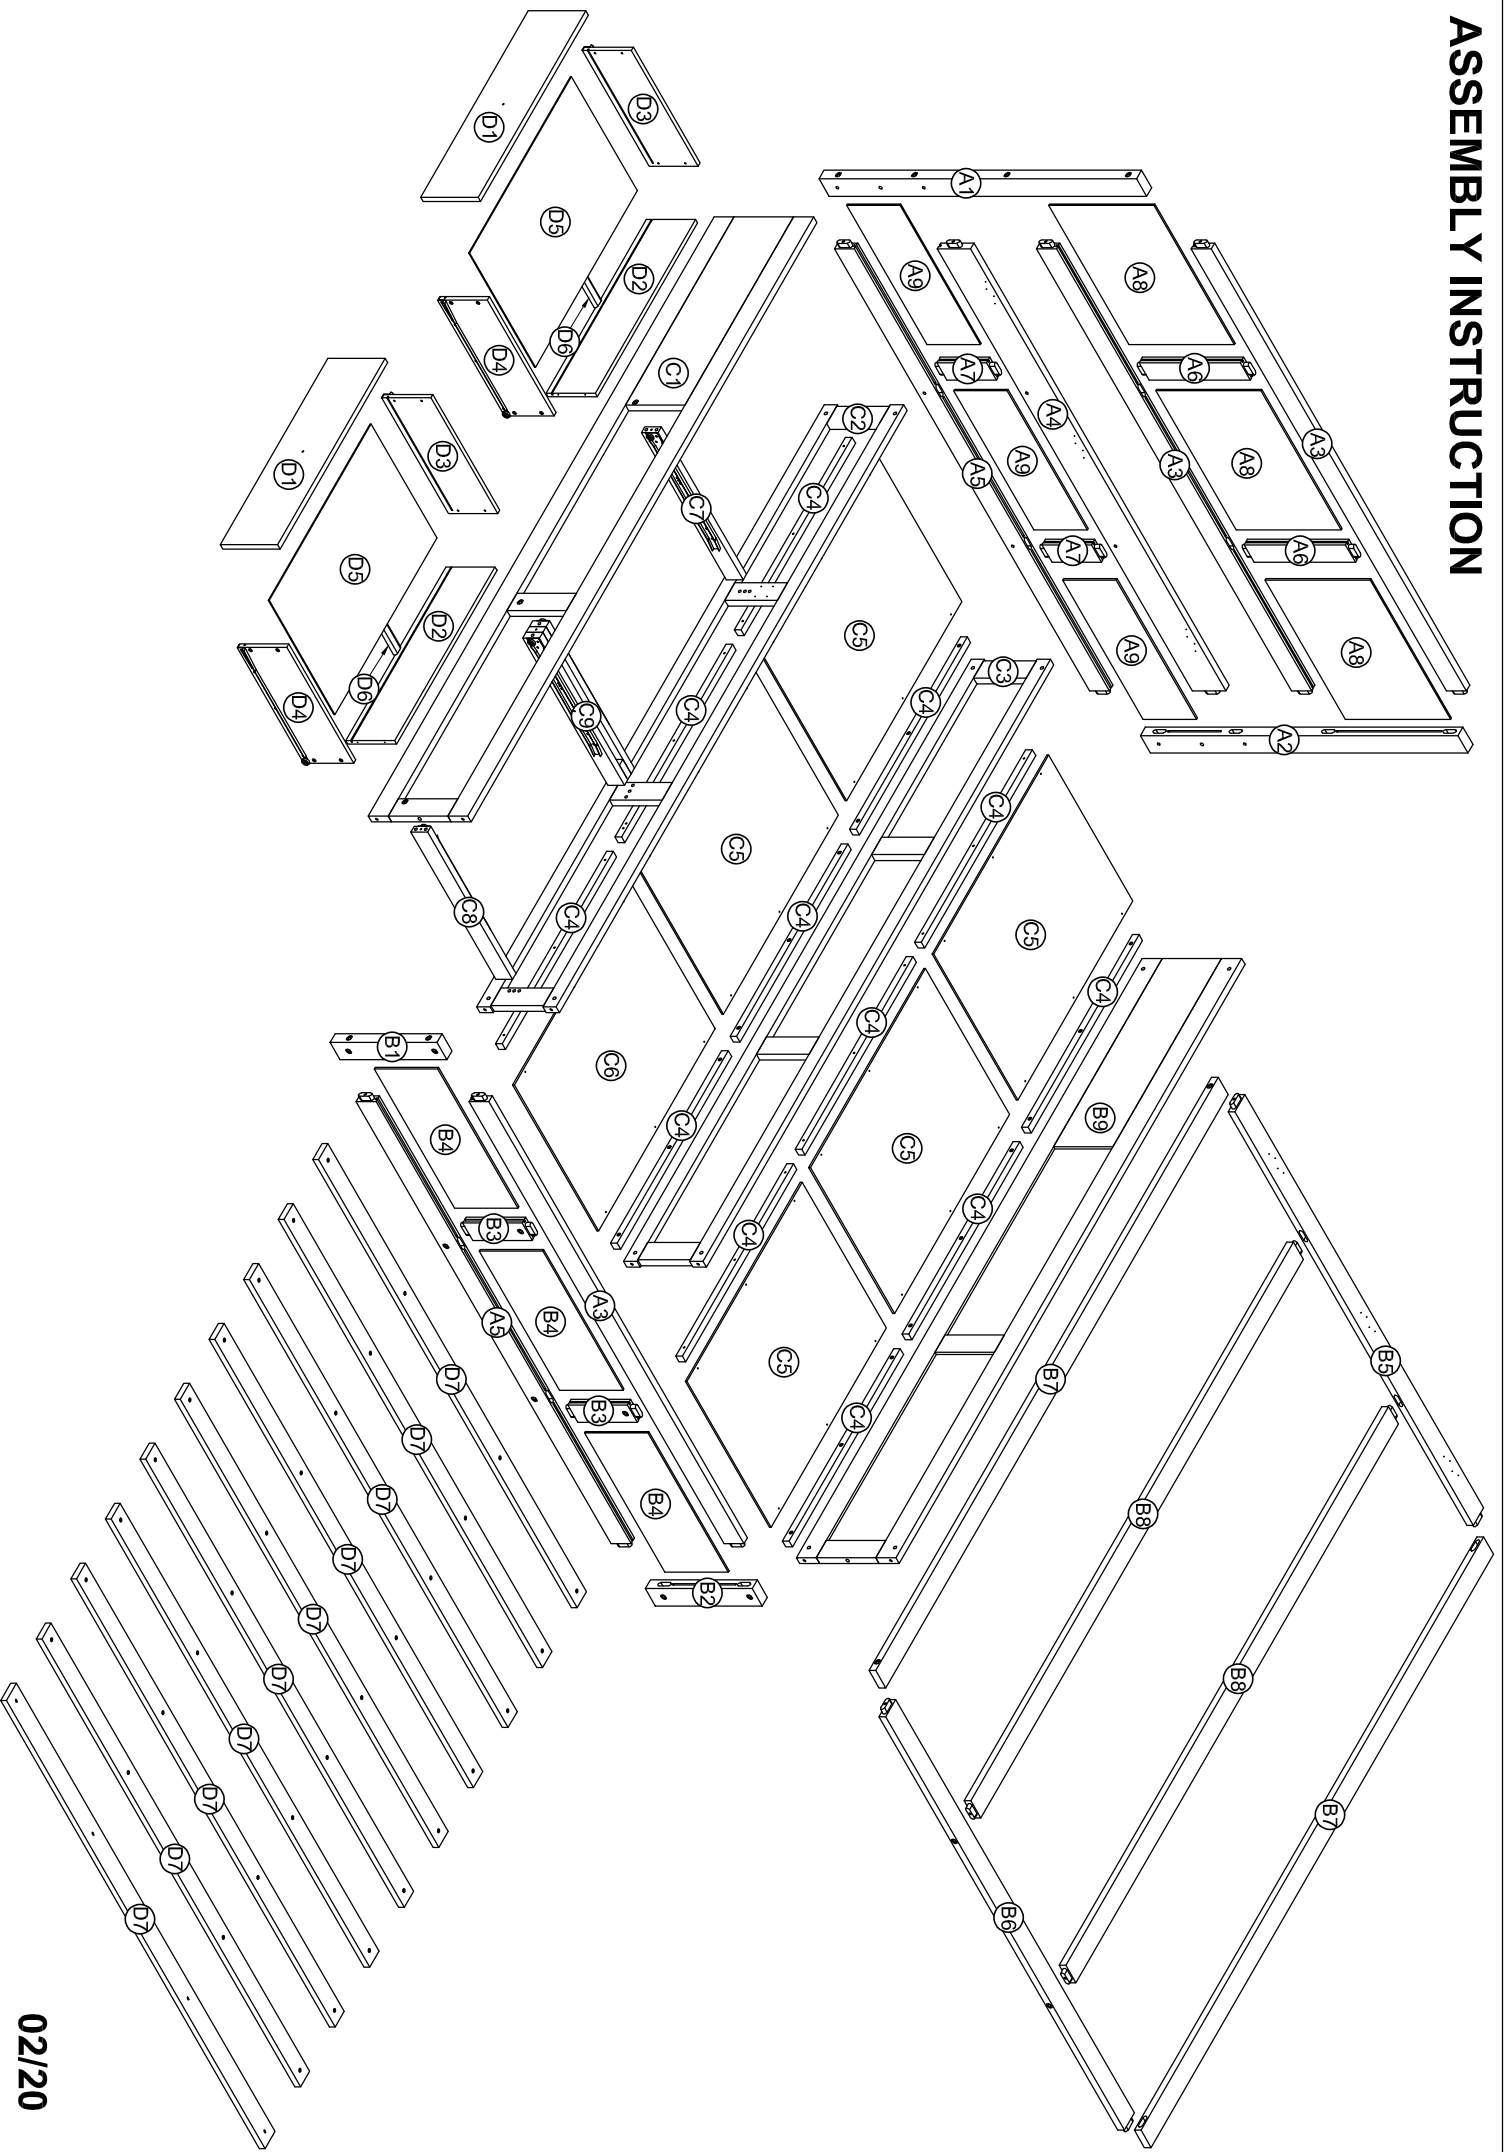


Part List Box 1

A3

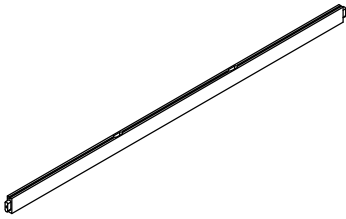

WoodBar-3pcs

A5

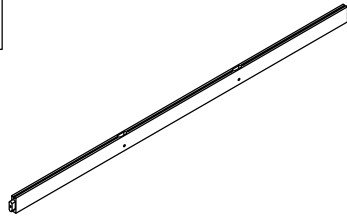


WoodBar-1pc

A6




WoodBar-2pcs

A8

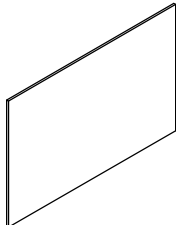


Panel-3pcs

A9

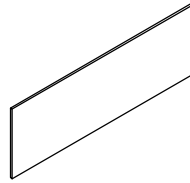


Panel-3pcs

B4

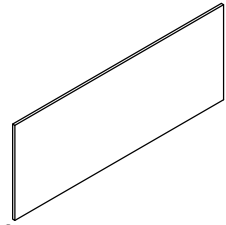


Panel-3pcs

B5

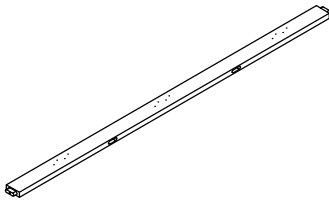


WoodBar-1pc

B6

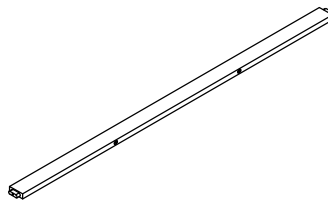


WoodBar-1pc

C5

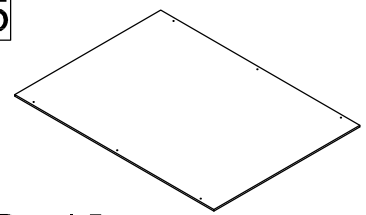


Panel-5pcs

C6

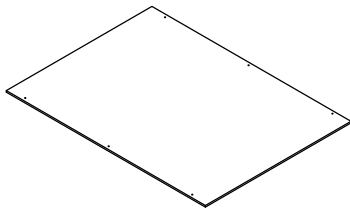


Panel-1pc

D2

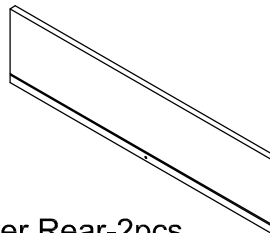


Drawer Rear-2pcs

D3

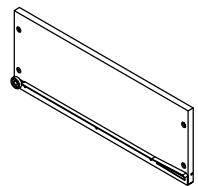


Drawer Left-2pcs

D4

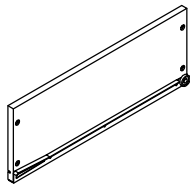


Drawer Right-2pcs

D5

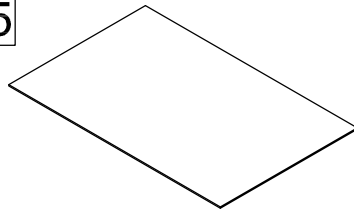



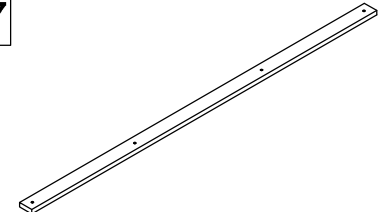




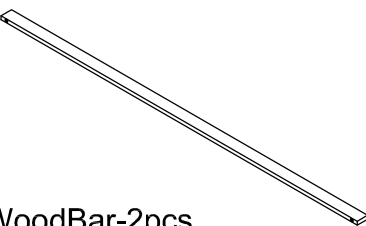
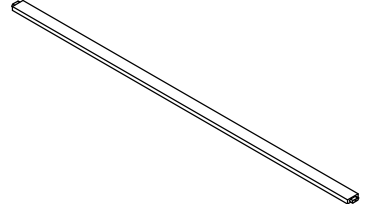
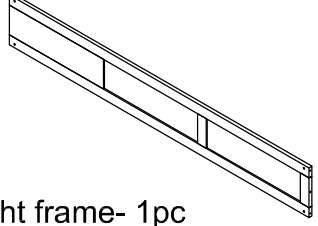
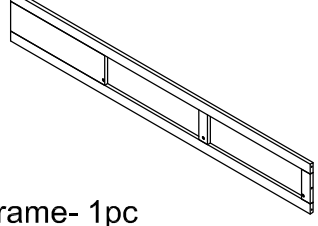
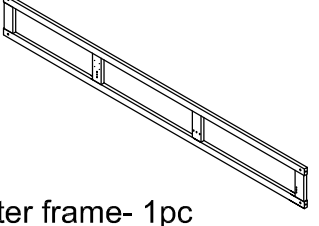
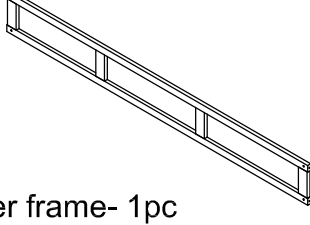
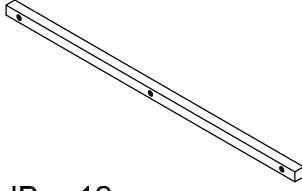
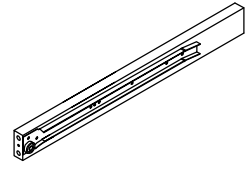
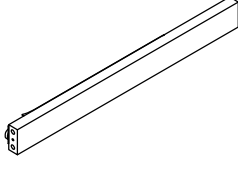
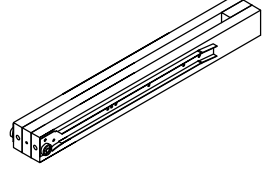
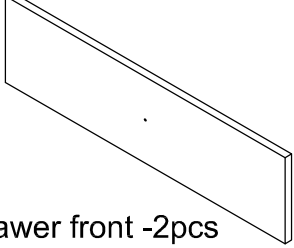
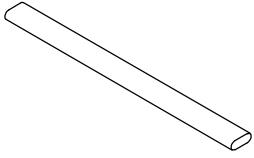

Drawer Bottom Panels-2pcs

D7









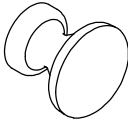

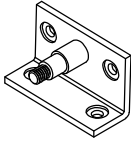











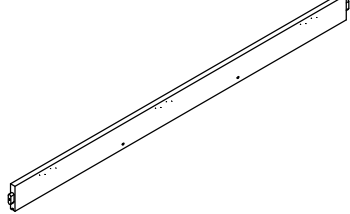
Slats-10pcs

Part List & Hardware List Box 2

<p>A1</p>  <p>Leg-1pc</p>	<p>A2</p>  <p>Leg-1pc</p>	<p>A4</p>  <p>WoodBar-1pc</p>
<p>A7</p>  <p>WoodBar-2pcs</p>	<p>B1</p>  <p>Leg-1pc</p>	<p>B2</p>  <p>Leg-1pc</p>
<p>B3</p>  <p>WoodBar-2pcs</p>	<p>B7</p>  <p>WoodBar-2pcs</p>	<p>B8</p>  <p>WoodBar-2pcs</p>
<p>B9</p>  <p>Right frame- 1pc</p>	<p>C1</p>  <p>Left frame- 1pc</p>	<p>C2</p>  <p>Center frame- 1pc</p>
<p>C3</p>  <p>Center frame- 1pc</p>	<p>C4</p>  <p>WoodBar-12pcs</p>	<p>C7</p>  <p>WoodBar-1pc</p>
<p>C8</p>  <p>WoodBar-1pc</p>	<p>C9</p>  <p>WoodBar-1pc</p>	<p>D1</p>  <p>Drawer front -2pcs</p>
<p>D6</p>  <p>WoodBar-2pcs</p>	<p>D8</p> <p>300N</p>  <p>Piston Steam-2pcs</p>	

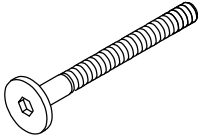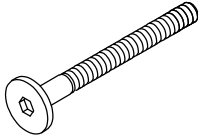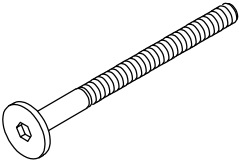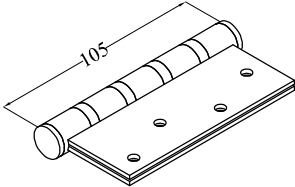
Hardware List Box 2

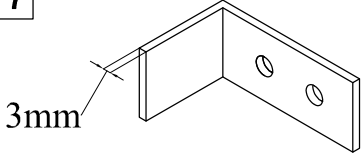
<p>1</p>  <p>Ø1/4" x 70 mm Hex-Head bolts 8pcs</p>	<p>2</p>  <p>Ø1/4" x 80 mm Hex-Head bolts 8pcs</p>	<p>3</p>  <p>Ø1/4" x 100 mm Hex-Head bolts 20pcs</p>
<p>4</p>  <p>Bolts 1/6" x25 2pcs</p>	<p>5</p>  <p>Hinge 3pcs</p>	<p>6</p>  <p>Ø8 x 30 mm Wood dowel 12pcs</p>
<p>7</p>  <p>Ø8 x 40 mm Wood dowel 4pcs</p>	<p>8</p>  <p>Ø1/4" x 13 mm Horizontal-Hole bolts 36pcs</p>	<p>9</p>  <p>Handle Wood 2pcs</p>
<p>10</p>  <p>Metal 2pcs</p>	<p>11</p>  <p>Metal 2pcs</p>	<p>12</p>  <p>Nut 4pcs</p>
<p>13</p>  <p>Metal 12pcs</p>	<p>14</p>  <p>Allen Key 2pcs</p>	<p>15</p>  <p>Screws 1/4" x50 6pcs</p>
<p>16</p>  <p>M4 x 15 mm Wood Screws 36pcs</p>	<p>17</p>  <p>3mm Angle Metal 8pcs</p>	<p>18</p>  <p>M4 x 15 mm Wood Screws 40pcs</p>
<p>19</p>  <p>M4 x 20 mm Wood Screws 36pcs</p>	<p>20</p>  <p>M4 x 30 mm Wood Screws 94pcs</p>	




Assembly Tools Required (Not Included)


STEP1: Following below illustration.

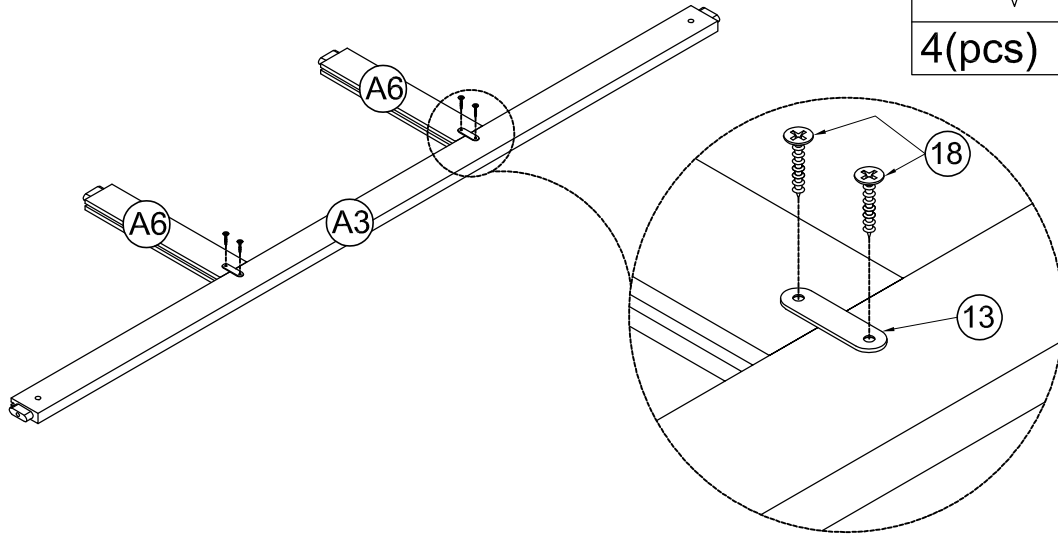


18

4(pcs)


13

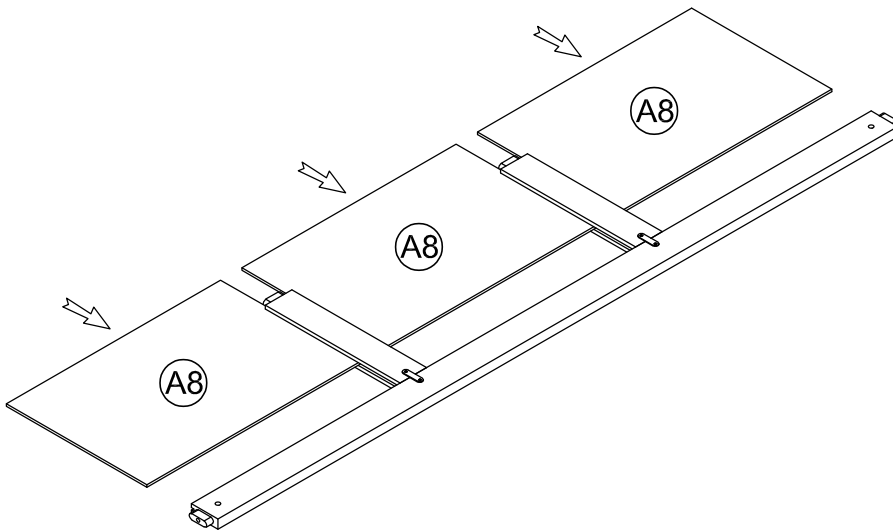2(pcs)

STEP2: Following below illustration.

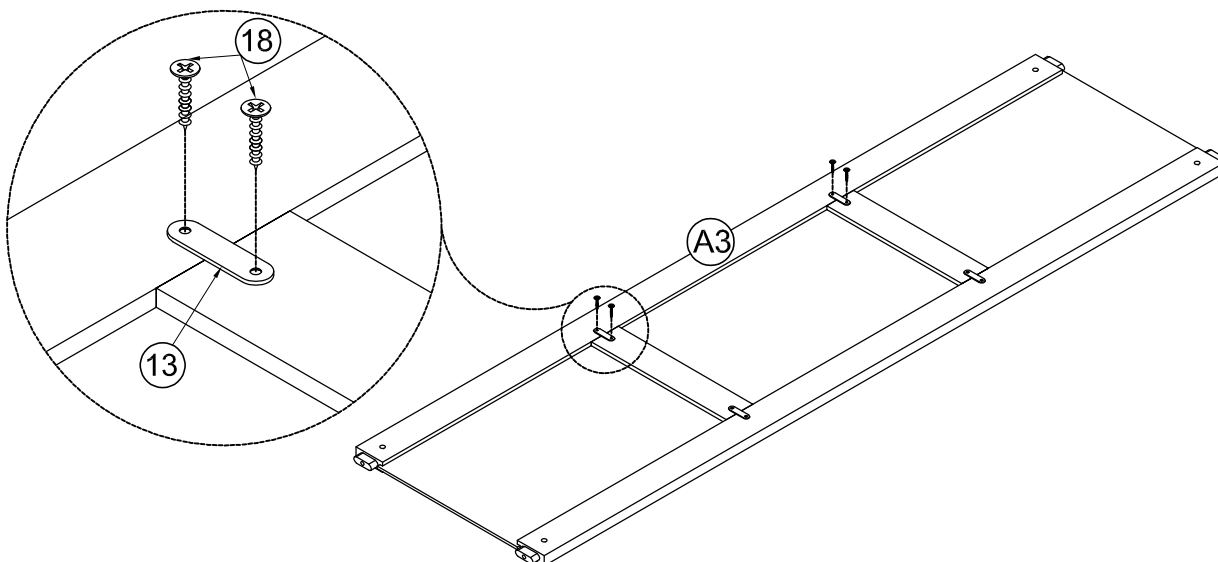


STEP3: Following below illustration.




13




2(pcs)

18


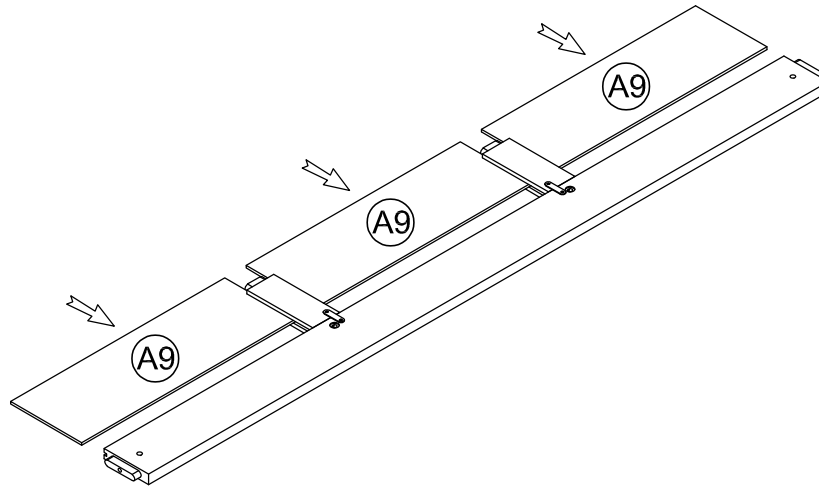
4(pcs)

STEP4: Following below illustration.

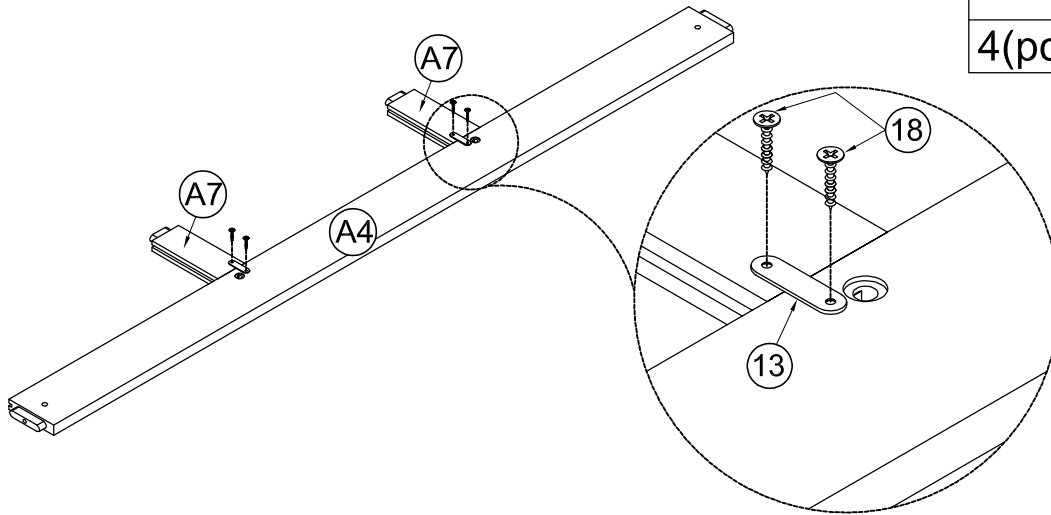




18		13	
4(pcs)		2(pcs)	

STEP5: Following below illustration.




STEP6: Following below illustration.

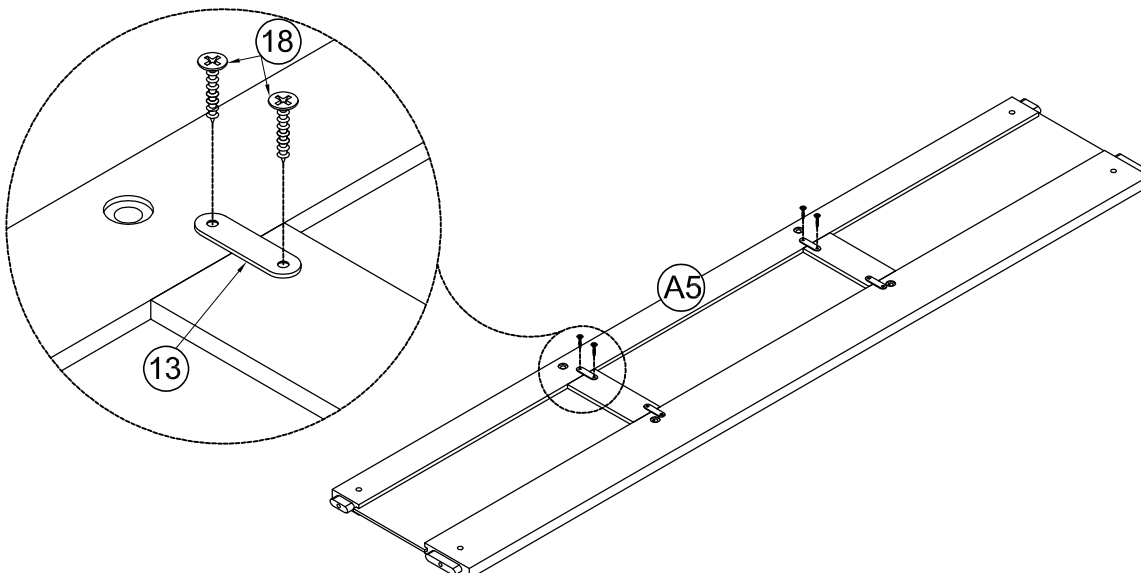


13	
2(pcs)	
18	
4(pcs)	

STEP7: Following below illustration.

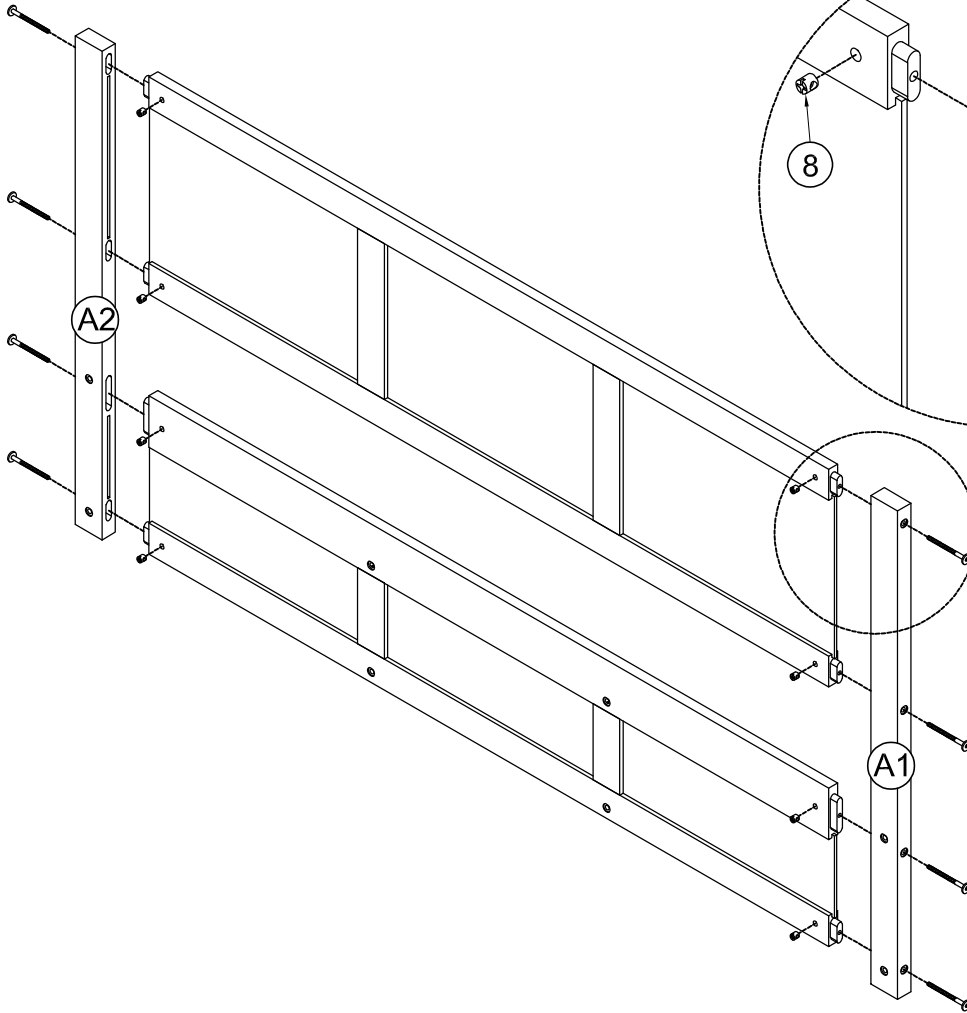

3

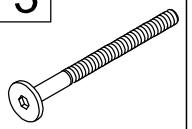


8(pcs)

8




8(pcs)

STEP8: Following below illustration.

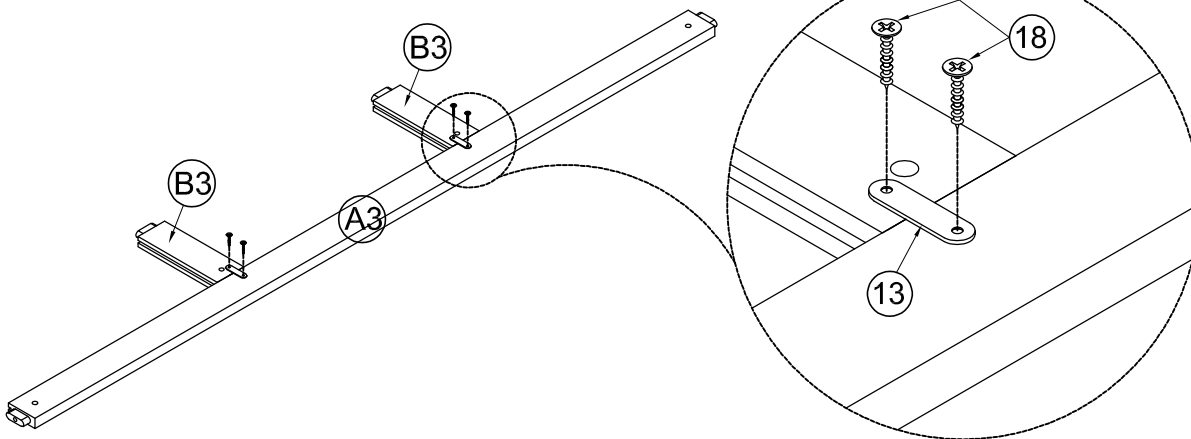

13




2(pcs)

18




4(pcs)


STEP9: Following below illustration.

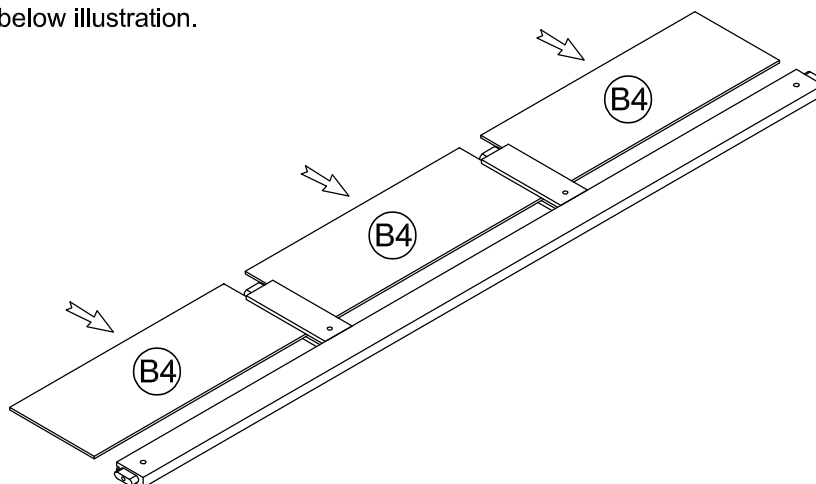

STEP10: Following below illustration.

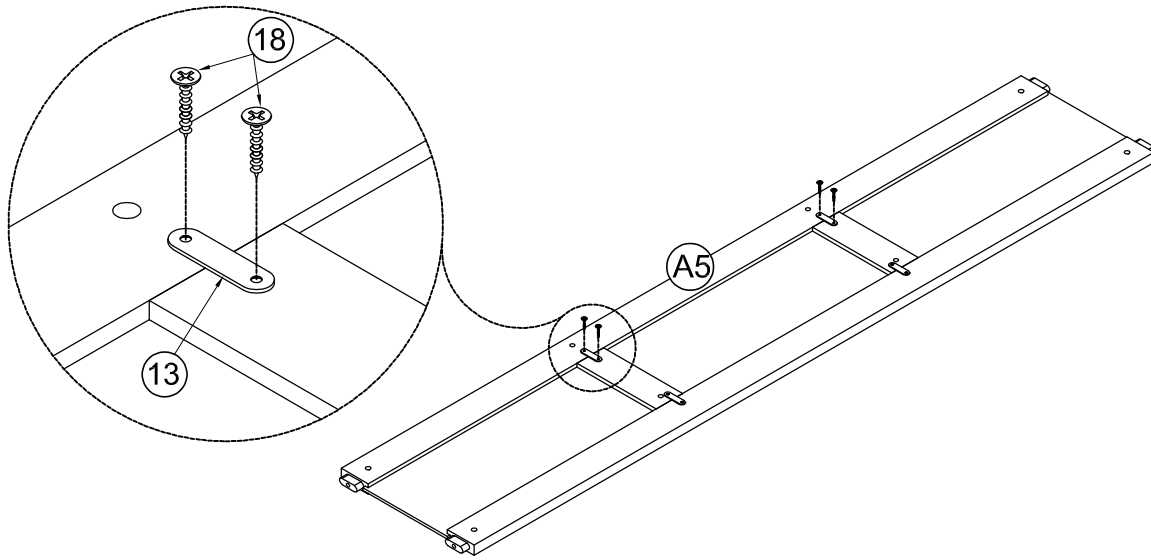

13




2(pcs)

18




4(pcs)

STEP11: Following below illustration.

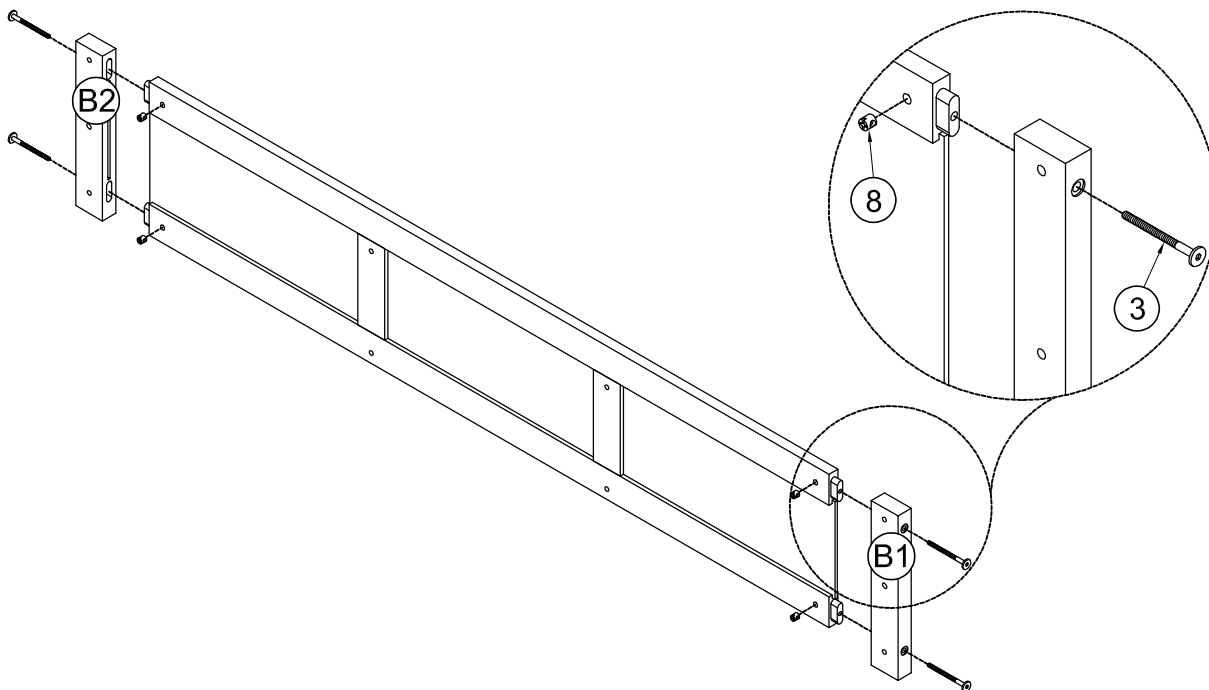

3

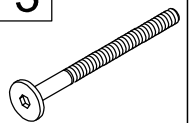


4(pcs)

8




4(pcs)

STEP12: Following below illustration.

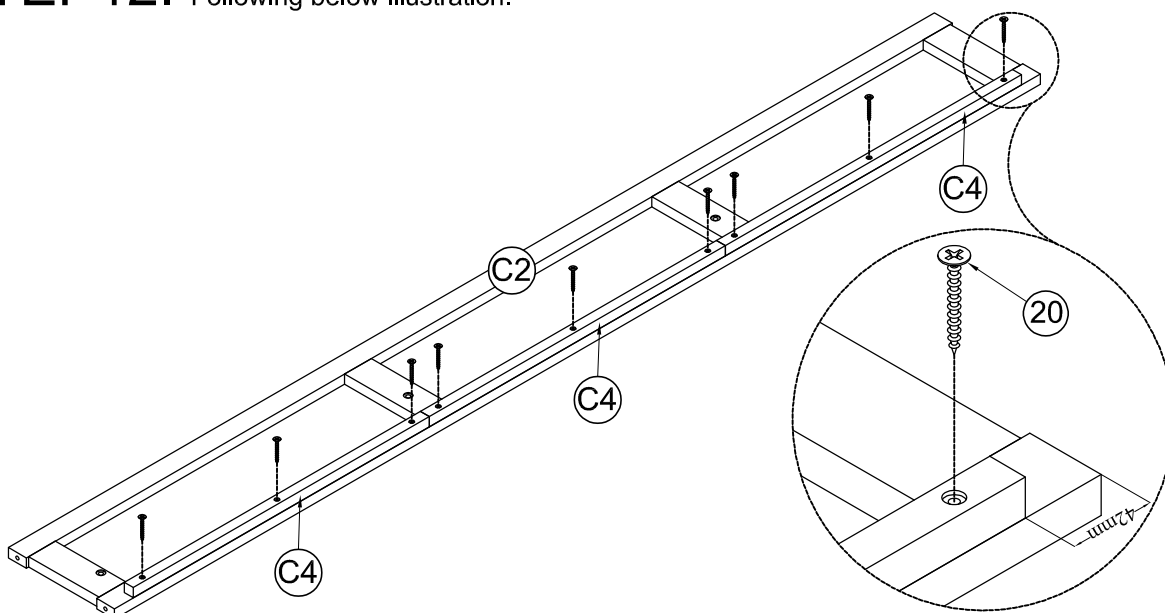




20





9(pcs)


STEP13: Following below illustration.

15		6	
3(pcs)		6(pcs)	

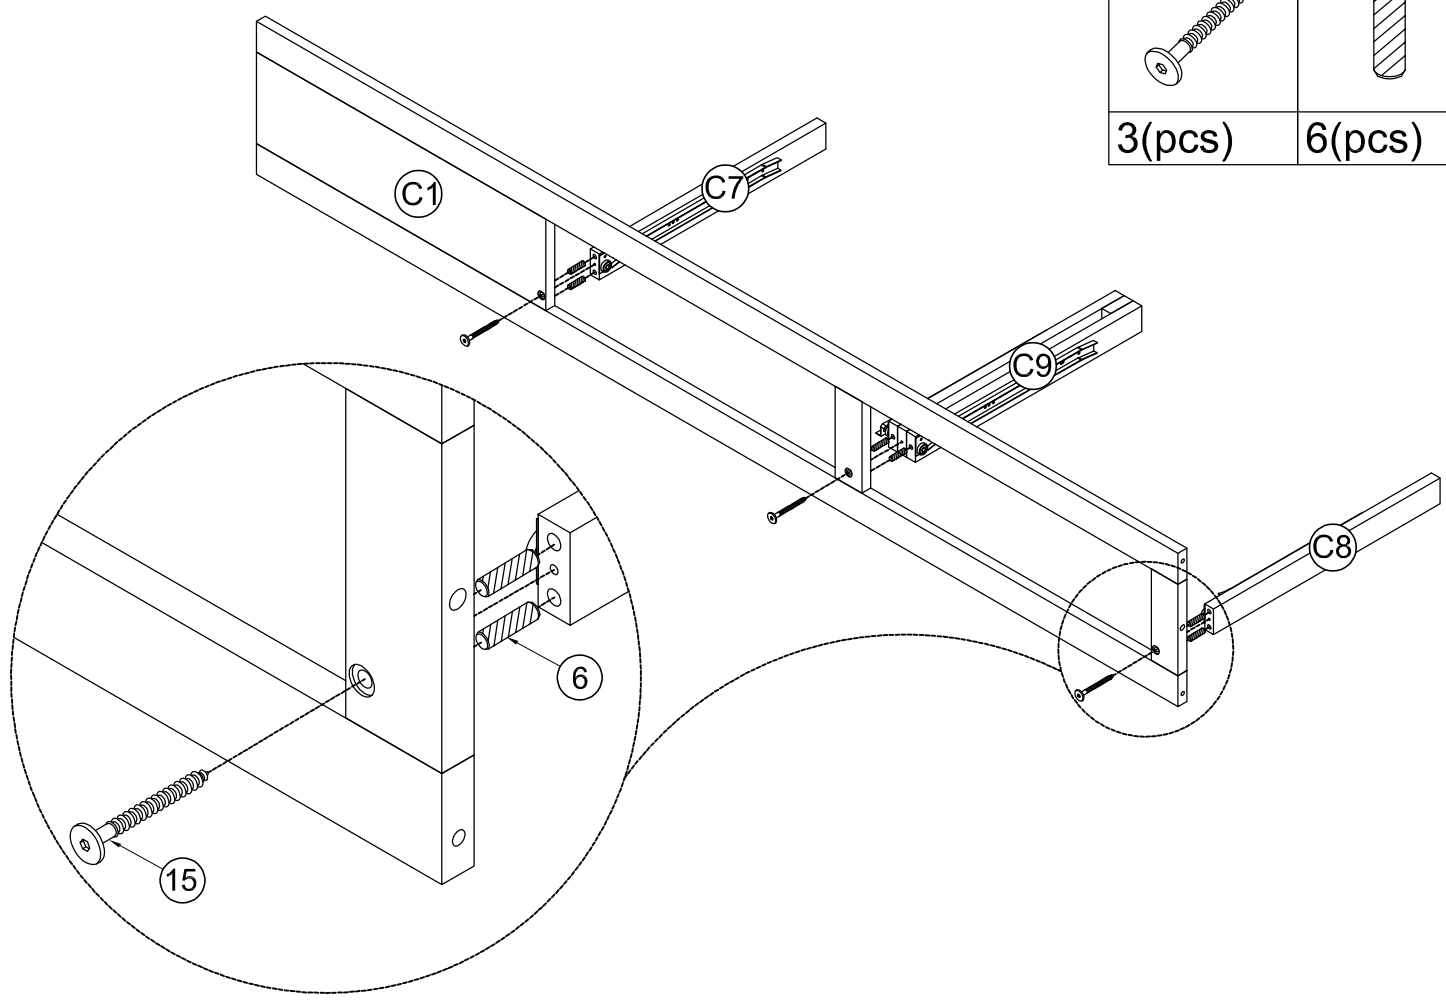


STEP14: Following below illustration.

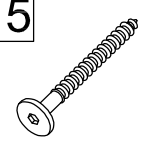
15		6	
3(pcs)		6(pcs)	

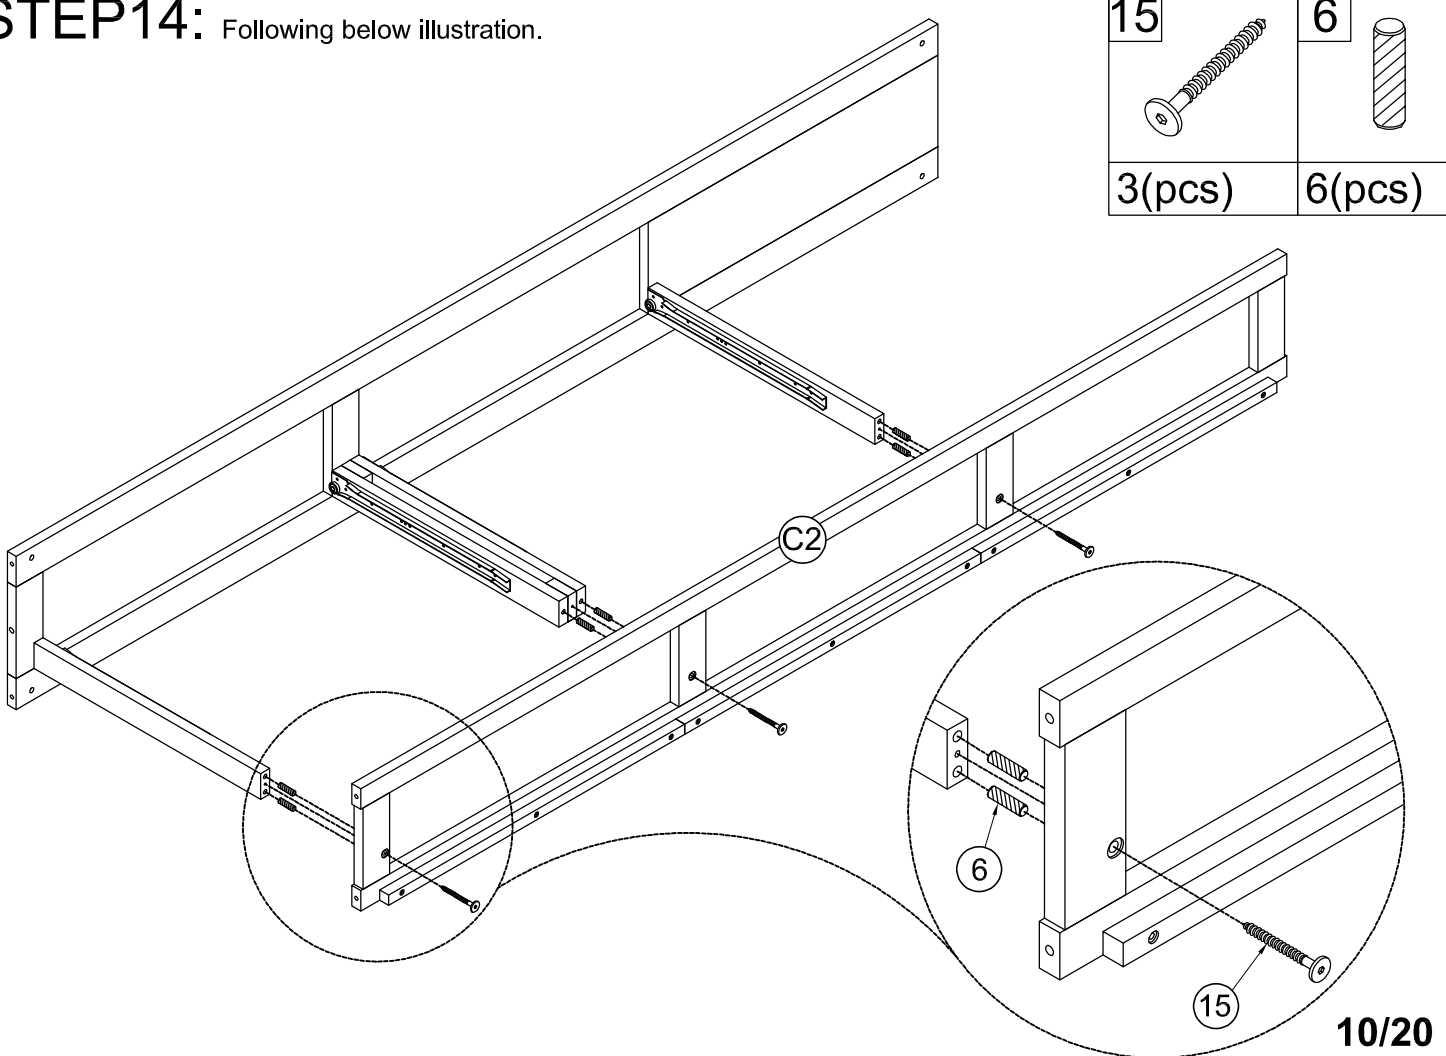


STEP15: Following below illustration.

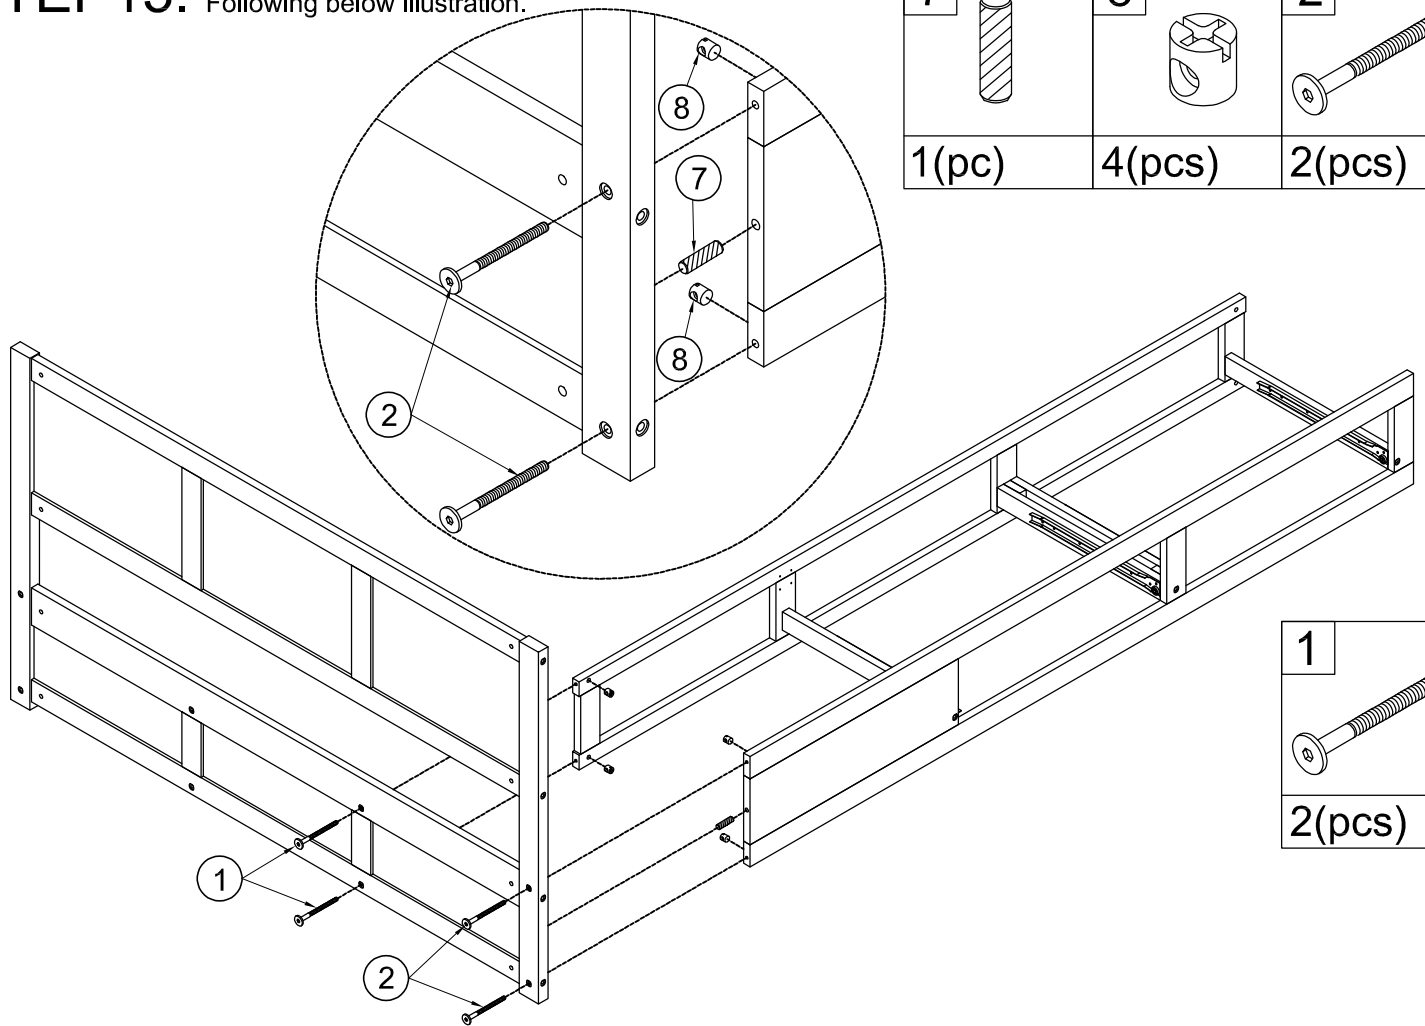

STEP16: Following below illustration.

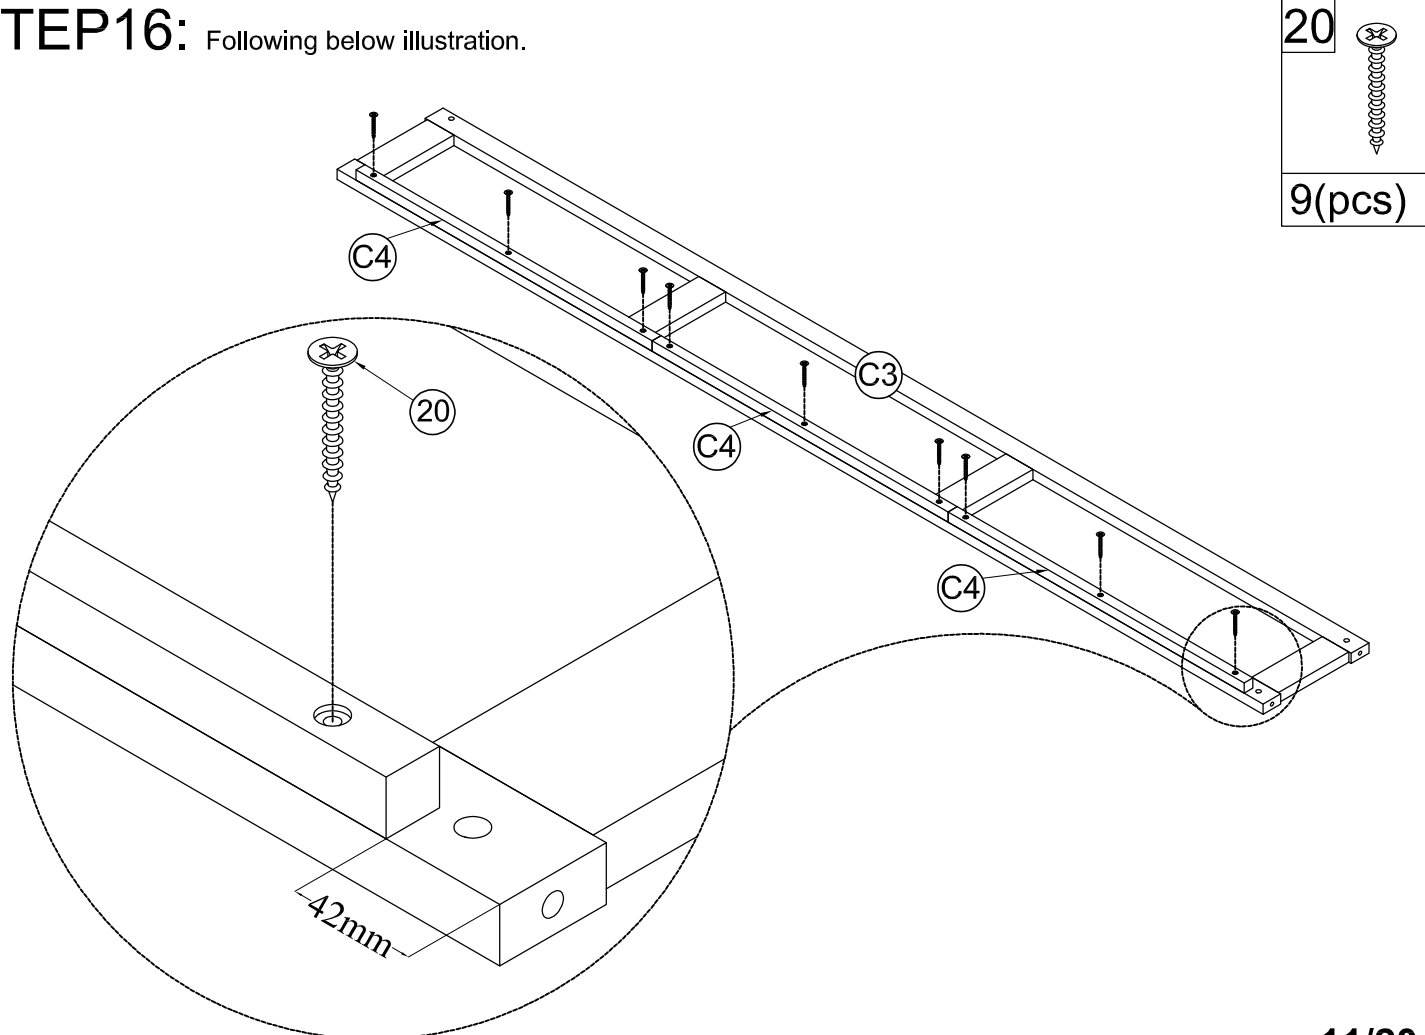


STEP17: Following below illustration.

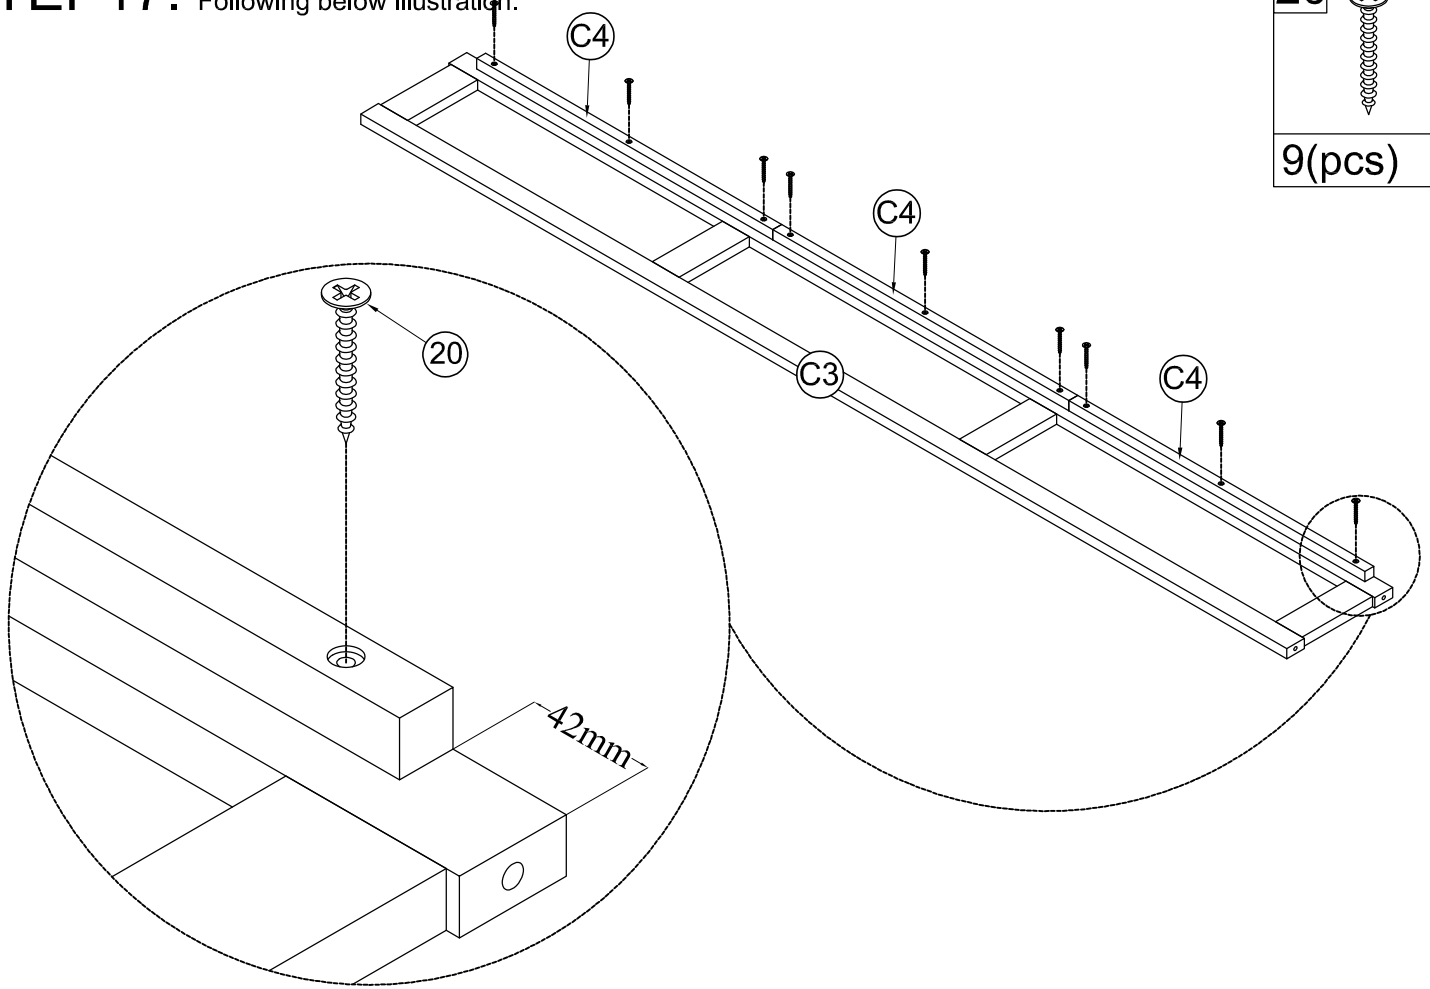



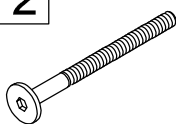
20
9(pcs)


STEP18: Following below illustration.

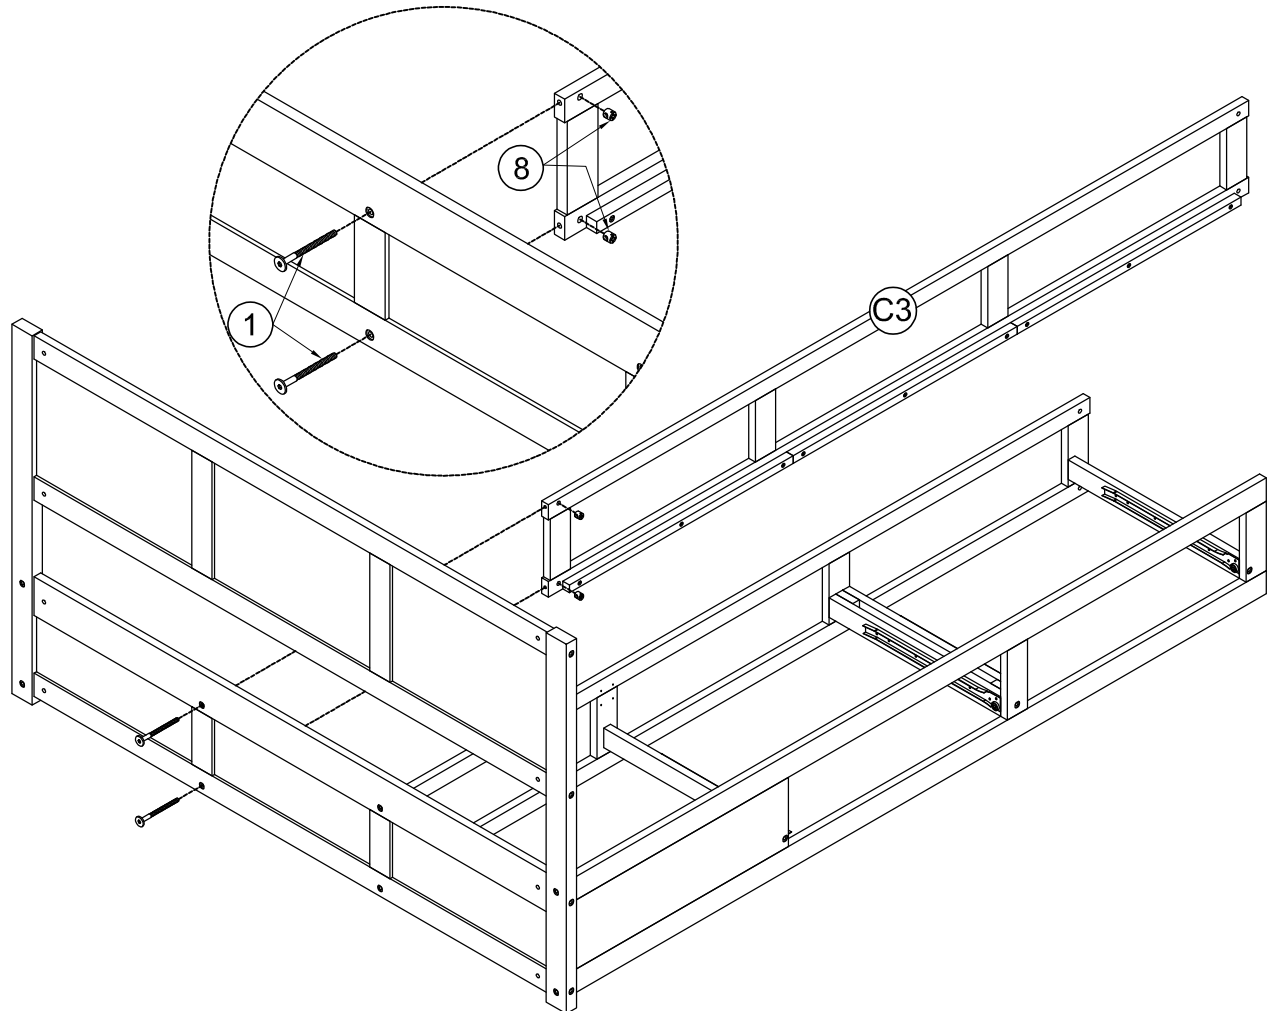





1
2(pcs)
8
2(pcs)


STEP19: Following below illustration.

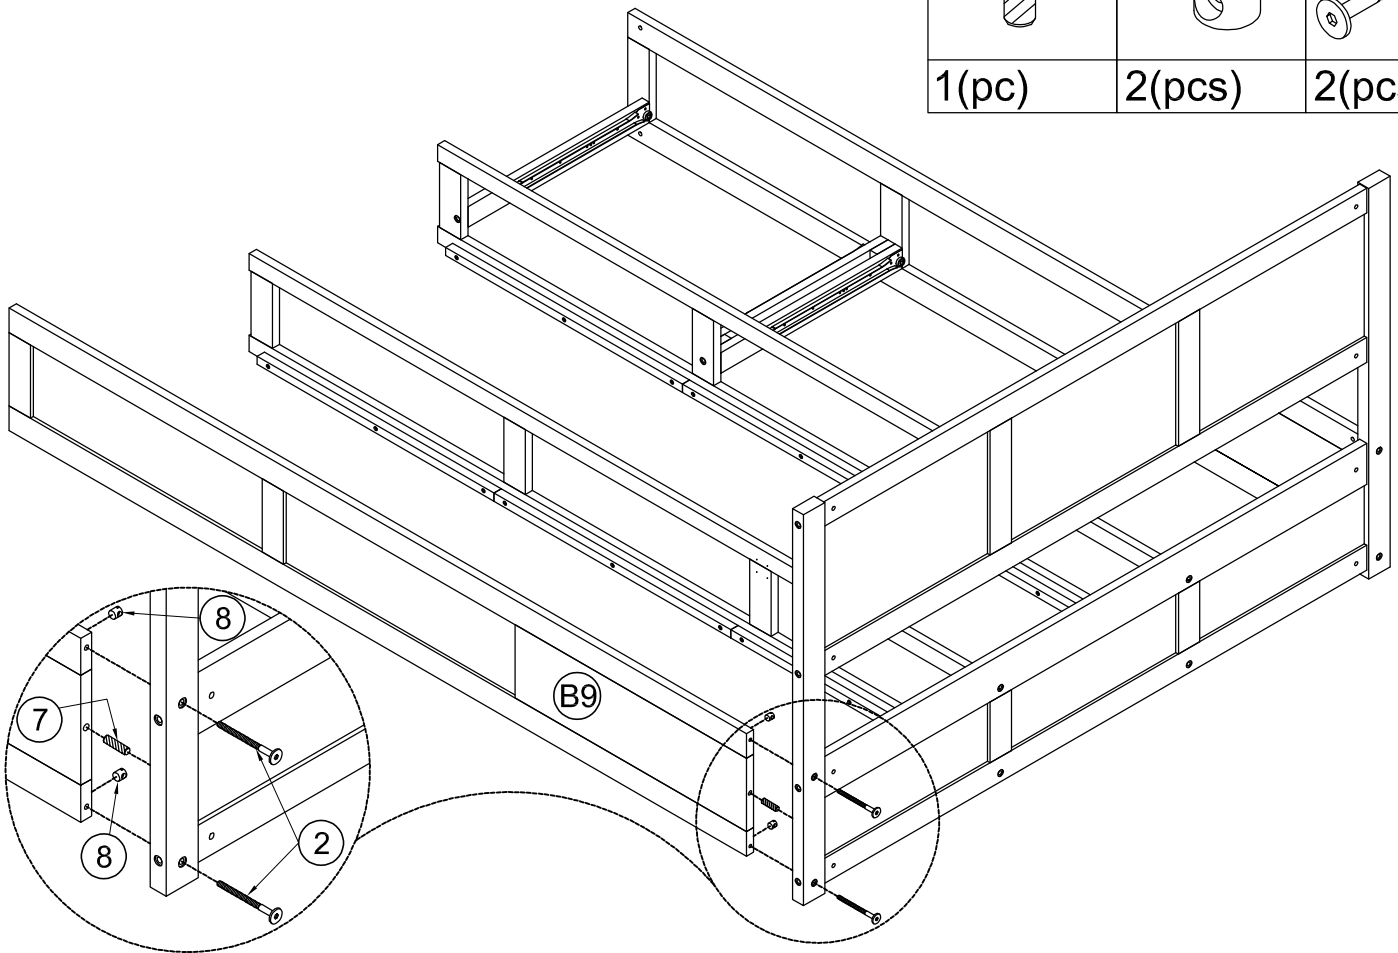7		8		2	
1(pc)		2(pcs)		2(pcs)	

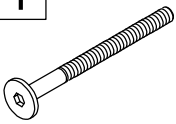


STEP20: Following below illustration.

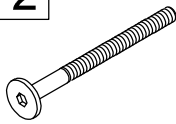1		7		8		2	
4(pcs)		2(pcs)		8(pcs)		4(pcs)	

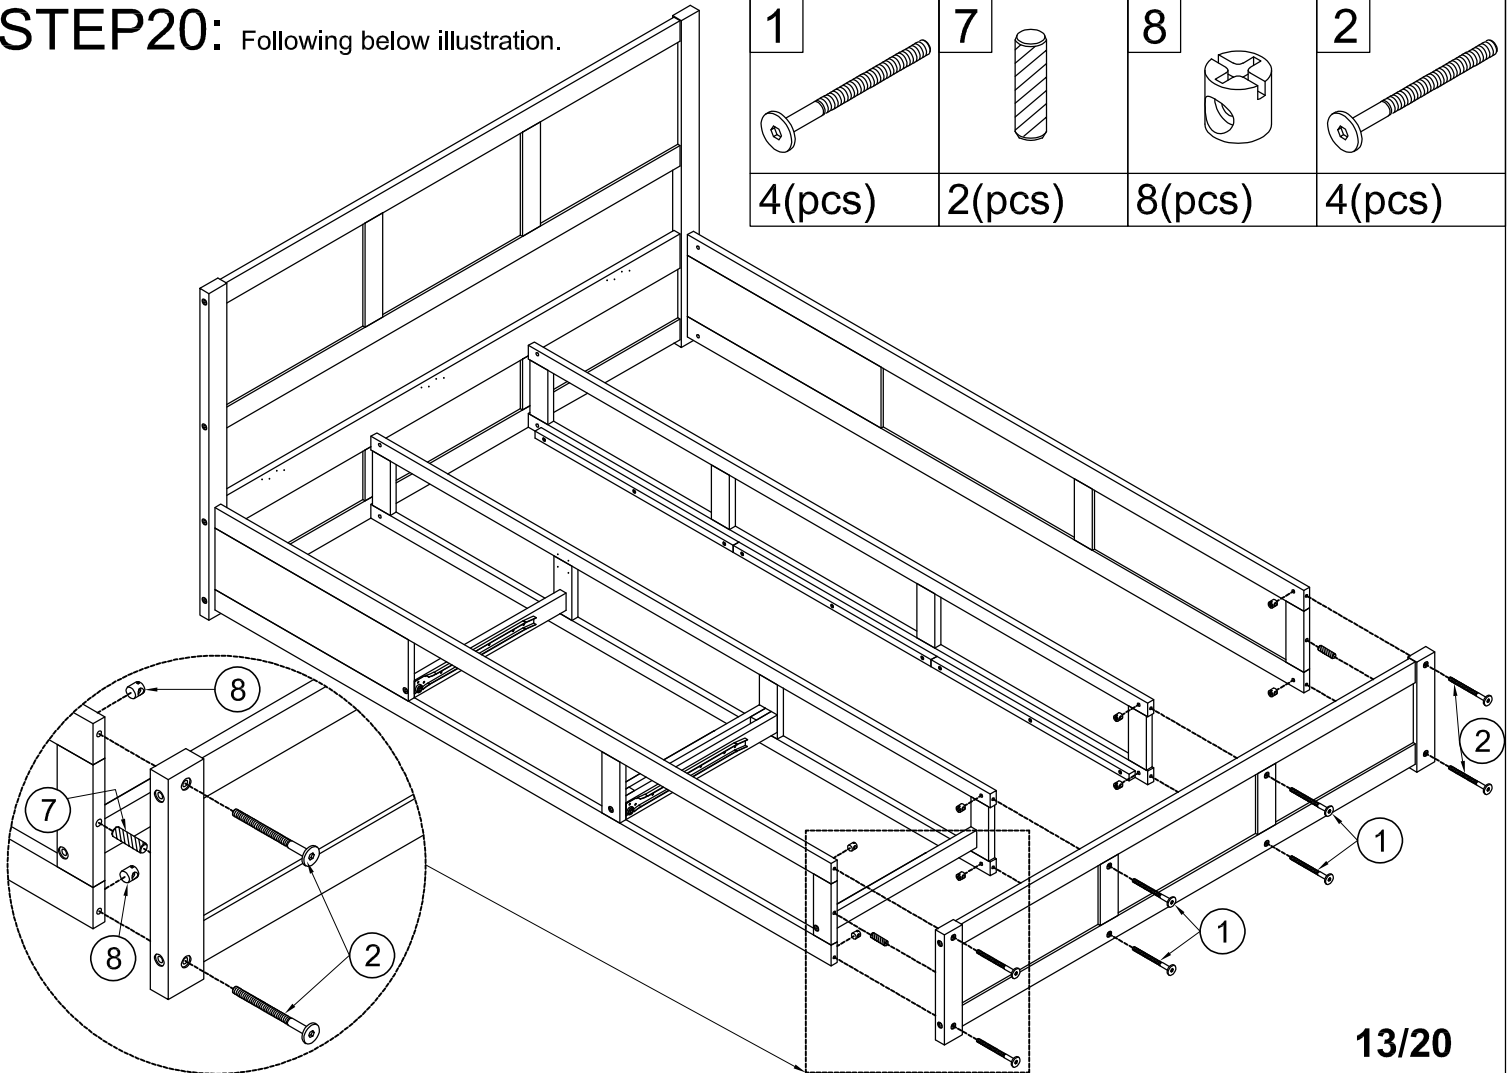


STEP21: Following below illustration.

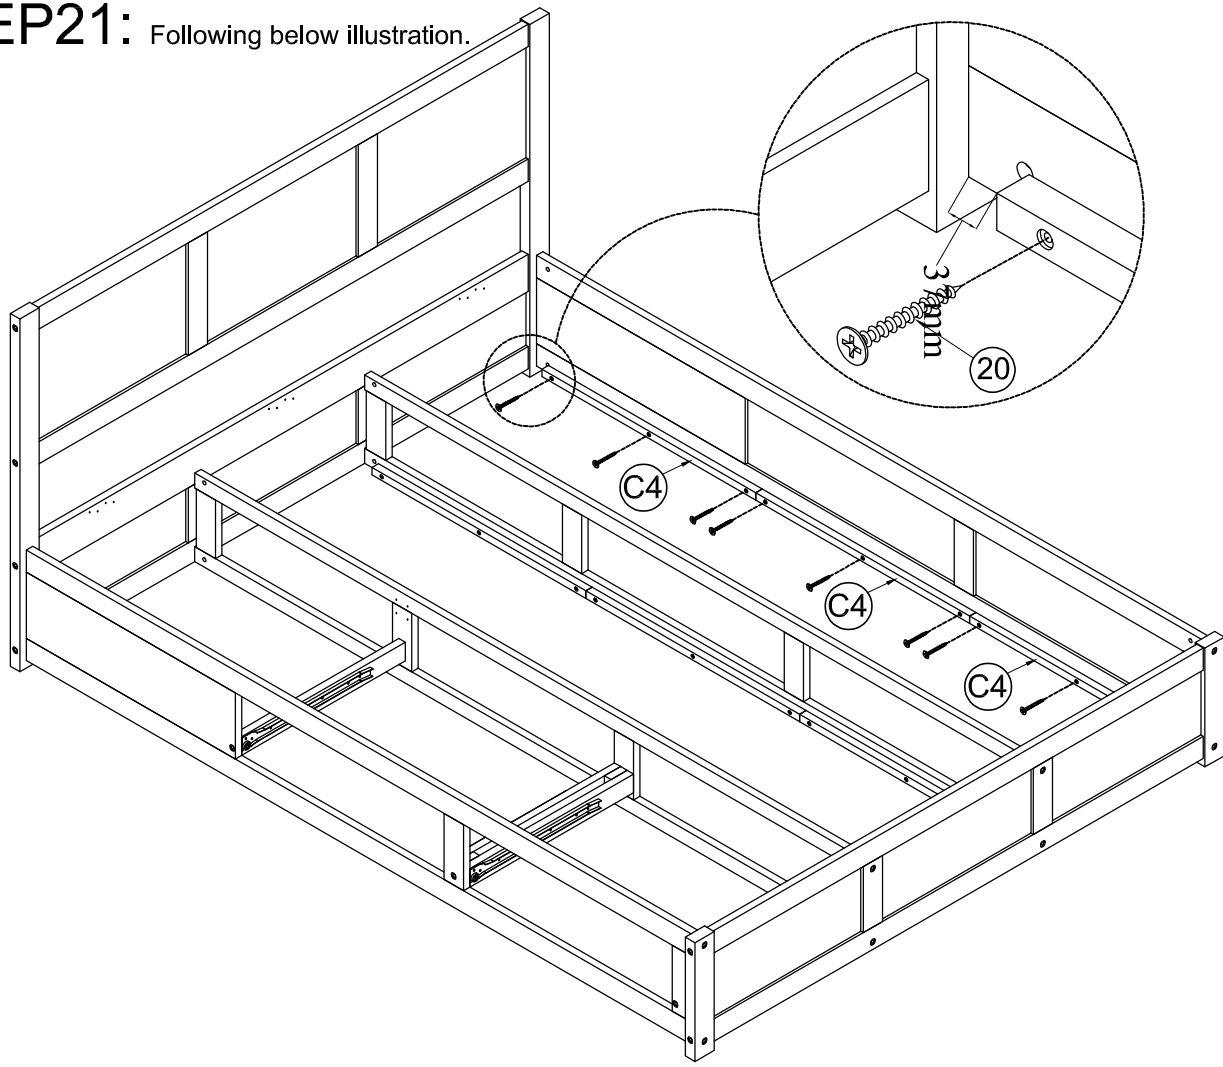



20
9(pcs)



STEP22: Following below illustration.

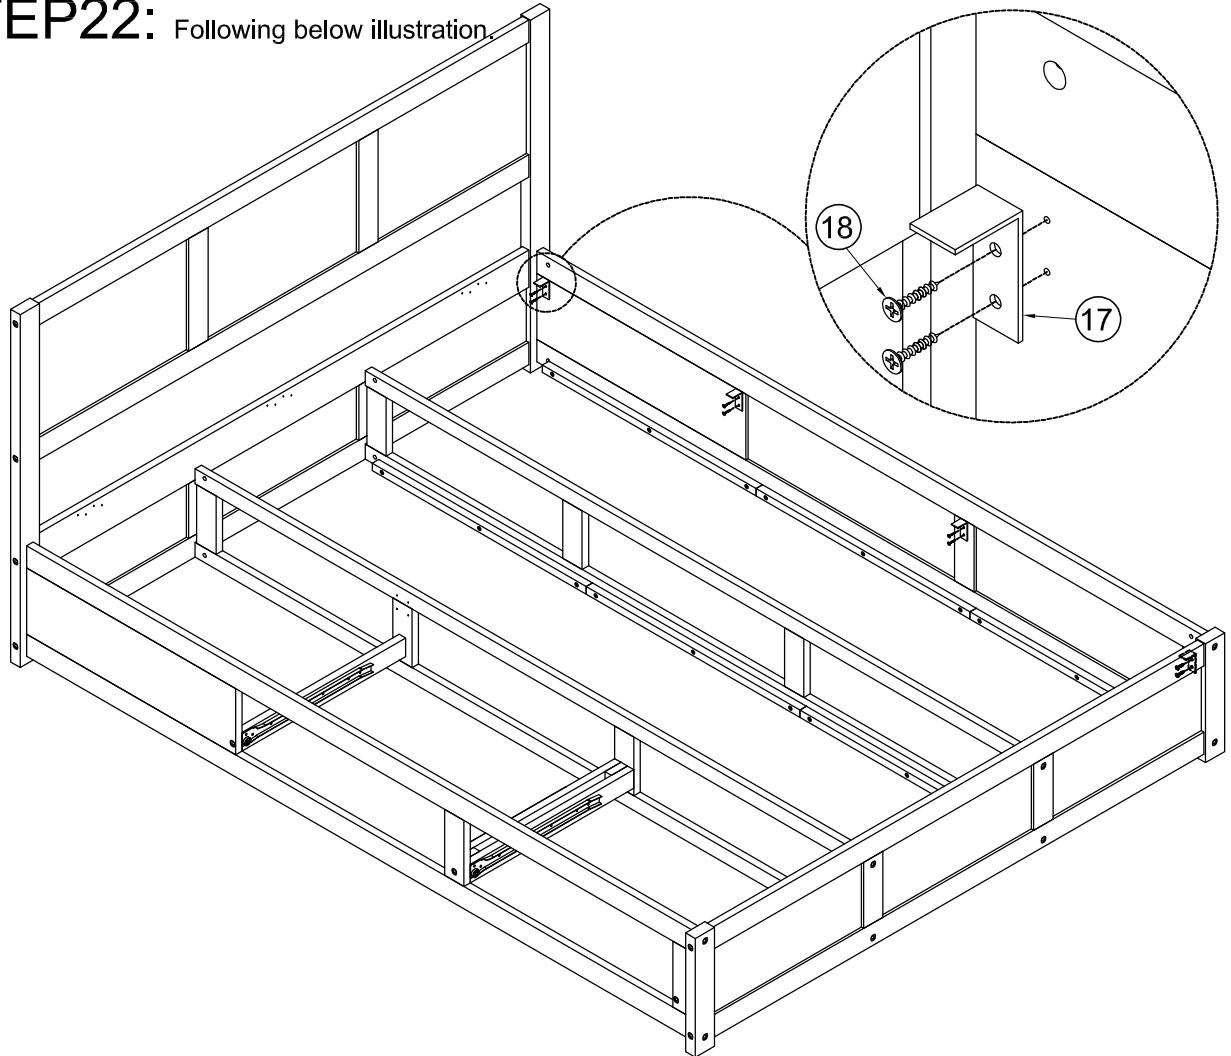



18
8(pcs)
17
4(pcs)


STEP23: Following below illustration.

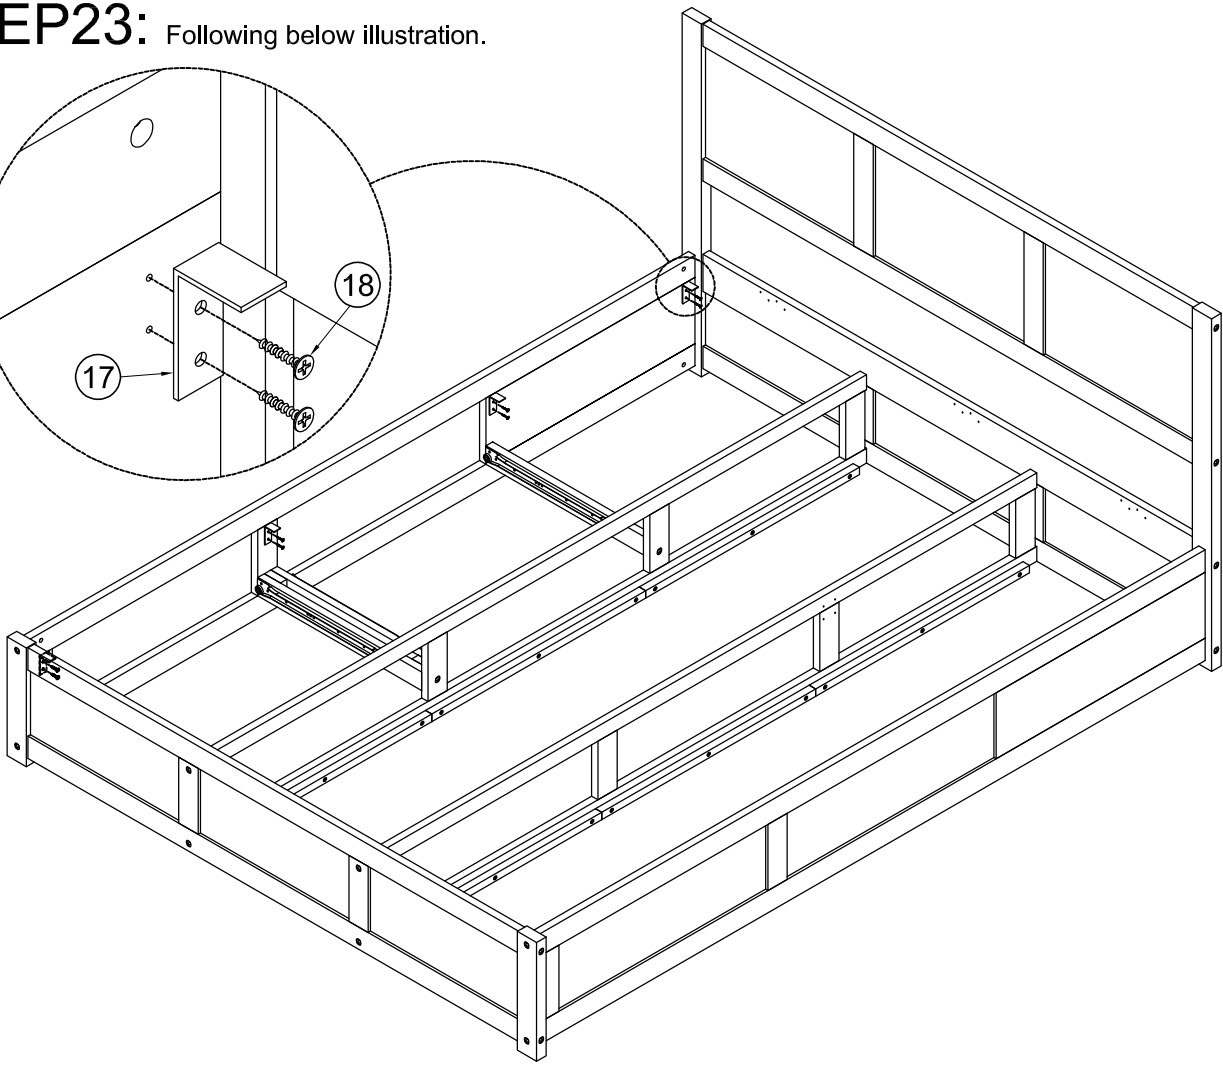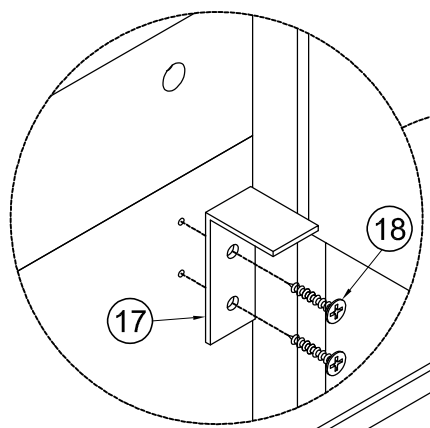


- 18 
- 8(pcs)
- 17 
- 4(pcs)

STEP24: Following below illustration

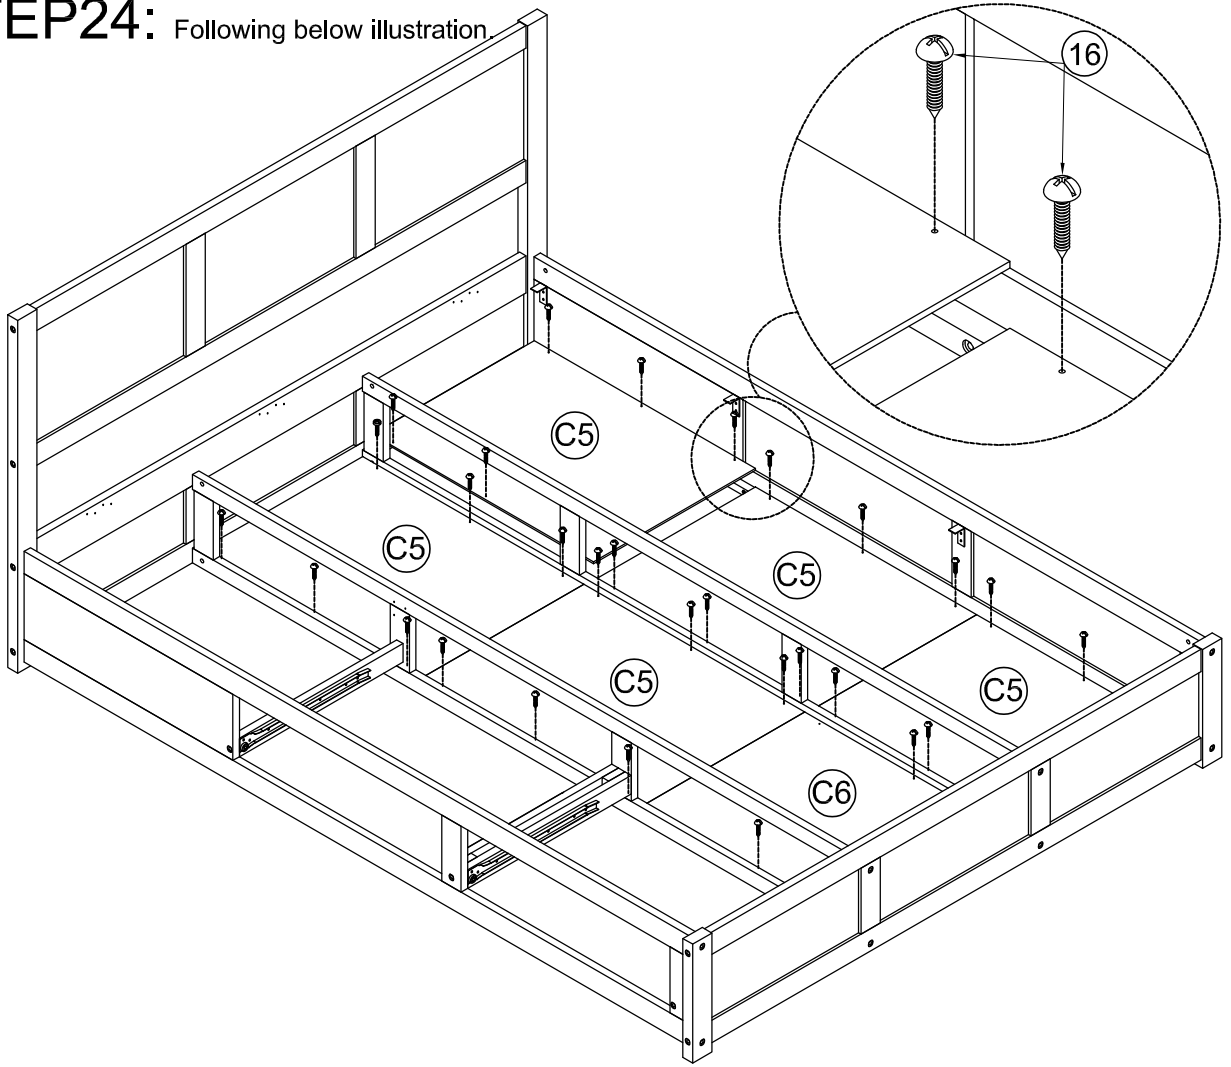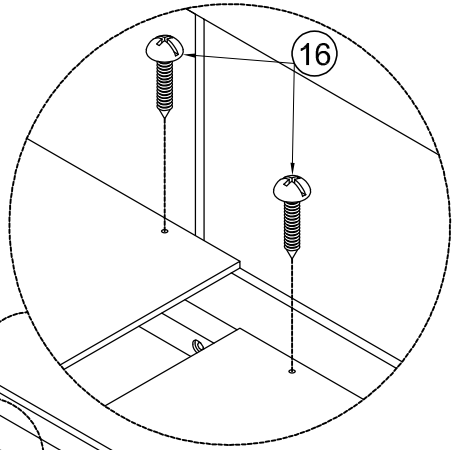


- 16 
- 36(pcs)

STEP25: Following below illustration.

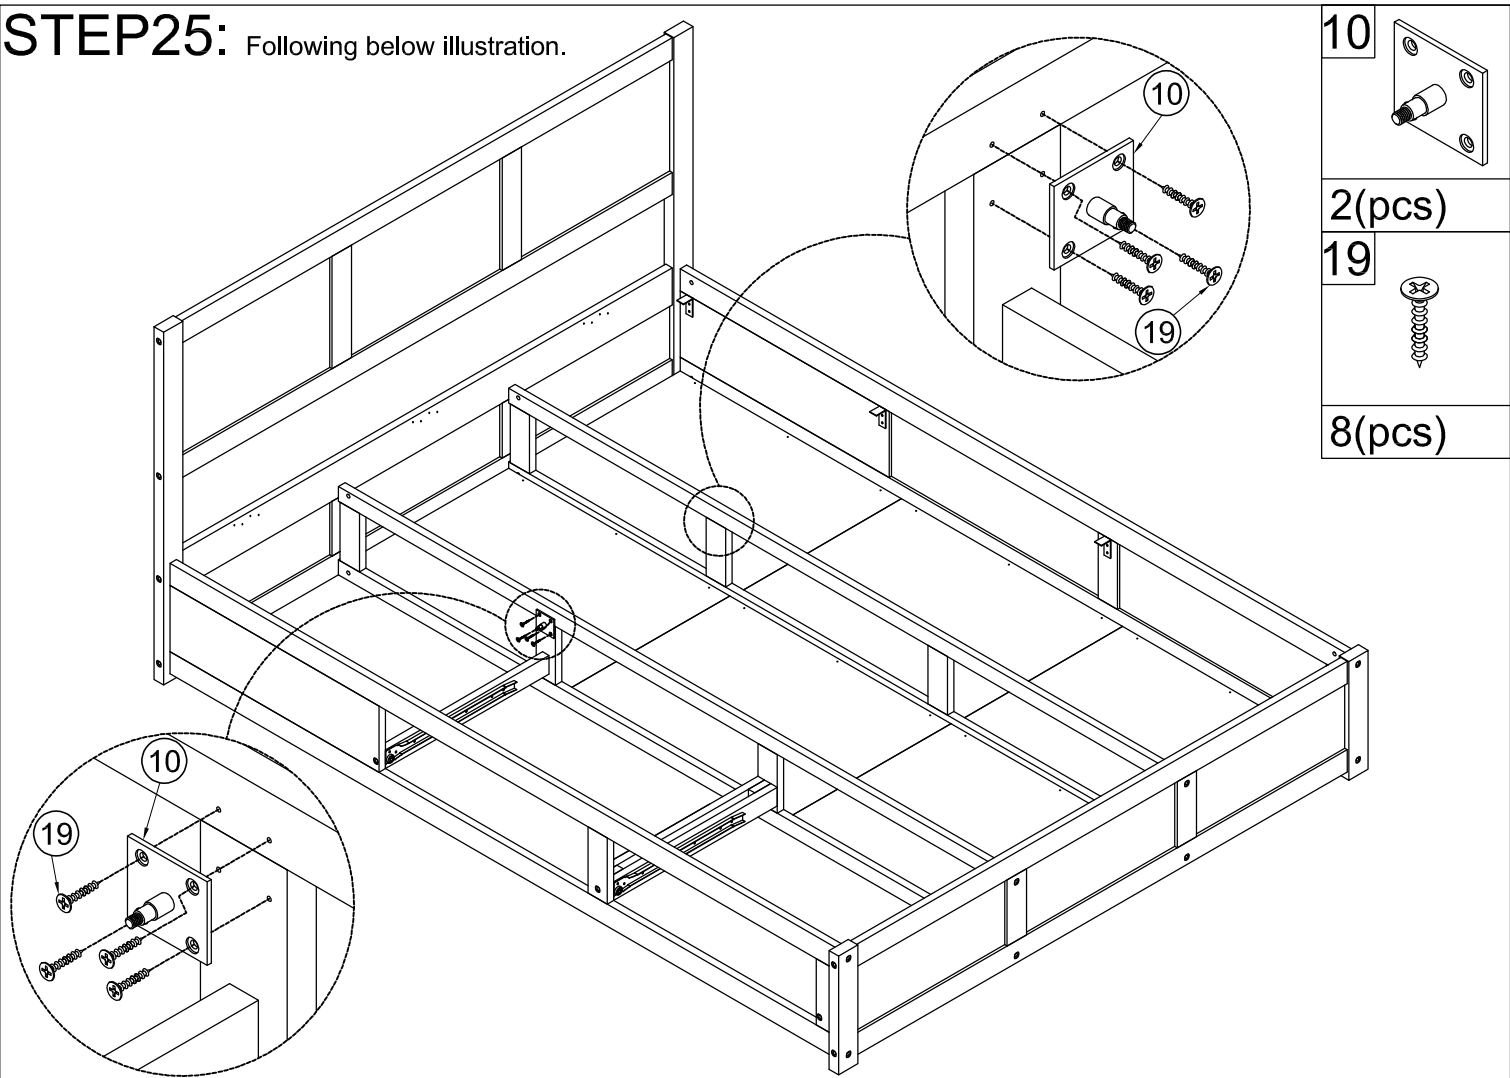


10	
2(pcs)	
19	
8(pcs)	


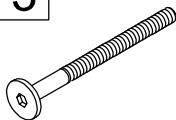
STEP26: Following below illustration.

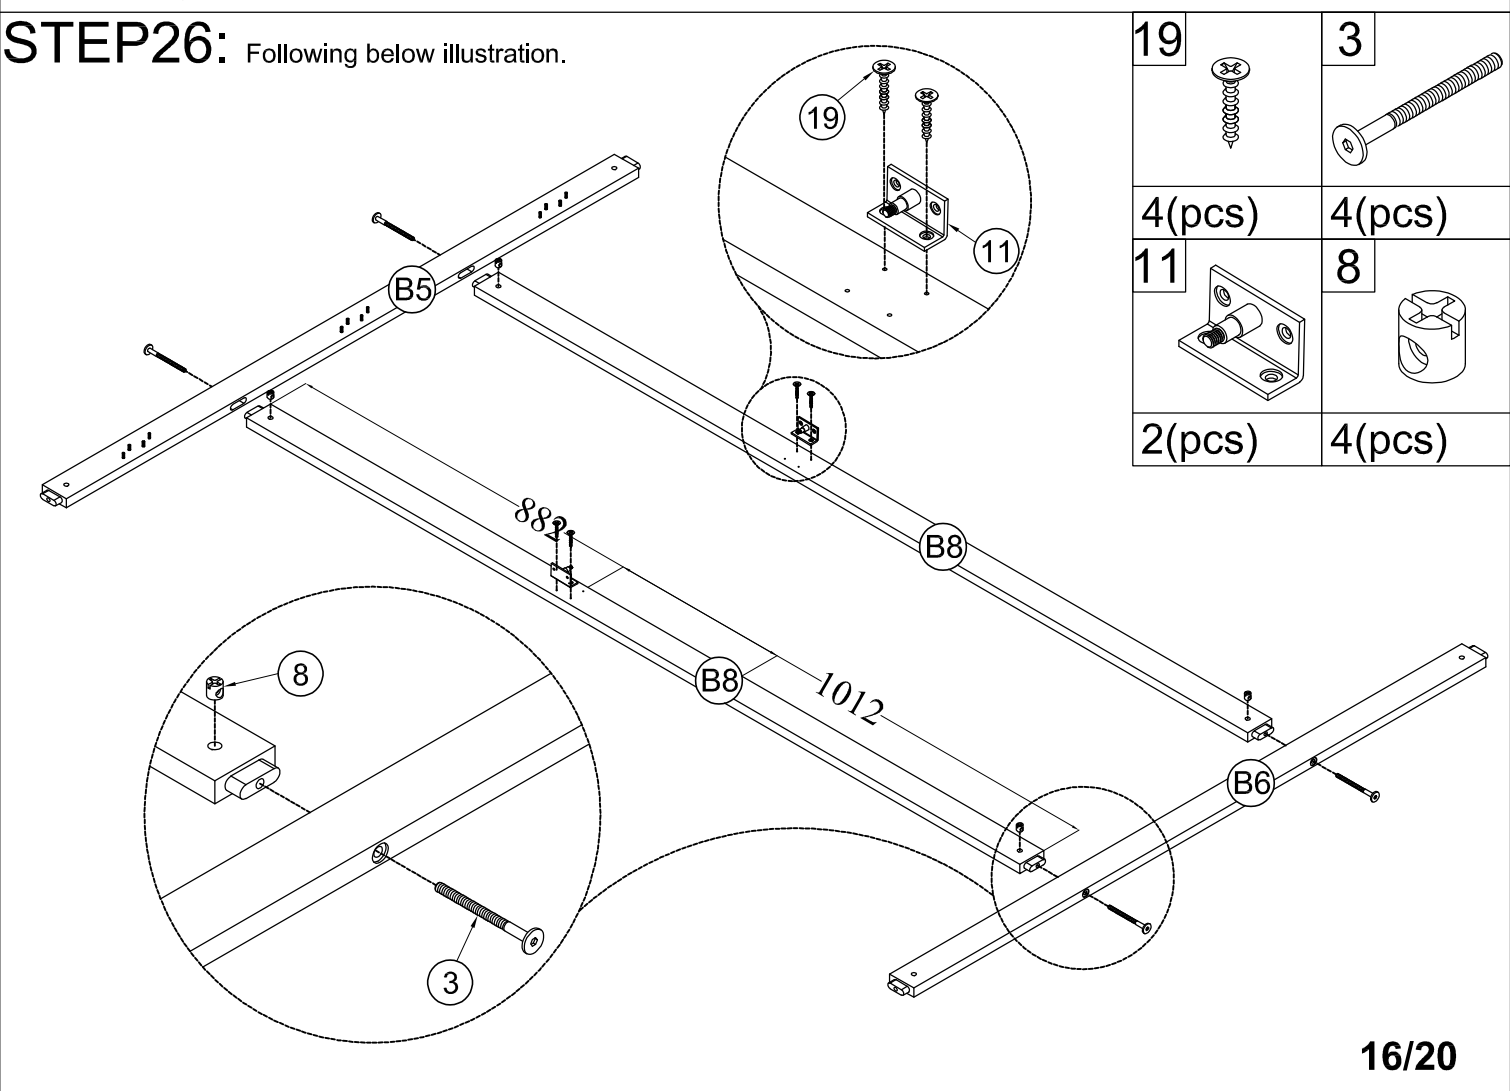


19		3	
4(pcs)		4(pcs)	
11		8	
2(pcs)		4(pcs)	



STEP27: Following below illustration.

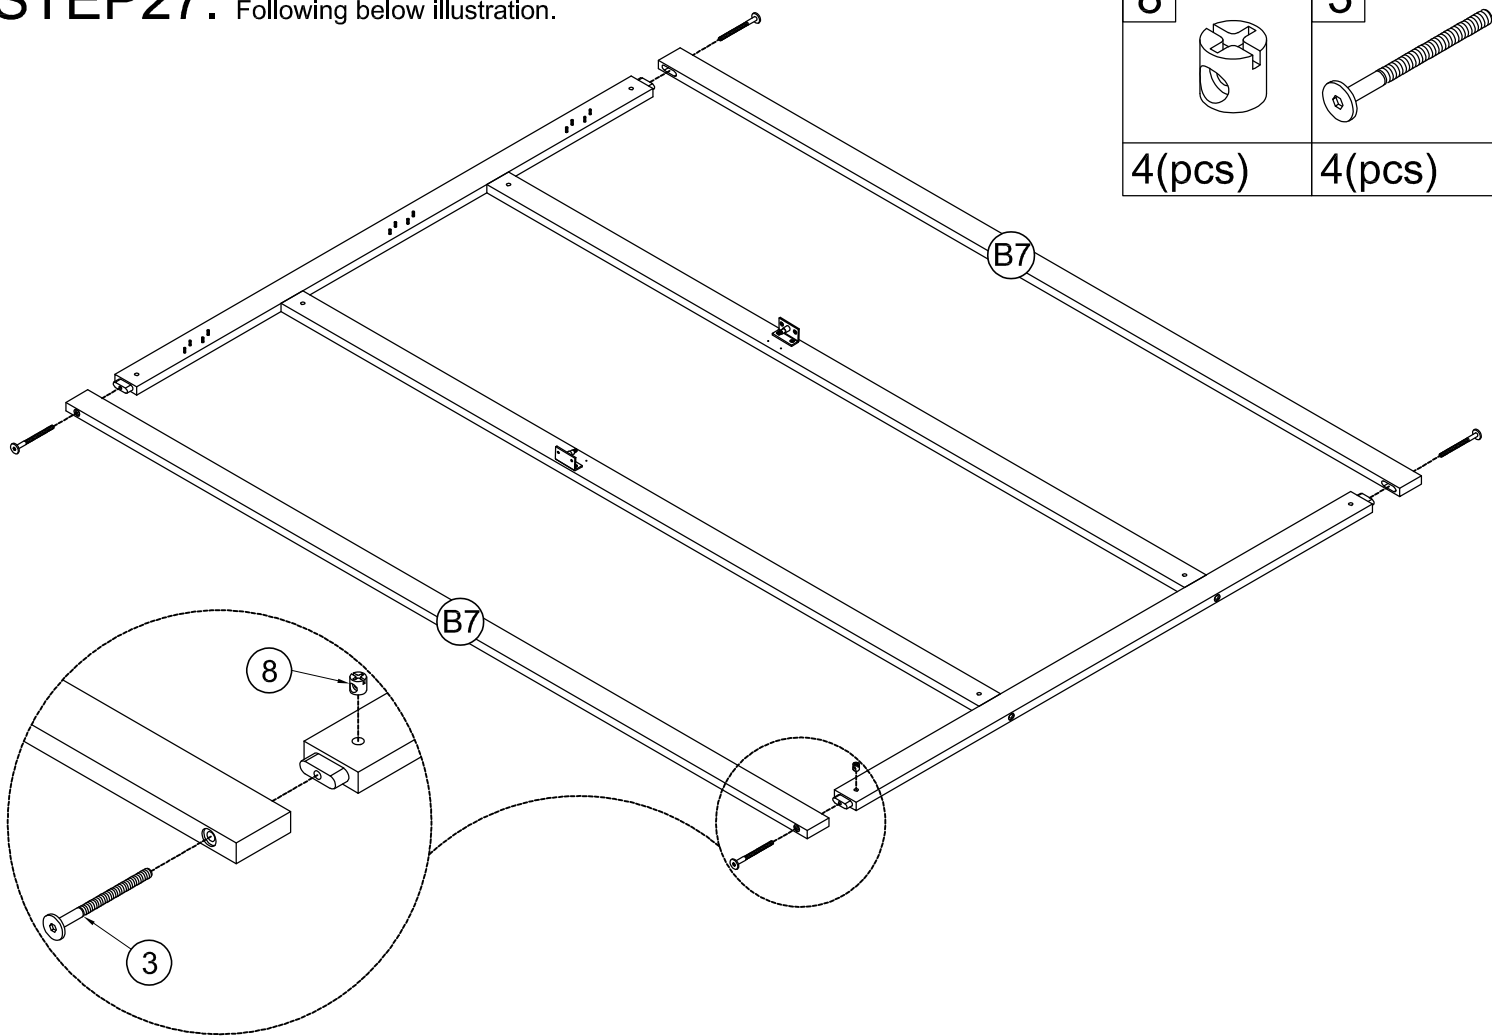


8		3	
4(pcs)		4(pcs)	

STEP28: Following below illustration.

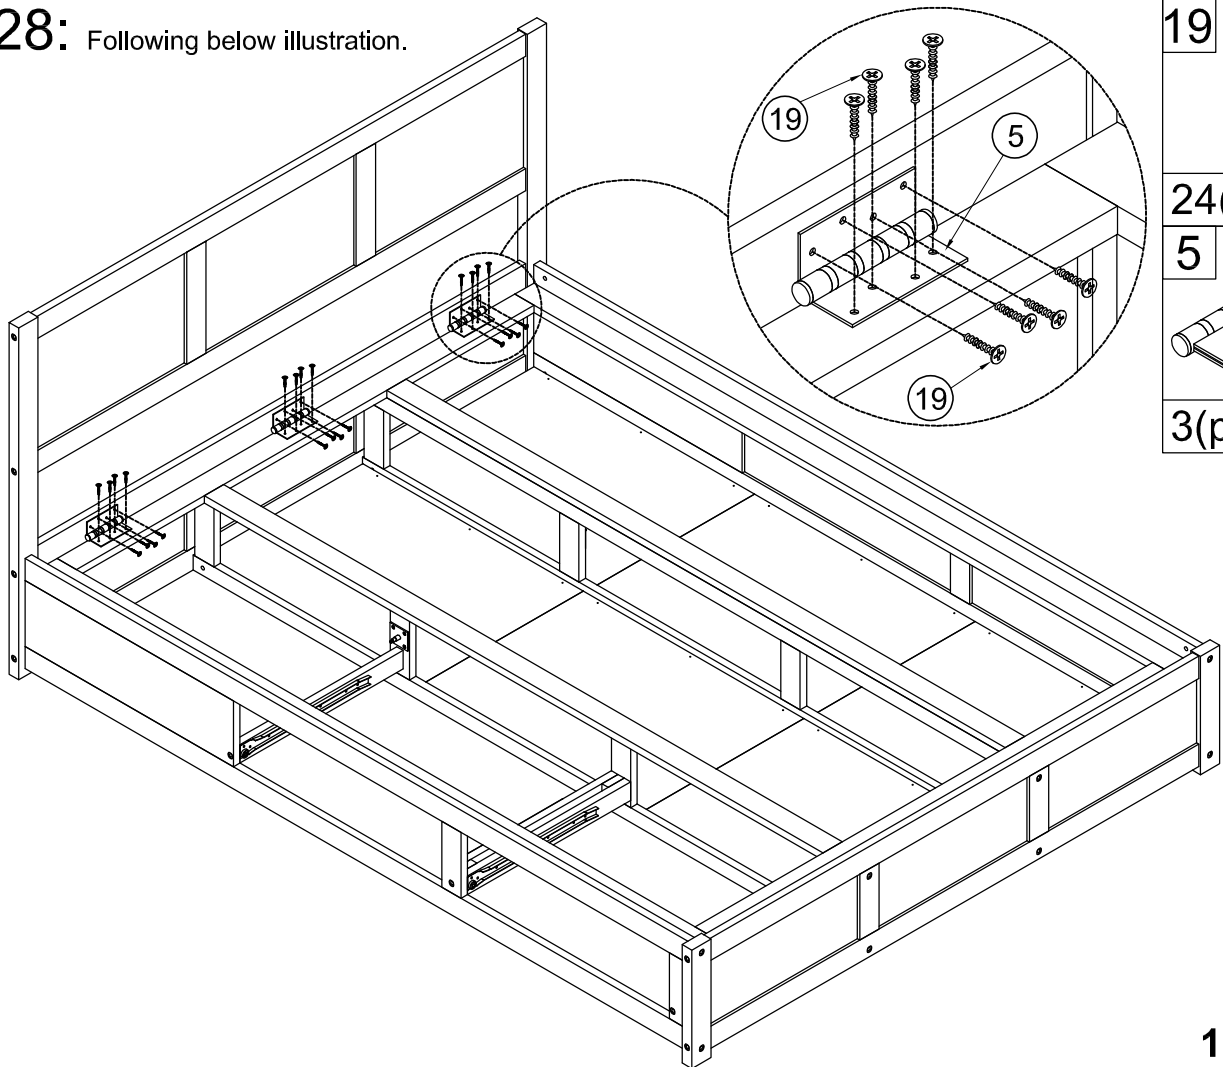


19	
24(pcs)	
5	
3(pcs)	


STEP29: Following below illustration.

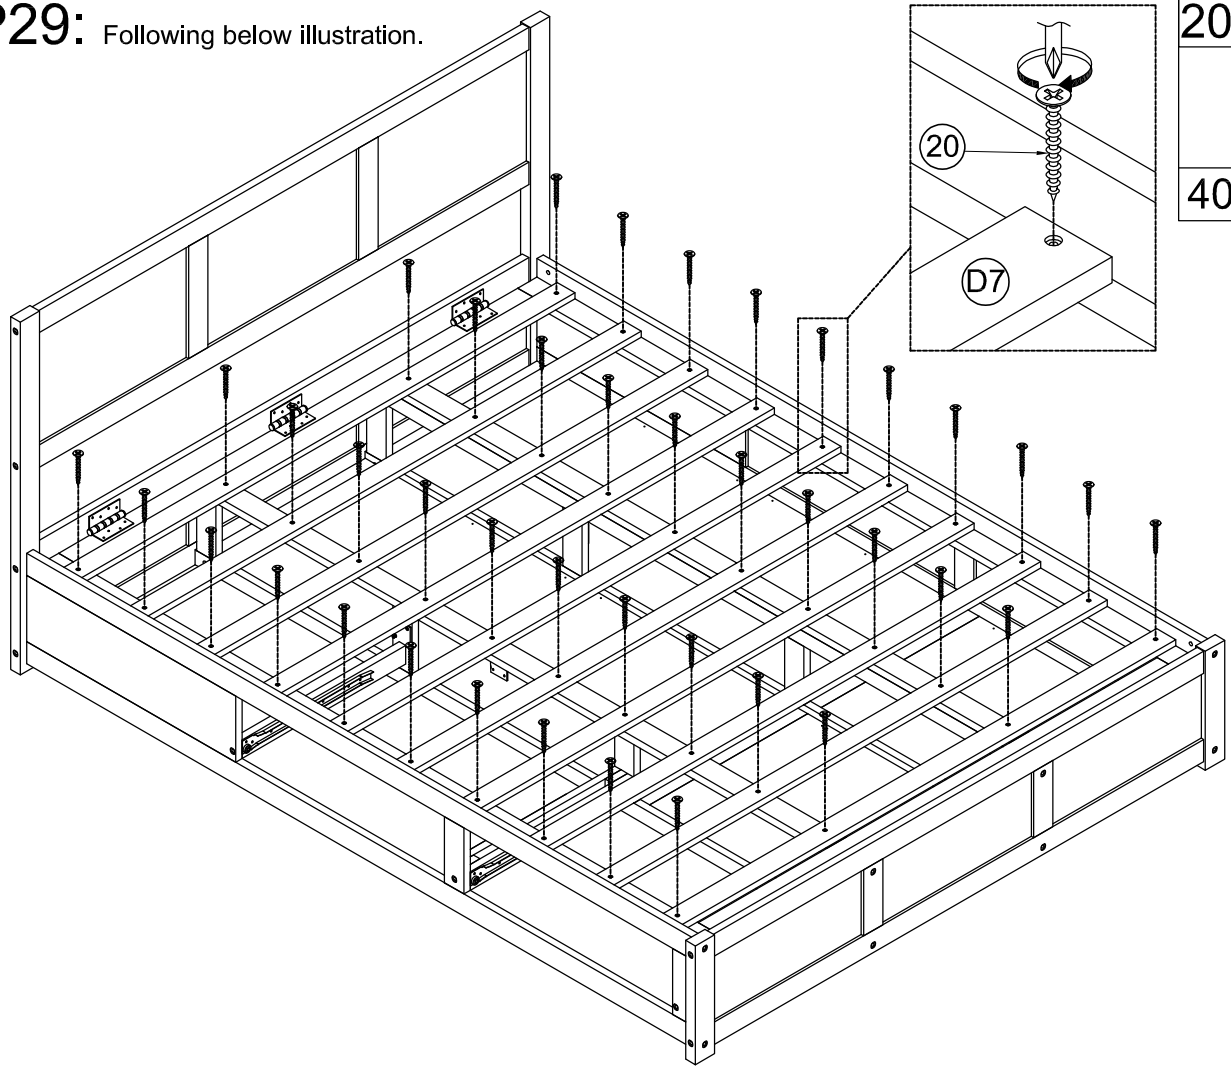

20
40(pcs)

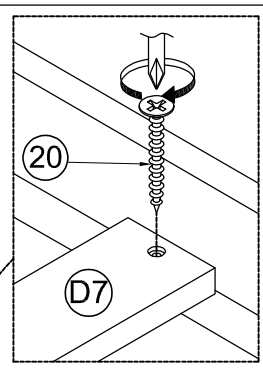


STEP30: Following below illustration.



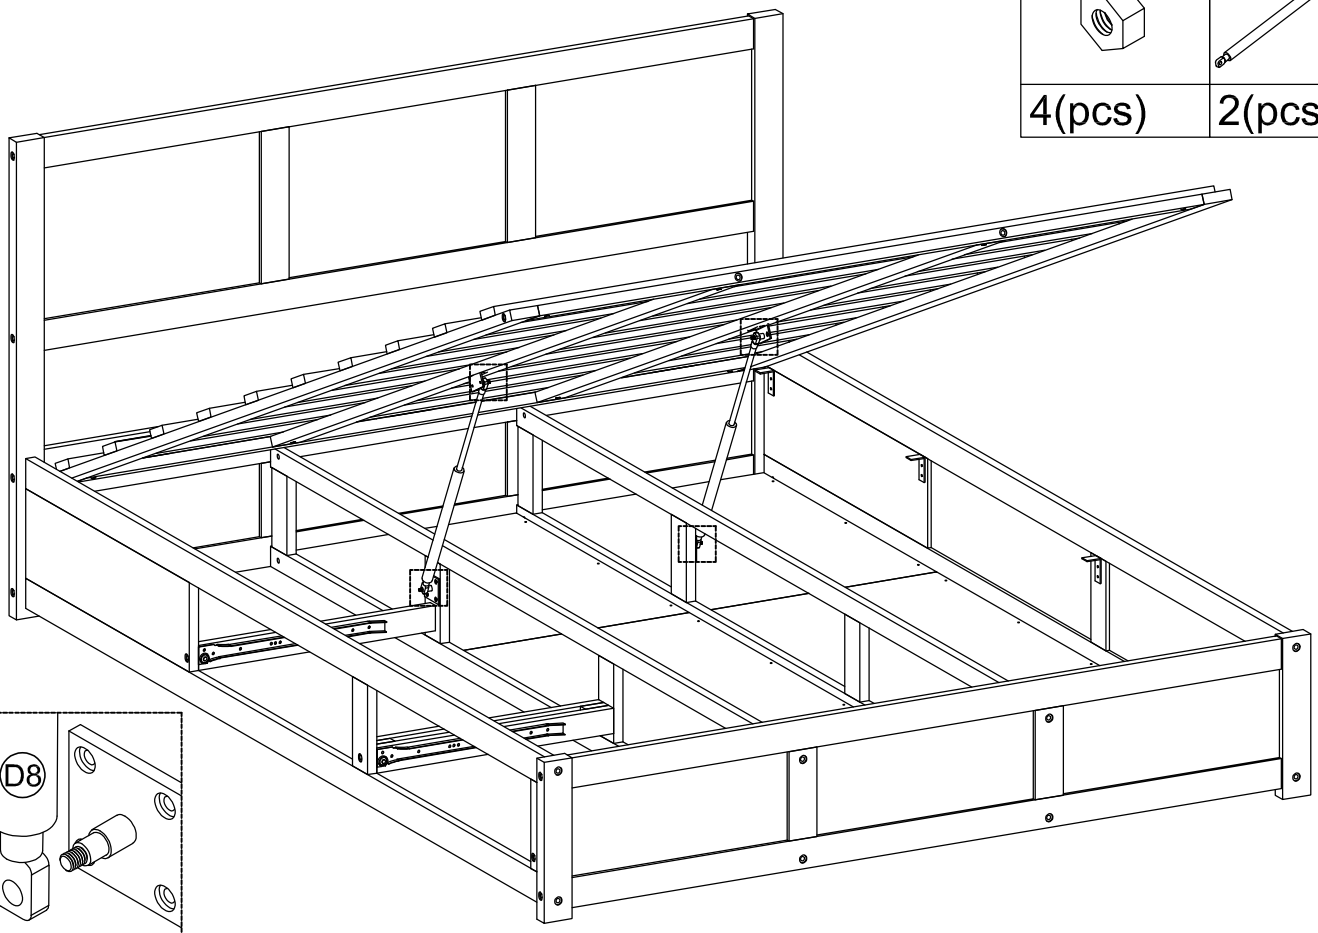



12
4(pcs)

D8
2(pcs)

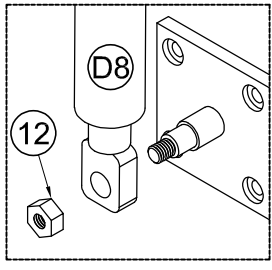



STEP31: Following below illustration.

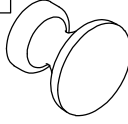4 	9 	20 
2(pcs)	2(pcs)	8(pcs)

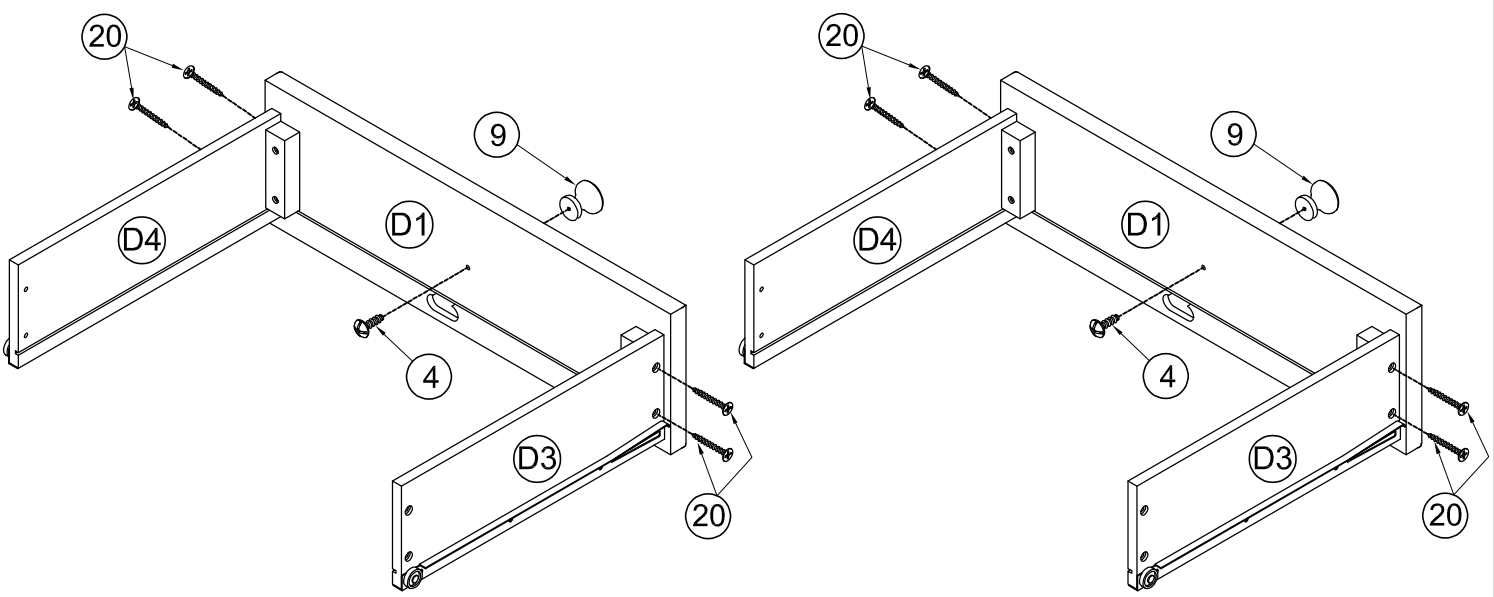

STEP32: Following below illustration.

20 
10(pcs)

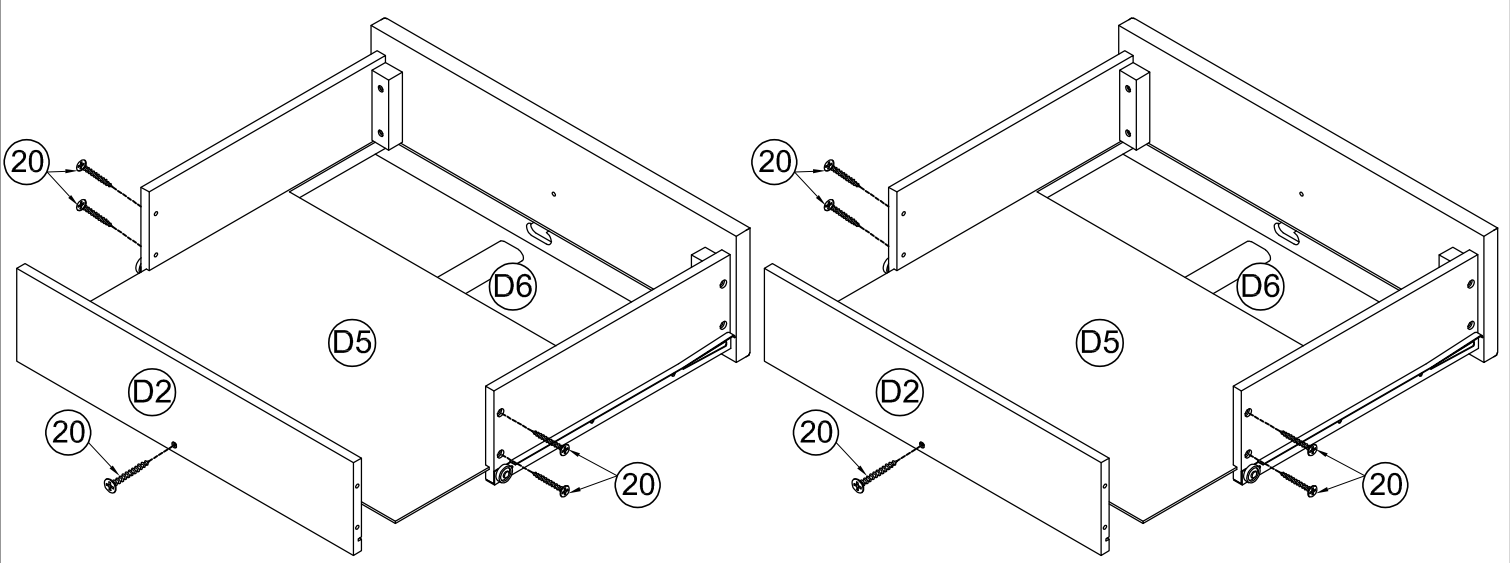

STEP33: Following below illustration.

