



1 ×2pcs 1410mm pipe



3 ×4pcs 970mm pipe



6 ×5pcs 1870mm pipe



M1 ×1pcs



M2 ×1pcs 1620mm pipe



M4 ×1pcs 1675mm pipe



A ×4pcs



D ×2pcs



B ×1pcs



E ×8pcs



C ×6pcs



L ×7+1pcs



Q ×1pcs



R ×1pcs



2 ×2pcs 530mm pipe



4 ×2pcs 440mm pipe



5 ×2pcs 1108mm pipe



7 ×4pcs 1480mm pipe



M3 ×1pcs



F ×1pcs




G ×7+1pcs



H ×4+1pcs



I ×Npcs



J 25m×1



K ×Npcs






N ×1pcs Roof



O ×1pcs



Step 1

Assemble the bottom front door bracket, "Q" and "O" middle insert" 2 "as shown below.

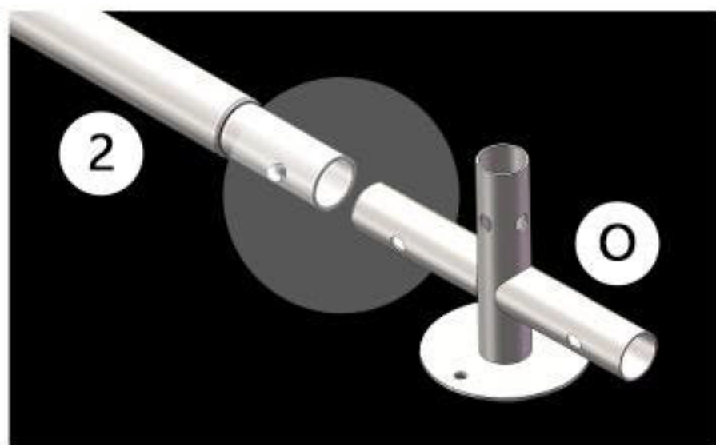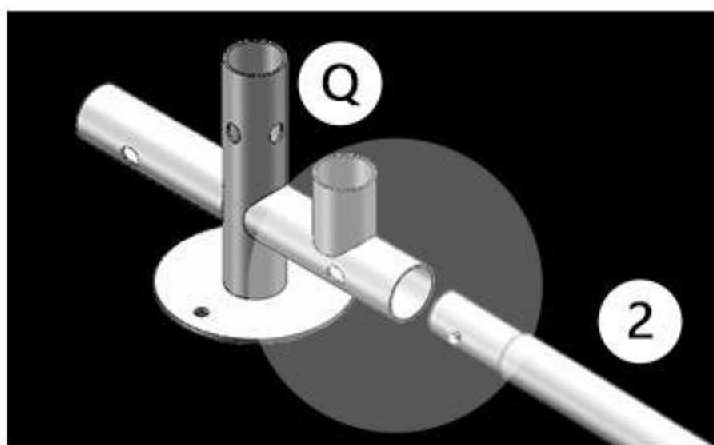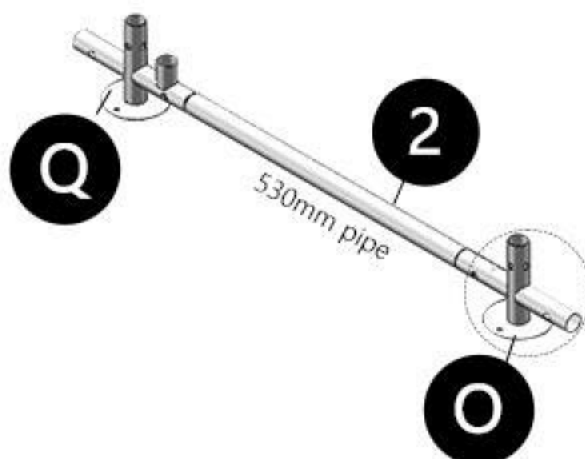



Step 2

Insert two "A" and two "5" round tubes as shown below.

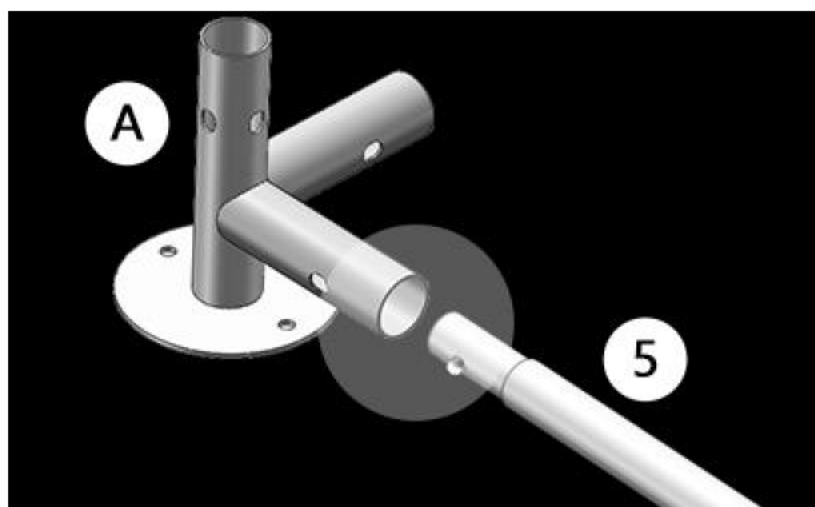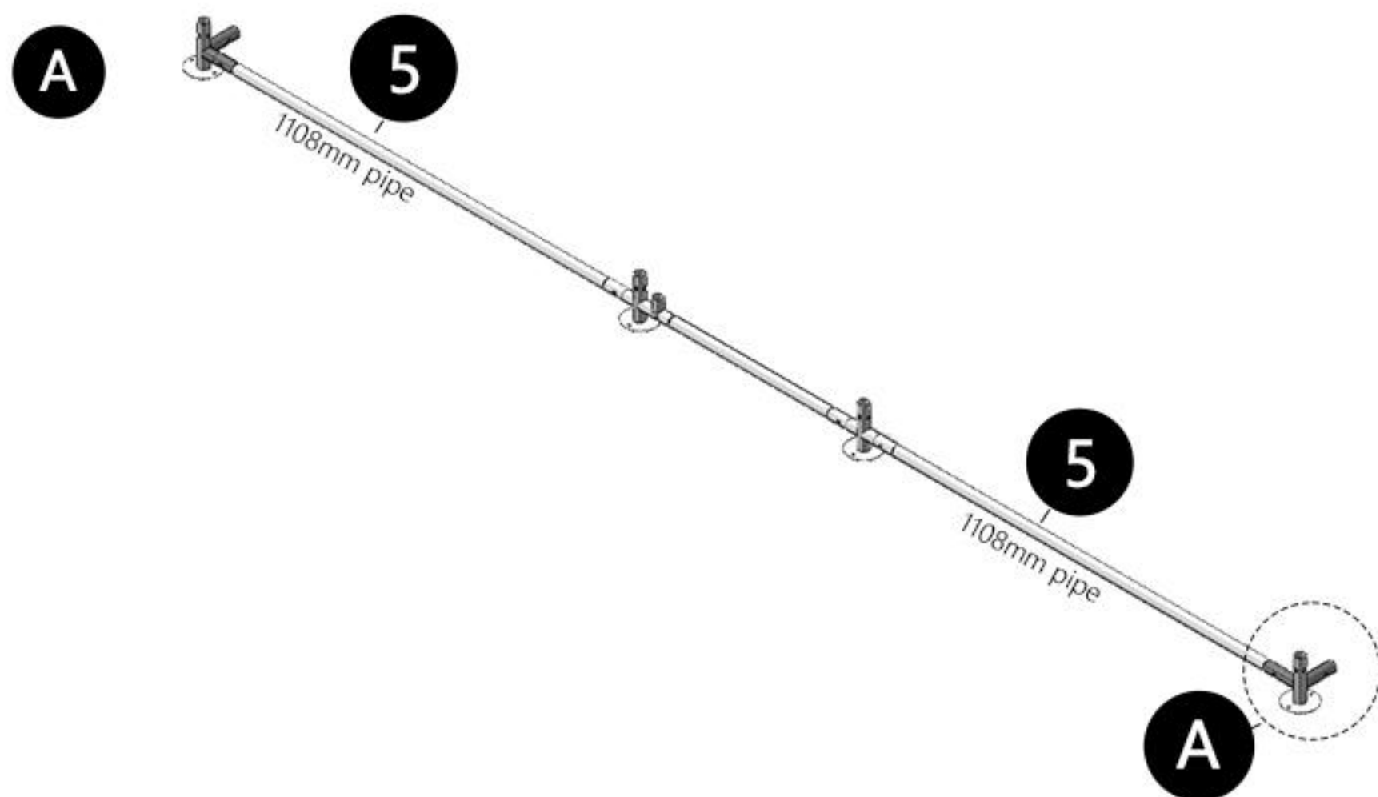



Step 3

Assemble the tail bracket, "B" connect the two 1" and snap into the right Angle tee "A" as shown below.

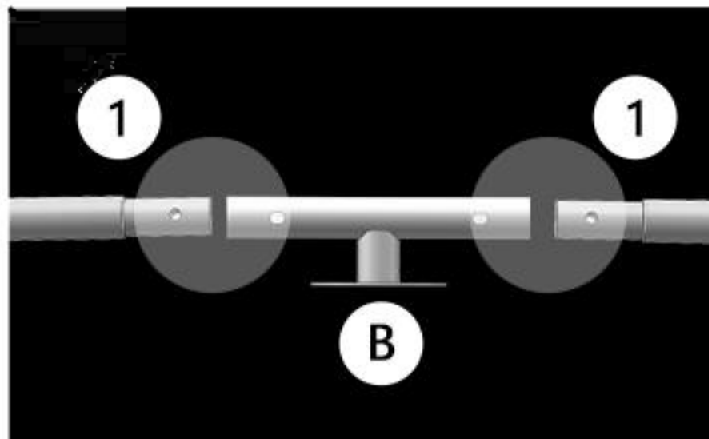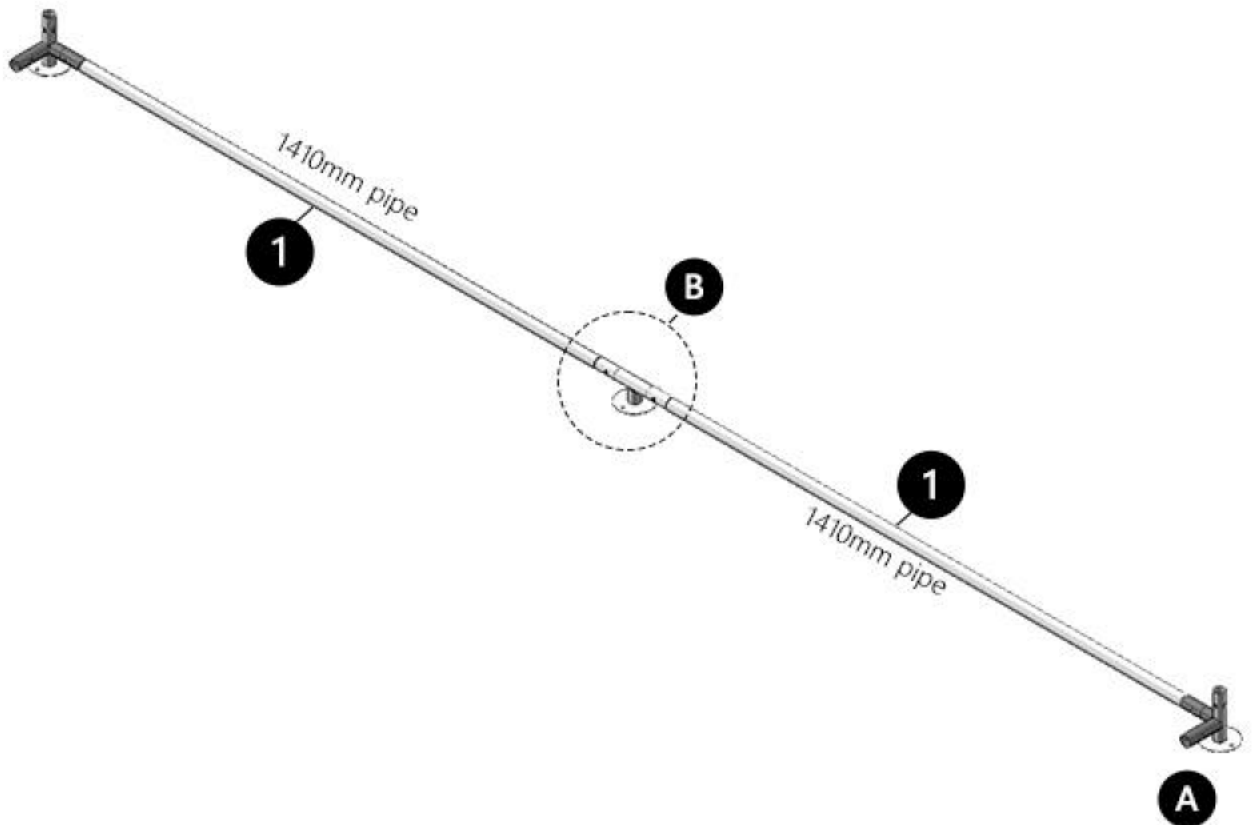



Step 4

As shown, the "6" tube is inserted into "A" to complete the entire bottom frame.

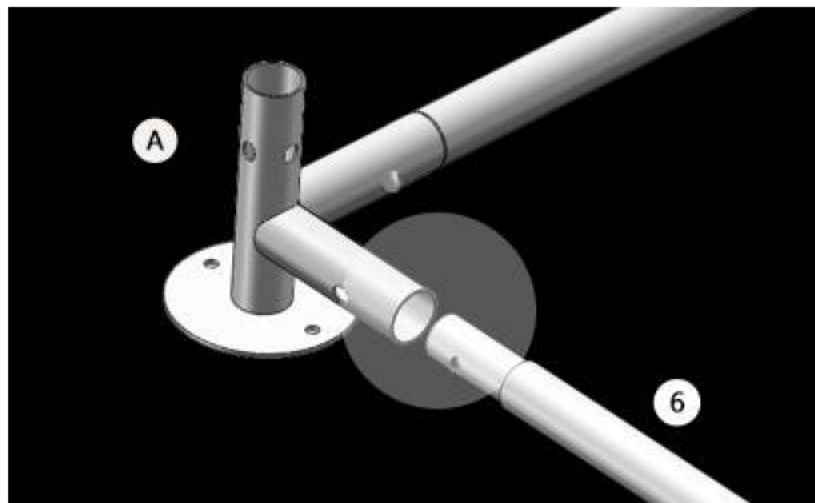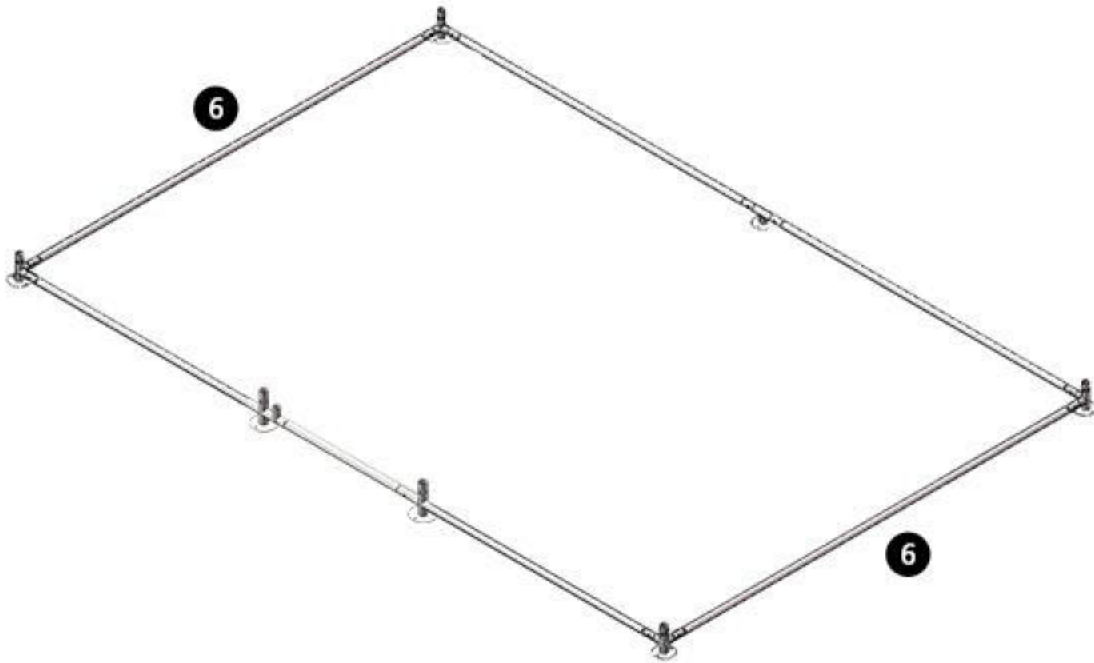



Step 5

Install side frames on both sides as shown in the figure, and fasten components "C" and "3" into "A".

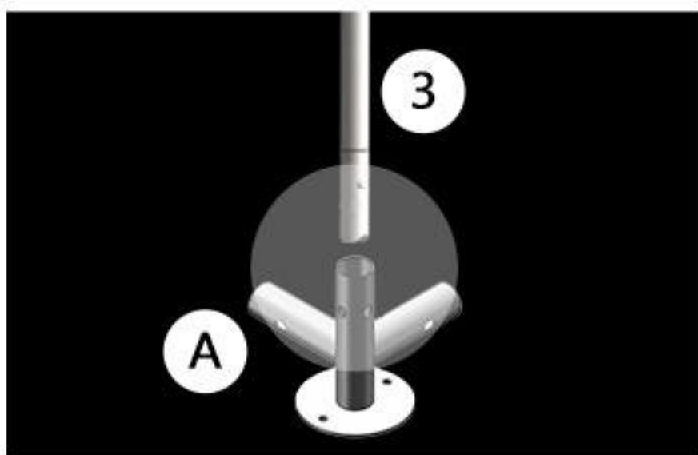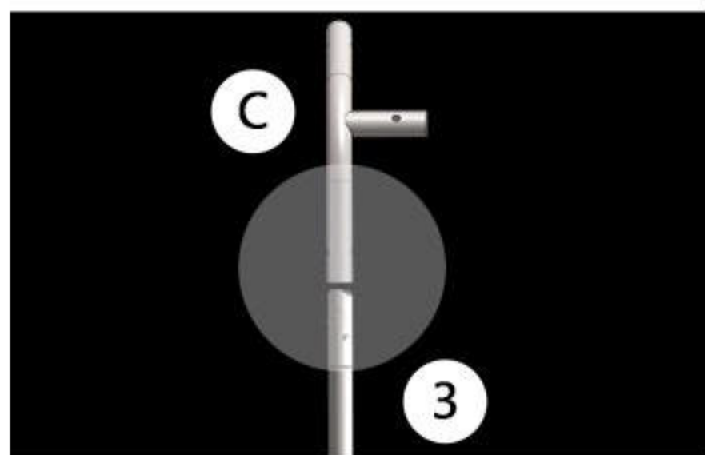


Step 6

Insert "6" into "C" as shown in the picture.

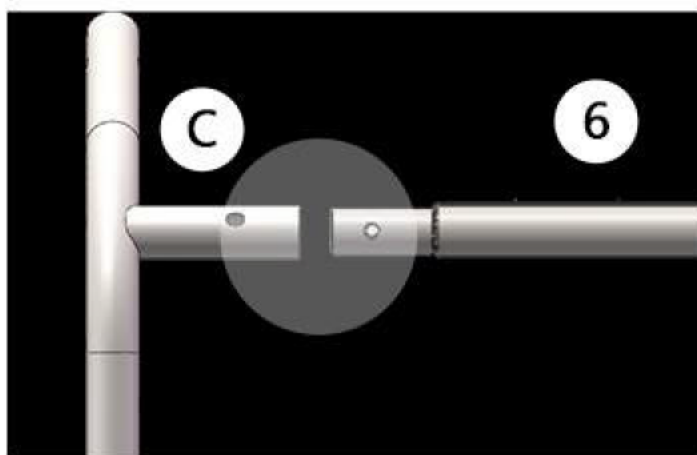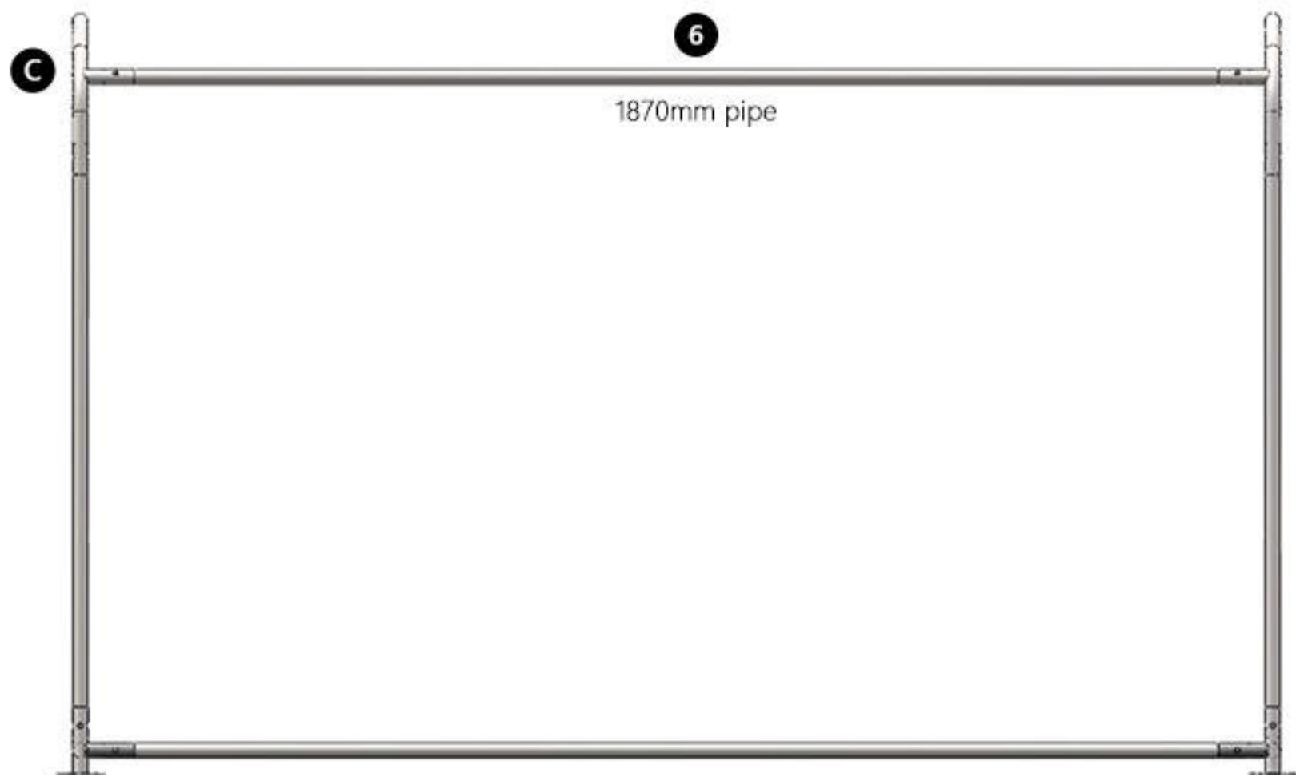



Step 7

Install the other side in the same way as shown.

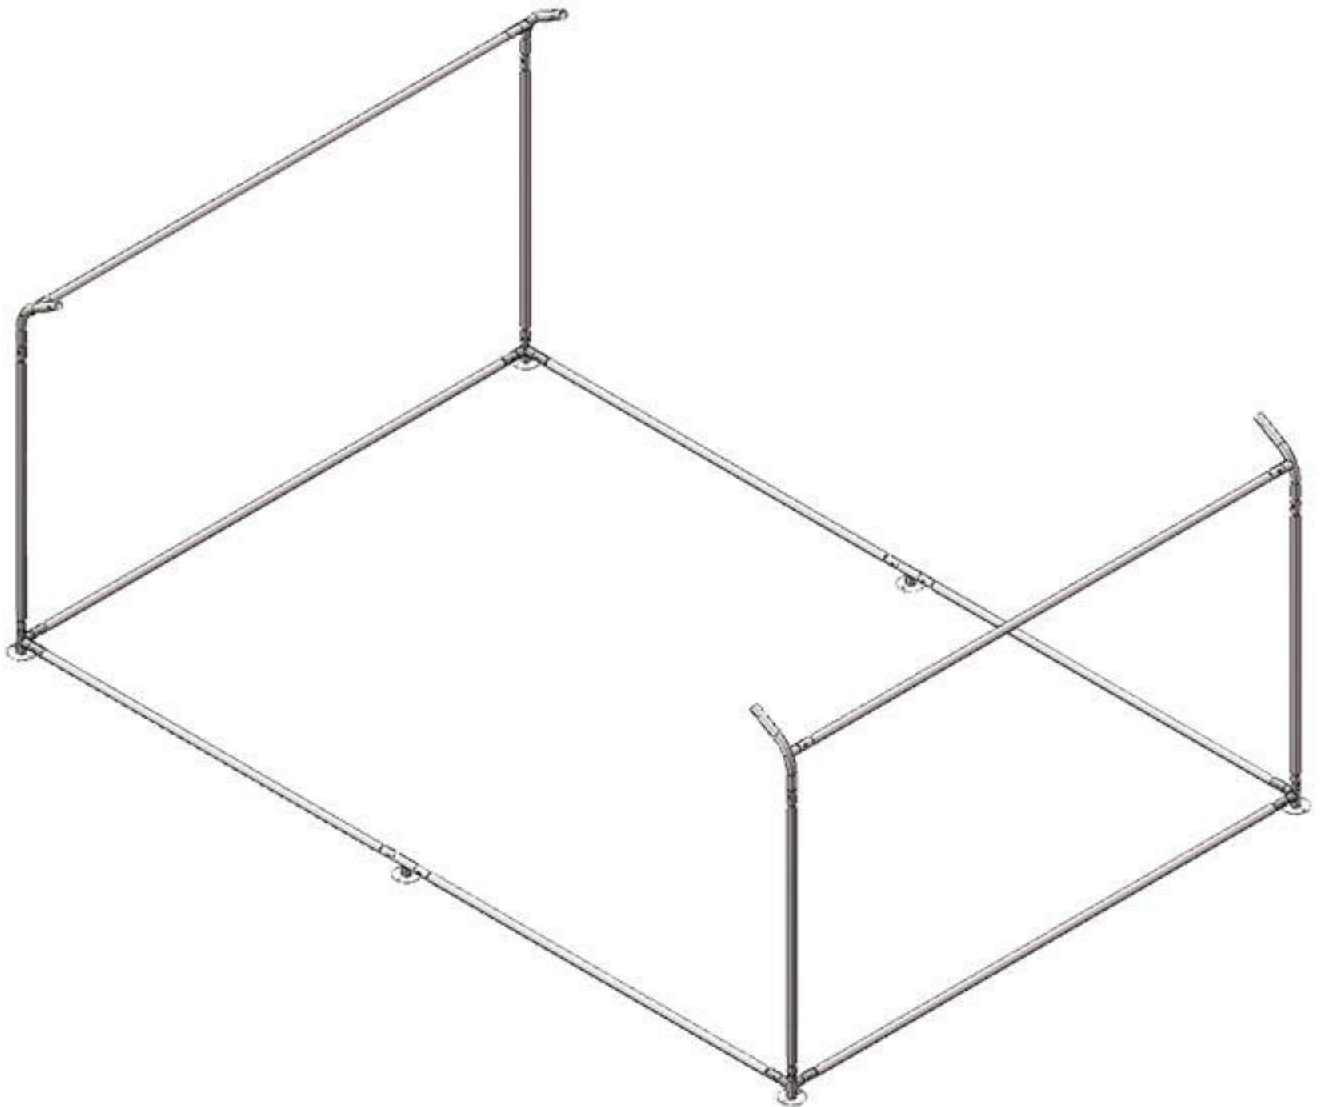



Step 8

When installing the top bracket, the two "7s" should be inserted into the "C" hole as shown with round tubes on either side.

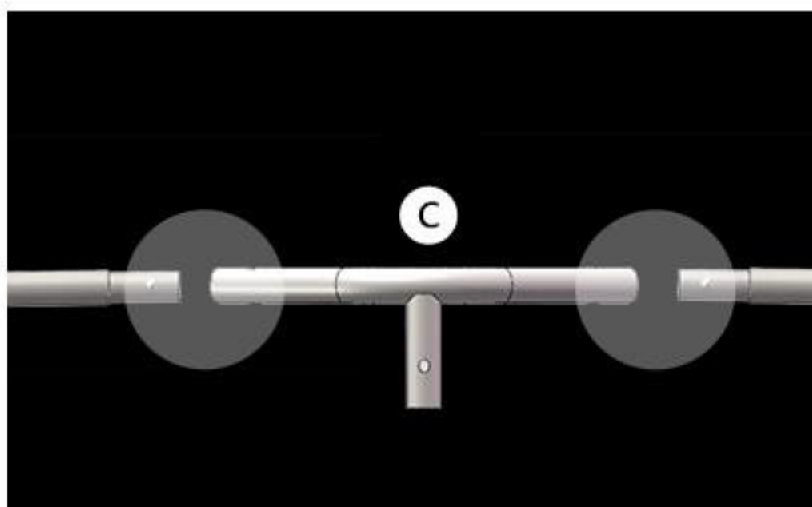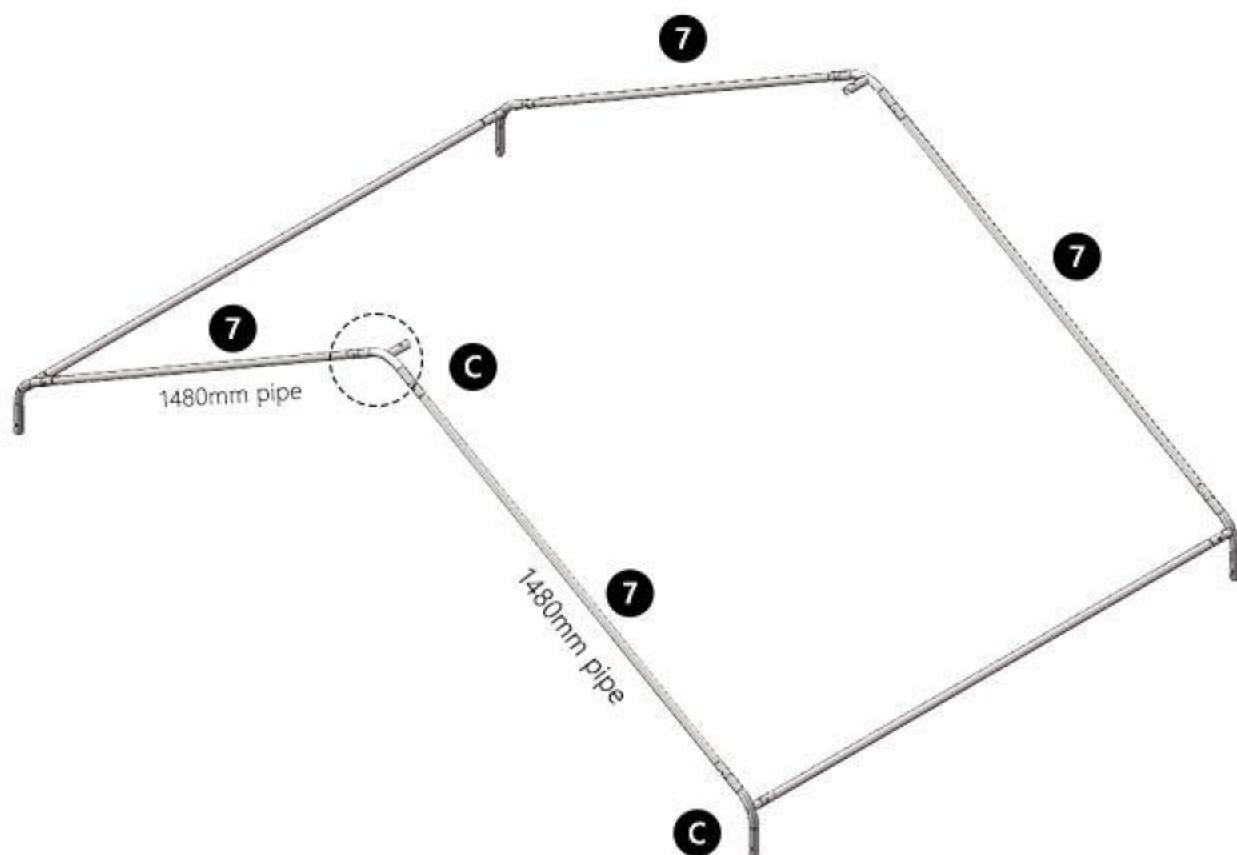



Step 9

As shown, insert "C" into "6" to complete the top bracket.

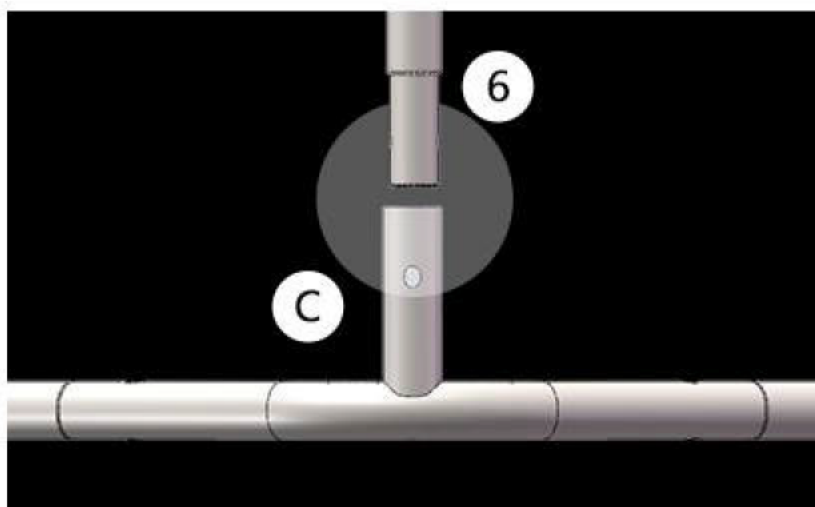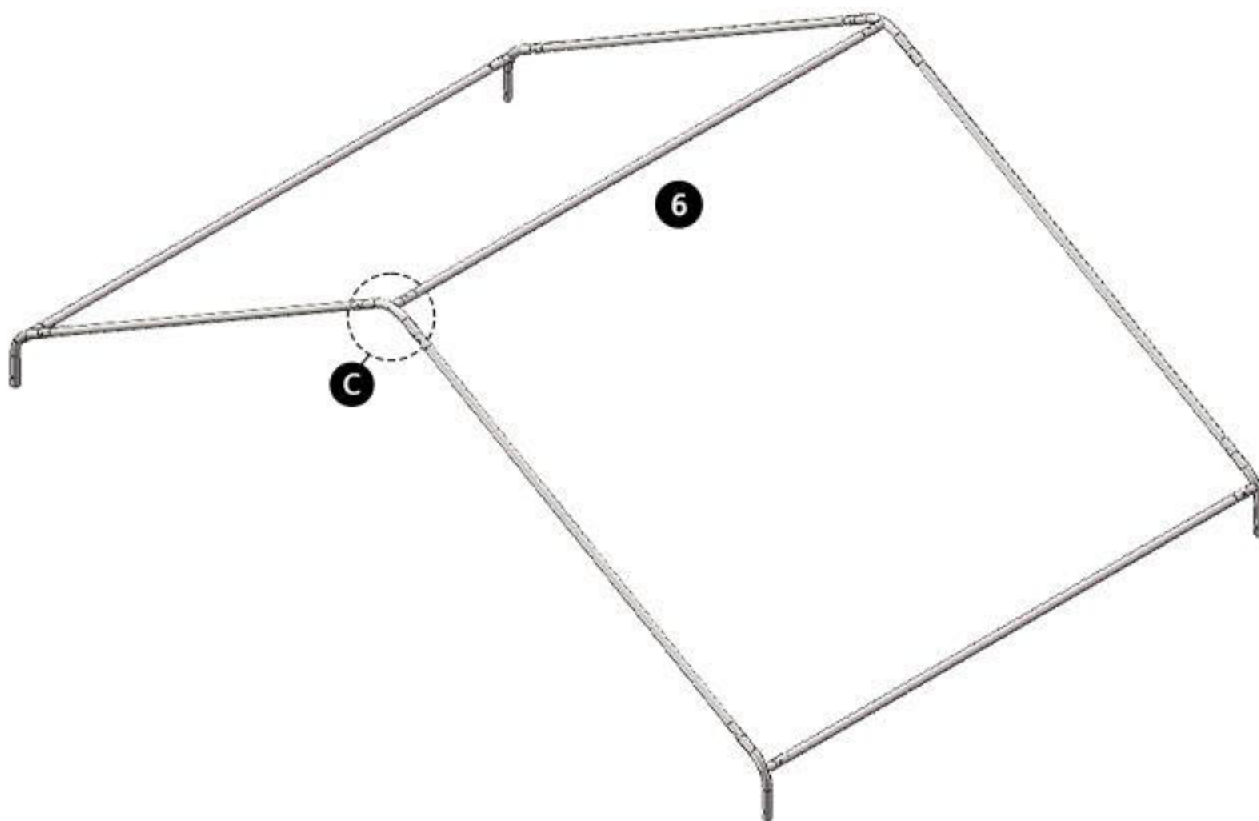



Step 10

Insert "M1" and "M4" into the parts of "Q" as shown.

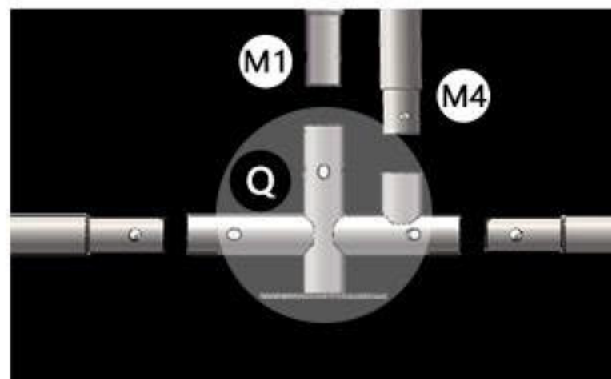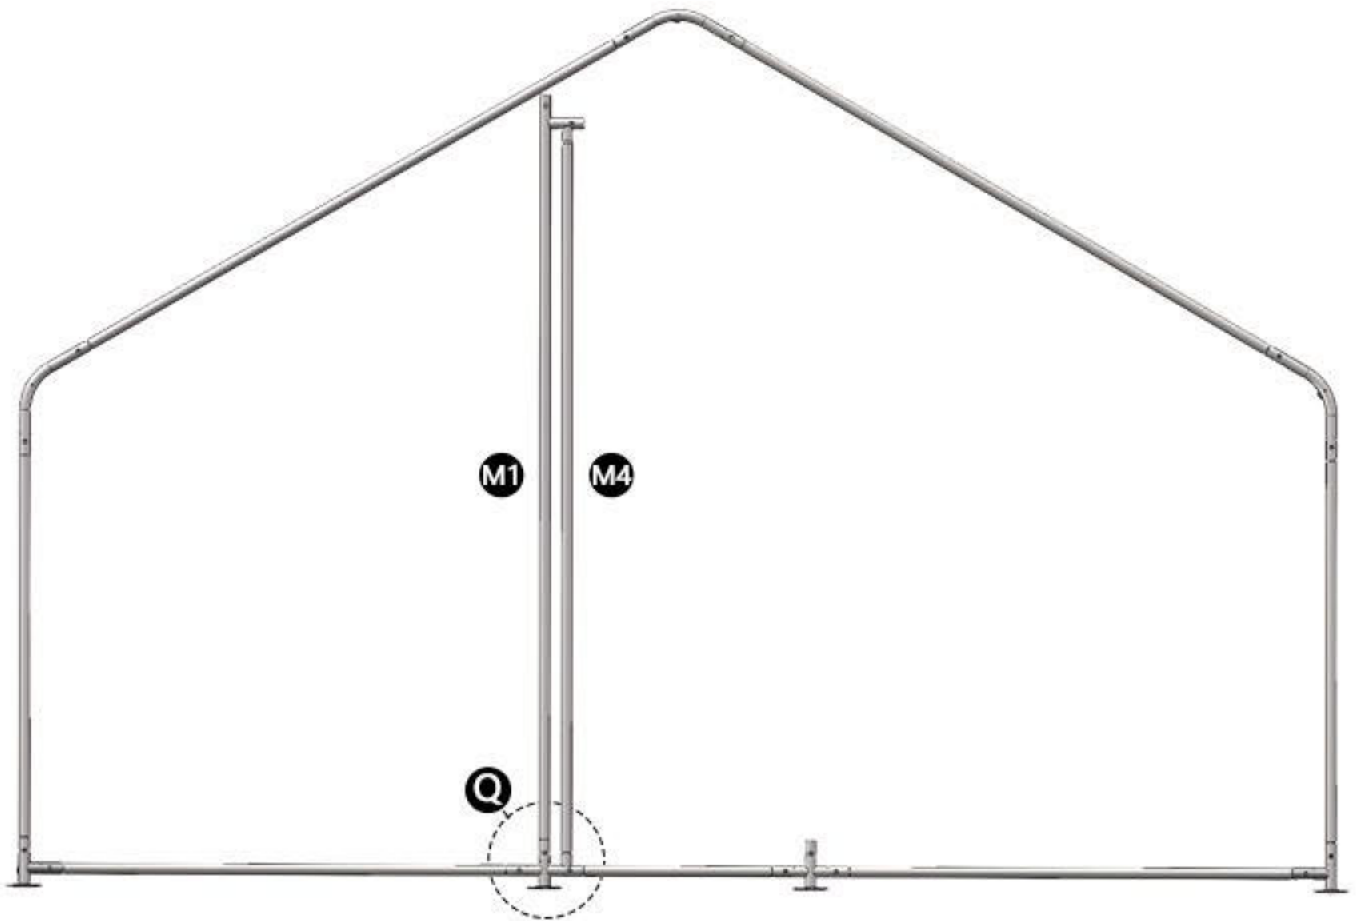



Step 11

As shown in the figure, the "M3" tube is connected to the "O" component.

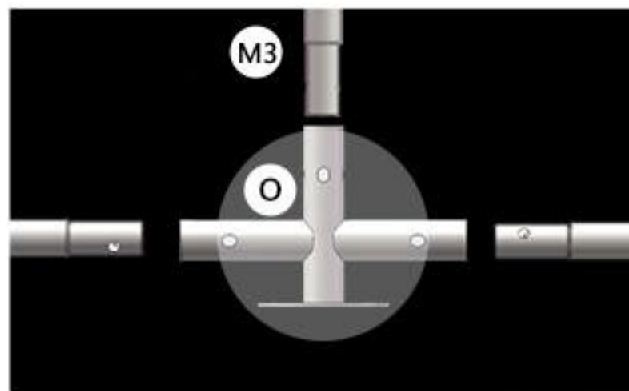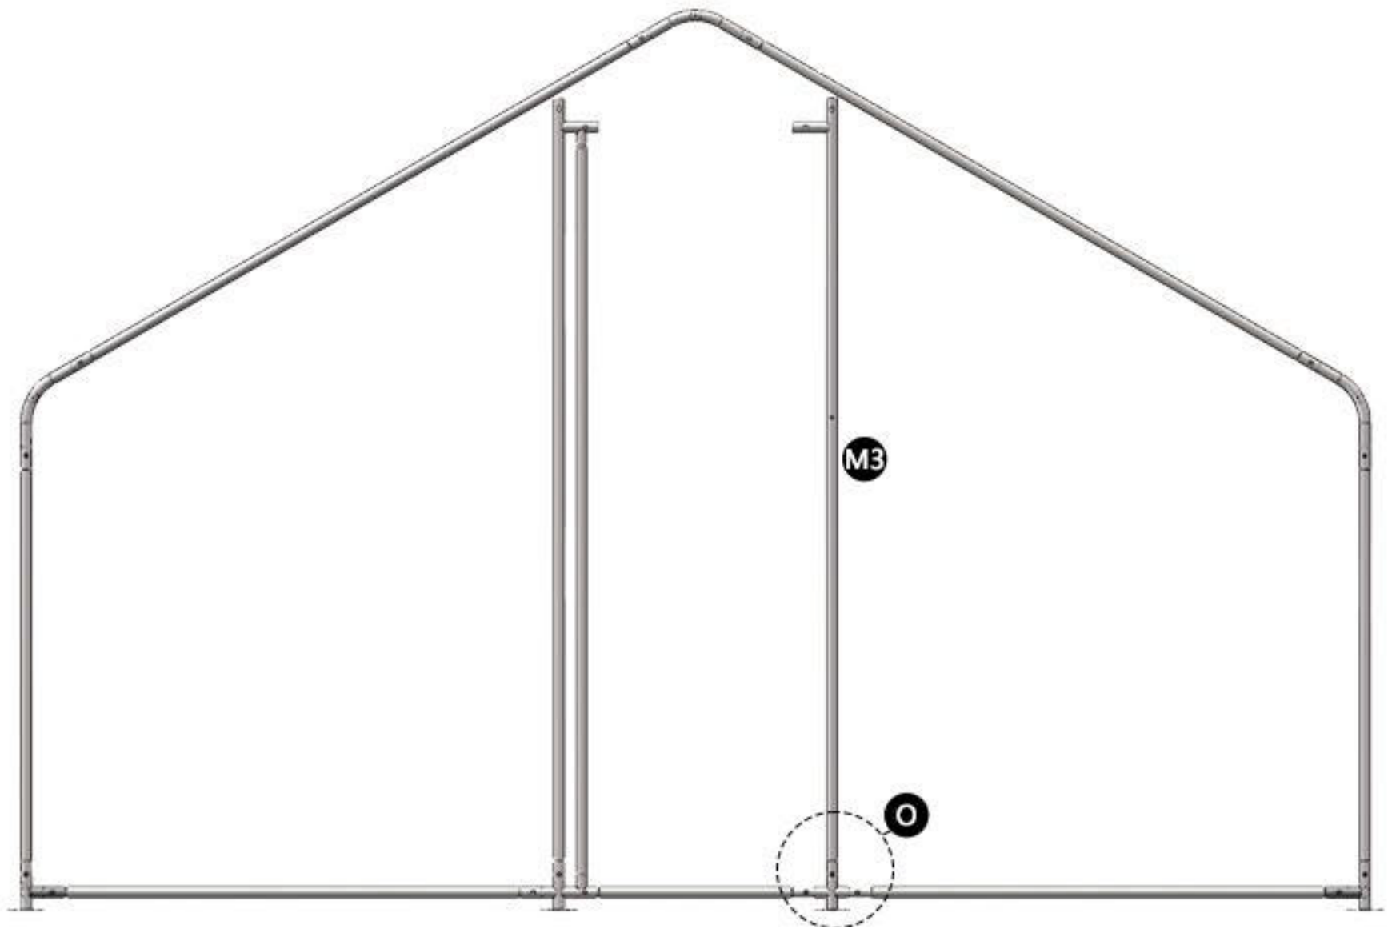



Step 12

As shown in the picture, "M1" and "M3" are connected through tube "2".

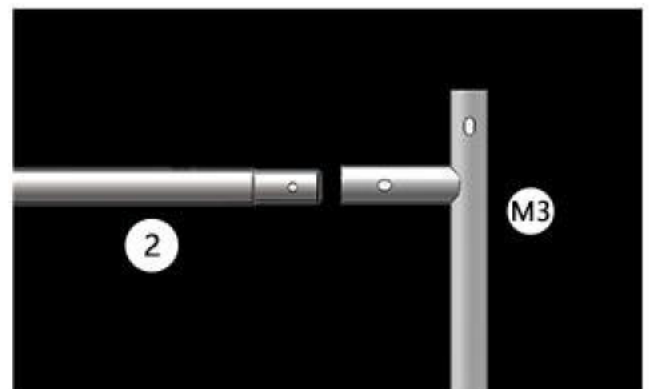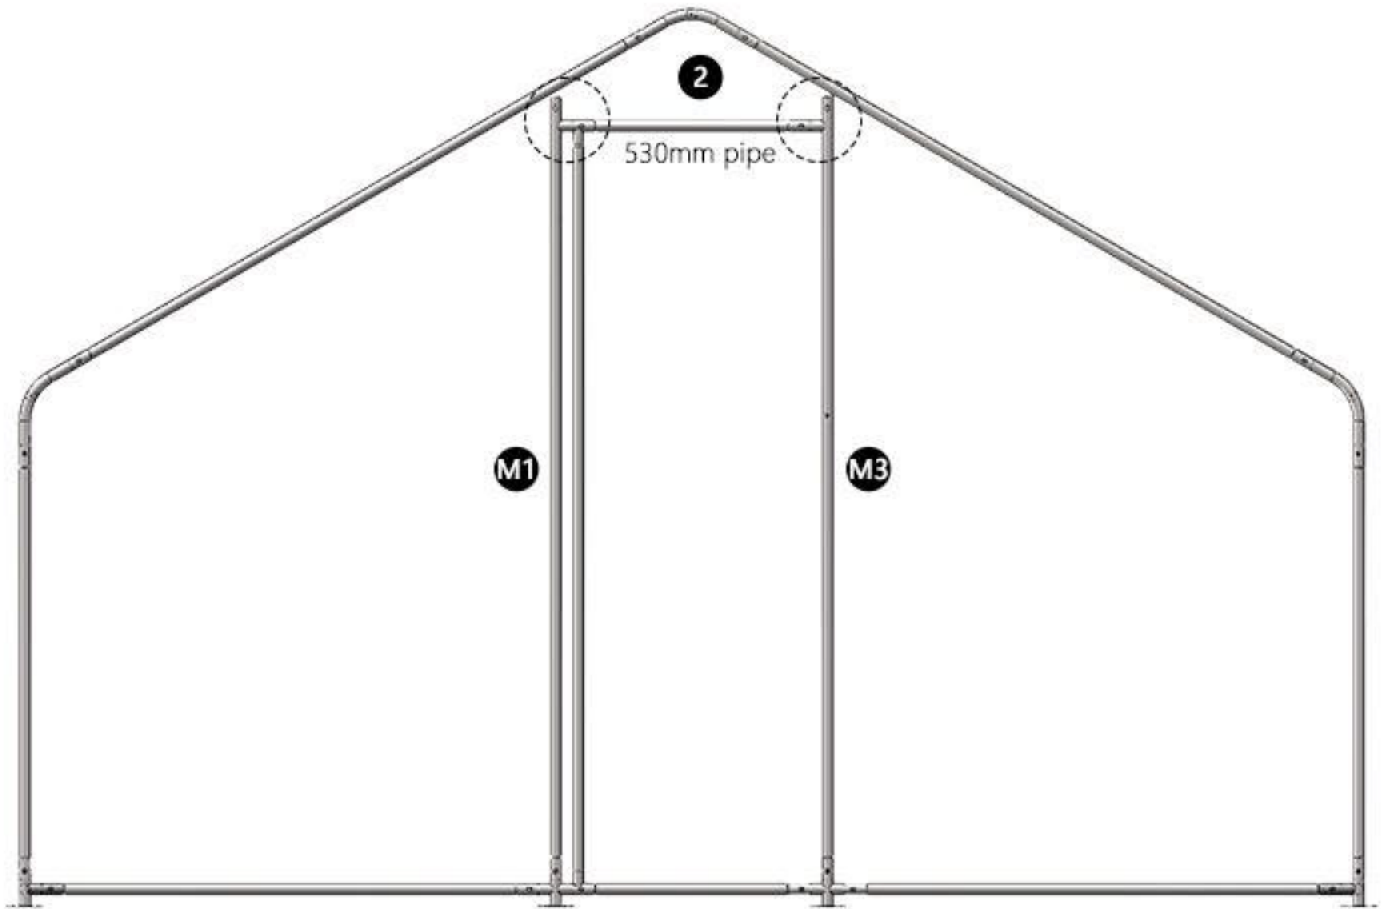



Step 13

"M1" and "M3" are fixed to the top bracket with the hoop "D".

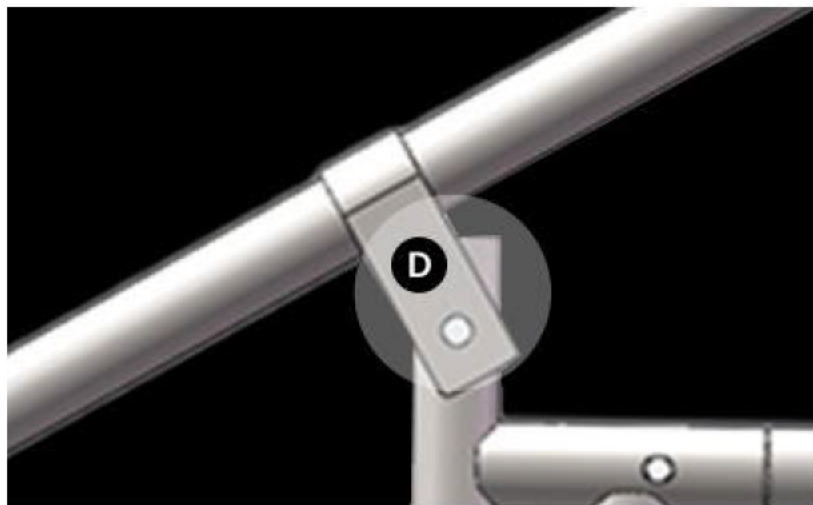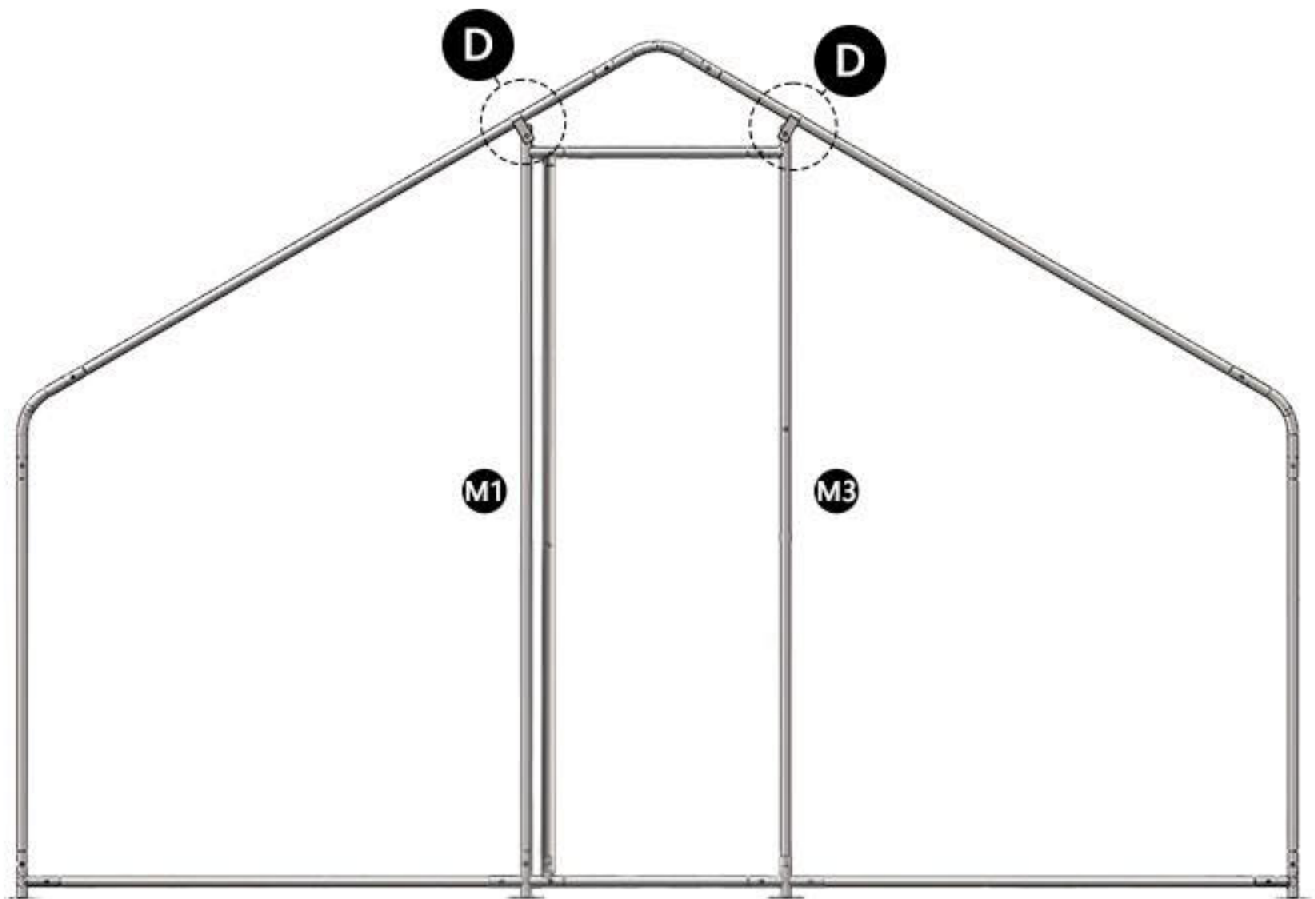



Step 14

Connect "M2" to "4" with "E" fixed connector Connect "4" to "M4" using the "E" fastener Complete the inner door frame.

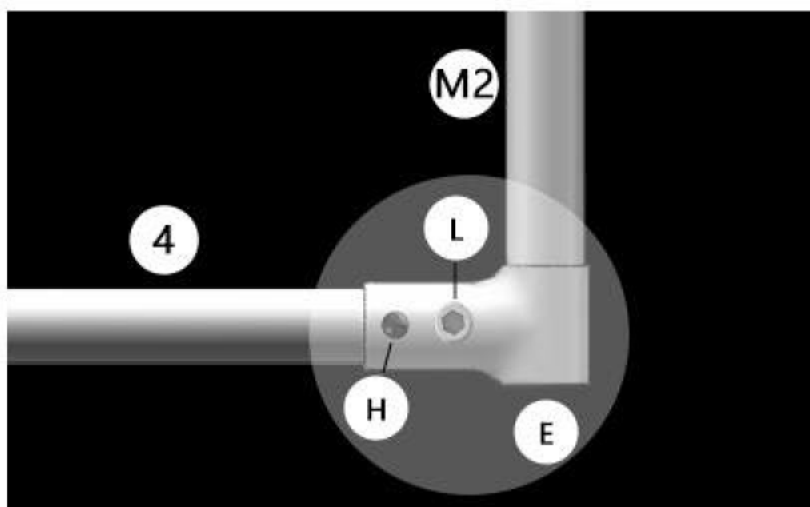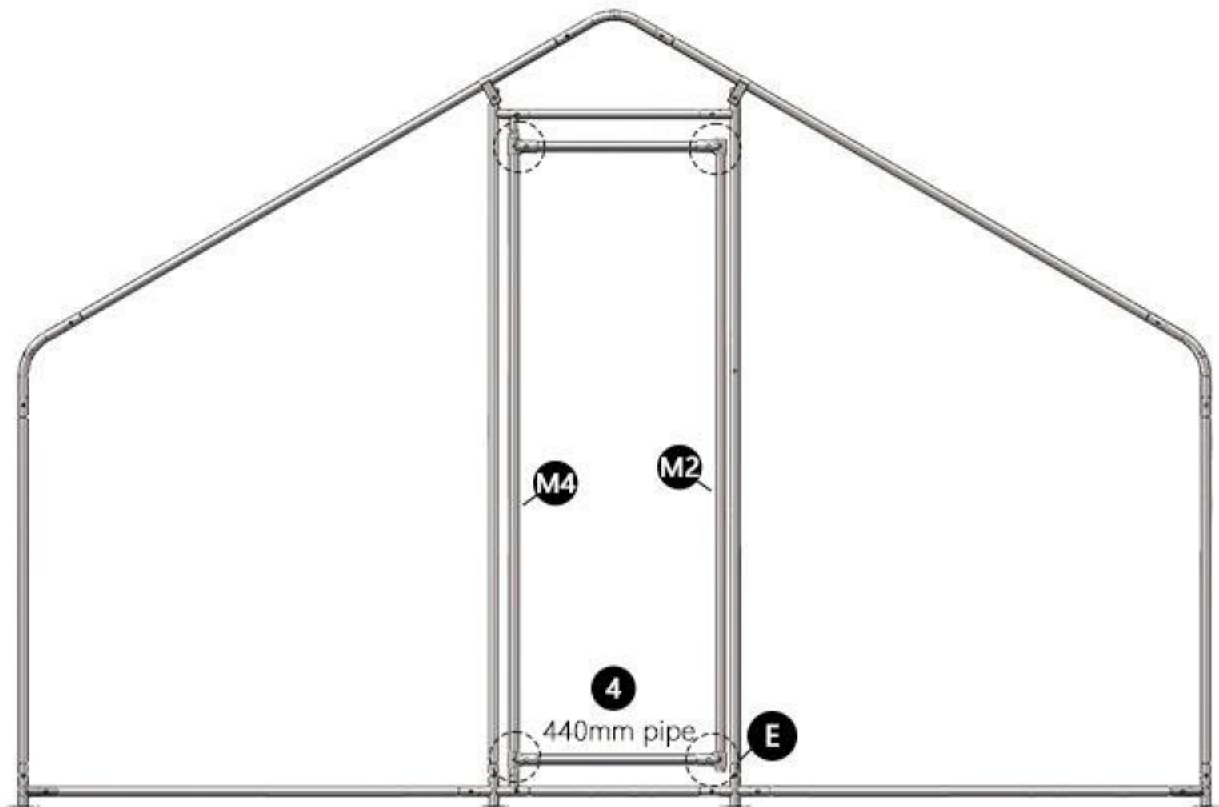



Step 15

As shown in the picture, lock the door with " F " and tighten the "L" screw.

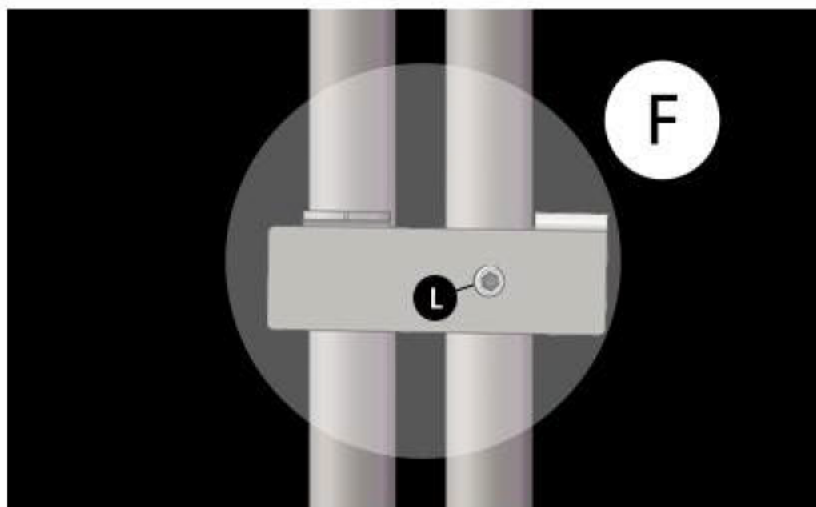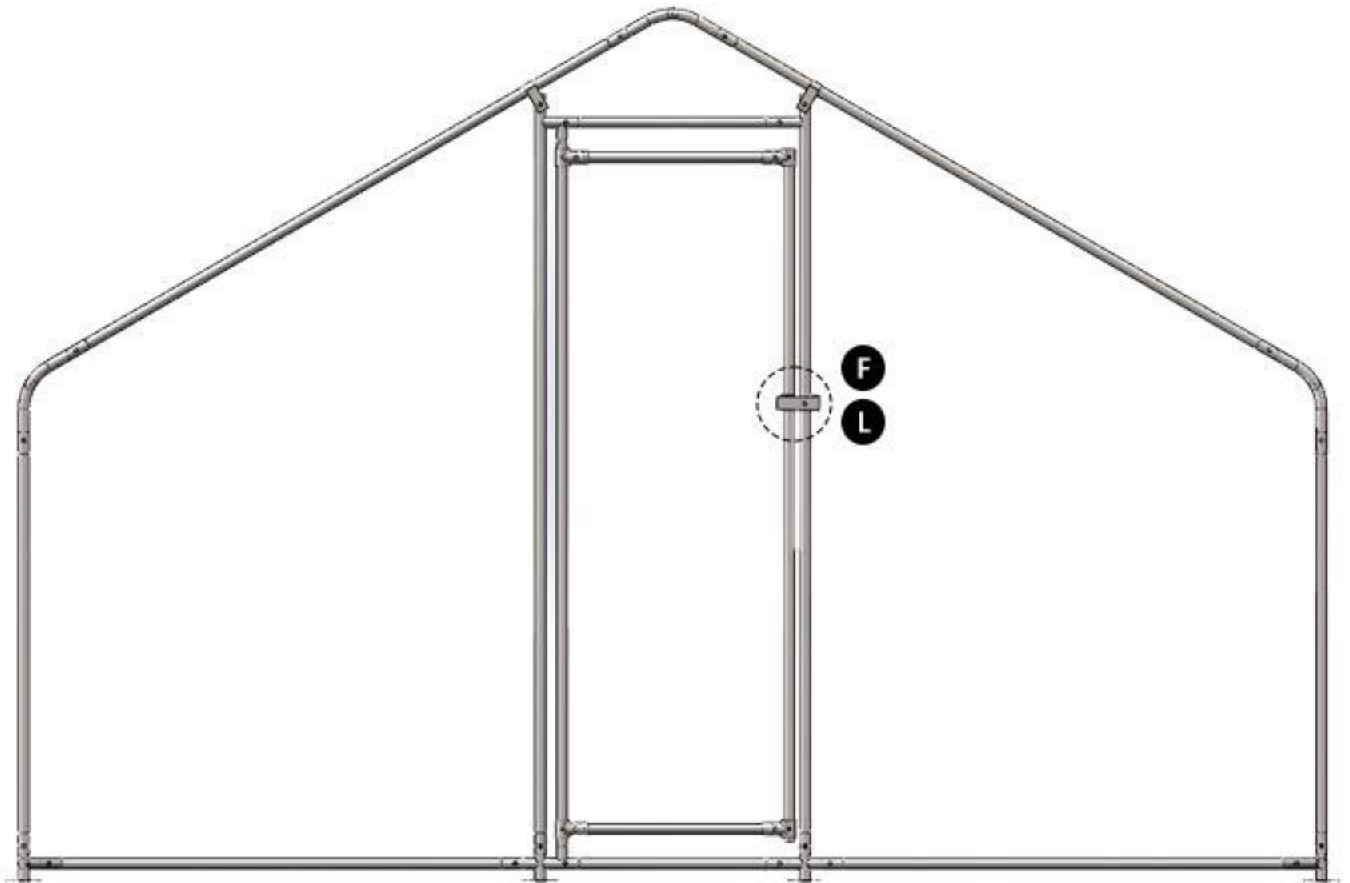


Step 16

Wrap it with a "J" and secure it to the round tube with an "I".

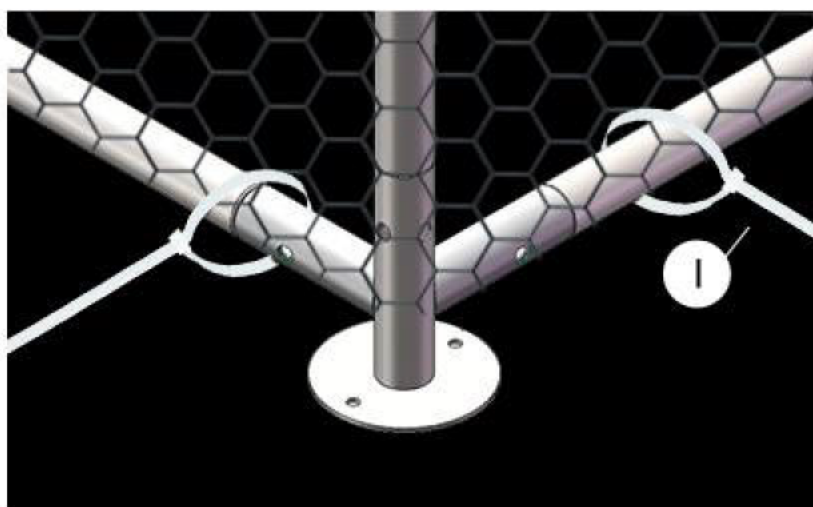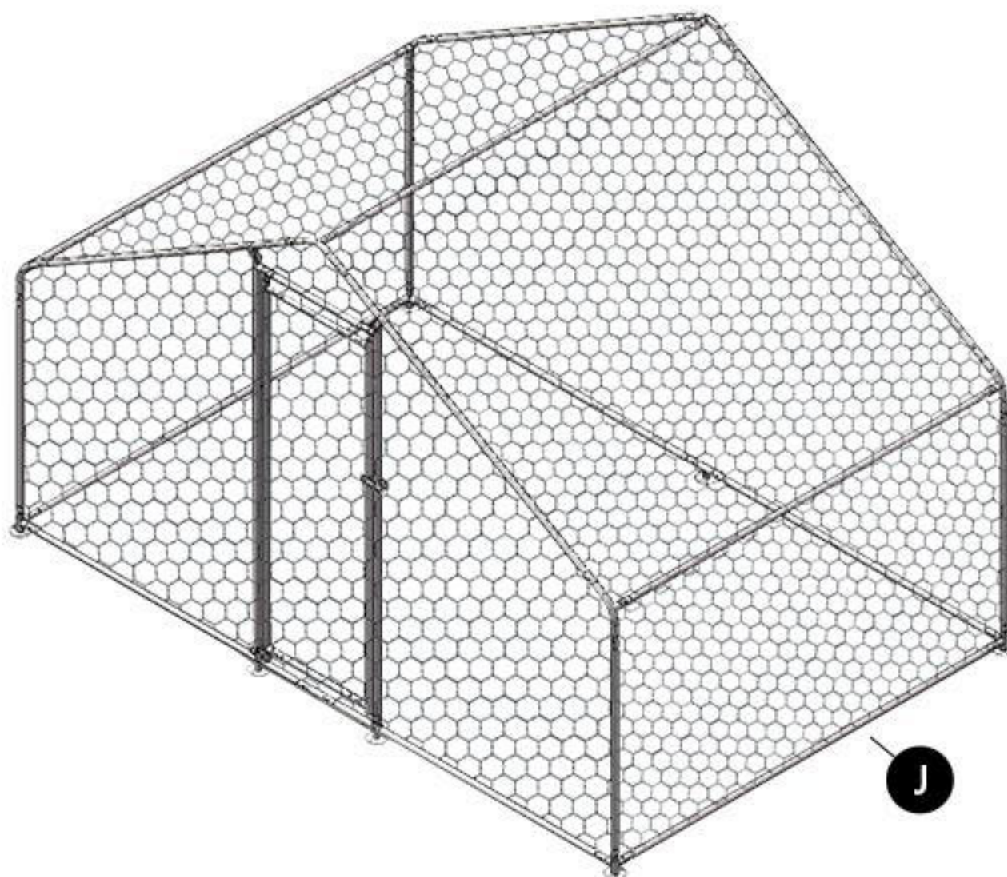

Step 17

Place the tarp "N" over the frame and tie it to the frame with "K".

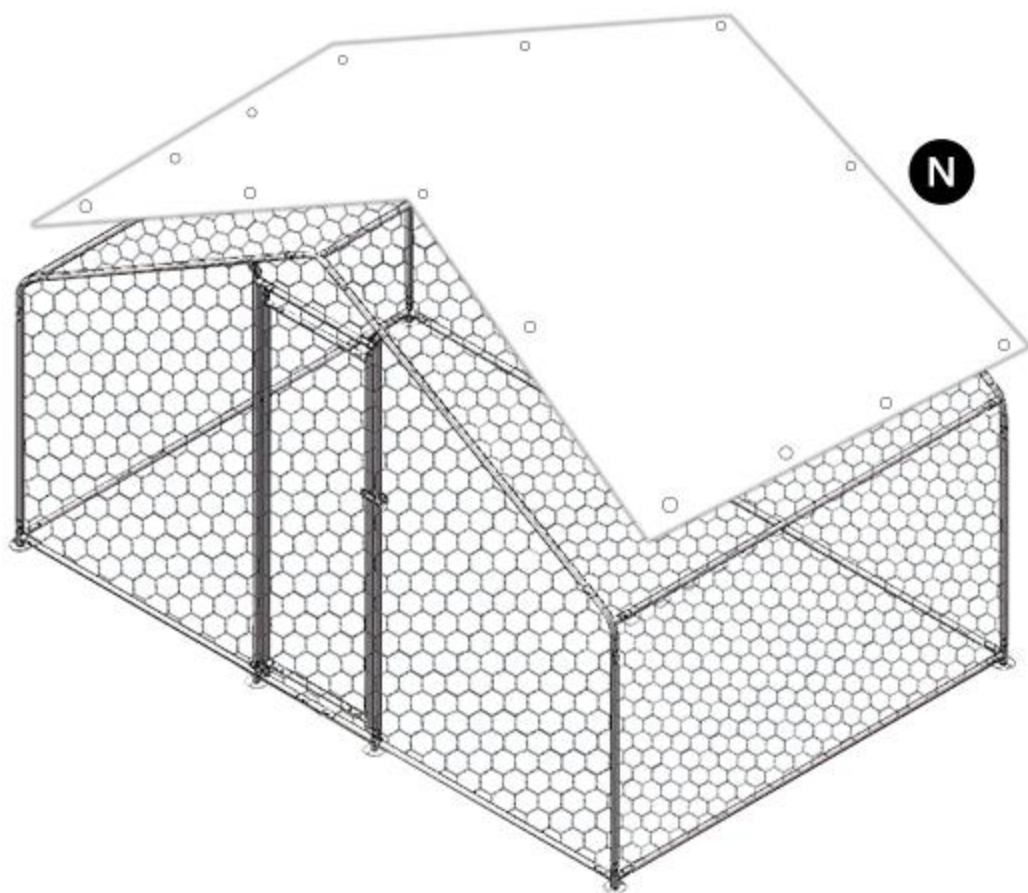

Step 18

Insert the ground anchor "G" into the ground to make the cage more durable and stable.

